

FUJIFILM

instax mini 11

INSTANT CAMERA

EN

FR

ES

 


User's Guide/Safety Precautions


Guide d'utilisation/Précautions de sécurité

Manual de instrucciones/Precauciones de seguridad


CPL13B703-300

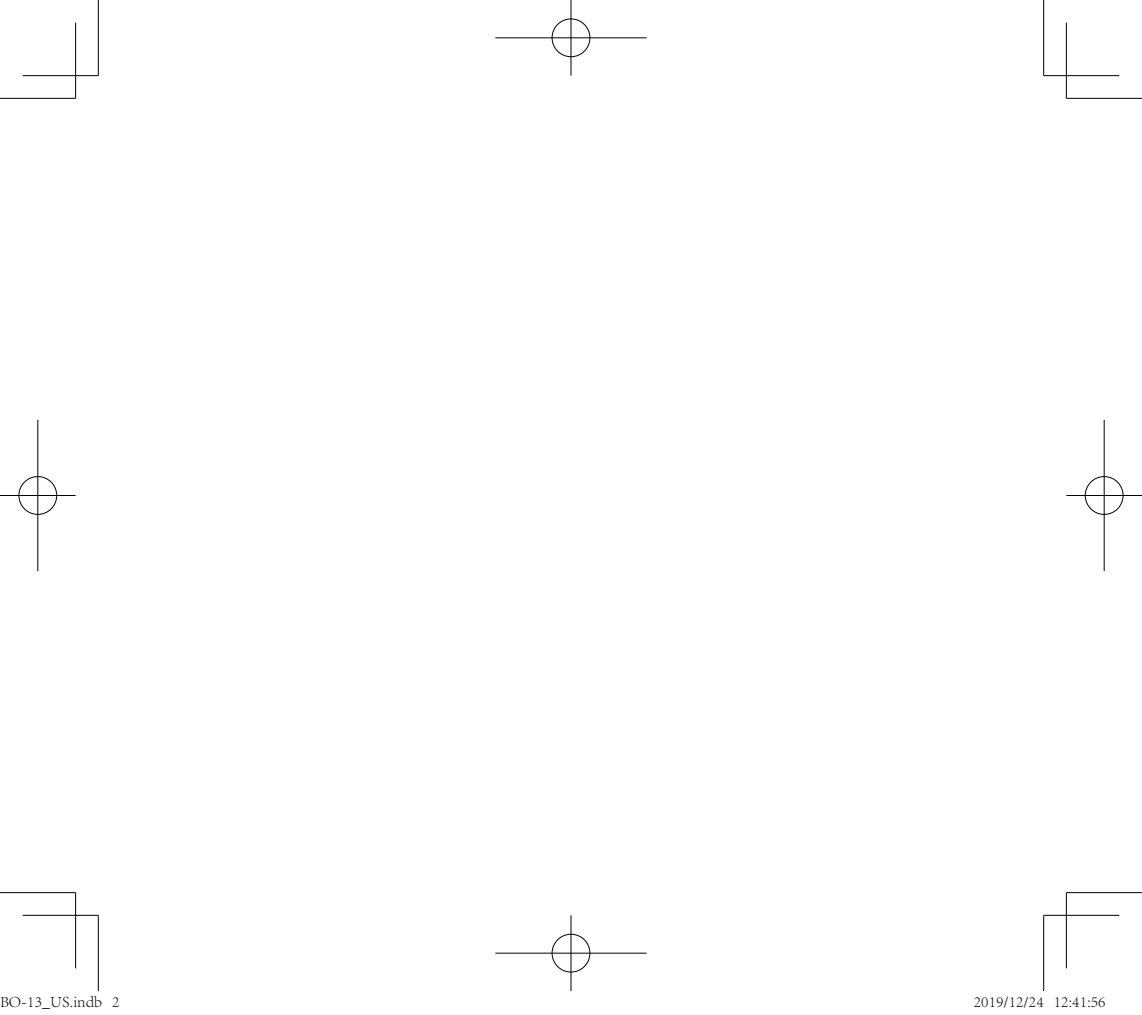

 
How to insert batteries
Comment insérer les piles
Cómo instalar las baterías

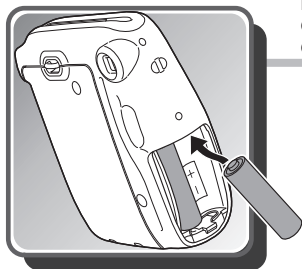


1

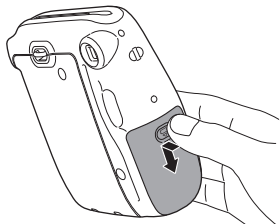 

2

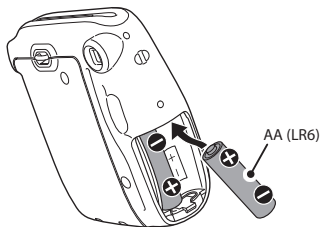 


3

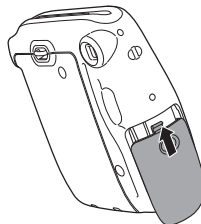 




How to insert INSTAX Mini instant film case
Comment insérer la cartouche de films instantané INSTAX Mini
Cómo insertar el estuche de película instantánea INSTAX Mini

 1

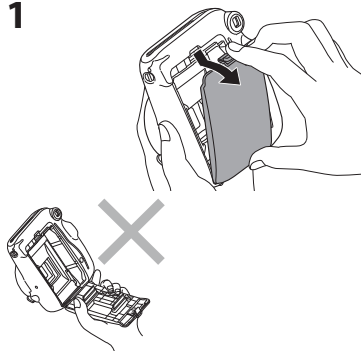



4

 2

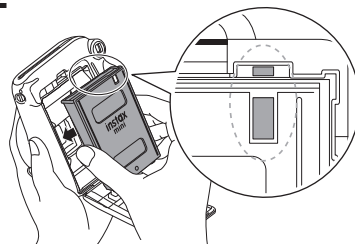

3

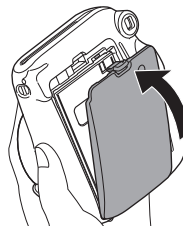 

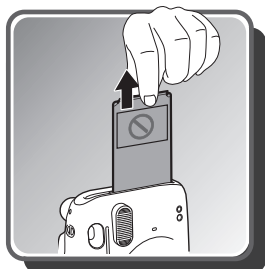 


How to eject INSTAX Mini instant film cover


Comment éjecter la feuille de couverture du films instantané INSTAX Mini

Cómo quitar la portada de la película INSTAX Mini

 
1

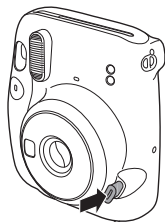

2

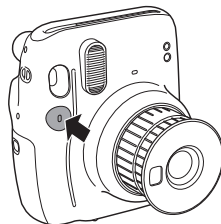 


3

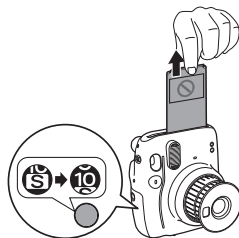 




 
How to remove INSTAX Mini instant film case
Comment retirer la cartouche de films instantané INSTAX Mini
Cómo quitar el estuche de película instantánea INSTAX Mini

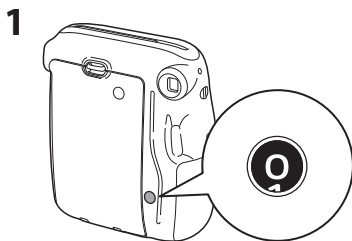

2







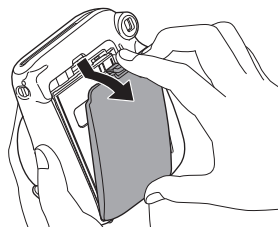 


3

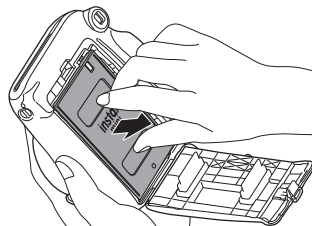 

Refers to each language page for how to take instant photographs
Reportez-vous à la page dans chaque langue sur la façon de prendre des photos instantanées
Se refiere a cada página de idioma para saber cómo tomar fotografías instantáneas

       - For how to take instant photographs, refer to the English pages.(p.9)
- Pour savoir comment prendre des photos, reportez-vous aux pages en français. (p.19)
- Para saber cómo tomar fotografías, consulte las páginas en español. (Pág.29)




English

● For how to insert batteries and how to insert and remove an INSTAX Mini film pack, see pages 3 to 6.

EN


Names of Parts

 Front

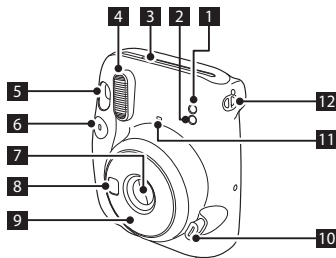

- 1 AE light sensor
- 2 Flash light sensor
- 3 Film ejection slot
- 4 Flash lampface
- 5 Viewfinder
- 6 Shutter button
- 7 Lens cover / Lens
- 8 Selfie mirror
- 9 Lens barrel
- 10 Power button
- 11 Flash charging lamp
- 12 Strap eyelet
- 13 Viewfinder eyepiece
- 14 Back cover lock
- 15 Film confirmation window
- 16 Back cover
- 17 Film counter
- 18 Battery lid

 Back

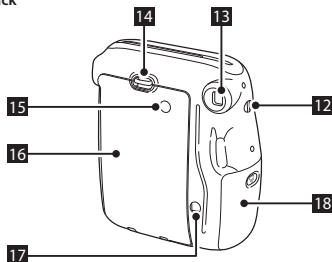


Taking Pictures

Do not open the back camera cover until you have used all images in the loaded INSTAX Mini film pack. Opening the camera door will expose the remainder of the unused film pack, turning it white and rendering it no longer usable.

- 1 Once the batteries are loaded, press the power button to turn the camera on.

 The lens barrel extends and the flash charging lamp blinks and then lights up. (Blinking indicates that the flash is charging.)

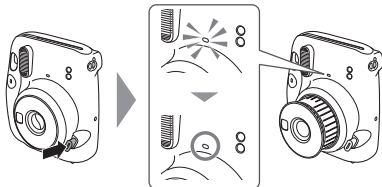


- 2 Hold the camera, look through the viewfinder of the camera to frame your desired composition, and press the shutter button.

* The shutter button cannot be pressed while the flash is charging.




 - 3 When the sound of the film being ejected stops, grasp the edge of the ejected film and take the film out.

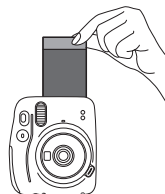

The film counter decreases in numerical order, counting down from "10" with each photo taken. "0" will be displayed when the film is finished and after the last photo has been taken.

 - 4 When you have finished taking photos, turn off the camera by pushing the lens barrel back in.

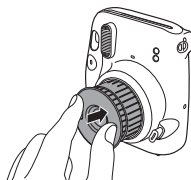

If the camera malfunctions, remove the batteries while the power is on and then reinsert them to reset the camera.


Taking a Photo in Selfie Mode

To switch from the selfie mode to normal shooting mode, turn off the camera by pushing the lens barrel back in and then turn it on again.


Taking a photo of yourself

If you shoot in selfie mode, you can take a picture of yourself using the selfie mirror on the front of the camera to confirm your exposure.

 - 1 Pull out the lens barrel until the SELFIE ON mark appears.

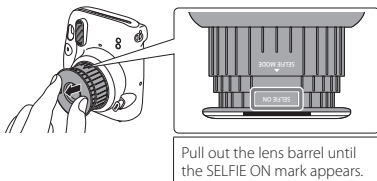


 - 2 Hold the camera securely with both hands so that your face is roughly 11.8 inches to 19.7 inches (30 cm - 50 cm) away from the lens.



- 3 Confirm the composition using the selfie mirror, then push the shutter to take the photo.

 
EN

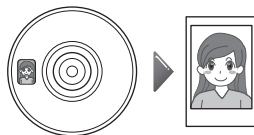

Taking a closeup

If you shoot in selfie mode, you can move the camera close to the subject and take a closeup.

 - 1 Pull out the lens barrel until the SELFIE ON mark appears.
- 2 Hold the camera so that the  mark in the viewfinder sits slightly to the upper right of the center of the subject, then press the shutter button to take a photo.

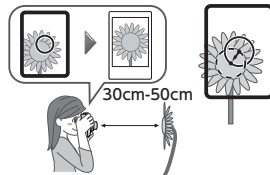

Precautions for Taking Photos

Precautions for Holding the Camera



Correct way to hold



Do not cover the flash lamp face with a finger



Do not cover the flash light sensor and AE light sensor with a finger

- Take care that a finger or the strap does not cover the flash light sensor, AE light sensor, flash lamp face, lens, or film ejection slot.
- Hold the camera so that the flash lamp face is at the top when taking a horizontal picture.
- Do not take photos in locations where flash photography is forbidden.
- Do not grasp the lens barrel when holding the camera. The finished photos may be adversely affected.
- Look into the viewfinder so that the  mark in the viewfinder appears in the center.
- Be careful not to touch the lens when you press the shutter button.

Distances for Normal Mode and Selfie Mode

- In normal mode, take a photo at a distance of at least 19.7 inches (0.5 m) from the subject. The effective flash range is up to approximately 8.9 ft (2.7m).
- When holding the camera closer than 19.7 inches (0.5 m) from the subject, use the selfie mode. Use the selfie mode to capture a close-up within the range of 11.8 inches to 19.7 inches (30 to 50 cm).

Flash charging lamp states and error solutions

Flash charging lamp state	Description
Lit	Ready to take a photo.
Flashing slowly	Charging the flash. Please wait until the flash charging lamp lights. Charging normally takes 3 to 10 seconds to complete.
Flashing quickly	An error has occurred.
Main errors	Cause and solution
Battery check failed	The flash cannot be charged because the battery voltage is insufficient. Replace the batteries with new ones.
Film jammed	Do not forcibly pull out the film. Removing and reinserting the batteries while the power is on may enable the film to be ejected.

Safety Precautions

- **Do not use this product and its accessories for a purpose other than taking photos.**
- **This product has been designed with safety in mind, but please read the following safety precautions carefully and then use the product correctly.**
- **After reading this User's Guide, be sure to keep it in an easy-to-access place where you can refer to it whenever necessary.**

WARNING

This indicates a matter that may lead to death or serious injury if ignored or incorrectly handled.

- ⚠ Do not disassemble this product. Electric shock may occur.
- ⚠ Do not touch this product if the inside of it becomes exposed due to dropping, etc. This product has high-voltage circuitry that may cause electric shock.
- ⚠ If you notice anything abnormal, such as the camera (batteries) becoming hot, emitting smoke, or making a burning smell, remove the batteries immediately. Fire or burns may occur (be careful not to burn yourself when removing the batteries).
- ⚠ Never take flash photographs of people riding bicycles, driving cars, skateboarding, riding a horse and the like. The flash can be startling, distract, frighten animals, and otherwise cause an accident.
- ⚠ If you drop the camera in water or if water or a piece of metal or other foreign object gets inside, remove the batteries immediately. Heat generation or fire may occur.
- ⚠ Do not use this camera in places where there is flammable gas or near open gasoline, benzene, paint thinner or other unstable substances which can give off

dangerous vapors. Doing this could result in explosion or fire.

- ⚠ Keep the product out of the reach of infants and small children. Injury may occur.
- ⚠ Do not disassemble, heat the batteries, throw them in a fire, or put them in an electrical short circuit. The batteries may rupture.
- ⚠ Use only AA (LR6) batteries. Heat generation or fire may occur if other batteries are used.
- ⚠ Keep batteries out of the reach of infants. An infant may accidentally swallow a battery. In the event that a battery is swallowed, seek medical attention immediately.

CAUTION

This indicates a matter that may lead to injury or physical damage if ignored or incorrectly handled.

- ⚠ Do not get this product wet or handle it with wet hands. Electric shock may occur.
- ⚠ Using a flash too close to a person's eyes may for the short term affect their eyesight. Take care when taking pictures of infants and young children.
- ⚠ Take care not to make a mistake with the ⊕ and ⊖ polarities when inserting the AA (LR6) batteries. Damages to the surroundings may occur due to the camera being damaged or its battery fluid leaking out.
- ⚠ Do not touch moving parts inside the camera. You may be injured.

EN

Handling

■ Handling of Camera

1. The camera is a precision instrument, so do not get it wet, drop it, or subject it to shock. Also, do not place the camera where it will be exposed to sand, dirt, dust or other particles.
2. Before using a commercially available strap, check the strength of the strap. Be especially careful when using a strap for mobile phones and smartphones because such straps are made for lightweight devices.
3. If you are not using your camera for a long interval, unload the batteries and keep it where it will avoid heat, dust and moisture.
4. Remove soil and dust from the viewfinder window, etc. with an air blower or by wiping gently with a piece of soft cloth.
5. Do not use solvent such as thinner or alcohol to wipe off dirt.
6. Do not leave the camera in a closed motor vehicle, another hot place, a humid place, on the beach, etc. for any period of time.
7. Moth repellent gas such as naphthalene will adversely affect the camera and film. Avoid keeping the camera and film in a chest of drawers, etc. with mothballs.
8. The operating temperature range of this camera is 41°F (+5°C) to 104°F (+40°C).
9. This camera may occasionally malfunction because it is controlled by a micro computer. If it malfunctions, remove the batteries and then reinsert them to reset the camera.

■ Handling of INSTAX Mini Film and Photos

For details on the handling of film and photos, see the instructions of FUJIFILM INSTAX Mini instant film.

1. Keep film a cool place. In particular, do not leave film in an extremely hot place, such as in a closed motor vehicle, for a long period of time.
2. Use film as soon as possible after inserting it in the camera.
3. If film has been kept in a place where the temperature is extremely low or high, allow it to become accustomed to a normal temperature before taking pictures.
4. Use film before the film expiration date referenced on the package.
5. Avoid airport checked luggage inspection and other strong X-ray exposure. Unused film is susceptible to the effect of fogging, etc. We recommend that you carry film onto aircraft in carry-on luggage (check with the relevant airport for more information).
6. Avoid exposing photos to strong light, and store them in a cool and dry place.
7. Do not make a hole in film or tear or cut film. Do not use film that is damaged.
8. Do not cut or disassemble the film for this camera as it contains black caustic alkali paste. Be especially careful not to let infants or pets put the film into their mouths. Also take care that the paste does not come into contact with skin and clothes.
9. If you accidentally touch the paste of unused film, immediately wash it off with plenty of water. If the paste comes into contact with the eyes or mouth, wash the area and then seek medical attention. The alkalinity of this film will weaken approximately 10 minutes after the photo is ejected from the camera.

■ Cautions on Handling of Film and Finished Photos

For details, see the instructions of FUJIFILM INSTAX Mini instant film.



The "CE" mark certifies that this product satisfies the requirements of the European Union (EU) regarding safety, public health, environment, and consumer protection. ("CE" is the abbreviation of Conformité Européenne.)

■ Legally required regulation compliance displays are located on the inside of the back cover of the camera.

For customers in the USA:

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For more information, access the website below.

http://www.fujifilm.com/products/instant_photo/cameras/instant_mini_11/

CAUTION

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by FUJIFILM responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

EN

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. The "INSTAX Mini 11" has been tested and found to comply with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines.

For customers in Canada :

CAUTION: CAN ICES-3 (B)/NMB-3 (B)



Disposal of Electric and Electronic
Equipment in Private Households
Disposal of used Electrical & Electronic
Equipment
(Applicable in the European Union and other
European countries with separate collection
systems)

This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste. Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be

caused by inappropriate waste handling of this product. The recycling of materials may help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city recycling office, your household waste disposal service or the authorized FUJIFILM dealer from which you purchased the product. For proper disposal in the United States at product end-of-life, please contact 1-800-800-3854 Option #1 INSTAX. In Countries outside of U.S.: If you wish to discard this product, please contact your local authorities and ask for the correct way of disposal.

Specifications

Film	FUJIFILM INSTAX Mini instant film
Photo Picture Size	2.4 inch × 1.8 inch (62 mm × 46 mm)
Lens	2 components, 2 elements, f = 60 mm, 1:12.7
Viewfinder	Real image finder, 0.37×, with target spot
Shooting Range	11.8 inch (0.3 m) and beyond (use selfie mode for 11.8 inch (0.3 m) to 19.7 inch (0.5 m))
Shutter	Programmed electronic shutter 1/2 to 1/400 sec. Slow synchro for low light
Exposure Control	Automatic, Lv 5.0 to 14.5 (ISO 800)
Film Ejection	Automatic
Film Developing Time	Approx. 90 seconds (varies depending on the ambient temperature)
Flash	Constant firing flash (automatic light adjustment), recycle time: 6.5 seconds or less (when using new batteries), effective flash range: 11.8 inch (0.3 m) to 8.9 ft (2.7 m)
Power Supply	Two AA-size alkaline batteries (LR6), capacity: approx. 10 INSTAX Mini film packs of 10 exposures each

Auto Power Off Time	After 5 minutes
Other	Includes film counter and film pack confirmation window
Dimensions	4.24 inch × 4.77 inch × 2.65 inch (107.6 mm × 121.2 mm × 67.3 mm)
Weight	293 g (without batteries, strap, and film)

EN

Information for FUJIFILM in the United States

FUJIFILM North America Corp.
200 Summit Lake Drive
Valhalla, New York 10595, USA

Information for FUJIFILM in Canada

FUJIFILM Canada Inc.
600 Suffolk Court, Mississauga, Ontario L5R 4G4, Canada

Click Here to Read More....

**Mobile friendly optimized manual:
Fujifilm Instax Mini 11 Instant Camera
Instruction Manual**

[**en**] If you have any inquiries about this product, please contact a FUJIFILM authorized distributor or dealer, or access the website below.

[**fr**] Si vous avez des questions concernant ce produit, veuillez contacter un distributeur ou un revendeur FUJIFILM agréé ou visitez le site Internet suivant.

[**es**] Si tiene alguna pregunta sobre este producto, póngase en contacto con un vendedor o un distribuidor de FUJIFILM autorizados o acceda al sitio web siguiente.

<http://www.fujifilm.com/>

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN