 




Owner' s Induction Cooktop Manual

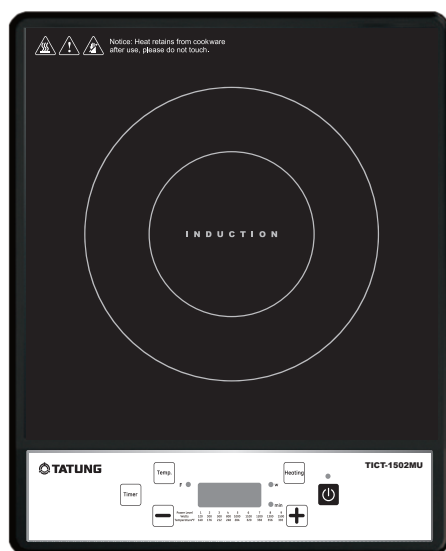

Model: TICT-1502MU

This manual contains important safety instructions.
Please read the manual thoroughly before use.

CONTENTS

SAFEGUARDS & SAFETY INSTRUCTIONS	2
PRODUCT INTRODUCTION	8
OPERATING INSTRUCTIONS	10
COMPATIBLE COOKWARE	12
CLEANING AND MAINTENANCE	12
TROUBLESHOOTING	13
WARRANTY & DISCLAIMER	14

SAFEGUARDS & SAFETY INSTRUCTIONS

IMPORTANT:

Read all instructions before operating the unit.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, property damage, electrical shock and personal injury, including the following:

- Do not touch hot surfaces.
- To protect against electrical shock do not immerse cord/plugs in water or other liquid.
- Close supervision is necessary when the unit is being used, especially near children.
- Unplug unit when not in use and before cleaning. Allow unit to cool before moving or cleaning.
- Never operate the unit with a damaged cord or plug or after the unit has malfunctioned or have been damaged in any manner. Return appliance to Tatung's service facility for examination, repair or adjustments.
- The use of accessories or cooking pans which are not recommended by Tatung may cause fires or injuries.
- Do not use outdoors or for commercial use. This unit is for household use only.
- Do not let power cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas, electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn off all controls then remove plug from wall outlet
- Do not use appliance for other than intended use.
- **POLARIZED PLUG:** This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, then try plugging it in the other way. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Be cautious when opening any lid while cooking.
- Do not use if ceramic cooktop should break or crack, as cleaning solutions and spillovers may penetrate the broken cook-top and may create a risk of an electric shock.
- Clean Cook-Top with Caution – If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burns; some cleaners can produce noxious fumes if applied to a hot surface.
- Do not place metallic objects such as knives, forks, spoons and lids on or near the appliance

SAVE THESE INSTRUCTIONS.

If you have any questions or do not understand anything from this manual please contact Tatung at 800-829-2850 Ext. 816

SAFEGUARDS & SAFETY INSTRUCTIONS

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. **The user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorientate or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Power Cord Safeguards:

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

If a long detachable power-supply cord or extension cord is used:

 
- The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance.
- The cord should be a grounding 3-wire cord. Connect only to properly grounded outlet
- Do not let power cord hang over edge of table or counter, or touch hot surfaces.
- If using an extension cord to connect the Induction Cooktop, please note that a damaged extension cord can cause the unit to malfunction. Always check your extension cord for damage and be sure it is compliant with the required voltage. Be sure not to place the cord where people can trip over it

SAFEGUARDS & SAFETY INSTRUCTIONS

For safety reasons and to avoid damage to the appliance or injuries to people, please abide by all the safety instructions presented in the manual. Ignoring safety warnings may result in injuries or fires. The appliance should never be operated by children and special care should be taken when the unit is in their presence.

Pacemakers:


People with heart pacemakers should consult a doctor before using or going near the induction cooker.

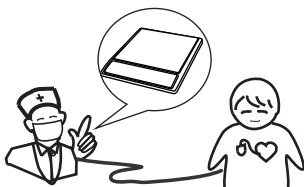


Never heat food in sealed containers, such as compressed products, cans, or coffee pots, to avoid explosion caused by heat expansion.



 
To avoid affecting product performance and to prevent injury, do not heat empty pots. When in use, do not leave the appliance without supervision for a long time. When leaving the appliance without supervision, make sure there is enough water in the pot.

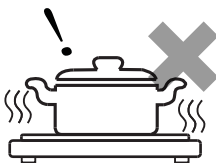

 
To avoid accidents, do not place the induction cooker, when in use, on a gas stove. (The magnetic lines can heat the metal parts of the gas stove).

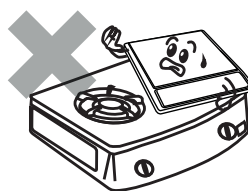

 Do not heat iron items on the induction cooker heating plate to avoid danger caused by high temperatures.

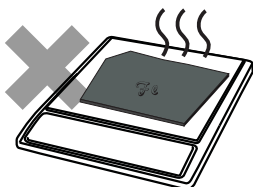


 The utensils provided for the induction cooker can only be used for cooking with it. These cooking utensils cannot be used on both induction cooker and gas stove.

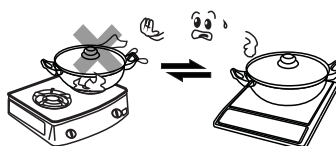


SAFEGUARDS & SAFETY INSTRUCTIONS

 
Do not let children operate the appliance. Also, use close supervision when children are near.

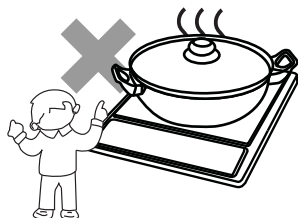

 Unplug the power cord from the outlet after use to avoid fire and/or damage to the electronic components, caused by prolonged electrical connection.

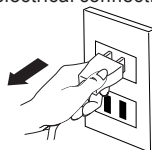

 
To avoid danger, do not insert any foreign object, such as iron wire, nor block the air ventilation opening or air entry port.

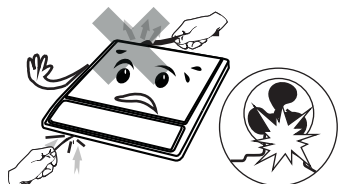


Do not immerse the induction cooker in water or any liquids.



 
To avoid danger, do not place paper, aluminium foil, cloth or other unsuitable articles onto the induction cooker heating plate for indirect heating.

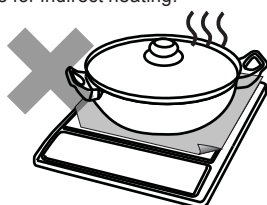

 
Avoid impact damage to the heating plate. If damaged, please stop using it and contact Tatung's Service Department

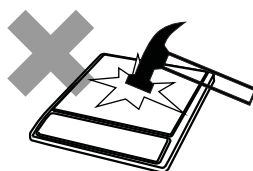

 When using the induction cooker, do not put it on any metal platform (such as iron, stainless steel or aluminium), or place a non-metal pad less than 10cm thick on the heating plate.

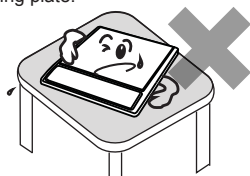


 Allow at least 5" of sufficient space around the cooking area and always place unit on a flat level surface. Do not block the ventilation opening as this may cause the appliance to overheat.

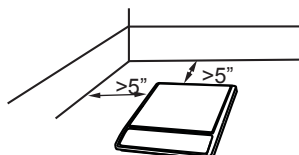

I.SAFETY INSTRUCTIONS

 
To avoid danger, if the power cord is damaged please contact Tatung to replace the power cord.

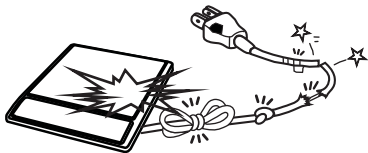

Use only a high quality power outlet with the power rating, equal or above 15A. Do not connect the Induction Cooktop to the same outlet with other household appliances such as air conditioners, microwaves, etc. As it could overload the outlet.



 To avoid cracks and other damages, please do not touch the product with sharp objects. If a crack is found, turn off the appliance to avoid any electrical shock that might occur and contact Tatung.

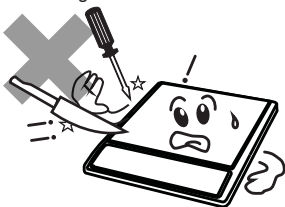


Please keep the Induction Cooker clean. Protect the induction cooker from bugs, dust and humidity. When not in use for a long period, please properly store it after cleaning.



The cooker cannot be overloaded. Overloading the plate may damage the plastic cover and cooker plate. The max weight capacity is 8 kg.



 Metal objects, such as knives, forks, spoons and lids, should not be put on the surface of the cooking area.

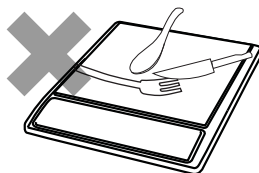




Do not use the induction cooker near a gas stove, kerosene stove, gas cooker or in any space with an open fire or an environment with high temperature.



Always operate the unit on a flat, leveled, non-metallic surface. Do not use the induction cooker on flammable surfaces like carpet or table cloth.

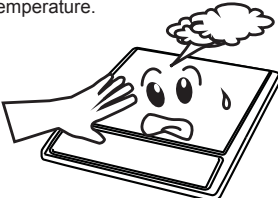

<p>Clean after each use. Wipe down the unit with a damp cloth.</p> 	<p> When operating the appliance or after moving the pot, the cooking area will remain hot for a period of time. Do not touch it. Be careful of scalding caused by the high temperature.</p> 
<p>This product is intended for household use only. Not for commercial use.</p>	<p>Anyone who has not fully understand all operating and safety instructions in this manual is not qualified to operate nor clean the appliance</p>
<p>Periodically check that there are are no object (glass, paper, etc) that could obstruct the inlet under under your induction cooker</p>	<p>Never cook with an empty pot.</p>
<p>The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.</p>	<p>Note: All the test and authentication of this product is based on the SUS430 cookware(bottom diameter 180±10mm).The other cookwares can not guarantee the best results and performance.</p>


II.PRODUCT INTRODUCTION

The induction cooker is able to meet various kinds of cooking demands by electromagnetic heating. High thermal efficiency, is safe and reliable, and easy to clean.

Specifications


Model	Applied voltage/frequency	Rated power	Dimension (Inches)	Weight (Lbs)
TICT-1502MU	120Vac,60Hz	1500W	11.1x13.6x2.4	5.2

 Identifying Parts

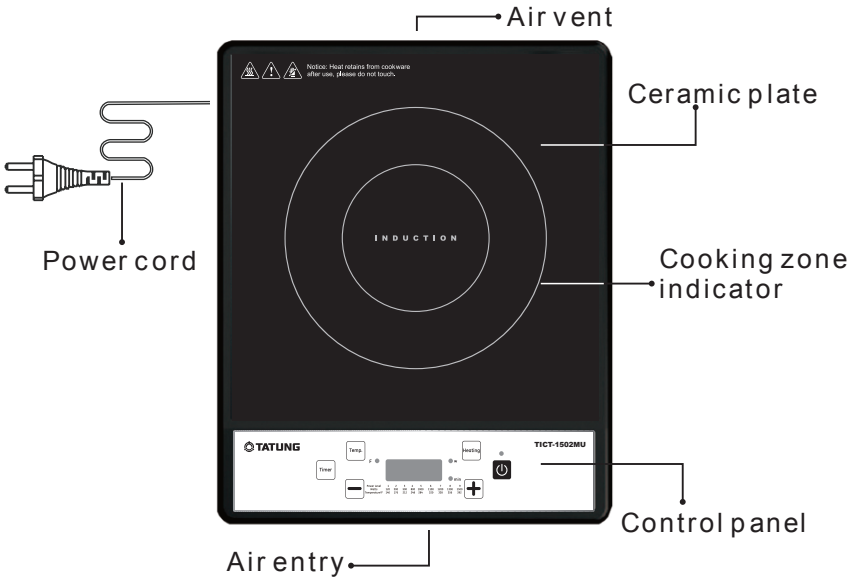

II.PRODUCT INTRODUCTION

 Control Panel

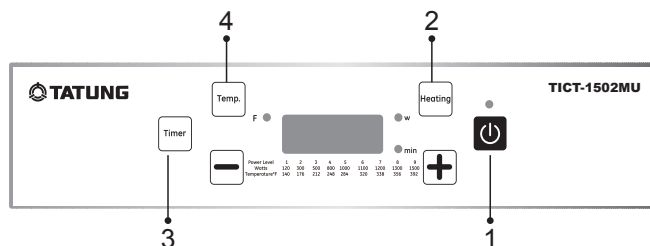

1. ON/STANDBY
3. Timer

2. Heating function
4. Temp.

Before using New Induction cooker

- Read this guide, and taking special note of the “Safety Warnings” section.
- Remove any protective film that may still be on your ceramic plate.

Installation

- Select a safe location to use the induction cooker. Make sure it is 5” away from other appliances, walls or other objects.
- Make sure that the pot is placed in the center of the ceramic plate. Refer to page 13 in this manual for approved ferromagnetic cookware.
- Plug in the power cord, a beep will sound.

III. OPERATION INSTRUCTIONS

Turn on

- After the “ON/STANDBY” button is pressed, the induction cooker is ready to heat, press “+/-” button or “Heating” button to select heating function, press “Temp.” button to select temperature function.
- After the “ON/STANDBY” button is pressed, neither “+/-” button nor “Heating” button is pressed to select heating function, nor “Temp.” button is pressed to select temperature function, the induction cooker will shut down within about 1 min automatically.
- After the “ON/STANDBY” button is pressed, when “+/-” button or “Heating” button is pressed to select heating function, or “Temp.” button is pressed to select temperature function, and if no pot is placed, the buzzer will sound to remind that there is no pot, and the induction cooker will not heat, if there is still no pot after 10s, the induction cooker will shut down automatically.

Function

Heating function

- After the “ON/STANDBY” button is pressed, press “Heating” button to enter heating function, the buzzer sounds, the switch indicator and the heating indicator “W” light up, the induction cooker enters the heating function, and the default heating function level is Level 7 with the corresponding power 1200W.
- If heating function or temperature function is not selected, heating function can also be selected by pressing “+/-” button, the buzzer sounds, the switch indicator and the heating indicator “W” light up, the induction cooker enters the heating function, and the default heating function level is Level 7 with the corresponding power 1200W.

III. OPERATION INSTRUCTIONS

Function

- If heating function or temperature function has been selected, the “+/-” button can only be used for level adjustment of heating function and temperature function and adjustment of timer.
- If current function is already heating function, “Heating” button cannot work if it is pressed again. You can only press “Temp.” button to select temperature function.
- Heating function is provided with 9 levels, each level has the following power, and a corresponding power can be selected by pressing “+/-” button.

Level Function	1	2	3	4	5	6	7	8	9
Heating	120W	300W	500W	800W	1000W	1100W	1200W	1300W	1500W

Temp. function

- After the “ON/STANDBY” button is pressed, press “Temp.” button to select temperature function, the buzzer sounds, the switch indicator and the temperature indicator “F” light up, the induction cooker enters the temperature function, and the default temperature function level is Level 7 with the corresponding temperature 338F.
- If current function is already temperature function, “Temp.” button cannot work if it is pressed again. You can only press “Heating” button to select heating function.
- Temperature function is provided with 9 levels, each level has the following temperature, and a corresponding temperature can be selected by pressing “+/-” button.

Level Function	1	2	3	4	5	6	7	8	9
Temp.	140F	176F	212F	248F	284F	320F	338F	356F	392F

III. OPERATION INSTRUCTIONS

Timer

- After the temperature or heating function is selected, press “Timer” button to enter the timing mode, the timer indicator “MIN” lights up, and when the nixie tube flashes, press the “+/-” button to adjust the time duration. The timer can be adjusted from 1 minute to 3 hours. When “Timer” button is pressed again in the state of timing, timing exits and returns to the default timing state, and if the temperature or heating function is not entered, “Timer” button will be invalidated.
- Once the time is set, the number on the display will blink for several seconds. The induction cooker will start counting down.
- Once the timer is complete, the induction cooker will automatically power off.

Default time of function

- The default time of each function is two hours, which is irrelevant to the function mode.

Level	1	2	3	4	5	6	7	8	9
Default time of function (Hour)	2	2	2	2	2	2	2	2	2

Power Off

- When the operating time is over, the induction cooker will power off automatically.
- To power off the unit manually, simply press the “ON/STANDBY” button to turn the appliance off.

IV. COMPATIBLE COOKWARE



Iron oil frying
pan



Stainless steel



Iron pan



Iron kettle



Enamel stainless
steel kettle



Enamel cooking
utensil



Iron plate

- Induction-compatible cookware contains ferromagnetic materials – in other words, it contains iron, or has a layer with magnetic properties.
- Cookware must have a flat smooth bottom with the diameter more than 4½" and less than 8".
- After the first use, some white spots may appear at the bottom of the pot. Please note that this is normal. To clean the white spots, simply pour vinegar into the pot and heat it to 140°F–180°F, then wipe the spots away with a brush.
- Aluminum, copper or glass cookware will not work unless they have a layer on the bottom with magnetic properties.
- If the pot is removed the induction cooker will stop heating immediately, a buzzer will sound for 10 seconds, then it will go into standby mode automatically. Note: To tell if a pot or pan is induction-compatible, hold a magnet to the bottom. If it clings, the cookware will work on an induction cooktop.

V. CLEANING AND MAINTENANCE

- Always unplug the appliance and allow the unit to cool down before cleaning.
- After a period of time the opening air inlets/outlets will collect dust please wipe with a soft dry cloth. Dust in the air inlet and outlet can be cleaned by using a soft brush or a mini vacuum cleaner.

Note: Never rinse the unit in water

V. CLEANING AND MAINTENANCE

To clean oil spots on the cooker plate, use a soft moist cloth with a little toothpaste or mild detergent.

When product is not in use for a long period of time, disconnect the power plug from the power outlet and store the induction cooker away from any dust or bugs

VI. TROUBLESHOOTING


Issue		Cause (Points to Check)
After plugging in the power cord and pressing the "ON/STANDBY" key, the indicator and display do not light up.		<ul style="list-style-type: none"> • Is the power plug properly connected? • Is the switch, power outlet, fuse or power cord damaged?
The "ON/STANDBY" indicator lights up and the display works normally, but heating does not start.		<ul style="list-style-type: none"> • Is the cookware compatible. Refer to page 13. • Is the appliance in a "Preset" working status?
While cooking the induction cooker stops heating up.		<ul style="list-style-type: none"> • Is the temperature of the oil too high when frying dishes? • Is the environment temperature high? • Is the air inlet or air outlet of the induction cooker blocked? • Is the default heating time of the induction cooker over? • The self-safety protection of the induction cooker starts, wait for several minutes and connect power to use it.
Code of failure	E3 E6	<ul style="list-style-type: none"> • Wait a moment and press the "ON/STANDBY" button when the temperature of the hotplate becomes normal the induction hotplate will operate as usual.
	E7 E8	<ul style="list-style-type: none"> • Turn off the hotplate, when the voltage becomes normal, and then turn on the hotplate; it will operate as usual.
	E1 E2 E4 E5 Eb Ec	<ul style="list-style-type: none"> • Please contact our service dept. 1-800-827-2850 Ext. 816

Emergency

During use if the product is not working properly please immediately unplug the power cord. If product fails to work properly please contact our service department at 800-827-2850 Ext. 816 or email us at service@tatungusa.com



 電 磁 爐 使 用 說 明 書

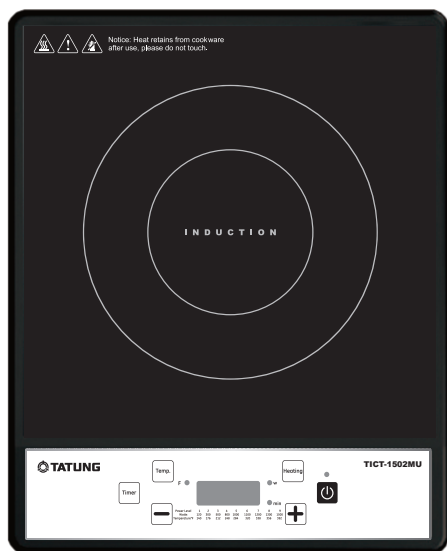

型號：TICT-1502MU

本說明書包含重要安全說明。在使用之前請先詳細閱讀本使用說明書。

目 錄

安全注意事項和安全說明	2
產品介紹	8
操作說明	10
適用炊具	13
清潔與維護	13
異常現象自檢	14
保修和免責聲明	15

安全注意事項和安全說明

注意事項：

在使用電器前，請閱讀全部說明。

在使用電器時，為了減少火災、財產損失、觸電和人身傷害，應務必遵循包括

如下內容的基本安全注意事項：

- 請不要觸摸熱表面。
- 為了避免觸電，請不要將電源線或插座放入水或其他液體內。
- 使用電磁爐時，特別是有兒童在旁邊時，請務必密切監護。
- 在設備不使用和拆除部件清洗時前，請務必從插座上拔掉插頭。在搬動或清理設備之前，請將設備冷卻。
- 電源線或插頭損壞，或電器出現故障，或以任何方式損壞，請不要使用此電器。請將電器送往附近的Tatung公司授權維修中心檢查、修理或調節。
- 使用電器製造商不推薦的附件或炊具可能導致火災或傷害。
- 請不要室外使用或用於商業用途。本電器僅供家庭使用。
- 請不要將電源線掛在桌櫃邊緣上，或接觸灼熱表面。
- 請不要將該設備放在熱氣或電氣燃燒器上面或附近，或加熱的烤箱內。
- 在移動裝有熱油或其他灼熱液體的設備時，請必須極為小心。
- 使用時，先插好電磁爐的插頭，然後插好牆壁插座上插頭。為斷開電源，請關閉所有控制開關，然後從牆壁插座上拔掉插頭。
- 請不要將電磁爐用於非預期用途。
- 極化插頭：本電器配有一個極化插頭（一個插片比另一個寬）。考慮到安全特性，這種插頭只單向插入極化插座。如果插頭沒有完全插入插座內，則嘗試用另外一個方向插入。如果還插不進去，請與合格的電工聯繫。請不要試圖消除這種安全特性。
- 烹飪時，拿掉蓋子必須極為小心。
- 陶瓷面板損壞或破裂時不要烹飪，如果灶面板損壞，洗滌液和溢出物可能滲透到破裂的灶面板內，可能會導致觸電風險。
- 請小心清洗爐灶面板。如果用濕海綿或布擦拭灼熱烹飪區域的溢出物時，一定要小心，避免蒸汽灼傷，有些清洗劑如果應用到灼熱表面可能會產生有毒氣體。
- 金屬物體如刀、叉、勺和蓋不要放在或接近電器烹飪區域表面。

請保管好本說明書！

如果您對本產品有任何問題或對本說明書有任何疑問，
請撥打電話800-829-2850轉816 聯繫大同美國公司。

安全注意事項和安全說明

操作時，請遵守如下兩個條件：

- (1) 本裝置不能引起有害的干擾。
- (2) 本裝置必須接受收到的任何干擾，包括可能導致不適操作的干擾。

小心：如沒有經過廠商明確批准的變更或修改，會使用戶喪失操作本產品的權利，與產品保固責任。

注釋：本設備產生、使用並輻射無線電頻率能量，如果沒有按照說明書安裝與使用，可能對無線電通信造成有害干擾。所以，不能保證特殊裝置內不會發生干擾。如果該設備確實對無線電或電視接收造成有害干擾，可以通過打開和關閉設備來確定。

- 重新定向或重新定位接收天線。
- 增加設備和接收器之間的距離。
- 將設備連接到電路上的一個插座，該插座與接收器連接的插座不同。請諮詢經銷商或有經驗的無線電/電視技術人員尋求幫助。

電源線安全保護：

本產品提供短電源線，以減少較長電源線纏繞或絆倒的風險。

在使用較長的可拆卸電源線或延長線時：

 
- 電源線或延長線的標記電氣額定值應至少與電器的電氣額定值一樣大。
- 電源線應為接地三線電源線。僅在接地插座連接正確時使用。
- 請不要將電源線掛在桌櫃邊緣上，或接觸灼熱表面。
- 如果使用延長線連接電磁爐時，請知悉破損的延長線會引起電器故障。請確保檢查延長線是否破損以及使用的電壓是否符合要求。請確保人不會被電源線無意絆倒。

安全注意事項和安全說明

為保證使用安全，避免對您和他人造成傷害和財產損失，請您務必遵守本說明書中的安全注意事項和安全說明。不遵守安全警告可能導致事故發生。幼兒和殘疾人需由監護人員使用本電器。

起搏器：


使用心臟起搏器者，使用或靠近本產品前，請諮詢專業醫生。

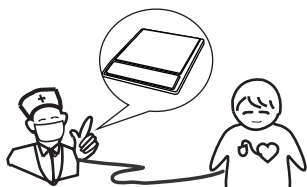


密封食品不能放在電磁爐上加熱，如高壓類、罐頭類、咖啡壺等，避免受熱膨脹而產生爆炸危險。



 
切勿空鍋乾燒，以免影響產品使用性能，甚至發生危險。使用中，請勿長時間離開。若需離開，請確保炊具內足夠的水量。

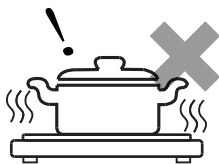

 
請勿將電磁爐放置在燃氣灶上使用（磁力線會將燃氣灶的鐵質金屬件加熱），以免發生意外。

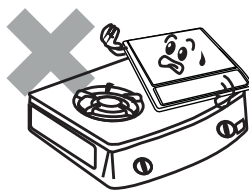

請勿將鐵片放在灶面板上加熱，避免因高溫而產生危險。

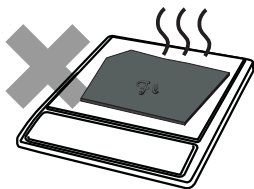 


電磁爐專用炊具只能放在電磁爐上使用，炊具不能在電磁爐和燃氣灶上混合使用。

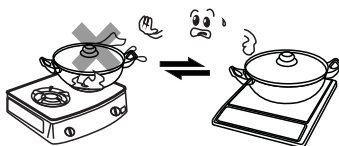 


安全注意事項和安全說明

 
請勿讓兒童使用本電器。同時，兒童靠近本電器時，請務必密切監護。

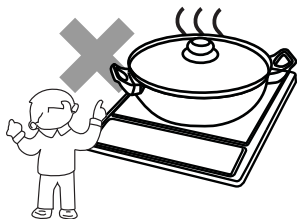

使用完後將電源線插頭拔離插座，避免長時間通電引起起火和/或電子元器件損壞。

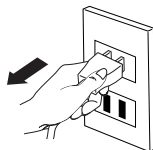 


不能插入鐵絲等異物或堵塞出風口及進風口，以免發生危險。

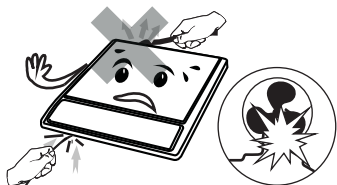 


請勿將電磁爐浸泡在水或其他液體中。



 
請勿以紙張、鋁箔紙、布等無關物品墊在灶面板上間接加熱，以免產生危險。

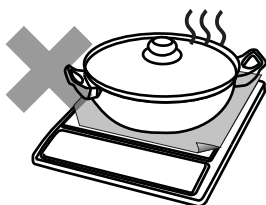

 
請避免用力衝擊灶面板，以免灶面板損壞。如有損壞請停止使用並聯繫大同美国公司服務部。

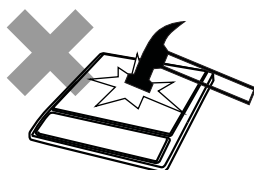

 請勿將電磁爐放在任何金屬（鐵質、不銹鋼、鋁質等）平臺上使用，包括在其上墊厚度小於10cm的非金屬墊。

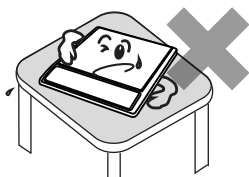


 電磁爐應放置與距離其四周要有5"以上的空間以及平坦的表面。請不要被異物擋住通風口而引起電磁爐過熱。

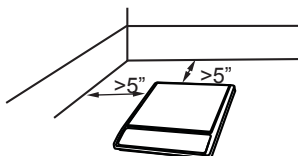

I、安全說明

 
聯絡大同美國公司替換損壞的電源線，以避免觸電或引起火災。

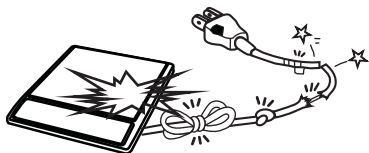

使用完後將電源線插頭拔離插座，避免長時間通電引起起火和/或電子元器件損壞。



 請勿用鋒利器具接觸灶面板，以免灶面板開裂等損壞。如果灶面有裂紋，關掉器具以避免可能出現的電擊，並聯絡大同美國公司。

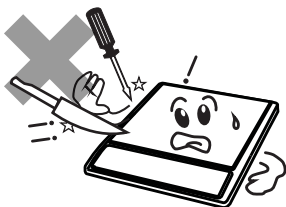


請注意保持清潔。做好電磁爐的防蟲、防塵、防潮保護。長期不使用時，請清潔後妥善保存。




電磁爐不能超載。烤盤超載可能損壞塑膠蓋和電磁爐烤盤。



 金屬物體如刀、叉、勺和蓋不應放在烹飪區域表面。

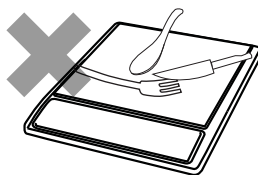

請勿將電磁爐擺放在靠近瓦斯爐、煤油爐、燃氣灶等有明火或高溫環境中使用。

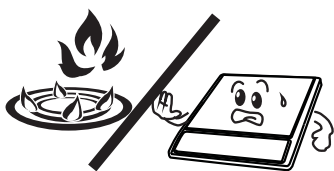 


使用電磁爐時，應放置在平坦、水平、非金屬的表面。請不放置在地毯、桌布等易燃表面上使用。



I、安全說明

 每次使用後應進行清潔。請使用濕布擦拭。

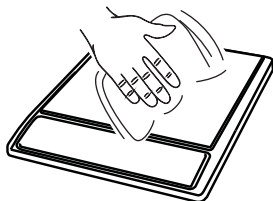

器具工作時及鍋體移開後一段時間，烹飪區域留有餘熱。請勿觸摸，小心高溫燙傷。



本電器僅供家庭使用。請不要用於商業用途。

如對本電器的操作和安全注意事項和安全說明沒有完全理解，請不要使用或清潔本電器。

請定期檢查是否存在可能阻塞電磁爐下面入口的物體（玻璃、紙片等）。

請切勿空鍋乾燒。

器具不能在外接定時器或獨立的遙控控制系統的方式下運行。

注釋：本產品的所有試驗與認證均基於不銹鋼430炊具（底部直徑 $180 \pm 10\text{mm}$ ）。其他炊具不能保證最佳效果和性能。


II、產品介紹

電磁爐通過電磁加熱能夠滿足各種烹飪需求。熱效率高，安全可靠，容易清潔。


規格

型號	使用電壓/頻率	額定功率	外型尺寸 (英寸)	重量(英磅)
TICT-1502MU	120Vac,60Hz	1500W	11.1x13.6x2.4	5.2

 部件識別

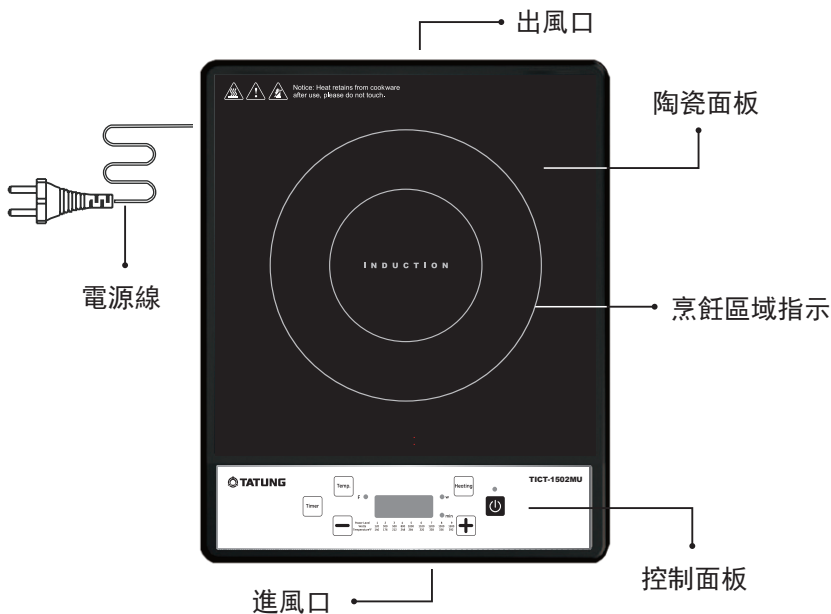

控制面板

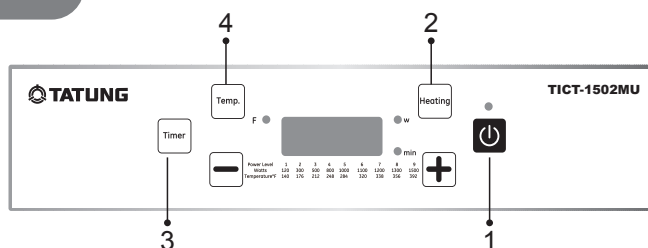 

- 1、電源/待機
- 2、加熱功能
- 3、定時器
- 4、定溫

使用新電磁爐之前

- 請閱讀本說明書，特別注意“安全注意事項和安全說明”一節。
- 使用前請去掉貼在陶瓷面板上的保護膜。

安裝

- 使用電磁爐時，請選擇一安全場所。並確保本電器距離其他電器、牆壁和其他物體至少有5”。
- 請確保將炊具放在陶瓷面板的中心。請參見第13頁核准的鐵磁炊具說明。連接電源後，會聽到嗶的一聲。

III、操作說明

打開電源

- 按完開關鍵後，電磁爐準備加熱，按“+/-”鍵或者“Heating”鍵選擇加熱功能；按“Temp.”鍵選擇定溫功能。
- 按完開關鍵後，如果沒有按“+/-”或者“Heating”選擇加熱功能，也沒有按“TEMP.”鍵選擇定溫功能。1分鐘左右電磁爐將自動關機。
- 按完開關鍵後，當按“+/-”或者“Heating”選擇加熱功能，或者按“Temp.”鍵選擇定溫功能後，如果沒有放鍋具，蜂鳴器將會鳴叫提示沒有鍋具，電磁爐將不會加熱，如果10秒後仍沒有鍋具，電磁爐將會自動關機。

功能

加熱功能

- 按完開關鍵後：按“Heating”鍵進入加熱功能，蜂鳴器鳴叫，開關指示燈和加熱指示燈“W”點亮，電磁爐進入加熱功能，初始加熱功能檔位為7檔，對應功率1200W。
- 在沒有選擇加熱功能或者定溫功能條件下，可按“+/-”鍵也進入加熱功能，蜂鳴器鳴叫，開關指示燈和加熱指示燈“W”點亮，電磁爐進入加熱狀態，初始功率檔位為7檔，對應功率1200W。
- 如果已經選擇了加熱功能或者定溫功能，“+/-”鍵不能再作為加熱功能的選擇按鍵，祇能用于加熱、定溫功能的檔位調節和定時時間調節。
- 如果當前功能已經是加熱功能，再按“Heating”鍵無效。祇能按“Temp.”鍵切換“定溫”功能。
- 加熱功能共9個檔位，每個檔位的功率如下，可以通過“+、-”選擇相應的功率。

檔位 功能	1	2	3	4	5	6	7	8	9
加熱	120W	300W	500W	800W	1000W	1100W	1200W	1300W	1500W

III、操作說明

功能

定溫功能

- 按完開關鍵後：按“Temp.”鍵進入定溫功能，蜂鳴器鳴叫，開關指示燈和定溫指示燈“F”點亮，電磁爐進入定溫功能，初始定溫功能檔位為7檔，對應溫度338F。
- 如果當前功能已經是定溫功能，再按“Temp.”鍵無效。祇能按“Heating”鍵切換加熱功能。
- 定溫功能共9個檔位，每個檔位的溫對應度如下，可以通過“+/-”選擇相應的溫度。

檔位 功能	1	2	3	4	5	6	7	8	9
定溫	140F	176F	212F	248F	284F	320F	338F	356F	392F

定時

- 在進入定溫或者加熱功能後，按“Timer”鍵進入定時模式，定時指示燈“MIN”亮，當數碼管閃爍顯示時，按“+/-”鍵進行定時調節，定時可調節的範圍為：0-3小時，定時狀態下再按“Timer”鍵退出定時回到默認定時狀態，如果沒有進入定溫或者加熱功能，“Timer”鍵無效。
- 完成設置后，顯示器上的數字在閃爍數秒后出現。電磁爐開始倒計時。
- 定時完成后，電磁爐將自動關閉電源。

III、操作說明

功能默認定時

- 每個功能的默認時間都為2個小時，與檔位無關。

火力檔位	1	2	3	4	5	6	7	8	9
功能默認時間 (小時)	2	2	2	2	2	2	2	2	2

關閉電源

- 操作時間結束後，電磁爐將自動關閉電源。
- 如需手動關閉電器，請按下“電源/待機”按鈕，關閉電器。

IV、適用炊具



長柄平底鍋



不銹鋼鍋



鐵鍋



鐵壺



搪瓷不銹鋼壺



搪瓷炊具



鐵板

- 感應相容炊具包含鐵磁材料。－ 換句話說，它含有鐵，或帶有具磁性的薄層。
- 炊具的底部必須平坦光滑，直徑在4½” -8”之間。
- 第一次使用後，鍋底會出現一些白色斑點。這是正常現象。為了清潔白色斑點，請向鍋內倒入一些醋，加熱到大約140°F-180°F，然後用刷子擦去斑點。
- 使用鋁、銅或玻璃炊具，電磁爐不工作，除非底部帶有具磁性的薄層。
- 如果取走炊具，電磁爐會立刻停止加熱。蜂鳴器鳴響10秒鐘，然後自動進入待機模式。注意：要判斷炊具或平底鍋是否感應相容，將磁鐵吸到底部，如果緊貼，炊具可在電磁爐上工作。

V、清潔與維護

- 清潔前，請先關機並把電源插頭拔離插座，待電磁爐冷卻後進行。
- 電磁爐使用一段時間後，進/出風口開口處會積聚一些灰塵，請用柔軟幹布輕拭清潔。進風口及出風口灰塵，可用柔軟的毛刷子或微型進塵器清理。

注：請勿用水沖洗。

- 為了清潔灶面板的油污垢，可用柔軟的濕抹布沾少量牙膏或中性洗潔劑擦拭。
- 長時間不使用時，請將電源插頭拔離插座，並注意做好爐體的防塵防蟲保護。

VI、異常現象自檢

異常現象		原因（檢查要點）
插上電源線，按“電源/待機”鍵後，指示燈和顯示不亮。		<ul style="list-style-type: none"> ● 插頭是否插緊？ ● 開關、插座、保險絲、電源線是否完好？
“電源/待機”指示燈亮，顯示正常，但不加熱。		<ul style="list-style-type: none"> ● 炊具材料是否符合？請參見第 13 頁。 ● 器具是否處於“預設置”工作狀態？ ● 其他原因，請送特約維修網點維修。
使用過程中電磁爐突然停止加熱。		<ul style="list-style-type: none"> ● 炸、煎時炊具內的油溫是否過高？ ● 環境的溫度是否很高？ ● 電磁爐進風口或出風口是否堵塞？ ● 是否電磁爐默認加熱時間已到？ ● 電磁爐安全保護，等幾分鐘後再通電使用。
故障代碼	E3 E6	片刻後，當面板的溫度正常時，按下“電源/待機”按鈕，電磁爐將正常運行。
	E7 E8	電壓正常後，關閉電磁爐，然後打開電源，電磁爐將正常運行。
	E1 E2 E4 E5 Eb Ec	請聯繫我公司服務部 1-800-827-2850 轉 816。

緊急情況

如果在使用期間產品不能正常工作，請立刻拔掉插頭，切斷電源。如果產品不能正常工作，請聯繫我公司服務部1-800-827-2850轉816或發送郵件到service@tatungusa.com。

VII、保修

本產品享有大同美国公司一年有限保修。

- 1、從採購之日起一年自攜保修。
- 2、保修期間，下列情況之一者，不屬於大同美国公司保修範圍：
 - a、使用不當或自行拆卸。
 - b、維護不當。
 - c、無有效發票。
 - d、自購買之日超過一年。
 - e、自然災害，或產品沒有按要求的電壓使用。
 - f、將電磁爐用於商業用途。
- 3、在保修期間，大同美国公司僅負責產品維修、產品更換和產品維修後的運輸費用。客戶負責將維修或更換的產品運往大同美国公司的郵資。

大同美国公司客戶服務部
2000 E. Carson Street
Carson, CA 90810
1-800-827-2850轉842
service@tatungusa.com

VIII. 免責聲明

本使用說明書內的資訊如有變更恕不通知。對於本說明書內可能包含的不準確之處，大同美国公司不承擔責任。如果發現本說明書內的資訊不正確、誤導或不全面，希望您能提供意見和建議，我們感激不盡。

Tatung Company of America, Inc.
2850 El Presidio St., Long Beach, CA 90810
www.tatungusa.com