

Dell Wyse Cloud Client

Wyse 3010


Quick Start Guide




1 Install the horizontal stand



Or install the VESA mount

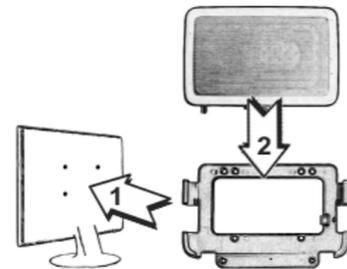


2 Connect the network

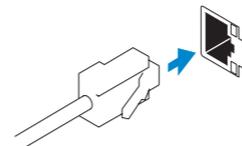


Network connector

Or

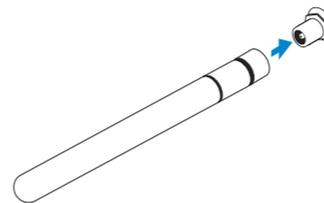

Wireless antenna

3 Connect the keyboard and mouse

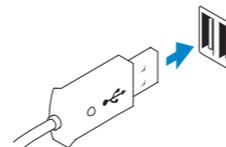

USB Connector

Product support and manuals

dell.com/support
dell.com/support/manuals

Contact Dell

dell.com/contactdell

Regulatory and safety

dell.com/regulatory_compliance

Regulatory model

Tx0

Client device model

Dell Wyse Cloud Client
Wyse 3010




0MWD9XA00

© 2015 Dell Inc.


Printed in China.
2015-05

4 Connect the display

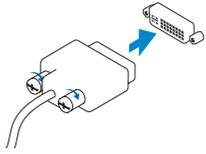


DVI-I connector

Or

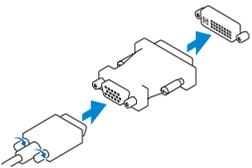


VGA adapter

5 Connect the power cable on your client device and display

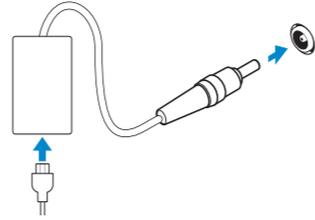

Client device power connector

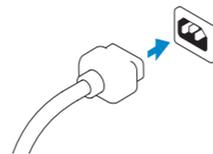


Display power connector

NOTE: Your client device is ready to use when the client device activity light goes off.

6 Turn on your client device and display

Features

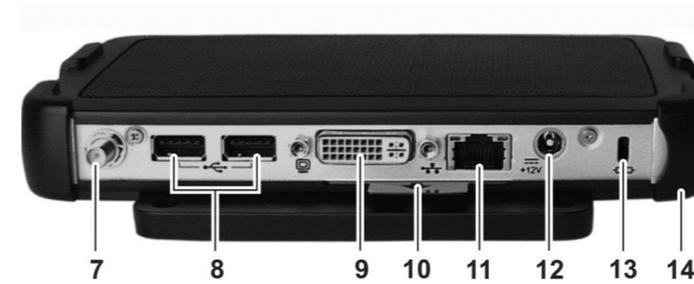

- | | |
|---|--------------------------------------|
| 1. Microphone in | 11. Network port, 10/100/1000 Base-T |
| 2. Headphone out | 12. +12V DC Power adapter input |
| 3. USB 2.0 port (2) | 13. Lock receptacle |
| 4. SD card slot (available only on some 3010 devices) | 14. Horizontal stand/VESA mount |
| 5. Activity light | |
| 6. Power on/off button and light | |
| 7. Wireless antenna port (optional) | |
| 8. USB 2.0 port (2) | |
| 9. DVI-I port (1x DVI-D/1x VGA) | |
| 10. Product information tab | |



NOTE: Components may vary based on model and location.