

SM5387B

User Manual

File Version: V21.3.6



Technical Parameters

Technical parameter	Parameter value
Brand	SONBEST

Running temperature	-40~80°C
Working humidity	5%RH~90%RH

Product Size



How to wiring?



NORTH INDICATOR POINT

There is a white true north indicator under the weathercock

16 DIRECTIONS

Multi-directional measurement accurate and stable



FLANGED CHASSIS

Multiple mounting holes design firm and stable

RS485 Wiring

	RD	PWR+
	GN	PWR-
	YE	RS485 A+
	BU	RS485 B-

Pulse Wiring

	RD	PWR+
	BK	PWR-
	BU	Pulse OUT

4~20mA Wiring

	RD	PWR+
	GN	PWR-
	YE	Current out


0~5V Wiring

	RD	PWR+
	GN	PWR-
	YE	Voltage out


※Note: When wiring, connect the positive and negative poles of the power supply first, then connect the signal wire

Application solution



■ RS485 Wiring

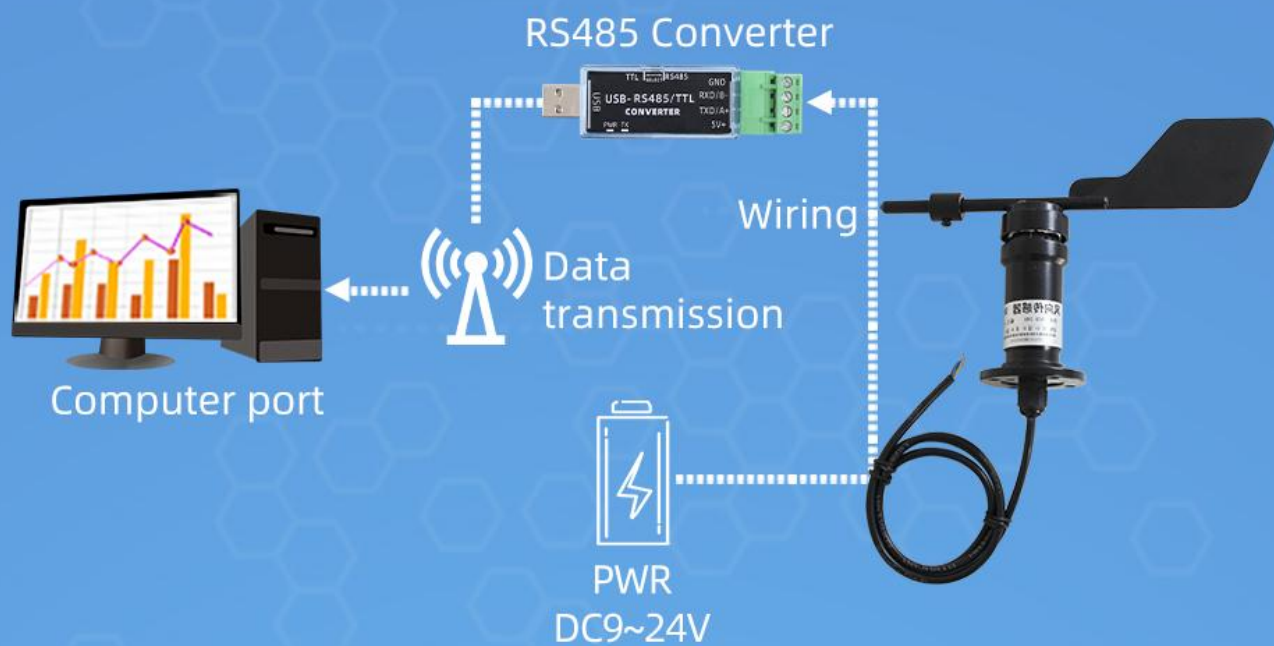

■ 4~20mA Wiring

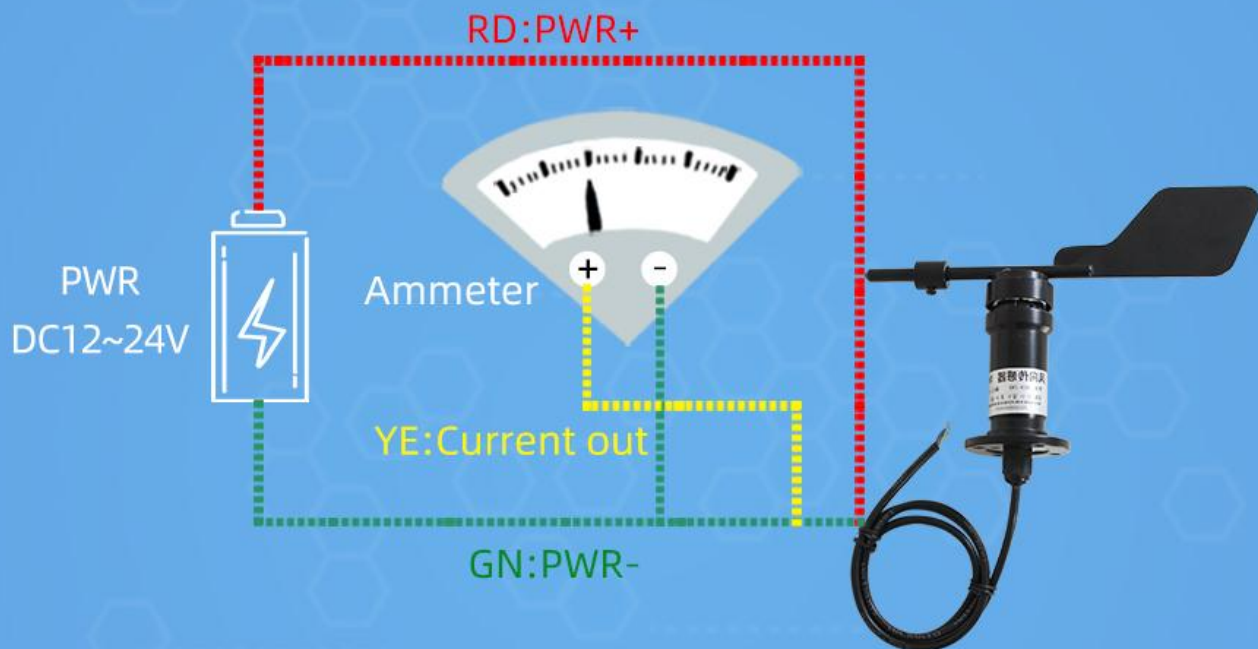

■ 0~5V Wiring

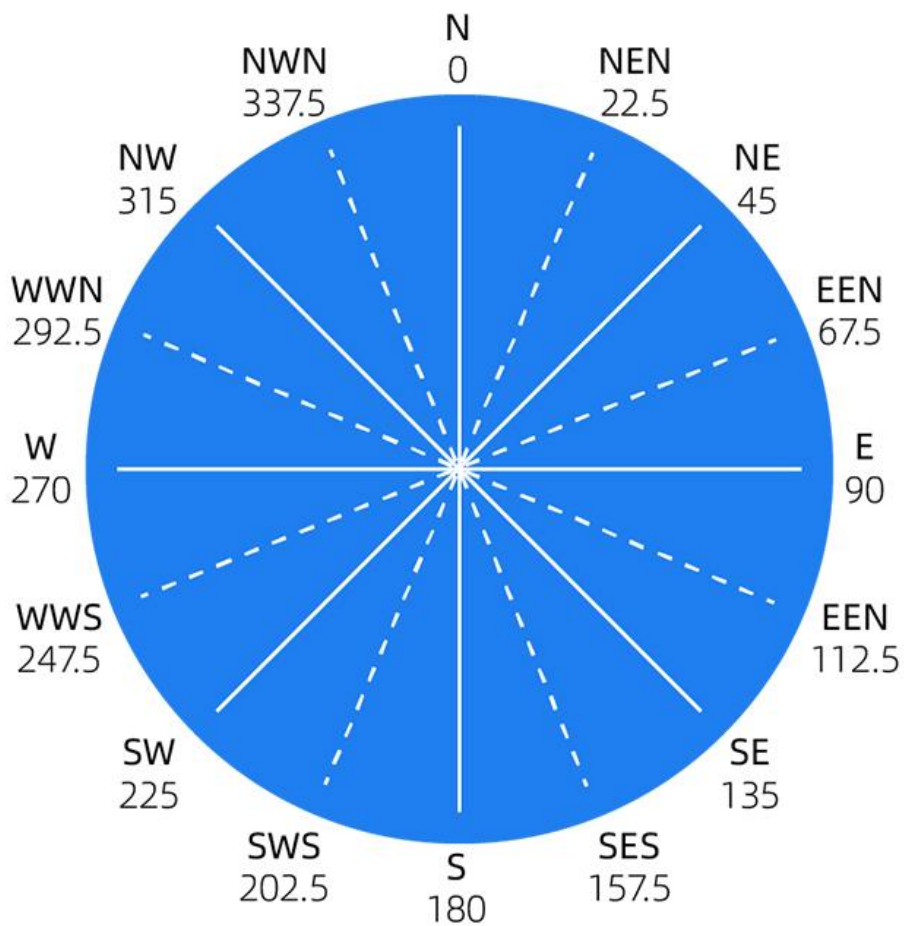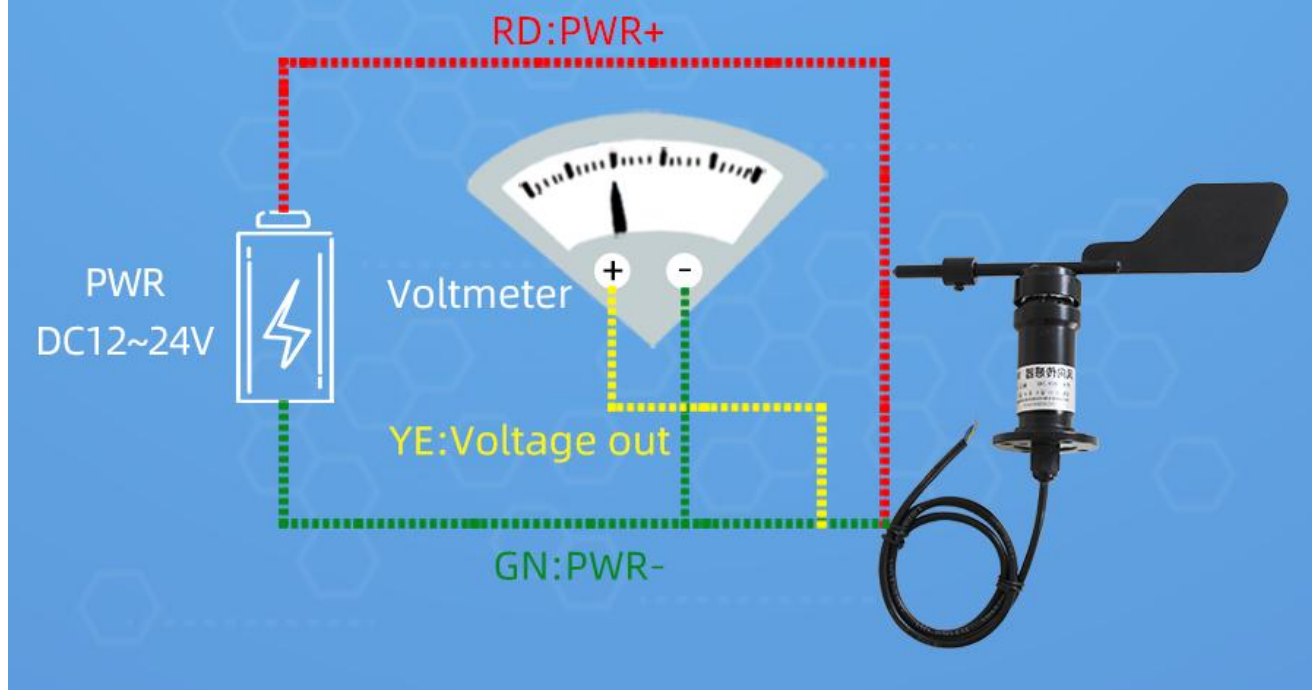

How to use?



Disclaimer

This document provides all information about the product, does not grant any license to intellectual property, does not express or imply, and prohibits any other means of granting any intellectual property rights, such as the statement of sales terms and conditions of this product, other issues. No liability is assumed. Furthermore, our company makes no warranties, express or implied, regarding the sale and use of this product, including the suitability for the specific use of the product, the marketability or the infringement liability for any patent, copyright or other intellectual property rights, etc. Product specifications and product descriptions may be modified at any time without notice.

Contact Us

Company: Shanghai Sonbest Industrial Co., Ltd

Address: Building 8, No. 215 North east road, Baoshan District, Shanghai, China

Web: <http://www.sonbest.com>

Web: <http://www.sonbus.com>

SKYPE: soobuu

Email: sale@sonbest.com

Tel: 86-021-51083595 / 66862055 / 66862075 / 66861077