


OWNER MANUAL

APH-260

Palm Gear Case

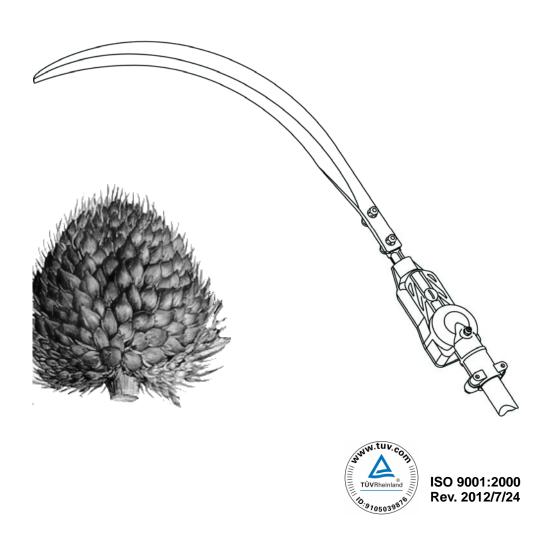




Please read carefully the following instructions before you use pole saw to ensure safety operation!

CONTENTS

- DESCRIPTION OF SYMBOLS
 EXPLOIDED FILE
 PARTNO.

- 4. ASSEMBLE SICKLE5. MAINTENANCE

1. DESCRIPTION OF SYMBOLS			
	Read and follow this operator's manual. Fail to do so could result in serious injury.		
	Wear head, eye and hearing protection during operation.		
	Wear heavy-duty gloves, preferably made of leather.		
	Wear steel-toed safety boots.		
علا	Wear non-slip foot wear		
X	Do not operate closer from electrical hazards.		
15 M	Keep all children, bystanders and helpers 15M (50ft.) away from the unit.		

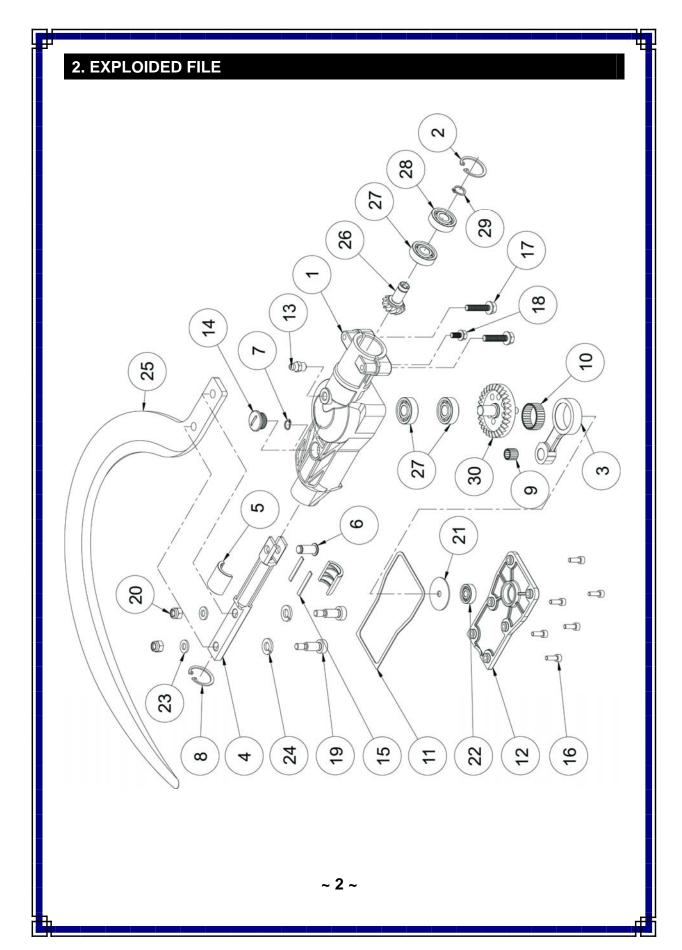


3. PARTS NO.

No.	P/N	Description	Q'ty
1	BPH01-2601	Gear Case	1
2	R26	C-Snap Ring	1
3	BPH08-2601	Con Rod	1
4	BPH09-2601	Driving shaft	1
5	BPH14-2601	Guiding sleeve	2
6	BPH11-2601	Lock Pin 8X16	1
7	R-S8	C-Snap Ring	1
8	S25	C-Snap Ring	1
9	Z81110	Needle Cage Bearing	1
10	Z222610	Needle Cage Bearing	1
11	BPH20-2601	Gasket	1
12	BPH17-2601	Head Cover	1
13	XOC-114A	Grease Nipple	1
14	BPH19-M16-B	Oil Screw	1
15	BPH27-3041	Oil Sealer	2
16	XAA412	Socket Bolt M4X12	6
17	XGW628SPWS	Hexagon Bolt M6X28	2
18	XGW512SPWS	Hexagon Bolt M5X12	1
19	XPH-816	Cap Bolt	2
20	XNW6	Nylon Lock Hex Nut	2
21	BPH03-2601	Spacer Washer M5	1
22	Z626Z	Ball Bearing	1
23	XWW6	Flat Washer	2
24	XSW8	Spring washer	2
25	BPH26-2601	Sickle	1
26	BPH02-2601	Bevel Pinion	1
27	6000	Ball Bearing	3
28	Z6000	Ball Bearing	1
29	R-S10	C-Snap Ring	1
30	TPH71-2601	Cam Bevel Gear Comp.	1


4. ASSEMBLE SICKLE

Align 2 cap bolts, 2 spring washers, 2 flat washers & 2 nylon lock hex nuts as drawing and fasten them firmly.

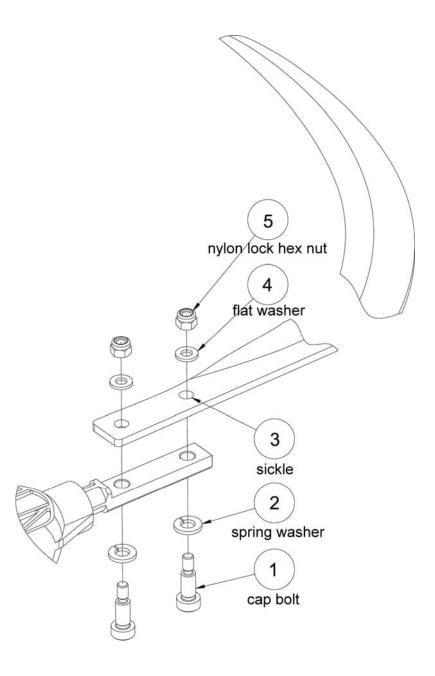


5. MAINTENANCE

- Fill palm gear case with grease in every 25 hours operation.
 Attach grease gun to grease nipple and pump the grease into palm gear case and always use #2 lithium heat-resistant grease.
- 3. Open the oil screw to make sure grease is filled up whole palm gear case.

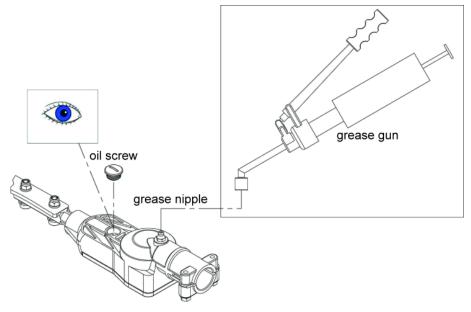

Caution:

- 1. Make sure to fasten all screws
- 2. Need to check all screws are firmly fastened every time before usage.

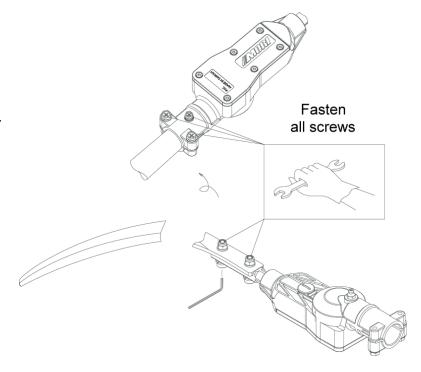

MAINTENANCE RECORD					
~ 6 ~					

F