

# ACE RC®



## *TS4* **Sky Master**

2.4 GHz DIGITAL PROPORTIONAL 4-CH RADIO CONTROL SYSTEM

2.4 GHz 數位式 4 動 無線展頻遙控系統

### Instruction Manual 操作說明書



## Introduction

Congratulations on your purchase of the SkyMaster TS4 advanced 4 Channel 2.4GHz spread spectrum radio control system.

This system was specifically-designed with the latest wireless and Thunder Tiger advanced-programming technology to meet R/C model requirements. With spread spectrum and smart frequency-hopping system, the SkyMaster TS4 radio system delivers precision & reliability control without any interference risks.

## System Contents

- 1) SkyMaster TS4 Transmitter x 1
- 2) TRS601DD 6CH Receiver x 1 or TRS401SS 4CH Receiver x 1
- 3) Instruction Manual x 1
- 4) Switch Hardness I x 1
- 5) Receiver Battery Holder x 1

## Features

### ■ 2.4GHz Frequency hopping spread spectrum wireless system

Built with advanced frequency hopping program on the spread spectrum base to deliver system safety and reliability without interference risks.

### ■ Security ID binding link

A binding feature is included with the SkyMaster 2.4 GHz spread spectrum system ensuring transmitter and receiver only recognize each other to prevent interferences from other controllers.

### ■ Range checking function

A range checking button on the transmitter reduces transmitter signal for pre-flight range check. It is recommended to perform range check before every flight.

### ■ Servo Reversing Switch

All 4 channels can be reversed. The switch is located on the top panel lower position to make easy adjustments.

### ■ Built-In Mixing Function for V-Tail & ELEVEN


2 additional mixing functions- V-Tail and Elevon can be selected to fit your model.

## Specifications

Transmitter	SkyMaster TS4
Configuration	Dual Sticks
Encoder	4CH
Frequency(GHz)	2.4GHz
Modulation	GFSK
Current Drain	130mA@9.6V
Frequency Band Width	2402~2479MHz
Transmission System	FHSS
Band No.	78CH
ID No.	13bit
Radio Speed	16Kbps
Simulator Port	Mini USB
Antenna Type	1/4λDipole Sleeve
Antenna Peak Gain	2dBi Typical
Power Requirement	9.6V/8 cell AA Battery
Servo Reverse	CH1~CH4
Mixing	V-Tail & Elevon
Dimension (w/o Antenna)	180x180x70mm/7.08x7.08x2.76in
Weight (g/oz)	435g/15.37oz

Receiver	TRS601DD	TRS401SS
Item No.	AQ2257	AQ2280
Frequency(GHz)	2.4GHz	2.4GHz
Channel	6CH	4CH
BEC	No	No
Type	PPM	PPM
Antenna Type	Dual Antenna & Diversity	Single Antenna
Battery Power	4.8~6V	4.8~6V
Dimension(mm)	29.2 x 44.9 x 14.1	35.6 x 18.3 x 14.2
Weight(g/oz)	10.5g / 0.37oz	6.5g / 0.23oz

## Transmitter Controls

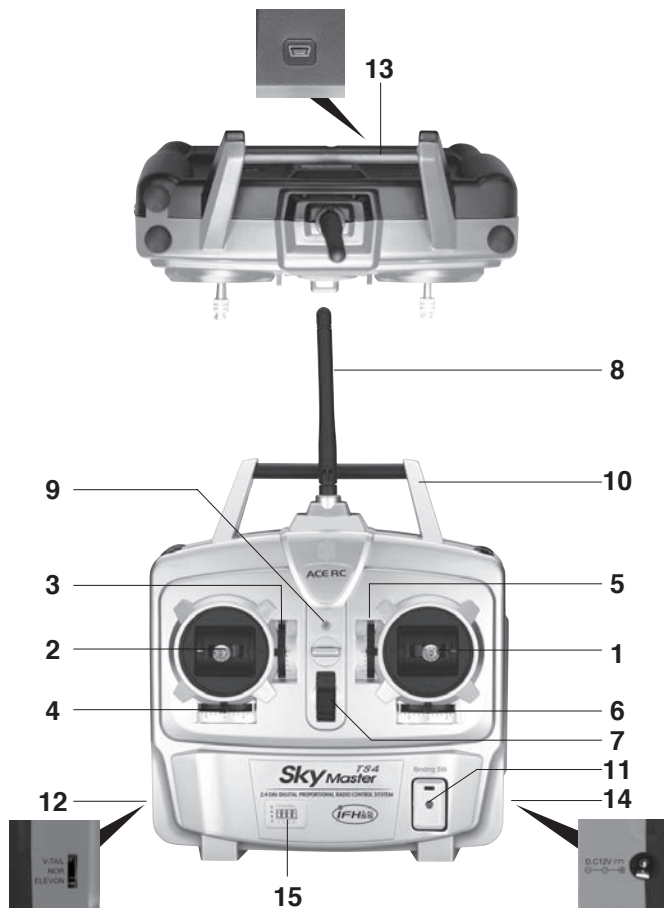

1. **Right Stick:** Throttle/Aileron control for Mode1 type. Elevator/Aileron control for Mode 2 type.
2. **Left Stick:** Elevator/Rudder control for Mode1 type. Throttle/Rudder control for Mode 2 type.
- 3~6. **Channel Trim TAB:** Trim tabs to trim the control to neutral position for corresponding servos / channel.
7. **Power Switch:** Turn the transmitter on or off.
8. **Antenna:** Adjust the antenna to proper direction before flying. Please refer page 9 "Additional Note for 2.4GHz Radio System".
9. **Voltage Indicator:** LED light indicates transmitter battery condition. When blinking, the battery should be replaced / charged.
10. **Handle:** For carrying the transmitter.
11. **Binding Switch:** Performs binding process. Also used to perform range checking.
12. **Mixing Function Switch:** Default setting is on middle "NOR" position. Re-set to access the V-Tail or ELEVON mixing control functions.
13. **Simulator mini USB Connector Port:** Designed for by-wire signal transmission and communication between transmitter and computer.
14. **Charging Jack:** To recharge the transmitter battery. For rechargeable Nicd and NiHM battery pack only.

### NOTE

Set the ON/OFF switch on "OFF" position before charging. The charger plug must be correct type ("+" inside and "-" outside, type TAMIYA N-3U or equivalent). Using the wrong type may explode, causing personal injuries and damages.

15. **Servo reverse:** The 4 switches reverses the direction of the Ch1~Ch4 servos.

## Installation

### Transmitter batteries replacement/installation:

- 1) Slide the battery cover in the indicated direction to remove the cover.
- 2) Install 8pcs alkaline or rechargeable "AA" size cells into the battery holder connected to the transmitter.
- 3) Slide on the battery cover and ensure it is locked properly.
- 4) Turn the power on to check. If the Power Indicator LED fails to light, check the batteries for insufficient contact or incorrect battery polarity.



### NOTE


- a) Use only same brand, fresh, alkaline cells.
- b) Ensure all contacts in the battery holder are clean by using a pencil eraser to gently remove any corrosion or dirt that may accumulate. It is recommended to do this each time you install fresh cells into your transmitter.
- c) If using rechargeable 9.6V battery pack, remove the battery holder by pulling out the connector from the transmitter. Then plug-in the battery-pack connector to the transmitter.
- d) When rechargeable batteries are installed in the transmitter, these can be charged through the external charging jack located on the transmitter.

### CAUTION

- a) Do not attempt to charge alkaline batteries, they may explode!!
- b) When charging rechargeable batteries, turn off the power switch before charging. The charger plug must be of the correct type ("+" inside and "-" outside, type TAMIYA N-3U or equivalent). Incorrect charger plug type may provoke an explosion, causing personal injuries and damages.
- c) Always ensure batteries are loaded in the correct polarity. If the batteries are loaded incorrectly, the transmitter may be damaged.
- d) When the transmitter is not used for any short / long period of time, always remove the batteries from the transmitter.

### HELPFUL HINT

You may also use the NiCd or NiHM rechargeable cells. They can be charged through the charge jack located on the side of the transmitter. The ACE 2970/2971/2972 Radio battery conversion kits are recommended.

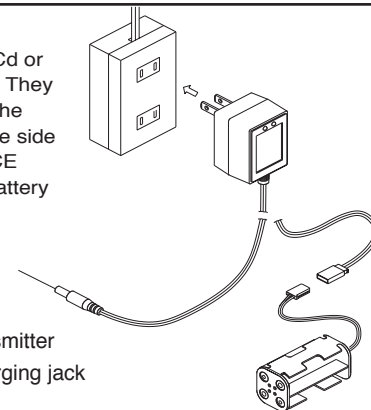

### CAUTION

When the transmitter is not used for any short or long period, always remove the batteries.


## CAUTION

Ensure the contacts in the battery holder stay clean by using a pencil eraser to gently remove any corrosion or dirt that may accumulate. It is recommended to do this each time you install fresh cells into your battery holder.

## Receiver battery replacement/installation


Insert 4 fresh AA cells into the receiver battery holder. Ensure the batteries are loaded in the correct polarity order. Maintain the battery contacts in the same way as described in previous section.

Insert the switch harness plug into the receiver socket marked "BATT"

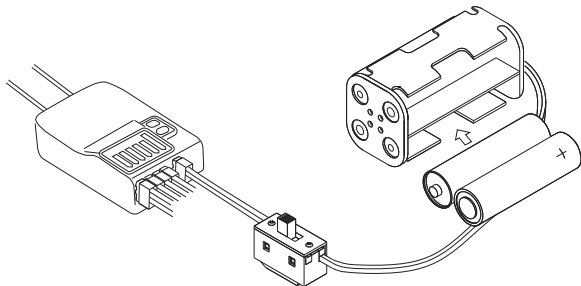

## Radio installation

Before installing your radio into your model, connect the receiver, servos, and switch harness/battery pack as shown. In addition to checking for proper operation, this "bench test" helps you become familiar with the operation of your radio. Begin by turning on the transmitter, and then turn on the receiver switch. Make sure that all servos and trims levers are operating, and take a few moments to "play" with your system. After completion of your bench testing, turn off the receiver, followed by the transmitter.

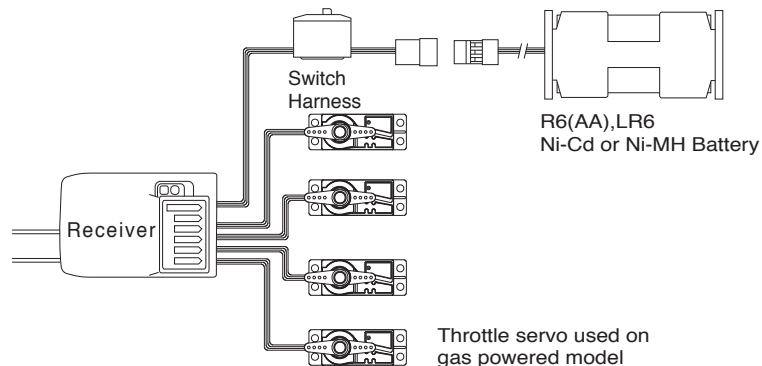

## Servos

Mount the servos as recommended in your model's instruction manual.

## Receiver installation

Note the location of the receiver in your model's instruction manual or building plans.


## NOTE

We assume that all areas where large currents are flowing are generating noise, and noise is a type of radio wave. It is important to reduce the possibility of interference by locating a proper position for receiver and antenna.

## HELPFUL HINT

Always install the receiver as far as possible from the motor, ESC, NiCd/NiMH batteries, motor wire or other noise sources. Especially, do not route the motor wire next to the receiver or receiver antenna.

Noise suppression capacitors should be installed on almost all motors. If the proper capacitors are not installed, high frequency noise will reduce range and cause loss of control along with various other problems. Make sure your motor is equipped with noise suppression diodes or capacitors.

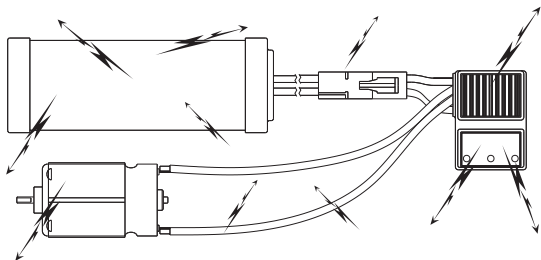

## NOTE

FET servo wire (7.2V) can also generate noise, position them as far away as possible from the receiver and the antenna.

Space available in your model will determine how much padding can be placed around the receiver. Choose a good quality foam rubber, such as those available from Du-Bro, Carl Goldberg, Sig, and others. R/C foam is made from natural rubber, which eliminates vibration far better than synthetic foam, (such as the kind used for packing consumer goods).

## CAUTION


The receiver contains precision electronic parts. These parts are vulnerable to vibration and shock.

## NOTE

When wrapping the receiver, keep in mind that you are trying to cushion a delicate piece of electronic equipment, so "wrap" the foam, don't "stretch" it around the receiver.

## HELPFUL HINT

A simple way to isolate the receiver from vibration is by attaching it to the chassis or mounting plate with thick double-sided tape.

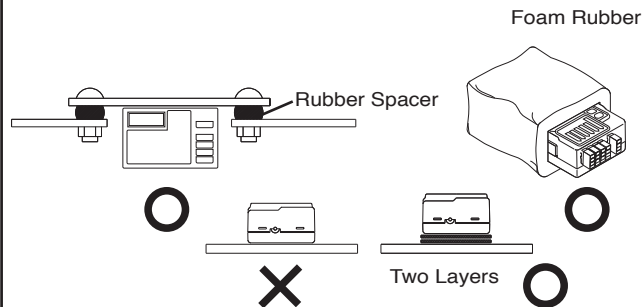

Many modelers prefer to install their receiver into the model at this point, with no further protection. Another sizeable group of modelers prefer to go a step further, and place the foam-wrapped receiver into a plastic bag, secured with a rubber band around the receiver case as well as the servo and battery wires.

The advantage of the plastic wrap is the protection against fuel or oil in the event of a major crash. The disadvantage of the plastic, especially if you run the model in very hot and humid conditions or wet days, is that moisture can accumulate inside the receiver.

## CAUTION

Any contact with moisture i.e. water or condensation may cause malfunction and loss of control.

## HELPFUL HINT

If you choose to wrap your receiver in both foam and a plastic bag, it is recommended to periodically remove the receiver from your model, remove the foam and bag to let the receiver "air out". This maintenance procedure will let you determine if any moisture is accumulating in the protective wrap. Small holes cut into the bag will allow airflow into the receiver, and eliminate the need for the periodic checks, although you will lose a certain amount of protection against fuel or oil with this step.

## Battery installation

Always wrap the battery pack in foam, and mount it in the location specified in your models instructions. It is also recommended to wrap the battery pack in a plastic bag, as its location (close to engine and fuel tank) makes fuel proofing vital.

## Switch installation

Pick the most convenient location for your on/off switch as required by your particular model. Always mount the switch on the opposite side of the engine exhaust. After mounting the switch, carefully bundle any excess servo wires with cable ties, keeping them away from any moving item (pushrod, servo arm, etc.) that could catch and cut the wires. Any empty space in your fuselage radio compartment can be filled with excess foam.


## Functions

The SkyMaster TS4 transmitter was specifically-designed to operate air models. Basic functions for this transmitter are listed below.

### 1. Power On

#### a) Turn On/Off

After installing the transmitter batteries, turn on the transmitter power by sliding up the switch located on the front middle position of the transmitter. The LED light turns "RED". To turn off the power, slide down the switch, the LED indicator light will turn off.

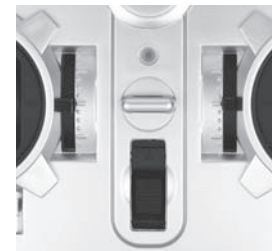

#### b) Low Battery Power Warning

If the transmitter battery power is too low, a short "Bi-Bi-Bi..." warning tone will be emitted and the LED indicator will flash. It's very dangerous to fly the model with low battery transmitter. Please change the batteries immediately.

### 2. Stick Controls

The left and right sticks are designed to drive the 4 channels on the receiver. Both Mode 1 and Mode 2 are available on the SkyMaster TS4 transmitter. Control functions are indicated below:

Mode	Left Stick		Right Stick	
	Up / Down	Left / Right	Up / Down	Left / Right
Mode 1	Elevator	Rudder	Throttle	Aileron
Mode 2	Throttle	Rudder	Elevator	Aileron

### 3. Binding process

A binding feature is included in the SkyMaster TS4 2.4 GHz spread spectrum system to ensure the transmitter and receiver bind properly and prevent interference from other controllers.

To bind Tx/Rx, please proceed as per the following:

- a) Press and hold "Binding SW" button located on the right lower side of the transmitter.
- b) Simultaneously, turn on the power.
- c) Release the "Binding SW" button. The binding LED will blink rapidly, indicating the transmitter is binding.
- d) Press and hold the BINDING push button on the Receiver, plug the battery power connector on the receiver to turn power on. Then release the BINDING push button.
- e) Successful binding is confirmed by the binding LED changing from a rapid blink to a slow flash on the transmitter. The LED will turn green on the receiver. Upon confirmation, turn off power of the receiver and transmitter and launch normal start-up procedures.



#### NOTE

Binding process may take 3~10 seconds to execute. If binding fails, the LED light on the receiver will turn red. Please turn off power and repeat the above steps from a) ~ e).

### 4. Range-Check

A built-in range-check function on the transmitter reduces signal strength for pre-flight range-check. When this function is activated, signal strength is weak. Use the weak signal strength for pre-flight range-check to confirm operation of wireless radio control system is normal. It is recommended to perform a complete range-check before every flight.

"Range-Checking" procedure:

- a) Turn both transmitter and model power on and ensure the system is functioning properly.
- b) Take the transmitter to a distance of about 20~30m from the model.
- c) Press and hold the "Binding SW" button. Signal strength is now weak. The transmitter buzzer will signal with a short "Bi-Bi-Bi" warning tone. Please do not release "Binding SW" at this stage.
- d) Operate both left and right sticks to drive movement on the servos. Visually confirm that all movements are accurate and signal is interference-free.
- e) Release "Binding SW" button. Signal reverses back to full strength and warning tone stops. And the warning tone also will stop in the same time.
- f) Model is ready to fly.

#### NOTE

Never push the "Binding SW" button during flight. Flying under weak signal strength will result in signal loss and model crash.




## 5. FAILSAFE Function Setting

ACE RC TS4 system features a built-in Pre-setting Failsafe function to automatically set a servo command if the receiver loses the signal from the transmitter due to interference. For safety, we strongly recommend to check the FAILSAFE function before flying.

### Resetting FAILSAFE


FAILSAFE settings can be reset by pressing the Binding Switch on your receiver (power on). First, ensure your radio system is bound properly and proceed as per the following:

- Power on your TS4 transmitter & Receiver. Move and hold control sticks to preferred position should a failsafe situation occur (select any channels from CH1~CH4). Factory pre-settings are recommended, please refer to "Note".

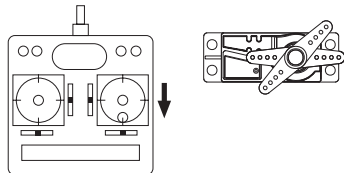

- Press & hold the binding switch on the receiver for 4 seconds.
- When the LED on the receiver starts blinking, release the binding switch then the LED turns to red for 2~4 seconds then turn back to green, indicating the function is successfully set.

### Press & hold Binding switch...

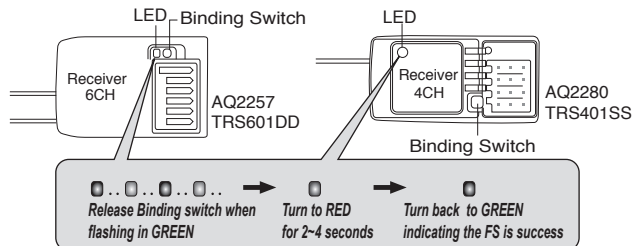

- Test by turning off your transmitter and observing the servo failsafe position activates, next turn off your receiver.



Test by turning off your transmitter and watching the servo failsafe position activate.

- Switch on the transmitter & receiver again, and ensure that all servos follow the movements of the sticks before you fly.
- If fails or need to reset the Failsafe then repeat step a) ~ e).

### NOTE

#### Pre-settings for the FAILSAFE Function are:

- Throttle at idle position (Throttle stick is at lowest)
- The other channels are at neutral position.

### CAUTION

- Always check the FAILSAFE function after each binding.
- Pre-setting will be executed unless you reset the FAILSAFE.
- FAILSAFE function ALWAYS memorizes the latest settings if you do not manually reset the FAILSAFE function after a new system binding.

## 6. Flying a RC Flight-Simulator

Use a suitable interface device to connect the mini USB port (located on the back of the transmitter) to a personal computer and directly on your simulator.

## FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer.

### FCC Caution:

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

### FCC Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.


The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm

from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

## Using Caution at the Flying Field

- Always perform a pre-flight range-check to ensure conditions are interference-free.
- Do not operate the model or use the radio in rain or lightning.
- Do not operate the model or use the radio if you have been drinking alcohol or under the influence of any other substance that could affect your skills and judgment.
- Always check battery charge before flight.
- Keep out of reach of children.
- Do not store the radio in temperatures below -10 °C (14°F) or above 40°C (104°F) or in a humid, dusty, or high vibration environment.
- Keep the radio away from direct sunlight.
- To prevent corrosion, remove batteries before storing the radio for a long period.

## Additional Note for 2.4GHz Radio System

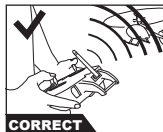

For best operating range, always ensure the largest section of your transmitter antenna faces the model.



Warning! Operating range may be significantly reduced with the transmitter antenna pointing directly at the model!


## Accessories




AQ2257 2.4GHZ 6CH RECEIVER, TRS601DD  
AQ2280 2.4GHZ 4CH RECEIVER, TRS401SS




AC2262  
2.4G TX ANTENNA, TS6

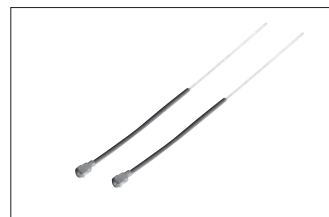

AC2266  
2.4G RX ANTENNA, TRS601DD

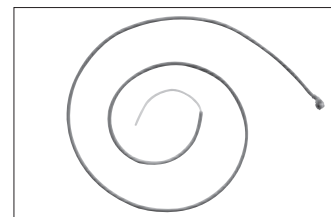


AC6537  
2.4G RX ANTENNA, TRS401SS

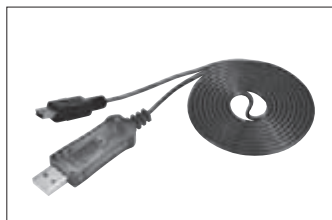


2707-I  
FSU FLYING SIMULATOR USB  
INTERFACE




1389-R/W  
NECK STRAP RED/WHITE

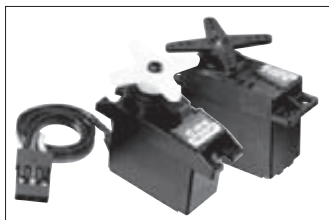


8114 ACE RC SERVO, S1903  
8117 ACE RC MICRO SERVO, C1016

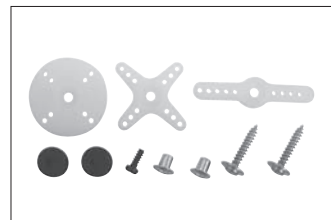


AQ1496 SERVO ACCESSORY  
PACKAGED FOR C1016

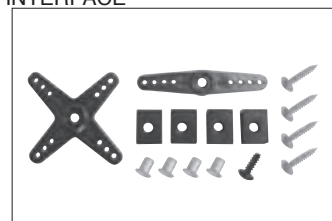

AQ1499 SERVO ACCESSORY  
PACKAGED FOR S1903

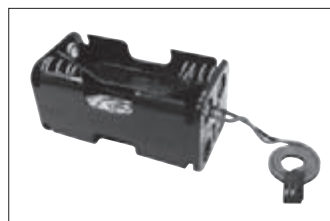

AG2050 AA BATTERY CASE

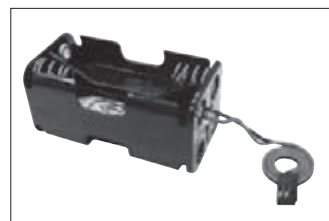

AQ0089 AAA BATTERY CASE



AT2139 TX/Rx CHARGER, 110V(US)  
AT2139-J TX/Rx CHARGER, 100V(JP)  
AT2140 TX/Rx CHARGER, 230V/2P(EU)  
AT2141 TX/Rx CHARGER, 230V/3P(UK)



2927 Ni-MH BATTERY PACK/FLAT,  
4.8V/1200mAh 2/3A



2946-I Ni-MH BATTERY PACK/FLAT,  
9.6V/1100mAh AA



 
2969-J/S Ni-MH BATTERY PACK/  
SQUARE, 4.8V/1100mAh AA



2939 Ni-MH BATTERY PACK/  
SQUARE, 4.8V/1200mAh 2/3A



AG2051 SWITCH HARDNESS W/O CHARGING CORD



AG2078 SWITCH HARDNESS W/O CHARGING CORD



2970 Ni-MH BATTERY KIT(12pcs),w/110V CHARGER

2971 Ni-MH BATTERY KIT(12pcs),w/230V/2P CHARGER

2972 Ni-MH BATTERY KIT(12pcs),w/230V/3P CHARGER

## Service

Thank you for purchasing the ACE RC SkyMaster TS4 Radio. This radio was produced by Thunder Tiger Corp.

Thunder Tiger products are sold worldwide through authorized distributors supported directly by Thunder Tiger. To receive the latest product information and enjoy full technical support, please contact your nearest hobby shop or Thunder Tiger authorized distributor.

## Status Indication Chart

The following chart indicates LED and buzzer status. Do not operate your model if you suspect your radio is not working properly. If you encounter a signal not indicated on this chart and can not solve the problems by yourself, please contact your local Thunder Tiger authorized distributor for service.

Status	Transmitter			Receiver
	Power	Buzzer	Binding LED	LED indication
Initializing (when power on)	Red/ Solid	Bi	Red/ 1 second	Red/ 1 second
Normal Operation	Red/ Solid	-	Green/ Flashing	Green/ Flashing
Binding	Red/ Solid	-	Green/ Rapid Blink	Red/Green Alternate Flashing
Binding Success	Red/ Solid	-	Green/ Flashing	Green/Solid
Binding Failed	Red/ Solid	-	Green/ Rapid Blink	Red/Green Alternate Flashing
RF Failed	Red/ Solid	-	Red	Red/ Solid
Assess to the FS setting	Red/ Solid	-	Green/ Flashing	Green/ Flashing
FS Set Processing	Red/ Solid	-	Green/ Flashing	Red/ Solid
FS Success	Red/ Solid	-	Green/ Flashing	Green/Solid
Range Check	Red/ Solid	Bi-Bi-Bi...	Green/ Flashing	Green/Solid
Low Battery	Red/ Flashing	Bi-Bi-Bi...	Green/ Flashing	Green/Solid

## 簡介

首先感謝您購買 SkyMaster TS4 4 動 2.4GHz 無線展頻遙控系統。此發射機採用最新的無線傳輸與雷虎先進的程式控制技術，是專為遙控模型需求所特殊設計。系統結合發射與接收可以互動溝通模式，跳動式頻道傳輸，使整體無線系統的傳輸控制展現精準穩定的特性也無須擔心頻率干擾的問題。

## 內容物

- |                          |               |
|--------------------------|---------------|
| 1) SKYMASTER TS4 發射機 X 1 | 3) 說明書 X 1    |
| 2) TRS601DD 6動接收機 X1或    | 4) 開關組 X 1    |
| TRS401SS 4動接收機 X1        | 5) 接收機電池盒 X 1 |

## 特點敘述

### ■ 2.4GHz 無線跳躍展頻(FHSS)遙控系統

採用先進的無線跳躍展頻(FHSS)技術，使整個無線控制系統的操作更加安全可靠並不會有被干擾的危險。

### ■ 安全認證校頻連接

在啟動無線操控之前，須先進行發射與接收之間特殊的安全對頻配對認證程序，然後發射與接收模組便會認可所連接成功的認證配對號碼，所以即使有其他較弱的干擾源產生時，亦不會對已認證配對的發射接收系統產生干擾。

### ■ 低發射功率檢測功能

發射機電源開關開啓後，當持續按下右下角對頻配對按鈕時，發射機的發射功率將轉換成一內定的小發射功率值。利用此小發射功率，可進行近距離發射接收模組的溝通確認，看是否正常，以確保在長距離操控時，正常功率亦可操作正常。

### ■ 伺服機正逆轉開關

4動伺服機皆能切換正逆轉功能。位在發射機正下方位置的開關能讓您更快速容易地進行調整。

### ■ 內建V型尾翼及副翼混控功能


內建兩種混控功能-可選用V型尾翼及三角型副翼混控。

## 基本規格表

發射機	SkyMaster TS4
機型	雙桿板控
動作數	4動
使用頻率 (GHz)	2.4GHz
模組	GFSK(PPM)
輸出電流	130mA@9.6V
頻寬	2402~2479MHz
傳輸系統型式	FHSS(跳躍展頻)
頻道數	78 個
ID(認證號)數	13 bit
傳輸數度	16Kbps
訊號傳輸接頭	Mini USB
天線形式	1/4λ同軸偶極天線
天線最高增益	典型2dBi
電源	9.6V/8 cell AA 電池
逆轉功能	1~4動
混控功能	V型尾翼及三角型副翼
尺寸 (不含天線)	180x180x70mm/7.08x7.08x2.76in
重量 (g/oz)	435g/15.37oz

接收機	TRS601DD	TRS401SS
料號	AQ2257	AQ2280
頻率(GHz)	2.4 GHz	2.4GHz
頻道數	6動	4動
BEC	無	無
型式	PPM	PPM
天線型式	雙天線及雙接收	單天線
電源	4.8~6V	4.8~6V
尺寸	29.2x44.9x14.1mm	35.6x18.3x14.2
重量	10.5g / 0.37oz	6.5g / 0.23oz

## 發射機各部位功能簡介

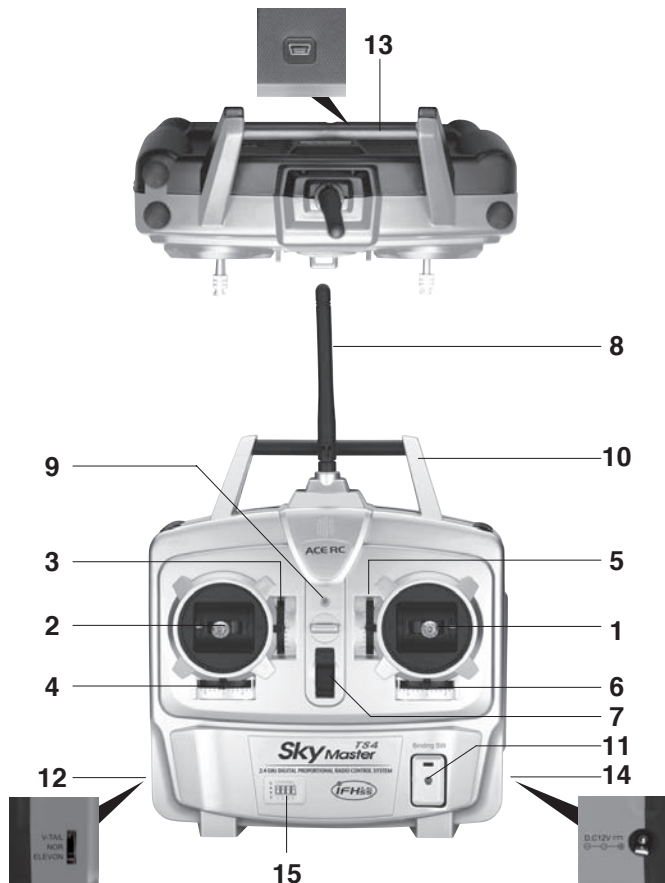

- 右邊搖桿:**在Mode1中是控制油門與副翼的操控，在Mode2中是控制升降舵與副翼的操控。
- 左邊搖桿:**在Mode1中是控制升降舵/方向舵的操控，在Mode2中是控制油門/方向舵的操控。
- 微調開關:**此微調開關是進行第一動到第四動所控制伺服機中立點位置的細部調整。
- 電源按鍵開關:**進行發射機的總電源開啓與關閉。
- 天線:**飛行前請參閱第19頁“天線注意事項”，將天線調至適當方向。
- 電壓顯示LED燈:**此LED燈主要是顯示目前發射機電源狀態，正常狀態下是顯示紅燈，如LED燈開始閃爍，且發射機發出“嗶-嗶-嗶..”的警告聲則表示發射機電池電壓太低，需立即更換電池。
- 提把:**提供你可輕易的提取發射機。
- 校頻配對開關:**此開關是執行發射接收間的校頻配對功能。
- 混控模式控制切換開關:**設定值為中點位置“正常模式”，可撥接至V型尾翼或升降舵副翼混控功能。
- 模擬USB連接插槽:**此插槽是設計給發射機對外連結其他裝置(如個人電腦)進行訊號的傳輸溝通用。
- 充電座:**利用此開關可以直接進行發射機內可充電電池(如鎳氫、鎳鎘..等)的充電。

### 注意:

進行充電時，需將發射機電源開關關閉，充電器的選用，必須選擇正確連接頭型式(“+”正極在內部，“-”負極在外部)。選擇錯誤的充電器型式會有爆炸而導致人員受傷的危險。

- 伺服機逆轉開關:**此開關可個別切換第1~4動伺服機正、逆轉方向。

## 安裝

### 發射機電池安裝與更換

- 1) 依圖示方向取下發射機背面電池蓋。
- 2) 安裝8個AA規格的鹼性或可充電式鎳氫電池到電池座中並將電池座連接頭插入發射機電池槽中的左上方插孔。
- 3) 將電池蓋蓋上並確定安裝妥當。
- 4) 將電源開關打開，假如紅色LED指示燈並未亮起，請重新確定電池極性方安裝方向是否正確。



### 注意:


- a) 請使用全新且同品牌的鹼性電池。
- b) 安裝前為確保電池固定座的導電極片是導電良好的，請用小毛刷清潔極片可能導致導電不良的髒物或鏽蝕。建議每一次更換電池時，皆進行清潔程序。
- c) 假如使用9.6V的可充電電池包，則拿掉電池固定座，然後將電池包上的連接頭直接插入發射機電池槽左上方的插孔。
- d) 如使用可充電式電池，則充電時可直接利用發射機右側邊下方的充電孔進行充電。

### 警告:

- a) 安裝鹼性電池時，絕對不可以進行充電的動作，否則可能造成爆炸的危險。
- b) 如使用可充電電池並進行充電時，請將電源開關關閉，並使用正確的充電插頭(插頭內部是正極，外部是負極)如使用正負極型式不對的插頭進行充電，可能造成爆炸導致人員受傷。
- c) 安裝時需確保電池的極性位置使正確的，不正確的安裝可能導致發射機的損壞。
- d) 假如在長時間不使用發射機的狀態下，請將電池自發射機內移除。

### 小提示


亦可使用充電式鎳鎘或鎳氫電池。  
可直接將充電器圓型插頭插入發射機側邊之充電插孔進行充電。建議您採用ACE RC出品專用遙控電池套件，料號：2970/2971/2972。

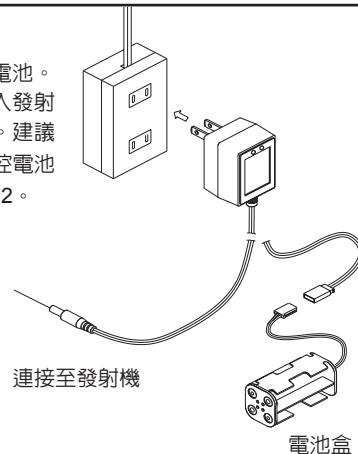




## 1. 接收機電池更換/安裝

將4顆全新的AA(3號)電池放入接收機電池盒中，並確認電池兩極皆已正確與銅片接觸。將開關上插頭插入接收機上“BATT”插座中。

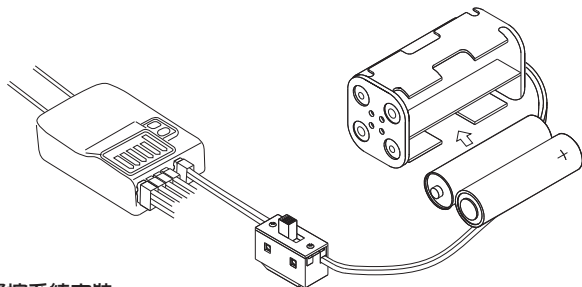

## 2. 遙控系統安裝

進行遙控系統安裝之前，請先依照圖示將接收機、伺服機及開關組/電池進行連接，並試一下各伺服機是否皆正確作動。將系統安裝至模型機體後，接著打開發射機電源，再打開接收機電源。可多試著操控一下系統，以確認一下所有伺服機及連桿是否皆能作動。確認完畢，先關閉接收機電源，再關閉發射機電源。

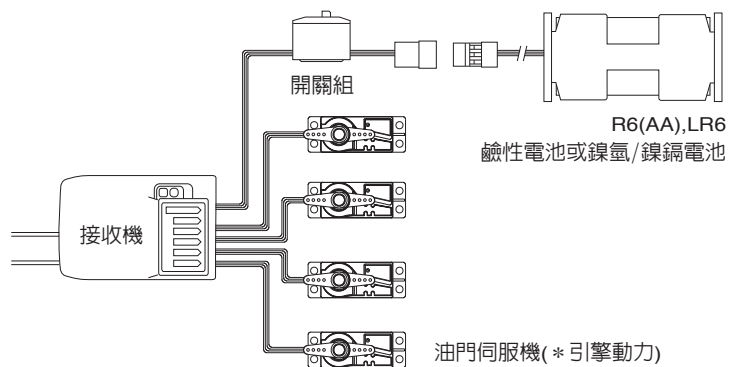

### 警告：

請務必遵守，使用時、最先開啓發射機電源，使用後、最後關閉發射機電源的程序。務必牢記並提醒自己，接收機必需在有發射機訊號的情況下才能開啓。若先關閉發射機可能會讓接收機失去訊號而使伺服機錯亂過度作動，造成伺服機齒輪受損。

### 伺服機

請參考您的遙控模型安裝說明書來安裝伺服機。

### 接收機安裝

請參考您的遙控模型說明書來選擇接收機安裝位置。


### 注意：

有大量電流通過的介質會對遙控訊號造成干擾。請務必選擇干擾最小的位置來放置接收機及天線。

### 小提示

請將接收機安裝於遠離馬達、速控器、電池及馬達連接線或其他會產生干擾訊號的位置，特別注意勿將馬達連接線繞過接收機或天線。

一般而言，馬達應該都有加裝干擾抑制電容器，若未加裝則可能會發出高頻干擾使接收距離縮短而造成失控或其他危險。請確認您所使用的馬達是否已加裝干擾抑制電容。

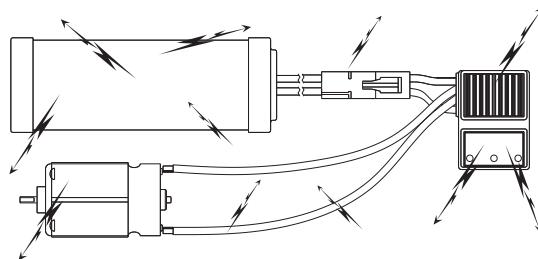



**注意：**

FET伺服器線材(7.2V)也會產生干擾，請儘可能裝置在遠離接收機及天線的位置。

模型機體內實際的空間會影響採取何種防震措施；若接收機放置於密度品質優良的橡膠套中，將獲得較佳的防震、防潮等保護功能。

**警告：**


接收機內有易受震動而受損的精密電子元件。

**注意：**

在對接收機進行防震工程時請特別注意，接收機是敏感的電子零件，請勿將泡棉過度擠壓塞在接收機周圍。

**小提示：**

在接收機底座或安裝孔位上加裝雙面泡棉膠就可以有效地防震。

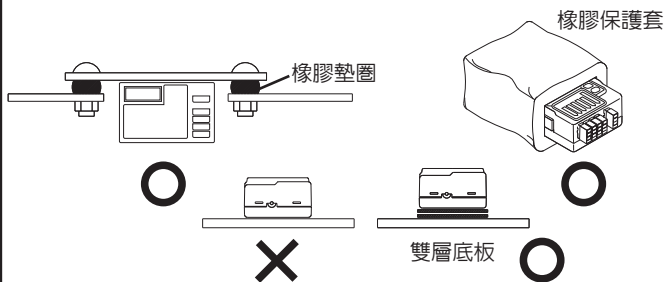

很多模型玩家對接收機進行的保護工程都僅止於此；我們建議您可進一步再將套好橡膠保護套的接收機組裝入另一個密封袋中，好處是當模型發生大力碰撞或墜毀時，也能防止燃油或其他液體滲入；此外，當您在極端環境中（嚴熱、潮溼或陰雨氣候）操作模型時，也可保護您的接收機防止水氣滲入。

**注意：**任何液體（如水份或凝結水氣）都可能造成機能失常或失控。

**小提示：**

若接收機同時覆有泡棉及密封袋保護，建議您可每隔一段時間後將整組接收機自模型機體上拆下，並拆除泡棉及密封袋，讓接收機“風乾”，這個保養步驟可以確保溼氣不會堆積在泡棉或密封袋中。或亦可在密封袋上打開一些通風孔，就可以不用每隔一段時間就要進行檢查，當然，如此的話，接收機的安裝位置就更為重要，必需更詳加考慮燃油或其他液體滲入的問題。

**電池安裝**

請將電池組包覆完整並安裝於模型說明書中指定的位置；若安裝位置靠近引擎或油箱，建議可將電池組裝入密封袋中，以防止燃油或其他液體滲入。

**開關組安裝**

請參考模型說明書將開關組安裝在方便使用的位置。請將開關組安裝於引擎消音器的另一側，並將相關線材整束固定整齊，以免脫落線影響伺服機連桿或擺臂作動。模型機體上的若有多餘空間亦可填充防震泡棉。

## 基本功能說明

SkyMaster TS4 是特別為操控航空模型所設計的發射機，基本的操作功能說明於下

### 1. 電源開/關

#### a) 開啓/關閉

當發射機已正確安裝電池後，將黑色電源開關上推，此時發射機會發出一短聲“嗶”的聲響，表示電源已被開啓，且開關上方的紅色LED燈亦會亮起。關閉電源時，直接將黑色開關向下推，此時LED燈熄滅，表示電源已關閉。



#### b) 低電壓警示功能

假設發射機內電池電力不足，則發射機將會發出“嗶-嗶-嗶..”短促的警示聲響，LED燈亦會轉成閃爍狀態。在低電壓狀態下操控模型是非常危險的，所以此時應立即更換電池。

### 2. 搖桿控制

發射機上左右搖桿是執行接收/模型端主要4個控制動作的操控。因操控習性的不同，所以 SkyMaster TS4 發射機會有2種不同規格的出廠設定 Mode1 與 Mode2 。不同型式發射機，搖桿的操控相對於各個動作的控制，說明如下：

型式	左邊搖桿		右邊搖桿	
	上/下	左/右	上/下	左/右
Mode 1	升降舵	方向舵	油門/攻角	副翼
Mode 2	油門/攻角	方向舵	升降舵	副翼

### 3. 安全配對校頻認證

在啓動無線操控之前，須先進行發射與接收之間特殊的安全對頻配對認證程序，然後發射與接收模組便會認可所連接成功的認證配對號碼，所以即使有其他干擾源產生時，亦不會對已認證配對的發射接收系統產生干擾。基本上，附於完成機中的發射機在出廠前，皆已完成此配對校頻的程序，所以不需再執行此步驟，但如新購買或其他因素須重新進行配對校頻，請依照下列步驟執行：



- 先持續按住發射機右下角配對校頻“Binding Switch”開關。
- 將電源開關上推開啓發射機電源。
- 將按住右下角配對校頻(Binding Switch)開關放開，同時你會看見配對校頻“Binding Switch”開關上方的LED綠燈呈現“快速閃爍”狀態，表示發射機正在進行配對校頻的狀態。
- 持續按住接收機上紅色“校頻開關(Binding)”，同時接上電池以打開接收機電源。接著再放開校頻開關，發射機與接收端便會自動進行配對校頻的程序，此時接收機端的LED顯示燈會呈現紅/綠燈交替明滅的閃爍狀態。
- 配對校頻成功後，校頻開關上方的LED燈便會由綠色快速閃爍顯示轉成慢速一閃一閃綠燈顯示的狀態。接收機端上的LED顯示燈亦會顯示成綠燈，然後將接收發射機的電源全部關閉後，在依正確開啓程序重新進行開機。

#### 注意：

一般較頻的時間大約3~10秒，假如配對校頻失敗，則接收機上的LED燈會顯示紅燈，發射機校頻LED仍持續顯示快速閃爍綠燈，請關機並重新執行上述 a) ~e) 的步驟，重新執行此配對校頻的程序。

#### 4. 低發射功率檢測

發射機內部程式設定有此低發射功率檢測的功能，讓使用者在實際飛行前可以先進行短距離的測試。當執行此功能時，發射機的發射功率將被調整設定至一低發射功率的設定值，讓你可以執行短距離低功率的檢測以確保實際飛行時，正常功率在長距離的遙控控制上的安全性。強烈建議在每次飛行前都需執行此檢測的程序。

請依照下列步驟執行此檢測功能

- 依正常開機程序開開發射機與直昇機(接收機)並確定一切正常。
- 將發射機拿離直昇機約20~30公尺的距離。
- 持續按下發射機上配對校頻(Binding Switch)的開關，此時發射功率會被切換至低功率的設定，同時發射機會發出短促“嗶-嗶-嗶-”的警告聲。
- 同時移動發射機上的搖桿來驅動直升機上各相關的拉桿控制，檢測看一切是否移動正常，是否有不正常抖動的現象。
- 將按住配對校頻(Binding Switch)的開關的手指移除，則發射功率將恢復正常同時“嗶-嗶-嗶-...”的警告聲亦會消除。
- 此時便可開始進行正常的飛行操控。

#### 注意：


不可在實際飛行中按下配對校頻 ( Binding Switch ) 開關將發射功率調低，否則低發射功率將導致模型可能失去訊號墜機而造成危險。

#### 5. FAIL- 安全回復功能

ACE RC TS4 系統內建安全回復功能，可設定當接收機因干擾或斷電而失去發射機訊號時，伺服機自動回復至預設位置。安全起見，強烈建議您務必啟用安全回復功能。


#### 設定安全回復功能

- 開啓TS4發射機及接收機電源。撥動欲設定伺服機之對應撥桿至適當位置並固定，此處即為安全回復啟動時，伺服機會自動執行之動作。（可由CH1~4中任選1或多個對應伺服機動作；建議您參照“注意事項”之出廠預設值進行設定）。

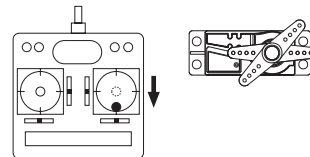

- 按住接收機上對頻鍵4秒，進入FS設定模式。
- 當接收機上綠色LED開始閃爍時，放開對頻鍵，此時LED會轉變為紅色約2~4秒，後轉變為綠色，表示功能已設定完成。

按住接收機上對頻鍵...

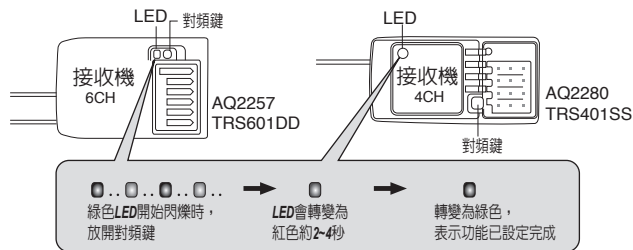

- 將發射機電源關閉測試啟動功能之效果，請觀察伺服機是否依預設之安全回復位置動作。確認完畢請關閉接收機電源。



將發射機電源關閉測試啟動功能之效果，請觀察伺服機是否依預設之安全回復位置動作。

- e) 若作動不正確或需要調整安全回復位置，請重覆上述步驟 a) ~ e)。
- f) 再次依序開啓發射機及接收機，在飛行前請確認所有伺服機作動皆正確對應撥桿動作。

## 注意事項：

### 本產品出廠預設FS功能如下：

- 油門伺服機回復至怠速位置。（油門撥桿於最低點）
- 其他通道皆回復到中立點。

## 警告：

- 執行對頻程序後，請務必確認安全回復功能。
- 若未自行設定安全回復功能，則此功能會被設定在出廠預設值。
- 執行對頻後，若未重新設定安全回復，則會記憶最近一次的設定值。

## 6. 飛行模擬軟體的連接

當欲使用此遙控器於電腦上進行飛行模擬軟體的操作時，首先需選用適當的連接介面裝置，一端連接至電腦，另一端與 SkyMaster TS4 後方的小 USB 插槽連接，那便可以以此發射機操控以安裝於電腦上的模擬飛行軟體。

## 發射機使用注意事項

- 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
- 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用、並改善至無干擾時方得繼續使用。
- 前項合法通信，指依電信法規定作業之無線電信。低功率射頻電機需忍受合法通信或工業、科學及醫療用電波輻射信電機設備之干擾。

## 在飛行場地需特別注意的事項

- 為避免干擾影響無線控制系統，飛行前接需進行短距離低發射功率檢測。
- 在雨天、閃電或不良氣候，不可以使用發射機操控模型。
- 在喝過酒或身體不適而對你的操控技術有影響的情況下，不要操控遙控模型。
- 操作前一定須先進行發射機電力檢測。
- 請放置在小孩不易拿取的位置。
- 發射機不要存放在低於-10°C (14°F) 或高於40°C (104°F) 的環境，或貯存於濕氣過重，灰塵多或震動過大的環境中。
- 避免長期置於陽光直射的位置。
- 為避免電池損壞，長期不使用的狀況下，需將電池從發射機內取下移除。

## 天線注意事項



- 以天線最大面積對正模型，可獲得最佳的遙控距離。



警告！天線頂端直指模型會嚴重縮短遙控距離！

## 選用相關配件



AQ2280  
2.4GHz 4 動接收機, TRS401SS




AQ2257  
2.4GHz 6 動接收機, TRS601DD



AC2262 2.4G 發射機天線



AC2266  
TRS601DD 2.4G 接收機天線

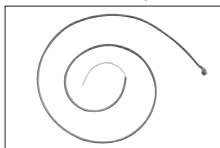


AC6537  
TRS49SS 2.4G 接收機天線




2707-I 模擬器連接線




1389-R/W 發射機吊帶 紅/白

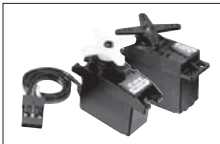

8114 ACE RC S1903 伺服機  
8117 ARC RC C1016 迷你伺服機

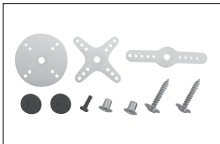

AQ1496  
C1016 迷你伺服機擺臂組

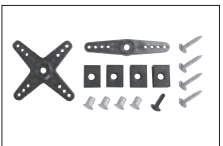

AQ1499 S1903 伺服機擺臂組



AQ0089 AAA型電池盒



AG2050 AA型電池盒



2969-J/S 4.8V/1100mAh AA  
鎳氫電池包



2939 4.8V/1200mAh 2/3A  
鎳氫電池包



2946-I 9.6V/1100mAh AA  
鎳氫電池包




2927 4.8V/1200mAh 2/3A  
鎳氫電池包




2970 電池(12顆)附Tx/Rx充電器, 110V/2P  
2971 電池(12顆)附Tx/Rx充電器, 230V/2P  
2972 電池(12顆)附Tx/Rx充電器, 230V/3P



AT2139 TX/Rx 發射機充電接頭, 110V(US)  
AT2139-J TX/Rx 發射機充電接頭, 100V(JP)  
AT2140 TX/Rx 發射機充電接頭, 230V/2P(EU)  
AT2141 TX/Rx 發射機充電接頭, 230V/3P(UK)

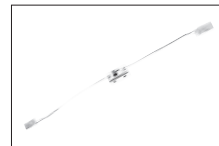

AG2051 開關組

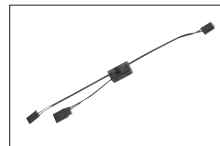

AG2078 Futaba插孔開關組

## 售後服務

首先感謝您購買SkyMaster TS4發射機，此發射機是由雷虎科技所生產製造。在遙控模型領域中，雷虎科技一直致力於高品質產品與最佳服務的提供。

SkyMaster TS4 在產品上市前，已經過全世界的嚴苛的測試以確保產品性能與品質。SkyMaster產品在全球皆有正式授權的代理商可提供完整的產品技術諮詢與售後維修等服務。如欲取得SkyMaster相關最新的產品資訊或技術服務等，請聯絡全球各地區雷虎所授權的經銷商或模型店。

## 操作狀態與顯示燈號對照表

下方表格顯示發射機一般正常的操作狀態與相對的顯示燈號與警示蜂鳴器。當發現發射機工作不正常，請不要使用操控遙控模型。當發現有不同於下表所列的顯示訊號而無法自行解決時，請聯絡雷虎科技所授權的代理商尋求產品維修服務。

狀態	發射機			接收機
	電源燈	聲響	對頻燈	指示燈號
開啓電源時	恆亮紅燈	短促“嗶”聲響	紅燈1秒	紅燈1秒
正常操作中	恆亮紅燈	-	慢閃綠燈	慢閃綠燈
對頻中	恆亮紅燈	-	快閃綠燈	慢閃紅綠燈
對頻成功	恆亮紅燈	-	慢閃綠燈	恆亮綠燈
對頻失敗	恆亮紅燈	-	快閃綠燈	慢閃紅綠燈
發射模組失效	恆亮紅燈	-	紅燈	恆亮紅燈
進入安全回復設定模式	恆亮紅燈	-	慢閃綠燈	慢閃綠燈
安全回復設定未完成	恆亮紅燈	-	慢閃綠燈	恆亮紅燈
安全回復設定完成	恆亮紅燈	-	慢閃綠燈	恆亮綠燈
低功率檢測	恆亮紅燈	短促連續“嗶”警告聲	慢閃綠燈	恆亮綠燈
低電壓	閃爍紅燈	短促連續“嗶”警告聲	慢閃綠燈	恆亮綠燈

## CE EU Declaration of Conformity CE

according to the R&TTE Directive 1995/5/EC

For the following equipment:

**Product** : Remote Controller for Models  
**Type Designation/Trademark** : SKY MASTER TS4、SKY MASTER TS6、Cougar PS3  
 SKY TECH TS6i、Cougar PS3i/ACE RC  
 TRS401ss、TRS601DD/ACE RC  
**Manufacturer's Name** : Thunder Tiger Corp.(Ningbo)  
**Manufacturer's Address** : CW5 YUYAO,FAR-EAST INDUSTRY PARK,  
 ZHEJIANG PROVINCE,CHINA

is herewith confirmed to comply with the requirements set out in the Council Directive 73/23/EEC for electrical equipment used within certain voltage limits and the Amendment Directive 93/68/EEC. For the evaluation of the compliance with this Directives, the following standards were applied:

EN 300328 V1.7.1:2006

EN 301 489-1 V1.8.1:2008

EN 301 489-17 V1.3.2:2008

EN 60065:2002/A1:2006

Responsible for making this declaration is the:

**Manufacturer** Authorized representative established within the EU

Authorized representative established within the EU (if applicable):

**Company Name** :

**Company Address** :

**Person responsible for making this declaration**

**Name, Surname** : Kevin Lin

**Position/Title** : Manager



**China**  
(Place)

**2009-06-18**  
(Date)

# ACE RC

CE 0681 FC FCC ID: VEJTT-FHM2P4G-A12