

# GP-2120TF Driver Installation Manual

## 1. Driver installation Notes

- 1.1 GP-2120TF including Label mode (in adhesive thermal paper) and Receipt mode (in Thermal paper roll)
- 1.2 Factory default of GP-2120TF is Label mode.
- 1.3 For label mode, choose “GP-2120TF (Label)” to install the driver;  
For receipt mode, choose “GP-2120TF (Receipt)” to install the driver.
- 1.4 Change the printing mode in between Label and Receipt mode:

Turn off the printer power, press and hold on the PAUSE button and FEED button, then turn on the printer power, release two buttons till hearing a beeper, a page showed current printing mode comes out automatically. Repeat the steps above to change the printing mode in between label and receipt mode.

## 2. Process of Driver Installation

### Step 1: Paper roll installation

**Top cover open button**

**Paper roll spindle slot**

1: press the button to open the top cover

2: Insert the paper roll spindle into the paper roll

3: Fix the paper roll into the slot and label paper should be facing up as picture showing.

Paper roll should be kept left in the slot and pull the leading edge of paper and thread through the Limiting block.

### Step 2: Connection of USB cable and Power cord.

Connect the printer with computer via USB cable. The printer power jacks is a 3-pin socket and for 12V/4A DC power input, please plug the DC cord connector into the printer’s power jack properly.


ATTENTION: PLEASE DO NOT PLUG THE DATA CABLE OR POWER CORD WHEN THE PRINTER POWER IS ON.

### Step 3: Driver Installation (It points to Win7 in 32bit systems as an example of how to install the label driver)



3.1: Turn on the printer power, an U-Disk appears in computer, then click it, there is a driver package as bellow:




3.2.: Copy the driver package to disk E or F, then Unzip it as bellow:

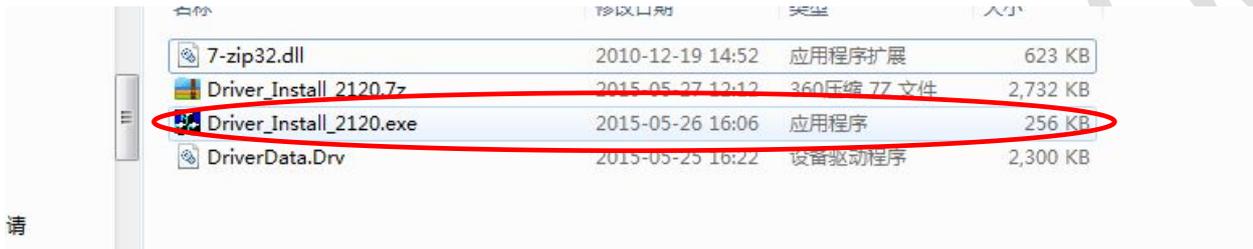


3.3: Double click the Driver\_Install.exe.

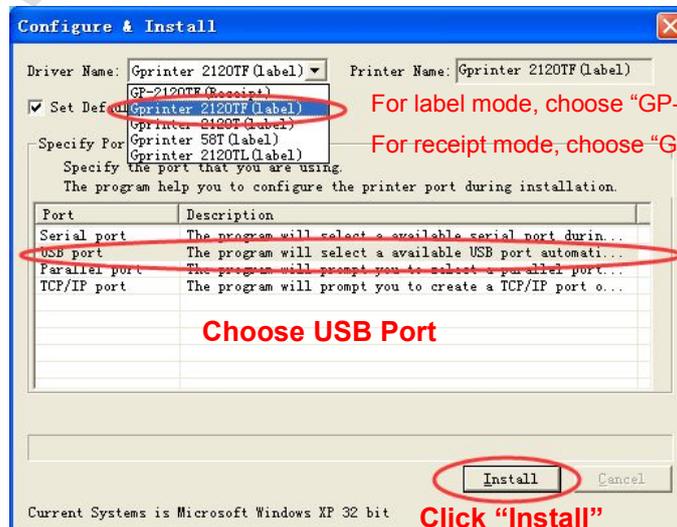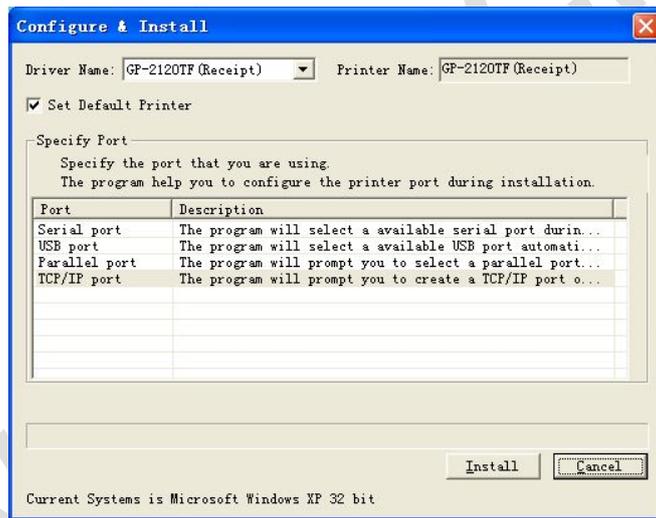

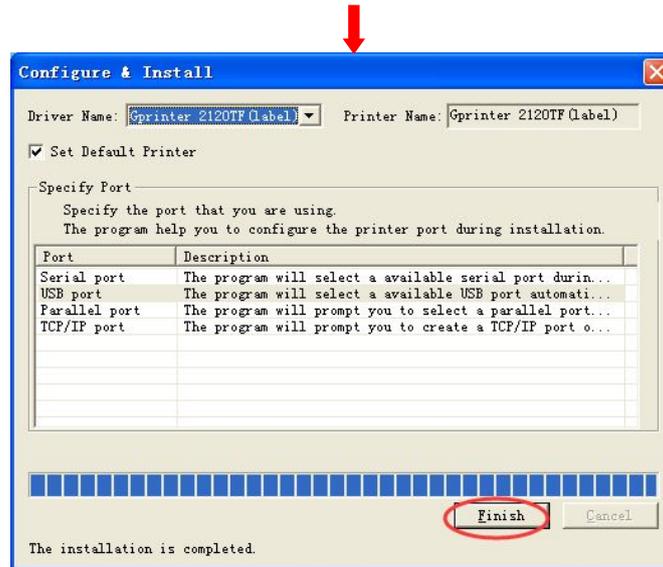



**Step 4: Set the paper size and gap (when it is receipt mode, skip this step)**

Click **【start】** - **【device and printer】** , driver of GP-2120TF(Label) showed as bellow:

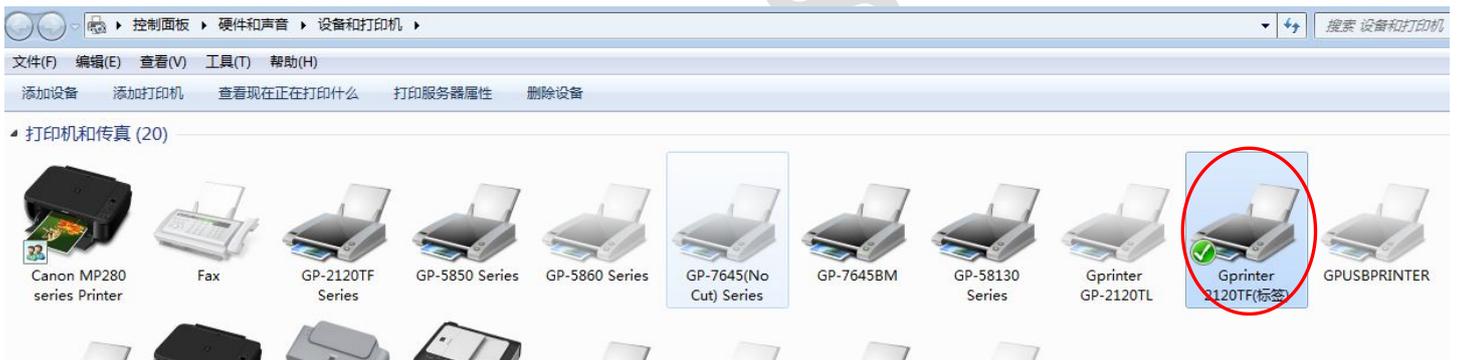


Right click the driver of Gprinter-2120TF (Label), click printing preferences, set paper size as bellow:


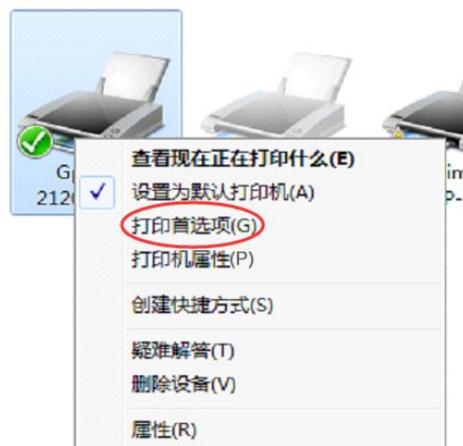


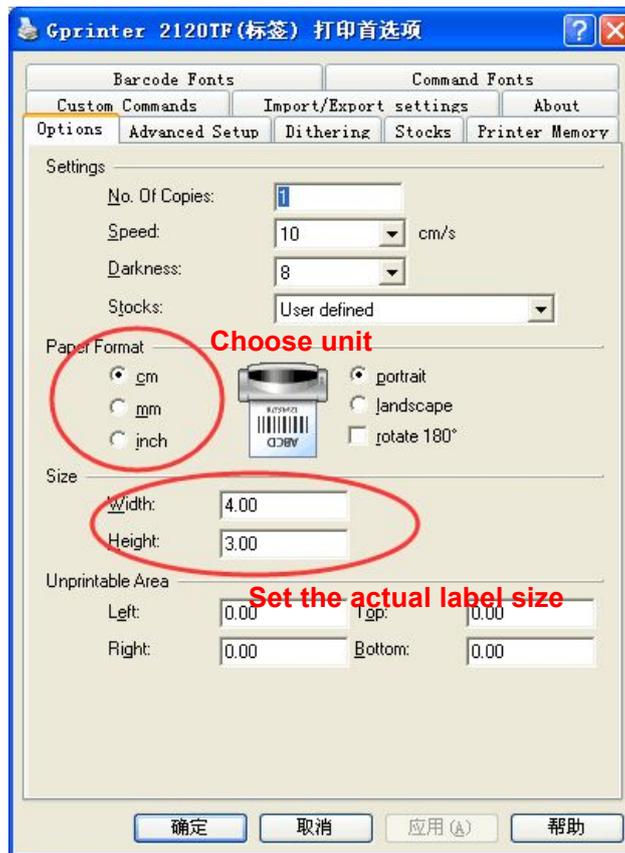

3.4.2 Set the gap of label as bellow:

Click the **【Advanced setup】** in Printing preference of below pictures.

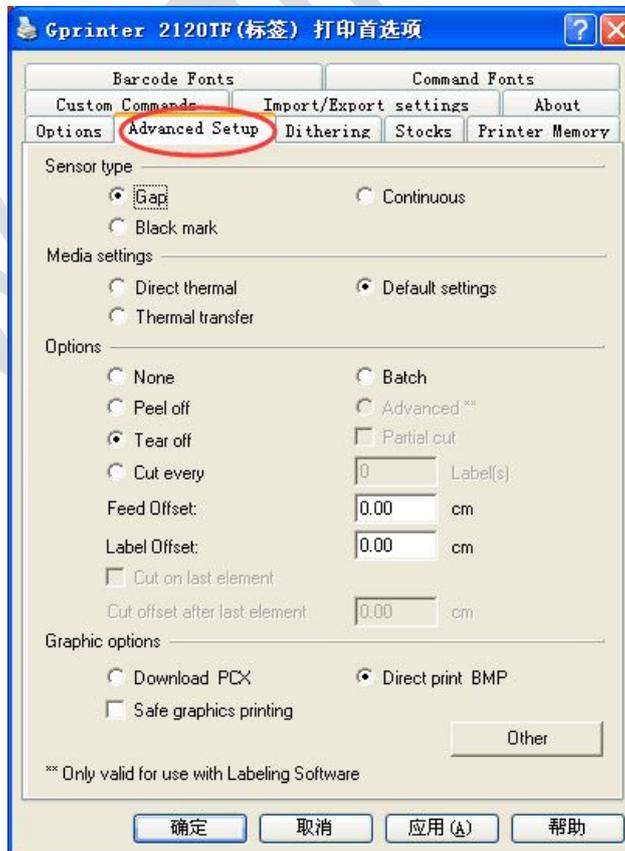

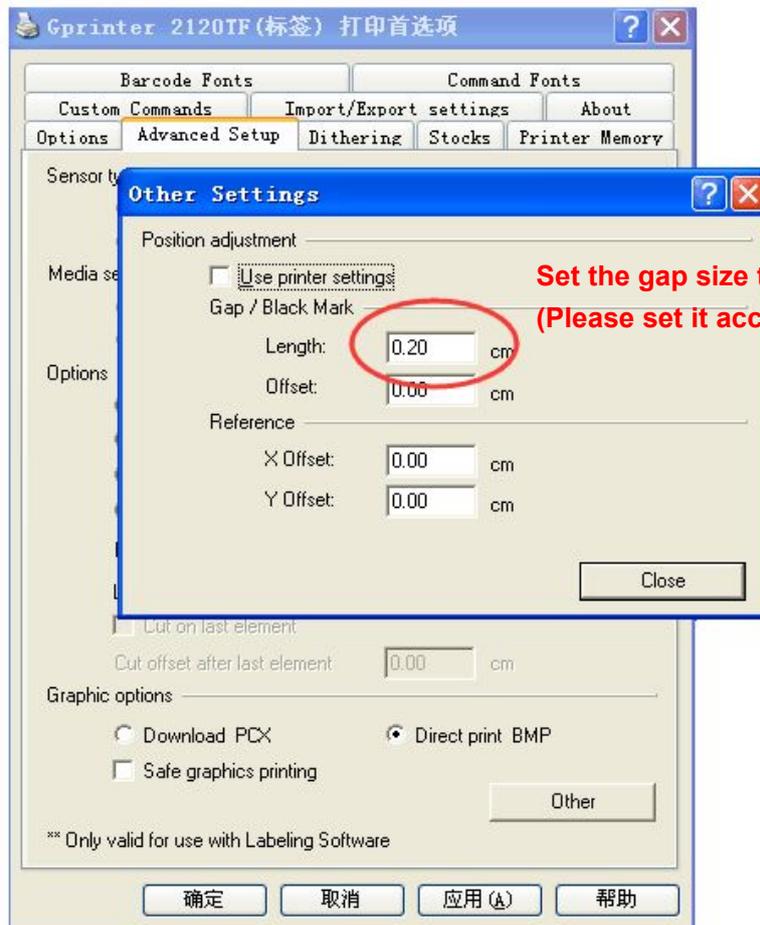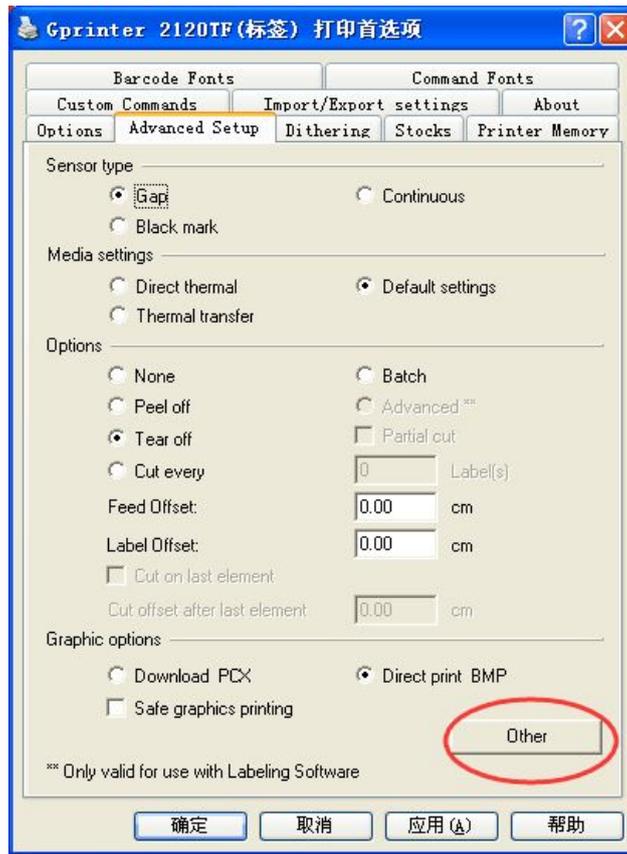

Step 5: Click "Print a test page" in properties of printer.



After printing the test page, and then press Feed button and 1 label comes out, it means that driver installed successfully.

#### 4. Installation of label software and APP

4.1 Click up this link <http://www.gainscha.cn/download.aspx?current=down> to download Nicelabel software for editing label what you want.

Drive		
Software Name	Instrcution	Download
GP-58mm-CN-V9	GP-58 series 9.0 drive	▼
GP-76mm-CN-V8.rar	GP-76 Series 8.0 Drive	▼
NiceLabel-for-Gprinter Barcode printer Drive	NiceLabel-for-Gprinter Barcode printer Drive(Apply to all barcode model)	▼
GP-58mm-CN-V8.rar	GP-58 Series 8.0 Drive	▼

4.2 When user has 2120TF with Serial + USB + Bluetooth interface, also click up this link <http://www.gainscha.cn/download.aspx?current=down> to download Gprinter APP into Android advice to print.

tool		
Software Name	Instrcution	Download
Gprinter	Print apps, apply to the Android-based smartphones and tablet computers	

www.gainscha.cn