

Nokia 6630 User's Guide

CE 168

DECLARATION OF CONFORMITY We, NOKIA CORPORATION declare under our sole responsibility that the product RM-1 is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/

Copyright © 2004 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and Pop-Port are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.

symbian

This product includes software licensed from Symbian Software Ltd (c) 1998-200(4). Symbian and Symbian OS are trademarks of Symbian Ltd.



Java™ and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Stac®, LZS®, ©1996, Stac, Inc., ©1994-1996 Microsoft Corporation. Includes one or more U.S. Patents: No. 4701745, 5016009, 5126739, 5146221, and 5414425. Other patents pending.

Hi/fn®, LZS®, ©1988-98, Hi/fn. Includes one or more U.S. Patents: No. 4701745, 5016009, 5126739, 5146221, and 5414425. Other patents pending.

Part of the software in this product is © Copyright ANT Ltd. 1998. All rights reserved.

m-Router Connectivity Components © 2000-2002 Intuwave Limited. All rights reserved. (www.intuwave.com)

US Patent No 5818437 and other pending patents. T9 text input software Copyright (C) 1997-2004. Tegic Communications, Inc. All rights reserved.

USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (B) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided 'as is'. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

Export Controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Copyright © 2004 Nokia. All rights reserved.

Contents

FOR YOUR SAFETY 7

Personalising your phone 10

Profiles - setting tones 11

 Offline profile..... 12

Themes - the look of your phone..... 12

Your phone 13

Essential indicators..... 13

Keypad lock (Keyguard) 14

Clock..... 14

 Clock settings..... 15

 World clock..... 15

Volume control and built-in loudspeaker..... 16

File manager - managing memory..... 16

 Memory low - freeing memory..... 17

Memory card tool..... 17

 Formatting a memory card 19

Making calls 20

Making a voice call 20

 Making a video call 20

 Speed dialling a phone number 21

Answering or rejecting a call 22

 Answering or rejecting a video call 22

 Call waiting (network service) 22

 Options during a call 23

Log 23

 Recent calls 23

 Call duration 24

 Packet data..... 24

 Monitoring all communication events..... 24

Contacts (Phonebook) 26

Saving names and numbers 26

SIM directory and other SIM services 26

Adding ringing tones for contacts 27

Voice dialling..... 27

 Adding a voice tag to a phone number..... 28

 Making a call by saying a voice tag..... 28

Camera and Gallery..... 29

Camera 29

 Taking pictures..... 29

 Taking pictures in a sequence..... 30

 You in the picture - self-timer..... 31

 Adjusting camera settings 31

 Recording videos..... 31

 Adjusting video recorder settings 32

Gallery 33

Viewing images.....	33
Media	34
Video editor	34
Editing video, sound, and transitions	34
Movie director.....	35
Image mgr.....	35
Recorder	35
RealPlayer™.....	35
Playing video or sound clips.....	36
Streaming content over the air.....	36
Receiving RealPlayer settings.....	37
Messaging	38
Writing text	39
Tips on text input.....	41
Japanese text input	41
Saving words in User dictionary	43
English text input.....	43
Copying text to clipboard	45
Writing and sending messages	45
Receiving MMS and e-mail settings.....	47
Inbox - receiving messages	47
Receiving multimedia messages	48
Receiving logos, tones, business cards, calendar entries, and settings	48
Receiving Web service messages.....	49
My folders	49

Mailbox.....	49
Opening the mailbox.....	50
Retrieving e-mail messages	50
Deleting e-mail messages.....	51
Disconnecting from the mailbox	52
Outbox - messages waiting to be sent.....	52
Messaging settings.....	52
Settings for text messages	52
Settings for multimedia messages	53
Settings for e-mail.....	54
Other settings.....	57

Calendar and To-do.....58

Calendar - creating calendar entries.....	58
Calendar views	59
To-do - task list.....	59

Web.....60

Accessing the Web	60
Receiving browser settings.....	60
Bookmarks view.....	60
Making a connection	61
Connection security.....	61
Browsing	62
Downloading and purchasing items	63
Ending a connection	64
Emptying the cache	64
Settings for Web	64

Organiser..... 66

Calculator	66
Notes	66
Go to - adding shortcuts.....	66
Converter - converting measures	66
Setting a base currency and exchange rates.....	67
Wallet	67
Creating a wallet code	68
Storing personal card details.....	68
Creating a wallet profile.....	69
Resetting the wallet and wallet code	69

Connectivity..... 70

Bluetooth connection.....	70
Bluetooth settings	70
Sending data using Bluetooth.....	71
Pairing devices.....	72
Receiving data using Bluetooth.....	72
Switching off Bluetooth	73
PC connections - using Bluetooth or USB	73
Using the CD-ROM.....	73
Using your phone as a modem	73
Connection manager	73
Sync - remote synchronisation	74
Synchronising data.....	74

Tools 75

Settings	75
----------------	----

Phone settings.....	75
Call settings	76
Connection settings.....	78
Date and time.....	79
Security	79
Call diverting	83
Call barring (network service).....	83
Network.....	84
Enhancement settings.....	84
Voice commands	85
Adding a voice command to an application.....	85
Application manager.....	85
Installing applications and software	86
Removing applications and software	87
Activation keys - handling copyright protected files.....	87
Transfer - transferring content from another phone.....	87
Device manager - service provider configuration.....	88

Kuten Code List..... 89

Battery information..... 93

Charging and Discharging	93
--------------------------------	----

Enhancement..... 94

Battery.....	95
Nokia Wireless Boom Headset HS-4W	95

Nokia Boom Headset HDB-4	96
Nokia Digital Pen SU-1B.....	96
Nokia Video Call Stand PT-8.....	97
Nokia Travel Charger ACP-12.....	97

CARE AND MAINTENANCE	98
-----------------------------------	-----------

ADDITIONAL SAFETY INFORMATION	98
---	-----------

FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



SWITCH ON SAFELY Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE All wireless phones may be susceptible to interference, which could affect performance.



SWITCH OFF IN HOSPITALS Follow any restrictions. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT Follow any restrictions. Wireless phones can cause interference in aircraft.



SWITCH OFF WHEN REFUELLING Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING Follow any restrictions. Don't use the phone where blasting is in progress.



USE SENSIBLY Use only in the normal position as explained in the product documentation. Don't touch the antenna unnecessarily.



QUALIFIED SERVICE Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE Your phone is not water-resistant. Keep it dry.





BACK-UP COPIES Remember to make back-up copies or keep a written record of all important information.



CONNECTING TO OTHER PHONES When connecting to any other phone, read its user guide for detailed safety instructions. Do not connect incompatible products.



EMERGENCY CALLS Ensure the phone function of the phone is switched on and in service. Press  as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press . Give your location. Do not end the call until given permission to do so.

ABOUT YOUR DEVICE

The wireless device described in this guide is approved for use on the EGSM 900/1800/1900, and WCDMA 2000 network. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect privacy and legitimate rights of others.



Warning: To use any features in this device, other than the alarm clock, the phone must be switched on. Do not switch the device on when wireless phone use may cause interference or danger.

Network Services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These Network Services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize Network

Services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use Network Services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Contact your service provider for more information.

This wireless device is a 3GPP GSM Release 99 terminal supporting GPRS service, and is designed to support also Release 97 GPRS networks. However, there may be some compatibility issues when used in some Release 97 GPRS networks. For more information, contact your service provider.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as MMS, browsing, e-mail and content downloading via browser or over MMS, require network support for these technologies.

Enhancements, batteries, and chargers

Check the model number of any charger before use with this phone. This phone is intended for use when supplied with power from ACP-12 and LCH-12.



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Your phone and its enhancements may contain small parts. Keep them out of reach of small children.

Icons in the user's guide might be different from the ones indicated on the phone display.

Personalising your phone



Note: Your service provider/network operator may have requested a different order for menu items or the inclusion of different icons in the phone menu. Contact your service provider/network operator for assistance with any features that differ from those described in this guide.

- To change the standby mode background image, or what is shown in the screen saver, see 'Themes - the look of your phone', p. 12.
- To customise the ringing tones, see 'Profiles - setting tones', p. 11.
- To change shortcuts assigned for the selection keys in the standby mode, select **Tools**→**Settings**→**Phone**→**Standby mode**→**Left selection key** or **Right selection key**.
- To change the shortcuts assigned for the different presses of the Scroll key in the standby mode, see 'Standby mode', p. 76.
- To change the clock shown in the standby mode, select **Tools**→**Settings**→**Date and time**→**Clock type**→**Analogue** or **Digital**.
- To change the Clock alarm tone, select **Tools**→**Settings**→**Date and time**. Scroll to **Clock Alarm tone** and select a tone.
- To change the Calendar alarm tone, select **Organiser**→**Calendar**→**Options**→**Settings**.
- To change the welcome note to an image or animation, select **Tools**→**Settings**→**Phone**→**General**→**Welcome note or logo**.
- To assign an individual ringing tone to a contact, select **Contacts**. See p. 27.
- To assign a speed dial to a contact, press a numbered key in the standby mode (1 is reserved for the voice mailbox), and press **Left selection key**. Select a contact. To change the speed dialling status (pressing and holding a speed dial key in the standby mode) to **Off**, select **Tools**→**Settings**→**Call**→**Speed dialling**.




 



Fig. 1 Standby mode with a new background image, a new selection key shortcut, WCDMA network and Bluetooth activated.

- To rearrange the main Menu, in the main Menu, select **Options**→ **Move, New folder**, or **Move to folder**. You can move less used applications into folders, and place applications that you use more often into the main Menu.




Profiles – setting tones


To set and customise the ringing tones, message alert tones, and other tones for different events, environments, or caller groups, press  and select **Tools**→**Profiles**. You can see the currently selected profile at the top of the display in the standby mode. If the **General** profile is in use, only the current date is shown.

- To activate or deactivate the silent profile quickly, press and hold  # in standby mode.
In silent profile, silent profile sounds are not turned off at following functions.
 - Any content played by Real One Player™
 - Clock alert
 - Call audio can be routed to loudspeaker
 - Sounds produced by Browser plugins
 - Camera shutter sound
 - Video camera start & end sound
- To change the profile, press  in the standby mode. Scroll to the profile you want to activate and press **OK**.
- To modify a profile, select **Tools**→ **Profiles**. Scroll to the profile and select **Options**→ **Personalise**. Scroll to the setting you want to change, and press  to open the choices. Tones stored on the memory card are indicated with . You can scroll through the tone list and listen to each one before you make your selection. Press any key to stop the sound.
- To create a new profile, select **Options**→ **Create new**.





Tip! When you are choosing a tone, **Tone downloads** opens a list of bookmarks. You can select a bookmark and start connection to a Web page to download tones.


 **Tip!** For information on how to change the alert tone for Calendar or Clock, see 'Personalising your phone', p. 10.

 Options in the Themes main view: [Preview/ Downloads](#), [Apply, Edit, Copy to mem. card, Copy to phone mem., Help](#), and [Exit](#).

Offline profile

Offline profile lets you use the phone without connecting to the wireless network. When you activate the Offline profile, the connection to the wireless network is turned off, as indicated by  in the signal strength indicator. All wireless phone signals to and from the device are prevented. If you try to send messages, they are placed in Outbox to be sent later.




 **Warning:** In Offline profile you cannot make calls, except calls to certain emergency numbers, or use features that require network coverage. To make calls, change the profile to activate the phone function. If the device has been locked, you must enter the unlock code before you can change the profile and make calls.

 **Warning:** Your device must be switched on to use the offline profile. Do not switch the device on when wireless device use is prohibited or when it may cause interference or danger.

To leave the Offline profile, select another profile and select **Options**→**Activate**. Press **Yes**. The phone re-enables wireless transmissions (providing there is sufficient signal strength). If Bluetooth was turned off as a result of entering Offline profile you must re-enable Bluetooth manually. See 'Bluetooth settings', p. 70.





Themes – the look of your phone


To change the look of your phone display, such as the wallpaper, colour palette, and icons, press  and select **Tools**→**Themes**. The active theme is indicated by . In Themes you can group together elements from other themes or select images from Gallery to personalise themes further. The themes on the memory card are indicated by .


Your phone



Essential indicators


 - The phone is being used in a GSM network.


 (network service) - The phone is being used in a WCDMA network. The phone selects the GSM or WCDMA network automatically according to the network parameters and the roaming agreements between the network operators.


 - You have received one or several messages to the Inbox folder in Messaging.


 - There are messages waiting to be sent in Outbox. See p. 52.

 and  - You have missed calls. See 'Recent calls', p. 23.

 - Shown if **Ringing type** is set to **Silent** and **Message alert tone**, and **E-mail alert tone** are set to **Off**. See 'Profiles - setting tones', p. 11.

 - The phone keypad is locked.


 - You have an active alarm. See 'Clock', p. 14.


 - All calls to the phone are diverted to another number.


 - A headset is connected to the phone.


 - A loopset is connected to the phone.


 - The connection to a Bluetooth headset has been lost.


 - A data call is active.

 
 - Shown in a GSM network.


 - A packet data connection is active.

 - Shown when the packet data connection is on hold. These icons are shown in the top left corner in the standby mode. See 'Packet data connections in GSM and WCDMA networks', p. 78.

 - A WCDMA packet data connection is active.

 - Bluetooth is active.

 - Data is being transmitted using Bluetooth. See 'Bluetooth connection', p. 70.


 - USB connection is active.

Keypad lock (Keyguard)

Use the keypad lock to prevent the keys from being accidentally pressed.

To lock: In the standby mode, press , then *+ 記電 . When the key are locked,  is shown on the display.

To unlock: Press , then *+ 記電 .

When the keypad lock is on, calls still may be possible to the official emergency number programmed into your device. Key in the emergency number, and press .


In this situation, calls to 110, 118 and 119 may not be possible depending on your USIM card. In that case, please set this option off and make calls with these numbers in accordance with 'Emergency calls', p.100.



Clock

Options in Clock:
[Set alarm](#), [Reset alarm](#),
[Remove alarm](#), [Settings](#),
[Help](#), and [Exit](#).


Press  and select [Organiser](#)→ [Clock](#).

- To set a new alarm, select [Options](#)→ [Set alarm](#). Enter the alarm time, and press [OK](#). When the alarm is active, the  indicator is shown.
- To turn off the alarm, press [Stop](#). When the alarm tone sounds, press any key or [Snooze](#) to stop the alarm for five minutes, after which it will resume. You can do this a maximum of five times.


If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you press [Stop](#), the device asks whether you want to activate the device for calls. Press [No](#) to switch off the device or [Yes](#) to make and receive calls. Do not press [Yes](#) when wireless phone use may cause interference or danger.

- To cancel an alarm, select [Clock](#)→ [Options](#)→ [Remove alarm](#).

Clock settings

- To change the clock settings, select **Options**→**Settings** in Clock.
- To change the clock shown in the standby mode, scroll down and select **Clock type**→**Analogue** or **Digital**.
- To allow the mobile phone network to update the time, date, and time zone information to your phone (network service), scroll down and select **Auto time update**. For the **Auto time update** setting to take effect, the phone restarts.
- To change the alarm tone, scroll down and select **Clock alarm tone**.
- To change the daylight saving time status, scroll down and select **Daylight-saving**. Select **On** to add one hour to the **My home city** time. When the Daylight-saving is active, the  indicator is shown.

World clock

Open **Clock** and press  to open the World clock view. In the World clock view you can view the time in different cities.

- To add cities to the list, select **Options**→**Add city**. Enter the first letters of the city name. The search field appears automatically, and the matching cities are displayed. Select a city. You can add a maximum of 15 cities to the list.
- To set your current city, scroll to a city, and select **Options**→**My home city**. The city is displayed in the Clock main view and the time in your phone is changed according to the city selected. Check that the time is correct and matches your time zone.

 


Fig. 2 Navigation bar shows the speaker in use: [Handset](#) or [Loudsp..](#)

Volume control and built-in loudspeaker

- To increase or decrease the volume level, when you have an active call or are listening to a sound, press or , respectively.

The built-in loudspeaker allows you to speak and listen to the phone from a short distance without having to hold the phone to your ear, for example, having it on a table nearby. Sound applications use the loudspeaker by default.

- To use the loudspeaker during a call, start a call, and press .



Important: Do not hold the phone near your ear when the loudspeaker is in use, because the volume may be extremely loud.

- To turn off the loudspeaker, when you have an active call or are listening to a sound, press .



File manager – managing memory

Icons in File manager:



– folder,



– folder that has a subfolder.

Tip! You can use Nokia Phone Browser available in Nokia PC Suite to view the different memories in your phone. See the CD-ROM supplied in the sales package.

Many features of the phone use memory to store data. These features include contacts, messages, images, ringing tones, calendar and to-do notes, documents, and downloaded applications. The free memory available depends on how much data is already saved in the phone memory. You can use a memory card as extra storage space. Memory cards are re-writable, so you can delete and save data on a memory card.

- To browse files and folders in the phone memory or on a memory card (if inserted), press and select [Organiser](#)→ [File mgr.](#). The phone memory view () opens. Press to open the memory card view ().
- To move or copy files to a folder, press and at the same time to mark a file, and select [Options](#)→ [Move to folder](#) or [Copy to folder](#).
- To find a file, select [Options](#)→ [Find](#), select the memory from which to search, and enter a search text that matches the file name.

Memory low – freeing memory

The phone notifies you if the phone memory or memory card memory is getting low.

- To free phone memory, transfer data to a memory card in the File manager. Mark files to be moved, and select **Move to folder**, select memory card, and a folder.
- To remove data to free memory, use the File manager application, or go to the respective application.



Memory card tool



Note: This device uses Reduced Size Dual Voltage (1.8/3V) MultiMediaCard (MMC). To ensure interoperability, use only dual voltage MMCs. Check the compatibility of an MMC with its manufacturer or provider.

Press **Organiser** → **Memory**. You can use a memory card as extra storage space. You can also back up information from phone memory and restore the information to the phone later.

You cannot use the memory card if the door of the memory card slot is open.

Keep all memory cards out of the reach of small children.

Do not open the memory card slot door in the middle of an operation. Opening the slot door may damage the memory card as well as the device, and data stored on the card may be corrupted.

Use only compatible Multimedia cards (MMC) with this device. Other memory cards, such as Secure Digital (SD) cards, do not fit in the MMC card slot and are not compatible with this device. Using an incompatible memory card may damage the memory card as well as the device, and data stored on the incompatible card may be corrupted.



Note: NO WARRANTY

The applications provided on the Reduced Sized MultiMediaCard (RS-MMC) and discussed in this inbox Legal Notice Leaflet for Nokia 6630 and provided have been



Fig. 3 Memory consumption of the memory card.

Options in Memory card: **Backup phone mem.**, **Restore from card**, **Format mem. card**, **Memory card name**, **Memory details**, **Help**, and **Exit**.

created and are owned by persons or entities that are not affiliated with or related to Nokia. Nokia does not own the copyrights and/or intellectual property rights to these third party applications. As such, Nokia does not take responsibility for any end user support or the functionality of these applications, nor the information presented in the applications or these materials. Nokia does not provide any warranty for these applications. YOU ACKNOWLEDGE THE SOFTWARE AND/OR APPLICATIONS (COLLECTIVELY, THE "SOFTWARE") ARE PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND EXPRESS OR IMPLIED AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS. THERE IS NO WARRANTY BY NOKIA OR BY ITS AFFILIATES THAT ANY ASPECT OF THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE. YOU ASSUME ALL RESPONSIBILITY AND RISK FOR THE SELECTION OF THE SOFTWARE TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE AND RESULTS OBTAINED FROM IT. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL NOKIA, ITS EMPLOYEES OR AFFILIATES BE LIABLE FOR ANY LOST PROFITS, REVENUE, SALES, DATA, INFORMATION OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, PERSONAL INJURY, INTERRUPTION OF BUSINESS, OR FOR ANY DIRECT, INDIRECT, INCIDENTAL, ECONOMIC, COVER, PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY ARISING OUT OF THE INSTALLATION OR USE OF OR INABILITY TO USE THE SOFTWARE, EVEN IF NOKIA OR ITS AFFILIATES ARE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME COUNTRIES/STATES/JURISDICTIONS DO NOT ALLOW THE ABOVE EXCLUSION OR LIMITATION OF LIABILITY, BUT MAY ALLOW LIABILITY TO BE LIMITED, IN SUCH CASES, NOKIA, ITS EMPLOYEES' OR AFFILIATES'


LIABILITY SHALL BE LIMITED TO U.S.\$50. Nothing contained in this disclaimer shall prejudice the statutory rights of any party dealing as a consumer.




Formatting a memory card



When a memory card is formatted, all data on the card is permanently lost.

Some memory cards are supplied preformatted and others require formatting. Consult your retailer to find out if you must format the memory card before you can use it.

To format a memory card, select **Options**→**Format mem. card**. Select **Yes** to confirm. When formatting is complete, enter a name for the memory card, and press **OK**.


 



 **Tip!** To rename a memory card, go to Memory card and select **Options**→**Memory card name**.



 **Tip!** To increase or decrease the volume during a call, press  or .

 
 **Tip!** To change the phone number of your voice mailbox, press  and select **Organiser**→**Voice mail** and select **Options**→**Change number**. Enter the number (obtained from your service provider) and press **OK**.



Making calls

Making a voice call

- 1 In the standby mode, enter the phone number, including the area code. Press  to remove a number.
For international calls, press ***+** twice for the **+** character (replaces the international access code), and enter the country code, area code (omit the leading zero if necessary), and phone number.
- 2 Press  to call the number.
- 3 Press  to end the call (or to cancel the call attempt).
Pressing  will always end a call, even if another application is active.


Making a call from the Contacts application – Press  and select **Contacts**. Scroll to the desired name; or enter the first letters of the name to the Search field. Matching contacts are listed. Press  to call.

Calling your voice mailbox (network service) – To call your voice mailbox, press and hold  in the standby mode. See also 'Call diverting', p. 83.

Calling a recently dialled number – In the standby mode, press  to access a list of the 20 last numbers you called or attempted to call. Scroll to the number you want, and press  to call the number.


Making a video call

When you make a video call, you can see a real-time, two-way video between you and the recipient of the call. See Figure 4. The video image captured by the camera in your phone will be shown to the video call recipient.

 **Tip!** With Nokia Video Call Stand PT-8, you can view your own image and the other caller's image from your phone display during a video call.

To be able to make a video call, you need to have a USIM card and be in the coverage of a WCDMA network. For availability of and subscription to video call services, contact your network operator or service provider. A video call can only be made between two parties. The video call can be made to a compatible mobile phone or an ISDN client. Video calls cannot be made while there is another voice, video, or data call active.

- 1 To start a video call, enter the phone number in the standby mode, or go to Contacts, and select a contact. Then select **Options**→**Call**→**Video call**.
- 2 Starting a video call may take a while. A note **Waiting for image** is shown. If the call is not successful, for example, video calls are not supported by the network, or the receiving device is not compatible, you will be asked if you want to try a normal call or send a message instead.


 

 

The video call is active when you can see two video images and hear the sound through the loudspeaker. The call recipient may deny video sending () , in which case you may see a still image or a grey background graphic. You will hear the sound.

Select **Enable/Disable: Sending video, Sending audio** or **Sending audio & video** if you want to change between showing video or hearing only sound.

Select **Zoom in** or **Zoom out**; or press  and  to zoom your own image. Zoom indicator is shown on the top of the display.

- 3 To end the video call, press .

Speed dialling a phone number

- To assign a phone number to one of the speed dialling keys ( 2 abc -  9), press  and select **Tools**→**Speed dial**.  is reserved for the voice mailbox.
- To call: In standby mode, press the speed dial key and .

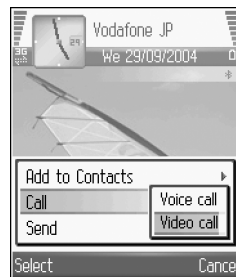







Fig. 4 Making a video call.

Icons:



 - the video call recipient has denied video sending from his device.

 - you have denied video sending from your phone.


 **Tip!** To speed dial a number by pressing and holding the key, press  and select **Tools**→**Settings**→**Call** and set **Speed dialling**→**On**.



 **Tip!** If a compatible headset is connected to the phone, you can answer and end a call by pressing the headset key.

Answering or rejecting a call

- To answer the call, press .
- To mute the ringing tone when a call comes in, press [Silence](#).
- If you do not want to answer a call, press  to reject it. The caller will hear a line busy tone. If you have activated the [Call divert](#)→[If busy](#) function to divert calls, rejecting an incoming call will also divert the call. See 'Call diverting', p. 83.
When you reject an incoming call, you can also send a text message to the caller informing why you could not answer the call. Select [Options](#)→[Reject & send SMS](#). You can edit the text before sending it. See also [Reject call with SMS](#), p. 77.



Answering or rejecting a video call

When a video call arrives, you can see the icon .

- 1 Press  to answer the video call. [Allow video image to be sent to caller?](#) is shown. If you select [Yes](#), the image being captured by the camera in your phone is shown to the caller. If you select [No](#), video sending is not activated, and a still image is shown. You will hear the sound. See 'Tools', [Image in vid. call](#), p. 77.
- 2 To end the video call, press .


Call waiting (network service)

You can answer a call while you have another call in progress if you have activated the Call waiting function in [Tools](#)→[Settings](#)→[Call](#)→[Call waiting](#) (see also p. 76).

- To answer the waiting call, press . The first call is put on hold.
- To switch between the two calls, press [Swap](#). Select [Options](#)→[Transfer](#) to connect an incoming call or a call on hold with an active call and to disconnect yourself from the calls. To end the active call, press . To end both calls, select [Options](#)→[End all calls](#).

Options during a call


Many of the options that you can use during a call are network services. Press **Options** during a call for some of the following options: **Mute** or **Unmute**, **Answer**, **Reject**, **Swap**, **Hold** or **Unhold**, **Activate handset**, **Activate loudsp.**, or **Activate handsfree** (if a compatible Bluetooth headset is attached), **End active call** or **End all calls**, **New call**, **Conference**, and **Transfer**. Select:

- **Replace** – to end an active call and replace it by answering the waiting call.
- **Send MMS** (in WCDMA networks only) – to send an image or a video in a multimedia message to the other participant of the call. You can edit the message and change the recipient before sending. Press  to send the file to a compatible device (network service).
- **Send DTMF** – to send DTMF tone strings, for example, a password. Enter the DTMF string or search for it in Contacts. To enter a wait character (**w**) or a pause character (**p**), press ***+ 記号** repeatedly. Press **OK** to send the tone.





Log



Recent calls

To monitor the phone numbers of missed, received, and dialled calls, press  and select **Log**→**Recent calls**. The phone registers missed and received calls only if the network supports these functions, the phone is switched on, and within the network's service area.




Erasing recent call lists – To clear all recent call lists, select **Options**→**Clear recent calls** in the Recent calls main view. To clear one of the call registers, open the register you want to erase, and select **Options**→**Clear list**. To clear an individual event, open a register, scroll to the event, and press **C**.



 **Tip!** To change the phone tones for different environments and events, for example, when you want your phone to be silent, see 'Profiles – setting tones', p. 11.

 **Tip!** You can add DTMF tones to the **Phone number** or **DTMF** fields in a contact card.


 **Tip!** When you see a note in standby mode about missed calls, press **Show** to access the list of missed calls. To call back, scroll to a name or number, and press .

Icons:

-  - incoming,
-  - outgoing, and
-  - missed communication events.

 **Tip!** To view a list of sent messages, press  and select **Messaging** → **Sent**.

Call duration


To monitor the approximate duration of your incoming and outgoing calls, press  and select **Log** → **Call duration**.



 

Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding off for billing, and so forth.

Clearing call duration timers - Select **Options** → **Clear timers**. For this you need the lock code, see 'Security', 'Phone and SIM', p. 79.

Packet data

To check the amount of data sent and received during packet data connections, press  and select **Log** → **Packet data**. For example, you may be charged for your packet data connections by the amount of data sent and received.

Monitoring all communication events

To monitor all voice and video calls, text messages, or data connections registered by the phone, press  and select **Log**, and press  to open the general log. See Fig. 5. For each communication event, you can see the sender or recipient name, phone number, name of the service provider, or access point. You can filter the general log to view just one type of event and create new contact cards based on the log information.

Subevents, such as a text message sent in more than one part and packet data connections, are logged as one communication event. Connections to your mailbox, multimedia messaging centre, or Web pages are shown as packet data connections.



Note: When sending messages, your phone may display the word "**Sent**". This is an indication that the message has been sent by your phone to the message centre number programmed into your phone. This is not an indication that the message has

been received at the intended destination. For more details about messaging services, check with your service provider.

- To filter the log, select **Options**→ **Filter**. Scroll to a filter and press **Select**.
- To erase the contents of the log, Recent calls register, and Messaging delivery reports permanently, select **Options**→ **Clear log**. Press **Yes** to confirm.
- To set the **Log duration**, go to **Options**→ **Settings**→ **Log duration**. The log events remain in the phone memory for a set number of days after which they are automatically erased to free memory. If you select **No log**, all the log contents, Recent calls register, and Messaging delivery reports are permanently deleted.

Packet data counter and connection timer: To view how much data, measured in kilobytes, has been transferred and how long a certain packet data connection has lasted, scroll to an incoming or outgoing event indicated by **Pack.**, and select **Options**→ **View details**.

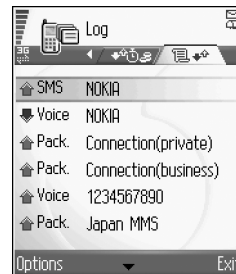


Fig. 5 General log of communication events.



Contacts (Phonebook)

Options in the Contacts directory: **Open**, **Call**, **Create message**, **New contact**, **Edit**, **Delete**, **Duplicate**, **Add to group**, **Belongs to groups**, **Mark/Unmark**, **Copy**, **SIM contacts**, **Go to web address**, **Send**, **Contacts info**, **Settings**, **Help**, and **Exit**.

Options when editing a contact card: **Add thumbnail**, **Remove thumbnail**, **Add detail**, **Delete detail**, **Edit label**, **Help**, and **Exit**.

☛ **Tip!** You can add and edit contact cards using Nokia Contacts Editor available in Nokia PC Suite. See the CD-ROM supplied in the sales package.

Press **fg** and select **Contacts**. In Contacts you can add a personal ringing tone, voice tag, or a thumbnail image to a contact card. You can also create contact groups, which allow you to send text messages or e-mail to many recipients at the same time. You can add received contact information (business cards) to Contacts. See 'Receiving logos, tones, business cards, calendar entries, and settings', p. 48. Contact information can only be sent to or received from compatible devices.


Saving names and numbers

- 1 Select **Options**→**New contact**.
- 2 Fill in the fields that you want, and press **Done**.
 - Reading (Furigana) is used for searching in the contacts.
 - To edit contact cards in Contacts, scroll to the contact card you want to edit, and select **Options**→**Edit**.
 - To delete a contact card in Contacts, select a card, and press **C**. To delete several contact cards at the same time, press **⦿** and **✎** to mark the contacts, and press **C** to delete.
 - To attach a small thumbnail image to a contact card, open the contact card and select **Options**→**Edit**. Then select **Options**→**Add thumbnail**. The thumbnail image is shown when the contact calls.

SIM directory and other SIM services




Note: For availability, rates, and information on using SIM services, contact your SIM card vendor (network operator, service provider or other vendor).


Press  and select **Contacts**→**Options**→**SIM contacts**→**SIM directory** to see the names and numbers stored on the SIM card. In SIM directory you can add, edit, or copy numbers to Contacts, and you can make calls. To view the phone numbers assigned to your SIM card, select **Options**→**My numbers**.

Adding ringing tones for contacts

When a contact or group member calls you, the phone plays the chosen ringing tone (if the caller's telephone number is sent with the call and your phone recognises it).

- 1 Press  to open a contact card or go to the Groups list and select a contact group.
- 2 Select **Options**→**Ringing tone**. A list of ringing tones opens.
- 3 Select the ringing tone you wish to use for the individual contact or the selected group.

To remove the ringing tone, select **Default tone** from the list of ringing tones.

 **Tip!** Speed dialling is a quick way to call frequently used numbers. You can assign speed dialling keys to eight phone numbers. See "Speed dialling a phone number", p.21.

Voice dialling


You can make a phone call by saying a voice tag that has been added to a contact card. Any spoken words can be a voice tag.

Before using voice tags, note that:

- Voice tags are not language-dependent. They are dependent on the speaker's voice.
- You must say the name exactly as you said it when you recorded it.
- Voice tags are sensitive to background noise. Record voice tags and use them in a quiet environment.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.




Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

 **Tip!** You can synchronise your contacts to a compatible PC with Nokia PC Suite. See the CD-ROM supplied in the sales package.


💡 Example: You can use a person's name as a voice tag (for example, 'John's mobile').

💡 **Tip!** To view a list of voice tags you have defined, select **Options** → **Contacts info** → **Voice tags** in Contacts.

💡 **Tip!** To listen to, change, or delete a voice tag, open a contact card and scroll to the number that has a voice tag (indicated by ). Select **Options** → **Voice tags**. Then select either **Playback**, **Change**, or **Delete**.


Adding a voice tag to a phone number

You can have only one voice tag per contact card. You can add a voice tag to up to 50 phone numbers.

- 1 In Contacts, open the contact card to which you want to add a voice tag.
- 2 Scroll to the number to which you want to add the voice tag and select **Options** → **Add voice tag**.
- 3 Press **Start** to record a voice tag. After the starting tone, say clearly the words you want to record as a voice tag. Wait until the phone plays the recorded tag and saves it. A symbol  can be seen next to the number in the contact card indicating that a voice tag has been added to it.

Making a call by saying a voice tag

You must say the voice tag exactly as you said it when you recorded it. When you are making a call by saying a voice tag, the loudspeaker is in use. Hold the phone at a short distance away and say the voice tag clearly.

- Press and hold . A short tone is played and the note **Speak now** is displayed. The phone plays the original voice tag, displays the name and number, and dials the number of the recognised voice tag.

Camera and Gallery



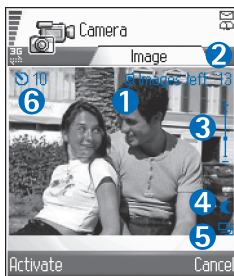
Camera

With the **Camera** application you can take pictures and record videos while on the move. The images and video are automatically saved in the Gallery application. The camera produces JPEG images, and video clips are recorded in the 3GPP file format with the .3gp file extension. You can also send images or a video in a multimedia message, as an e-mail attachment, or using a Bluetooth connection.

The Nokia 6630 device supports an image capture resolution of up to 1280 x 960 pixels. The image resolution in these materials may appear different.

Taking pictures

- 1 Press and select **Camera**. The **Camera** application opens, and you can see the view to be captured. See Figure. Press to move between **Image** and **Video** views.

 


 
1. Indicator shows where the images will be saved: to phone memory () or memory card ()
2. Shows how many images, depending on the selected picture quality, fit in the memory of your phone or the memory card.
3. The zoom indicator shows the zoom level. Press to zoom in, press to zoom out.
4. Night mode active indicator .
5. The sequence mode indicator . See p. 30.
6. The self-timer indicator shows how much time is left before a picture is taken. See p. 31.

 
Tip! You can insert an image into a contact card. See 'Saving names and numbers', p. 26.

Options before taking a picture: **Capture**, **New**, **Activate night mode** / **Deact. night mode**, **Sequence mode** / **Normal mode**, **Self-timer**, **Go to Gallery**, **Adjust**, **Settings**, **Help**, and **Exit**.

Shortcuts:

Press **1**  to activate or deactivate Night mode.

Press **4**  to activate or deactivate Sequence mode.

Press **3**  to adjust brightness.




Press **6**  to adjust contrast.




Fig. 6 Pictures taken in a sequence.

- 2 To take a picture, press . Do not move the phone before the **Camera** application starts to save the image. The image is saved automatically in the **Images** folder of Gallery. See 'Gallery', p. 33.

When taking a picture:

- It is recommended to use both hands to keep the camera still.
- To take images or record video in a dark environment, use the Night mode. If you are using the Night mode, the exposure time is longer and the camera needs to be kept still longer.
- To adjust brightness or contrast before taking a picture, select **Options**→**Adjust**→**Brightness** or **Contrast**.
- The resolution of a zoomed picture is lower than that of a non-zoomed picture, but the image remains the same size. You may notice the difference in image quality if viewed on a PC, for example.
- **Camera** goes into battery saving mode if there are no key presses within a minute. To continue taking pictures, press .


After the image has been taken:

- If you do not want to keep the image, press **C**.
- To return to the viewfinder to take a new picture, press .
- To send the image **via Bluetooth**, **via e-mail**, or **Via multimedia**, press **L**. For more information see the 'Messaging' chapter, p. 38 and 'Bluetooth connection', p. 70.
- To set the picture as wallpaper in the standby mode, select **Options**→**Set as wallpaper**.

Taking pictures in a sequence

Select **Options**→**Sequence mode** to set the camera to take 6 pictures in a sequence. After the pictures have been taken, they are automatically saved in the Gallery, and they are shown in a grid. See Fig. 6.

You in the picture – self-timer





 
Use the self-timer to delay the taking of a picture so that you can include yourself in the picture. Select the self-timer delay: **Options**→**Self-timer**→**10 seconds**, **20 seconds**, or **30 seconds**. Press **Activate**. You can see the self-timer indicator () blink and hear a beep when the timer is running. The camera will take the picture after the selected delay has elapsed.

Adjusting camera settings

- 1 Select **Options**→**Settings**→**Image**.
- 2 Scroll to the setting you want to change:
 - **Image quality** – **High**, **Normal**, and **Basic**. The better the image quality, the more memory the image consumes. The resolution of a zoomed picture is lower than that of a non-zoomed picture, but the image remains the same size. You may notice the difference in image quality if viewed on a PC, for example. If you are going to print the image, select **High** or **Normal** image quality.
 - **Show captured image** – Select **Yes** if you want to see the captured image after it has been taken or **No** if you want to continue taking pictures immediately.
 - **Image resolution** – Select the resolution you want to use for the images you are going to take.
 - **Default image name** – Set a default name for the images you are going to take. You can replace date with your own text (for example, 'Holiday_2004').
 - **Memory in use** – Select where to store your images.

 
Glossary: Resolution is a measure of sharpness and clarity of an image. Resolution refers to the number of pixels in an image. The more pixels, the more detailed the picture is, and the more memory it consumes.


Recording videos

 
- 1 Press  and select **Camera**.
- 2 Press   to move between **Image** and **Video** views. Open the **Video** view. An indicator shows where the video will be saved: to phone memory () or memory card ().



Options before recording a video: **Record**, **New**, **Activate night mode** / **Deact. night mode**, **Mute** / **Unmute**, **Go to Gallery**, **Adjust**, **Settings**, **Help**, and **Exit**.

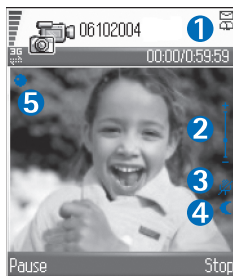
Shortcuts:

Press **1**  to activate or deactivate Night mode.



Press **3**  to adjust brightness.


Press **6**  to adjust contrast.


3 Press  to start recording. The record icon  is shown.






1. The elapsed time / time left with the current video length setting.

2. The zoom indicator shows the zoom level. Press  to zoom in on your subject before or during recording. Press  to zoom out.

3. Microphone muted indicator .




4. Night mode active indicator .

To pause recording at any time, press . The pause icon  starts to blink on the display. Press  again to resume recording.

Video recording is automatically stopped if recording is set to pause and there are no key presses within a minute.

4 Press **Stop** to stop recording. The video clip is automatically saved to the **Video clips** folder of the Gallery. See 'Gallery', p. 33.

After a video clip has been recorded:

- To immediately play the video clip you just recorded, select **Options**→**Play**.
- If you do not want to keep the video, press .
- To return to the viewfinder to record a new video, press .
- To send the video **via Bluetooth**, **via e-mail**, or **Via multimedia**, press . For more information see the 'Messaging' chapter, p. 38 and 'Bluetooth connection', p. 70.

Adjusting video recorder settings

Select **Options**→**Settings**→**Video** and the setting you want to change:

- **Length** - If you select **Maximum**, the length of the video recording is restricted to one hour per clip. Select **Short** to record video clips up to 300 kB, which is approximately 30 seconds in duration, so that they can be conveniently sent as a multimedia message


to a compatible device. Some networks, however, may only support sending of multimedia messages with the maximum size of 100 kB.

- [Video resolution](#), [Default video name](#) and [Memory in use](#).



Gallery



In the [Gallery](#) application you can store and organise your images, sound clips, playlists, video clips, streaming links, and .ram files.


Select [Images](#) , [Video clips](#) , [Tracks](#) , [Sound clips](#) , [Links](#) , or [All files](#) , and press  to open it.


You can browse, open, and create folders; and mark, copy and move items to folders. Sound clips, video clips, .ram files, and streaming links are opened and played in the RealPlayer application. See 'RealPlayer™', p. 35.

Viewing images

Pictures taken with the [Camera](#) application are stored in the Gallery. Images can also be sent to you in a multimedia message, as an e-mail attachment, or through Bluetooth. To be able to view a received image in Gallery, you need to save it in the phone memory or on a memory card.

Open the [Images](#) folder  in the Gallery to start the image viewer, select an image, and press  to view it.


 **Tip!** You can transfer images from your phone to a compatible PC with Nokia Phone Browser available in Nokia PC Suite. See the CD-ROM supplied in the sales package.


 Options when viewing an image: [Send](#), [Set as wallpaper](#), [Rotate](#), [Zoom in / Zoom out](#), [Full screen](#), [Delete](#), [Rename](#), [View details](#), [Add to 'Go to'](#), [Help](#), and [Exit](#).

Media




Video editor

To create custom video clips, press  and select **Media**→**Vid.editor**. You can create custom video clips by combining and trimming video clips, and adding sound clips, transitions, and effects. Transitions are visual effects that you can add in the beginning and end of the video or between the video clips.

 **Tip!** To take a snapshot of a video clip, select **Options**→**Take screen shot** in the Play view, Edit Preview view or in the Cut view.

Editing video, sound, and transitions

- 1 Mark and select one or more video clips.
- 2 Select **Options**→**Edit**. In the Edit video view, you can insert video clips to make a custom video clip, and edit the clips by trimming and adding effects. You can add sound clips and change their duration.
- 3 Select **Save** to save your video. You can define the **Memory in use** in the **Settings**. The default is the phone memory.

 **Tip!** If you want to send a video clip that is over the maximum multimedia message size allowed by your service provider, you can send the clip using Bluetooth. 'Sending data using Bluetooth', p. 71. You can also transfer your videos using Bluetooth into your Bluetooth-enabled personal computer, or by using a memory card reader (internal/external).



Movie director

To create muvees, press and select **Media**→**Movie**. muvees are short, edited video clips that can contain video, music and text. **Quick muvee** is created automatically by the Movie director after you have selected the style for the muvee. Movie director uses the default music and text associated with the chosen style. Every style has, for example, its own font style, colour, music, and pace. To **Custom muvee** you can select your own video and music clips, images and style, and you can also add an opening and closing message. muvees can be sent using MMS.

Open **Movie**, and press or to move between the and views. You can also return to the main view from the view by pressing **Done**.

The view contains a list of video clips that you can **Play**, **Send**, **Rename**, and **Delete**.



Image manager

To browse your images visually, press and select **Media**→**Image mgr**. See Fig. 7.



Recorder

Press and select **Media**→**Recorder** to record telephone conversations and voice memos. If you are recording a telephone conversation, both parties will hear a tone every five seconds during recording.



RealPlayer™

Press and select **Media**→**RealPlayer**. With RealPlayer™, you can play video clips, sound clips, and playlists, or stream media files over the air. A streaming link can be



Tip! In the **Settings** view you can define the **Memory in use**, **Resolution** and the **Default muvee name**.



Tip! To download new styles to your phone, select **Style downloads** from the **Movie director** main view.

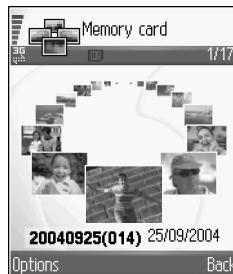







Fig. 7 Images viewed in Image manager.

 Options in RealPlayer when a clip is selected: **Play**, **Play in full scr./Continue**, **Continue in full scr.;** **Stop**, **Mute/Unmute**, **Clip details**, **Send**, **Settings**, **Help**, and **Exit**.


Icons:


-  - Repeat,
-  - Random,
-  - Repeat and random,
-  - Loudspeaker muted

activated when you are browsing Web pages, or it can be stored in the phone memory or memory card.

RealPlayer supports files with the extensions such as .aac, .awb, .mid, .mp3 and .wav. However, RealPlayer does not necessarily support all file formats or all the variations of file formats. For example, RealPlayer will attempt to open all .mp4 files, but some .mp4 files may include content that is not compliant with 3GPP standards and, therefore, is not supported by this phone.

Playing video or sound clips

- To play a media file stored in phone memory or memory card, select **Options** → **Open** and select:
 - Most recent clips** - To play one of the last six files played in RealPlayer,
 - Saved clip** - To play a file saved in the Gallery. See 'Gallery', p. 33.
- Scroll to a file, and press  to play the file.

 **Tip!** To view a video clip in full screen mode, press **2**_{abc}. Press again to change back to normal screen mode.

Streaming content over the air

To stream live content, you must first configure your default access point. See 'Data connections and access points', p. 78. Many service providers require you to use an Internet access point (IAP) for your default access point. Other service providers allow you to use a WAP access point. Contact your service provider for more information.



Note: In RealPlayer, you can only open an rtsp:// URL address. However, RealPlayer will recognise an http link to a .ram file.

To stream content over the air, select a streaming link saved in the Gallery, on a Web page, or received in a text message or multimedia message. Before live content begins streaming, your phone will connect to the site and start loading the content.

Receiving RealPlayer settings

You may receive RealPlayer settings in a special text message from the network operator or service provider. See 'Receiving logos, tones, business cards, calendar entries, and settings', p. 48. For more information, contact your network operator or service provider.

Shortcuts during play:

To fast forward, press and hold .

To rewind through the media file, press and hold .


To mute the sound, press and hold until the indicator is displayed.




To turn on the sound, press and hold until you see the indicator.




Messaging

Options in the Messaging main view: **Open**, **Create message**, **Connect** (shown if you have defined mailbox settings) / **Disconnect** (shown if a connection to mailbox is active), **SIM messages**, **Cell broadcast**, **Service command**, **Settings**, **Help**, and **Exit**.

 **Tip!** Organise your messages by adding new folders under **My folders**.

 **Tip!** When you have opened any of the default folders, you can switch between the folders by pressing  or .

Press  and select **Messaging**. In Messaging, you can create, send, receive, view, edit, and organise text messages, multimedia messages, e-mail messages, and special text messages containing data. You can also receive messages and data through Bluetooth, receive Web service messages, cell broadcast messages as well as send service commands.



Note: These functions can only be used if they are supported by your network operator or service provider. Only devices that offer compatible multimedia message, or e-mail features can receive and display these messages. Some networks might provide the recipient device with a Web page link to view multimedia messages.

When you open Messaging, you can see the **New message** function and a list of folders:



Inbox - contains received messages except e-mail and cell broadcast messages. E-mail messages are stored in the **Mailbox**.



My folders - for organising your messages into folders.



Mailbox - In Mailbox you can connect to your remote mailbox to retrieve your new e-mail messages or view your previously retrieved e-mail messages offline. See 'Settings for e-mail', p. 54.



Drafts - stores draft messages that have not been sent.



Sent - stores the last 20 messages that have been sent excluding messages sent using Bluetooth. To change the number of messages to be saved, see 'Other settings', p. 57.




Outbox - is a temporary storage place for messages waiting to be sent.



Reports - You can request the network to send you a delivery report of the text messages and multimedia messages you have sent (network service). Receiving a delivery

report of a multimedia message that has been sent to an e-mail address might not be possible.

- To enter and send service requests (also known as USSD commands), such as activation commands for network services, to your service provider, select **Messaging**→**Options**→**Service command** in the main view of Messaging.
- Cell broadcast is a network service that allows you to receive messages on various topics, such as weather or traffic conditions from your service provider. For available topics and relevant topic numbers, contact your service provider. In the main view of Messaging, select **Options**→**Cell broadcast**. In the main view you can see the status of a topic, a topic number, name, and whether it has been flagged (🚩) for follow-up. Cell broadcast messages cannot be received in WCDMA networks. A packet data connection may prevent cell broadcast reception.


 Options in Cell broadcast: **Open**, **Subscribe /Unsubscribe**, **Hotmark / Remove hotmark**, **Topic, Settings**, **Help**, and **Exit**.

Writing text

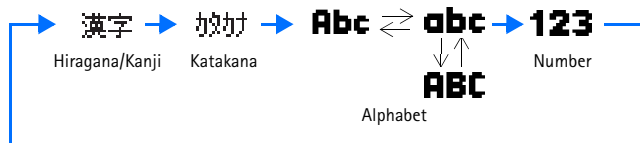
The input mode indicator is displayed at the top right of the text input screen. If you select English in the phone language menu, the input mode is alphabet by default. If you select Japanese, the input mode is Hiragana/Kanji by default. See 'Phone settings', p.75.


If you press 文字 # repeatedly when writing text, the input mode switches between English and Japanese as shown in the following diagram regardless of the language selected in the phone language menu.

Icons: **Abc** means that the first letter of the word is written in upper case. Depending on the last character you keyed in, **Abc**, **abc** or **ABC** is displayed.

Tip! Alternatively, press  when you are writing, and select the desired input mode.

Switching between input modes



Tip! Press , and select **Full width** to key in full-width characters when the text input mode is Katakana, alphabet, or number. The input mode icon for full width is displayed respectively. Select **Half width** to key in half-width characters.


Keys and corresponding Hiragana/Kanji and Katakana

Keys	Hiragana/Kanji mode (full width)	Katakana mode (half/full width)	Alphabet mode (half/full width)	Number mode (half/full width)
1 あ@ あ	あいうえお あいうえお	アイウエオ アイウエオ	Symbols	1
か 2 abc か	かきくけこ	カキクケコ	ABCabc	2
さ 3 さ	さしすせそ	サシスセソ	DEFdef	3
た 4 た	たちつてと	タチツテト	GHIghi	4
な 5 jkl な	なにぬねの	ナニヌネノ	JKLjkl	5
は 6 は	はひふへほ	ハヒフヘホ	MNOmno	6
ま 7 ま	まみむめも	マミムメモ	PQRSpqrs	7
や 8 tuv や	やゆよやゆよ	ヤユヨヤユヨ	TUVtuv	8
ら 9 ら	らりるれろ	ラリルレロ	WXYZwxyz	9
わ 0 わ	わをんー。!? Line feed, space	ワヲンー。!? Line feed, space	Space, linefeed	0

*+ 記号	ゝ っ (Voiced sound mark and semi-voiced sound mark) Small Hiragana characters List of symbols List of pictographs	ゝ っ (Voiced sound mark and semi-voiced sound mark) Small Katakana characters List of symbols List of pictographs	List of symbols List of pictographs	List of symbols List of pictographs
文字 #	Switching input mode	Switching input mode	Switching input mode	Switching Input mode


Tips on text input

- To activate or deactivate the predictive input mode, press and hold 文字 # in the alphabet or Hiragana/Kanji mode.
- To delete the character to the left of the cursor, press C. Press and hold C to clear more than one character.
- To move the cursor, use the ⬅️ key.
- To insert a number, press and hold the desired number key.
- Press *+ 記号 once to open a list of special characters. Use ⬅️ to move through the list, and press ➡️ to select the desired character.
- Press *+ 記号 twice to open a list of pictographs.


💡 **Tip!** Alternatively, press  when you are writing, and select **Insert symbol**, or **Insert pictograph**.

Japanese text input

 

Japanese predictive text input

Check that  漢字 is displayed at the top right of the text input screen.

- To key in Hiragana characters, press the number keys.
A list of predictive conversion candidates is displayed. Candidates are narrowed down as you key in more characters to search for the desired word.
- Use ⬅️ to move through the list, and press ➡️ to select the desired word or phrase.


💡 **Tip!** Alternatively, press  when you are writing, and select **Japanese predict. on** or **English prediction on** to activate the predictive text input respectively.













The phone predicts the next word or phrase based on what you entered. The next list of predictive conversion candidates is displayed automatically. If you key in a character, a new list of candidates is displayed.

- To delete the list of candidates, press , or press [Cancel](#).
- If the word that you want is not in the list, press [Convert](#). If further conversion is necessary, press  to display the window of conversion candidates. The counter at the top right of the window shows the number of conversion candidates in the list.

Converted characters are automatically memorised by the user dictionary. Words that you added to the user dictionary or you frequently use, appear high in the list of conversion candidates. To reset the word order that appears in the list to its original value, see 'Phone settings', p.75.

Japanese traditional text input

Check that  漢字 is shown at the top right of the text input screen.

- 1 To key in Hiragana characters, press the number keys.
Press  if conversion is not necessary.
- 2 Press  to convert the highlighted characters. Press  again to display the list of conversion candidates. Press  or  to move through the list, and press  to select the desired character.
 - Highlighted texts are subject to conversion. When the texts are converted, the colour of highlight is changed.
 - If the result of conversion is not correct when converting a phrase, press  or  to change the conversion range,  to convert, and  to confirm the word.
 - If the phrase conversion is done correctly by pressing  once, press and hold  to confirm the whole phrase quickly.

Code input

Characters, symbols, and numbers can be entered using four-digit codes in the Kuten Code List on P.89.

- 1 Press , and select [Insert Kuten code](#).

- 2 Key in the four-digit code in the Kuten Code List on P.89 and press **OK**.



Saving words in User dictionary

You can save words with readings in Hiragana characters to the User dictionary. Saved words are used for character conversion. Key in the reading you saved with the word when you are writing texts.

- 1 To add a word to the dictionary, press **ⓘ** and select **Tools→User dict.**
- 2 Select **Options→New word.**
- 3 Key in a word or phrase in the **Word** field.
- 4 Press **○** to move the cursor to the **Reading** field, and key in the reading in Hiragana characters. There are invalid characters to enter as the first character in the reading field when saving the word, for example, small Hiragana characters.

Tip! When you are writing texts, press **ⓘ**, and select **Save word**.

Options after saving a word: **Open**, **New word**, **Delete**, **Mark / Unmark**, **Help**, and **Exit**.

English text input

English traditional text input

The indicator **Abc** is shown on the top right of the display when you are writing text using English traditional text input.

- Press a number key (**1** **9**) repeatedly until the desired character appears.
- If the next letter is located on the same key as the present one, wait until the cursor appears (or press **○** to end the time-out period), and enter the letter.
- The most common punctuation marks are available under **1** . Press **1** repeatedly to reach the desired punctuation mark.
- To insert a space, press **わ** **○** or **○** . To move the cursor to the next line, press **わ** **○** twice or press **○** once.

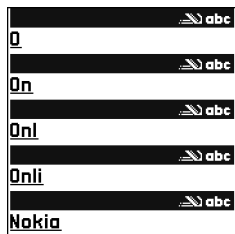






 





Fig. 8 The word match is evolving, wait until you have keyed in the whole word before you check the results.


English predictive text input

You can enter any letter with a single keypress. The predictive text input is based on a built-in English dictionary to which you can also add new words. When the English dictionary becomes full, the latest added word replaces the oldest.










- 1 To activate the English predictive text input, press , and select **English prediction on**. This will activate predictive text input for all editors in the phone. The indicator  is shown on the top right of the display when you are writing text using predictive text input.
- 2 To write the desired word, press the keys $\text{か } 2^{\text{abc}}$ - $\text{wxyz } 9$. Press each key only once for one letter. For example, to write 'Nokia' when English predictive text input is selected, press $\text{mn} 6$ for N, $\text{mn} 6$ for o, $\text{ts } 5$ for k, $\text{gh} 4$ for i, and $\text{か } 2^{\text{abc}}$ for a. See the Fig. 8. The word suggestion changes after each key press.
- 3 When you have finished writing the word and it is correct, confirm it by pressing  or add a space by pressing $\text{wa } 0$  or .
 - If the word is not correct, press $\text{*+ } 0$ , , or  repeatedly to view the matching words the dictionary has found one by one. Or, press  and select **English prediction** → **Matches**.
 - If the ? character is shown after the word, the word you intended to write is not in the English dictionary. To add a word to the English dictionary, press **Spell**, enter the word (up to 32 letters) using traditional text input, and press **OK**. The word is added to the English dictionary. When the English dictionary becomes full, a new word replaces the oldest added word.
- 4 Start writing the next word.

 **Tip!** To set the English predictive text input on or off, press and hold $\text{文字 } \#$ in the alphabet mode.

Turning predictive text input off

Press , and select **English prediction** → **Off** to turn the English predictive text input off for all editors in the phone.

Copying text to clipboard

- 1 To select letters and words, press and hold . At the same time, press  or . As the selection moves, text is highlighted.
- 2 To copy the text to clipboard, while still holding , press **Copy**.
- 3 To insert the text into a document, press and hold , and press **Paste**. Or, press  once, and select **Paste**.
- To select lines of text, press and hold . At the same time press  or .
- To remove the selected text from the document, press **C**.


Writing and sending messages



The appearance of a multimedia message may vary depending on the receiving device.

Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred, or forwarded.

Before you can create a multimedia message or write an e-mail, you must have the correct connection settings in place. See 'Receiving MMS and e-mail settings', p. 47 and 'Settings for e-mail', p. 54.

- 1 Select **New message**. A list of message options opens.
 - **Text message** - to send a text message.
 - **Multimedia message** - to send a multimedia message (MMS).
 - **E-mail** - to send an e-mail. If you have not set up your e-mail account, you will be prompted to do so.

 **Tip!** You can start to create a message from any application that has the option **Send**. Select a file (an image, text) to be added to the message, and select **Options** → **Send**.

 **Tip!** Scroll to a contact, and press  to mark it. You can mark several recipients at a time.

Options in the message editor: **Send**, **Add recipient**, **Insert**, **Attachments** (e-mail), **Create presentation** (MMS), **Insert object** (MMS), **Insert new** (MMS), **Preview** (MMS), **Objects** (MMS), **Remove** (MMS), **Delete**, **Check contacts**, **Message details**, **Sending options**, **Help**, and **Exit**.



Fig. 9 Creating a multimedia message.

- 2 Press to select recipients from Contacts, or enter the recipient's phone number or e-mail address. Press *+ to add a semicolon (;) that separates the recipients. You can also copy and paste the number or address from the Clipboard.
- 3 Press to move to the message field.
- 4 Write the message.



Note: Your device supports the sending of text messages beyond the normal 160-character limit. If your message exceeds 160 characters, it will be sent as a series of two or more messages and sending may cost you more. In the navigation bar, you can see the message length indicator counting backwards from 160. For example, 10 (2) means that you can still add 10 characters for the text to be sent as two messages. Some characters may take more space than others.

- To add a media object to a multimedia message, select **Options**→**Insert object**→**Image**, **Sound clip** or **Video clip**. When sound is added, the icon is shown in the navigation bar.



Tip! When you send a multimedia message to an e-mail address or a device that supports the receiving of large images, use the larger image size. If you are not sure of the receiving device, or the network does not support sending large file, it is recommended that you use a smaller image size or a sound clip that is no longer than 15 seconds. To change the setting, select **Options**→**Settings**→**Multimedia message**→**Image size** in the Messaging main view.

If you select **Insert new**→**Sound clip**, Recorder opens, and you can record a new sound. Press **Select**, the new sound is automatically saved, and a copy is inserted in the message. Select **Options**→**Preview** to see what the multimedia message looks like.

- To add an attachment to an e-mail, select **Options**→**Insert**→**Image**, **Sound clip**, **Video clip** or **Note**. E-mail attachments are indicated by in the navigation bar.
- 5 To send the message, select **Options**→**Send**, or press .



Note: E-mail messages are automatically placed in Outbox before sending. If sending does not succeed, the e-mail is left in the Outbox with the status **Failed**.



Tip! In Messaging you can also create presentations and send them in a multimedia message. In Multimedia message editor view, select **Options**→**Create presentation** (shown only if **MMS creation mode** is set to **Guided** or **Free**). See 'Settings for multimedia messages', p. 53.

Receiving MMS and e-mail settings

You may receive the settings in a text message from your network operator or service provider. See 'Receiving logos, tones, business cards, calendar entries, and settings', p. 48.

For availability of and subscription to data services, please contact your network operator or service provider. Follow the instructions given by your service provider.

Entering the MMS settings manually:

- 1 Select **Tools**→**Settings**→**Connection**→**Access points** and define the settings for a multimedia messaging access point. See 'Connection settings', p. 78.
- 2 Select **Messaging**→**Options**→**Settings**→**Multimedia message**. Open **Access point in use** and select the access point you created to be used as the preferred connection. See also 'Settings for multimedia messages', p. 53.

Before you can send, receive, retrieve, reply to, and forward e-mail, you must:

- Configure an Internet access point (IAP) correctly. See 'Connection settings', p. 78.
- Define your e-mail settings correctly. See 'Settings for e-mail', p. 54. You need to have a separate e-mail account. Follow the instructions given by your remote mailbox and Internet service provider (ISP).



Inbox – receiving messages



Tip! To send files other than sounds and notes as attachments, open the appropriate application, and select **Send**→**Via e-mail**, if available.

Inbox icons:





- unread text message,



- unread multimedia message, and





- data received through Bluetooth.

When you receive a message,  and the text **1 new message** are shown in the standby mode. Press **Show** to open the message. To open a message in Inbox, scroll to it and press .

Receiving multimedia messages



Important: Multimedia message objects may contain viruses or otherwise be harmful to your device or PC. Do not open any attachment if you are not sure of the trustworthiness of the sender.


When you open a multimedia message () , you may see an image and a message, and simultaneously listen to a sound through the loudspeaker ( is shown if sound is included). Click the arrow in the icon to listen to the sound.

To see what kinds of media objects have been included in the multimedia message, open the message, and select **Options**→**Objects**. You can choose to save a multimedia object file in your phone or send it, for example, through Bluetooth to another compatible device.


You may also receive multimedia presentations. You can view these presentations by selecting **Options**→**Play presentation**.

Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred, or forwarded.

Receiving logos, tones, business cards, calendar entries, and settings

Your phone can receive many kinds of text messages that contain data () , also called Over-The-Air (OTA) messages.

- **Configuration message** - You may receive a text message service number, voice mailbox number, Internet access point settings, access point login script settings, or e-mail settings from your network operator, service provider, or company information

 **Tip!** If you receive a vCard file that has a picture attached, the picture is saved to Contacts.

management department in a configuration message. To save the settings, select **Options**→**Save**.

- **Business card** - To save the information to Contacts, select **Options**→**Save business card**. Certificates or sound files attached to the business card are not saved.
- **Ringtone** - To save the ringing tone, select **Options**→**Save**.
- **Operator logo** - For the logo to be shown in the standby mode instead of the network operator's own identification, select **Options**→**Save**.
- **Calendar entry** - To save the invitation, select **Options**→**Save to Calendar**.
- **Web message** - To save the bookmark to the bookmarks list in Web, select **Options**→**Add to bookmarks**. If the message contains both access point settings and bookmarks, to save the data, select **Options**→**Save all**.
- **E-mail notification** - Tells you how many new e-mails you have in your remote mailbox. An extended notification may list more detailed information.

Receiving Web service messages

Web service messages (📡) are notifications (for example, news headlines) and may contain a text message or a link. For availability and subscription, contact your service provider.




My folders


In My folders, you can organise your messages into folders, create new folders, and rename and delete folders.



Mailbox

If you select **Mailbox** and have not set up your e-mail account, you are prompted to do so. See 'Settings for e-mail', p. 54. When you create a new mailbox, the name you give to the

 **Tip!** To change the default access point settings for multimedia messaging, select **Messaging**→**Options**→**Settings**→**Multimedia message**→**Access point in use**.

 **Tip!** You can use texts in the Templates folder to avoid rewriting messages that you send often.

mailbox replaces **Mailbox** in the Messaging main view. You can have several mailboxes (up to six).

Opening the mailbox

When you open the mailbox, you can choose whether you want to view the previously retrieved e-mail messages and e-mail headings offline or connect to the e-mail server.

When you scroll to your mailbox and press , the phone asks you if you want to **Connect to mailbox?**

- Select **Yes** to connect to your mailbox and retrieve new e-mail headings or messages. When you view messages online, you are continuously connected to a remote mailbox using a packet data connection. See also 'Essential indicators', p. 13 and 'Connection settings', p. 78.
- Select **No** to view previously retrieved e-mail messages offline. When you view e-mail messages offline, your phone is not connected to the remote mailbox.

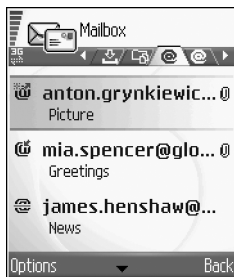


Fig. 10 Mailbox with different status icons.

Retrieving e-mail messages


If you are offline, select **Options**→ **Connect** to start a connection to a remote mailbox.





Important: E-mail messages may contain viruses or otherwise be harmful to your device or PC. Do not open any attachment if you are not sure of the trustworthiness of the sender.

- 1 When you have an open connection to a remote mailbox, select **Options**→ **Retrieve e-mail**:
 - **New** - to retrieve all new e-mail messages to your phone.
 - **Selected** - to retrieve only the e-mail messages that have been marked.
 - **All** - to retrieve all messages from the mailbox.

To stop retrieving messages, press **Cancel**.

- 2 After you have retrieved the e-mail messages, you can continue viewing them online. Or, select **Options**→**Disconnect** to close the connection and view the e-mail messages offline.
- 3 To open an e-mail message, press . If the e-mail message has not been retrieved (arrow in the icon is pointing outwards) and you are offline, you will be asked if you want to retrieve this message from the mailbox.

To view e-mail attachments, open a message that has the attachment indicator , and select **Options**→**Attachments**. If the attachment has a dimmed indicator, it has not been retrieved to the phone; select **Options**→**Retrieve**. In the Attachments view, you can retrieve, open, or save attachments. You can also send attachments using Bluetooth.

-  **Tip!** If your mailbox uses the IMAP4 protocol, you can define the number of messages to retrieve. With the POP3 protocol, the options are e-mail headers only, partially (kB), or messages and attachments.

Deleting e-mail messages

- To delete the contents of an e-mail message from the phone while still retaining it in the remote mailbox, select **Options**→**Delete**→**Phone only**.




Note: The phone mirrors the e-mail headings in the remote mailbox. Although you delete the message content, the e-mail heading stays in your phone. If you want to remove the heading as well, you must first delete the e-mail message from your remote mailbox, and then make a connection from your phone to the remote mailbox again to update the status.


- To delete an e-mail from both the phone as well as from the remote mailbox, select **Options**→**Delete**→**Phone and server**.





Note: If you are offline, the e-mail is deleted first from your phone. During the next connection to the remote mailbox, it is automatically deleted from the remote mailbox. If you are using the POP3 protocol, messages marked to be


E-mail status icons:



 - new e-mail (offline or online mode), the content has not been retrieved to your phone.


 - new e-mail, the content has been retrieved to your phone.

 - e-mail message has been read.


 - e-mail heading that has been read and the message content has been deleted from the phone.

 **Tip!** To copy an e-mail from the remote mailbox to a folder under My folders, select **Options**→**Copy to folder**. Select a folder from the list, and press **OK**.

 **Tip!** You can also leave your mailbox connection open and the new e-mails (**Headers only** as default) will be retrieved from the remote mailbox to your phone automatically (only if IMAP IDLE function is supported by your server). To leave the Messaging application open in the background, press  twice. Leaving the connection open may increase your call costs due to the data traffic.

 Options when editing text message centre settings: **Edit**, **New msg. centre**, **Delete**, **Help**, and **Exit**.

deleted are removed only after you have closed the connection to the remote mailbox.

- To cancel deleting an e-mail from both the phone and server, scroll to an e-mail that has been marked to be deleted during the next connection (), and select **Options**→**Undelete**.

Disconnecting from the mailbox

When you are online, select **Options**→**Disconnect** to end the packet data connection to the remote mailbox. See also 'Essential indicators', p. 13.


Viewing e-mail messages when offline

When you open **Mailbox** the next time and you want to view and read the e-mail messages offline, answer **No** to the **Connect to mailbox?** query. You can read the previously retrieved e-mail headings or the retrieved e-mail messages or both. You can also write new, reply to, or forward e-mail to be sent the next time you connect to the mailbox.



Outbox – messages waiting to be sent

Outbox is a temporary storage place for messages waiting to be sent.

 **Example:** Messages are placed in Outbox, for example, when your phone is outside network coverage. You can also schedule e-mail messages to be sent the next time you connect to your remote mailbox.

Messaging settings

Settings for text messages

Select **Messaging**→**Options**→**Settings**→**Text message**.


- **Message centres** – Lists all the text message service centres that have been defined.

- **Msg. centre in use** - Select which message centre is used for delivering text messages.
- **Receive report** (network service) - To request the network to send delivery reports on your messages. When set to **No**, only the **Sent** status is shown in Log. See 'Log', p. 23.
- **Message validity** - If the recipient of a message cannot be reached within the validity period, the message is removed from the text message service centre. The network must support this feature. **Maximum time** is the maximum amount of time allowed by the network.
- **Message sent as** - Change this option only if you are sure that your service centre is able to convert text messages into these other formats. Contact your network operator.
- **Preferred connection** - You can send text messages through the normal GSM network or through packet data, if supported by the network. See 'Connection settings', p. 78.
- **Reply via same ctr.** (network service) - Choose **Yes**, if you want the reply message to be sent using the same text message service centre number.

Settings for multimedia messages

Select **Messaging**→ **Options**→ **Settings**→ **Multimedia message**.

- **Image size** - Define the size of the image in a multimedia message. The options are **Original** (shown only when the **MMS creation mode** is set to **Guided** or **Free**), **Small** and **Large**. Selecting **Original** will increase the size of the multimedia message.
- **MMS creation mode** - If you select **Guided**, the phone will inform you if you try to send a message that may not be supported by the recipient. By selecting **Restricted** the phone will prevent you from sending messages that are not supported.
- **Access point in use (Must be defined)** - Select which access point is used as the preferred connection for the multimedia message centre.
- **Recept. in home net.** - Select whether you want the reception of the MMS messages in the home network to be **Automatic**, **Manual** or **Off**. If you have selected **Manual** the multimedia messaging centre will save the message. To retrieve the message later, set to **Automatic**.

- **Reception if roaming** - Select how you want the MMS messages to be retrieved outside the home network.
When you are outside your home network, sending and receiving multimedia messages may cost you more. If **Reception if roaming** → **Automatic** has been selected, your phone can automatically make an active packet data connection to retrieve the message. Select **Off** from **Reception if roaming** if you do not want to receive multimedia messages when you are outside your home network.
- **Allow anon. messages** - Select **No** if you want to reject messages coming from an anonymous sender.
- **Receive adverts** - Define whether you want to receive multimedia message advertisements or not.
- **Receive report** (network service) - Set to **Yes** if you want the status of the sent message to be shown in the Log.
 **Note:** Receiving a delivery report of a multimedia message that has been sent to an e-mail address might not be possible.
- **Deny report sending** - Choose **Yes** if you do not want your phone to send delivery reports of received multimedia messages.
- **Message validity** - If the recipient of a message cannot be reached within the validity period, the message is removed from the multimedia messaging centre. The network must support this feature. **Maximum time** is the maximum amount of time allowed by the network.

Settings for e-mail

Select **Messaging** → **Options** → **Settings** → **E-mail**, or in the Mailbox main view, select **Options** → **E-mail settings**, and select:

Mailbox in use - Select which mailbox you want to use for sending e-mail.

Mailboxes - Opens a list of mailboxes that have been defined. If no mailboxes have been defined, you will be prompted to do so. Select a mailbox to change the settings:

Mailbox settings

- **Mailbox name** - Enter a descriptive name for the mailbox.
- **Access point in use (Must be defined)** - Choose an Internet access point (IAP) for the mailbox. See 'Connection settings', p. 78.
- **My e-mail address (Must be defined)** - Enter the e-mail address given to you by your service provider. Replies to your messages are sent to this address.
- **Outgoing mail server (Must be defined)** - Enter the IP address or host name of the mail server that sends your e-mail.
- **Send message** - Define how e-mail is sent from your phone:
 - Immediately** - The device starts to establish a connection to the mailbox after you have selected **Send message**.
 - During next conn.** - E-mail is sent when the connection to the remote mailbox is available.
- **User name** - Enter your user name, given to you by your service provider.
- **Password** - Enter your password. If you leave this field blank, you will be prompted for the password when you try to connect to your remote mailbox.
- **Incoming mail server (Must be defined)** - Enter the IP address or host name of the mail server that receives your e-mail.
- **Mailbox type** - Defines the e-mail protocol that your remote mailbox service provider recommends. The options are **POP3** and **IMAP4**. This setting can be selected only once and cannot be changed if you have saved or exited from the mailbox settings. If you are using the POP3 protocol, e-mail messages are not updated automatically in online mode. To see the latest e-mail messages, you must disconnect and make a new connection to your mailbox.
- **Security (ports)** - Used with the POP3, IMAP4, and SMTP protocols to secure the connection to the remote mailbox.
- **APOP secure login** (not shown if IMAP4 is selected for **Mailbox type**) - Used with the POP3 protocol to encrypt the sending of passwords to the remote e-mail server while connecting to the mailbox.

User settings

- **E-mails to retrieve** (not shown if the e-mail protocol is set to POP3) – Define how many new e-mails will be retrieved to mailbox.
- **Retrieve** – Define which parts of the e-mails will be retrieved: **Headers only**, **Partially (kB)**, or **Msgs. & attaches**. (not shown if the e-mail protocol is set to IMAP4).
- **Retrieve attachments** (not shown if the e-mail protocol is set to POP3) – Choose whether you want to retrieve e-mail with or without attachments.
- **Subscribed folders** (not shown if the e-mail protocol is set to POP3) – You can subscribe other folders in remote mailbox as well and retrieve content from those folders.
- **Send copy to self** – Select **Yes** to save a copy of the e-mail to your remote mailbox and to the address defined in **My e-mail address**.
- **Include signature** – Select **Yes** if you want to attach a signature to your e-mail messages.
- **My name** – Enter your own name here. Your name will replace your e-mail address in the recipient's phone in case the recipient's phone is supporting this function.

Automatic retrieval


- **Header retrieval** – When this function is on, you can define when and how often the messages will be retrieved from the mailbox.


 

 
 
 
Activating Header retrieval may increase your call costs due to the data traffic.


Other settings

Select **Messaging** and select **Options**→**Settings**→**Other**.

- **Save sent messages** - Choose if you want to save a copy of every text message, multimedia message, or e-mail that you have sent to the Sent items folder.
- **No. of saved msgs.** - Define how many sent messages will be saved to the Sent items folder at a time. The default limit is 20 messages. When the limit is reached, the oldest message is deleted.
- **Memory in use** - Choose to which memory you want to save your messages: **Phone memory** or **Memory card**.
- **E-mail notification** - Choose whether you want to see the new e-mail indications, like tone or a note, when new mail is received to the mailbox.

 **Tip!** If **Memory card** is selected, activate the Offline profile before opening the memory card slot door or removing the memory card. When the memory card is not available, messages will be saved in the phone memory.



 **Shortcut:** Press any key (    ) in any calendar view. A Meeting entry is opened, and the characters you keyed in are added to the **Subject** field.



 **Tip!** If you are editing or deleting a repeated entry, choose how you want the change to take effect: **All occurrences** - all repeated entries are deleted / **This entry only** - only the current entry will be deleted. For example, your weekly class has been cancelled. You have set the calendar to remind you every week. Select **This entry only** and the calendar will remind you again next week.


 
Calendar and To-do



Calendar – creating calendar entries

- 1 Press  and select **Organiser**→ **Calendar**.
- 2 Select **Options**→ **New entry**:
 - **Meeting** to remind you of an appointment that has a specific date and time.
 - **Memo** to write a general entry for a day.
 - **Anniversary** to remind you of birthdays or special dates. Anniversary entries are repeated every year.
- 3 Fill in the fields. Use  to move between fields.

Alarm - Select **On** and press  to fill in the **Alarm time** and **Alarm date** fields. Alarm is shown with  in the Day view. **Stopping a calendar alarm** - Press **Silence** to turn off the calendar alarm tone. The reminder text will stay on the screen. Press **Stop** to end the calendar alarm. Press **Snooze** to set the alarm to snooze.

Repeat - Press  to change the entry to be repeating ( is shown in the Day view).

Repeat until - You can set an end date for the repeated entry.

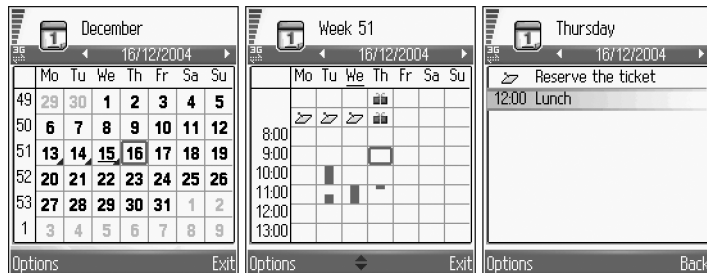
Synchronisation - **Private** - after synchronisation the calendar entry can be seen only by you and it will not be shown to others with online access to view the calendar. **Public** - the calendar entry is shown to others who have access to view your calendar online.

None - the calendar entry will not be copied to your PC when you synchronise.
- 4 To save the entry, press **Done**.



Tip! You can send calendar entries to a compatible phone. See the 'Messaging' chapter, and 'Sending data using Bluetooth', p. 71.

Calendar views



Tip! Select **Options** → **Settings** to change the view that is shown when you open the calendar or the starting day of the week.

In the Month view, dates that have calendar entries are marked with a small triangle at the right bottom corner. In the Week view, memos and anniversaries are placed before 8 o'clock.

- Icons in Day and Week views: - **Memo**, and - **Anniversary**, no icon for **Meeting**.
- To go to a certain date, select **Options** → **Go to date**. Write the date, and press **OK**.
- Press **今天 #** to jump to today.



To-do – task list

Press **📅** and select **Organiser** → **To-do** to write notes and maintain a task list.


- To add a note, press any key to start to write the task in the **Subject** field.
- To set the due date for the task, scroll to the **Due date** field, and enter a date.
- To set the priority for the to-do note, scroll to the **Priority** field, and press **🔵** to select the priority. The priority icons are **!** (**High**) and **—** (**Low**). There is no icon for **Normal**.
- To mark a task as completed, scroll to it in the To-do list, and select **Options** → **Mark as done**.
- To restore a task, scroll to it in the To-do list, and select **Options** → **Mark as not done**.

Tip! To send a calendar note, select **Options** → **Send** → **Via text message** / **Via multimedia** / **Via Bluetooth**.

Tip! You can move calendar and to-do data from many different Nokia phones to your phone or synchronise your calendar and to-do to a compatible PC using Nokia PC Suite. See the CD-ROM supplied in the sales package.




Web

Various service providers maintain pages specifically designed for mobile devices. To access these pages, press  and select **Web**. These pages use the Wireless Markup Language (WML), Extensible Hypertext Markup Language (XHTML), or Hypertext Markup Language (HTML).

Check the availability of services, pricing, and tariffs with your network operator or service provider. Service providers will also give you instructions on how to use their services.

Accessing the Web

- Save the settings that are needed to access the Web page that you want to use. See 'Receiving browser settings'.
- Make a connection to Web. See 'Making a connection', p. 61.
- Start browsing the pages. See 'Browsing', p. 62.
- End the connection to Web. See 'Ending a connection', p. 64.

 **Tip!** Settings may be available, for example, on the Web site of a network operator or service provider.

Receiving browser settings

You may receive Web service settings in a special text message from the network operator or service provider that offers the Web page. See 'Receiving logos, tones, business cards, calendar entries, and settings', p. 48. For more information, contact your network operator or service provider.

Bookmarks view



Glossary: A bookmark consists of an Internet address (mandatory), bookmark title, access point, and if the Web page requires, a user name and password.



Note: Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.



The starting page defined for the default access point. If you use another default access point for browsing, the starting page is changed accordingly.



The automatic bookmarks folder contains bookmarks (🔖) that are collected automatically when you browse pages. The bookmarks in this folder are automatically organised according to domain.



Any bookmark showing the title or Internet address of the bookmark.

Making a connection

Once you have stored all the required connection settings, you can access the pages.

- 1 Select a bookmark or write the address in the Go to field (🌐). When you write the address, matching bookmarks are shown at the top of the Go to field. Press 🔍 to select a matching bookmark.
- 2 Press ⏏ to start to download the page.

Connection security

If the security indicator 🛡 is displayed during a connection, the data transmission between the device and the internet gateway or server is encrypted.

The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

Select **Options**→**Details**→**Security** to view details about the connection, encryptions status, and information about server and user authentication.




Options in the Bookmarks view: **Open**, **Download**, **Back to page**, **Bookmark manager**, **Mark/Unmark**, **Navigation options**, **Advanced options**, **Send**, **Find bookmark**, **Details**, **Settings**, **Help** and **Exit**.





Shortcut: To start a connection, press and hold **⏏** in standby mode.



Tip! To send a bookmark, scroll to it, and select **Options**→**Send**→**Via text message**.



 Options when browsing (depend on the page you are viewing): [Open](#), [Accept](#), [Remove file](#), [Open in viewer](#), [Open Wallet](#), [Service options](#), [Bookmarks](#), [Save as bookmark](#), [View images](#), [Navigation options](#), [Advanced options](#), [Show images](#), [Send bookmark](#), [Find](#), [Details](#), [Settings](#), [Help](#), and [Exit](#).

 **Tip!** To access the Bookmarks view while browsing, press and hold down . To return to the browser view again, select [Options](#)→[Back to page](#).

Security features may be required for some services, such as banking services. For such connections you need security certificates. For more information, contact your service provider. See also 'Certif. management', p. 81.

Browsing

On a browser page, new links appear underlined in blue and previously visited links in purple. Images that act as links have a blue border around them.

- To open a link, to check boxes, and make selections, press .
- To go to the previous page while browsing, press [Back](#). If [Back](#) is not available, select [Options](#)→[Navigation options](#)→[History](#) to view a chronological list of the pages you have visited during a browsing session. The history list is cleared each time a session is closed.
- To retrieve the latest content from the server, select [Options](#)→[Navigation options](#)→[Reload](#).
- To save a bookmark, select [Options](#)→[Save as bookmark](#).
- To save a page while browsing, select [Options](#)→[Advanced options](#)→[Save page](#). You can save pages either to the phone memory or on a memory card, and browse them when offline. To access the pages later, press  in the Bookmarks view to open the [Saved pages](#) view.
- To enter a new URL address, select [Options](#)→[Navigation options](#)→[Go to web address](#).
- To open a sublist of commands or actions for the currently open page, select [Options](#)→[Service options](#).
- You can download items such as ringing tones, images, operator logos, themes, and video clips. Downloaded items are handled by the respective applications in your phone, for example, a downloaded image is saved in [Gallery](#).

Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred, or forwarded.



Important: Only install software from sources that offer adequate protection against harmful software.


- To download and view new Web service messages while browsing, select **Options**→**Advanced options**→**Read service msgs.** (shown only if there are new messages). See also 'Receiving Web service messages', p. 49.

Downloading and purchasing items

 
 
You can download items such as ringing tones, images, operator logos, themes, and video clips. These items can be provided free, or you can purchase them. Downloaded items are handled by the respective applications in your phone, for example, a downloaded photo can be saved in **Gallery**.




Important: Only install applications from sources that offer adequate protection against harmful software.

- To download the item, scroll to the link, and press .
 - If the item is provided free, press **Accept**. Once downloaded, the content is automatically opened in a suitable application.
To cancel the download, press **Cancel**.
- Choose the appropriate option to purchase the item, for example, 'Buy'.
- Carefully read all the information provided.
If the online content is compatible, you can use your wallet information to make the purchase.
- Select **Open Wallet**. You will be prompted for your wallet code. See 'Creating a wallet code', p. 68.
- Select the appropriate card category from your wallet.
- Select **Fill in**. This will upload the selected wallet information.
If the wallet does not contain all information necessary for the purchase, you will be requested to enter the remaining details manually.



Shortcut: Use  # to jump to the end of a page and *+  to the beginning of a page.



Tip! Your browser collects bookmarks automatically while you are browsing Web pages. The bookmarks are stored to the Automatic bookmarks folder () and automatically organised according to domain. See also 'Settings for Web', p. 64.



Note: Copyright protections may prevent some images, ringtones and other content from being copied, modified, transferred, or forwarded.

Ending a connection

Select **Options**→**Advanced options**→**Disconnect**, or press and hold **J** to quit browsing and to return to the standby mode.

Emptying the cache

The information or services you have accessed are stored in the cache memory of the phone.



Note: A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache memory of the phone. To empty the cache, select **Options**→**Navigation options**→**Clear cache**.

Settings for Web

Select **Options**→**Settings**:

- **Default access point** - To change the default access point, press **⦿** to open a list of available access points. See 'Connection settings', p. 78.
- **Show images** - To select if you want to load images while browsing or not. If you choose **No**, you can later load images during browsing by selecting **Options**→**Show images**.
- **Font size** - To choose the text size.
- **Default encoding** - If text characters are not shown correctly, you may choose another encoding according to language.

- **Automatic bookmarks** - To disable automatic bookmark collecting, select **Off**. If you want to continue collecting automatic bookmarks but hide the folder from the Bookmarks view, select **Hide folder**.
- **Screen size** - To select what is shown when you are browsing. Select **Select. keys only**, or **Full screen**.
- **Search page** - To access a search page during browsing by selecting **Options**→**Navigation options**→**Open search page**.
- **Volume** - If you want the browser to play sounds embedded on Web pages, select a volume level.
- **Rendering** - If you want the page layout shown as accurately as possible when in **Small screen** mode, select **By quality**. If you do not want external cascading style sheets to be downloaded, select **By speed**.
- **Cookies** - To enable or disable the receiving and sending of cookies.
- **Java/ECMA script** - To enable or disable the use of scripts.
- **Security warnings** - To hide or show security notifications.
- **Serial no. sending** - Select **On** to send the serial number as your user ID when requested from the network services.
- **Conf. DTMF sending** - Choose whether you want to confirm before the phone sends DTMF tones during a voice call. See also 'DTMF tones', p. 23.
- **Wallet** - **On** to open the wallet automatically when a compatible browser page is opened. See 'Wallet', p. 67.



Glossary: Cookies are a means of content providers to identify users and their preferences for frequently used content.

Organiser



Calculator

To add, subtract, multiply, divide, calculate square roots and percentages, press and select **Organiser**→**Calculator**.



Note: This calculator has limited accuracy and is designed for simple calculations.



Notes

Press and select **Organiser**→**Notes** to write notes. You can send notes to other compatible devices and plain text files (TXT format) that you receive can be saved to Notes.



Go to – adding shortcuts

Examples of default shortcuts:

- opens **Calendar**,
- opens **Inbox** and
- opens **Notes**.

To store shortcuts, links to your favourite images, notes, bookmarks, and so on, press and select **Go to**. Shortcuts can be added only from the individual applications, like Gallery. Not all applications have this function.




 

Converter – converting measures

Options in Converter:
Select unit/ Change currency, Conversion type, Currency rates, Help, and Exit.

To convert measures such as **Length** from one unit (**Yards**) to another (**Metres**), press and select **Organiser**→**Converter**.

Note that the Converter has limited accuracy, and rounding errors may occur.

- 1 Scroll to the **Type** field, and press to open a list of measures. Scroll to the measure you want to use, and press **OK**.

- 2 Scroll to the first **Unit** field, and press . Select the unit from which you want to convert, and press **OK**. Scroll to the next **Unit** field, and select the unit to which you want to convert.
- 3 Scroll to the first **Amount** field, and enter the value you want to convert. The other **Amount** field changes automatically to show the converted value.
Press  # to add a decimal and  for the +, - (for temperature), and E (exponent) symbols.

Setting a base currency and exchange rates

Before you can make currency conversions, you need to choose a base currency and add exchange rates. The rate of the base currency is always 1. The base currency determines the conversion rates of the other currencies.

- 1 Select **Currency**→**Options**→**Currency rates**. A list of currencies opens, and you can see the current base currency at the top.
- 2 To change the base currency, scroll to the currency, and select **Options**→**Set as base curr..**




Note: When you change base currency, you must key in the new rates because all previously set exchange rates are set to zero.


- 3 Add exchange rates. Scroll to the currency, and key in a new rate, that is, how many units of the currency equal one unit of the base currency you have selected.


After you have inserted all the necessary exchange rates, you can make currency conversions.




Wallet

Press  and select **Organiser**→**Wallet**. Wallet provides you with a storage area for your personal information, such as credit and debit card numbers, addresses and other useful data, for example, user names and passwords.

 **Tip!** To change the conversion order, enter the value in the second **Amount** field. The result is shown in the first **Amount** field.

 **Tip!** To rename a currency, go to the **Currency rates** view, scroll to the currency, and select **Options**→**Rename currency**.

 Options in the wallet main view: [Open](#), [Settings](#), [Help](#), and [Exit](#).

The information stored in the wallet can be retrieved while browsing to automatically fill in online forms on browser pages, for example, when the service asks for credit card details. Data in the wallet is encrypted and protected with a wallet code that you define.

Wallet will automatically close after 5 minutes. Enter the wallet code to regain access to the contents. You can change this automatic time-out period if required.

Creating a wallet code

Each time you open the wallet you will be prompted for a wallet code. Enter the code that you have created, and press [OK](#).



When you open the wallet for the first time, you must create your own wallet code:

- 1 Enter a code of your choice (4–10 alphanumeric characters), and press [OK](#).
- 2 You will be prompted to verify the code. Enter the same code, and press [OK](#). Do not give your wallet code to anyone else.

If you enter the wallet code incorrectly on three consecutive occasions, the wallet application is blocked for five minutes. The block time increases if further incorrect wallet codes are entered.

If you forget your wallet code, you will have to reset the code, and you will lose all information stored in the wallet. 'Resetting the wallet and wallet code', p. 69.

Storing personal card details


- 1 Select the [Cards](#) category from the main wallet menu, and press .
- 2 Select a type of card from the list, and press .
- 3 Select [Options](#) → [New card](#). An empty form opens.
- 4 Fill in the fields, and press [Done](#).

You can also receive card information directly to the phone from a card issuer or service provider (if they offer this service). You will be notified which category the card belongs to. Save or discard the card. You can view and rename a saved card, but you cannot edit it.

You can open, edit, or delete the fields in the card. Any changes will be saved upon exiting.

Creating a wallet profile

Once you have stored your personal details, you can combine them together into a wallet profile. You can use a wallet profile to retrieve wallet data from different cards and categories to the browser. For example, when you are filling in a form.

- 1 Select the **Wallet profiles** category from the main wallet menu, and press .
- 2 Select **Options** → **New profile**. A new wallet profile form opens.
- 3 Fill in the fields or select an option from the listed items.
- 4 Press **Done**.

Resetting the wallet and wallet code

This operation erases all contents of the wallet.

To reset both the contents of the wallet and the wallet code:

- 1 Enter ***#7370925538#** in the standby mode.
- 2 Enter the phone lock code, and press **OK**. See 'Security', p. 79.

When opening the wallet again, you must enter a new wallet code. 'Creating a wallet code', p. 68.

Example: By uploading your payment card details you do not need to enter the card number and expiry date each time you need them (depending on the content being browsed). Also, you can retrieve your user name and password stored as an access card when connecting to a mobile service that requires authentication.

Connectivity




Bluetooth connection

Bluetooth enables wireless connections to send images, video clips, music and sound clips and notes, or to connect wirelessly to Bluetooth enabled, compatible devices such as computers. Since Bluetooth devices communicate using radio waves, your phone and the other Bluetooth device do not need to be in direct line-of-sight. The two devices only need to be within a maximum of 10 metres of each other, although the connection can be subject to interference from obstructions such as walls or from other electronic devices.

This device is compliant with Bluetooth Specification 1.1 supporting the following profiles: Generic Access Profile, Serial Port Profile, Dial-up Networking Profile, Headset Profile, Handsfree Profile, Generic Object Exchange Profile, Object Push Profile, File Transfer Profile, and Basic Printing Profile. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

Features that use Bluetooth technology, or allow such features to run in the background while using other features, increase the demand on battery power and reduces the battery life.

Press  and select **Connect**. → **Bluetooth**. You are asked to give a Bluetooth name to your phone.

Bluetooth settings

- **Bluetooth - On/Off**

- **My phone's visibility** - **Shown to all**: your phone can be found by other Bluetooth devices, or **Hidden**: your phone cannot be found by other devices.
- **My phone's name** - Define a Bluetooth name for your phone. After you have set Bluetooth to be active and changed **My phone's visibility** to **Shown to all**, your phone and this name can be seen by other Bluetooth device users.

Sending data using Bluetooth

There can be only one active Bluetooth connection at a time.

- 1 Open an application where the item you wish to send is stored. For example, to send an image to another compatible device, open the Gallery application.
- 2 Select the item, for example an image, and select **Options**→**Send**→**Via Bluetooth**. The phone starts to search for devices within range. Bluetooth enabled devices that are within range start to appear on the display one by one. You can see a device icon, the Bluetooth name of the device, the device type, or a short name.



Tip! If you have searched for Bluetooth devices earlier, a list of the devices that were found previously is shown first. To start a new search, select **More devices**. If you switch off the phone, the list is cleared.

- To interrupt the search, press **Stop**. The device list freezes and you can start to form a connection to one of the devices already found.
- 3 Scroll to the device with which you want to connect, and press **Select**.
 - 4 **Pairing (if required by the other device)**

Glossary: Pairing means authentication. The users of the Bluetooth enabled devices should agree what the passcode is and use the same passcode for both devices in order to pair them. Devices that do not have a user interface have a factory-set passcode.

- If the other device requires pairing before data can be transmitted, a tone sounds and you are asked to enter a passcode.
- Create your own passcode (1-16 characters long, numeric) and agree with the owner of the other Bluetooth device to use the same code. The passcode is used only once.

Icons for different Bluetooth devices:



- Computer



- Phone




- Audio/video




- Headset



- Other

 **Tip!** To send text using Bluetooth (instead of text messages), go to Notes, write the text, and select **Options**→**Send**→**via Bluetooth**.




 **Tip!** To define a short name (nickname or alias), scroll to the device and select **Options**→**Assign short name** in the Paired devices view. This name helps you to recognise a certain device during device search or when a device requests a connection.

- After pairing, the device is saved to the Paired devices view.



 
When the connection has been established, the note **Sending data** is shown.

The Drafts folder in Messaging does not store messages sent using Bluetooth.


Checking the status of the Bluetooth connection

- When  is shown in the standby mode, Bluetooth is active.
- When  is blinking, your phone is trying to connect to the other device.
- When  is shown continuously, the Bluetooth connection is active.



Pairing devices

Paired devices are easier to recognise, they are indicated by  in the device search. In the Bluetooth main view, press  to open the Paired devices view ().

- To pair with a device, select **Options**→**New paired device**. The phone starts a device search. Scroll to the device, and press **Select**. Exchange passcodes, see step 4 (Pairing), p. 71.
- To cancel a pairing, scroll to the device, and select **Options**→**Delete**. If you want to cancel all pairings, select **Options**→**Delete all**.

 **Tip!** If you are currently connected to a device and delete the pairing with that device, pairing is removed immediately, but the connection remains active.

Receiving data using Bluetooth

When you receive data using Bluetooth, a tone sounds, and you are asked if you want to accept the Bluetooth message. If you accept,  is shown, and the item is placed in the Inbox folder in Messaging. Bluetooth messages are indicated by . See 'Inbox - receiving messages', p. 47.

Switching off Bluetooth

To switch off Bluetooth, select **Bluetooth**→ **Off**.

PC connections – using Bluetooth or USB

You can use your phone with a variety of PC connectivity and data communications applications. With Nokia PC Suite you can, for example, synchronise contacts, calendar and To-do notes between your phone and a compatible PC. For further information on how to install Nokia PC Suite (compatible with Windows 2000 and Windows XP), see the **User's Guide for Nokia PC Suite** and the **Nokia PC Suite help** in the 'Install' section on the CD-ROM.

Using the CD-ROM


The CD-ROM should launch after you have inserted it into the CD-ROM drive of a compatible PC. If not, proceed as follows: Open Windows Explorer, right-click the CD-ROM drive where you inserted the CD-ROM, and select AutoPlay.

Using your phone as a modem

You can use your phone as a modem to send and receive e-mails, or to connect to the Internet with a compatible PC by using a Bluetooth connection, or a data cable. Detailed installation instructions can be found in the **User's Guide for Nokia PC Suite** in Modem options on the CD-ROM.



Connection manager

You may have multiple data connections active at the same time when you are using your phone in GSM and WCDMA networks. Press  and select **Connect**→ **Conn. mgr.** to view

Options in the Connection manager main view when there are one or more connections: [Details](#), [Disconnect](#), [Disconnect all](#), [Help](#) and [Exit](#).

the status of multiple data connections, view details on the amount of data sent and received, and end connections.




Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding off for billing, and so forth.

- To end a connection, scroll to a connection, and select [Options](#)→ [Disconnect](#).
- To close all currently open connections, select [Options](#)→ [Disconnect all](#).



Sync – remote synchronisation

Press  and select [Connect](#)→ [Sync](#). The Sync application enables you to synchronise your calendar, and contacts with various calendar and address book applications on a compatible computer or on the Internet.

The synchronisation application uses SyncML technology for synchronisation. For information on SyncML compatibility, please contact the supplier of the calendar or address book application you want to synchronise your phone data with.

You may receive Sync settings in a special text message. See 'Receiving logos, tones, business cards, calendar entries, and settings', p. 48.

Synchronising data




In the Sync main view, you can see the different synchronisation profiles, and the kind of data to be synchronised.

- 1 Select a synchronisation profile and [Options](#)→ [Synchronise](#). The status of the synchronisation is shown at the bottom of the screen.
To cancel synchronisation before it is finished, press [Cancel](#).
- 2 You are notified when the synchronisation is complete. After synchronisation is complete, select [Options](#)→ [View log](#) to open a log file showing the synchronisation status ([Complete](#) or [Incomplete](#)) and how many calendar or contact entries have been added, updated, deleted, or discarded (not synchronised) in the phone or on the server.

Tools



Settings

To change settings, press  and select **Tools**→**Settings**. Scroll to a setting group, and press  to open it. Scroll to a setting you want to change, and press .



Phone settings

General

Phone language - Changing the language of the display texts in your phone will also affect the format used for date and time and the separators used, for example, in calculations.

Automatic selects the language according to the information on your SIM card. After you have changed the display text language, the phone restarts.

Changing the settings for **Phone language** affects every application in your phone and the change remains effective until you change the setting again.

English prediction - You can set the predictive text input **On** or **Off** for all editors in the phone. The predictive text dictionary is not available for all languages.

Reset predictive dict. - Converted characters are automatically memorised by the User dictionary. Words that you added to the User dictionary or you frequently use, appear high in the list of conversion candidates. You can reset the user dictionary to its original values. The words you added to the User dictionary are unaffected.

Japanese prediction - To set the Japanese predictive text input **On** or **Off** for all editors in the phone.

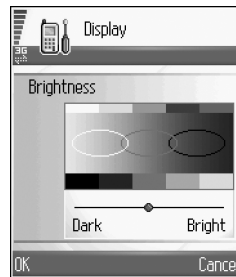


Fig. 11 Adjusting the display brightness.

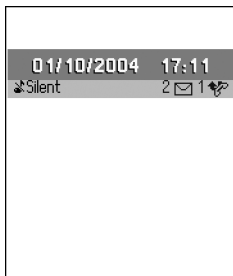





Fig. 12 The screen saver changes to show the number of new messages and missed calls.

Welcome note or logo - The welcome note or logo is displayed briefly each time you switch on the phone. Select **Default** to use the default image, **Text** to write a welcome note (up to 50 letters), or **Image** to select a photo or picture from **Gallery**.

Orig. phone settings - You can reset some of the settings to their original values. To do this, you need the lock code. See 'Security', 'Phone and SIM', p. 80. After resetting the settings, the phone may take a longer time to power on. Documents and files are unaffected.

Standby mode

You can assign keypad shortcuts for the different keypresses in the standby mode:  is the **Left selection key**, pressing  is the same as **Navigation key right**, and  is the same as **Selection key**. You cannot have a shortcut to an application that you have installed.

Operator logo - This setting is visible only if you have received and saved an operator logo. You can choose if you want the operator logo to show or not.

Display

Brightness - You can change the brightness of the display to lighter or darker. The brightness of the display is automatically adjusted according to the environment.

Screen saver timeout - The screen saver is activated when the timeout period is over.

Light time-out - Select a timeout after which the backlight will be switched off.



Call settings

Send my caller ID (network service) - You can set your phone number to be displayed to (**Yes**) or hidden from (**No**) the person to whom you are calling; or the value may be set by your network operator or service provider when you make a subscription (**Set by network**).


Call waiting (network service) - If you have activated call waiting, the network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request

the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **Check status** to check if the function is active or not.

 

Reject call with SMS - Select **Yes** to send a text message to a caller informing why you could not answer the call. See 'Answering or rejecting a call', p. 22.





Message text - Write a text to be sent in a text message when you reject a call.



Image in vid. call - You can deny video sending when you receive a video call. Select a still image to be displayed instead of video.

Automatic redial - Select **On**, and your phone will make a maximum of ten attempts to connect the call after an unsuccessful call attempt. Press  to stop automatic redialling.



Summary after call - Activate this setting if you want the phone to briefly display the approximate duration of the last call.

Speed dialling - Select **On**, and the numbers assigned to the speed dialling keys ( 2 abc -  9) can be dialled by pressing and holding the key. See also 'Speed dialling a phone number', p. 21.

Anykey answer - Select **On**, and you can answer an incoming call by briefly pressing any key, except , , , and .

Line in use (network service) - This setting is shown only if the SIM card supports two subscriber numbers, that is, two phone lines. Select which phone line you want to use for making calls and sending text messages. Calls on both lines can be answered irrespective of the selected line. If you select **Line 2** and have not subscribed to this network service, you will not be able to make calls. When line 2 is selected, **2** is shown in the standby mode. If you have two phone lines, the divert indicator for the first line is **1** , and for the second **2** .


Line change (network service) - To prevent line selection, select **Line change** → **Disable** if supported by your SIM card. To change this setting, you need the PIN2 code.

 **Tip!** To change the settings for call diverting, press  and select **Tools** → **Settings** → **Call divert**. See 'Call diverting', p. 83.



Connection settings

Data connections and access points

Your phone supports packet data connections () , such as GPRS in the GSM network. See also 'Essential indicators', p. 13. To establish a data connection, an access point is required. You can define different kinds of access points, such as:

- MMS access point to, for example, send and receive multimedia messages,
- access point for the Web application to view WML or XHTML pages, and
- Internet access point (IAP) to, for example, send and receive e-mail.

Check the kind of an access point you need with your service provider for the service you wish to access. For availability and subscription to packet data connection services, contact your network operator or service provider.

Packet data connections in GSM and WCDMA networks

When you are using your phone in GSM and WCDMA networks it is possible to have multiple data connections active at the same time; access points can share a data connection; and data connections remain active (for example, during voice calls). For information on how to see how many data connections are active, see 'Connection manager', p. 73. See also network indicators in 'Essential indicators', p. 13.

The following indicators may be shown depending on which network you are using:



- GSM network.



- GSM network, packet data connection is active, data is being transferred.



- GSM network, multiple packet data connections are active.




- GSM network, packet data connection is on hold. (This can happen during a voice call, for example.)




- WCDMA network.



Glossary: GPRS,
General Packet Radio
Service, uses packet data
technology where
information is sent in
short packets of data over
the mobile network.


 – WCDMA network, packet data connection is active, data is being transferred.

 – WCDMA network, multiple packet data connections are active.

Receiving access point settings

You may receive access point settings in a text message from a service provider, or you may have preset access point settings in your phone. See 'Receiving logos, tones, business cards, calendar entries, and settings', p. 48.

- To create a new access point, select [Tools](#)→[Settings](#)→[Connection](#)→[Access points](#).

An access point may be set to be protected () by your network operator or service provider. Protected access points cannot be edited or deleted.



Date and time

See 'Clock settings', p. 15.




Security



Phone and SIM


PIN (Personal Identification Number) code (4 to 8 digits) protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. After three consecutive incorrect PIN code entries, the PIN code is blocked, and you need to unblock it before you can use the SIM card again. See the information about PUK code in this section.

UPIN code may be supplied with the USIM card. The USIM card is an enhanced version of the SIM card and is supported by WCDMA mobile phones. The UPIN code protects the USIM card against unauthorised use.

PIN2 code (4 to 8 digits) supplied with some SIM cards, is required to access some functions in your phone.

 **Tip!** See also the Language settings, p. 75.

 **Tip!** To lock the phone manually, press . A list of commands opens. Select **Lock phone**.

 Options in the Fixed dialling view: **Open**, **Call**, **Activ. fixed dialling/Deact. fixed dialling**, **New contact**, **Edit**, **Delete**, **Add to Contacts**, **Add from Contacts**, **Find**, **Mark/ Unmark**, **Help**, and **Exit**.

Lock code (5 digits) can be used to lock the phone to avoid unauthorised use. The factory setting for the lock code is **12345**. To avoid unauthorised use of your phone, change the lock code. Keep the new code secret and in a safe place separate from your phone.

PUK (Personal Unblocking Key) and PUK2 codes (8 digits) are required to change a blocked PIN code or PIN2 code, respectively. If the codes are not supplied with the SIM card, contact the operator whose SIM card is in your phone.

UPUK code may be supplied with the USIM card and is needed to unblock a UPIN code.

Wallet code is needed to use the wallet services. See 'Wallet', p. 67.

PIN code request - When active, the code is requested each time the phone is switched on. Deactivating the PIN code request may not be allowed by some SIM cards.

PIN code, **PIN2 code**, and **Lock code** - You can change the lock code, PIN code, and PIN2 code. These codes can only include the numbers from **0** to **9**.

Avoid using access codes similar to the emergency numbers to prevent accidental dialling of the emergency number.

Autolock period - You can set an autolock period, a time-out after which the phone is automatically locked and can be used only if the correct lock code is entered. Enter a number for the time-out in minutes, or select **None** to turn off the autolock period.


To unlock the phone, enter the lock code.



Note: When the phone is locked, calls in Offline profile to certain emergency numbers programmed into your phone are still possible.

In this situation, calls to 110, 118 and 119 may not be possible depending on your USIM card. In that case, please set this option off and make calls with these numbers in accordance with 'Emergency calls', p.100.

Lock if SIM changed - You can set the phone to ask for the lock code when an unknown, new SIM card is inserted into your phone. The phone maintains a list of SIM cards that are recognised as the owner's cards.

Fixed dialling - You can restrict calls and text messages from your phone to selected phone numbers, if supported by your SIM card. You need the PIN2 code for this function. To view the list of Fixed dialling numbers, press  and select **Tools**→**Settings**→**Security**→**Phone and SIM**→**Fixed dialling**. To add new numbers to the Fixed dialling list, select **Options**→**New contact** or **Add from Contacts**. When you use fixed dialling, packet data connections are not possible, except when sending text messages over a packet data connection. In this case, the message centre number and the recipient's phone number have to be included on the fixed dialling list.




Note: When security features that restrict calls are in use (such as call barring, closed user group and fixed dialling) calls still may be possible to the official emergency numbers programmed into your phone. In this situation, calls to 110, 118 and 119 may not be possible depending on your USIM card. In that case, please set this option off and make calls with these numbers in accordance with 'Emergency calls', p.100.

Closed user group (network service) - To specify a group of people to whom you can call and who can call you.

Confirm SIM services (network service) - To set the phone to display confirmation messages when you are using a SIM card service.

Certif. management

Digital certificates do not guarantee safety; they are used to verify the origins of software.

In the Certificate management main view, you can see a list of authority certificates that have been stored in your phone. Press  to see a list of personal certificates, if available.

Digital certificates should be used if you want to connect to an online bank or another site or remote server for actions that involve transferring confidential information. They should also be used if you want to reduce the risk of viruses or other malicious software and be sure of the authenticity of software when downloading and installing software.



Glossary: Digital certificates are used to verify the origin of the XHTML or WML pages and installed software. However, they can only be trusted if the origin of the certificate is known to be authentic.



Important: Even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If Expired certificate or Certificate not valid yet is shown even if the certificate should be valid, check that the current date and time in your phone are correct.

Viewing certificate details – checking authenticity

You can only be sure of the correct identity of a server when the signature and the period of validity of a server certificate have been checked.

You will be notified on the phone display if the identity of the server is not authentic or if you do not have the correct security certificate in your phone.

To check certificate details, scroll to a certificate, and select **Options** → **Certificate details**. When you open certificate details, Certificate management checks the validity of the certificate, and one of the following notes may appear:

- **Certificate not trusted** - You have not set any application to use the certificate. See 'Changing the trust settings', p. 82.
- **Expired certificate** - The period of validity has ended for the selected certificate.
- **Certificate not valid yet** - The period of validity has not yet begun for the selected certificate.
- **Certificate corrupted** - The certificate cannot be used. Contact the certificate issuer.

Changing the trust settings

Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

Options in the certificate management main view: **Certificate details**, **Delete**, **Trust settings**, **Mark/Unmark**, **Help**, and **Exit**.

Scroll to an authority certificate, and select **Options**→**Trust settings**. Depending on the certificate, a list of the applications that can use the selected certificate is shown. For example:

- **Symbian installation: Yes** - The certificate is able to certify the origin of new Symbian operating system application.
- **Internet: Yes** - The certificate is able to certify servers.
- **App. installation: Yes** - The certificate is able to certify the origin of new Java application.

Select **Options**→**Edit trust setting** to change the value.



Call diverting

- 1 To direct your incoming calls to your voice mailbox or another phone number, press **⌘** and select **Tools**→**Settings**→**Call divert**. For details, contact your service provider.
- 2 Select which calls you want to divert: **Voice calls**, or **Data and video calls**.
- 3 Select the desired divert option. For example, **If busy** to divert voice calls when your number is busy or when you reject incoming calls.
- 4 Set the divert option on (**Activate**) or off (**Cancel**), or check whether the option is activated (**Check status**). Several divert options can be active at the same time.

Call barring and call diverting cannot be active at the same time.





Call barring (network service)

Call barring allows you to restrict the calls that can be made or received with the phone. To change the settings, you need the barring password from your service provider. Select the desired barring option, and set it on (**Activate**) or off (**Cancel**), or check whether the option is active (**Check status**). Call barring affects all calls, including data calls.


Call barring and call diverting cannot be active at the same time.


When calls are barred, calls still may be possible to certain official emergency numbers.


Icon: When all calls are diverted,  is shown in the standby mode.

 **Glossary:** Roaming agreement – An agreement between two or more network service providers to enable the users of one service provider to use the services of other service providers.

Indicators shown in the standby mode:

 – a headset is connected.



 – a loopset is connected.

 – headset unavailable, connection to a Bluetooth headset has been lost.

In this situation, calls to 110, 118 and 119 may not be possible depending on your USIM card. In that case, please set this option off and make calls with these numbers in accordance with 'Emergency calls', p.100.



Network

Nokia 6630 can automatically switch between the GSM and WCDMA networks. The GSM network is indicated with  in the standby mode. The WCDMA network is indicated with .

Operator selection – Select **Automatic** to set the phone to search for and select one of the available networks, or **Manual** to manually select the network from a list of networks. If the connection to the manually selected network is lost, the phone will sound an error tone and ask you to reselect a network. The selected network must have a roaming agreement with your home network, that is, the operator whose SIM card is in your phone.

Cell info display – Select **On** to set the phone to indicate when it is used in a cellular network based on microcellular network (MCN) technology and to activate cell info reception.




Enhancement settings

Select the enhancement: **Headset**, **Loopset**, **Text phone** (a TTY device), or **Handsfree** (a Bluetooth handsfree device).

- Select **Default profile** to set the profile that you want activated each time you connect a certain enhancement to your phone. See 'Profiles – setting tones', p. 11.
- Select **Automatic answer** to set the phone to answer an incoming call automatically after five seconds. If the Ringing type is set to **Beep once** or **Silent**, automatic answer is disabled.



Voice commands

Press  and select **Tools**→**Voice com..** Voice commands allows you to add, delete, and control voice commands in your phone. Voice commands are recorded the same way as voice tags. See 'Adding a voice tag to a phone number', p. 28.


Adding a voice command to an application



You can have only one voice command per application.

- 1 Select the application to which you want to add a voice command.
To add a new application to the list, select **Options**→**New application**.
- 2 Select **Options** → **Add voice command**. See 'Adding a voice tag to a phone number', p. 28.



Application manager

Press  and select **Tools**→**Manager**. You can install two types of applications and software to your phone:





- J2ME™ applications based on Java™ technology with the extension .jad or .jar ().
Do not download PersonalJava™ applications to your phone as they cannot be installed.
- Other applications and software suitable for the Symbian operating system (). The installation files have the .sis extension.


Installation files may be transferred to your phone from a compatible computer, downloaded during browsing, or sent to you in a multimedia message, as an e-mail attachment, or using Bluetooth. You can use Nokia Application Installer in Nokia PC Suite to install an application to your phone or a memory card. If you are using Microsoft Windows Explorer to transfer a file, place the file on a memory card (local disk).




Example: If you have received the installation file as an e-mail attachment, go to your mailbox, open the e-mail, open the Attachments view, scroll to the installation file, and press  to start installation.

Icons:

-  - .sis application
-  - Java application
-  - application is not fully installed
-  - application is installed on the memory card.


 **Tip!** You can also use Nokia Application Installer available in Nokia PC Suite to install applications. See the CD-ROM supplied in the sales package.

 **Tip!** While browsing, you can download an installation file and install it without closing the connection.

Installing applications and software



Important: Only install applications from sources that offer adequate protection against harmful software.

- Before installation, select **Options**→**View details** to view information such as the application type, version number, and the supplier or manufacturer of the application.
 - Before installation, select **Options**→**View certificate** to display the security certificate details of the application. See 'Certif. management', p. 81.
 - If you install a file that contains an update or repair to an existing application, you can only restore the original application if you have the original installation file or a full back-up copy of the removed software package. To restore the original application, remove the application, and install the application again from the original installation file or the back-up copy.
 - The .jar file is required for installing Java applications. If it is missing, the phone may ask you to download it. If there is no access point defined for the application, you will be asked to select one. When you are downloading the .jar file, you may need to enter a user name and password to access the server. You obtain these from the supplier or manufacturer of the application.
- 1 Open Application manager, and scroll to an installation file.
Alternatively, search the phone memory or the memory card, select the application, and press  to start the installation.
 - 2 Select **Options**→**Install**.
During installation, the phone shows information about the progress of the installation. If you are installing an application without a digital signature or certification, the phone displays a warning. Continue installation only if you are sure of the origins and contents of the application.

Removing applications and software

Scroll to a software package, and select **Options**→**Remove**. Press **Yes** to confirm.

If you remove software, you can only re-install it if you have the original software package or a full back-up of the removed software package. If you remove a software package, you may no longer be able to open documents created with that software.




Note: If another software package depends on the software package that you removed, the other software package may stop working. Refer to the documentation of the installed software package for details.

Options in the Applications main view:
[Install](#), [View details](#), [Go to Web address](#), [View certificate](#), [Send](#), [Remove](#), [App. downloads](#), [View log](#), [Send log](#), [Update](#), [Settings](#), [Help](#), and [Exit](#).




Activation keys – handling copyright protected files

Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred, or forwarded.

Press  and select **Tools**→**Activ.keys** to view the digital rights activation keys stored in your phone.




Transfer – transferring content from another phone

Press  and select **Tools**→**Transfer** to copy contacts, calendar, images, video, and sound clips using Bluetooth from a compatible Series 60 phone such as Nokia 6600 and Nokia 7610 to your Nokia 6630. You can use your Nokia 6630 without a SIM card. Offline profile is automatically activated when the phone is switched on without a SIM card. This allows you to use the SIM card in another phone. Follow the instructions on the screen.



Device manager – service provider configuration

Press  and select [Tools](#)→ [Dev. mgr.](#). You may receive server profiles and different configuration settings from your network operator, service provider, or company information management department. These configuration settings may include access point settings for data connections and other settings used by different applications in your phone.

- To connect to a server and receive configuration settings for your phone, select [Start configuration](#).
- To allow or deny receiving of configuration settings from a service provider, select [Enable config.](#) or [Disable config.](#)

Kuten Code List

First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit
010	0 1 2 3 4 5 6 7 8 9	051	0 カガキギクグケゴ	160	【 あ 】	190	魁海城海灰界皆給芥	227	倭句区玖玖矩苦敷敷駈
011	・ ・ ・ ・ ・ ・ ・ ・ ・ ・	052	コサシジスセソ	161	亜唾娃阿哀愛挨始逢	191	蟹開階貝凱効外咳春涯	228	駒貝愚慮喰空偶寓遇隅
012	・ ・ ・ ・ ・ ・ ・ ・ ・ ・	053	ゴダチヂツツテ	162	葵西庵愚握涯渥韋戸鏐	192	慨概涯碍蓋街該鑑駭涯	229	申榭鉤屑屈
013	・ ・ ・ ・ ・ ・ ・ ・ ・ ・	054	トドナニヌネノハバ	163	梓正幹毅宛矩蛆始鉤綾	193	蟻牡垣柝斯鈎鈎聯各廓	230	掘窟寄敕舊連熊限桑
014	・ ・ ・ ・ ・ ・ ・ ・ ・ ・	055	ヒビフフヘベホ	164	鮎或栗拾安庵按暗案闇	194	批批格格殺殺獲獲獲覺角	231	栗桑桑敕鮎君業訓群軍
015	・ ・ ・ ・ ・ ・ ・ ・ ・ ・	056	ボホマミムモマヤ	165	駈古	195	赫校郭闊隔革芋岳樂	232	郡
016	・ ・ ・ ・ ・ ・ ・ ・ ・ ・	057	ユヨリリレロフ	166	【 い 】	196	頸掛笠櫻櫻梶鰥淵割	233	【 け 】
017	・ ・ ・ ・ ・ ・ ・ ・ ・ ・	058	ホエランウカケ	167	以伊位依偉困夷委	197	恰括活渴渴葛葛轄旦鰥	234	卦袈叔係傾利兄啓圭
018	・ ・ ・ ・ ・ ・ ・ ・ ・ ・			168	威尉性惠慰息椅爲畏異	198	叶柝樞袍靴兒甕浦金鏤	235	珪型契形怪患慶患慈燄
019	・ ・ ・ ・ ・ ・ ・ ・ ・ ・			169	移維緯胃委謁違週医	199	隔鴨朴茅羞	236	携敬景挂沃挂稽系絳燄
020	・ ・ ・ ・ ・ ・ ・ ・ ・ ・			170	井亥域育郁磯一杏溢逸	200	粥刈刃瓦乾侃冠寒刊	237	紫雲莖荊莖計詣警輕類
021	・ ・ ・ ・ ・ ・ ・ ・ ・ ・			171	稻茨芋歸久印啞貝因姻	201	勘劬卷煥煥婁完官寬干	238	龜芸迎劇劇戰擊隙衍
022	・ ・ ・ ・ ・ ・ ・ ・ ・ ・			172	引歛浮胤蔭	202	幹患感憤憾換敗柑柑檻	239	傑欠決潔穴結血訣月件
023	・ ・ ・ ・ ・ ・ ・ ・ ・ ・			173	院險隱隱時	203	款歛汗漠渙渾環甘監聾	240	俛僉健棄券劬啞固堅嫌
024	・ ・ ・ ・ ・ ・ ・ ・ ・ ・			174	【 う 】	204	平官箇緩迂翰軒肝虧觀	241	建憲懸拳捲
				175	右宇烏羽	205	諫貢遠遙閑閑閑閑韓館	242	快樵率大猷研硯硯網
				176	汪雨卯鶉鴉丑雄白濁噓	206	鑑久迄岸嚴玩嚴眼岩	243	屑見謀賢軒遵健險踴踴
				177	唄蔚蔚饒饒既蒲瓜聞噉	207	廣雁頑頑顏	244	綴元原殿幻玆滅源玄現
				178	云運雲	208	【 き 】	245	絃絃言謬誤
				179	【 え 】	209	企伎危害器	246	【 こ 】
				180	在餌觀嘗嬰影映	210	基奇嬌奇枝希幾忌揮机	247	乎個古呼固
				181	曳米永泳洩洩瑛盈穎穎	211	旗既期棋集	248	姑孤己車庫戶故枯湖狐
				182	衛詠銳洩疫疫駭駭謁謁	212	機機毀殺汽汽訖祈季	249	榭椅股胡謁謁謁謁謁謁
				183	闊覆販販園園奄奄延怨	213	紀徽規記貴起軌輝軌	250	顧駭五五伍五吳吾媿媿
				184	юя	214	鬼鬼倭倭伎伎戲技擬欺	251	御悟梧梧樹樹語語誤醜
				185	掩援沿演炎焰煙燕猿緣	215	機疑低義義誼誼誼菊菊	252	乞鯉交倭倭倭倭倭倭倭
				186	艶艶園園遠遠鉛鉛塩塩	216	吉吃喫橘橘詰詰占占葵	253	効効効効効効効効効効
				187	【 お 】	217	客御齋逆丘久仇休及吸	254	后喉吟垢好孔孝宏工
				188	於汚甥	218	宮弓劬致朽致泣泣灸灸	255	巧巷幸亢康弘恒高渴渴
				189	凹央央往応	219	究窮級級級級給給牛去居	256	掬攬攻攬昂昂更抗梗梗
				190	押旺橫歐殿王翁鴛鴦	220	巨拒曉學露虛許距鋸鋸	257	江洪浩港濤濤濤濤濤濤
				191	踴萬岡冲荻荻億億億億	221	禦魚亨亨亨	258	紅紅紅紅紅紅紅紅紅紅
				192	杜乙俺郎恩溫穩音	222	供供僞僞競競共協協協	259	航航行術術術術術術術
				193	【 か 】	223	卿叫窺窺映映強強強強	260	鋸鋸鋸鋸鋸鋸鋸鋸鋸鋸
				194	下化	224	扶救橘橘狂狹狹燭燭燭	261	号合壕壕壕壕壕壕壕壕
				195	飯何伽伽佳佳加可嘉夏	225	善鄉鏡鏡善善驚驚仰凝堯	262	告告國國國國國國國國
				196	家專科蝦果架歌河火燭	226	業局曲極玉桐杆僅動均	263	忽惚惚惚惚惚惚惚惚惚
				197	禍天稼園花茄茄荷華菓	227	巾錦斤欣欣歛琴禽筋緊	264	此頃今因坤墾墾婚恨懇
				198	蝦蟇蟇貨迺迺迺霞蚊俄	228	芹園杵攀濤近金鈴銀	265	【 さ 】
				199	我牙面臥芽妓賢雅雅俄	229	【 く 】	266	些
				200	介介解回塊塊迴快悵悵	230	九		
				201	飯懷戎拐改	231			
				202		232			
				203		233			
				204		234			
				205		235			
				206		236			
				207		237			
				208		238			
				209		239			
				210		240			
				211		241			
				212		242			
				213		243			
				214		244			
				215		245			
				216		246			
				217		247			
				218		248			
				219		249			
				220		250			
				221		251			
				222		252			
				223		253			
				224		254			
				225		255			
				226		256			
				227		257			
				228		258			
				229		259			
				230		260			
				231		261			
				232		262			
				233		263			
				234		264			
				235		265			
				236		266			
				237		267			
				238		268			
				239		269			
				240		270			
				241		271			
				242		272			
				243		273			
				244		274			
				245		275			
				246		276			
				247		277			
				248		278			
				249		279			
				250		280			
				251		281			
				252		282			
				253		283			
				254		284			
				255		285			
				256		286			
				257		287			
				258		288			
				259		289			
				260		290			
				261		291			
				262		292			
				263		293			
				264		294			
				265		295			
				266		296			
				267		297			
				268		298			
				269		299			
				270		300			
				271		301			
				272		302			
				273		303			
				274		304			
				275		305			
				276		306			
				277		307			
				278		308			
				279		309			
				280		310			
				281		311			
				282		312			
				283		313			
				284		314			
				285		315			
				286		316			
				287		317			
				288		318			
				289		319			
				290		320			
				291		321			
				292		322			
				293		323			
				294		324			
				295		325			
				296		326			
				297		327			
				298		328			
				299		329			
				300		330			
				301		331			
				302		332			
				303		333			
				304		334			
				305		335			
				306		336			
				307		337			
				308		338			
				309		339			
				310		340			
				311		341			
				312		342			
				313		343			
				314		344			
				315		345			
				316		346			
				317		347			
				318		348			
				319		349			
				320		350			
				321		351			
				322		352			
				323		353			
				324		354			
				325		355			
				326		356			
				327		357			
				328		358			
				329		359			
				330		360			
				331		361			
				332		362			
				333		363			
				334		364			
				335		365			
				336		366			
				337		367			
				338		368			
				339		369			
				340		370			
				341		371			
				342		372			
				343		373			
				344		374			
				345		375			
				346		376			
				347		377			
				348		378			
				349		379			
				350		380			
				351		381			
				352		382			
	</								

First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit
0	1 2 3 4 5 6 7 8 9	0	1 2 3 4 5 6 7 8 9	0	1 2 3 4 5 6 7 8 9	0	1 2 3 4 5 6 7 8 9	0	1 2 3 4 5 6 7 8 9
262	佐又渡崎左差査沙焼砂	303	松梢樺庵沼消沙湘焼焦	340	藏殿蘭造促刺則即恩	374	堵塗妬屠徒斗杜渡登笈	405	演戲挽曉番戲番番蜜
263	許鎖婆坐座挫債催再最	304	照症省硝確祥称草矣粧	341	捉來測定速俗風賊族統	375	賭途都鐵低虧努度土奴	406	【 〇 】
264	哉塞妻幸彩才採裁蔵済	305	紹肖昌將蕉熏炭訟証詔	342	卒袖其揃存孫存挿村遇	376	怒例党冬凍刀唐塔遣妻	407	【 〇 】
265	炭采犀碎碎齋祭齋細菜	306	許象賞齋鉗鉗鉗鉗鉗	343	【 〇 】	377	石島崎悼投搭東桃桃桃	408	【 〇 】
266	載際刺在材材財牙坂坂	307	情丈亦束穴刺狀量娘娘	344	他多太汰詠唾聖安情打	378	盜海濁清灯燈当痘痔痔	409	【 〇 】
267	弊耕肴咲崎崎崎崎作割	308	情懷条杖淨狀量娘娘	345	陀舵精院詠駢堆堆對耐	379	答筒糖統到	410	【 〇 】
268	炸炸炸明欄欄策策錯校	309	醜鉦囁囁師	346	慌帶待怠怠感感替泰滯	380	薑薑藤計體玉踏逃逃	411	【 〇 】
269	蚌蚌匙匙冊	310	植植殖殖殖殖職職蝕蝕	347	隱舌袋貧遠速隊隊鯛代	381	鑄陶頭鑄鑄鑄鑄動動同	412	【 〇 】
270	察抄撮撮札殺殺難難	311	鮎鮎殖殖信侵侵舊舊養養	348	台大第袋題題騰騰濯濯	382	鑄鑄洞鑄鑄鑄鑄動動同	413	【 〇 】
271	鯽捌捌捌鮓鮓鮓三傘參山	312	心憤振新音森棲深深申	349	木托托折只濯濯託託譯	383	鴉匿得德流吐替替禿禿	414	【 〇 】
272	慘慘散散燒燒座座簀簀	313	珍真神秦泰神已新親診	350	諾茸鳳凰只	384	独読板板凸突板版腐腐	415	【 〇 】
273	讀贊酸酸新暫殘	314	身辛進針農人仁刀塵工	351	叩即達辰唇説覽堅迎	385	黃西游噸噸停敦沌豚逐	416	【 〇 】
274	【 し 】	315	尋基尽腎訊迅陣鞠	352	棚合狸鶴樽難丹串嘆坦	386	頓吞曇鈍	417	【 〇 】
275	仕仔伺	316	【 す 】	353	担探旦數淡濕灰短端單	387	【 な 】	418	【 〇 】
276	使刺司史嗣四士始姘姿	317	【 す 】	354	綻歟胆蛋麗銀勾還彈彈	388	【 な 】	419	【 〇 】
277	子屍巾師志指指支孜斯	318	須酢厨厨迎吹重帥推水	355	【 〇 】	389	【 に 】	420	【 〇 】
278	飯旨杖指止死氏獅趾私私	319	炊睡厨翠翠遂醉醉鍾鍾	356	【 〇 】	390	【 に 】	421	【 〇 】
279	紙紫肢肢至視詞詩誌誌	320	端端崇崇高教趨趨難垢	357	【 〇 】	391	【 に 】	422	【 〇 】
280	詔資蘭離蘭蘭事似侍兒	321	幅普顏普裾	358	【 〇 】	392	【 に 】	423	【 〇 】
281	字寺慈慈時	322	澄澄指	359	【 〇 】	393	【 に 】	424	【 〇 】
282	【 し 】	323	【 せ 】	360	【 〇 】	394	【 に 】	425	【 〇 】
283	次滋治兩麗時磁示而	324	【 せ 】	361	【 〇 】	395	【 に 】	426	【 〇 】
284	耳目時時夕鹿式識曉竺	325	【 せ 】	362	【 〇 】	396	【 に 】	427	【 〇 】
285	輪軸半七叱執失厥室悉	326	【 せ 】	363	【 〇 】	397	【 に 】	428	【 〇 】
286	濕漆質質美部倣倣柴芝	327	【 せ 】	364	【 〇 】	398	【 に 】	429	【 〇 】
287	慶蕊嬌含寫射槍敵斜斜	328	【 せ 】	365	【 〇 】	399	【 に 】	430	【 〇 】
288	社社者謝車連蛇邪借勾	329	【 せ 】	366	【 〇 】	400	【 に 】	431	【 〇 】
289	尺杓灼灼的積錫若寂寂	330	【 せ 】	367	【 〇 】	401	【 に 】	432	【 〇 】
290	慈主叔守手朱殊符種種	331	【 せ 】	368	【 〇 】	402	【 に 】	433	【 〇 】
291	離離燭首儒受呪寿授樹	332	【 せ 】	369	【 〇 】	403	【 に 】	434	【 〇 】
292	綴綴燭四取周	333	【 せ 】	370	【 〇 】	404	【 に 】	435	【 〇 】
293	宗就州修慈捨洲秀秋	334	【 せ 】	371	【 〇 】	405	【 に 】	436	【 〇 】
294	終續習吳丹莞寒襲襲蹴	335	【 せ 】	372	【 〇 】	406	【 に 】	437	【 〇 】
295	輾迴齒齒麗什佐十	336	【 せ 】	373	【 〇 】	407	【 に 】	438	【 〇 】
296	從戎采汁茨飲礙重統統	337	【 せ 】	374	【 〇 】	408	【 に 】	439	【 〇 】
297	夙宿齒祝福齒熟熟出術	338	【 せ 】	375	【 〇 】	409	【 に 】	440	【 〇 】
298	述夜發春寮腰發舜發	339	【 せ 】	376	【 〇 】	410	【 に 】	441	【 〇 】
299	龜鳴海淳準潤齒純巡巡	340	【 せ 】	377	【 〇 】	411	【 に 】	442	【 〇 】
300	醇順初初所暑曙曙庶緒	341	【 せ 】	378	【 〇 】	412	【 に 】	443	【 〇 】
301	響書番番語語訪叙友序徐	342	【 せ 】	379	【 〇 】	413	【 に 】	444	【 〇 】
302	怒諭徐徐	343	【 せ 】	380	【 〇 】	414	【 に 】	445	【 〇 】
303	妾勝匠將小哨唱唱響嬰	344	【 せ 】	381	【 〇 】	415	【 に 】	446	【 〇 】
304	恙恙傷將小哨唱唱響嬰	345	【 せ 】	382	【 〇 】	416	【 に 】	447	【 〇 】
305	彰彰承招招掌捷昇昌昭昌	346	【 せ 】	383	【 〇 】	417	【 に 】	448	【 〇 】
306	【 し 】	347	【 せ 】	384	【 〇 】	418	【 に 】	449	【 〇 】
307	【 し 】	348	【 せ 】	385	【 〇 】	419	【 に 】	450	【 〇 】
308	【 し 】	349	【 せ 】	386	【 〇 】	420	【 に 】	451	【 〇 】
309	【 し 】	350	【 せ 】	387	【 〇 】	421	【 に 】	452	【 〇 】
310	【 し 】	351	【 せ 】	388	【 〇 】	422	【 に 】	453	【 〇 】
311	【 し 】	352	【 せ 】	389	【 〇 】	423	【 に 】	454	【 〇 】
312	【 し 】	353	【 せ 】	390	【 〇 】	424	【 に 】	455	【 〇 】
313	【 し 】	354	【 せ 】	391	【 〇 】	425	【 に 】	456	【 〇 】
314	【 し 】	355	【 せ 】	392	【 〇 】	426	【 に 】	457	【 〇 】
315	【 し 】	356	【 せ 】	393	【 〇 】	427	【 に 】	458	【 〇 】
316	【 し 】	357	【 せ 】	394	【 〇 】	428	【 に 】	459	【 〇 】
317	【 し 】	358	【 せ 】	395	【 〇 】	429	【 に 】	460	【 〇 】
318	【 し 】	359	【 せ 】	396	【 〇 】	430	【 に 】	461	【 〇 】
319	【 し 】	360	【 せ 】	397	【 〇 】	431	【 に 】	462	【 〇 】
320	【 し 】	361	【 せ 】	398	【 〇 】	432	【 に 】	463	【 〇 】
321	【 し 】	362	【 せ 】	399	【 〇 】	433	【 に 】	464	【 〇 】
322	【 し 】	363	【 せ 】	400	【 〇 】	434	【 に 】	465	【 〇 】
323	【 し 】	364	【 せ 】	401	【 〇 】	435	【 に 】	466	【 〇 】
324	【 し 】	365	【 せ 】	402	【 〇 】	436	【 に 】	467	【 〇 】
325	【 し 】	366	【 せ 】	403	【 〇 】	437	【 に 】	468	【 〇 】
326	【 し 】	367	【 せ 】	404	【 〇 】	438	【 に 】	469	【 〇 】
327	【 し 】	368	【 せ 】	405	【 〇 】	439	【 に 】	470	【 〇 】
328	【 し 】	369	【 せ 】	406	【 〇 】	440	【 に 】	471	【 〇 】
329	【 し 】	370	【 せ 】	407	【 〇 】	441	【 に 】	472	【 〇 】
330	【 し 】	371	【 せ 】	408	【 〇 】	442	【 に 】	473	【 〇 】
331	【 し 】	372	【 せ 】	409	【 〇 】	443	【 に 】	474	【 〇 】
332	【 し 】	373	【 せ 】	410	【 〇 】	444	【 に 】	475	【 〇 】
333	【 し 】	374	【 せ 】	411	【 〇 】	445	【 に 】	476	【 〇 】
334	【 し 】	375	【 せ 】	412	【 〇 】	446	【 に 】	477	【 〇 】
335	【 し 】	376	【 せ 】	413	【 〇 】	447	【 に 】	478	【 〇 】
336	【 し 】	377	【 せ 】	414	【 〇 】	448	【 に 】	479	【 〇 】
337	【 し 】	378	【 せ 】	415	【 〇 】	449	【 に 】	480	【 〇 】
338	【 し 】	379	【 せ 】	416	【 〇 】	450	【 に 】	481	【 〇 】
339	【 し 】	380	【 せ 】	417	【 〇 】	451	【 に 】	482	【 〇 】
340	【 し 】	381	【 せ 】	418	【 〇 】	452	【 に 】	483	【 〇 】
341	【 し 】	382	【 せ 】	419	【 〇 】	453	【 に 】	484	【 〇 】
342	【 し 】	383	【 せ 】	420	【 〇 】	454	【 に 】	485	【 〇 】
343	【 し 】	384	【 せ 】	421	【 〇 】	455	【 に 】	486	【 〇 】
344	【 し 】	385	【 せ 】	422	【 〇 】	456	【 に 】	487	【 〇 】
345	【 し 】	386	【 せ 】	423	【 〇 】	457	【 に 】	488	【 〇 】
346	【 し 】	387	【 せ 】	424	【 〇 】	458	【 に 】	489	【 〇 】
347	【 し 】	388	【 せ 】	425	【 〇 】	459	【 に 】	490	【 〇 】
348	【 し 】	389	【 せ 】	426	【 〇 】	460	【 に 】	491	【 〇 】
349	【 し 】	390	【 せ 】	427	【 〇 】	461	【 に 】	492	【 〇 】
350	【 し 】	391	【 せ 】	428	【 〇 】	462	【 に 】	493	【 〇 】
351	【 し 】	392	【 せ 】	429	【 〇 】	463	【 に 】	494	【 〇 】
352	【 し 】	393	【 せ 】	430	【 〇 】	464	【 に 】	495	【 〇 】
353	【 し 】	394	【 せ 】	431	【 〇 】	465	【 に 】	496	【 〇 】
354	【 し 】	395	【 せ 】	432	【 〇 】	466	【 に 】	497	【 〇 】
355	【 し 】	396	【 せ 】	433	【 〇 】	467	【 に 】	498	【 〇 】
356	【 し 】	397	【 せ 】	434	【 〇 】	468	【 に 】	499	【 〇 】
357	【 し 】	398	【 せ 】	435	【 〇 】	469	【 に 】	500	【 〇 】
358	【 し 】	399	【 せ 】	436	【 〇 】	470	【 に 】	501	【 〇 】
359	【 し 】	400	【 せ 】	437	【 〇 】	471	【 に 】	502	【 〇 】
360	【 し 】	401	【 せ 】	438	【 〇 】	472	【 に 】	503	【 〇 】
361	【 し 】	402	【 せ 】	439	【 〇 】	473	【 に 】	504	【 〇 】
362	【 し 】	403	【 せ 】	440	【 〇 】	474	【 に 】	505	【 〇 】
363	【 し 】	404	【 せ 】	441	【 〇 】	475	【 に 】	506	【 〇 】
364	【 し 】	405	【 せ 】	442	【 〇 】	476	【 に 】	507	【 〇 】
365	【 し 】	406	【 せ 】	443	【 〇 】	477	【 に 】	508	【 〇 】
366	【 し 】	407	【 せ 】	444	【 〇 】	478	【 に 】	509	【 〇 】
367	【 し 】	408	【 せ 】	445	【 〇 】	479	【 に 】	510	【 〇 】
368	【 し 】	409	【 せ 】	446	【 〇 】	480	【 に 】	511	【 〇 】
369	【 し 】	410	【 せ 】	447	【 〇 】	481	【 に 】	512	【 〇 】
370	【 し 】	411	【 せ 】	448	【 〇 】	482	【 に 】	513	【 〇 】
371	【 し 】	412	【 せ 】	449	【 〇 】	483	【 に 】	514	【 〇 】
372	【 し 】	413	【 せ 】	450	【 〇 】	484	【 に 】	515	【 〇 】
373	【 し 】	414	【 せ 】	451	【 〇 】	485	【 に 】	516	【 〇 】
374	【 し 】	415	【 せ 】	452	【 〇 】	486	【 に 】	517	【 〇 】
375	【 し 】	416	【 せ 】	453	【 〇 】	487	【 に 】	518	【 〇 】
376	【 し 】	417	【 せ 】	454	【 〇 】	488	【 に 】	519	【 〇 】
377	【 し 】	418	【 せ 】	455	【 〇 】	489	【 に 】	520	【 〇 】
378	【 し 】	419	【 せ 】	456	【 〇 】	490	【 に 】	521	【 〇 】
379	【 し 】	420	【 せ 】	457	【 〇 】	491	【 に 】	522	【 〇 】
380	【 し 】	421	【 せ 】	458	【 〇 】	492	【 に 】	523	【 〇 】
381	【 し 】	422	【 せ 】	459	【 〇 】	493	【 に 】	524	【 〇 】
382	【 し 】	423	【 せ 】	460	【 〇 】	494	【 に 】	525	【 〇 】
383	【 し 】	424	【 せ 】	461	【 〇 】	495	【 に 】	526	【 〇 】
384	【 し 】	425	【 せ 】	462	【 〇 】	496	【 に 】	527	【 〇 】
385	【 し 】	426	【 せ 】	463	【 〇 】	497	【 に 】	528	【 〇 】
386	【 し 】	427	【 せ 】	464	【 〇 】	498	【 に 】	529	【 〇 】
387	【 し 】	428	【 せ 】	465	【 〇 】	499	【 に 】	530	【 〇 】
388	【 し 】	429	【 せ 】	466	【 〇 】				

First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit
0123456789		0123456789		0123456789		0123456789		0123456789	
438	樹亦侯又抹末沫迄茂	463	兩凌寮料梁涼獵獵獵獵	499	劬劬剪劬辨	542	嵩峙峒峒峒崑崑崑崑崑	585	斷筋筋筋筋旆旆旆旆无
439	藹塵万慢滴	464	糧良諒遼量陵嶺力緣倫	500	劬劬劬劬劬劬劬劬劬	543	崑崑崑崑崑崑崑崑崑崑	586	无旱旱旱旱旱旱旆旆旆
440	漫曼	465	里林淋淋淋琳輪隣隣隣	501	劬劬劬劬劬劬劬劬勿	544	崑崑崑崑崑崑崑崑崑崑	587	旆旆旆旆旆旆旆旆旆旆
	【み】		【る】	502	匍匍匍匍匍匍匍匍匍匍	545	崑崑崑崑崑崑崑崑崑崑	588	旆旆旆旆旆旆旆旆旆旆
441	味末魅已質岬岬	466	瑠翌淚累類	503	匍匍匍匍匍匍匍匍匍匍	546	崑崑崑崑崑崑崑崑崑崑	589	旆旆旆旆旆旆旆旆旆旆
442	蜜湊妻稔脈炒耗眠眠		【れ】	504	匍匍匍匍匍匍匍匍匍匍	547	崑崑崑崑崑崑崑崑崑崑	590	旆旆旆旆旆旆旆旆旆旆
	【む】	466	令伶俐令勸	505	匍匍匍匍匍匍匍匍匍匍	548	崑崑崑崑崑崑崑崑崑崑	591	旆旆旆旆旆旆旆旆旆旆
441	務	467	嶺伶玲礼苓鈴諫零靈嶺	506	匍匍匍匍匍匍匍匍匍匍	549	崑崑崑崑崑崑崑崑崑崑	592	旆旆旆旆旆旆旆旆旆旆
442	夢無牟予霧鵲嬌婿娘	468	齡厓厓厓厓厓厓厓厓厓	507	匍匍匍匍匍匍匍匍匍匍	550	崑崑崑崑崑崑崑崑崑崑	593	旆旆旆旆旆旆旆旆旆旆
	【め】	469	連煉煉練聯	508	匍匍匍匍匍匍匍匍匍匍	551	崑崑崑崑崑崑崑崑崑崑	594	旆旆旆旆旆旆旆旆旆旆
442	翼	470	連連練	509	匍匍匍匍匍匍匍匍匍匍	552	崑崑崑崑崑崑崑崑崑崑	595	旆旆旆旆旆旆旆旆旆旆
443	名命明盟迷銘鳴姪牝		【ろ】	510	匍匍匍匍匍匍匍匍匍匍	553	崑崑崑崑崑崑崑崑崑崑	596	旆旆旆旆旆旆旆旆旆旆
444	免棉綿緬面緬	470	呂魯櫓炉路路	511	匍匍匍匍匍匍匍匍匍匍	554	崑崑崑崑崑崑崑崑崑崑	597	旆旆旆旆旆旆旆旆旆旆
	【も】	471	露芳婁婁弄朗櫻櫻瀟瀟	512	匍匍匍匍匍匍匍匍匍匍	555	崑崑崑崑崑崑崑崑崑崑	598	旆旆旆旆旆旆旆旆旆旆
444	摸模茂	472	牢琅老老嚙嚙八麗嚙	513	匍匍匍匍匍匍匍匍匍匍	556	崑崑崑崑崑崑崑崑崑崑	599	旆旆旆旆旆旆旆旆旆旆
445	孟毛猛盲綱絳縵縵木	473	助錄錄	514	匍匍匍匍匍匍匍匍匍匍	557	崑崑崑崑崑崑崑崑崑崑	600	旆旆旆旆旆旆旆旆旆旆
446	目勿勿餅久反粉質問		【わ】	515	匍匍匍匍匍匍匍匍匍匍	558	崑崑崑崑崑崑崑崑崑崑	601	旆旆旆旆旆旆旆旆旆旆
447	紋門紋	473	倭和話歪胸臨臨	516	匍匍匍匍匍匍匍匍匍匍	559	崑崑崑崑崑崑崑崑崑崑	602	旆旆旆旆旆旆旆旆旆旆
	【や】	474	梓竊互巨餌託託蕨腕腕	517	匍匍匍匍匍匍匍匍匍匍	560	崑崑崑崑崑崑崑崑崑崑	603	旆旆旆旆旆旆旆旆旆旆
447	也冶也詠耶野郊	475	腕腕	518	匍匍匍匍匍匍匍匍匍匍	561	崑崑崑崑崑崑崑崑崑崑	604	旆旆旆旆旆旆旆旆旆旆
448	矢厄役約業詠詠靖柳		【を】	519	匍匍匍匍匍匍匍匍匍匍	562	崑崑崑崑崑崑崑崑崑崑	605	旆旆旆旆旆旆旆旆旆旆
449	鐘	480	弋巧丕个丕、并、义	520	匍匍匍匍匍匍匍匍匍匍	563	崑崑崑崑崑崑崑崑崑崑	606	旆旆旆旆旆旆旆旆旆旆
	【ゆ】	481	乖乘亂ノ豫爭舒式于亞	521	匍匍匍匍匍匍匍匍匍匍	564	崑崑崑崑崑崑崑崑崑崑	607	旆旆旆旆旆旆旆旆旆旆
449	愉愉油癒	482	返久仍仍仍仍仍仍仍仍	522	匍匍匍匍匍匍匍匍匍匍	565	崑崑崑崑崑崑崑崑崑崑	608	旆旆旆旆旆旆旆旆旆旆
450	諭輸油ゆ優勇友有齒	483	劬劬劬劬劬劬劬劬劬劬	523	匍匍匍匍匍匍匍匍匍匍	566	崑崑崑崑崑崑崑崑崑崑	609	旆旆旆旆旆旆旆旆旆旆
451	悠憂憂有柚湧涌猶猷猷	484	劬劬劬劬劬劬劬劬劬劬	524	匍匍匍匍匍匍匍匍匍匍	567	崑崑崑崑崑崑崑崑崑崑	610	旆旆旆旆旆旆旆旆旆旆
452	祐祐誘遊邑野縣融融	485	侑侑侑侑侑侑侑侑侑侑	525	匍匍匍匍匍匍匍匍匍匍	568	崑崑崑崑崑崑崑崑崑崑	611	旆旆旆旆旆旆旆旆旆旆
	【よ】	486	侑侑侑侑侑侑侑侑侑侑	526	匍匍匍匍匍匍匍匍匍匍	569	崑崑崑崑崑崑崑崑崑崑	612	旆旆旆旆旆旆旆旆旆旆
452	予	487	倅倅倅倅倅倅倅倅倅倅	527	匍匍匍匍匍匍匍匍匍匍	570	崑崑崑崑崑崑崑崑崑崑	613	旆旆旆旆旆旆旆旆旆旆
453	余与譽與預備幼妖容	488	倅倅倅倅倅倅倅倅倅倅	528	匍匍匍匍匍匍匍匍匍匍	571	崑崑崑崑崑崑崑崑崑崑	614	旆旆旆旆旆旆旆旆旆旆
454	堀堀堀堀堀堀洋浴浴	489	倅倅倅倅倅倅倅倅倅倅	529	匍匍匍匍匍匍匍匍匍匍	572	崑崑崑崑崑崑崑崑崑崑	615	旆旆旆旆旆旆旆旆旆旆
455	窯羊羅業蓉蓉蓉蓉蓉	490	倅倅倅倅倅倅倅倅倅倅	530	匍匍匍匍匍匍匍匍匍匍	573	崑崑崑崑崑崑崑崑崑崑	616	旆旆旆旆旆旆旆旆旆旆
456	養欲抑欲沃浴翌翌	491	倅倅倅倅倅倅倅倅倅倅	531	匍匍匍匍匍匍匍匍匍匍	574	崑崑崑崑崑崑崑崑崑崑	617	旆旆旆旆旆旆旆旆旆旆
	【ら】	492	倅倅倅倅倅倅倅倅倅倅	532	匍匍匍匍匍匍匍匍匍匍	575	崑崑崑崑崑崑崑崑崑崑	618	旆旆旆旆旆旆旆旆旆旆
456	羅	493	倅倅倅倅倅倅倅倅倅倅	533	匍匍匍匍匍匍匍匍匍匍	576	崑崑崑崑崑崑崑崑崑崑	619	旆旆旆旆旆旆旆旆旆旆
457	螺裸來萊穎雷絡絡絡	494	倅倅倅倅倅倅倅倅倅倅	534	匍匍匍匍匍匍匍匍匍匍	577	崑崑崑崑崑崑崑崑崑崑	620	旆旆旆旆旆旆旆旆旆旆
458	乱卵嵐嵐嵐嵐嵐嵐	495	倅倅倅倅倅倅倅倅倅倅	535	匍匍匍匍匍匍匍匍匍匍	578	崑崑崑崑崑崑崑崑崑崑	621	旆旆旆旆旆旆旆旆旆旆
	【り】	496	倅倅倅倅倅倅倅倅倅倅	536	匍匍匍匍匍匍匍匍匍匍	579	崑崑崑崑崑崑崑崑崑崑	622	旆旆旆旆旆旆旆旆旆旆
458	利吏	497	倅倅倅倅倅倅倅倅倅倅	537	匍匍匍匍匍匍匍匍匍匍	580	崑崑崑崑崑崑崑崑崑崑	623	旆旆旆旆旆旆旆旆旆旆
459	厘李梨理璃	498	倅倅倅倅倅倅倅倅倅倅	538	匍匍匍匍匍匍匍匍匍匍	581	崑崑崑崑崑崑崑崑崑崑	624	旆旆旆旆旆旆旆旆旆旆
460	剝剝剝剝剝剝剝剝剝剝		【り】	539	匍匍匍匍匍匍匍匍匍匍	582	崑崑崑崑崑崑崑崑崑崑	625	旆旆旆旆旆旆旆旆旆旆
461	律裨略略流溜瑠留粒粒		【り】	540	匍匍匍匍匍匍匍匍匍匍	583	崑崑崑崑崑崑崑崑崑崑	626	旆旆旆旆旆旆旆旆旆旆
462	陸龍龍侶侶旅旅旅了		【り】	541	匍匍匍匍匍匍匍匍匍匍	584	崑崑崑崑崑崑崑崑崑崑	627	旆旆旆旆旆旆旆旆旆旆

First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit	First to third digits	Fourth digit
0 1 2 3 4 5 6 7 8 9	0 1 2 3 4 5 6 7 8 9	0 1 2 3 4 5 6 7 8 9	0 1 2 3 4 5 6 7 8 9	0 1 2 3 4 5 6 7 8 9	0 1 2 3 4 5 6 7 8 9	0 1 2 3 4 5 6 7 8 9	0 1 2 3 4 5 6 7 8 9	0 1 2 3 4 5 6 7 8 9	0 1 2 3 4 5 6 7 8 9
628	湧湧浪瀾瀾瀾瀾瀾瀾瀾瀾	671	曉曉曉曉曉曉曉曉曉曉	714	興興興興興興興興興興	757	匪匪匪匪匪匪匪匪匪匪	800	陟陟陟陟陟陟陟陟陟
629	滲滲滲滲滲滲滲滲滲	672	曉曉曉曉曉曉曉曉曉曉	715	舍舍舍舍舍舍舍舍舍舍	758	匪匪匪匪匪匪匪匪匪匪	801	險險險險險險險險險險
630	滲滲滲滲滲滲滲滲滲	673	批批批批批批批批批批	716	體體體體體體體體體體	759	證證證證證證證證證證	802	馬馬馬馬馬馬馬馬馬馬
631	滲滲滲滲滲滲滲滲滲	674	菓菓菓菓菓菓菓菓菓菓	717	體體體體體體體體體體	760	誤誤誤誤誤誤誤誤誤誤	803	第第第第第第第第第第
632	滲滲滲滲滲滲滲滲滲	675	檣檣檣檣檣檣檣檣檣	718	芭芭芭芭芭芭芭芭芭芭	761	讓讓讓讓讓讓讓讓讓讓	804	霹霹霹霹霹霹霹霹霹霹
633	滲滲滲滲滲滲滲滲滲	676	雀雀雀雀雀雀雀雀雀雀	719	芭芭芭芭芭芭芭芭芭芭	762	讓讓讓讓讓讓讓讓讓讓	805	龍龍龍龍龍龍龍龍龍龍
634	滲滲滲滲滲滲滲滲滲	677	藕藕藕藕藕藕藕藕藕藕	720	茵茵茵茵茵茵茵茵茵茵	763	狸狸狸狸狸狸狸狸狸狸	806	狀狀狀狀狀狀狀狀狀狀
635	滲滲滲滲滲滲滲滲滲	678	曉曉曉曉曉曉曉曉曉曉	721	伏伏伏伏伏伏伏伏伏伏	764	貳貳貳貳貳貳貳貳貳	807	輪輪輪輪輪輪輪輪輪輪
636	熄熄熄熄熄熄熄熄熄熄	679	答答答答答答答答答答	722	莫莫莫莫莫莫莫莫莫莫	765	賄賄賄賄賄賄賄賄賄	808	紹紹紹紹紹紹紹紹紹紹
637	照照照照照照照照照照	680	簪簪簪簪簪簪簪簪簪	723	良良良良良良良良良良	766	賄賄賄賄賄賄賄賄賄	809	顛顛顛顛顛顛顛顛顛顛
638	熨熨熨熨熨熨熨熨熨熨	681	篳篳篳篳篳篳篳篳篳	724	帶帶帶帶帶帶帶帶帶帶	767	趾趾趾趾趾趾趾趾趾趾	810	顛顛顛顛顛顛顛顛顛顛
639	熨熨熨熨熨熨熨熨熨熨	682	篳篳篳篳篳篳篳篳篳	725	蔞蔞蔞蔞蔞蔞蔞蔞蔞	768	跟跟跟跟跟跟跟跟跟跟	811	燭燭燭燭燭燭燭燭燭
640	熨熨熨熨熨熨熨熨熨熨	683	箴箴箴箴箴箴箴箴箴	726	蔞蔞蔞蔞蔞蔞蔞蔞蔞	769	蹂蹂蹂蹂蹂蹂蹂蹂蹂蹂	812	錢錢錢錢錢錢錢錢錢錢
641	爲爲爲爲爲爲爲爲爲爲	684	簾簾簾簾簾簾簾簾簾	727	蔞蔞蔞蔞蔞蔞蔞蔞蔞	770	蹇蹇蹇蹇蹇蹇蹇蹇蹇	813	饒饒饒饒饒饒饒饒饒
642	犁犁犁犁犁犁犁犁犁犁	685	簾簾簾簾簾簾簾簾簾	728	夢夢夢夢夢夢夢夢夢夢	771	蹇蹇蹇蹇蹇蹇蹇蹇蹇	814	馮馮馮馮馮馮馮馮馮
643	狎狎狎狎狎狎狎狎狎狎	686	簾簾簾簾簾簾簾簾簾	729	夢夢夢夢夢夢夢夢夢夢	772	蹇蹇蹇蹇蹇蹇蹇蹇蹇	815	駢駢駢駢駢駢駢駢駢
644	狎狎狎狎狎狎狎狎狎狎	687	拾拾拾拾拾拾拾拾拾拾	730	尋尋尋尋尋尋尋尋尋尋	773	駢駢駢駢駢駢駢駢駢	816	駢駢駢駢駢駢駢駢駢
645	奕奕奕奕奕奕奕奕奕奕	688	松松松松松松松松松松	731	薺薺薺薺薺薺薺薺薺薺	774	試試試試試試試試試試	817	瞞瞞瞞瞞瞞瞞瞞瞞瞞
646	彌彌彌彌彌彌彌彌彌彌	689	檣檣檣檣檣檣檣檣檣	732	薺薺薺薺薺薺薺薺薺薺	775	輛輛輛輛輛輛輛輛輛輛	818	體體體體體體體體體體
647	瓊瓊瓊瓊瓊瓊瓊瓊瓊瓊	690	紉紉紉紉紉紉紉紉紉	733	薺薺薺薺薺薺薺薺薺薺	776	輛輛輛輛輛輛輛輛輛輛	819	髻髻髻髻髻髻髻髻髻髻
648	瓊瓊瓊瓊瓊瓊瓊瓊瓊瓊	691	紉紉紉紉紉紉紉紉紉	734	屯屯屯屯屯屯屯屯屯屯	777	辭辭辭辭辭辭辭辭辭辭	820	髻髻髻髻髻髻髻髻髻髻
649	瓊瓊瓊瓊瓊瓊瓊瓊瓊瓊	692	經經經經經經經經經經	735	蚶蚶蚶蚶蚶蚶蚶蚶蚶	778	逅逅逅逅逅逅逅逅逅逅	821	閱閱閱閱閱閱閱閱閱閱
650	瓊瓊瓊瓊瓊瓊瓊瓊瓊瓊	693	經經經經經經經經經經	736	蚶蚶蚶蚶蚶蚶蚶蚶蚶	779	逅逅逅逅逅逅逅逅逅逅	822	閱閱閱閱閱閱閱閱閱閱
651	蕊蕊蕊蕊蕊蕊蕊蕊蕊蕊	694	綉綉綉綉綉綉綉綉綉	737	蚶蚶蚶蚶蚶蚶蚶蚶蚶	780	遐遐遐遐遐遐遐遐遐遐	823	餓餓餓餓餓餓餓餓餓
652	甦甦甦甦甦甦甦甦甦甦	695	綉綉綉綉綉綉綉綉綉	738	蠅蠅蠅蠅蠅蠅蠅蠅蠅	781	遐遐遐遐遐遐遐遐遐遐	824	餓餓餓餓餓餓餓餓餓
653	甦甦甦甦甦甦甦甦甦甦	696	綉綉綉綉綉綉綉綉綉	739	蠅蠅蠅蠅蠅蠅蠅蠅蠅	782	邊邊邊邊邊邊邊邊邊邊	825	餓餓餓餓餓餓餓餓餓
654	甦甦甦甦甦甦甦甦甦甦	697	綉綉綉綉綉綉綉綉綉	740	蠅蠅蠅蠅蠅蠅蠅蠅蠅	783	郭郭郭郭郭郭郭郭郭郭	826	餓餓餓餓餓餓餓餓餓
655	症症症症症症症症症症	698	綉綉綉綉綉綉綉綉綉	741	蚤蚤蚤蚤蚤蚤蚤蚤蚤蚤蚤蚤	784	醃醃醃醃醃醃醃醃醃醃	827	餓餓餓餓餓餓餓餓餓
656	瘡瘡瘡瘡瘡瘡瘡瘡瘡	699	綉綉綉綉綉綉綉綉綉	742	螞螞螞螞螞螞螞螞螞	785	醃醃醃醃醃醃醃醃醃醃	828	餓餓餓餓餓餓餓餓餓
657	瘡瘡瘡瘡瘡瘡瘡瘡瘡	700	綉綉綉綉綉綉綉綉綉	743	螞螞螞螞螞螞螞螞螞	786	鉅鉅鉅鉅鉅鉅鉅鉅鉅	829	餓餓餓餓餓餓餓餓餓
658	瘡瘡瘡瘡瘡瘡瘡瘡瘡	701	吾吾吾吾吾吾吾吾吾吾	744	蚰蚰蚰蚰蚰蚰蚰蚰蚰	787	鉅鉅鉅鉅鉅鉅鉅鉅鉅	830	鴿鴿鴿鴿鴿鴿鴿鴿鴿
659	瘡瘡瘡瘡瘡瘡瘡瘡瘡	702	爾爾爾爾爾爾爾爾爾爾	745	蚰蚰蚰蚰蚰蚰蚰蚰蚰	788	鉅鉅鉅鉅鉅鉅鉅鉅鉅	831	鴿鴿鴿鴿鴿鴿鴿鴿鴿
660	瘡瘡瘡瘡瘡瘡瘡瘡瘡	703	美美美美美美美美美美	746	蚰蚰蚰蚰蚰蚰蚰蚰蚰	789	鉅鉅鉅鉅鉅鉅鉅鉅鉅	832	鴿鴿鴿鴿鴿鴿鴿鴿鴿
661	詭詭詭詭詭詭詭詭詭詭	704	爾爾爾爾爾爾爾爾爾爾	747	裝裝裝裝裝裝裝裝裝裝	790	鉅鉅鉅鉅鉅鉅鉅鉅鉅	833	鴿鴿鴿鴿鴿鴿鴿鴿鴿
662	詭詭詭詭詭詭詭詭詭詭	705	爾爾爾爾爾爾爾爾爾爾	748	裝裝裝裝裝裝裝裝裝裝	791	鉅鉅鉅鉅鉅鉅鉅鉅鉅	834	鴿鴿鴿鴿鴿鴿鴿鴿鴿
663	詭詭詭詭詭詭詭詭詭詭	706	爾爾爾爾爾爾爾爾爾爾	749	樓樓樓樓樓樓樓樓樓樓	792	鉅鉅鉅鉅鉅鉅鉅鉅鉅	835	鴿鴿鴿鴿鴿鴿鴿鴿鴿
664	詭詭詭詭詭詭詭詭詭詭	707	爾爾爾爾爾爾爾爾爾爾	750	樓樓樓樓樓樓樓樓樓樓	793	鉅鉅鉅鉅鉅鉅鉅鉅鉅	836	鴿鴿鴿鴿鴿鴿鴿鴿鴿
665	詭詭詭詭詭詭詭詭詭詭	708	爾爾爾爾爾爾爾爾爾爾	751	樓樓樓樓樓樓樓樓樓樓	794	鉅鉅鉅鉅鉅鉅鉅鉅鉅	837	鴿鴿鴿鴿鴿鴿鴿鴿鴿
666	詭詭詭詭詭詭詭詭詭詭	709	爾爾爾爾爾爾爾爾爾爾	752	樓樓樓樓樓樓樓樓樓樓	795	鉅鉅鉅鉅鉅鉅鉅鉅鉅	838	鴿鴿鴿鴿鴿鴿鴿鴿鴿
667	詭詭詭詭詭詭詭詭詭詭	710	爾爾爾爾爾爾爾爾爾爾	753	樓樓樓樓樓樓樓樓樓樓	796	爾爾爾爾爾爾爾爾爾爾	839	鴿鴿鴿鴿鴿鴿鴿鴿鴿
668	詭詭詭詭詭詭詭詭詭詭	711	爾爾爾爾爾爾爾爾爾爾	754	樓樓樓樓樓樓樓樓樓樓	797	爾爾爾爾爾爾爾爾爾爾	840	鴿鴿鴿鴿鴿鴿鴿鴿鴿
669	瘡瘡瘡瘡瘡瘡瘡瘡瘡	712	爾爾爾爾爾爾爾爾爾爾	755	樓樓樓樓樓樓樓樓樓樓	798	爾爾爾爾爾爾爾爾爾爾		
670	瘡瘡瘡瘡瘡瘡瘡瘡瘡	713	爾爾爾爾爾爾爾爾爾爾	756	樓樓樓樓樓樓樓樓樓樓	799	爾爾爾爾爾爾爾爾爾爾		

Battery information

Charging and Discharging

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, buy a new battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

Always switch the device off and disconnect the charger before removing the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger. Overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Temperature extremes can affect the ability of your battery to charge.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Enhancement



A new extensive range of enhancements is available for your phone. Select the enhancements which accommodate your specific communication needs. Some of the enhancements are described in detail below.

List of compatible enhancements:

Audio

Nokia Fashion Stereo Headset HS-3

Nokia Headset HS-5

Nokia Stereo Headset HDS-3

Nokia Boom Headset HDB-4

Nokia Retractable Headset HS-10

Nokia FM Radio Headset HS-2R

Nokia Wireless Clip-on Headset HS-3W

Nokia Wireless Boom Headset HS-4W

Nokia Inductive Loopset LPS-4

Car

Nokia Advanced Car Kit CK-7W

Nokia Mobile Holder CR-1

Nokia Mobile Charger LCH-12

Covers

Nokia Xpress on covers CC-215D

Green

Red

Blue

Beige

Data

Nokia Connectivity Cable DKU-2

Nokia 64 MB MultiMediaCard MU-1

Imaging

Nokia Image Viewer SU-5

Nokia Image Frame SU-7

Nokia Image Album PD-1

Nokia Video Call Stand PT-8

Nokia Camera Flash PD-2

Messaging

Nokia Wireless Keyboard SU-8

Nokia Digital Pen SU-1B

Power

Nokia Battery BL-5C

Nokia Retractable Charger AC-1

Nokia Charger ACP-12

Some of the enhancements are described in detail below. For availability of the enhancements, please check with your local dealer. A few practical rules for enhancements operation:

- Keep the enhancements out of small children's reach.
- When you disconnect the powercord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that all mobilephone equipment in a vehicle is mounted and operating properly.

Use only batteries, chargers and enhancements approved by the phone manufacturer. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

Battery

Type	Tech	Talktime#	Standby#
BL-5C	Li-Ion	Up to 360 minutes (GSM) Up to 190 minutes (WCDMA)	Up to 260 hrs

Variation in operation times may occur depending on SIM card, network and usage settings, usage style and environments.

Nokia Wireless Boom Headset HS-4W

Stylish wireless headset. Specially designed for compatible Nokia phones that support Bluetooth technology. This allows you freedom to make and receive calls while on the move or in the office.

Nokia Boom Headset HDB-4

This small and lightweight headset has a beautiful and distinctive Nokia design. Gives you excellent audio quality and you can answer or end calls by pressing the button on the microphone part of the headset.



Nokia Digital Pen SU-1B



Use your digital pen to create colourful, personalized messages and send them to your compatible phone using Bluetooth technology, and forward them via MMS. You can also use your pen to store your notes on your compatible PC.

Nokia Video Call Stand PT-8

The Nokia Video Call Stand PT-8 allows you to use your Nokia 6630 phone for hands-free video calls. Thanks to its foldable, compact size and light weight, the stand is easy to carry.

Charge your phone while it is connected to the stand.



Nokia Travel Charger ACP-12

A fast and efficient way to charge your phone battery. Suitable for active travelers. Powerful multivoltage charger.

Note: Plug types vary according to different markets.

Note that availability of accessories described in this user's guide may vary depending on country.

CARE AND MAINTENANCE

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.

- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use a soft, clean, dry cloth to clean any lenses (such as camera, proximity sensor, and light sensor lenses).
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

ADDITIONAL SAFETY INFORMATION

Operating environment

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. To maintain compliance with radio frequency exposure guidelines only use enhancements approved by Nokia for use with this device. When the device is on and being worn on the body, always use an approved holder or carrying case.

Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do

so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Pacemakers Pacemaker manufacturers recommend that a minimum separation of 6 in. (15.3 cm) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should:

- always keep the device more than 6 in. (15.3 cm) from their pacemaker when the device is switched on;
- not carry the device in a breast pocket; and
- hold the device to the ear opposite the pacemaker to minimise the potential for interference.

If you have any reason to suspect that interference is taking place, switch off your device immediately.

Hearing aids Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to


the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.



Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

Emergency calls


 Important: Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

- 1 If the device is not on, switch it on. Check for adequate signal strength.
Some networks may require that a valid SIM or USIM card is properly inserted in the device.
- 2 Press  as many times as needed to clear the display and ready the device for calls.
- 3 Enter the official emergency number for your present location. Emergency numbers vary by location.
- 4 Press the  key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

 **WARNING!** In Offline profile you cannot make calls, except calls to certain emergency numbers, or use features that require network coverage.

Industrial, scientific and medical devices such as microwave ovens, licensed premises radio stations for moving object identification system in factory production lines, specified low power radio stations which do not require licenses, and amateur radio stations (hereafter referred to as "other radio stations") also use the frequency bandwidth used by this product.

1. Please make sure that there are no "other radio stations" nearby before using this product.
2. If radio wave interferences between this product and "other radio stations" occur, please change your location or stop transmitting radio waves to avoid radio wave interferences.
3. If you have any questions or encounter any problems in using this product in Japan, please contact the number below.

Contact: Hello NOKIA
0570-0-66542

<http://www.nokia.co.jp>



Index

A

- [access points](#) 78
- [activation keys](#) 87
- [alarms](#)
 - alarm clock 14
 - calendar alarms 58
- [applications, Java](#) 85

B

- [bluetooth](#)
 - connecting two devices, pairing 71
 - connection requests 71
 - connection status indicators 72
 - device icons 71
 - factory set passcode 71
 - headset 84
 - pairing requests 71
 - pairing, glossary explanation 71
 - passcode, glossary explanation 71
 - switching off 73
- [bookmark, glossary explanation](#) 60
- [brightness](#)
 - display 76
 - setting in camera 30

C

- [cache](#)

- clearing 64

calendar

- alarm 58
- sending entries 58
- stopping a calendar alarm 58
- synchronising PC Suite 59

call register

- see *log*

calls

- dialled numbers 23
- duration 24
- international 20
- received 23
- settings 76
- settings for call divert 83
- transferring 22

camera

- adjusting brightness 30
- adjusting contrast 30
- night mode 30
- saving video clips 32
- self-timer 31
- sending images 30
- sequence mode 30
- video recorder settings 32

CD-ROM

- certificates 81

clear screen

- See *standby mode*

clock

- alarm 14
- settings 14
- snooze 14

codes

- lock code
- PIN code 79
- PIN2 code 79

computer connections

connection settings

contact cards

- inserting pictures 26
- storing DTMF tones 23

contrast

- setting in camera 30

copying

- text 45

copyright protection

- see *activation keys*

cutting text

D

data connections

- ending 74
- indicators 13

date

settings 79
digital rights management, DRM
see *activation keys*

E

editing videos 34
adding effects 34
adding sound clips 34
adding transitions 34
custom video clips 34

e-mail 45
offline 52
opening 51
remote mailbox 49
retrieving from mailbox 50
settings 54
viewing attachments 51

Enhancement 94

F

file formats
JAD file
JAR file 86
RealOne Player 36
SIS file 85

file manager 16

fixed dialling 81

G

gallery 33

H

handsfree

see *loudspeaker*
headset settings 84

I

indicators 13
internet access points (IAP)
See *access points*

J

Java
See *applications, Java*

L

lock code 80
log
clearing log 23
erasing contents 25
filtering 25
log duration 25
loopset settings 84
loudspeaker 16
activating 16
turning off 16

M

mailbox 49
media files
fast forward 37
file formats 36
mute sound 37
rewind 37
memory card 17
menu

rearranging 11

messaging

e-mail 45
multimedia message 45
text message 45

movies, muvees

custom muvees 35
quick muvees 35

multimedia messages 45

mute sound 37

P

packet data connections

GPRS, glossary explanation 78

pasting text 45

PC connections

via Bluetooth or USB cable 73

PC Suite

calendar data 59
synchronisation 73
transferring images to a PC 33
viewing phone memory data 16

personalisation 12

PIN code 79

R

recording video 32
recording voice tags 28, 85
reminder

See *calendar, alarm*

remote mailbox 49

resolution, glossary explanation 31

ringing tones

- adding a personal ringing tone 27
- receiving in a text message 49
- removing a personal ringing tone 27

S

security code

- see *lock code*

sending

- calendar entries 58
- images 30

service commands 39

settings

- access codes 79
- bluetooth 70
- calendar 59
- call barring 83
- call diverting 83
- certificates 81
- data connections 78
- date and time 79
- display 76
- headset 84
- language 75
- lock code 80
- loopset 84
- original settings 76
- personalising the phone 10
- PIN code 79
- screen saver 76

UPIN code 79

- UPUK code 80
- wallet code 80

shortcuts

- camera 30
- web connection 61

SIM card

- names and numbers 27

SIS file 85

snooze

- alarm clock 14
- calendar alarm 58

software

- transferring a file to your device 85

sound clips 33

sounds

- muting a ringing tone 22
- personalising 11
- recording sounds 35

speed dialling 21

standby mode 10

synchronisation 74

T

text message 45

thumbnail images

- in a contact card 26

time

- settings 79

transferring content from another phone

87

U

UPIN code 79

UPUK code 80

USB cable 73

user dictionary 43

USSD commands 39

V

video call 20

- answering 22
- rejecting 22

video clips 33

video player

- See *RealOne Player*

video recorder

- see *camera*

voice dialling 27, 85

voice mailbox 20

- changing the phone number 20
- diverting calls to voice mailbox 83

voice messages 20

voice tags 27, 85

- adding 28, 85
- making calls 28

volume control 16

- during a call 20
- loudspeaker 16

W

wallet 67

- entering the wallet code 68
- resetting wallet code 69

storing card details 68

wallet code 68, 80

web

access points, see *access points*

writing text 39