User's Manual

Table of Contents

1 INTRODUCTION	1.1 1.2 1.3	Projector Overview	1-2
2 INSTALLATION & SETUP	2.1 2.2 2.3 2.4 2.5 2.6	Quick Setup	2-3 2-12 2-15 2-19
3 OPERATION	3.1 3.2 3.3 3.4 3.5 3.6 3.7 3.8 3.9 3.10 3.11 3.12	About the Projector Using the Remote or Built-in Keypad Navigating the Menus Using Inputs and Channels. Adjusting the Image Adjusting System Parameters and Advanced Controls Working with PIP and Seamless Switching Working with the Lamp Status Menu Using Multiple Projectors Remote Control of the Projector Error Conditions	3-1 3-3 3-10 3-12 3-19 3-36 3-50 3-57 3-57 3-68
4 MAINTENANCE	4.1 4.2 4.3 4.4 4.5	Warnings and Safety Guidelines Cleaning and Maintenance Guide Replacing Remote Batteries Lamp and Filter Replacement Replacing the Projection Lens	4-4 4-5 4-5
5 TROUBLESHOOTING	5.1 5.2 5.3	DisplaysLampEthernet	5-3
6 SPECIFICATIONS	6.1	Specifications	6-1
A PPENDICES	Appe Appe Appe Appe	ndix A: Glossary	B-1D-1

NOTE: Due to continuing research, all information in this manual is subject to change without notice. 013-100199-02 (06/06) Software v1.2d User's

Introduction

1.1 Projector Overview

Christie DS+5K/5Kc/8K, Mirage S+2K/4K/8K, DW3K/3Kc/6K/6Kc, Matrix 4000 and DLV1400-DX are all professional 3-chip projectors based on next-generation Digital

Light ProcessingTM (DLPTM) technology by Texas InstrumentsTM to deliver high quality, crisp, clean images.

Mirage S+2K/4K/8K projectors provide a powerful combination of SXGA+, high brightness and high contrast ratios to produce flawless, realistic three-dimensional graphic images for simulation, virtual reality and other stereographic related applications.

The *DW3K/3Kc* and *DW6K/6Kc* provide exceptional image quality in a native widescreen format, HD2 resolution and superior color accuracy.

Another reliable and compact projector is the *Matrix 4000*. With its purpose built simulation features such as RGB color matching, and gamma controls, it can be used to simulate any application.

The *DLV1400-DX* are designed for the demands of 24/7 control room applications and provides long-term reliability and performance.

Main Features

- Native SXGA+ or HD2 resolution *(model dependant)* with all others fully scaleable
- Internal scaling of stereo signals (Mirage models)
- 10-bit video processing
- Built-in multi-standard video decoder
- Display of NTSC, PAL and SECAM video input
- User replaceable Cermax[®] Xenon lamp
- LiteLOC[™] for constant brightness
- Intelligent Lens System (ILS^{TM}) to save and restore lens positions
- Motorized lens mount for all models
- Auto-setup feature
- Integrated ChristieNETTM
- Networking ability through RS232 and RS422 connectors
- Status LED display on built-in keypad for easy projector status monitoring
- Control with IR, wired or built-in keypad
- Two input slots for Optional Input Modules

Refer to Section 6 for a complete list of Specifications including Brightness and Contrast and Optional Input Modules

How the projector works '

The projector accepts data/graphics and video input signals for projection onto front or rear flat screens. High brightness light is generated by an internal Xenon lamp then modulated by three DMD (Digital Micromirror Device) panels that provide digitized red, green or blue color information. Light from the "on" pixels of each panel is reflected, converged and then projected to the screen through a single front lens, where all pixels are perfectly superimposed as a sharp full-color image (2D or 3D for Mirage models only).

1.2 Components

The following listed items are shipped with your projector. Ensure you have received all these items before using your projector.

- User's Manual
- IR remote keypad (includes two, 1.5V AA batteries and a mini-stereo cable for conversion to wired)
- Line cord
- Stereo 3D Cable (Mirage only)
- Warranty Card

Lamp Type	Model Name	Resolution	ChristieTWIST	3D	Motorized Lens Mount
500W Models	DLV1400-DX	SXGA+	Optional	•	✓
	Mirage S+2K	SXGA+	Optional	✓	✓
1000W Models	DW3K, DW3Kc	HD2	Optional	•	✓
	Christie DS+5K/Kc	SXGA+	Optional	•	✓
	Mirage S+4K	SXGA+	Optional	✓	✓
	Matrix 4000	SXGA+	✓	•	✓
1200W Models	DW6K, DW6Kc	HD2	Optional	•	✓
	Christie DS+8K	SXGA+	Optional	•	1
	Mirage S+8K	SXGA+	Optional	1	✓

NOTE: Kc models include the same features, but are color corrected to film color standards.

1.3 Purchase Record and Servicing

Whether the projector is under warranty or the warranty has expired, Christie's highly trained and extensive factory and dealer service network is always available to quickly diagnose and correct projector malfunctions. Service manuals and updates are available to service technicians for all projectors.

If you encounter any problems with the projector and require assistance, contact your dealer or Christie Digital Systems. Fill out the information in the table below and keep with your records for future reference.

Purchase Record

Dealer:	
Dealer Phone Number:	
Projector Serial Number:	
Purchase Date:	
Installation Date, if applicable:	

NOTE: The serial number can be found on the license label, which is located at the back of the projector.

You can also register your product on-line by visiting **www.christiedigital.com** ⇒ **Service and Support** ⇒ **Product Registration.** This will keep you in touch with all the latest product information, such as updates, technical bulletins, downloads and Christie newsletters.


Installation & Setup

2.1 Quick Setup

The instructions provided here are for those that are familiar with the projector and wish to quickly set it up and use it temporarily. Refer to the remaining subsections of this manual for a more complete setup.

Step 1 ' Install a Projection Lens

The projection lens is shipped separately from the projector and must be installed prior to setting up the projector. Install the projection lens as described in 4.5 *Replacing the Projection Lens*.

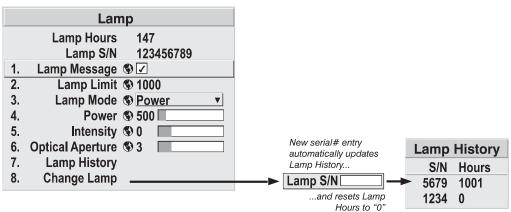

Remove the lens plug from the lens opening in the projector before installing the lens.

Remove the lens when shipping the projector and reuse the lens plug to prevent dust and debris from entering and settling on the projector's optical components.

Step 2 Position the Projector

Place the projector on a sturdy, level surface and position it so that it is perpendicular to the screen at a suitable distance. In general, the further back the projector is positioned from the screen, the larger the image will be.

If required, you can level the projector by adjusting its three feet. With the projector positioned perpendicular to the screen the image will appear rectangular instead of keystoned.

For more detailed instructions on positioning the projector refer to *Projector Position* and *Mounting* later in this section.

Step 3 ' Connect a Source

Located at the back of the projector is the input panel where all source connections are made. Each input is clearly labeled for easy identification.

Using the appropriate cable(s), connect your source. Connect RGB and YPbPr sources to **INPUT 1** located in the upper right corner of the input panel. Use the DVI-I connector at INPUT 2 to connect analog or digital display signals. Connect composite video to INPUT 3 and S-video to INPUT 4.

NOTE: One of the available optional input modules can be installed at INPUT 5 or **INPUT 6** for additional connections.

Refer to 2.3 Connecting Sources for more details on connecting a specific source.

Step 4 ' Connect the Line Cord

A The North American rated line cord is provided with each projector. Ensure that you are using a line cord that meets the appropriate rating standards (CCC for use in China, PSE for use in Japan).

Plug the line cord to the AC receptacle located on the right hand side of the projector and the 3-pronged end into a grounded AC outlet. Make sure the socket outlet is installed near the equipment and is easily accessible. The input voltage to the projector must be capable of 100 – 240 VAC in 500W and 1000W models and 200-240VAC in 1200W models. (See also Section 6 – Specifications for complete details on all power requirements.)

Use the approved North American-rated line cord supplied with the projector. If you are connecting to an area outside of North America make sure you are using an appropriately rated line cord.

Step 5 ' Turn the Projector ON

Press the POWER button on either the remote or built-in keypad to turn the projector on. Wait a few minutes to allow the projector to warm up. The LED status window displays an active pattern of segments to indicate the projector is changing its state from powered down to powered up. The message "On" appears in the display when the projector has completed its initialization and is ready for use.

Step 6 ' Select a Source

Press one of the input keys on the remote or built-in keypad to select and display the image for the source you connected in Step 3.

Step 7 ' Adjust Image

Adjust the more common image settings, such as Brightness, Contrast, Gamma, Focus, Zoom etc. using the direct keys on the IR remote.

You can also access the menu system and adjust these and other image settings by pressing on the remote.

2.2 Installation Considerations

Proper installation of your projector will ensure the quality of your display. Whether you are installing a projector temporarily or permanently you should take the following into account to ensure your projector performs optimally.

Installation type '

Choose the installation type that best suits your needs: front or rear screen, floor mount or inverted mount.

Front Screen, Floor Mount Installation

ADVANTAGES	CONSIDERATIONS
Easy to set up	Shares floor space with audience
Can be moved or changed quickly	
Easy to access	

Front Screen, Inverted Mount (ceiling) Installation

	ADVANTAGES		CONSIDERATIONS
•	Does not take up audience space	•	Installation is more permanent
•	Projector is unobtrusive	•	It is more difficult to access the projector
•	Projector cannot be accidentally moved		

Rear Screen, Floor Mount Installation

	ADVANTAGES		CONSIDERATIONS
•	Projector is completely hidden	•	Requires separate room
•	Projector is easily accessed	•	Installation cost is usually higher
•	Usually good ambient light rejection		

Rear Screen, Inverted Mount (ceiling) Installation

l		ADVANTAGES		CONSIDERATIONS
I	•	Projector is completely hidden	•	Requires separate room
	•	Usually good ambient light rejection	•	Installation cost is usually higher

Rear Screen, Floor Mount with Mirror


	ADVANTAGES		CONSIDERATIONS
•	Projector is completely hidden	•	Requires separate room
•	Usually good ambient light rejection	•	Installation cost is usually higher
•	Requires less space behind screen than		
	other rear screen installations		


Screen Type ' Front Screen Installations

In front screen installations the projector and audience are positioned in front of the screen, which can be flat or curved.

Flat screens are most recommended with this projector. They offer a gain of about 1 with a viewing angle just less than 180°. This type of screen reflects incident light equally in all directions so the audience can see the display from various angles.

Curved screens have a gain greater than 1 with a viewing angle much less than 180°. This type of screen does not reflect incident light equally in all directions instead it is concentrated in a viewing cone. The audience sitting within the viewing cone area will see a brighter image than those sitting just outside this area.

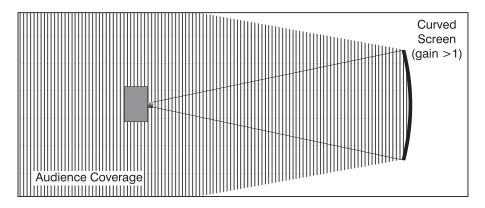

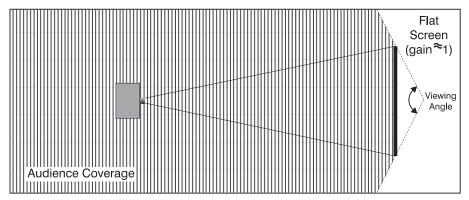

Rear screen installations

There are two basic types of rear screens: diffused and optical.

A diffused screen has a surface, which spreads the light striking it. Purely diffused screens have a gain of less than 1. The main advantage of the diffused screen is its wide viewing angle, similar to that of a flat screen for front screen projection. This type of screen is suitable when a wide viewing angle is required but there is low ambient room lighting.

Optical screens take light from the projector and redirect it to increase the light intensity at the front of the screen. This reduces it in other areas. A viewing cone, similar to that of a curved front screen installation is created. This type of screen is better suited for brightly lit rooms where the audience is situated within the viewing cone.

Screen size

Choose a screen size, which is appropriate for your lens and application. Keep in mind that if the projector will be used to display text information, the image size must allow the audience to recognize all text clearly. The eye usually sees a letter clearly if eyeto-text distance is less than 150 times the height of the letter. Small text located too far from the eye will likely be illegible at a distance no matter how sharply and clearly it is displayed.

To fill a screen with an image, the aspect ratio of the screen should be equal to the aspect ratio of the image (expressed as the ratio of its width to its height). Standard video from a VCR has a 4:3 or 1.33:1 aspect ratio. For example, to display a VCR output with a 4:3 aspect ratio onto a 10-foot (3m) high screen, the width of the screen must be at least 13.3feet (4m).

Ambient Lighting '

The high brightness of this projector is well suited for locations where ambient lighting might be considered less than ideal for projection. A typical room with ceiling lights and windows rarely requires special attention. Contrast ratio in your images will be noticeably reduced only if light directly strikes the screen, such as when a shaft of light from a window or floodlight falls on the image. Images may then appear washed out and less vibrant.

In general, avoid or eliminate light sources directed at the screen.

Other Considerations

Other considerations and tips that can help improve your installation:

- Keep the ambient temperature constant and below 35°C (95°F). Keep the projector away from heating and/or air conditioning vents. Changes in temperature may cause drifts in the projector circuitry, which may affect performance.
- Keep the projector away from devices, which radiate electromagnetic energy such as motors and transformers. Common sources of these include slide projectors, speakers, power amplifiers, elevators, etc.

Choose the best screen size for the application. Since more magnification reduces brightness, use a screen size appropriate for the venue but not larger than required. Installing a large screen in a small room is similar to watching television at a close range; too large a screen can overpower a room and interfere with the overall effect. A good rule of thumb is to be no closer than 1.5 times the width of the screen.

Projector Position and Mounting


Throw distance

Throw distance is the distance measured from your projector's front feet to the screen. This is an important calculation in any projector installation as it determines whether or not you have enough room to install your projector with a desired screen size and if your image will be of the right size for your screen.

You can quickly estimate the throw distance by taking the horizontal width of the screen and multiplying it by the lens throw ratio. The result of this calculation tells you roughly how far back the projector should be positioned from the screen in order to project a focused image large enough to fill the screen. For example, using a 0.73:1 lens, throw distance would roughly be 0.73 x screen width.

IMPORTANT: Once you determine the type of lens and screen size you're going to use, calculate the precise throw distance using the formula or graphs located in Appendix D. Due to lens manufacturing tolerances for lens focal length, actual throw distance can vary $\pm 5\%$ between lenses described as having the same throw ratio.

Throw Distance (TD) = Screen Width (w) X Lens Throw Ratio

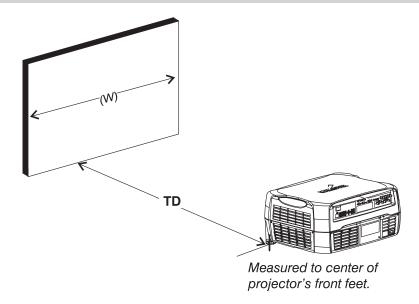

Vertical and horizontal position

The correct vertical and horizontal position of the projector in relation to the screen depends on the lens type and the screen size. Ideally, the projector should be positioned perpendicular to the screen. This way, the image will appear rectangular instead of keystoned (trapezoidal).

The **vertical position** of the image can be offset – that is moved above or below the optical axis (lens center) by adjusting the fully motorized lens mount with the keypad. The amount of vertical offset available depends directly on the lens installed in the projector and can be slightly limited if horizontal offset has been applied. Vertical offset can also be expressed as the percent of half the image height OR the number of pixels of shift from lens center. Refer to Figure 2.1 for some illustrated examples of vertical offset.

Table 2.1 along with Figure 2.2 show the maximum vertical offset of a lens or alternatively, how much of your projected image will appear above or below lens center if the maximum vertical offset is applied using that lens.

Table 2.1. Lens Offsets

Lens Type		l Offset If Height)	Maximum amount of projected image above or below lens center		ge above or (% of Half Widt			
	%	Pixels	%	Pixels	%	Pixels	%	Pixels
0.73:1 fixed	37%	+/-196	69%	+/-721	22%	+/-153	61%	+/-853
1.2:1 fixed (1m-3m)	Info not ye	t available						
1.2:1 fixed (3m-15m)	100%	+/-525	100%	+/-1050	50%	+/-350	75%	+/-1050
1.45-1.8:1 zoom	100%	+/-525	100%	+/-1050	50%	+/-350	75%	+/-1050
1.8-2.5:1 zoom	100%	+/-525	100%	+/-1050	50%	+/-350	75%	+/-1050
2.5-4.5:1 zoom	100%	+/-525	100%	+/-1050	50%	+/-350	75%	+/-1050
4.5-7.3:1 zoom	100%	+/-525	100%	+/-1050	50%	+/-350	75%	+/-1050

NOTES: 1) Offsets are subject to ±7% centering tolerance 2) % Offset = # pixels of offset / half panel resolution x 100.


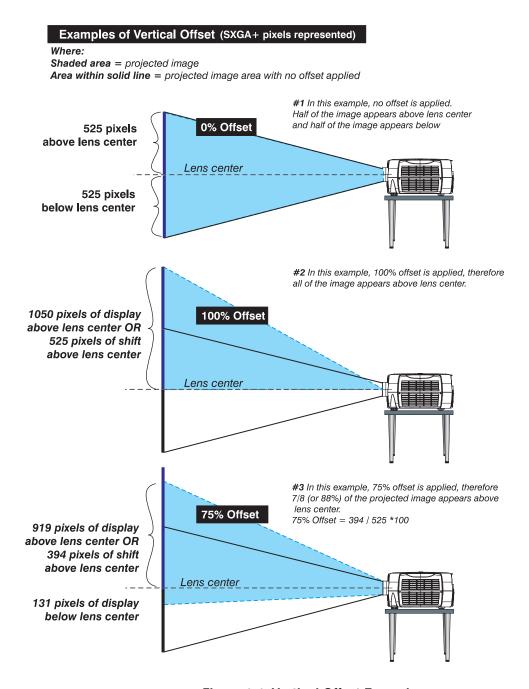


Figure 2.1. Vertical Offset Examples

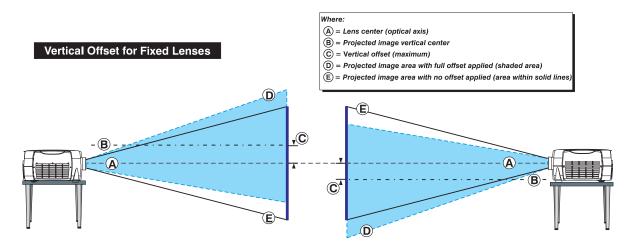

Vertical Offset for Zoom Lenses

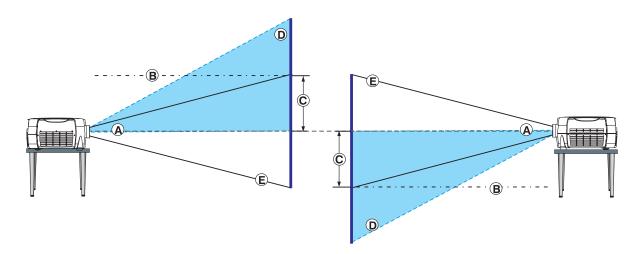


Figure 2.2. Lens Vertical Offsets

The **horizontal position** of the image can be offset – that is moved to the left or right of lens center, by adjusting the fully motorized lens mount through software. The amount of horizontal offset available depends on the lens installed and if the image has already been vertically offset. Horizontal offset can also be expressed as the percent of half the image width – the number of pixels of shift to one side of lens center. Refer to Figure 2.3 for some illustrated examples of horizontal offset.

See also Table 2.1 along with Figure 2.4 which shows the maximum horizontal offset of a lens or alternatively, how much of your projected image will appear to one side of lens center if the maximum horizontal offset is applied using that lens.

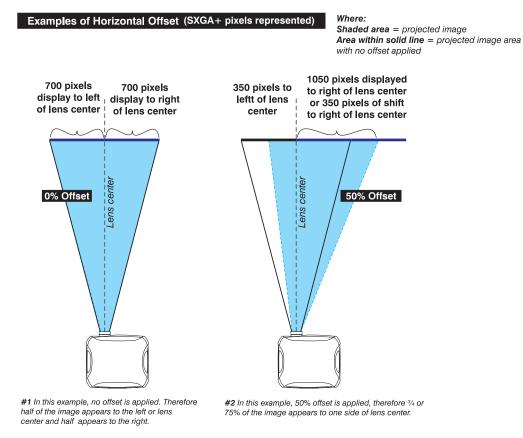


Figure 2.3. Horizontal Offset Examples

Horizontal Offset for Fixed Lenses © |-| D **D** Horizontal Offset for Zoom Lenses **© © D D**

Figure 2.4. Lens Horizontal Offsets

Mounting

There are several methods for mounting the projector. Depending on your chosen installation, one method may be more suitable than another. In typical front and rear screen installations the projector can be mounted to a secure and level surface, such as a table or cart. Carts are useful when the projector has to be moved during a presentation or from site to site. It is recommended you lock the wheels on a cart, when it's in position, to prevent someone from accidentally moving it during a presentation.

CEILING MOUNT - The projector can also be inverted and suspended from the ceiling using a specially designed ceiling mount fixture. This type of mounting is recommended for fixed installations and for those that want the projector out of plain view or have a limited amount of space for projector and audience. For more information, contact your dealer.

Use only the CHRISTIE approved ceiling mount kit designed for your projector. Refer to the installation instructions and safety guidelines provided in the kit.

SPECIAL MOUNTING – The projector can be rotated (front-to-back) up to 360 degrees and mounted without it affecting performance. However, the side-to-side tilt limit of the projector must not exceed ± 15 degrees. This tilt limit is required to ensure optimal performance of the projector.

Adjusting projector height

You can modify the height of the projector to remedy a slightly uneven mounting surface by adjusting the two feet threaded into the bottom chassis. Turn each foot clock-wise or counter-clockwise until the project is level on all sides.

Folded Optics

In rear screen applications where space behind the projector is limited, a mirror may be used to fold the optical path. See Figure 2.5. The position of the projector and mirror must be accurately set – if considering this type of installation call your dealer for assistance.

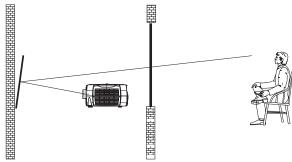


Figure 2.5. Folded Optical Path

2.3 Connecting Sources

Sources connect to the *Input Panel* located at the back of the projector. See Figure 2.6.

The upper right corner (INPUT 1) typically accepts an *RGB signal* from an external analog RGB source, or it can also be used for YPbPr signals or additional video sources. Just beside these BNCs, the DVI-I connector (INPUT 2) accepts digital or analog display signals from a computer. Connect analog *composite video* at INPUT 3 or *S-video* at INPUT 4 from devices such as VCRs, laser disc players or DVD players.

There are also several optional interfaces available for connecting other sources—these interfaces slide into the remaining unused option slot, and can be done while the projector is running.

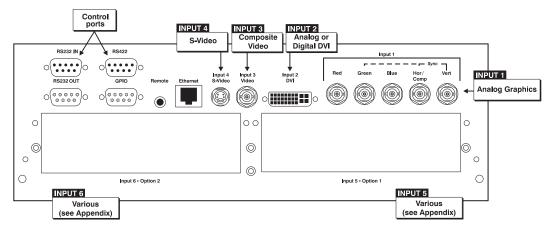


Figure 2.6. Input Panel

NOTES: 1) See Section 6 – Specifications for details regarding compatible inputs. 2) Use high quality shielded cables only for all connections.

RGB Signals

INPUT 1 consists of five BNCs (connectors) for linking to a variety of sources. The typical connection would be to an RGB source such as a PC, Mac, DEC, Sun, SGI and others. This projector supports multiple sync types with RGB signals: sync-on-green, composite sync, and separate H & V syncs.

NOTE: Depending on your source, you may need a custom adapter cable with BNC connectors at the projector end and a different type of connector at the other (such as a 15-pin "D" connector for some computer sources). Contact your dealer for details.

Connect the **SYNC** BNC input(s) first. Then connect the red, green and blue source outputs to the **RED**, **GREEN**, and **BLUE** BNCs on the **INPUT 1** panel. If the source uses sync-on-green, only the red, green, and blue connections are required. If the source provides a composite sync output, connect it to the **SYNC** input labeled **HOR/COMP**. If the source provides separate horizontal and vertical sync outputs, connect horizontal sync to the **SYNC** input labeled **HOR/COMP** and connect vertical sync to **SYNC** input labeled **VERT**. See Figure 2.7.

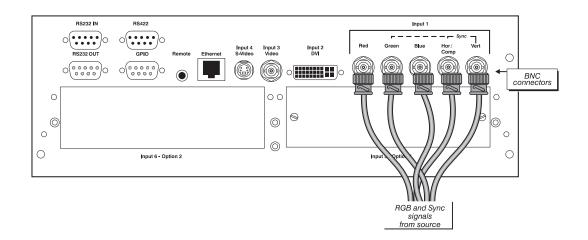


Figure 2.7. Connecting RGB and Sync

NOTES: 1) If for some reason the projector fails to recognize a signal as an RGB signal, specify this **Color Space** option within the **Image Settings** menu. See 3.5 **Adjusting the Image.** 2) To connect YPbPr signals—such as from DVDs or analog HDTV sources—to **INPUT 1**, use the red, green and blue BNCs as described in **YPbPr Signals** (below).

YPbPr Signals (COMPONENT VIDEO)

Connect a YPbPr signal (*component video*) to **INPUT 1** or **INPUT 2** as shown in Figure 2.8.

NOTES: 1) If, for some reason, the projector fails to recognize a YPbPr signal, specify this **Color Space** option within the **Image Settings** menu. See 3.5, **Adjusting the Image**. 2) Do not connect <u>digital</u> component signals (known as YCbCr) to INPUT 1. Install an appropriate optional module in INPUT 5 or INPUT 6 for this.

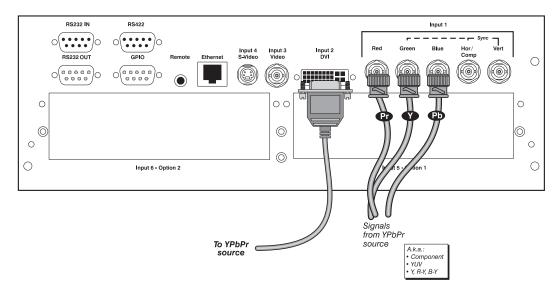


Figure 2.8. Connecting YPbPr sources

Composite and S-Video '

INPUT 3 and **INPUT 4** provide simultaneous connection of both a composite video source (**INPUT 3**) and an S-Video source (**INPUT 4**). See Figure 2.9.

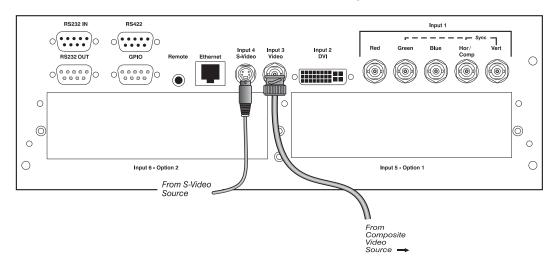


Figure 2.9. Connecting Composite or S-Video sources

DVI Digital Video '

Use the DVI-I connector at **INPUT 2** to connect either analog or digital video devices to the projector. When connecting devices that transmit an analog video signal such as VCRs, laptops, and PCs use the DVI cable provided with the projector. Plug the DVI-I (single link) connector end to the projector and the 15-pin VGA connector to the device.

Use a cable with DVI-I connectors at both ends to connect devices that transmit digital and analog video signals such as high-quality DVD players, satellite receiver and digital cable TVs.

NOTES: 1) To ensure true digital output from devices that transmit digital signals, connect to the DVI-I connector. **2)** DVI loop through is not available unless you have the optional **DVI Input Module** installed at **INPUT 5** or **INPUT 6**.

Optional Inputs '

Optional modules allow you to increase your total number of inputs and/or accommodate different signal types, whether analog or digital. Install in the areas labeled **INPUT 5** or **INPUT 6**. Options include:

- RGB 500 Input Module
- RGB 400 Active Loop Thru Input Module
- RGB 400 Buffered Amplifier Input Module
- PC250 Analog Input Module
- Serial Digital Input Module
- DVI Input Module
- Dual SD/HD-SDI Module

NOTE: See Appendix F – Optional Input Modules for a brief description of each interface.

2.4 Connecting Communications

As an alternative to the projector's keypad or remote, you may wish to communicate with the projector using a PC or other controller. Such a device sends commands and receives feedback via serial links (RS232 and RS422), Ethernet or GPIO communications to the projector, all described below.

Remote Keypads '

As desired, direct the projector's IR remote keypad towards the display screen or the projector's IR sensors. Alternatively, connect a wired (tethered) version of the remote to the 3.5mm RCA jack labeled as **REMOTE** on the projector's input panel. Note that response to a wired keypad must also be enabled in the *Communications* menu—see **3.6**, *Adjusting System Parameters and Advanced Controls* for more information.

Serial Port Connections

There are two types of serial ports available on the projector: RS232 and RS422. You can connect a device with a serial interface, such as a computer to either of these connectors (not both) and control the projector remotely by entering specific serial communication commands.

Connecting RS-232

The two 9-pin DIN connectors labeled RS232 IN and RS232 OUT on the input panel are dedicated to serial communication (see Figure 2.10). Using the appropriate serial communication cables (see Appendix C) connect the controlling source, such as a personal computer to the RS232 IN connector. Then set the baud rate to match that of the computer. Refer to Section 3 for details on changing the projector's baud rate.

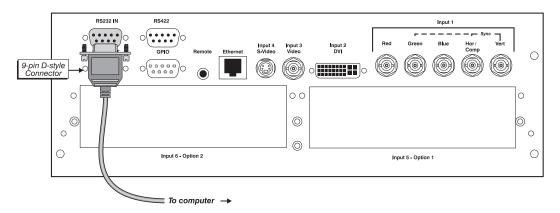


Figure 2.10. Connecting RS232

Connecting RS-422

If you wish to control the projector with a computer and or other controlling device with RS-422 capability, connect a RS-422 serial communication cable between the computer and the RS-422 port on the projector (see Figure 2.11). RS-422 is better suited for serial communication over long distances then is RS-232 communication.

Lise the RS-422 port only if your device had RS-422 capability – always consult the literature provided with your equipment before connecting. Connecting to the RS-422 port with incompatible equipment could damage your projector.

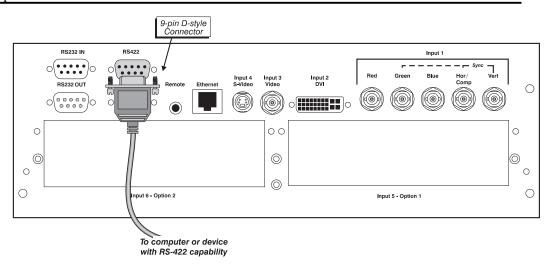


Figure 2.11. Connecting RS422

Ethernet Communications

Ethernet Communications

To add the projector to an existing Ethernet network with other equipment such as controllers and other projectors, connect standard CAT5 Ethernet cable between your Ethernet controller (or hub) and the Ethernet port on the side of the projector.

Upon connection to an Ethernet network, the projector's factory default IP address of 0.0.0.0.0 will automatically enable the DHCP function (if available on the network) to assign a new IP address that is valid and unique for that network. Or, if there is no DHCP function available on the network (or if a specific static IP address for the projector is preferred or required), you can set the address in the *Ethernet Settings* menu or via an ASCII serial command.

Regardless of how it is assigned, once a projector has a valid and unique address it will respond to commands sent to this address. To determine the projector's current IP address, consult the *Status* or *Communications* menus.

Refer to **Section 3** for further information about setting up and using a projector connected via Ethernet.

Log on to www.christiedigital.com for detailed information on ChristieNETTM.

Connecting Multiple Projectors

RS-232 NETWORK: If you want to connect multiple projectors in a network with serial communication, connect the controlling source to the RS232 IN connector of the first projector in the network. Then take another serial communication cable and connect one end to the RS232 OUT connector and the other end to the RS232 IN connector of the next projector. Continue this pattern of connection with all projectors in the network. The last projector in the network will only have a connection to the RS232 IN connector. See Figure 2.12.

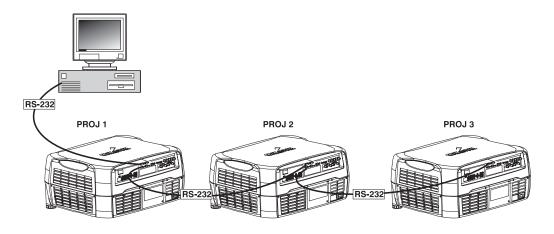


Figure 2.12.

MIXED NETWORK: To control multiple projectors with a computer/controller having an RS422 interface, first set them all to the same baud rate as your RS422 controller.

NOTE: You must enable this combination of RS422 and RS232 in the Communications menu. Set the "Network Routing" option to "RS232 and RS422 Joined". See **Section 3** for details.

Then chain the projectors together by connecting an **RS232** port of the first projector (already connected to the computer/controller through the **RS422** port) to an **RS232** port on the next projector in the chain. Continue connecting projectors in this manner until you've reached the last projector in the chain, so that only the last projector has one unused **RS232** port. See Figure 2.13.

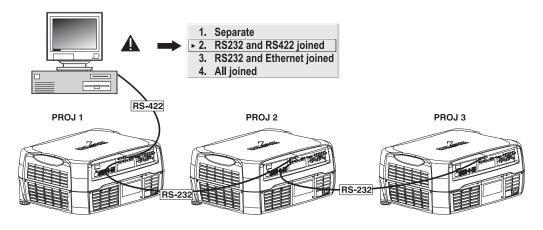


Figure 2.13.

Note that communication parameters such as baud rate must be set to match the particular controlling device *before* connecting as a network—refer to the documentation that came with your controlling device in order to determine the proper baud rate. See *3.6, Adjusting System Parameters and Advanced Controls* if you need help changing the projector baud rate. In addition, set the Network Routing to "RS232 and RS422 Joined" if you want to reach all projectors.

NOTES: 1) To avoid damage, connect only properly wired serial communication cables. See **Appendix C** for details. **2)** It is recommended that each RS232 communication cable be no more than 25 feet in length. Use high quality cables.

ETHERNET NETWORK SETUP: To add one or more projectors to an Ethernet network, use standard CAT5 cable to connect each projector's Ethernet port to a hub belonging to the network. A controller or PC must also be connected to the hub. See Figure 2.14.

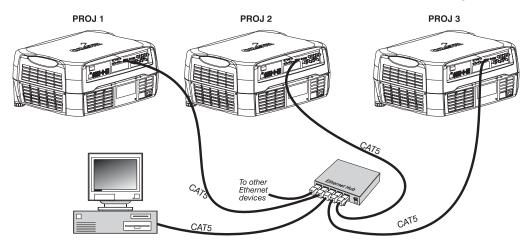


Figure 2.14.

SETTING THE PROJECTOR'S IP ADDRESS: Upon connection to most Ethernet networks, each projector's factory default IP address of 0.0.0.0 triggers the network's DHCP (Dynamic Host Configuration Protocol) server function to automatically assign an IP address that is valid and unique for use on that network. Depending on the network, this DHCP-assigned IP address usually remains stable for a single session, but may change with subsequent power-ups and logins. On some networks, the address will remain stable from session to session. In all cases, the projector's IP address and port appear in the *Status* menu as well as the *Ethernet Settings* submenu. See Figure 2.15.

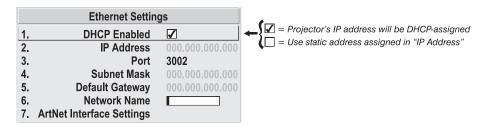


Figure 2.15. Setting the Projector's IP Address

Note that if a projector's IP address is anything *other* than 0.0.0.0 (shown as 000.000.000.000.000 in the *Ethernet Settings* menu) upon connection to an Ethernet network, or if DHCP is not available on the network, the automatic DHCP server function for supplying a valid and unique IP address to the projector is disabled. Instead, a specific and static IP address must be defined in projector memory—enter the new address in the *Ethernet Settings* submenu, or send to the projector via a serial command. The IP address will be in effect until it is changed again, or until the DHCP checkbox is re-enabled for use with a DHCP server on the network.

CHANGING THE PORT#: On some Ethernet networks, firewall restrictions may require that the port number of the projector be changed from its default of 3002. If so, enter a new port number in the *Ethernet Settings* menu or include the new port# in an XIP serial command sent to the projector. It is highly recommended not to use a port# below 1000, as these ports are typically reserved for and used by common IP applications.

SUBNET MASK AND DEFAULT GATEWAY: The Subnet Mask and Default Gateway are automatically assigned when DHCP is enabled. If a static IP is being used, it must be assigned before the subnet mask. The Default Gateway is an optional router device used to send and receive data outside the subnet.

ArtNet INTERFACE SETTINGS: Refer to Section 3.6 – Adjusting System Parameters and Advanced Control, System Configuration – Communication for additional information about ArtNet settings.

Separating Networks '

By default, communications originating from one type of serial controller—RS232 vs. RS422 vs. Ethernet—stay on the corresponding network path. A "Separate" setting indicates this separation for "Network Routing" in the *Communications* menu. If you are using an RS422 controller, for example, it will communicate only with the projector to which it is connected unless you change this setting to either "RS232 and RS422 Joined" or "All Joined".

Communicating to All Ports

To relay all messages to all ports—RS232, RS422, and Ethernet—set the "Network Routing" option in the *Communications* menu for each projector to "All Joined". This configuration is useful if you are using a non-RS232 controller with the RS232 linking available between these projectors. For example, you may want to use both an RS422-compatible controller and an Ethernet-connected PC for working with a network of projectors linked via their RS232 in/out ports.

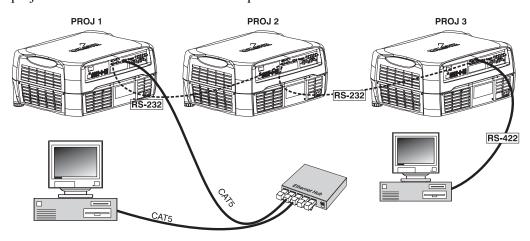


Figure 2.16.

To isolate just RS422 communications, select "RS232 and Ethernet Joined". In Figure 2.16, only projector #3 will respond to the RS422 controller. To isolate just Ethernet communications, select "RS232 and RS422 Joined"—only projector #1 will respond via Ethernet.

2.5 System Integration GPIO Connector

The GPIO connector on the input panel can be used to provide a method of interfacing a wide range of external I/O devices to the projector.

Refer to Appendix E: System Integration for complete details on pin configuration and how to program the various pins on the connector.

2.6 **Power** Connection

The North American rated line cord is provided with each projector. Ensure that you are using a line cord that meets the appropriate rating standards (CCC for use in China, PSE for use in Japan).

Plug the line cord to the AC receptacle located at the back of the projector, below the input panel, and the 3-pronged end into a grounded AC outlet. Make sure the socket outlet is installed near the equipment and is easily accessible. The input voltage to the projector must be capable of 100 – 240 VAC in 500W and 1000W models and 200-240VAC in 1200W models. (See also Section 6 – Specifications for complete details on all power requirements.)

Use the approved North American-rated line cord supplied with the projector. If you are connecting to an area outside of North America make sure you are using an appropriately rated line cord.

Always power down the projector before unplugging the AC line cord. Wait 5-10 minutes for the main exhaust fan to turn off and for the lamp to cool sufficiently before unplugging the projector.

🕰 WARNINGS 🕰


Do not attempt operation if the AC supply and cord are not within the specified voltage and power range.

Wait for the cooling fans to turn off before unplugging the projector.

Operation

About the 3.1 **Projector**

This section explains how to effectively operate the projector once it has been installed. It is recommended that you read this section and familiarize yourself with the components and the available menu options before you begin using your projector for the first time.

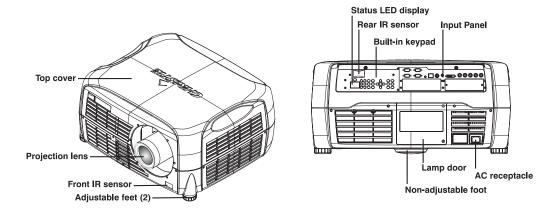

Built-in Keypad '

The built-in keypad is located at the back of the projector, beside the input panel. Use it similarly to the IR remote to control the projector. A status LED display is also included on this keypad for monitoring projector status.

AC Receptacle '

The AC receptacle is located at the back of the projector just below the input panel. Use this outlet to plug in an appropriately rated line cord. Refer to **Section 6** – **Specifications** for details.

Adjustable Feet '

Located on the underside of the projector are two fully adjustable feet. Raise or lower these feet when positioning the projector to ensure it is level on all sides so the displayed image will appear rectangular without any keystone.

NOTE: The third foot, located at the rear of the projector (underside) is not adjustable.

Refer to **Section 2 - Projector Position and Mounting** for instructions on how to adjust the projector's feet.

Lens Mount & **Projection Lenses**

The projector is built with a motorized lens mount that allows for easy lens control and adjustment. This includes such functions as adjusting vertical and horizontal offsets, zoom and focus. The lens mount can be fitted with any one of the available optional lenses – see **Section 6 - Specifications**.

Zoom and Focus – There are two internal lens motors that allow for quick motorized adjustment of zoom and focus. Adjust zoom to fit the displayed image on the screen and adjust focus to improve the clarity of the image.

NOTE: You can manually override zoom and focus adjustments set with the remote. Turn the outer ring on the projection lens to adjust focus and the inner ring to adjust zoom.

- **Lens Offset** Vertical and horizontal offset is performed on the lens mount through the use of DC motors.
- **Shutter** Standard on all models the shutter allows you to turn the screen absolutely black when in the "on" state.
- **Optical Aperture** Enables adjustment of light output and contrast ratio.

NOTES: 1) The projection lens is shipped separately from the projector. 2) Use the lens cap when transporting the projector to avoid scratching and damaging the lens, which could affect your displayed image.

Input Panel '

All source connections are made to the input panel located at the back of the projector. Connect RGB or YPbPr sources to INPUT 1, analog or digital display signals to INPUT 2, composite video to INPUT 3, and S-video to INPUT 4. Any of the available optional modules can be installed in INPUT 5 and/or INPUT 6.

There is no status display on the input panel. The only status display is part of the built-in keypad located at the rear of the projector.

Cooling and Air Vents '

There are numerous air vents located around the projector. It is important these vents remain unobstructed. Adequate airflow through the projector will prevent it from overheating.

Front & Rear IR Sensors

The two IR sensors located on the projector receive transmissions from the IR remote from up to 100 feet away. It is important to keep the transmission path to these sensors unobstructed for uninterrupted communications with the projector. The front IR sensor is located next to the projector's nameplate and the rear IR sensor is located at the back of the projector just above the status LED display.

Lamp Door '

The lamp door is located at the back of the projector, which provides easy access to the lamp module for replacement. See **Section 4** for lamp replacement procedures.

3.2 Using the Remote or **Built-In Keypad**

Laser radiation is emitted from the laser diode in the remote. Do not look directly into the beam of the remote.

Keypad Commands '

The projector is typically controlled using one of the following keypads:

- **Built-in Keypad** located at the back of the projector
- **Remote Keypad** for tethered or tetherless control up to 100 feet away (includes cable for use as a wired remote)

While each of the keypads provides complete control of the projector, they differ slightly in their arrangement of keys and in what functions can be accessed directly with a key press rather than requiring use of the menu system. You may find one keypad more convenient than another for your specific installation and application.

NOTE: The remote keypad has a single IR protocol and can be converted to a wired remote by connecting the cable provided with the projector to the RCA jack labeled as **REMOTE** on the input panel.

Built-in '

To control the projector when signals from a remote keypad cannot reach the projector, use the projector's built-in keypad (Figure 3.1). The nearby LED display provides feedback indicating current status and activities of the projector. Because the

built-in keypad has fewer keys than the remote keypad, certain projector functions are accessible only through the menu



Figure 3.1. Built-in Keypad


system rather than via a direct key.

NOTE: The built-in keypad cannot be disabled.

Refer to the key descriptions provided for the IR remote – see Figure 3.2.

IR Remote '

The IR remote keypad controls the projector by way of wireless communications from a battery-powered infrared (IR) transmitter. Use the IR remote keypad the same way you would use a remote keypad supplied with a TV or VCR. When making key presses, direct the keypad either toward the screen or toward the front or rear of the projector. One of the two IR sensors on the projector will detect the signals and relay the commands for internal processing.

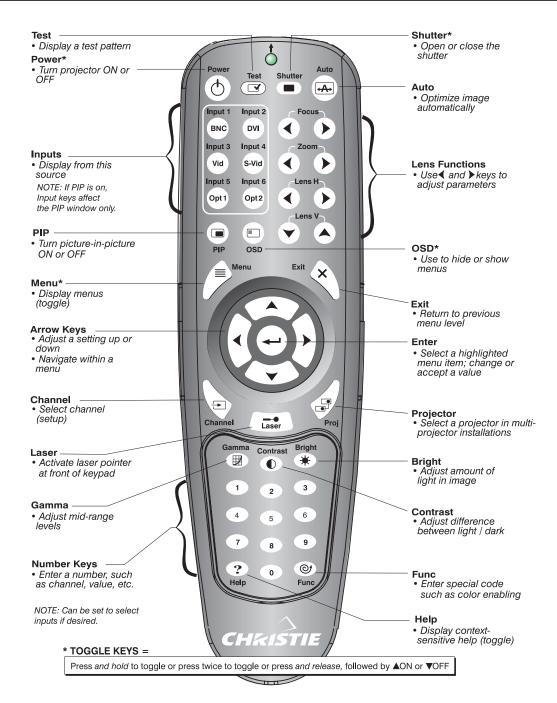

*These are toggle keys, which require you to press and hold or press twice or press and use the up/down arrow keys.

NOTE: To turn the OSD off you must press (SS) and (V).

Figure 3.2. Remote Keypad

Wired Remote '

You can convert the IR remote into a wired remote keypad using the cable provided with the projector. Connect one end into the remote and the other to the mini stereo connector on the input panel labeled as **REMOTE**. The wired remote is recommended when:

- the built-in keypad is inaccessible,
- the lighting conditions are unsuitable for proper IR transmission.

NOTE: Leave the batteries in the wired remote for the laser key () to work.

Guide to Keypads

Keep in mind the following guidelines:

- Press keys one-at-a-time; there are no simultaneous key combinations required.
- Note that three keys—Power 🐧, Shutter shuffer and OSD SD—are "press-andhold" keys that do not function with a typical quick press-and-release key press.
- Hold arrow keys down for continuous adjustment/movement in one direction. In serial networks, pause briefly between adjustments to ensure that more distant projectors can "keep up" with the commands.
- If you press a key while the projector is still responding to the previous action, such as during power-up, the second key press may not take effect.

Keypad Commands

Specific keypad commands are explained below:

(b) Power ON/OFF

Press and hold (b) for two seconds or press twice quickly to toggle the projector on or off with a single keystroke. Or press and release **(b)** followed immediately by (a) (on) or (v) (off) to guarantee the correct toggle (useful if you are unsure of the present state).

NOTES: 1) After powering down, the lamp cooling fan remains on for approximately 5 minutes to cool the lamp. 2) It is a good idea to avoid turning a projector back on until it has been off for a few minutes. Hot re-strikes of the lamp may reduce lamp life.

Test

Press (Test) to step forward through all internal test patterns and this will eventually lead you to the current input. If you press and then cycle by using the and right arrow keys, you'll be cycling in either direction through the test patterns only, no input.

(Auto) Auto

Press (Auto) to initiate an automated process in which the projector optimizes critical display parameters such as size, position, pixel tracking, etc., for the current source. These parameters are listed in Table 3.1. An Auto Setup can save time in perfecting a display and you can modify the adjustments as desired.

Table 3.1. Auto Setup

What an "Auto Setup" Does				
OPTIMIZES:	SETS TO DEFAULT:			
Pixel Tracking	Contrast			
Pixel Phase	Brightness			
Size and Blanking	Auto Input Level (off)			
Vertical Stretch	Detail (if video source)			
Position	Filter			
Input Levels	Luma Delay			

NOTE: You must have an unlocked channel present to use Auto Setup.

Channel

Press to select a specific source setup (*channel*) defined and stored in projector memory. Once you enter a 2-digit channel number (or, if there is a list displayed, highlight it and press), the display will automatically change and update according to the numerous setup parameters defined for that channel. Note that a new channel is automatically created if you adjust an image from a new source.

NOTE: Channel () key behaviour during a presentation depends on whether or not the **Display Channel List** option is enabled in the **Menu Preferences** menu. You can choose to use a scrollable list of channels when you press , or you may prefer to enter the desired channel number "blind", i.e., without on-screen feedback. See **Menu Preferences** later in this section.

Input 1

Press (nput) to display from the data input source connected to BNCs labeled INPUT 1.

Input 2

Press (nput 2) to display from the DVI source connected to INPUT 2.

Input 3

Press (nput) to display from the composite video source connected to INPUT 3.

Input 4

Press (nput 4) to display from the S-video source connected to INPUT 4.

Input 5

Press (nput 5) to display from the INPUT 5 interface module installed in the Option 1 slot.

NOTE: If you have the optional *Dual SD/HD-SDI Module* installed and there are two inputs connected here, the second input (B) is considered **INPUT 7.** If you are using the built-in keypad or the remote keypad, press **INPUT 5** to access **INPUT 7** as follows:

- While displaying from INPUT 5, press (nout) again. This switches to INPUT 7.
- While displaying from any input *other* than the *Dual SD/HD-SDI Module*, press press, this switches to either **INPUT 5** or **INPUT 7**, depending on which of the *Dual SD/HD-SDI Module* inputs (A or B) was last used. Press pagain to display from the other *Dual SD/HD-SDI Module* input.

Input 6

Press (put) to display from the INPUT 6 interface module installed in the Option 2 slot. NOTE: If you have the optional *Dual SD/HD-SDI Module* installed and there are two inputs connected here, the second input (B) is considered INPUT 8. If you are using the built-in keypad or the remote keypad, press INPUT 6 to access INPUT 8 as follows:

- While displaying from INPUT 6, press (nput 5) again. This switches to INPUT 8.
- While displaying from any input *other* than the *Dual SD/HD-SDI Module*, press (nput), this switches to either INPUT 5 or INPUT 8, depending on which of the Dual SD/HD-SDI Module inputs (A or B) was last used. Press (hout) again to display from the other Dual SD/HD-SDI Module input.

Contrast

Press Control to change the amount of white in your images. Use keys until you reach the desired level of contrast—for best results, start low and increase so that whites remain bright but are not distorted or tinted and that light areas do not become white (i.e., "crushed"). Conversely, low contrast causes dim images. See 3.5, Adjusting the Image (Image Settings subsection).

(Bright) Brightness

Press (Bight) to increase or decrease the amount of black in the image. Use (1) keys until you reach the desired level of contrast—for best results, start high and decrease so that dark areas do not become black (i.e., "crushed"). Conversely, overly high brightness changes black to dark gray, causing washed-out images. See 3.5, Adjusting the Image (Image Settings subsection).

Gamma Gamma

"Gamma" determines how gray shades are displayed between minimum input (black) and maximum input (white) for a given amount of signal. The proper setting helps maintain optimized blacks and whites while ensuring a smooth transition for the "inbetween" values utilized in grays. Unlike brightness and contrast controls, the overall tone of an image can be lightened or darkened without changing the two extremes and your images will be more vibrant yet with good detail in dark areas when using the Gamma control.

The normal gamma setting of 2.2 is correct for most signals and conditions. If excess ambient light washes out the image and it becomes difficult or impossible to see details in dark areas, lower the gamma setting to compensate. This will improve contrast ratio while maintaining good details for blacks and whites

Menu Menu

Press Menu to enter or exit the projector's menu system.

OSD	OSD	(On-screen	display)
-----	-----	------------	----------

Press to hide the projector's menu system during use. To see the menus again, do one of the following:

- Press and hold osp for two seconds
- Press and release os followed immediately by

Invisible menus are fully functional, enabling "hidden" access to numbered features and image adjustments by entering the corresponding sequence of key presses on the keypad.

NOTE: With OSD "on", you can still hide error messages and slide bars by disabling these options in the **Menu Preferences** menu.

Shutter Shutter

Press and hold (Shutter) for two seconds to toggle the internal mechanical shutter blade closed or open with a single keystroke. Or press and release (Shuffer) followed immediately by (closed) or (open) to guarantee the correct toggle (useful if you are unsure of the present state). Alternatively, press (Shutter) to toggle from the present on/off state. A closed shutter blanks the display (turns it to black). Close the shutter to mute all display while maintaining access to projector functions. Opening the shutter restores the image.

NOTES: 1) The status display shows "5H", when the shutter is closed. 2) The shutter is open upon power-up.

Function Kev

IF WITHIN A MENU: Using the for special tasks within the menu system is noted with the appropriate topic elsewhere in Section 3. For example, press (Func) in the Channel Setup menu to enable deletion or copying of a channel.

IF WITHIN A PRESENTATION: Press ^{Func} followed by a 2-Func 6 1 = Red digit number to enable a specific color or colors in the display (see right). For example, Func 6 4 will display only red and green data, Func 6 will display all color data. Eliminating one or more colors can help with certain diagnostics and setups, such as when accurately overlaying one image on top of another from stacked projectors.

6) (6) (2) = Green (6)(3)= Blue Func 6 4 = Red & Green Func 6 5 = Green & Blue Func 6 6 = Red & Blue Func 6 7 = All Colors

NOTE: Color enabling can also be implemented from numerous locations within the menu system.

(Proj Projector

Press Projectors a specific projector within a group of projectors or to confirm if the local projector is listening. The number in the "Enter Number" window indicates which projector is currently listening to commands, and will match the projector number that has been defined in the Menu Preferences menu.

The "Projector" checkbox (read-only) shows whether or not the projector physically connected to a keypad is listening to commands from that keypad. A checkmark

means that connected projector is listening; if there is no checkmark, you are communicating with a different projector.

To control a specific projector with the keypad, press (Proj) and then enter the 3-digit number assigned to the projector you want to use. If you switch to a projector other than the one you are currently using, the checkmark will disappear.

To broadcast to multiple projectors, press Pol and then again without entering a projector number. Keypad commands will then affect all projectors present. Note that there is no method of controlling a *group* of projectors within the same wired configuration using the wired keypad exclusively, since there is only one wired protocol available.

NOTES: 1) The "Broadcast Keys" option in the Communications menu must be selected for only **one** (any) projector in a serial network. The keypad in use must be OFF (disabled) for the remaining projectors. 2) See 3.6, Adjusting System Parameters and Advanced Controls.


Enter

Press (-) to select a highlighted item, to toggle a checkbox, or to accept a parameter adjustment and return to the previous menu or image.

Exit Exit

Press (Exit) to return to the previous level, such as the previous menu.

NOTE: (Ext) does not save changes within text editing boxes (including number editing of a slide bar value) or within pull-down lists. It acts as a "cancel" in these cases.

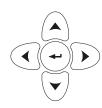

Arrow Keys

Use the keys to change a slide bar value or to select a different option within a pull-down list without having to first scroll through options. See also *Editing* Text later in **Section 3**.

Use the \(\bigcap\) keys to navigate within a menu, pull-down list or text box.

Lens Focus, Zoom and Lens H, Lens V

When adjusting the image for focus, zoom, horizontal and vertical positioning, use the specific arrow keys () or) related to each function. A small window will appear to indicate the type of adjustment taking place. For example,


- Use the "Focus" or \(\mathbb{\text{keys}}\) keys to improve image clarity as desired.
- Use the "Zoom" "O or keys to achieve a desired image size.
- Use the "Lens H" " or keys to position the image horizontally while still keeping it rectangular.
- Use the "Lens V" A or keys to position the image vertically while still keeping it rectangular.

Press (Exit) to return to presentation level.

NOTE: Use the key (built-in keypad) with the general keys to get the same effect as if using the arrow keys related to "Lens V" or "Lens H" on the IR remote.

- Laser

Press to activate the laser pointer on the remote. This feature is useful when making presentations - just point the remote at the screen to highlight an area of your presentation. The closer you are to the screen the brighter the laser beam appears. The laser pointer works best in an environment where ambient lighting can be controlled.

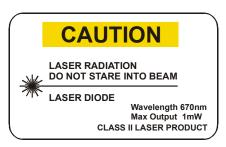

NOTE: Leave batteries in the wired remote keypad for the $\stackrel{\longleftarrow}{\longrightarrow}$ key to work.

3.3 Navigating the Menus

Most of the controls for the projector are accessed from within the projector's menu system. There are several groups of related functions, with each group selectable from the Main menu as shown at right. Press Menu at any time to display this Main menu

On the remote keypad, either enter the number corresponding to the function menu you wish to access, such as (2) for the

menu Main Menu 1. Size and Position 2. Image Settings 3. Channel Setup 4. Configuration 5. Lamp 6. Status 7. PIP and Switching 8. Test Pattern S Off

Image Settings menu, or use the keys on any keypad to highlight the desired option, then press . The corresponding function menu or pull-down list of further options will then appear.

With a function menu displayed, navigate in a similar manner—enter a menu option number for any numbered option, or use the \(\rightarrow\) keys to highlight the desired option, then press (Enter). Extra long menus have a scroll bar on the right—use the arrow keys to access the remainder of the menu. Locked items or items that do not pertain to the current action or condition appear dimmed and cannot be selected.


NOTES: 1) If there is no signal present, all source-dependent adjustments are disabled. 2) After 15 minutes of inactivity, the projector leaves the menu system and returns to the presentation. 3) The **Status** menu is read-only.

When finished with a function menu, do one of the following:


- Press (Bit) to return to the previous screen
- Press Menu to leave the menu system and return to the presentation

On-line Help '

If at any time you are uncertain what to do next, press (Help) to display summary information about the current menu or highlighted option. Press (Help) again to exit. In addition, a line of "hint" text is included at the bottom of some menus.

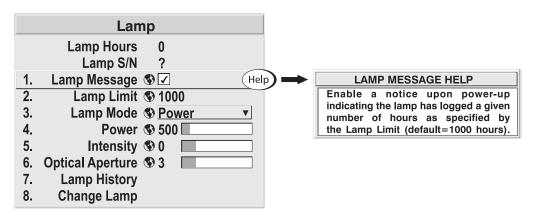

Press (Help) from the presentation level to access general *Help Topics*. Scroll as necessary within a topic; press (Help) or (Exit) to return to your presentation.

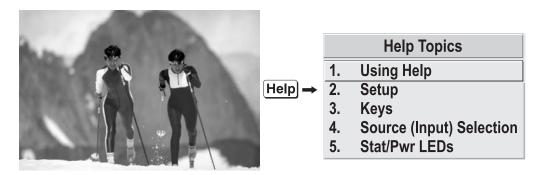

Time-outs '

If a slide bar, menu, or message is displayed, you have limited time in which to make a keypad entry before the projector returns to presentation level (Help) and the graphic disappears. These time-outs may vary depending on what is displayed.

The Global Icon

Menu options that include this icon apply universally to any incoming signal.



Using Slide bars and Other Controls

Most of the function menus allow you to change settings by using slide bars. checkboxes, and pull-down lists. To select a slide bar, toggle a checkbox status, or view a pull-down list, do one of the following within the function menu:

- Enter the menu option number corresponding to the setting you wish to change (for example, press Menu 1) 3) to select "Vertical Stretch" in the Size & Position menu).
- Or move the highlight to the option desired and press (Enter).
- Or move the highlight to the option desired and press to adjust immediately.

- Or bypass the menus entirely and use a single key to immediately access an adjustment during your presentation (applies only to options having their own key, such as Contrast, Brightness, Gamma, etc.).
- For "blind" access, hide the entire menu system (see OSD key, above) and/or direct slide bars activated by their own key (such as Contrast, Brightness, etc.). Control by using the proper keypress or numerical sequence of key presses.

Once selected, change the setting as desired (see below) and press to save and return to the current function menu.

Slide bars in menus – The current value for a given parameter, such as size or vertical stretch, appears to the left of its slide bar icon (adjustment window). This number often expresses a percentage, or it may have units associated with it (such as pixels, degrees Kelvin, etc.), depending on the specific option. Press to gradually adjust the setting up or down—both the number and the length of the bar change accordingly. Hold for continuous adjustment. Or press to activate a slide bar text box for specific number entry via the keypad, then press to save (or press to cancel).

"Direct" slide bars - For quick access, you can access Gamma, Brightness, and Contrast slide bars without traveling the menu system. For example, simply press to immediately display the same contrast slide bar accessed with the Contrast option in the *Image Settings* menu.

Use the arrow keys to adjust a direct slide bar, or press and enter a specific number from the keypad, then or or to save (or to cancel). When you are done, press to save and return to your presentation.


NOTES: 1) You can still adjust a direct slide bar as usual if the display is turned off (see on Menu Preferences menu) — the slide bar just won't be visible. 2) A direct slide bar disappears if it is not used within 5 seconds.

Checkboxes - Conditions are present if its adjacent checkbox contains a checkmark. To toggle the checkbox, simply highlight and press →, or highlight and use → to check and ✓ to uncheck. If a checkbox is numbered, simply enter its number to immediately toggle the checkbox.

Pull-down lists – To see a pull-down list of options available for a given parameter labeled with a ∇ , you can:

- Highlight it and press (Enter)
- Or enter the menu option number.

Use the or keys to navigate up and down within the list (the current choice is noted with a small '). Press to choose an option from the list, if desired (see Figure 3.3).

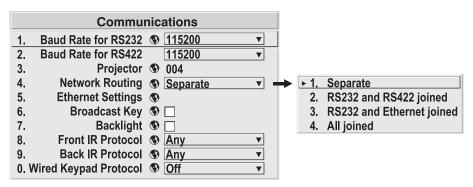

Example of Pull-Down List

If you prefer to quickly scroll through a list without first pulling it down, highlight the option and use \bigcirc or \bigcirc . Press \bigcirc when the desired choice appears.

NOTES: 1) Press or be to jump between pages in an extra long pull-down list.
2) Press while in a pull-down list to **cancel** any change.

Editing Text '

ACTIVATE THE EDIT WINDOW: To enter or edit text, highlight the desired parameter (such as a channel name) and press to activate its adjacent edit window. Any previously entered text is displayed with its first character highlighted in a square cursor, signifying that this character is ready for editing.

NAVIGATE WITHIN THE EDIT WINDOW: Press to move the cursor forward or to move the cursor backwards as desired.



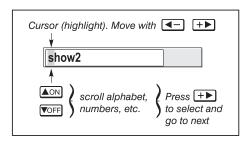


Figure 3.3. Entering Text

EDIT A CHARACTER: To edit a highlighted character, use A and to scroll through the alphabet, numbers, spaces and punctuation available. When the character you need appears, press to select it—the cursor will move to the next character of current text, if present. Note that you can also enter a number directly from the keypad—it will be accepted and the cursor will move on.

ADD OR DELETE A CHARACTER OR SPACE: To insert a space at the cursor location, press Func . To delete a highlighted character (or space), press Func .

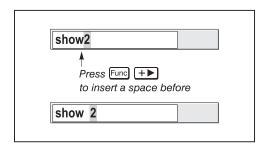

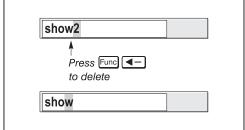

PRESS (ENTER) WHEN FINISHED: To accept edits and leave the edit window, press (Enter).

NOTE: Press (Exit) at any time to cancel changes and return to the previously defined text.

Editing Numerical Values '

Enter numbers directly from the keypad in order to specify numbers representing projectors, channels (source setups), or slots. As each digit is entered, it is displayed and the cursor moves on. Note that channel numbers are defined with 2 digits—for example, if you enter only a single digit (such as "7") for a channel number, the channel will automatically be defined as "07". Enter "07" to utilize this channel.

NOTES: 1) Once you enter the first digit, this digit replaces all old digits. 2) If you press any non-numbered key, the number entered up to that point is accepted and updated as the new value. 3) Press Est to cancel editing of numerical values.

3.4 Using Inputs and Channels

NOTE: See **Section 2, Installation and Setup**, for a full explanation of how to connect sources to the projector.

The projector stores and automatically recalls up to 50 different channels (source setups) for a variety of inputs. This memory feature allows you to define and conveniently use a wide variety of customized setups rather than having to repeatedly re-configure the projector for different presentations. Depending on what you have defined, each physical source connection (i.e., input at the projector) can have several different channels associated with it.

Do I Select an Input Or a Channel?

INPUT – An input is a source physically connected at the projector. (nput) describes the source signal according to which *input slot* it is connected.

SWITCHING INPUTS – Press the appropriate direct key — (nput), (nput), (nput), (nput) or (nput) to quickly display from one of the six inputs connected to the projector. The image will be displayed according to the following:

If it is the first time you have used the source/input (or if you used the input but did not define a channel by adjusting anything), the projector will recognize the new input signal based on its frequencies and polarities, and will automatically display an image according to default settings for such a signal. In general, the image from the new source will be as large as possible without losing its aspect ratio. This and other default image settings depend on the incoming source.

If you used the source once before and changed a display parameter such as contrast, V-Position, etc., then a channel was automatically created and still exists in projector memory (see below). Using one of the keys will automatically recall this channel—and all its setup parameters—and update the display accordingly.

If more than one channel exists for the input, the image will be displayed according to the setup parameters for the first channel with matching characteristics.

NOTE: Inputs 7 and 8 require the **Dual SD/HD-SDI** module in either of the projector's option slots. For their selection, see also **3.2 Using the Remote or Built-In Keypad**.


CHANNEL - A channel is a collection of measurements, locations and settings that tailor the display of a signal to your specific needs. Since source types and applications can vary greatly, you will likely want to adjust and define a wide variety of parameters, such as brightness, contrast, size, etc., in order to customize and optimize the display from or for a particular source. For example, the display settings you choose for a VCR source may be very different from those you choose for a high-

resolution computer source, or one signal may simply vary from another signal used previously through the same input location. Once you have adjusted a display parameter, such as pixel tracking or contrast, all current settings are collectively stored in the projector's memory as a unique 2-digit channel, such as ① ②. You can have numerous distinct channels available for the same input, any of which can be selected by using the channel number. key on the keypad followed by the 2-digit channel number.

Shown at right is a sample channel list as would be available from Channel. This is typically called the *channel list*.

NOTE: The hannel key may display a channel list or not, depending on what you have defined for "Display Channel List" (see Menu Preferences later in this section).

In order to access channels by using on the keypad, you must first create the channels. See below.

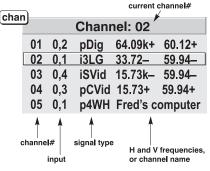

Creating a New Channel - AUTOMATIC -

To use a new source with the projector, a new channel must be added to projector memory

Channel List

so that the projector will respond properly to an input signal from that source in the future. A new channel can be created automatically, as described here, or it can be copied from an existing channel and then edited as necessary (see Copying or Deleting Channels later in this section).


When you select a direct input ((nput), (nput), (nput), (nput), (nput) or (nput), any existing channels in the projector are searched for matching input and signal parameters – this only occurs if Auto Source is enabled on these channels. If no match to the incoming input signal is found in currently defined channels, a new channel is temporarily created based on factory-defined defaults for this type of signal. The *channel number* assigned is the lowest available number from 01-50.

NOTES: 1) An automatic channel will be discarded unless one or more of its parameters are changed and will not appear in the channel list (see below). 2) If two channels have the same distinguishing source characteristics except for the reversal of sync connectors (i.e., H-sync and V-sync, are switched), they are still defined as distinct channels. 3) You cannot define a new channel without an incoming signal.

If the incoming signal *does* match an existing channel, the image will be set up and displayed as usual according to the parameters currently defined for that channel.

USING A CHANNEL: You can normally select a channel at any time by pressing (see right). If you want to prevent a channel from appearing in this list, you must edit the channel as described in *Channel Edit* later in this section. Such a channel can still be selected by entering its number as shown at right.

NOTES: 1) The current channel is highlighted upon entering the channel list, or, if this channel is not displayed here, the first channel in the list is highlighted. 2) Channels created automatically do not appear in the channel list unless a parameter for the channel has been changed.

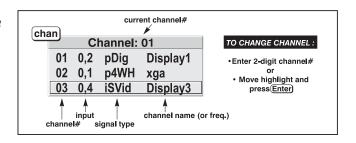


What Channels Are Defined So Far?

All available channels are listed in the *Channel Setup* menu, which describes how each channel can be accessed and which serves as the gateway for editing, copying

and deleting channels.

Press from the presentation level to display the *Main* menu. To display the *Channel Setup* menu, press 3, or move the highlight to the *Channel Setup* option and press . The *Channel Setup* menu will appear (see sample at

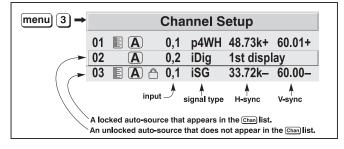

All Channels Appear in the Channel Setup Menu

right), with the active channel highlighted.

WHAT APPEARS IN CHANNEL SETUP MENU? This menu lists all channels defined so far and indicates where they are connected on the input panel. The far left column lists channel numbers currently defined. The values in the far right columns indicate horizontal and vertical frequencies—if someone has defined a name for this



channel, it appears here instead. Remaining columns contain details pertaining to each channel setup, such as its switcher number (always 0 = projector), slot location, a variety of icons indicating access to each channel, and an abbreviated description of each signal type. See *Editing a Channel Setup* for details.

NOTE: If you have more than a handful of channels, use and to see the remaining channels not visible in the initial display of channels.

SIGNAL TYPE — Either channel list, whether the key list or the *Channel Setup* menu, identifies signal types in a shortened form as defined below. These descriptors indicate what signal information the projector uses to identify a match for a given channel, and are preceded by either an "i" (interlaced signals) or "p" (progressive signal"). See Table 3.2.

Abbrev.	Signal Type
4WH	Composite (4 wire) on HC input
4WV	Composite (4 wire) on V input
SG	Sync-on-green
5W	Separate H,V
5WR	Separate H,V swapped
SVid	S-Vid
CVid	Composite Video
Dig	Digital

Table 3.2. Abbreviations for Signal Type

FUNCTIONS WITHIN THE CHANNEL SETUP MENU—To copy, delete or edit a channel, highlight the desired channel in the *Channel Setup* menu and do one of two things:

- Press Func if you want to copy the selected channel or delete this or other channels. See Copying or Deleting a Channel below.
- Press if you want to edit channel setups (i.e., non-image related parameters) for the selected channel. See *Editing a Channel Setup*, below.

Copving or **Deleting Channels**

TO COPY A CHANNEL, highlight the desired channel in the Channel Setup menu, then press func to go to the *Channel Copy/Delete* submenu. Select "Copy" and press —a new channel will be created. It is identical to original, which still remains, but it is identified with the next available number from 01-50. If you change your mind and do *not* want to copy the current channel, press (Edit) to cancel and return to the previous menu. Copying channels is a quick method for creating numerous channels, each of which can then be edited and adjusted for a variety of presentations in the future. See Figure 3.4.

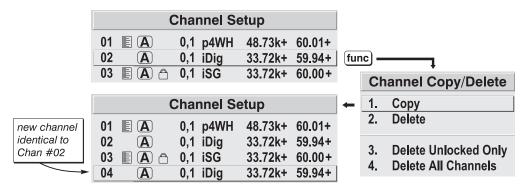


Figure 3.4. Copying A Channel

TO DELETE A CHANNEL, highlight the desired channel in the *Channel Setup* menu, then press Func to activate the *Channel Copy/Delete* submenu. Select "Delete" and press ——a confirmation window will appear to make sure that you really want to delete this channel. See Figure 3.5.

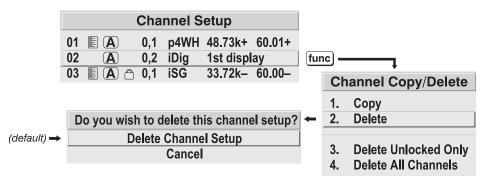


Figure 3.5. Deleting a Channel

TO DELETE MULTIPLE CHANNELS, highlight any channel in the Channel Setup menu and press (Func) to go to the Channel Copy/Delete submenu. Select "Delete Unlocked Only" and press • to delete all unlocked channels. Or select "Delete All Channels" to delete all channels, even those that are locked. In either case, the current channel will remain but will be redefined from projector defaults.

NOTE: For any deletion, a confirmation box appears to make sure that you really want to delete. Select "Cancel" (default) if you don't want to delete after all.

Editing a Channel Setup '


The basic setups that describe how and where a channel can be accessed are listed in the Channel Setup menu. These channel setups can be edited at any time in the Channel Edit submenu.

CHANNEL EDIT — STEP 1

Press Menu from the presentation level to display the main menu. To display the Channel Setup menu, press 3, or move the highlight to the Channel Setup option and press —. The *Channel Setup* menu will appear.

CHANNEL EDIT — STEP 2

To edit parameters shown in the *Channel Setup* menu, select the relevant channel and press . The *Channel Edit* menu will appear similar to the sample shown below.

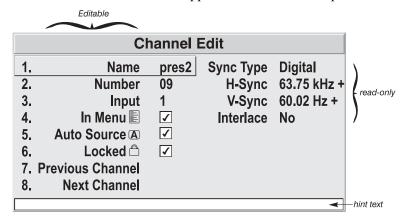

Channel Edit Menu (SAMPLE)

CHANNEL EDIT — **STEP 3** If desired, review and/or edit the following channel setups in the *Channel Edit* menu:

- **CHANNEL NAME:** An alphanumeric label can be defined and/or changed here. Channel names can be up to 12 characters in length.
- **CHANNEL NUMBER:** A 2-digit channel number can be changed here.

NOTES: 1) If you enter a channel number that already exists, a dialog message appears indicating that this number is already in use—assign a different channel number. **2)** You can define up to 50 channels.

- **INPUT:** 1-8, corresponding to where on the projector's input panel the source is connected
- IN MENU: If checked (default, except for automatically defined channels with unchanged parameters), this defined channel will then appear in the list available when we is pressed. If unchecked, the channel must be accessed via on the keypad or via the Auto Source function.

NOTE: On-screen display of the channel list is an option that must be set in the **Menu Preferences** menu.

- **AUTO SOURCE:** If checked, (default), the projector can automatically locate this channel when an incoming input signal matches. If not checked, the projector can locate the selected channel only when it is directly selected via on the keypad—and a change in input signal will *not* result in a channel change.
- LOCKED: If checked, all of the image settings for this channel are disabled. If unchecked (default), all available image settings can be adjusted as desired. You cannot use Auto Setup with a locked channel.
- **PREVIOUS CHANNEL:** Select this option to see or change *Channel Edit* settings for the previous channel in the *Channel Setup* list.
- **NEXT CHANNEL:** Select this option to see or change *Channel Edit* settings for the next channel in the *Channel Setup* list.

3.5 Adjusting the Image

The most commonly used options for image adjustments are accessed through two menus: Size and Position (Menuscript) and Image Settings (Menuscript), both of which appear in the Main menu. From either of these two menus, you can change settings affecting the image from the current channel by working with the appropriate slide bars, checkboxes and pull-down lists. (But) will return to the previous menu (or to the presentation, if from the Main menu) and accept any changes you may have entered. Settings are saved with the current channel.

From your presentation, you can access any of the individual options in these menus by pressing followed by the appropriate two-digit number representing their location in the menu system. For example, press for example, press for quickly access the "Gamma" option in the *Image Settings* menu.

Note that for certain options, you may prefer to use a "direct key" from presentation level to go directly to a particular option without traveling through the menu system (available for certain display parameters only). For example, press control to access the "contrast" slide bar immediately. Press to return to your presentation.

NOTES: 1) To hide these "direct" slide bars, disable the "Display Slide bars" checkbox in the **Menu Preferences** menu. **2)** To hide the entire menu system from view, turn off the on-screen display by pressing \bigcirc \bigcirc .

Before You Begin ' Use Auto Setup (Auto)

For a good and efficient first step in perfecting the image, press (Auto). This initiates an automated process in which the projector quickly optimizes critical display parameters such as size, position, pixel tracking, etc., based on the type of incoming source data detected. An *Auto Setup* can save considerable setup time, and you can still modify the adjustments as desired using menu options described below.

Size and Position Menu

In the Size and Position menu, you can increase or decrease the size of your image, change its proportion (aspect ratio), move the image to a specific area of the screen, and refine other related parameters. Use Size and Position controls to match the image precisely to the screen used at the site.

Size and Position 1. Resize Presets No Resizing 2. Size 0.729 3. Vertical Stretch 1.000 4. **Pixel Track** 858 5. Pixel Phase 6. 360 H-Position 7. V-Position 262 8. Reserved 9. Reserved 0. Advanced Size and Position


Refer to "Using Slide bars and Other Controls" (earlier in this

section) if you need help using any of the options and controls. Changes made in the *Size and Position* menu are applied immediately and are saved when you exit the menu (press Ext or Menu).

Resize Presets

NOTE: The same resize presets are available to all HD2 widescreen models. Please note however, the graphics used to describe each preset in this section are of the SXGA+ models only.

Select a *Resize Presets* option to quickly display an image in its native resolution or to automatically resize an image to closely fill the projector's native resolution or to optimize the width or height of your display. *Size*, *Position* and *Blanking* parameters will automatically adjust

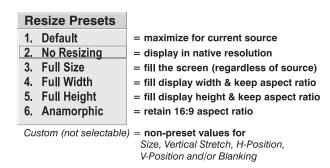


accordingly or, if Blanking is set first, which defines an Active Input Area, *Resize Preset* scaling will occur in this region of interest only. Resizing options are explained in detail below.


WHAT IS THE RESIZING DEFAULT? By default when displaying a new source, your image will utilize as much of the projector's display area as possible for the type of incoming source data, but with minimal or no changes to aspect ratio. See *Select "Default"* below.

WHEN "CUSTOM" APPEARS: The "Custom" re-size descriptor automatically appears in the Size and Position menu when any of the values for Size, Vertical Stretch, H-Position, V-Position or Blanking do not correspond to those for a preset. This option is not offered in the Resize Presets pull-down list.


• Select "DEFAULT" for most sources (factory default). The image will be centered and displayed as large as possible depending on the type of source.

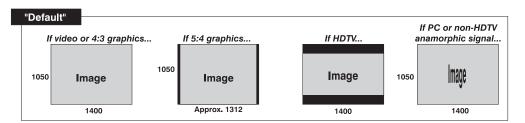


Select "NO RESIZING" to display the image in its native resolution, which may or may not match the projector's resolution. For example, for a source with a native resolution of 800 x 600, "No Resizing" in an SXGA+ projector will use the central 800 x 600 pixels and have a black border—the black border areas are unused areas. See below.

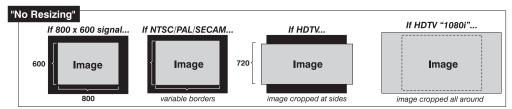


- Select "FULL SIZE" to use all pixels for displaying the image, regardless of source or original aspect ratio. Incoming source material having a different aspect ratio than the projector will be stretched for display.
- Select "FULL WIDTH" to fill the projector's display from left-to-right without changing the original aspect ratio of the image. Depending on the source, data at the top and bottom may be discarded (cropped), or the display may have black borders at the top and bottom (called "letterboxed").

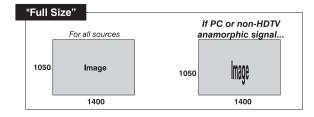


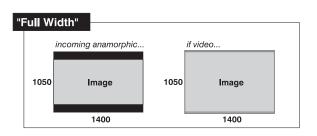

• Select "FULL HEIGHT" to fill the display from top-to-bottom. Depending on the source, this may create borders.

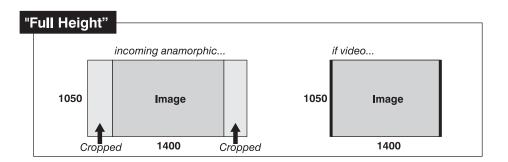

• Select "ANAMORPHIC" to display an anamorphic image in its native 16:9 aspect ratio. The image will fill the screen from side-to-side and be centered between black bars at top and bottom.

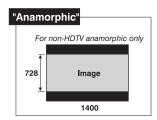

Size

"Size" controls both the image *width* and *height* in tandem, maintaining the current aspect ratio (proportion) of the displayed signal data.

Vertical Stretch

"Vertical Stretch" adjusts the *height* of the image while keeping the width constant. Use "*Vertical Stretch*" to change the aspect ratio of the display.

Pixel Track

Steady flickering or several soft vertical stripes or bands across the entire image indicates poor pixel tracking. Proper pixel tracking helps ensure that the image quality is consistent across the screen, the aspect ratio is maintained, and that the pixel phase can be optimized (described below). Tracking determines the frequency of the pixel-sampling clock, indicated by the number of incoming pixels per line, so that all pixels generated by a particular source are sampled.

NOTE: By default, the projector samples at the correct frequency for most sources.

For best results, use a good test pattern such as a smooth gray consisting of a clear pattern of black and white pixels, or a similar "half on, half off" graphic image, such as the *Windows* shutdown screen. Adjust the slide bar until the vertical stripes broaden to the point where one large stripe fills the image. If the image still exhibits some shimmer or noise, adjust *Pixel Phase* (below).

Pixel Phase

NOTE: Adjust "Pixel Phase" **after** "Pixel Tracking".

Adjust pixel phase when the image (usually from an RGB source) still shows shimmer or "noise" after pixel tracking is optimized. Pixel phase adjusts the phase of the pixel-sampling clock relative to the incoming signal.

For best results, use a good test pattern such as a smooth gray consisting of a clear pattern of black and white pixels, or a similar "half on, half off" graphic image, such as the Windows 2000 shutdown screen. Adjust the slide bar until the image stabilizes and each pixel is clearly defined. You may notice that you can stabilize the image at more than one point—i.e., you may find that the image appearance at "11" is identical to the image appearance at "38", thus you can use either setting.

If some shimmer from a video or HDTV source persists, use the "Filter" control to remove high-frequency noise from the signal.

H-Position

This option moves the image right or left within the area of available pixels.

NOTE: The value shown represents where the approximate center of the image lies in relation to the total number of pixels available horizontally. This varies widely according to the signal—watch the image while adjusting.

V-Position

This option moves the image up or down within the area of available pixels.

NOTE: The value shown represents where the approximate center of the image lies in relation to the total number of pixels available vertically. This varies widely according to the signal—watch the image while adjusting.

Advanced Size and Position — SUBMENU

This submenu consists of the following options:


ACTIVE INPUT WINDOW: This readonly value indicates the current size (i.e., area) of your displayed data or "region of interest" as defined by the blanking controls. By default, the projector automatically determines what portion of its full resolution to use, and pixels in the surrounding borders are turned off.

Advanced Size & Position		
Active Input Window	720x483	
1. Top Blank	0	
2. Bottom Blank	0	
3. Left Blank	0	
4. Right Blank	0	
5. Plug & Display (EDID) 🕸	1280x1024x60Hz▼	

You can also specify a specific active input window size by adjusting one or more "Blank" settings. For example, if you have blanked (cropped) 100 pixels from both the left and right edges of an incoming source of 1400 x 1050, the remaining active input window will be reduced to 1200 x 1050. When using SD or HD or a decoded video source at INPUT 3 or INPUT 4, the default blanking of "0" defines an active input window of 720 x 483.

BLANKING (TOP, BOTTOM, LEFT, and RIGHT): Crop the image as desired so that unwanted edges are removed from the display (changed to black—see right). Blanking defines the size of the *Active Input Window*, or area of interest. Range of adjustment depends on the source resolution and other factors. After adjustment of blanking it may be necessary to perform a source switch.

NOTE: Blanking a PIP image resembles zoom (see Figure 3.6). For example, left Blanking zooms the right side of the PIP image; Right Blanking zooms the left side. There are no black bars.

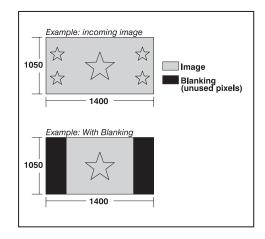

Blanking of a Primary Image

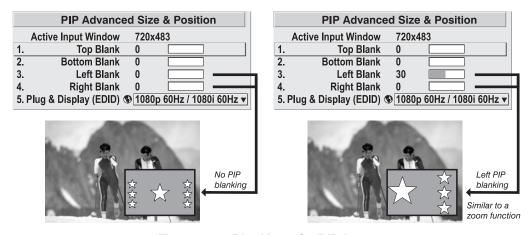


Figure 3.6. Blanking of a PIP Image

PLUG & DISPLAY (EDID): By default, a *Plug & Play (EDID)* source outputs a signal according to the EDID information provided by the projector. To override this information and display in a different format (for example, if your *Plug & Play [EDID]* device does not support the projector's resolution and/or frequency), select the desired *Plug & Play (EDID)* resolution from the list.

Any daisy-chained projectors will also display according to the chosen *Plug & Play (EDID)* format.

EDID = Extended Display Identification Data standard.

- 1. 1400x1050x60Hz
- ► 2. 720p (1280x720x60Hz)
 - 3. DC2K (2048x1080x60Hz)
 - 4. 1024x768x116Hz 3D
- 5. 1280x1024x110Hz 3D
- 6. 1400x1050x102Hz 3D
- 7. 1080p 60Hz / 1080i 60Hz
- 8. 1080p 50Hz / 1080i 50Hz
- 9. 1080p 24Hz / 1080i 30Hz

Image Settings Menu '

Use options in the *Image* Settings menu to alter your main image without affecting its size or position. Changes made to the *Image Settings* menu are applied immediately and are saved when you exit the menu (press (Exit) or (Menu)). Options not available for the projector model or source are disabled and appear dim (gray).

	Image Settings			
1.	Contrast	50.0		
2.	Brightness	50.0		
3.	Gamma 🚯	2.2		
4.	Filter	Off	▼	
5.	Detail	0		
6.	Noise Reduction	0		
7.	Color Space	YPbPr	▼	
8.	Video Options			
9.	Input Levels			
0.	Advanced Image Settings			

Contrast

(SHORT CUT: Press ond adjust the slide bar.)

"Contrast" increases or decreases the perceived difference between light and dark areas of your image (0-100). For best results, keep close to 50. If contrast is set too high, the light parts of the image lose detail and clarity. If the contrast is set too low, the light areas will not be as bright as they could be and the overall image will be dim. For best results, start with a low value and increase so that whites remain bright but are not distorted or tinted, and that light areas do not become white (i.e., are "crushed").

NOTE: If the environment lighting changes, an adjustment of **Gamma** is recommended (see below).

Brightness

(SHORT CUT: Press Bright) and adjust the slide bar.)


"Brightness" increases or decreases the amount of black in the image (0-100). For best results, keep close to 50. Start with a high value and decrease so that dark areas do not become black (i.e., are "crushed"). Conversely, high brightness changes black to dark gray, causing washed-out images.


Gamma

(SHORT CUT: Press and adjust the slide bar.)

"Gamma" is a global setting that determines what gray shades are displayed between minimum input (black) and maximum input (white) for all signals. A good gamma setting helps to optimize blacks and whites while ensuring smooth transitions for the

"in-between" values utilized in other colors. Thus, unlike "Brightness" and "Contrast" controls, the overall tone of your images can be lightened or darkened without changing the extremes, and all images will be more vibrant while still showing good detail in dark areas.

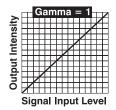

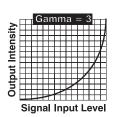

Gamma is used to fine-tune the gamma table currently in use, ranging from 1-3 (2.2 = default). If excess ambient light washes out the image and it becomes difficult or impossible to see details in dark areas, lower the gamma setting to compensate. This will improve contrast while maintaining good details for blacks. Conversely, if the image is washed out and unnatural, with excessive detail in black areas, increase the setting. In high ambient light conditions, lower gamma may produce better results than higher gamma. Gamma of 2.2 (default) indicates the gamma table has not been adjusted. For more information, refer to *Advanced Image Settings* submenu, *Gamma Table*. Again, good gamma improves contrast while maintaining good details for blacks.

Filter

The proper filter setting is automatically set for virtually all signals, and rarely needs to be changed. It applies a low pass filter for noise reduction in the incoming input signal, particularly for HDTV or SDTV. Applied in the analog domain before sampling, this filtering removes high frequencies and thus reduces pixel phase noise (note this also reduces signal bandwidth). Override only if standard pixel tracking and phase adjustments do not adequately clear up a "noisy" video signal, or if a graphics signal appears overly "soft". Both instances indicate that "Filter" may be set to the wrong option.

Detail

"Detail" adjusts the sharpness of a video image so that edges remain clearly defined. It can be particularly useful if a significant "Noise Reduction" adjustment has caused the image to appear too soft. Adjust until the display is as sharp as desired, keeping in mind that because "Detail" adds some high frequencies back into the image, it can also re-introduce a certain degree of noise.

Noise Reduction

"Noise Reduction" is similar to the "Filter" control, but operates in the post-sampling digital domain with a more subtle effect. Higher settings are most useful for clearing up noisy RGB images such as those from a PC. Adjust as desired, keeping in mind that reducing noise (which reduces high frequencies) may also soften the image.

Color Space

"Color Space" determines how the color components of an analog input signal are decoded for accurate color in the display.

Selecting a color space option is useful only for analog signals and certain digital sources connected to INPUT 1, INPUT 2, INPUT 5 or INPUT 6. Although color space for these analog signals is automatically determined by the projector, in some circumstances you may wish to override this and manually set a specific color space.

NOTE: For many digital signals or for signals connected to **INPUT 3** or **INPUT 4**, the color space function is entirely automatic and the pull-down list disabled.

The current color space appears in the *Image Settings* menu. Press to select a different option:

- Select **RGB** unless you are using component video at **INPUT 1, 2, 5** or **6**.
- Select **YPbPr** (Video) with a standard definition televised signal (SDTV).
- Select **YPbPr** (**HDTV**) with a high definition televised signal (HDTV).

NOTE: When certain RGB signals are first connected, the projector may not initially recognize them as RGB and will incorrectly decode their color information as YPbPr (video). These signals can include:

- RGB signals in NTSC, PAL, SECAM frequency ranges.
- Scan-doubled sync-on-green.
- Scan-quadrupled sync-on-green.

For these signals, change the Color Space to RGB, and then define a new channel for future use.

Video Options — SUBMENU

This submenu is used with video sources only (INPUTS 3 or 4).

ENABLE DECODER AGC: Automatic Gain Control (AGC) affects decoded video images only. Enter a checkmark (default) in most instances—this activates the decoder's AGC circuit to ensure properly bright images. Delete

	Video Options				
1.	Enable Decoder AGC		✓		
2.	Video Standard		A ?	▼	Γ
3.	Input Video Black		0 IRE	▼	
4.	Color	③	50.0		
5.	Tint		50.0		
6.	Decoder Luma Delay		35.0		

the checkmark if a decoded video image exhibits strange color artifacts such as stripes in highly saturated colors, indicating an incompatibility between this source and the AGC.

VIDEO STANDARD: For all but the more unusual video standards available in the world, the projector automatically detects the incoming horizontal and vertical frequencies and sets the projector's processing of this signal to the corresponding standard. The current video standard name appears in the Video Options submenu, and includes an "A" if it has been auto-detected. Press (to view or select a different video standard from those available to the



projector—any that are disabled have frequency characteristics that differ from those of the incoming signal. Selecting a specific standard forces the projector to process the signal according to this standard.

NOTE: Best results are obtained with defined channels. Otherwise, switching from one video source to another can sometimes cause slight disturbances in the display, indicating that the Auto function is struggling. Recover by briefly selecting a different video standard, then going back.

Table 3.3. Regions and Video Standards: Summary

Standard	Where Used (SUBJECT-TO-CHANGE)
NTSC	N. America and Japan
NTSC 4.43	A tape-only standard for partially-translated hybrid signals
PAL	Most of Europe, China, Australia, some of S. America, some of Africa
PAL-M	Brazil
PAL-NC	Argentina, Chile, other Latin American countries
PAL 60	
SECAM	France, Eastern Europe, most of Africa

NOTE: Generally, use "Auto" for all instances EXCEPT: 1) a poor quality input signal or 2) a black-and-white video signal. In order to detect and display such signals, select the relevant standard from the list.

INPUT VIDEO BLACK: This control compensates for incoming elevated black levels present in certain video signals, and ensures that blacks in the display are



neither crushed (i.e., where dark grays appear black) nor excessively elevated (i.e., where blacks appear dark gray). By default, the projector automatically determines the best setting according to the type of incoming video signal:

- **0 IRE** Used for DVD output with "enhanced black", SECAM, most PAL standards, and Japanese NTSC.
- **7.5 IRE** Used for most NTSC video signals.

For some types of video, you can override the setting. The control is disabled for other types of video (and all graphics sources). Generally, if black appears crushed when brightness = 50, choose "0 IRE". If black appears excessively elevated, use "7.5 IRE".

COLOR: This slide bar adjusts the color saturation level, i.e., the *amount* of color in a video image. Lower settings produce less saturated colors — for example a setting of "0" produces a black and white image. If the color level is too high, colors will be overpowering and unrealistic.

TINT: This slide bar adjusts the red/green color hue for true color reproduction of video and HDTV signals connected to Input 3 or 4. For best results, adjust tint while displaying an external test pattern—otherwise, it is recommended that tint remain at its default setting.

DECODER LUMA DELAY: This control affects any incoming composite or S-video signal, delaying the luma signal (intensity) in relation to the chroma (color). In the image, increasing the luma delay will move luma (seen as a shadow where colors overlap) to the right slightly, with colors remaining in place. Decreasing this delay will move the shadow slightly to the left. If necessary for your current source, adjust so that no shadows occur with adjacent colors.

Input Levels — SUBMENU

NOTES: 1) Because the projector automatically optimizes input levels for all but the most unusual of sources, it is recommended that only experienced users use the **Input Levels** submenu. 2) Before beginning, check that overall contrast and brightness settings are near 50 and that color temperature is properly set up on an internal grayscale test pattern. 3) There must be at least 2 consecutive white pixels present in the image for proper "Auto Input Level" function. Leave this control off after use.

Good RGB or input levels that is, the *drives* and *black* levels for each of the three colors, red, green and blueensure that images from analog sources other than decoded video have maximum contrast without crushing black or white. By default (and in an "Auto Setup"), the projector automatically determines the best input levels by

Input Levels		Turn OFF before
1. Auto Input Level		leaving menu.
2. Red (Pr) Blacklevel	256	\
3. Red (Pr) Input Drive	256	Levels adjust
4. Green (Y) Blacklevel	256	automatically and correctly.
5. Green (Y) Input Drive	256	and correctly.
6. Blue (Pb) Blacklevel	256	NOTE: Image
7. Blue (Pb) Input Drive	256	must have
8. Auto Color Enable	✓	at least 6-12
9. Clamp Location	Back Porch ▼	adjacent white pixels
0. Peak Detector		for "auto" to
Color Enable	White ▼	work.

monitoring image content and adjusting the controls appropriately—further adjustment is typically not required to obtain proper blacks or whites.

NOTE: This automatic adjustment requires at least 6-12 consecutive white pixels in the image. Without these pixels, input levels may produce skewed colors, particularly in non-video images.

However, for a very unusual source exhibiting one or more overly high black levels (typically caused by a noisy source causing black level spikes), an experienced user may prefer to use the *Input Levels* menu (shown above). These adjustments, which together serve as a calibration process compensating for differences in sources and cabling, enable an experienced user to perfect the source image input levels and eliminate the "overshoot" and "undershoot". Note that Input Levels are of limited use with digital signals, but do offer some ability to tweak poorly mastered source materials.

NOTES: 1) Input levels apply for the current source only, but for any color temperature used. 2) Assuming that color temperature has been set up based on the internal test patterns, you can then set up input levels for a given source so that it matches the color temperature of the internal test patterns.

AUTO INPUT LEVEL – Temporarily enter a checkmark *only* if you are an experienced user and you have an unusual source that you feel needs further color temperature and/or input level adjustment. This compensates for incoming out-of-range drives (white) and black levels (black) that would cause "crushing" of light and dark colors in the image. After entering a checkmark, wait for the six slide bar values to stabilize, then delete the checkmark and exit. The Auto Input Level is automatically turned off upon exit from the Input levels Menu.

BLACK LEVELS AND DRIVES - To check your image levels and adjust these controls:

- 1. Make sure overall "Contrast" and "Brightness" settings are both set to near 50. NOTE: Not required for "Auto" adjustment.
- = 50 (approx.)
- = 50 (approx.)
- 2. Check the color temperature setup using an internal grayscale test pattern, making sure to obtain a neutral grayscale. NOTE: Not required for "Auto" adjustment.

- 3. Confirm that you are using an analog source not connected to INPUT 3 or INPUT 4, as Input Levels are not applicable for digital sources or sources going through the decoder. A grayscale is recommended.
- 4. If the blacks and/or whites appear OK, input levels do not need adjustment. If black levels are too high (and/or whites are too low, which is rare), you likely have a noisy source that is producing skewed input levels. Continue with Step 5.
- Temporarily enable "Auto" in the Input Levels submenu. Wait for all 6 values to stabilize. Alternatively, do not use "Auto"—reduce black levels manually instead. Judge by eye and change one or more of the six levels as necessary to obtain proper blacks and whites. You may want to see only a certain color while adjusting—use the "Color Enable" option (described below).
- 6. Delete the "Auto" checkmark and leave the Input Levels menu.

IMPORTANT: Do not use Input Levels to adjust color temperature. This will distort Contrast and Brightness functions as well as color temperature.

AUTO COLOR ENABLE – When a checkmark is present, selecting a specific black level or drive to adjust will automatically enable the corresponding color in the display. Delete the checkmark to see all colors, or to enable a different specific color through the Color Enable Control.

CLAMP LOCATION – This option (formerly known as *sync tip* clamping) can brighten the image produced from certain highresolution high-frequency graphic sources. The projector automatically selects the best clamp location for almost all sources. ▶ 1. Back Porch 2. Sync Tip 3. Tri Level

Use the normal *Back Porch* location if the image is either sufficiently bright or overly bright. Select Sync Tip if the image appears unusually dim, if there are horizontal streaks across the image, or if there is significant color drift. This moves the clamping pulse from the normal back porch location (which is likely too short) to the tip of the horizontal sync pulse. *Tri Level* is typically needed for an HDTV source.

COLOR ENABLE –Select which color or colors you want to see in the display, useful while working with color temperature white levels or input levels.

NOTES: 1) Input levels apply for the current source only, but for any color temperature used. 2) Assuming that color temperature has been set up based on the internal test patterns, you can then set up input levels for a given source so that it matches the color temperature of the internal test patterns.

PEAK DETECTOR - The Peak Detector is a tool to assist with defining individual input levels, enabling you to accurately set the Input Levels for any particular source with the appropriate image. Enabling the Peak Detector activates a special operating mode for detecting *only* pixels that are considered black or white—all other levels are displayed as a mid-level gray. When used with a smooth grayscale pattern in which black and white are known to be at opposite edges of the image, you can watch these isolated areas while adjusting individual black levels and input drives until both black and white edges are *just* visible and distinguished from neighboring pixels. Images from this source will then display correct blacks and whites without crushing.

See Figure 3.7. Adjusting Input Levels Using the Peak Detector:

- 1. Display a 16 level grayscale test pattern from the desired external source, and enter a checkmark in the Peak Detector checkbox.
 - **NOTE:** The "Peak Detector" will initially render the grayscale as a uniform gray field before adjustment or extreme crushing.
- 2. Display one primary color.
 - **NOTE:** Selecting Auto Color Enable ensures the correct color is displayed for each setting.
- 3. For the current color, adjust its corresponding "Black level" slide bar *just* until a single band of black appears at one edge of the screen. This band represents the first band of the grayscale pattern, which should be 100% black. Do not adjust too far.
- 4. With the same color still active, adjust its corresponding "Input Drive" slide bar *just* until a single band of color appears at the opposite edge of the screen. This band represents the last band of the grayscale pattern, which should be 100% white (or the current color, if a certain color is enabled). Do not adjust too far
- 5. It may be advantageous to go back and check the black band—adjust the black level slide bar if necessary.
 - **NOTE:** Readjusting the black levels affects the gain at this point; only readjust when absolutely necessary.
- 6. Repeat Steps 3-5 with the other two remaining primary colors. When each primary color shows one optimized black band and white (or colored) band, the input levels for this source are correctly set. Upon exiting the *Input Levels* menu, the Peak Detector checkbox will clear.

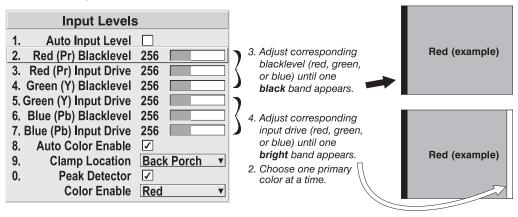



Figure 3.7. Adjusting Input Levels Using the Peak Detector (RED EXAMPLE SHOWN)


Advanced Image Settings — SUBMENU

Use the *Advanced Image Settings* submenu to make the adjustments necessary for lesserused but more specialized applications on your projector.

	Advanced Image Settings			
1.	. Gamma Table Graphics ▼			▼
2. Se	elect Color Adjustment	Max.	Drives	▼
3.	Color Temperature	7600]
4.	Optical Aperture	3]
5.	Reserved			
6.	Simulation 3D			
7.	Motion Filter	Auto		▼
8.	Film Mode Threshold	0		
9.	Detail Threshold	0]

GAMMA TABLE: This control applies a default *video*, *graphics* or *simple* gamma table or "curve" to your images, controlling the intensity of midlevel colors and producing maximum contrast, brightness and color performance. As shown at right, the graphics curve is a simple power curve while the video curve

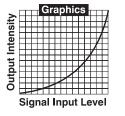

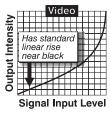

has a linear segment near black to compensate for increased black levels typical of video signals. A simple gamma curve is a value of 2.2 and is correct for most signal conditions. Although the projector automatically applies either the graphics or video curve according to what type of incoming signal is detected, in some cases you may wish to override this default and use *graphics* gamma for a video source or *video* gamma for a graphics source. Alternatively, if neither default is ideal, you may prefer to apply the simple (non-optimized) gamma curve or a user-defined custom gamma curve that has been created externally, named, and downloaded to the projector (requires separate PC-based *Arbitrary Gamma* and *KoRE Librarian* software applications). If any of these special user curves have been installed, their names will appear in the Gamma Table pull-down list.

Keep in mind that any *Gamma Table* choice sets the related *Gamma* value (shown in the *Image Settings* menu) to a 2.2 default, where it can be fine-tuned as desired. Different values (1-3) here indicate that the original gamma table has been adjusted with either the *Gamma* slide bar or direct key.

select color Adjustment", choose an overall color palette for all images. The "Max Drives" factory default simply drives all 3 colors at their maximum level so that they are fully on and cannot be changed. The two other pre-defined color adjustment choices—*SD Video* and *HD Video*—apply a color gamut optimized for video sources (standard or high-definition). Alternatively, you can specify a color temperature. This enables the adjacent Color Temperature slide bar and applies

1.	Max. Drives
2.	Color Temperature
► 3.	SD Video
4.	HD Video
5.	User 1
6.	User 2
7.	User 3
8.	User 4

its current setting (default = 6500K). If none of the pre-defined "Select Color Adjustment" options or color temperatures suit your application, select one of four color gamuts previously defined by a user (User 1, 2, 3, 4). A "User" option applies a customized color performance in which the user has precisely set the hue and intensity of each color component in the *Color Adjustment by X/Y* or *Color Saturation* submenus. It is most often needed with multiple-projector applications. Select the

color adjustment producing the best color accuracy for your application and installation.

To configure a "User" color adjustment (gamut), use either the Color Adjustment by *X/Y* or *Color Saturation* submenu.

NOTES: 1) "Color Temperature" defaults to 6500K until changed. All four "User" options default to SD Video unless the user has redefined them. 2) Factory-defined color primaries, which ensure consistent color gamut from projector-to-projector, can be calibrated in the **Service** menu only. If you suspect alteration, the factory settings can be recovered with selection of "Reset to Factory Defaults?" in the Color Primary **Settings** submenu within the **Service** menu (password-protected).

COLOR TEMPERATURE — Adjust to apply a specific and accurate color temperature to all displays. Color temperatures are expressed in degrees Kelvin (3200-9300K), and utilize different combinations of the projector's original native color primaries to produce a "coloration" or cast (reddish or bluish) in images—the lower the temperature, the more reddish the cast; the higher the temperature, the more bluish the cast. Note that the slide bar is enabled only if you have a source connected and have selected "Color Temperature" in the adjacent "Select Color Adjustment" pull-down list in the Advanced Image Settings menu.

OPTICAL APERTURE - The optical aperture inside the projector controls the diameter of the light beam passing through the system. With a fully open aperture (slide bar default of "0"), the maximum amount of light passes through for maximum brightness in your images. Increase the slide bar setting to reduce the aperture diameter and maximize contrast ratio instead. Performance of aperture depends on the lens in use.


NOTE: Optical Aperture also appears in the lamp menu.

RESERVED - No function.

Simulation 3D — SUBMENU OF ADVANCED IMAGE SETTINGS

Use the options in the Simulation 3D menu to make the timing adjustments necessary for realistic simulation and 3D images.

NOTES: 1) Available in Mirage projectors only. 2) For complete 3D application notes, refer to the separate Using 3D in Mirage manual provided with the Mirage projector.

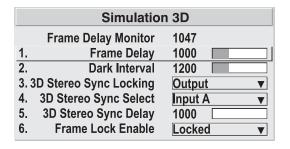

FRAME DELAY MONITOR — This slide bar monitors the latency between input and output. For best results, the bar width and value should remain fairly constant, indicating that timing of input and output frames is locked; the Frame Delay Monitor value should stay within 5-10 lines or so of the Frame Delay setting. If a frame is lost or "dropped", the bar will move suddenly and the values will change, indicating that the frame input is no longer equal to the output.

NOTE: See separate Using 3D in Mirage manual provided for more information.


FRAME DELAY — Set the number of lines delayed between the input signal and its appearance on screen, keeping in mind that projector processing always *adds one frame of delay* to the frame delay setting. For applications such as simulation, where the feeling of "real time" image response is a priority, a minimum setting is usually preferable. For projectors capable of 3D (stereographic) applications where alternating left-right frames must be synchronized with the corresponding L/R shutters in 3D glasses, a total frame delay setting of two (or multiple of two) may be more useful. If set too high or low, frame locking will not be possible—most sources require approximately 50 lines of delay to ensure frame locking.

NOTE: See separate <u>Using 3D in Mirage</u> manual provided for more information.

DARK INTERVAL — Adjust Dark Interval to artificially increase the amount of dark time between displayed frames for stereographic 3D images. Higher settings provide more time for shutters in 3D glasses to open/close, ensuring that each eye sees the full display intended for it. Symptoms of cross talk and/or color artifacts can indicate need for adjustment. The Dark Interval range of adjustment depends on the vertical frequency of your source—the higher the frequency, the smaller the range.

NOTE: See separate <u>Using 3D in Mirage</u> manual provided for more information.

3D STEREO SYNC LOCKING — This option defines 1) whether or not the incoming stereographic 3D signal locks to the vertical sync output so that signals are synchronized, and 2) whether or not the 3D frames must be inverted, i.e. swapped leftwith-right. The correct setting ensures that the projector's 3D display of left/right frames is synchronized with the rest of the 3D system components so that the intended eye sees the left/right image data. Select the option corresponding to your 3D source connections and timing, and use only if the *Mirage 3D Stereo Sync Cable* is connected between the projector's GPIO port and a server. Keep this adjustment OFF (default) when you are not using the *Mirage 3D Stereo Sync Cable*.

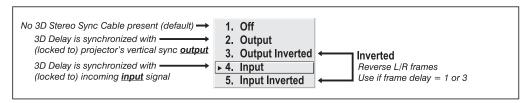


With your sync cable, Z-screen and, if desired, emitter connected as described in the <u>Using 3D in Mirage</u> manual, select the option suited to your 3D configuration (see above). If Frame Delay is 2 (or 0), do not invert; if frame delay is 1 or 3, invert. Generally, an "Unlocked" setting is synchronized with the incoming L/R signal rather than the vertical sync output, and may be needed only with multi-projector installations in which the vertical sync outputs vary.

NOTE: See separate <u>Using 3D in Mirage</u> manual provided for more information.

3D STEREO SYNC SELECT

— Define which of the *Mirage 3D Stereo Sync Cable's* input connecters is routed from your server. Use only if the cable is present.

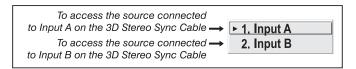

3D STEREO SYNC DELAY — Set when the L/R frames begin, defining the best reference point for synchronizing the display with your glasses. Proper adjustment of this delay should eliminate cross-talk and odd colors caused by timing differences between the glasses and the projected display. Use this slide bar only if the Mirage 3D Stereo Sync Cable is connected between the projector's GPIO port and a server. Slide bar values indicate the number of lines that are delayed.

FRAME LOCK ENABLE — This option allows the projector to control the output frame timing based on the input signal. The *locked* option forces (if possible) the output image to be phase locked to the input frames. Rate Matched means that the output runs at close to the input frequency but isn't locked to it so the output will drift in phase relative to the output. Free Run forces the output to run at a 60Hz frame rate.

NOTE: 1) See separate Using 3D in Mirage manual provided for additional information.

WARP LATENCY — Requires optional *ChristieTWIST* module. See *ChristieTWIST User's Manual* provided with the module.

Advanced Image Settings continued — SUBMENU

MOTION FILTER — This control is most useful for smoothing out moving images from interlaced sources. In most cases the proper Motion Filter setting is 1. Auto automatically determined according to the type of incoming source ► 2. Still 3. Motion signal. However, if your source is jittery and/or tearing you may wish 4. Film to "force" a setting to ensure stable processing for this source—if desired, override the default "Auto" setting by selecting the appropriate motion filter:


- 1. AUTO: The projector will automatically use the correct motion filter according to the incoming signal.
- 2. **STILL:** For static images with no motion, such as graphics from a CD.
- 3. **MOTION:** For video images that did not originate from film, or for moving computer-generated images.
- 4. **FILM:** For video images that originated from film. This will optimize image quality and stability.

FILM MODE THRESHOLD — This setting determines how sensitively the projector can detect if an incoming video signal originated from film or not. It should not require adjustment.

DETAIL THRESHOLD — Use "Detail Threshold" to define at what frequency level the "Detail" control will begin to magnify high frequencies, which adds details back into the image. Raise the threshold to *ignore* more of these high frequencies, and lower the threshold to magnify more of these frequencies. A setting of "0", for example, means no noise will be ignored and all will be magnified. An ideal detail threshold is one in which high frequencies that are causing objectionable noise are *not* magnified when using "Detail", but frequencies which can help sharpen an overly-soft image are magnified.

Adjusting 3.6 **System** Parameters and Advanced Controls

Use the Configuration menu to define general operating parameters and communications with other projectors and equipment, and to access other advanced processing and image adjustments affecting overall performance. In addition, the Configuration menu provides access to diagnostics, calibration tools and the Service submenu (passwordprotected).

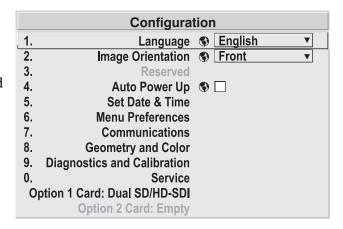

Keep in mind that settings in the *Configuration* menu (and its submenus) are typically "global" settings applied regardless of the type of source your are using. This characteristic is identified with the (globe) icon alongside the option.

NOTE: The **Configuration** menu is recommended for experienced users/technicians only.

System Configuration — GENERAL —

The first six options in the *Configuration* menu are explained below:

Language

Choose from available languages to use in the projector's menus. The change will take effect immediately.

Image Orientation

Set the orientation of the image according to the orientation of your projector. If the setting is incorrect, projected images will be reversed and/or upside down.

Reserved

No function.

Auto Power-up

Enter a checkmark to enable the projector to automatically power up after losing power due to a power failure or due to unplugging the projector during operation. Note that unsaved display adjustments may be lost.

Set Date & Time

Enter/read the current year-month-day and hour-minute-second. Changes here reset the projector's real-time clock.

Menu Preferences — SUBMENU

Adjust the appearance, content and/or location of on-screen menus and messages.

LARGE MENU FONT — Enter a checkmark to enlarge menus and their text. You may have to adjust "Menu Location" to accommodate the increased menu area.

	Menu Preferences
1.	Large Menu Font ⑤ ✓
2.	Menu Location ⑤ 4:3 Top/Left ▼
3.	Horizontal Shift ③ 261
4.	Vertical Shift 204
5.	Display Channel List 🚯 🗌
6.	Display Slidebars 🏵 🗌
7.	Display Error Messages All
8.	Splash Screen Setup � Always on ▼

MENU LOCATION — Use the pull-down list to choose a pre-defined default or customized location for the display of all on-screen menus.

To create a custom menu location quickly, choose a preset that is closest to the desired location. Then adjust "Horizontal Shift" and "Vertical Shift" slide bars to move the menu to the desired location. Avoid locations too close to a corner or edge to prevent cropping of larger menus.

HORIZONTAL SHIFT AND VERTICAL SHIFT — Shift your menus as desired, creating a customized menu location.

DISPLAY CHANNEL LIST — Enter a checkmark if you want to see a scrollable channel list whenever you press from your presentation. Channels marked with a list icon in the Channel Setup menu will appear here. The "Display Channel List" option also enables on-screen feedback when using the key. If you prefer to hide the channel list and input dialog box while switching channels and sources during a presentation, clear the checkbox.

NOTE: The Channel List and input dialog box cannot be hidden during use of the menus.

DISPLAY SLIDE BARS — Enter a checkmark to superimpose a small slide bar over the current image whenever an adjustable parameter is selected directly with a key such as or Bight If "Display Slide bars" is unchecked, these slide bars can still be accessed, but will be hidden during adjustment. This option does not affect slide bars in menus.

DISPLAY ERROR MESSAGES — Choose how you want to be notified of errors detected in either the incoming signal or projector. Select "Screen" or "All" (default) to see brief on-screen messages. This is particularly recommended during setup or testing of the projector. Or select "Serial Ports" to receive messages via RS232 or RS422 serial communication only. To hide error message displays, such as during shows and presentations, select "Off" or "Serial Ports".

SPLASH SCREEN SETUP—Use the Splash Screen to choose when you would like to display a special introductory splash screen image, such as your company logo, graphic or message.

- Always Off = A splash screen never appears
- Always On = A splash screen is always on behind the current display image, similar to wallpaper.
- Start-up Only The splash screen logo appears at projector start-up only.

• Start-up And No Signal – A splash screen appears at start-up only if there is no source signal.


To replace the default "Christie logo" splash screen (or other) with one of your own, use *KoRE Librarian* to download the desired .bmp to the projector. This will overwrite the current splash screen content in projector memory.

System Configuration ' — COMMUNICATIONS —

Settings in the *Communications* submenu define and control how single or multiple projectors are linked with each other and with a controlling device.

Baud Rates

The baud rate setting determines the speed of communication to and from the projector on the RS232 or RS422 links. The maximum rate for the RS232 is 115200; for RS422 it is 19200. Set the baud rate to match that of

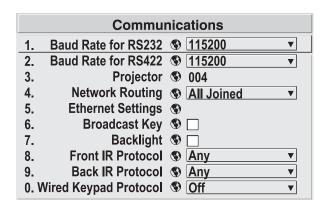

your controlling device, such as your PC. If you are unsure about what baud rate to choose, refer to the documentation for the controlling device. In an existing network of projectors, if you discover that a projector has a different baud rate, make sure to use the pull-down list and select the correct baud rate using the key—do not just scroll this control with or keys. Serial communication is always 8 data bits, no parity.

Projector

Enter a three-digit number (such as "001") to assign or change a number to the projector currently in use. If the current projector already has a number assigned, that number will appear here (for example, "004" in the menu shown above). Numerical identity for projectors enables you to communicate with a single projector within a multiple-projector application (see also [Proj] key in 3.2, Using the Keypads). If you make a mistake in assigning or changing the projector number, press [Ent] to cancel.

NOTE: When multiple projectors are being used and you want to adjust the color and edge blending settings for individual projectors to create one seamless image, you must assign different numbers for each projector to allow toggling back and forth between projectors while adjustments are being made.

Network Routing

NOTE: Not applicable for stand-alone projectors or simple serial networks with only one type of controller and linking.

► 1. Separate
 2. RS232 and RS422 joined
 3. RS232 and Ethernet joined
 4. All joined

= Networks do not communicate with one another

 = Serial networks are joined, but Ethernet is isolated
 = RS232 and Ethernet are joined but RS422 is isolated
 = Network communications travel all networks

SEPARATE: Select "Separate" (factory default) to keep RS232, RS422 and Ethernet messages on their respective paths instead of being broadcast to the other types of ports. In Figure 3.8A, RS422 controls only the projector to which it is connected. In Figure 3.8B, either RS232 or RS422 will control the network.

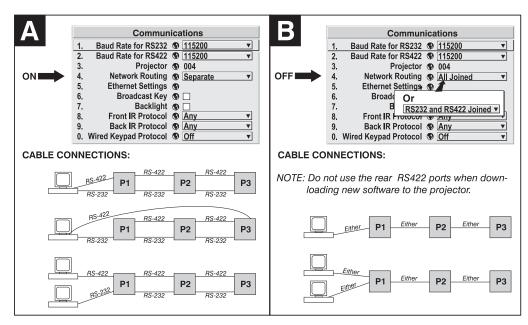


Figure 3.8. Using the "Network Routing" Option

RS232 AND RS422 JOINED: Messages originating from an RS232 or RS422 controller will be relayed to all RS232or RS422 ports. Any Ethernet communication, however, will not


RS232 AND ETHERNET JOINED: Messages to and from the RS232 ports will also be relayed to the Ethernet port, and vice versa. Any RS422 communications will be isolated.

ALL JOINED: All messages reach all ports, regardless of type.

Ethernet Settings (SUBMENU)

NOTES: 1) Recommended for network administrators only.

DHCP: Enable this checkbox if you want a DHCP server to automatically change the projector's default IP address (0.0.0.0) to one that is valid and unique for use on the current Ethernet network. On networks without a DHCP server, or to simply override the automatic DHCP server function, delete the checkmark and enter the new "IP Address" settings desired. Remember that only a 0.0.0.0 address will trigger the DHCP addressing service, and only when the DHCP checkbox is enabled.

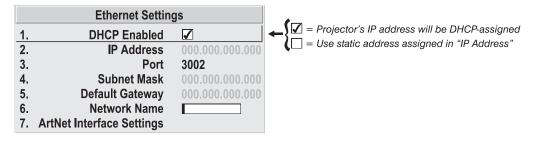

IP ADDRESS: Enter a valid and unique IP address for use on the network to which the projector is currently connected. This address will overwrite any previous IP address such as the projector's factory-defined default (0.0.0.0), or one that has been assigned by a DHCP server or other user. It takes approximately 10 seconds for the projector to respond at its new address.

PORT: On some Ethernet networks, firewall restrictions may require that the port number of the projector be changed from its default of 3002. If so, enter a new valid port number here. It is highly recommended not to use a port# below 1000, as these ports are typically reserved for and used by common IP applications.

SUBNET MASK AND DEFAULT GATEWAY: The Subnet Mask and Default Gateway are automatically assigned when DHCP is enabled. If a static IP is being used, the IP must be assigned first since the projector estimates the subnet mask after the IP is entered. The Default Gateway is an optional router device used to send and receive data outside the subnet.

ArtNet Interface Settings — SUBMENU

ArtNet is an Ethernet communication protocol that was developed by Artistic Licence. It is used for controlling lighting/staging equipment from a lighting console or PC application. It is based on the popular DMX512 control protocol.

ArtNet SUBNET: This is the highest level address for a device. Typically it is set to 0.

ArtNet UNIVERSE: Each packet of data is broadcasted to all devices plugged into a universe (up to 512 devices/channels).

ArtNet CHANNEL: There are 512 channels per universe. This control allows you to specify the starting channel for this projector.

ArtNet ADVANCED MODE: When this setting is enabled, each projector listens for data on 64 channels starting with the base channel. When advanced mode is not in use, the projector only listens on 10 channels. You can squeeze more devices per universe when the projector uses fewer channels.

NOTE: The additional 54 functions are not currently implemented and are reserved for future use.

ArtNet BASE CHANNEL: When advanced mode is enabled, the projector listens to data on 64 consecutive channels, or 10 consecutive channels when advanced mode is not enabled. The projector processes requests that come on either 10 or 64 consecutive channels beginning with the 'base channel' defined here. The requests implement the following functions:

DMX Channel	Function	Valu	е
		0 – 64	Open
Base	Shutter	65 – 192	No Action
		193 – 255	Closed
Base + 1	Slider Lock	0 – 254	Locked
Dase + 1	Slider Lock	255	Unlocked *
Base + 2	Input *	1 – 8	Input #
Base + 3	Channel *	1-99	Channel #
		0	Lens Down
Base + 4	Lens – Vertical * †	1 – 254	Stop
		255	Lens Up
		0	Lens Right
Base + 5	Lens – Horizontal * †	1 – 254	Stop
		255	Lens Left
		0	Negative Focus
Base + 6	Lens – Focus * †	1 – 254	Stop
		255	Positive Focus
		0	Zoom Out
Base + 7	Lens – Zoom * †	1 – 254	Stop
		255	Zoom In
		0	Power Off
Base + 8	Power *	1 – 254	No Action
		255	Power On
Base + 9	None		

^{*} Functions are only active when the Slider Lock is set to Unlocked

NOTE: It is important to make sure the channels DO NOT overlap another device.

Example:

Good	Bad
Proj1_Base = 0	Proj1_Base = 5
Proj2_Base = 10	Proj2_Base = 9
Proj3_Base = 20	Proj3_Base = 11

DEVICE NAME: This option is used to name each device; some ArtNet servers support querying for devices.

DEVICE DESCRIPTION: More information that is returned when a "device query" has been done.

Broadcast Key

Enter a checkmark if you want keypad commands sent to one projector to be relayed to all projectors in a serial network. Note that the (Pro) key will temporarily "override" the effect of a broadcast setting and allow you to control a specific projector when necessary. Disable the setting for all but one (any) projector in a network.

Backlight

Toggle to turn the built-in keypad backlighting on and off.

Front IR / Back IR

As needed for your application, set to "any" so that the front and/or rear IR sensor locations on the projector respond to the IR keypad. Set to "off" to disable.

[†] Lens functions have no effect on the Roadie 25k

To disable *both* IR sensors, you cannot use the IR remote keypad to select the second **OFF** setting. This safeguard prevents accidentally disabling an IR keypad while you are using it. Instead, use either the built-in keypad or a wired remote (optional) to set the remaining active sensor to **OFF**. The projector will no longer respond to an IR remote keypad.

NOTE: Protocols B - G are used for rental staging applications.

Wired Keypad


The wired keypad is ON by default to when connected to the rear of the projector. The projector will then respond to incoming commands from this port. To disable the wired keypad, you must use a different keypad—the built-in or an IR remote keypad—to select "off". This safeguard prevents you from accidentally disabling the wired keypad during use.

System Configuration
— GEOMETRY & COLOR —

In the *Configuration* menu, select the *Geometry and Color* submenu when you need to modify overall color performance and/or image geometry for all sources.

Test Pattern

Choose the desired internal test pattern, or select OFF to turn off a test pattern. Alternatively, use the very key for cycling through test patterns.

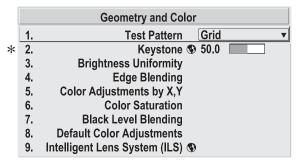

^{*} Keystone and Warping if ChristieTWIST warping module is present (standard in Matrix models, optional in all others).

Keystone

NOTE: If the optional **ChristieTWIST** module is installed, this option is **Keystone** and **Warping**, and activates a submenu for defining custom image shapes. Please refer to documentation included with your Christie TWIST module.

Use to correct a keystoned image shape in which both sides of your image are inclined toward the top or bottom edge. Tilting the projector in relation to the screen typically causes keystone; the lens surface and screen are no longer parallel to each other.



Figure 3.1. Keystone Adjustment

Brightness Uniformity — SUBMENU

Brightness Uniformity provides further refinement of displays already matched for their primary colors and overall light output. Use Brightness Uniformity to create an exceptionally smooth image in which no area appears brighter and/or more red, green or blue than another. In the Brightness Uniformity menu, enable the "Uniformity Enable" checkbox to access a multitude of adjustments for critical color light output

control in specific areas throughout the image. Your settings apply as long as the "Uniformity Enable" checkbox is enabled and you are using a "User" color temperature defined by the Brightness Uniformity controls. To disable the Brightness Uniformity function, delete the "Uniformity Enable" checkmark.

NOTES: 1) See also 3.10, Using Multiple Projectors for the complete step-by-step procedure for achieving uniform brightness in adjacent displays. 2) If Christie TWIST module is installed, the enable checkbox changes to a list giving the option to choose from several different uniformity maps. Please refer to documentation included with your Christie TWIST module.

Edge Blending — SUBMENU


The Edge Blending submenu provides a range of controls for smoothing together the overlapping bright edges of multiple adjacent projected images to create a single larger "seamless" image. These controls, which primarily affect white levels, are typically used in conjunction with mechanical lens blinders (optional), which are installed on the front of the projector and which primarily affect black levels. There is a centerline (both horizontal and vertical) in the Edge Blending test pattern. The intersection of these lines is the true center of the projector's display area.

NOTES: 1) There is a centerline (both horizontal and vertical) in the Edge Blending test pattern. The intersection of these lines is the true center of the projector's display area. 2) See also 3.10, Using Multiple Projectors.

Color Adjustments by X/Y, and Color Saturation — SUBMENUS

NOTES: 1) For defining or changing a User 1, 2, 3, or 4 color performance or "gamut". Sometimes known as Comprehensive Color AdjustmentTM. 2) Factorydefined primary color levels, which ensure a specific color performance from projector-to-projector, can be calibrated in the **Service** menu only. If you suspect alteration of these defaults, the factory settings can be recovered with selection of "Reset to Factory Defaults?" in the Color Primary Settings submenu accessed via the **Service** menu (password-protected).

From the factory, the projector can utilize any of the 3 pre-defined color performance settings identified at right (default=Max Drives), or colors can be driven on the basis of color temperature. For most applications, one of these gamuts will produce accurate and realistic colors from a variety of sources. They can be applied at any time in the Advanced Image Settings menu ("Select Color Adjustment"), and are not adjustable.

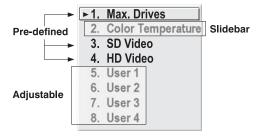

DEFINING "USER" COLOR GAMUTS: In some cases, you may find that none of the predefined "Select Color Adjustment" options exactly suit your needs. For example, you may require a unique color gamut (range) for a single projector or application, or you may need to precisely match colors across multiple adjacent displays. In such cases, use the Color Adjustments by X,Y or Color Saturation submenu to define the precise hue of each primary color component (red, green, blue, and white) used to generate the millions of colors produced in displays. You can create up to four custom color gamuts (User 1, 2, 3, or 4) with these adjustments.

Note that the two menus differ only in their user interface, so use whichever menu best suits your needs and application. A color meter can help with adjustments.

- <u>Color Adjustments by X, Y</u> Enter known x/y coordinates from the chromaticity graph.
- <u>Color Saturation</u> Adjust color slide bars and judge image color by eye or meter

A user-defined color "adjustment" can be applied by selecting it in the Advanced Image Settings menu ("Select Color Adjustment").

COLOR ADJUSTMENT BY X,Y: Use this submenu if you want to create, alter or copy a color gamut (i.e., "color adjustment"). Controls in this menu define the precise hue of each primary color component (red, green, blue, and white) used to generate the millions of colors produced in displays. The x/y coordinates for each color define its location on the standard CIE chromaticity graph (see Figure 3.9)—changing either or both of these numbers will change the hue of the color, and relocate the "triangle" for possible colors. For example, changing the x/y coordinates for red may move the color closer to orange or closer to

	Color Adjustments by X,Y		
1.	Select Color Adjustment	User2	
2.	Color Temperature	6521	
3.	Red X	0.655	
4.	Red Y	0.341	
5.	Green X	0.332	
6.	Green Y	0.575	
7.	Blue X	0.144	
8.	Blue Y	0.093	
9.	White X	0.320	
0.	White Y	0.330	
	Auto Color Enable	✓	
	Color Enable	Red ▼	
	Copy From	Max Drives ▼	

Figure 3.9. Customize Color

violet, which will in turn affect all displayed colors having a red component. Adjust the slide bars or enter new specific coordinates as desired to define or change up to four "User" color gamuts needed for your environment and applications. Apply at any time in the Advanced Image Settings menu.

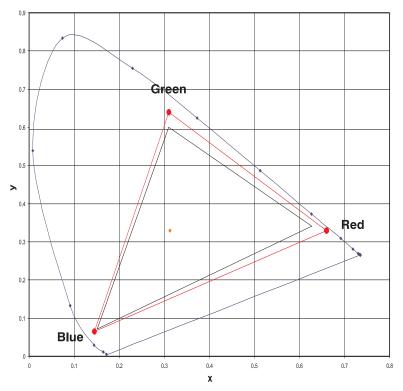



Figure 3.10. CIE 1931 Chromaticity Diagram

NOTE: Keep new x,y coordinates within the original color gamut triangle shown here.

PROCEDURE FOR X,Y ADJUSTMENTS: See 3.10, Using Multiple Projectors.

COLOR SATURATION: Use this submenu if you do not have specific color coordinates in mind and will simply judge color performance by eye or meter. Like the Color Adjustment by X, Y submenu, each color control actually defines new x/y coordinates for that color and changes its hue—it is just a different interface.

Adjust the hue of each primary color (red, green, blue, and white) by using more or less of it in relation to the other colors.

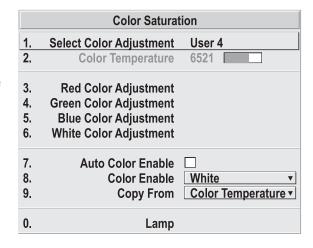

NOTE: A Color Saturation adjustment defines the corresponding x/y coordinates shown in the **Color Adjustment by X,Y** submenu. These x/y coordinates will remain stable for this User gamut until they are changed again via either menu. Values displayed in the Color Saturation menu, however, will likely fluctuate as you use the projector, and will be different when you return to this menu at some point in the future. These floating changes do not affect the x/y coordinates or gamut.

Black Level Blending — SUBMENU

Black Level Blending is a feature that eliminates the differences between black levels when edge blending multiple projectors. The Black Level Blending submenu provides many controls to allow the edges of adjacent images to be smoothly overlapped creating a "seamless" image. Edge blending smoothes white levels, and if edge blending is not in use, Black Level Blending is disabled. Black Level Blending provides a simple solution for uneven black levels, without the need for external hardware, by matching up black level hues with a "target area" hue (the intersection of the center lines), and adjusting the overlaps (edges) surrounding the target area.

NOTES: 1) Refer to section **3.10, Using Multiple Projectors** for additional information. **2)** There is a centerline (both horizontal and vertical) in the Black Level Blending test pattern. The intersection of these lines is the true center of the projector's display area. **3)** Adjust white levels before adjusting black levels. **4)** Blinders are recommended for fixed installations.

Default Color Adjustments — SUBMENU

Refer to *System Configuration – Geometry and Color, Color Adjustments by X,Y* for description.

Intelligent Lens System (ILS™) — SUBMENU

ILSTM provides the ability to recall focus, zoom and positioning settings specific to each source input. This allows the projector to display multiple aspect ratios correctly sized and positioned on the same screen. It's useful when working with a variety of source types that might differ in size and/or aspect ratio since the custom lens settings you've chosen for any source will be quickly and accurately applied when you select that source. Place a checkmark in the checkbox to enable ILSTM. If no calibration has previously been done you may be prompted to do a full calibration. If a motion calibration has been done, you will be prompted to complete a reference calibration. If both calibrations have been done, the checkbox will be checked and ILSTM enabled. If ILSTM is enabled, a reference calibration will be done on power up and the lens will return to the saved position of the source that is active at the time of power up or to the position the lens was located when it was powered on. Further adjustments to the zoom, focus and position will be automatically saved for source the selected source. If you switch to a source with different lens settings and switch back, the lens will automatically move to your desired settings upon return. Other sources can be used without using ILSTM

NOTES: 1) See System Configuration – Diagnostics/Calibration, ILS Calibration for further details about calibration. 2) ILS TM control is a preference setting and will be retained between power cycles.

System Configuration ' **DIAGNOSTICS / CALIBRATION**

Test Pattern

Choose the desired internal test pattern to display, or select OFF to turn off a test pattern. Alternatively, use the (Test) key for cycling through test patterns.

NOTE: There is a centerline (both horizontal and vertical) in the Edge Blending test pattern. The intersection of these lines is the true center of the projector's display area.

	Diagnostics and Calibration
1.	Test Pattern ⑤ Grid ▼
2.	Grey Level 🚯 512
3.	Freeze Image 🔇 🗌
4.	Color Enable ♥ White ▼
5.	Odd Pixel Adjustment
6.	Reserved
7.	Peak Detector 🕲 🗌
8.	Level Detector 🚯 🔲
9.	Level Value 💲 512
0.	LiteLOC Calibration ⑤ Calibrate LiteLOC ▼
	ILS Calibration Full ▼
	Aspect Ratio Overlay 🕥 🗌

Test Pattern Grey Level

Set the desired level of grey for displaying in the full gray field test pattern.

Freeze Image

Enter a check mark to freeze (stop) an image on a single frame. This diagnostic tool is useful if you need to examine in detail a still version of an incoming image that cannot be "frozen" at the source. For example, in moving images it is sometimes difficult to observe artifacts such as external de-interlacing/resizing and signal noise. Remove the checkmark to return back to normal.

Color Enable

Select which color or colors you want to see. This is useful while working with color temperature, input levels or other special setup parameters. Colors can also be enabled/disabled by entering the corresponding function code listed on the back of the standard remote keypad.

Odd Pixel Adjustment

NOTES: 1) Factory-set and rarely required by user. 2) Source must be >90 MHz.

When using certain RGB sources, you may need to adjust the normal gain or offset of odd pixels in relation to even pixels. This will smooth out very narrow (1-pixel wide) "checks" or vertical stripes that indicate adjacent "on" and "off" pixels. Using the Level Detector simplifies this process (see Figure 3.11):

- 1. Use an external analog native-sized continuous grayscale test pattern with at least 256-levels.
- 2. Turn "Level Detector" on.
- 3. Set "Level Value" to ~200. The image should now be black-and-white (or black-and-one color, if you use "Color Enable" function).
- 4. Adjust *offset*. Half of the pixels will move, the other half will not.
- 5. Adjust until the two transition regions overlap. The stripe of noise will be minimized, defined by the value in the slide bar.
- 6. Set "Level Value" to ~800. The image should now be black-and-white.
- 7. Repeat Steps 4 and 5, but adjusting *gain*.
- 8. Repeat Steps 3-7 for all remaining colors. Your RGB source should now be OK.

Two sets of values are automatically saved with these controls—one value for Input #1, and one for Input #2 (analog). The current set of values depends on which source is in use. This enables a source to be processed correctly via 2 different inputs.

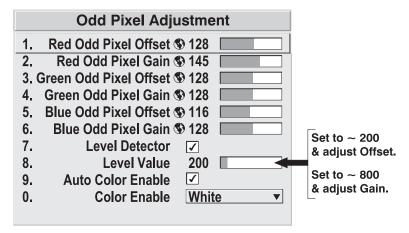


Figure 3.11. Using "Odd Pixel Adjustment"

NOTES: 1) Adjust offset before gain, since offset affects gain. 2) A value of 128 represents no change in normal odd pixel offset or gain. 3) Odd Pixel Adjustment eliminates "1 pixel on, 1 pixel off" artifact only, not any type of larger artifacts.

Reserved

No function.

Peak Detector

The "Peak Detector" is a fast method for defining individual input levels, and can improve the accuracy of input levels set by the Auto Input Level function. Enabling the "Peak Detector" activates a special operating mode for detecting *only* pixels that are considered black or white—all other levels are displayed as a mid-level gray. When used with a 16-step grayscale pattern in which the two black and white bands are known to be at opposite edges of the image, you can watch these isolated areas while adjusting individual black levels and input drives until both bands are just visible. Images from this source will then display correct blacks and whites without crushing or washing out.

NOTE: If using Peak Detector with PIP, both images must have the same color space.

Level Detector

The "Level Detector" checkbox enables specific thresholds for blacks and whites—input levels that fall below a specified *Level Value* (see below) are displayed as black, and all others are displayed as white. It aids in Odd Pixel Adjustment. To use:

- 1. Enable "Level Detector" and display a continuous grayscale.
- 2. Set "Level Value" to near black (such as 200).
- 3. Adjust Offsets to minimize area of black stripe.
- 4. Set "Level Value" to near white (such as 800).
- 5. Adjust Gains to minimize area of white stripe.

Level Value

Level Value defines the value to be used by the Level Detector in recognizing blacks and whites. See *Level Detector*, above.

LiteLOC™ Calibration

NOTES: 1) LiteLOCTM Calibration takes up to two minutes. 2) For best results, allow the projector to warm up for 15 minutes prior to calibration.

LiteLOCTM Calibration defines the range of power needed to maintain lamp brightness. Select Calibrate LiteLOC for calibration using your projector's unique specifications (recommended) rather than standard specifications. The projector will revert to the default back-up in the event of a power failure.

Intelligent Lens System (ILS ™) Calibration


This option allows you to choose between three types of lens calibrations. *Reference* calibration determines a reference point that is used as a defined starting position for relative motion of the lens. All positioning is measured from this reference point. A reference calibration is lost when power is removed from the projector and will occur on every power up as long as ILSTM is enabled. A *motion calibration* determines the characteristics of each motor and values are saved in the projector's memory. If ILSTM is enabled and a motion calibration has previously been done, the projector will automatically recall these settings from memory when it's being powered up and a motion calibration will not take place. A full calibration performs both a reference and motion calibration.

Aspect Ratio Overlay

Selecting this option with a checkmark will overlay a number of common aspect ratio boxes on top of the source image. This is very helpful during the setup of the projector and can be turned off after desired specifications have been achieved.

System Configuration **OPTIONAL INPUT MODULES**

The two "Option Card" entries In the Configuration menu identify which optional input modules (a.k.a. cards) are present at INPUT 5 (Option 1) and **INPUT 6** (Option

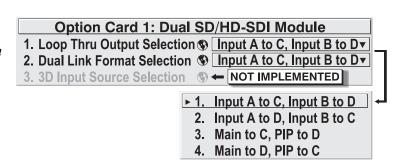

2). If either of these option slots is empty, the corresponding read-only menu entry does nothing. If there is a module installed, the corresponding menu entry may activate a submenu of further options pertaining to that module.

For example, if the *Dual SD/HD-SDI* module is installed at **INPUT 5** (Option 1). The Option 1 Card submenu provides controls for configuring the various connections on this multi-input, multi-output module. As desired for your application, you can define 1) which physical input loops through to which output, and 2) which functional input (main or PIP signal) loops through to which output.

3.7 Working with PIP or Seamless Switching

PIP (Picture-in-Picture) and Seamless Switching are independent but related projector features that both utilize two image-processing paths within the projector. In the case of Picture-in-Picture, this double processing enables you to display two different images simultaneously – typically a smaller "secondary" image within a large "primary" background. In a seamless switch, the double processing essentially occurs between displays so that a full image relayed from one source can smoothly transform into a full image from another source. This change can be virtually instantaneous, or slowed as desired so that the current image appears to dissolve or "fade" into the new image.

Options for enabling and controlling PIP and Seamless Switching all reside in the same menu. Note, however, that because both features utilize the projector's double processing capability, PIP and Seamless Switching cannot be used together. For example, fading a pair of PIP images into a new display from a different source is not possible.

For best PIP or Seamless Switching results, use two *different* signal types* as defined below. Do not mix two signals of the same type.

Signal Type	Description (Input Location)
#1	5 BNCs (RGBHV or YPbPr)
#2	DVI - I (analog or digital)
#3	Decoded signals (Input 3, Input 4, Composite video, S-Video, or any video
	signal via Input 1 BNC connectors or via an analog option card).
#4	Analog Option Cards
#5	Digital Option Cards
#6	Digital Option Cards

^{*} HD interlaced sources are not recommended for the PIP window.


Other PIP or Seamless Switching tips to keep in mind include:

- When using 2 digital signals or 1 analog and 1 digital, each must be ≤ 165 megapixels.
- When using two analog signals, each must be ≤ 90 megapixels.
- Avoid using an interlaced source in the PIP window
- Seamless switching may affect image quality in some cases

Working with PIP '

NOTE: To control the primary image, access all picture controls through the Main menu. To control the secondary (PIP) image, access picture controls through the Picture-in-Picture and Switching menu.

Use the first of six options in the *PIP* and Switching menu to enable and define how you want to use PIP.

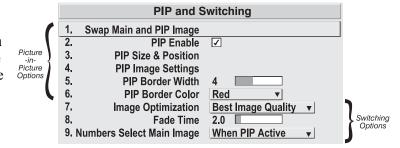

Swap Main and PIP Image

Toggle the current picture-in-picture relationship so that the primary (main) image becomes secondary (PIP), and the secondary image becomes primary. Swapping is available only when PIP is enabled.

NOTE: There may be a slight delay when swapping the Primary and Secondary images.

PIP Enable

Short cut: Press (PIP) on the Remote if menu not present.

Toggle to display from two sources at once (Picture-in-Picture) or the primary source only. This checkbox turns the secondary source on and off.

NOTE: Disable PIP and Best Switching for Interlaced sources > 35kHz.



Secondary (PIP) Image Adjust through PIP menu

PIP Size and Position - SUBMENU

Most controls in the PIP Size and Position menu adjust the PIP (secondary) image in the same fashion as their counterparts in the main Size and Position menu adjust the main image—see 3.6, Adjusting the Image for details. Exceptions are:

POSITION PRESETS –Set the location of the PIP (secondary) image in the display.

PIP Size and Position				
1.	Position Presets	Botton	n Right ▼	
2.	Size	0.729		
3.	Vertical Stretch	1.090		
4.	Pixel Track	858		
5.	Pixel Phase	0		
6.	H-Position	360		
7.	V-Position	262		
8.	Aspect Ratio Presets	Anamorphic ▼		
9.	Reserved			
0. Advanced Size and Position				

ASPECT RATIO PRESETS – Choose the desired aspect ratio for your PIP pixels. Use the "Default" aspect ratio when incoming format has square pixels (most common). This ensures that the resulting PIP image maintains its intended aspect ratio. Use "Anamorphic" for NTSC signals having narrower pixels--this will stretch the pixels horizontally to regain the intended aspect ratio of the PIP image.

NOTE: If the image is already resized at the source it will remain that way in the PIP window. If, for example, an NTSC signal is already set to anamorphic through the Resize and Preset menu it will remain that way in the PIP window. If the NTSC signal is formatted as widescreen at the source, then the image in the PIP window will appear with black bars above and below it.

PIP Image Settings — SUBMENU

Adjust the PIP (secondary image) without affecting the size or position. The primary image remains unchanged. See 3.6, Adjusting the Image for details

PIP Border Width

Set the desired line thickness for your PIP window border.

PIP Border Color

Select the desired color for the PIP window border.

NOTES: 1) Numbers 7 and 8 on the Picture-in-Picture and Switching submenu control switching parameters. 2) Disable PIP in order to work with Seamless *Switching. 3) Disable PIP and Best Switching for Interlaced sources* > *35kHz.*

Working with Seamless **Switching**

Seamless Switching is the ability to instantly and/or smoothly switch sources, and is controlled with options 7 and 8 in the PIP and Switching menu. To use Seamless Switching, PIP must be disabled.

Tips for best source switching:

- Make sure a channel has been configured for each source.
- Progressive digital and analog sources are recommended
- Set Image Optimization to Seamless Switching (see below).
- For best results, use the same frame rate and gamma setting for each.

NOTE: Avoid using two Interlaced sources.

Image Optimization

Use this setting to choose what is more important, image quality or switching between sources. Selecting Best Image Quality will ensure your image is always proper however when switching sources, the screen will go blank increasing your switching time. Smooth Switching allows for a cleaner transition between sources. The image will fade from one image to another according to the Fade Time control. Seamless Switching overrides the Frame Lock Enable settings and forces the output to run at 60Hz regardless of the input signal. Image is 100% seamless when switching sources.

NOTE: Disable PIP and Best Switching for Interlaced sources > 35kHz.

Fade Time


Set how long (in seconds) it takes to gradually dissolve one image into another for a source switch when Image Optimization is set to Smooth Switching.

NOTE: PIP must be disabled for Fade Time to take effect. Also, the PIP window must be closed to activate it.

Numbers Select Main Image

Use Numbers Select Main Image to use the numeric keys #1-8 as input keys. This remapping of the keypad (see right) can be particularly useful with PIP displays, providing a convenient shortcut for changing the primary (background) image without first having to return to the Main menu. Select "Always" to use the keys in this manner all of the time, even with single displays. For normal keypad function, select *Never* (default). Set to When PIP Active to activate number keys only when PIP is in use.

NOTE: Numbers Select Main Image keypad functionality works only when menus are closed.

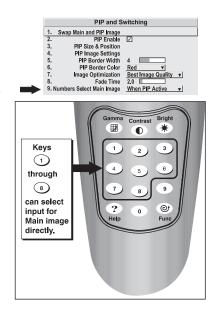

Working with 3.8 the Lamp

Whenever you install a new lamp in the projector, access the *Lamp* menu to record the lamp serial number in the projector's memory. You can also choose a lamp mode for regulating power and light output, change optical aperture size, and access other read-only information pertaining to past and present lamps.

LAMP HOURS (read-only) shows the number of hours logged on the current lamp. Whenever you record a new lamp serial

Lamp **Lamp Hours** 0 Lamp S/N 1. 2. Lamp Limit \$\infty\$ 1000 3. Lamp Mode S Power 4. Power \$ 500 \[5. 6. Optical Aperture \$3 7. Lamp History **Change Lamp**

number this value automatically resets to "0", where it begins to log time for the new lamp. This information also appears in the *Status* menu.

LAMP S/N (read-only) is the serial number recorded for the current lamp. When you install a new lamp and enter its serial number, the number will appear here.

Enter a checkmark for **LAMP MESSAGE** to enable a warning message that will appear upon power-up when the lamp has reached the specified lamp limit and should be replaced. Delete the checkmark to prevent display of this message—instead, when your lamp expires, only the status display messages on the back of the projector will provide the visual warning to replace the lamp.

NOTES: 1) It is recommended that the Lamp Message checkbox remain enabled. 2) When a lamp warning message appears, press (Exit) to temporarily cancel the message. The message will continue to appear upon power-up until you install a new lamp.

Set LAMP LIMIT to the number of hours you expect to log on the current lamp before replacing it. This will trigger a lamp message on-screen (if enabled).

NOTES: 1) If you change modes over the life of a lamp, the lamp limit you originally expected may no longer be possible. 2) Turning the lamp on and off reduces lamp life significantly, as do other factors. 3) It is recommended that Lamp Limit not exceed the expected lamp life, otherwise a lamp could become dangerously fragile with overuse.

Set which **LAMP MODE** you want to use in order to control the light output. You can choose to run the lamp as bright as possible (i.e., always using maximum power—this is the default upon power up) or you can power the lamp with a

1. Max Brightness
2. Intensity

► 3. Power

specific wattage appropriate for the installed lamp or you can set a specific intensity (brightness) to maintain. Although there are exceptions, generally higher light output or higher power settings can shorten lamp life.

Use the lamp mode that best suits your brightness needs. For example, in a tiled application you may want to precisely match brightness levels between adjacent images—judge by eye and set each individual **Lamp Power** setting as necessary. Or if you want images to be as bright as possible—choose **Max Brightness**. Always keep in mind that higher lamp power settings can shorten lamp life.

Lamp modes are described below:

- Max Brightness: The lamp will always burn as brightly as possible, driven by 100% of the power level rating for the installed lamp (see *Section 6*, *Specifications*). Keep in mind that the "maximum brightness" for any lamp gradually diminishes with age—images will become dimmer over time. Its current output level appears in the "Intensity" option (*not* in lumens).
- Intensity: Brightness will remain close to a specified level for as long as possible. Once you select this option, enter a number representing the intensity level (brightness) you wish to maintain—the projector will automatically adjust power as needed to maintain this intensity as closely as possible. Note that the intensity value is a correlation only and does not represent an actual lumens level. See "Intensity" below.
- **Power:** The power supplied to the lamp will remain at your specified wattage level. Once you select this option, enter the number of watts representing the power level you wish to maintain. See "**Power**" below.

many watts are applied to the lamp. You can apply anywhere from approximately 60-65% of the maximum power intended for the installed lamp up to 100% of the lamp rating. Set for the number of watts as desired, keeping in mind that lower power levels produce dimmer images. When in either **Power** or **Max Brightness** modes, the power level remains constant. Specifying a maximum power level here is the same as operating in **Max Brightness** mode.

NOTES: Power level can be set only if the lamp is in **Power** mode.

INTENSITY – This value and slide bar represents the current brightness of your lamp, decreasing over time when you are operating in Max Brightness mode or at a specific Power level. When you are operating in "Intensity" mode this value remains at the original "Intensity" setting chosen and cannot be adjusted.

NOTE: The number shown for "intensity" is not the actual lumen output, but rather a correlated value only—1246 may represent 3500 lumens, for example.

To use "Intensity" mode, judge by eye (or use a meter) and set the level as desired for your application. Over time, the projector will automatically increase the power supplied to the lamp as needed to maintain the chosen intensity as closely as possible. This mode is known as "Brightness Tracking" or "LiteLOCTM".

HOW LONG CAN I MAINTAIN BRIGHTNESS? Software can maintain your "Intensity" setting until the required power reaches the maximum rating for the lamp. The lower the setting, the longer it will take to reach this threshold and the longer you can maintain the desired brightness. Keep in mind that once the lamp power reaches its maximum wattage (see "Power", above), this tracking is no longer possible. At this point, the lamp will gradually begin to dim as usual, even though your original "Intensity" value will still appear in the menu. To resume accurate tracking, reduce the intensity setting so that the resulting "Power" value is less than its maximum—the lower the intensity, the longer it can be maintained.

For example, a 1000-watt lamp can be driven at no more than 1000 watts. To produce desired brightness at the screen, a new lamp would likely need less than this maximum rating—perhaps 812 watts (example only). Over time, however, the lamp will require more and more current in order to generate the desired light, until eventually the lamp wattage reaches its 1000-watt maximum and the lamp power automatically levels off. At this point, the tracking function terminates (i.e., the power level stabilizes) and the lamp will begin to dim normally. Either reduce your "Intensity" setting or replace the lamp.

Do not lower the "Intensity" so much that the corresponding "Power" value reaches its minimum—the intensity setting will be inaccurate and cannot be maintained. For best results in achieving uniform intensity amongst tiled images, choose an "Intensity" setting that enables all lamps to operate at less than the maximum number of watts available in your projector but high enough to keep the corresponding lamp power above its minimum. See "Power", above.

NOTES: 1) Lamps become more stable over time, thus a specific intensity is more easily maintained as the lamp ages. 2) Intensity can be set only if the lamp is in "Intensity" mode 3) Intensity cannot exceed the output of Max Brightness mode.

OPTICAL APERTURE - The optical aperture inside the projector controls the diameter

of the light beam passing through the system. With a fully open aperture (slide bar default of "0"), the maximum amount of light passes through for maximum brightness in your images. Increase the slide bar setting to reduce the aperture diameter and maximize contrast ratio instead.

0=maximized brightness 9=maximized contrast ratio

Optical Aperture § 7 [

LAMP HISTORY - This read-only option lists the lamps most recently installed and recorded in the projector. Lamp History automatically updates whenever you record a new lamp serial number—the new lamp is added to the bottom of the list.

Lamp	History
S/N	Hours
1234	1999
5678	27

Use **CHANGE LAMP** to record the serial number for a newly installed lamp:

In the *Lamp S/N* window, use the number text entry keys to record the new lamp serial number and press again to accept the change. See *Using Slide bars and Other Controls* if you need help entering the number. Once entered, the new lamp serial number will be added to the *Lamp History* menu and the *Lamp Hours* timer will reset to "0". *Lamp Mode* and *Lamp Limit* remain as they were for the previous lamp and can be changed at any time. See Figure 3.12.

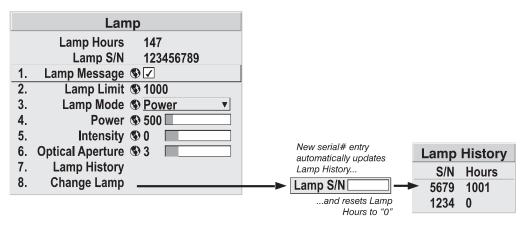


Figure 3.12. Recording the New Lamp Serial Number

NOTE: Enter a serial number **only** if you have just installed a new lamp. This will help ensure that lamp timer is not reset on an old lamp and that the number of hours logged on the lamp will be accurate.


▲ IMPORTANT ▲

Always record the serial number of a NEW lamp.

How Old is My Lamp?

When a new lamp is installed and its serial number recorded by selecting "Change Lamp" in the *Lamp* menu, the lamp timer resets to "0" and begins logging time for the new lamp. This tally appears in both the *Lamp* menu (see right) and the *Status* menu.

To review the number of hours logged for previous lamps, consult the *Lamp History* menu.

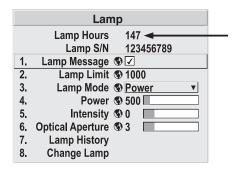

When to Replace the Lamp

If the "Lamp Message" checkbox has been enabled in the *Lamp* menu (recommended), an expiry message will appear upon power-up when the lamp has reached its defined "Lamp Limit". In addition, the LED's next to the built-in keypad will flash "LP" when lamp time has expired. The lamp should be replaced.

The "Lamp Limit" setting should not exceed the expected lamp life, as an old lamp becomes increasingly fragile and more prone to sudden failure. See also *4.4*, *Lamp and Filter Replacement*.

Status Menu 3.9

The read-only *Status* menu lists a variety of details about the standard and optional components currently detected in the projector. Refer to the *Status* menu for versions of hardware and software installed, the type (size) of lamp, the hours logged in total and for a specific period (such as a rental period), and for your projector model name and serial number. In addition, the Status menu identifies the current channel, its location, its frequencies and other details.

Scroll the full *Status* menu using (A). Use (1) for page up/down.

Using Multiple 3.10 **Projectors**



When working with more than two projectors, it's important to work left to right, top to bottom.

When an installation requires multiple projectors, you can use the RS232 serial ports to daisy chain the units together and control the group with a single keypad or a computer/controller connected to the first projector. In such a network, you can choose to broadcast commands to the entire group, or use the Proj key as desired to limit responses to an individual projector.

Alternatively, you may want to add projectors to a hub on an Ethernet network. See **2.4, Connecting Communications** for full routing details.

NOTE: Refer back to 3.6, Adjusting System Parameters and Advanced Controls for complete information about communicating with multiple projectors.

Matching Colors In Multiple Screens

In a multiple-projector wall, you will likely want to precisely match color and intensity from image-to-image so that the full wall is as uniform as possible. This matching is typically done in conjunction with brightness uniformity and edge blending.

Preliminary Calibration

As a final part of the manufacturing process, all primary colors in the projector are precisely set to pre-established values to ensure that overall color performance is optimized and is as accurate as possible. Upon installation at a site, however, lighting and other environmental factors may slightly change how these colors appear on your screen. While the change is negligible in most cases, you may prefer to recover the originally intended color performance before trying to match colors from several projectors. Or you may be renting a projector in which the colors were corrected for use at its previous site, but are not ideal for yours.

The recommended first step in achieving such consistency is to use a color meter to measure the native primary colors—red, green, blue, and white—as they appear at the screen and record these as Color Primary Settings in the Service menu (passwordprotected) for each projector. On the basis of these new values, which are stored in memory, each projector will then automatically calculate any necessary corrections to reproduce the original factory colors under the current environmental conditions. This essentially calibrates a projector to its surroundings, compensating for factors such as screen type; lamp and/or ambient lighting that can alter the final color characteristics on-screen, and will improve color accuracy and consistency in a group of projectors. It ensures a good starting point for further customizing and matching; however, is not critical for all installations

To return to the factory-set color primaries, such as when a projector is moved to different site, you must access the *Service* menu (password-protected). Select the "*Reset to Factory Defaults?*" option in the *Color Primaries* submenu. Then repeat the calibration process describe above, if desired, and continue with matching of colors.

Color Adjustment Procedure

Once the *Color Primary Settings* are calibrated for the site (see above), use the *Color Adjustments by X,Y* or *Color Saturation* menu to further refine each projector's fundamental colors so that the hue and intensity of each color appears the same from one display to another. Once matched, you will have created a single new shared range of colors or "color gamut" that all of your projectors can produce. This palette—named User 1, 2, 3 or 4—can be applied or disabled for a source at any time throughout a bank of adjacent displays, simplifying both the setup and maintenance of a "seamless" wall.

- 1. Set up and optimize all projector settings. You can ignore color temperature, since you will be redefining color performance in this procedure, but do optimize each projector in every other aspect. Closely align all screen edges.
- 2. Assign projector numbers to make communications easier. Use desired keypad.
- 3. Use the same lamp mode for all projectors, and do the following:
 - □ Set Select Color Adjustment to "Max Drives"
 - □ Display a full white test pattern
 - □ Adjust lamp power and Optical Aperture until adjacent white fields appear the same brightness.
- 4. Display the *Color Adjustments by X,Y* menus for all projectors. Each menu shows the x/y coordinates defining the "Max Drives" color gamut for this projector. Note the values shown in one (any) of the displays. See Figure 3.13. Or use the "Copy From" function to copy them into a "User" gamut in one projector.

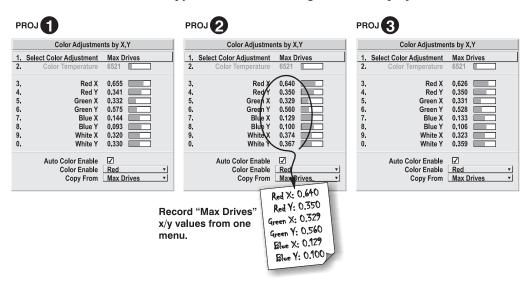


Figure 3.13. Jot Down a Set of "Max Drives" X/Y Values

5. In each projector, select a "User" color adjustment (1-4) to enable *Color Adjustments by X,Y* changes. Then enter your recorded x/y values into each menu (Figure 3.14).


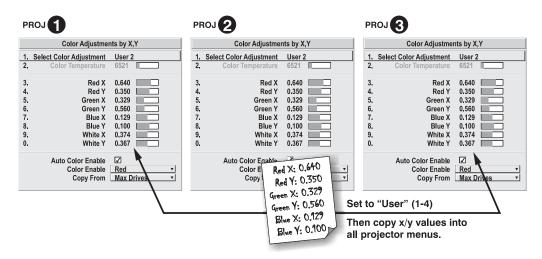


Figure 3.14. Copy X/Y Values into All Projectors

- 6. In each projector, judge by eye and adjust x/y coordinates slightly in the following manner:
 - ☐ To match reds, decrease "Red X" until full field red screens match.
 - ☐ To match greens, decrease "Green Y" until full field green screens match.
 - □ To match blues, increase both "Blue X" and "Blue Y" until full field blue screens match.

IN ALL PROJECTORS:

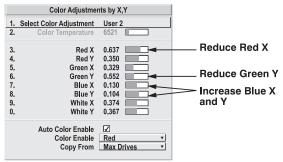


NOTE: For speed, enable the "Auto Color Enable" checkbox. Each color

coordinate you select will then automatically trigger a full field display of the corresponding color.

Alternatively, use the Color Saturation menu for these adjustments or to fine tune.

NOTE: For speed, enable the "Auto Color Enable" checkbox. Each color coordinate you select will then automatically trigger a full field display of the corresponding color.

These coordinate adjustments move the three color points closer together (see right) to establish a "shared" gamut attainable by all projectors in your group. Adjust only as necessary to ensure that the resulting color palette is as large as possible. When done, you may need to adjust lamp power slightly.

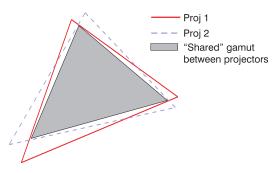

7. All screens should now be color-matched. Apply this new "User" gamut to a source at any time by selecting it in the "Select Color Adjustment" list accessed in the *Advanced Image Settings* menu.

Using the Color Saturation Menu for Color Matching

You may prefer to use the Color Saturation menu to match colors across multiple screens. In the three Color Adjustment submenus (Red, Green, Blue—see right), set all main values to 100 and the secondary values to 0. Then judge by eye and adjust the slide bars as needed. Note that adjustments here define new x/y coordinates in the Color Adjustments by X,Y menu

For best results, use this menu after doing the color adjustment procedure.

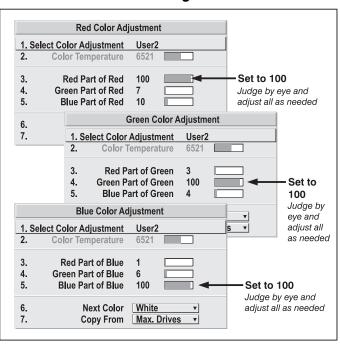


Figure 3.15. Color Matching Using Color Saturation Menu

Achieving Brightness Uniformity

WHAT IS BRIGHTNESS

UNIFORMITY? When used to refine screens already matched for their primary colors (see *Matching Colors in Multiple Screens*, above) and overall light output, proper adjustment of *Brightness Uniformity* can create an exceptionally smooth screen in which:

- no area of the screen appears more red, green or blue than another
- no area of the screen appears brighter than another
- color and light output from one screen closely matches adjacent screens Although the *Brightness Uniformity* control can be used for a stand-alone projector, it is particularly useful for setting up and maintaining tiled images that form a cohesive display wall in which the color "cast" and light output appear uniform throughout each image as well as throughout the entire wall. The procedure provided here assumes a multiple-screen application.

$\mathbf{\Lambda}$

A Before You Begin

Read through the entire procedure before attempting to adjust Brightness Uniformity controls, and keep in mind the following checklist of prerequisites and guidelines:

- ADJUST COLORS FIRST—Always adjust the primary colors as described in the "Matching Colors in Multiple Screens" procedure (above) before attempting to work with Brightness Uniformity. This ensures that primary colors, color temperature, and maximized light output are all well-matched from one screen to another. These matches are needed before you can achieve good Brightness Uniformity results.
- RUN LAMP FOR 100 HOURS—Light output and Brightness Uniformity can vary significantly during the first 100 hours of lamp use. For best results with new lamps, either set up Brightness Uniformity after this period, or do an initial setup and re-check at 100 hours.

- **SET LAMP POWER**—Make sure each "Lamp Power" setting is as high as possible for your application while still maintaining a good overall match of light output from screen-to-screen. By nature, achieving a *uniform* brightness will require a slightly reduced overall brightness—this reduction will help ensure that you have enough range of adjustment when examining brightness variables more closely from screen-to-screen, and will help prevent premature "maxing out" when trying to match to a certain color, zone or projector.
- **USE A "USER" COLOR TEMPERATURE—**Always adjust Brightness Uniformity for a *User* color temperature defined when you matched primary colors, and continue to use it for all sources displayed on the wall. Your other color temperatures will not necessarily be matched from screen-to-screen.
- WHITE UNIFORMITY SLIDE BARS—White Uniformity slide bar values may not reduce to "0". Each slide bar adjusts overall light output in a specific screen zone, but the value shown represents the current setting for *green* in this zone. When other "hidden" values (red or blue) are lower than green, during adjustment in the White Uniformity menu their values will reach "0" first, causing the slide bar to stop earlier than expected.
- JUDGE BY EYE OR USE A METER—Good brightness uniformity can be achieved with either.


Step 1: General Setup

1a) Adjust primary colors (see *Matching Colors in Multiple Screens*) to ensure matched overall color temperatures and light output between screens.

A IMPORTANT A


Double-check that all WHITES and LIGHT OUTPUT are well-matched.

1b) Enable the Brightness Uniformity checkbox. This will enable access to the uniformity controls and will apply the settings to your image.

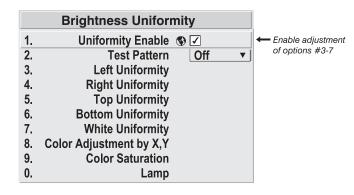

1c) Select the 13-Point test pattern for display. This pattern provides 9 screen "zones" with 13 targets.

FOR BEST RESULTS: Rather than examining the CENTER of each zone when assessing Brightness Uniformity adjustments focus on extreme EDGES as indicated in the illustration at right.

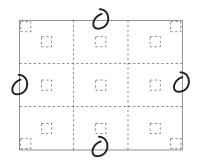


1d) In either *Color Adjustments* menu, select a "User" color. Then:

- If you have created a "User 1" color gamut (recommended) for a well-matched wall, continue to Step 1e.
- If you prefer maximum brightness rather than a particular color temperature, select "Max Drives".

A IMPORTANT A

Do not change User 1 Color Adjustment in color-matched applications!

1e) In the White Uniformity
menu, set the "Overall"
output level to 50.0 and all
remaining slide bars to 0.0.
This decreases the light
output just enough
throughout the screen so that
any color level can then be
increased later as necessary
for matching light output

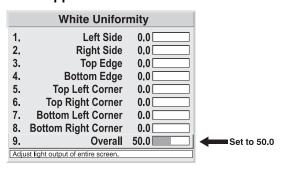

from zone-to-zone. Do not exceed **50.0** for "Overall"—a higher level will likely interfere with achieving brightness uniformity and is not recommended.

Ensure that overall light output remains well matched from one screen center to the next. Where necessary, increase or decrease Lamp Power slightly to recover center matches.

Step 2: Adjust Color (level of red/green/blue) in 8 Zones

NOTES: 1) At this point, ignore the **brightness** of individual zones. 2) Always ignore menu colors.

- 2a) On each screen, compare the color temperatures in the 8 target zones (4 edges and 4 corners) to that of the color temperature of the center. Compare using a *white* field only, and take note of any areas that do not match the center. Also decide if any screen exhibits a more obvious color shift than other screens—begin with this screen in Step 2b.
- **2b)** Return to the *Brightness Uniformity* menu. Beginning with the screen that exhibits the most obvious color shift(s), for each edge that exhibits a noticeably different color temperature from the center, select the corresponding *Uniformity* adjustment menu—*Left*, *Right*, *Top* or *Bottom*. For example, if any part of the left side is too blue, too red or too green, go to the *Left Uniformity* menu and adjust the colors (i.e., change their light output) until all portions of the left side closely match the center color temperature. Adjust an edge first (focusing on its center), and then adjust its corners. See Figure 3.16.

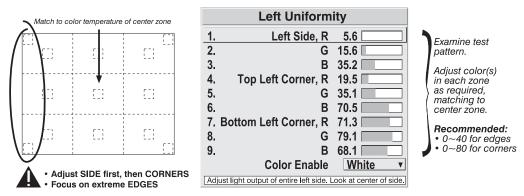


Figure 3.16. Match Zones to Center Color Temperature

Repeat the color adjustment of sides and corners for each edge of the screen that does not yet match the center (note that each corner is adjustable in either of its two adjacent "side" menus). When done, all areas of a given screen should match. Repeat Steps 2a & 2b for all remaining screens.

Step 3: Adjust Light Output in 8 Zones

- **3a)** For each screen, compare the light output of each *edge* and *corner* to that of the *center*. If any of the areas differ, use the *White Uniformity* menu to match edges and corners to the center as described below (see Figure 3.17). Begin with the screen exhibiting the most obvious variations in light output.
 - Adjust **edge** *White Uniformity* first—note that each edge adjustment also affects the rest of the screen slightly. Keep all edges just slightly *lower* than the center light output rather than matching light output precisely. Otherwise, it may not be possible to brighten the corners (typically the dimmest areas of the screen) enough. I.e., the best uniformity is a compromise between the brightest and darkest areas of the screen.
 - Adjust **corner** *White Uniformity* last—each corner adjustment affects only this quadrant.
 - Repeat for each screen.

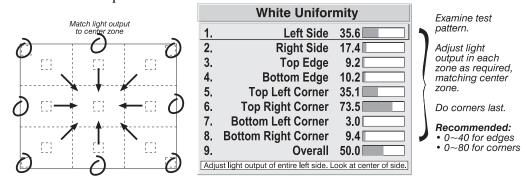


Figure 3.17. Match Zones to Center Light Output

Step 4: Readjust Color Temperature (level of red/green/blue) in 8 Zones

4a) Return to Steps **2a** & **2b** and, if necessary, fine-tune the zones so that they all still exhibit a single color temperature.

Cancelling Brightness Uniformity

If you do not want to use or apply Brightness Uniformity settings, delete the checkmark from the "Uniformity Enable" checkbox at the top of the *Brightness Uniformity* menu.

Edge Blending '

Christie *Edge Blending* is an innovative set of software functions that can quickly and easily blend white levels along the edges of multiple adjacent projected images to create a single seamless larger image.

Blend

What is a Blend?

In simple terms, a blend appears as a gradient strip along an edge of a projected image. It is darkest along the extreme edge of the image, and lightens nearer to the rest of the image (see right).

How Are Blends Used?

In multiple-projector walls, complementary blends between neighboring images can compensate for the

extra "brightness" or intensity where these edges overlap. By controlling blend width and other properties, you can achieve uniformity across the group of images. Visible overlaps will disappear:

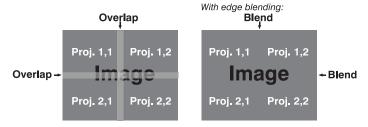


Figure 3.18. Edge Blending Concept

For best results, use the same projector model and type throughout your display wall. In addition, avoid high-gain screens whenever possible—the optical performance of such screens demands minimal image offset, thus projectors must be located very close to one another.

Edge blending software controls are located in the 2-page *Edge Blending* submenu—access via *Configuration* menu, then go to the *Geometry and Color* menu and select *Edge Blending*. The *More* option opens the second page of the *Edge Blending* submenu.

Main Functions

Use Edge Blending controls to set the precise *width*, *shape* and *midpoint* you need to blend overlapping edges together smoothly.

□ Blend Width determines how much area is used for blending along an overlapping edge. Slide bar values represent the number of 8-pixel steps used for the blend. For example, a setting of "3" creates a blended edge 24 pixels wide. A setting of "0" signifies no blending. For best results in most applications, use a blend width of 16-48 steps (128-384 pixels).

Ranges: 0-80 horizontal, 0-60 vertical.

Blend Shape determines the rate of roll-off across the blend width, i.e. how quickly the white levels across the blend change from light and dark. Increasing the *Blend* Shape setting accelerates the rate of change at both extremes so that less of the region appears midgray (see Figure 3.19). Decreasing the Blend Shape setting slows the rate of change so that more of the region appears mid-gray. For most

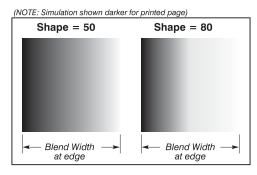


Figure 3.19. "Shape" Examples

applications, this subtle control is best left close to 50.

Blend Midpoint determines the white level at the blend midpoint (the point equidistant between the beginning and end of the blend). Increasing the Blend Midpoint setting creates a blend that appears brighter than the rest of the image. Decreasing the Blend Midpoint setting creates a blend that is darker than the rest of the image. A setting of 50 means the midpoint is approximately 50% black—for best results in most applications, keep fairly close to this default.

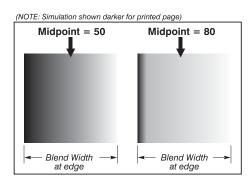



Figure 3.20. "Midpoint" Examples

Show Blending Overlap turns your defined blend width area to solid gray so that, if needed, simply overlapping the gray bars can seamlessly align two adjacent images. Toggle the Show Blending Overlap off to reactivate the blend effect.

NOTE: Blending Overlap appears as **Reserved** when ChristieTWIST is installed.

Other Functions

For convenience, the Edge Blending submenu also includes related options for enabling a specific color and/or test pattern, or for working with colors or the lamp. Such functions duplicate those provided elsewhere in the menu system.

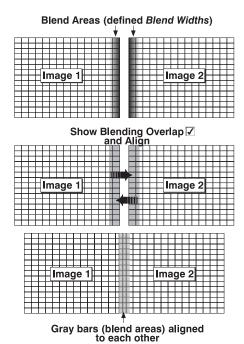

Edge Blending Procedure

NOTES: Before attempting to work with edge blending software functions, you must 1) physically align the projectors/images by correctly overlapping the displays from your intended external source, and 2) Match colors and Brightness Uniformity.

🕰 IMPORTANT 🕰

For a shared edge, all Blend procedures and settings should be identical on BOTH projectors.

- 1. Start with 2 projectors. Display full white field test pattern from both.
- 2. In the Edge Blending submenu, enable Edge Blending by entering a checkmark in the top checkbox.
- 3. SET STARTING POINTS FOR ADJUSTMENT:
 - □ Set all blend widths to 0.
 - □ Go to "More" and set everything in the *Edge Blending (2)* menu to 50.

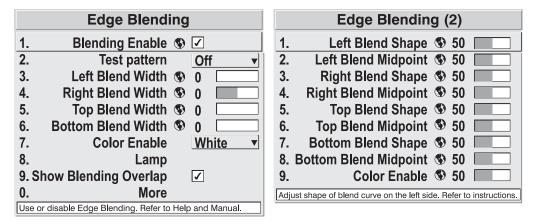


Figure 3.21. Set Starting Points for Each Projector

- 4. **SET BLEND WIDTH**: On one projector, increase the *Blend Width* for an overlapping edge (for example, if the projector's image is on left, its right edge overlaps the adjacent image—adjust Right Blend Width). Use the same setting on the second projector for this shared edge.
- 5. Re-adjust width (both projectors) until the overly bright band at the midpoint of the overlapping blends disappears or *just* changes to very light gray. For the shared edge, use the same Blend Width setting on each projector. If the "best blend" appears to be between two settings, choose the wider setting for both projectors.
- 6. **CHECK BLEND:** If the blended region appears too dark or light in relation to the rest of the image:
 - □ Increase *Blend Midpoint* in both projectors to "lighten" the overall blend, decrease to "darken" the overall blend.
 - □ Adjust Blend Shape in both projectors to fine-tune change the amount of midgray intensity (as opposed to black/white) in the blend.
- 7. Repeat with remaining projectors / overlaps.
- 8. Check completed display wall with the desired external signal.
- 9. Adjust mechanical alignment if necessary to maintain perfect pixel-on-pixel alignment over time.

In applications where you are projecting only white or light images, the *Blend Width* may be slightly higher—set according to how much overlap you have between images. Use the following as a guide (examples show overlapping width only—values for overlapping height will differ):

□ Recommended overlap is 12.5% - 25%


Black Level Blending

Similar to Edge Blending, Black Level Blending allows you to adjust the black level hues of multiple adjacent projected images to create one large seamless display. Edge blending must be enabled in order to use the Black Level Blending features.

Black Level Blending Procedure

NOTES: 1) Adjust white levels before adjusting black levels. **2)** The zones in BLB menu correspond to the Edge Blend zones. If a given Edge Blend zone width is set to 0 (i.e. no blend on that side) then the corresponding BLB zone is disabled. It only becomes accessible when that Edge Blend zone is active.

- 1. Start with 2 projectors. Select the black test pattern for both projectors from the *Geometry and Color* submenu.
- 2. In the *Black Level Blending* submenu, enable black blending by putting a checkmark in the checkbox for each projector.

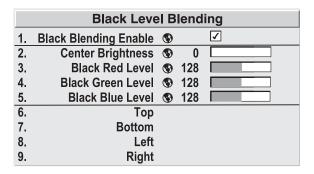

- 3. Working with one projector at a time, use the center brightness slide bar to adjust the center brightness (brightness of the non-blended region) so that the center intensity matches that of the brightest blended region (the center of all images when blending a 2x2 display is the target area).
- 4. Use the following three color slide bars, Black Red Level, Black Green Level and Black Blue Level, so the black hue of each projector matches.
- 5. You can choose which of the next four options, Top, Bottom, Left, Right, to use depending on which edge of the projector you are working with has been edge blended. The blend width can be adjusted to line up properly but by default it corresponds to the edge blending setting determined for that edge.

Тор	
1. Top Brightness § 123 2. Top Left Brightness § 0 3. Top Right Brightness § 0 4. Top Width § 117	Not applicable when blending two projectors (corresponds to sides selected in Edge Blending menu).
5. Black Red Level \$ 128 6. Black Green Level \$ 128 7. Black Blue Level \$ 128	

6. The brightness and black hues of the blended region can be adjusted in more detail in case fine-tuning is needed (may be only necessary for blending a 2x2 projector display because of blending differs for the sides and center).

NOTES: 1) The menu options vary depending on the Edge Blending parameters. **2)** You may need to re-adjust the black level hues following the overlap adjustments on each blended edge. **3)** When adjusting six or more projectors, you need to ensure that the hue and brightness of each target area is matched at closely as possible.

3.11 Remote Control of the Projector

As an alternative to using a keypad, most projector functions can be controlled remotely, typically at a controller such as a PC, via 1) simple bi-directional ASCII messaging on an Ethernet or serial communication link or 2) a web interface or "ChristieNET" on an Ethernet network. Using a PC interface can also prove to be useful in instances where extreme warping is applied and the menu items become illegible and hard to navigate.

VIA ASCII MESSAGING — Connect a serial link between your controller and the RS232 or RS422 port (recommended), or open an Ethernet socket (i.e., Telnet) between your controller and the valid projector address. Valid ASCII codes and messages are documented in the *Christie Serial Communications* document available at the Christie website.

VIA WEB INTERFACE — Connect your PC to the projector's Ethernet port. In your web browser (*Internet Explorer*, for example), enter the IP address of the projector you wish to control. This will start a password-protected ChristieNET application—enter the factory default "**ccm7**" login and password to open the program. If the projector is powered up, you can access assorted menu options and slide bars.

Repeat for remaining networked projectors as desired. Keep in mind that multiple units can be controlled from one PC, but each unit will be in its own ChristieNET interface (web browser) at the PC. Likewise, you can make up to five separate web locations to a single projector.

The default login provides access to security settings, where you can define other users with the same or fewer rights. Use "unlimited" rights for most applications. For all logins, the *Service* menu is still protected with its own password.

NOTES: 1) Any proxy server settings that interfere with this type of link should be disabled for using ChristieNET. Disable through Internet Explorer's < Tools> <Internet Options> <Connections> <LAN Settings>. 2) Your PC must be Javaenabled to v1.4.2 or higher to run ChristieNET. 3) Depending on your projector model, certain controls provided through ChristieNET are non-functional.

3.12 Error Conditions

Occasionally the projector will encounter an error condition that can interrupt normal operation. Such a condition can be caused by a simple invalid keypad entry, an input signal error (most common) or a system error. The manner in which users are to be notified of error conditions is set in the Menu Preferences menu:

- To see error messages displayed on-screen, select the "Screen" or "All" option.
- To be notified via a serial communication only, select the "RS232" option.
- To receive both types of notifications, select "All".
- To disable error messages (except for "invalid user key entry", which can't be hidden), select "Off".

Note that a two-digit error code appears in the status LED display window located beside the built-in keypad at the rear of the projector. Normal operation is indicated by the "0n" status code.



User Errors ' **Invalid User Entry**

A keypad entry not recognized by the projector triggers a short on-screen error message identifying the problem. For example, if you specify a channel number that is not available, the message "Invalid Channel will appear. Or if you try to enter the wrong password, you'll see "Invalid Password". Press (a) or (Exit) to clear the message, and try again.

NOTE: On-screen display of "Invalid User Entry" messages cannot be disabled, even if **Display Error Messages** has been set to "Off".

Input Signal Errors '

An input signal error message occurs if you are in presentation level (i.e., there are no menus present) and have selected an input on which the projector detects a problem. While menus remain operational and any key press will temporarily remove any displayed error message, you must resolve the signal problem in order to permanently eliminate the message.

No Signal

The message "No signal" occurs when there is no source signal detected at the selected input—both HSYNC and VSYNC are inactive and the screen background is black. Connect or correct the signal, or try another input.

Bad Sync

The message "Bad Sync" occurs when HSYNC or VSYNC are active but the signal cannot be displayed. Such a condition occurs when only one of the two sync signals is present or when either sync signal is unstable or of the wrong frequency. Correct the signal or select another input.

Other Signal Error Messages

In addition to the common "Bad Sync" and "No Signal" errors, you may encounter a signal error message indicating that HSYNC and/or VSYNC are either too fast or too slow. When such a message appears, check the frequencies shown in the *Status* menu. If they are correct, the projector does not recognize the signal. On some PCs you may be able to change the settings to generate a compatible signal. If the frequencies shown in the Status menu are incorrect, check the cabling to see where the problem might originate.

System Warnings / Errors '

When the projector encounters a system malfunction, either a System Warning message or a *System Error* message may appear. Both types of messages are accompanied by a numerical error code on the status LED display. A system malfunction can be cleared with (Exit) (Exit) from presentation level, but may indicate the need for service by a qualified service technician.

NOTE: System messages appear on-screen only if **Display Error Messages** has been set to "Screen" or "All".

System Warnings

A system warning indicates that a system malfunction has been detected (see Status LED Codes, below). A system warning message replaces any input signal message and disappears when the input signal status changes. While the projector will remain operational, the message indicates the presence of a potentially serious problem that should be investigated. You can press (Exit) to remove the message, but for best results you should reset the projector—power the projector down and up again with the (power) key.

System Errors

A system error message indicates that a serious malfunction has been detected and must be investigated as soon as possible (see Status LED Codes, below). The projector will no longer operate and must be reset—power the projector down and up again with the (power) kev.

The Status LED Codes

If the status code display on the back of the projector shows one of the following values, you have encountered a likely system error requiring the attention of a qualified service technician (see *System Warnings* and *System Errors*, above). Acknowledge and clear the error with (Exit) (Exit) from presentation level, or try resetting the projector by powering it off and on again, cooling when necessary. Consult *Table 3.5* and contact your dealer if the problem persists.

The specific code number identifies the source of the error detected, and is particularly useful in cases where the projector is far away. For example, the code "27" means the lamp could not be turned on. Error codes for this projector are listed in *Table 3.5* below.

Table 3.5 Error Codes

Code	Description
GENERAL	
12	Software bug. Contact dealer/factory.
13	CRC error in flash ROM. Download new software.
14	Engineering-only programming is complete. Call Christie, replace TIPM.
15	Attempting to download code without being in boot mode
16	Invalid interrupt. Power off/on. If it persists, contact dealer/factory.
17	User forced system to stay in boot mode
18	Jumper for programming boot not installed
LAMP FAI	
20	Lamp turned on unexpectedly (fault related to ballast)
21	Lamp airflow low, overheating imminent
23	Cannot read valid ballast ID
26	Lamp Interlock: lamp door open, lamp not installed
27	Can't turn lamp on
28	Lamp turned off unexpectedly
29	Lamp ballast overheated
	ND COOLING
46	Red DMD heatsink overheated
47	Green DMD heatsink overheated
48	Blue DMD heatsink overheated
49	Prism overheated
4C	Projector shutdown due to critical error
CO	Lamp blower failure (lamp not turned on)
51	LVPS fan failed (Fan 1)
52	LVPS/ Red cooling fan failed (Fan 2)
53	DC lamp fan failed in 500W / 1kW models (Fan 3)
54	Red DMD heatsink fan failed on 1kW and 1.2kW models (Fan 4)
55	Green DMD heatsink fan failed on 1kW and 1.2kW models (Fan 5)
56	Blue DMD heatsink fan failed on 1kW and 1.2kW models (Fan 6)
57	TIPM fan failed (Fan 7)
58	TIPM fan failed (Fan 8)
TIPM (Ima	ge Processor)
60	Boot code CRC failed
61	Unable to program DigMux PLD
62	Unable to program Control PLD
63	Unable to program Bubks PLD
64	Unrecognized ROM type
65	Write to flash ROM failed
66	TIPM failure
67	Downloaded code will not fit
68	Scaler communication problem
BUILT-IN	
70	Unable to access EEPROM on the built-in keypad
71	EEPROM memory re-initialization on the built-in keypad
	RIVER AND FORMATTER
80	Unrecognized Panel Driver
81	Unable to program device on Panel Driver
82	TI flash download failure
83	TI flash download failure
84	TI flash download failure
85	TI-I2C write failure
86	One or more Formatters not responding — Probable Formatter s/w fault
87	Formatter reports RDRAM failure
88	Red modular Formatter communication failure
89	Green modular Formatter communication failure
8A	Blue modular Formatter communication failure Modular formatter architecture error
93	
94 95	Modular formatter DMD mismatch
MISCELLA	Modular formatter sequence mismatch
A0	Unable to program the optional module
AU A1	Unable to program the optional module Unable to power the optional module
A1 A2	Unable to program the Dual Slot Backplane Module (DSBP)
A3	Unable to program the optional Post Processing Module (Warp module)
, 10	Chable to program the opnorial rost rocessing woulde (warp mounte)

Clear system errors with Exit . If necessary, try resetting the projector by powering it off and on again (cooling if necessary). For detailed information, monitor the RS232 IN port. Contact dealer/factory if error persists. Codes omitted from this table should not appear in your projector.

Maintenance

4.1 Warnings and Safety Guidelines

The projector is an international regulatory agency approved product designed for safe and reliable operation. To assure complete safety at all times it is important to acknowledge the following precautions while operating the projector.

A WARNING **A**

Always remove the lens when shipping the projector.

A WARNING A

NEVER look directly into the projector lens. The high brightness of this projector could cause permanent eye damage.



A WARNING A

For protection from ultraviolet radiation, keep all projector shielding intact during operation.

! CAUTION

Installation should be performed by qualified personnel

Labels and Markings '

Observe and follow all warnings and instructions marked on the projector.



The exclamation point within the equilateral triangle alerts the user to important operating and maintenance (servicing) instructions in the literature accompanying the projector.



The lightning flash and arrowhead symbol within the equilateral triangle alerts the user to uninsulated "dangerous voltage" within the projector's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

Instructions '

Read all operating instructions prior to using the projector.

Projector Location '

Operate the projector in an environment, which meets the operating range specified in Section 6 – Specifications.

Do not operate the projector close to water, such as near a swimming pool. Do not operate in extremely humid environments.

- Do not place the projector on an unstable cart, stand or table. A projector and cart combination should be used with care. Sudden stops, excessive force and uneven surfaces may cause the projector and cart combination to overturn.
- ♦ Only use Christie-approved ceiling mount fixture, if the projector is to be ceiling mounted.

Lamp '

Lamp: The projector uses a Cermax® Xenon lamp to deliver its high brightness. A lamp should be replaced when it has reached its end of life (1000 hrs, typical) or if a noticeable change in brightness occurs. Keep track of the number of hours the lamp has been in use (*Lamp Menu*) and be aware of any changes to brightness. These indicators will help you effectively maintain operation of the projector.





$oldsymbol{oldsymbol{A}}$ WARNING $oldsymbol{oldsymbol{A}}$

Wait approximately 5 minutes after powering down the projector to allow internal cooling fans to stop and for the lamp to cool sufficiently before removing.

Never attempt to remove the lamp housing directly after use. The lamp is under great pressure when hot and may explode, causing personal injury and/or property damage. Allow cooling completely.

A WARNING A

Use only lamps supplied by Christie. Use lamps of the correct wattage for your projector model when replacing.

Filter: Replace the filter when you replace the lamp or sooner if required. It is important the filter be replaced regularly to ensure sufficient airflow through the projector, otherwise it could cause the projector to overheat.

$oldsymbol{\Lambda}$ WARNING $oldsymbol{\Lambda}$

Use only filters supplied by Christie.

Refer to 4.4 Lamp and Filter Replacement for instructions.

Power Cord and Attachments

The North American rated line cord is provided with each projector. Ensure that you are using a line cord that meets the appropriate rating standards (CCC for use in China, PSE for use in Japan).

Use only the attachments and/or accessories recommended by CHRISTIE. Use of others may result in the risk of fire, shock or personal injury.

A WARNING A

Use only the AC power cord supplied. Do not attempt operation if the AC supply is not within the specified voltage and power range. Refer to the Specifications in Section 6.

On not set or rest items on the power cord. Place the projector in an area where the projector cord cannot be abused or damaged by persons walking on it or by objects rolling over it.

- Operate the projector at the specified voltage only. Do not overload power outlets and extension cords as this can result in fire or shock hazards.
- The projector is equipped with a three-wire plug having a third grounding pin. This is a safety feature – if you are unable to insert the plug into an outlet contact an electrician to have the outlet replaced. Do not defeat the safety purpose of this grounding-type plug.

Ventilation '

Slots and vents in the projector provide ventilation. Never block or cover these openings. This ensures reliable operation of the projector and prevents overheating.

- Do not place the projector over a radiator or heat register. The projector should not be placed in an enclosure unless proper ventilation is provided.
- Do not insert objects into the ventilation openings of the projector. They may touch dangerous voltages or short-out components resulting in a fire or shock hazard. Do not spill liquids of any kind into the projector. Should an accidental spill occur, immediately unplug the projector and have it serviced by a qualified service technician.

Servicing '

If any of the following conditions exist, immediately unplug the projector from the power outlet and ask a qualified service technician to look at it.

- The power cord has been damaged.
- The internal cooling fans do not turn on within two minutes when the projector is first powered up.
- Liquid has been spilled into the projector.
- The projector has been exposed to excessive moisture.
- The projector is not operating normally or its performance has significantly deteriorated in a short period of time.
- The projector has been dropped or the shipping case (if applicable) has been badly damaged.

A WARNING A

Do not attempt to service the projector yourself. All servicing must be performed by CHRISTIE accredited service technicians.

Use replacement parts that are manufacturer-approved only. Use of any other part other than the ones specified by the manufacturer can result in fire, electric shock or risk of personal injury and irreparable equipment damage.

4.2 Cleaning and Maintenance Guide

▲ WARNING **▲**

Always power down and unplug the projector before cleaning or servicing.

Table 4.1. Maintenance Guide

Part Description	Frequency	Action
•	1 0	
Lens	As required	CLEAN: Clean if absolutely necessary. A small amount of dust on the lens has very little affect on picture quality. To clean: Apply a solvent such as acetone, alcohol or vinegar sparingly to clean, lint-free lens tissue. Wipe across the surface of the lens. Do not scrub or rub tissue in circular motion, this will scratch the lens. Do not reuse tissue. Do not use cleaning tools treated with Ether. If particles still appear on the lens, try using compressed air to remove.
Lamp	As required	CLEAN: Clean if absolutely necessary. Never touch the glass surface of the lamp. Fingerprints left on the glass will seriously degrade lamp performance or cause "hotspots" which can lead to an accumulation of intense heat in the touched area and cause the lamp to shatter. To clean: Wait until lamp is cool. Moisten a clean, lint-free cotton cloth with isopropyl alcohol and gently rub the surface of the glass in a circular motion until clean.
	1000 hrs or sooner	REPLACE: Refer to 4.4 Lamp and Filter
	if required	Replacement procedure later in this section.
Filters	Whenever a lamp is replaced or sooner if required	REPLACE: Do not reuse old filters. Use the filter provided in the Christie Lamp and Filter Kit.
Covers (External)	As required	CLEAN: Clean dust from external covers using a clean, lint free cotton cloth as required. NOTE: Before cleaning the modules, it is recommended that you install the lens cap. This will keep dust particles from settling on the glass surface of the lens.


A WARNING **A**

Proper face shield and protective gloves are required if the lamp module is removed from the projector.

4.3 Replacing Remote **Batteries**

The IR Remote Keypad uses two AA size, 1.5V batteries (preferably alkaline). To install new batteries:

1) Open the battery compartment at the backside of the keypad by placing your thumb in the oval depression and sliding the cover out about ½ inch. See Figure 4.1. Remove the old batteries and properly discard. Wait a minute or two.

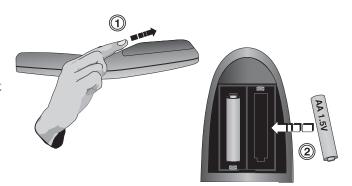

2) Place the new batteries in the compartment, orienting the positive/negative of each

Figure 4.1.Replacing Batteries

battery according to the labels in the compartment. When the batteries are in place, replace the cover by placing the cover ½ inch from its closed position and slide it into place. Do not force the cover.

NOTE: Always wait a minute or two when replacing batteries so that the internal electronics discharge and can recognize the change.

4.4 Lamp and Filter Replacement

Use the following instructions when replacing the lamp. The lamp is located at the back of the projector (below the input panel) and can be accessed by removing the lamp access panel. Use only the Christie approved *Lamp and Filter Kit* for your specific projector model. See Table 4.2 below.

Table 4.2. Lamp/Filter Replacement Kits

Projector Model	Model Number	Lamp Type (Watts)	Lamp/Filter Kit Required
Miraga C. OK	(38-DSP102-04)		03-000832-01P
Mirage S+2K	(38-DSP102-54)	500W	03-000832-51P
DLV1400-DX	(38-DSP102-05)	30000	03-000832-01P
DLV 1400-DX	(38-DSP102-55)		03-000832-51P
Christie DS+5K/Kc	(38-DSP104-05/-08)		03-000833-01P
CHISHE D3+3K/KC	(38-DSP104-55/-58)		03-000833-51P
Christie DW3K/Kc	(38-DHD103-03/-04)		03-000833-01P
Chilistic DVV3K/KC	(38-DHD103-53/-54)		03-000833-51P
Mirage S+4K	(38-DSP104-06)	1000W	03-000833-01P
Willage 5+4K	(38-DSP104-56)		03-000833-51P
Matrix 4000	(38-DSP104-07)		03-000833-01P
IVIALITY 4000	(38-DSP104-57)		03-000833-51P
Christie DS+8K	(38-DSP106-03)		03-000834-01P
CHISHE D3+0K	(38-DSP106-53)		03-000834-51P
Christie DW6K/Kc	(38-DHD106-03/-04)	1200W	03-000834-01P
CHIISHE DVVOK/KC	(38-DHD106-53/-54)		03-000834-51P
Mirage S+8K	(38-DSP106-04)		03-000834-01P
ivillage 5+6K	(38-DSP106-54)		03-000834-51P

A lamp should be replaced when it reaches its end of life (1000 hours, typical) or sooner if a noticeable degradation in brightness occurs (typical in aging lamps). You can set the number of hours you expect to log with the lamp before replacing it, by setting the **Lamp Limit** in the *Lamp* menu. The LED's next to the built-in keypad will flash "LP" when lamp time has expired. You can also enable a warning message to appear upon powering up the projector that will indicate the lamp has reached the limit you set, by entering a checkmark beside the *Lamp Message* option.

NOTE: The lamp mode you choose to run the projector in may have an impact on the number of hours expected for the lamp.

Tools required: #1 Phillips screwdriver

Warnings

▲ Lamp replacement must be performed by a qualified service technician.

A Cool the lamp completely and handle by the housing only.

Install the correct wattage lamp supplied by Christie (see above) and read the Lamp Replacement procedure in its entirety before proceeding.

Do not touch the glass surface of the lamp. Fingerprints left on the surface can lead to an intense accumulation of heat called a "hotspot", which could potentially result in the lamp shattering. It is recommended you wear clean, lint-free gloves and a face shield when working with the lamp.

1. TURN THE LAMP OFF

Press (power) to turn the lamp off. Allow the cooling fans to stop automatically (within approximately 5 minutes) before proceeding with Step 2. This wait period is also required to allow the lamp to sufficiently cool before handling.

Figure 4.2. Open Lamp Door

2. UNPLUG THE PROJECTOR

When the cooling fans have stopped, turn the projector's main switch off, and unplug.



Always power down and unplug the projector prior to servicing. Allow the lamps to cool before handling

3. REMOVE THE LAMP DOOR



Protective gear required. Wear a face shield.

Using a #1 Phillips screwdriver, remove the two (2) screws securing the lamp door, which is located at the rear of the projector below the input panel. See Figure 4.2.

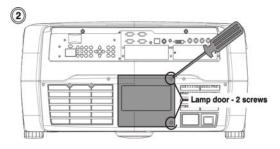


Figure 4.2. Remove Lamp Door

4. RELEASE THE LAMP LOCK

Pull out and turn the lamp lock lever, which is located to the left of the lamp module, and turn it ¼ turn counter clockwise to the "unlock" position. See Figure 4.3.

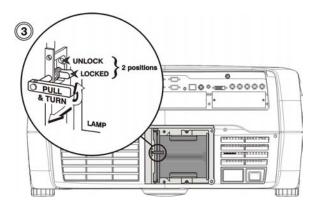


Figure 4.3. Release the lamp lock

5. REMOVE THE LAMP MODULE

Firmly grasp the lamp by it's housing only and pull it straight out (lamp slides along guides) until it is free. See Figure 4.4. Discard the lamp using safe disposal/recycling practices.

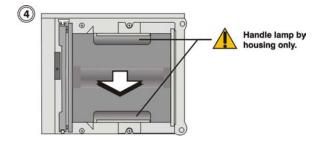


Figure 4.4. Remove Lamp Module

6. INSERT THE NEW LAMP MODULE

Align the new lamp with the top and bottom guides on the left side of the lamp

compartment (see Figure 4.5). Slide the lamp all the way in - a slightly harder push may be required right at the end to make sure it's fully seated into the terminal block.

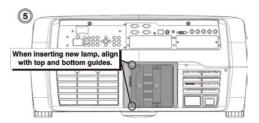


Figure 4.5. Insert New Lamp Module

NOTE: The lamp module must make **full contact** with the terminal block. The projector will not power up again if the lamp is not fully connected to the terminal block.

A WARNING A

Improper installation could cause a serious meltdown inside the projector.

7. LOCK IN THE NEW LAMP MODULE

Pull out and turn the lamp lock lever (turned up in Step 4) ¹/₄ turn clockwise to "lock" the lamp in place.

NOTE: If you can't turn the lamp lock into position, it is likely the lamp is not fully inserted. In this case, partially remove the lamp and try pushing it back in again. Then, try switching the lock lever to the "lock" position.

8. REPLACE THE LAMP DOOR


Replace the lamp door and secure it with the two (2) screws removed in Step 2.



The lamp module is calibrated for maximum performance and brightness in this projector. Do not attempt to realign or adjust the lamp module.

9. RECORD THE SERIAL NUMBER OF THE NEW LAMP

- Plug in the projector and power it up.
- ➤ In the Lamp menu, select "Change Lamp".
- ➤ In the Lamp S/N text box, enter the serial number.
- Press to record the number and to reset the lamp timer. The timer will now begin to log time for the new lamp.

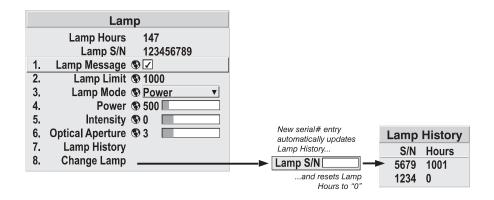




If you neglect to enter a serial number, the lamp timer will not reset to "0" and will therefore be inaccurate. The lamp life limit may then expire prematurely.

Filter Replacement Procedure

The two filters located at the front and left side of the projector should be replaced whenever the lamp is replaced. If you are working in an extremely dusty environment you may want to replace the filters sooner. Use the filters provided in the Christie approved Lamp and Filter Kit for your specific projector model.

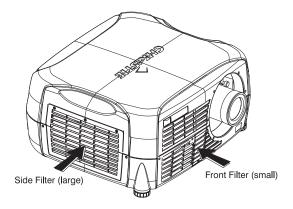

1. TURN OFF THE PROJECTOR, COOL and UNPLUG

Before removing or installing a filter, turn off the projector and allow it to cool for 5 minutes before unplugging.

2. REMOVE FILTER ACCESS PANELS

Loosen the captive screw(s) on the filter access panels using a #1 Phillips screwdriver. (Front access panel located to the left of the lens -1 screw. Left side access panel – 3 screws. See Figure 4.6.)


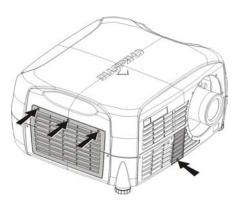


Figure 4.6. Remove Filter Access Panels

3. REPLACE FILTERS

Pull the old filters out of the projector and discard. Do not reuse filters. Insert the new filters with the wired side in. See Figure 4.7.

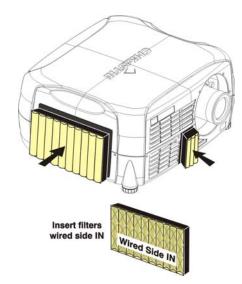

4. REPLACE ACCESS PANELS

Replace the two (2) filter access panels and tighten the screws loosened in step 1.

Figure 4.7. Replace Filters

4.5 Replacing the Projection Lens

A variety of lenses can accommodate different throw distances and specific types of installations. See page 6-1 for details. To change a lens, follow the steps below. No tools are required for "compact" lenses shown.

STEP 1 Turn off the projector, cool and unplug

NOTE: If necessary, a lens can be swapped out while the projector is running, but this can result in dust being drawn into the projector. Avoid if possible.

Before removing or installing any lens, turn off the projector and allow the fans to cool the lamp before unplugging the projector. Ensure that the lens cap is on.

WARNING A Unplug the projector.

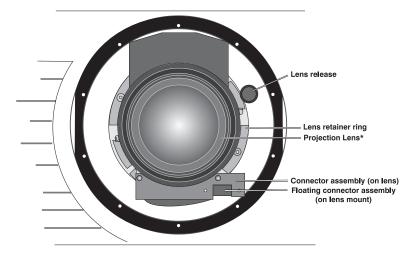


Figure 4.8. Lens Assembly

STEP 2 Install the lens cap and press the lens release button See Figure 4.9.

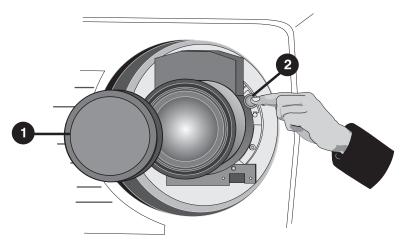


Figure 4.9. Depressing Lens Release

STEP 3 ' Rotate the lens

Rotate the lens counter-clockwise until the tabs are free from the lens retainer ring. See Figure 4.10A.


NOTE: The connector slide assembly allows the connector to move as the lens is rotated.

STEP 4 ' **Pull lens out**

Lens connectors will disconnect when you pull the lens straight out from the projector. See Figure 4.10B.

STEP 5 ' Insert new lens.

NOTE: Remove small rear cap! Keep front cap on.

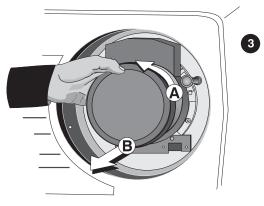

NOTE: Connector assembly will move as you turn the lens.

Figure 4.10. Rotating the Lens

- **Electrical connector:** Line up male connector on the lens with the female connector on the connector slide assembly.
- **Insert lens:** Align the tabs on the lens plate lock with the slots in the lens retainer ring. Push the lens in approximately ½ inch.
- **Rotate the lens:** Rotate the lens clockwise until the tabs are tightly secured and the lens release button CLICK.
- Secure lock-down screws (optional): For added stability, secure the adjustment screws provided on the lens retaining ring (see Figure 4.11). If you have installed a large zoom lens, one or more of the screws may be inaccessible—simply tighten those that are accessible (Figure 4.12).

NOTE: Recommended for heaviest lenses such as 0.73:1 and 1.2:1.

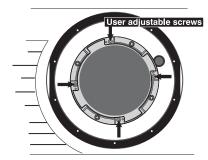


Figure 4.11. Adjustable Screws on Retaining Ring

STEP 5 ' **Power Up**

Remove the lens cap and power up the projector.

STEP 6 ' Reposition the Projector for New

Reposition the projector closer or further from the screen as necessary for the screen and the new lens type – refer to lens descriptions in Section 2, Section 6 and Appendix D, Throw Distance. In a

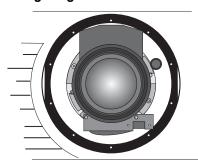


Figure 4.12. View With Zoom Lens Installed

permanent installation, always use the appropriate throw distance formula to calculate the best position for the projector.

Troubleshooting

If the projector does not appear to be operating properly, note the symptoms present and use the following guide to assist you. If you cannot resolve the problems yourself, contact your dealer for assistance.

NOTE: A qualified service technician is required when opening the projector to diagnose any "probable cause".

5.1 **Displays**

Symptom

CAUSE / REMEDY:

The projector is on but there's no display...

- 1. Was a lens cover accidentally left on? Remove lens cover.
- 2. Make sure the shutter is OPEN.
- 3. Is the lamp ignited? Check for interlock problems such as an open lamp door OR check for light spillage out the back.
- 4. Is the correct input selected? Check cable connections.
- 5. Check if menus appear on screen.
- 6. Can you access test patterns? Make sure there is not a full black test pattern selected for display—press (Menu) (A) to access test patterns, then cycle patterns with () keys. Check your source connections again.

Symptom CAUSE / REMEDY:

Severe motion artifacts...

1. Most likely there is a synchronization problem with reversed 3/2 pull-down in 60Hz-to-24Hz film-to-digital conversion in your source. Correct at the source.

Symptom '

Image appears "squeezed" or vertically stretched into center of screen

CAUSE / REMEDY:

1. Check your Resizing selection.

Symptom '

The display is jittery or unstable...

- CAUSE / REMEDY:
- 1. If the display is jittery or blinking erratically, ensure that the source is properly connected and of adequate quality for detection. With a poor quality or improperly connected source, the projector will repeatedly attempt to display an image, however briefly.
- 2. The horizontal or vertical scan frequency of the input signal may be out of range for the projector. Refer to Section 6, Specifications for scan frequency ranges.
- 3. The sync signal may be inadequate. Correct the source problem.

Symptom CAUSE / REMEDY:

The display is faint...

- 1. Brightness and/or contrast and/or gamma may be set incorrectly.
- The source may be double terminated. Ensure the source is terminated only once.
- The source (if non-video) may need a different sync tip clamp location.

Symptom '

The upper portion of the display is waving, tearing or jittering...

CAUSE / REMEDY:

1. This can sometimes occur with video or VCR sources. Check your source.

Symptom '

Portions of the display are cut off or wrap to the opposite edge...

CAUSE / REMEDY:

- 1. Resizing and/or blanking may need adjustment.
- 2. The horizontal or vertical scan frequency of the input signal may be out of range for the projector. Refer to *Section 6, Specifications* for scan frequency ranges.

Symptom '

The display appears compressed ...

CAUSE / REMEDY:

- 1. The frequency of the pixel-sampling clock is incorrect for the current source.
- 2. Resizing, vertical stretch and positioning options may be improperly adjusted for the incoming source signal.

Symptom

Data is cropped from edges

CAUSE / REMEDY:

- 1. Check settings for Blanking.
- 2. If incoming data is still missing from the image, reduce the image size to within the display area available in the projector.

Symptom

Display quality appears to drift from good to bad, bad to good...

CAUSE / REMEDY:

- 1. The source input signal may be of low quality.
- 2. The H or V frequency of the input may have changed at the source end.

Symptom

The display has suddenly frozen...

CAUSE / REMEDY:

1. It's possible that excessive voltage noise on the AC or ground input has interrupted the projector's ability to lock on to a signal. Power down the projector and disconnect from AC. Then plug in again and power up as usual.

Symptom

Colors in the display are inaccurate...

CAUSE / REMEDY:

- 1. Try Auto Setup.
- 2. The color, tint, color space, color temperature and/or other settings may require adjustment.
- 3. Ensure signal connections are correct.
- 4. Make sure you are using the proper channel for this source.

Symptom

Values in Color Saturation slide bars vary over time...

CAUSE / REMEDY:

1. Once defined, *Color Saturation* slide bar values fluctuate over time and will likely be different upon subsequent visits to this menu. This is normal and should be ignored, as these changes do not redefine the x/y coordinates or color gamut.

Symptom

The display is not rectangular...

CAUSE / REMEDY:

- 1. Check leveling of the projector. Make sure that the lens surface and screen are as parallel to each other as possible.
- 2. Is the vertical offset correct? Adjust as necessary using the vertical offset knob.

Symptom '

The display is "noisy"...

CAUSE / REMEDY:

- 1. Display adjustment at your input source may be required. Adjust pixel tracking, phase and filter. Noise is particularly common on YPbPr signals from a DVD player. (If using a PC source, adjust using a high-frequency test pattern with one pixel on/off throughout.)
- 2. The video input may not be terminated. Make sure the video input is terminated (75 Ω). If it is the last connection in a loop-through chain, the video input should be terminated at the *last* source input only.
- 3. The input signal and/or signal cables carrying the input signal may be of poor quality.
- 4. If the distance between the input source device and the projector is greater than 25 feet, signal amplification/conditioning may be required.
- 5. If the source is a VCR or off-air broadcast, detail may be set too high.

5.2 Lamp

Lamp Does Not Ignite '

- 1. If the lamp won't ignite, there may be an interlock failure such as an open lamp door, or failed lamp fan. An error code will display on the status LED display located on the built in keypad.
- 2. If a temperature is too high (e.g. "DMD over critical temp limit"), the lamp will not ignite until the temperature is low enough. Cool the projector and try again.
- 3. For suspected communication failures, power-down the projector and try again.
- If the lamp does not ignite after a second and third try, replace the lamp.

Lamp Suddenly Turns Off

- Try increasing the lamp power.
- The DMDs may be overheated.
- Replace the lamp.

Flicker, Shadows **Or Dimness**

- 1. Increase lamp power, if possible.
- Replace the lamp.

LiteLOC TM Does Not ' Seem To Work

- 1. Make sure "Intensity" is selected in the *Lamp* menu. Other lamp modes disable LiteLOCTM.
- 2. If the lamp power has increased to its maximum in order to maintain a LiteLOCTM setting, LiteLOCTM is automatically terminated. If the values shown in the *Lamp* menu indicate that the lamp power has reached this "over-drive" state, either reduce your LiteLOCTM setting or install a new lamp.

Ethernet 5.3

- Make sure the Ethernet settings are valid for your site—all network devices should have the *same* subnet mask and *unique* IP addresses.
- 2. Make sure to save any address change, and re-boot to implement. If you still have trouble establishing communications with a projector added to an existing Ethernet network, the projector's IP address is likely in conflict with another address already in use. Contact your network administrator.

Specifications

6.1 Specifications

NOTES: 1) Due to continuing research, specifications are subject to change without notice. 2) Specifications apply to all models unless otherwise noted.

Display '

Resolution

SXGA+ (1400 x 1050) for *DS*+5*K*-5*Kc*-8*K*/*MirageS*+2*K*-4*K*-8*K*/*Matrix*

HD2 (1280 x 720, widescreen) for *DW3K-3Kc/DW6K-6Kc*

Achievable Brightness (* all values +/-10%)

500W

 $\begin{array}{ll} \textit{Mirage S+2K} & 2000 \text{ ANSI lumens} \\ \textit{DLV1400-DX} & 2000 \text{ ANSI lumens} \\ \textit{1000W} & \end{array}$

 $\begin{array}{ll} \textit{Christie DS+5K/5Kc, Mirage S+4K} & 5000 \text{ ANSI lumens} \\ \textit{Matrix 4000} & 4000 \text{ ANSI lumens} \\ \textit{DW3K/3Kc} & 3000 \text{ ANSI lumens} \end{array}$

1200W

Christie DS+8K, Mirage S+8K 8000 ANSI lumens DW6K/6Kc 6000 ANSI lumens

Contrast Ratio (ANSI, full field)

450-600:1 ANSI, 1500-2000:1 full field *all models except DLV1400-DX*: up to 600:1 ANSI

Color Primaries (nominal)

	X	Y
R	0.660	0.330
G	0.310	0.640
В	0.145	0.065

Colors and Gray Scale

Resolution 10 bits
Displayable colors 1.1billion

Color Temperature

Default 5800K +950K/-650K Range of Adjustment (see Note 1) 3200K - 9300K

NOTE 1: Via electronic controls, with Comprehensive Color Adjustment TM turned off.

Lenses ' (optional)

Lens Type	Part No.	Vertical Offset (% of Half Height)		Maximum amount of projected image above or		Horizontal Offset (% of Half Width)		Maximum amount of projected image to one side	
		%	Pixels	%	Pixels	%	Pixels	%	Pixels
0.73:1 fixed	38-809088-01	37%	+/-196	69%	+/-721	22%	+/-153	61%	+/-853
1.2:1 fixed (RP)	38-809093-01	Info not yet available							
1.2:1 fixed (FP)	38-809095-01	100%	+/-525	100%	+/-1050	50%	+/-350	75%	+/-1050
1.45-1.8:1 zoom	38-809089-01	100%	+/-525	100%	+/-1050	50%	+/-350	75%	+/-1050
1.8-2.5:1 zoom	38-809090-01	100%	+/-525	100%	+/-1050	50%	+/-350	75%	+/-1050
2.5-4.5:1 zoom	38-809091-01	100%	+/-525	100%	+/-1050	50%	+/-350	75%	+/-1050
4.5-7.3:1 zoom	38-809092-01	100%	+/-525	100%	+/-1050	50%	+/-350	75%	+/-1050

NOTES: 1) 0% offset is equal to half the image above and below lens center (525 pixels) OR half the image to the left or right of lens center (700 pixels). 2) Offsets are subject to a \pm 7% centering tolerance.

Inputs ' Standard Analog RGB or YPbPr (Interlaced or Progressive Scan Format)

31 - 120 kHzHorizontal Frequency Range Vertical Frequency Range (See Note 2) 23.97 - 150 Hz

Scan format Interlaced or progressive

Pixel Clock Rate (max.) 220 MHz max

Signal Format Analog RGB, YPbPr, Composite (on

"G, PB" input and S-video (luma on

"R/Pr/Y" input and chroma on

"B/Pb/C" input)

 $1.0V_{p-p}\pm 2 dB$ Input Levels R, G, B, - with sync:

> R, G, B, - without sync: $0.7V_{p-p}\pm 2 dB$ $0.7_{p-p} \pm 2 \text{ dB}$ Pb, Pr

75 ohms Nominal Impedance

NOTE 2: Value specifies frame rate of non-interlaced sources and field rate for interlaced sources. Frame/field rates higher than the maximum refresh rate of the panels will be displayed at a lower rate (i.e., frames will be dropped).

Sync (Interlaced or Progressive Scan Format)

Horizontal Frequency Range 31 - 120 kHzVertical Frequency Range (See Note 3) 23.97 - 150 Hz

Sync Type Separate H and V, direct or swapped

> Composite (bi-level, tri-level, XOR, OR) Sync-On-Green/luma (bi-level, tri-level) Serration and /or Equalization pulses

MacroVisionTM for standard &

progressive video

Polarity (See Note 3) Positive or Negative

Input Levels (See Note 3) $0.5V_{pp} - 4.0V_{pp}$

DC Offset (See Note 3) $\pm 3V$ Nominal Impedance (See Note 3) 75 ohms

Horizontal Sync Duty Cycle 3% min, 20% max

NOTE 3: Does not apply to sync-on-green/luma.

Composite Video and S-Video

Signal Formats Composite-video (CVBS), S-video Y/C) Video Standards NTSC, NTSC 4.43, PAL, PAL M,

PAL N, PAL60, SECAM

Composite-video: Input Levels 1.0 Vp-p ± 3 db (including sync tip)

> S-video luma (Y): 1.0 Vp-p \pm 3 dB (including sync tip)

S-video chroma I: 630 mV nominal (burst)

DC Offset ±2 V Nominal Impedance 75 ohms

Return Loss (VSWR) 20 dB min (1.2:1 max.) @ 6 MHz

DVI-I Input

Interface StandardDDWG DVI 1.0Color SpaceRGB or YPbPrHorizontal Frequency Range31-120 kHzVertical Frequency Range23.97-150 HzPixel Clock Rate25-165 MHz

Scan Format interlaced or progressive
Active Pixels per scan line 640 min., 2048 max.
Active Lines per field / non-interlaced frame 200 min., 1536 max

Connector type DVI-I

NOTE: HDCP compatible

RS-232 Serial Input

Connector Type 1 female 9-pin Dsub (RS232 IN)

1 male 9-pin Dsub (RS232 OUT)

RS-422 Serial Input

Connector Type 1 female 9-pin Dsub

GPIO

Connector Type 1 male 9-pin Dsub

Number of I/O lines 7 (each individually assignable as input or output)

Power Output +12VDC @ 200mA max.

Output sink current (logic low) 100mA @ 1V

Ethernet

Connector Type 1 female RJ45 Maximum throughput 115.2kbps

Remote Control

Number of sensors 2

Type IR with wired ability

Range (using std. keypad) 100 feet

Battery type (2 required) AA, 1.5 V Alkaline

Laser Diode (laser pointer) Wavelength 670nm

Max. Output 1mW

Wired Control

Connector type 3.5 mm RCA jackInput levels High: 2.2 V - 5.6 V (or open)

Low: -0.6 V - 0.9 V @ 1 mA

Power Requirements '

🛕 General

▲ Voltage range

 500W models
 100 – 240VAC

 1000W models
 100 – 240VAC

 1200W models
 200 – 240VAC

Line frequency 50 Hz – 60 Hz nominal

Max. Inrush current 60A max.

Current rating

 500W models
 10A @ 100V, 5A @ 200V

 1000W models
 12A @ 100V, 8A @ 200V

 1200W models
 10A @ 200V

Power consumption

 500W models
 1000 W max.

 1000W models
 1600 W max.

 1200W models
 2000 W max.

Current rating or AC input connector 15A

Type of Connector (back of projector) IEC 320 C14

A Line Cords

 500W models
 heavy duty 10', 125VAC 15A

 1000W models
 heavy duty 10', 125VAC 15A

 1200W models
 heavy duty 12', 250VAC 15A

A Plugs

500W models NEMA 5-15P 1000W models NEMA 5-15P 1200W models NEMA 6-15P

Lamps '

Type CERMAX® Xenon

Power

Mirage S+2K, DLV1400-DX, 500W

Mirage S+4K

Christie DS+5K/5Kc

 Matrix 4000
 1000W

 Mirage S+8K, Christie DS+8K
 1200W

Adjustment Ranges

 500W models
 350 - 500W

 1000W models
 700 - 1000W

 1200W models
 800 - 1200W

Lamp Life (typical)

Mirage S+2K, 1000 hrs at Max Brightness, 2000 hrs

DLV1400-DX when continuous running (24

hours/day, 7 days a week) Lamp at 350W continuous power mode

Mirage S+4K,

Christie DS+5K/5Kc.

Matrix 4000 1000 hrs

Mirage S+8K, Christie DS+8K 1000 hrs

Call for warranty information

Operating position Full rotation allowed about the lamp

axis, ± 15 degrees minimum tilt of

lamp axis from horizontal


10 minutes max.


Warm up to full brightness

Size and Weight ' Dimensions (without lens)

(Including feet at min. height position)

26.0" x 22.3" x 12.3" 660mm x 566mm x 313mm

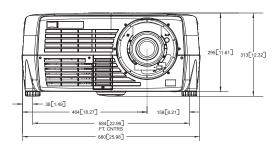

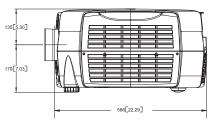

DIMENSIONS: Millimeters [Inches]

Weight (without lens)
500W models
1000W models

1200W models

72 lb. Max 72 lb. Max 75 lb. Max

Safety UL 60950 and CAN/CSA C22.2. No. 60950 (2003, 1st edition bi-national)

IEC 60950 (1999, 3rd edition)

CCC (China Compulsory Certification)

EMC Emissions ' FCC CFR47, Part 15, Subpart B, Class A — Unintentional Radiation

CISPR 22: 1997 / EN55022: 1998 — Radio disturbance characteristics for ITE

EMC Immunity 'CISPR 24 / EN55024:1998 (all parts of immunity characteristics for ITE)

Operating Environment Temperature 5°C to 35°C (41°F to 95°F)

Humidity 20% to 80%, non-condensing

Altitude 0 - 3000 meters

Non-Operating ' Temperature -40°C to 70°C (-40°F to 149°F)

Environment Humidity (non-condensing) 0% to 95%

Standard Components 'IR keypad (includes two, 1.5V AA batteries and a mini-stereo cable for conversion to

wired)
Line Cord
User's Manual

3D Stereo Sync Cable (Mirage products only)

Optional Accessories Wired remote keypad • Ethernet, RS-232 and RS-422 communication cables

Two-way remote controller
 KoRE Librarian for downloading new software

Remote IR sensor
 Ceiling Mount

Ceiling Mount Extension
 Stacking Frame for HD8K

• Service Manual

Lenses

(SXGA+)

0.73:1 fixed (38-809088-01)

1.2:1 fixed 1m-3m (38-8098093-01)

1.2:1 fixed 3m-15m (38-809095-01)

1.45-1.8:1 zoom (38-809089-01)

1.8-2.5:1 zoom (38-809090-01)

2.5-4.5:1 zoom (38-809091-01)

4.5-7.3:1 zoom (38-809092-01)

Optional Input Modules

RGB500 Input Module RGB400 Active Loop-Through Input Module RGB400 Buffered Amplifier Input Module PC250 Analog Input Module Serial Digital Input Module DVI Input Module Dual SD/HD-SDI Module

Glossary

This appendix defines the specific terms used in this manual as they apply to this projector. Also included are other general terms commonly used in the projection industry.

Active Line Time ' The time, inside one horizontal scan line, during which video is generated.

Ambient Light Rejection The ability of a screen to reflect ambient light in a direction away from the "line of best viewing". Curved screens usually have good ambient light rejection. Flat screens usually have less ambient light rejection.

Analog Video ' The video output of most computers and videotape machines. Analog video can generate a large number of colors.

Anamorphic Having or requiring a linear distortion, generally in the horizontal direction.

Anamorphic lenses can restore a 'scope' (CinemaScope) or 'flat' format film frame to the correct wide-screen appearance by increasing its horizontal proportion.

ANSI ' The American National Standards Institute is the organization that denotes the measurement standard for lamp brightness.

ArtNet Interface ' An Ethernet communication protocol that was developed by Artistic Licence. It is used for controlling lighting/staging equipment from a lighting console or PC application.

Aspect Ratio The ratio of the width of an image to its height, such as the 4:3 aspect ratio common in video output. Can also be expressed as a decimal number, such as 1.77, 1.85 or 2.39. The larger the ratio or decimal, the wider and "less square" the image.

Auto Source ' The ability of the projector to automatically recognize and synchronize to the horizontal and vertical scan frequencies of an input signal for proper display.

Bandwidth The frequency range of the projector's video amplifier.

Baud Rate The speed (bits-per-second) at which serial communications travel from their origin.

Blanking Time The time inside one scan line during which video is not generated. The blanking time of the input signal must be equal to or greater than the retrace time of the projector.

Brightness In projection, brightness usually describes the amount of light emitted from a surface such as a screen. It is measured in foot-lamberts or candelas per square meter.

Candela or Candle ' Unit of measure for measuring intensity of light.

Channel ' A collection of measurements stored by the projector for a given input source, including frequencies, pulse width, polarity, syncs, channel number and location, user-

adjustable display settings, etc. Use channels to switch between a variety of setups quickly, automatically recalling previously defined display parameters.

Channel List ' A list/menu of previously defined channels available in projector memory.

Channel Number ' A number that uniquely identifies a specific channel retained in projector memory. The projector can retain up to 99 channels.

Checkbox ' A menu item that indicates whether an option is currently in effect (checked) or not (unchecked).

Chrominance ' The signal representing the color information (hue and saturation) when the image is represented as separate chrominance and *luminance*. Same as "chroma".

Color Gamut ' The range of colors allowed in a specific system, as defined within a triangular area located on the CIE color locus diagram whose corners are the three primaries defined in the system. Also known as color space.

Color Shift ' A change in the tint of a white field across an image.

Color Temperature ' The coloration (reddish, white, bluish, greenish, etc.) of white in an image, measured using the Kelvin (degrees K) temperature scale. Higher temperatures output more light.

Component Video ' See YcbCr or YPbPr.

Composite Video ' The output of video tape players and some computers, characterized by synchronization, luminance and color signals combined on one output cable.

Contrast (ratio) ' The degree of difference between the lightest and darkest areas of the image.

Convergence ' The alignment of the red, green, and blue elements of a projected image so that they appear as a single element.

Curved Screen A projection screen which is slightly concave for improved screen gain. Curved screens usually have screen gains, which are greater than 1 but viewing angles much less than 180°. Curved screens are not recommended for use with this projector.

> DDC ' The Display Data Channel VESA standard enables communication between PCs and monitors, and is based on E-EDID protocol.

DDI ' A "direct digital interface" signal can be supplied to the projector via an optional digital input module installed in INPUT 5. For example, you can input an SMPTE-259M signal using a Serial Digital Input Module or input an SMPTE-272M signal from a Digital HDTV Serial Input Module.

DMD TM ' Digital Micromirror Devices[™] used in this projector for processing red, green, and blue color data.

Decoder ' Located at INPUT 3 and INPUT 4, this device converts NTSC 3.58, NTSC 4.4, PAL, PAL-N, PAL-M, or SECAM to RGB video.

Detail ' The sharpness of a display from a video source. Diffused Screen '

A type of rear-projection screen which spreads the light striking it. Screen gain is less than 1 but audience viewing angles are increased.

Display Setting '

An adjustment that affects the display of an image. Such display settings include contrast, brightness, tint, blanking, size, offsets, and others.

Dot Clock '

The maximum frequency of the pixel clock. Also known as pixel clock rate.

E-EDID '

The Enhanced Extended Display Identification Data standard, established by VESA, enables properties (such as resolution) of a display device to be detected by the display card in a controlling device such as a PC. The PC, in turn, can then output in a matching format to fill the display. Some sources used with the projector are VESA E-EDID reported.

Flicker '

A very rapid variation in image brightness caused by a frame rate that is too slow. (See *Interlace*) See also *Lamp Flicker*.

Foot-candle '

The intensity of visible light per square foot.

Foot-lambert '

The luminance (brightness), which results from one foot-candle of illumination falling on a perfectly diffuse surface.

Frame Rate '

The frequency at which complete images are generated. For non-interlaced signals, the frame rate is identical to the vertical frequency. For interlaced signals, the frame rate (also known as field rate) is one half of vertical frequency.

Gain or Screen Gain

The ability of a screen to direct incident light to an audience. A flat matte white wall has a gain of approximately 1. Screens with gain less than 1 attenuate incident light; screens with gain more than 1 direct more incident light to the audience but have a narrow viewing angle. For example: An image reflecting off a 10 gain screen appears 10 times brighter than it would if reflected off a matte white wall. Curved screens usually have larger gain than flat screens.

GPIO '

General Purpose Input Output, used for remote control of a limited number of programmable functions by direct signal or dry-contact connection.

HDTV '

High-definition Television (1035, 1080 and 1125 lines interlace, and 720 and 1080 line progressive formats with a 16:9 (i.e. 1.77) aspect ratio.

Help Text '

A display of help information regarding the current task or presentation.

Horizontal Frequency '

The frequency at which scan lines are generated, which varies amongst sources. Also called horizontal scan rate or line rate.

Horizontal Offset '

The difference between the center of the projected image and the center of the projector lens. For clarity, offset is often expressed as the maximum amount of the image that can be projected to one side of the lens center without degrading the image quality. Horizontal offset ranges can be affected by the type of lens in use, and whether or not the image is offset vertically at the same time.

Hot Spot '

A circular area of a screen where the image appears brighter than elsewhere on the screen. A hot spot appears along the line of sight and "moves" with the line of sight. High gain screens and rear screens designed for slide or movie projection usually have a hot spot.

Input ' A physical connection route for a source signal, described by a 2-digit number representing 1) its switcher/projector location and 2) its slot in the switcher/projector.

Input Signal ' Signal sent from a source device to the projector.

Interface ' A device, such as the Serial Digital Input Module, that accepts an input signal for display by the projector.

Interlace A method used by video tape players and some computers to double the vertical resolution without increasing the horizontal line rate. If the resulting frame/field rate is too low, the image may flicker depending on the image content.

Kevpad A small push-button device for controlling most projector settings and operation. For more information, refer to 3.3, Using the Keypad.

Keystone ' A distortion of the image which occurs when the top and bottom borders of the image are unequal in length. Side borders both slant in or out, producing a "keyhole" shaped image. It is caused when the screen and lens surface are not parallel, or (in "X" models) by poor Keystone adjustment.

Lamp Flicker ' As the lamp ages, the shape of two anodes may changes from two points to a flattened state. When this occurs, the arc jumps across the gap from varying points. This is seen as image flicker. Turning the Lamp Conditioning feature ON will pulse the lamp and gradually "condition" the two anodes back to two points. Lamp Conditioning may take seconds, minutes or hours to reach full effectiveness. NOTE: Lamp flicker can occur at any time in the lamps life. The length of time, over which flicker may occur varies considerably and unpredictably. This behavior is inherent in UHP lamps.

Linearity ' The reproduction of the horizontal and vertical size of characters and/or shapes over the entire screen.

Line of Best Viewing When light from a projector is incident on a screen, the light reflects from the screen such that the angle of reflection equals the angle of incidence. The Line of Best Viewing is along the line of reflection.

> LiteLOC TM ' A Christie software feature where samples of output light from a projector trigger automatic adjustments in the lamp ballast power in order to maintain a constant light output over time. Also known as brightness tracking.

Loopthrough ' The method of feeding a series of high impedance inputs from a single video source (Loopthru) with a coaxial transmission line in such a manner that the line is terminated with its characteristic impedance at the last input on the line.

Lumen The unit of measure for the amount of visible light emitted by a light source.

Luminance The signal representing the measurable intensity (comparable to brightness) of an electronic image when the image is represented as separate chrominance and luminance. Luminance also expresses the light intensity of a diffuse source as a function of its area; measured in lumens or candles per square foot (1 lumen per square foot = 1 *footlambert*). SMPTE RP 98 calls for a luminance of 12 to 22 footlamberts for theatre screens. See: Footlambert.

Lux ' The amount of visible light per square meter incident on a surface. 1 lux = 1 lumen/square meter = 0.093 foot-candles

Menu ' A list of selectable options displayed on the screen.

NTSC Video ' A video output format of some video tape and disk players. There are two types of NTSC (National Television Standards Committee) video: NTSC 3.58 and NTSC 4.43. NTSC 3.58 is used primarily in North America and Japan. NTSC 4.43 is less

commonly used.

Optical Screen ' A type of rear-projection screen which re-directs light through the screen to increase

image brightness in front of the screen. Screen gain is usually greater than 1 but

audience viewing angles are reduced.

PAI Video ' PAL (Phase Alternating Line) video is a 50 Hz standard with 768 x 576 resolution. It is found on some video tape and disk players (used primarily in Europe, China and

some South American and African countries).

Pixel ' The smallest discernible element of data from a computer-generated image.

Pixel Phase ' The phase of the pixel-sampling clock relative to incoming data.

Pixel Tracking ' The frequency of the pixel-sampling clock, indicated by the number of pixels per line.

Presentation Level ' The projector is at presentation level when an image from a source is displayed

without the presence of a slide bar, menu, pull-down list, or error message.

The distance between the projector's front feet centers and the screen. Also called Projector-to-Screen Distance "Throw Distance"

> Protocol ' The type of code format called "A" or "B" utilized by the remote keypad(s). The default protocol set at manufacture is Protocol "A". By using two different keypad

> > keypads.

Pull-down List ' A selectable menu item that unfolds into a list of options pertaining to it.

QuVis ' A manufacturer of a digital video recorder/player/server, QuBit, frequently used for

> providing digital cinema data. QuVis image compression uses a proprietary technology called Quality Priority Encoding, based on wavelets, in which the user selects a quality level based on signal-to-noise ratio. The data rate varies to efficiently

protocols, adjacent projectors can be controlled independently with their remote IR

maintain that quality level. Frames are coded individually.

Rear Screen ' A translucent panel for screen projection. Incident light travels through the incident

surface of a rear screen and forms an image on the other surface.

The ability to manipulate through software commands the physical size, placement Resizing '

and/or aspect ratio of an image.

Resolution (lens) ' The maximum number of alternate white and black horizontal lines that can be distinguished on a screen when a photographic target is placed between the lens and a

light source and illuminated by that source.

Resolution (projector) ' The maximum number of pixels that the projector can display horizontally and

vertically across an image, such as 1024 x 768 (called XGA).

Retrace Time (Horizontal)

The minimum time required for a CRT projector to move the position of the scanning spot from the right edge to the left edge.

Rise Time '

The time required by the video amplifier of the projector to increase its output from 10% to 90% of the maximum value.

RGB Video

The video output (analog or digital) of most computers. Analog RGB video can have 3, 4, or 5 wires — one each for red, green, and blue, and either none, one or two for sync. For three-wire RGB, the green wire usually provides sync. (See TTL Video).

RS-232 '

A common asynchronous data transmission standard recommended by the Electronics Industries Association (EIA). Also called serial communication.

RS-422 '

A less common asynchronous data transmission standard in which balanced differential voltage is specified. RS-422 is especially suited to long distances.

S-Video '

The output from certain video tape players and video equipment. S-Video separates sync and luminance from color information, typically producing a higher quality display than composite video.

Scan Frequency '

The horizontal or vertical frequency at which images are generated. Also known as scan rate or refresh rate.

Scan Line

One horizontal line on the display.

Scan Rate '

The horizontal or vertical frequency at which images are generated.

SECAM '

A video output format of some video tape and disk players (used primarily in France). SECAM (Sequential Couleur á Mémoire) signals are similar in resolution and frequency to PAL signals. The primary difference between the two standards is in the way color information is encoded.

Slide bar '

A slide bar is a graphical display of an adjustable setting. The numerical setting often represents a percentage but can be a specific unit such as degrees Kelvin.

Source '

The device, such as a computer or VCR, connected to the projector for display. A source may have numerous corresponding channels defined and recognized by the projector. See *Input*.

Source Setup

See Channel.

Switcher '

A signal selector that can be connected to a projector for the purpose of adding more sources.

Sync '

This term refers to the part of the video signal that is used to stabilize the picture. Sync can occur in three forms:

- 1) "Composite sync": the horizontal and vertical components are together on one cable.
- 2) "Sync-on-green": the sync is part of the green video.
- **3)** "Separate sync" or "H.SYNC and V.SYNC": the horizontal and vertical components of the sync are on two separate cables.

Sync Width

The duration of each sync pulse generated by a computer. The sync width is part of the blanking time.

TTL Video ' A type of RGB video with digital characteristics.

Terminated A wire connecting a single video source to a display device, such as a projector, must be terminated by a resistance (usually 75Σ for video).

Throw Distance The distance between the front feet of the projector and the screen. Also called "Projector-to-Screen Distance". Always use the correct Christie throw distance formula to calculate the proper throw distance (±5%) required for your lens.

Throw Ratio Throw ratio = throw distance / screen width. Typically used to differentiate lenses.

Tint Balance of red-to-green necessary for realistic representation of NTSC signals.

Variable Scan The ability of a projector to synchronize to inputs with frequencies within a specified range.

Vertical Frequency The frequency at which images are generated. Vertical frequencies vary amongst sources. Also called vertical scan rate.

Vertical Offset ' The difference between the center of the projected image and the center of the projector lens. For clarity, offset is often expressed as the maximum amount of the image that can be projected above or below the lens center without degrading the image quality. Vertical offset ranges depend on the type of lens in use, and whether or not the image is offset horizontally at the same time.

Video The signal that is used by display devices (such as projectors) to generate an image. This term also refers to the output of video tape/disk players and computers.

Video Decoder ' An optional device that converts NTSC 3.58, NTSC 4.4, PAL, PAL-N, PAL-M or SECAM to RGB video.

Video Standard A specific type of video signal, such as NTSC, PAL, SECAM. This projector can automatically recognize and interpret the incoming standard and display accordingly.

Viewing Angle Screens do not reflect equally in all directions. Most light is reflected in a conical volume centered around the "line of best viewing". Maximum brightness is perceived if you are within the viewing cone defined by the horizontal and vertical viewing angles.

White Balance ' The color temperature of white used by the projector.

White Field 'The area of an image that is white only. For example, a full white field is an image that is white everywhere. A 10% white field is a white area (usually rectangular) that occupies 10% of the image; the remaining 90% is black.

YcbCr ' A high-end *digital* component video signal.

YPbPr ' A high-end *analog* component video signal. Sometimes called YUV, Component, or Y, R-Y, B-Y, the YPbPr signal by-passes the video decoder in this projector.


YUV ' See *YPbPr*.

Zoom ' The adjustment of image size by means of a zoom lens.

CHKISTIE DS+5K/5Kc-8K/DW3-6K/Kc/Mirage S+2-4-8K/DLV1400-DX/Matrix4000

Keypad Reference

NOTE: The IR remote is a standard component provided with the projector. Use the extension cable also provided to convert the IR remote to a wired remote, if desired. Refer to **Section 3** for a specific description of each key and how to use them correctly.

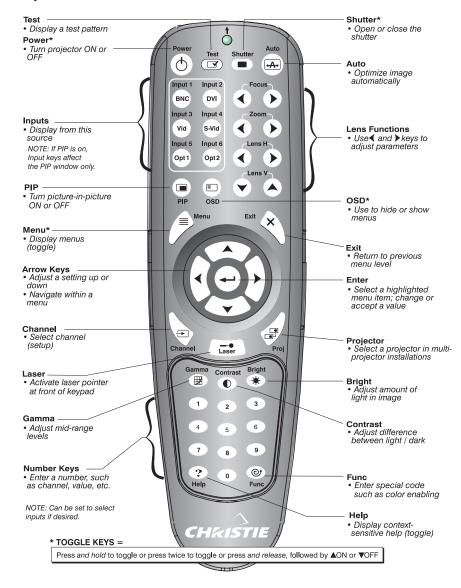


^{*} Toggle keys, which require you to either, press and hold, or press twice or press and use the up/down arrow key.

Serial Communication Cables


A serial link of RS232 or RS422 enables ASCII communication with the projector so that it can be controlled remotely from a PC or other controller. From a PC, connect a standard 9-wire RS232 serial cable to the **RS232 IN** port. Or, for long-distance (>100 ft.) links with an RS422-compatible PC or controller, connect RS422 cable to the **RS422** port.

☐ From projector to computer (RS232)


For computers having a 9-pin "AT" type serial port

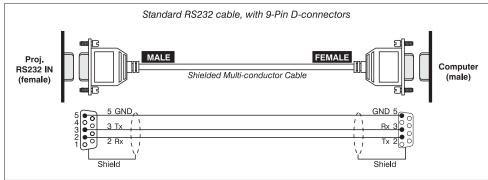

☐ From projector to projector

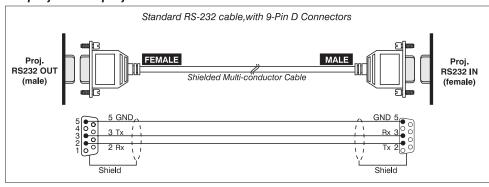

☐ From projector to RS422 compatible computer

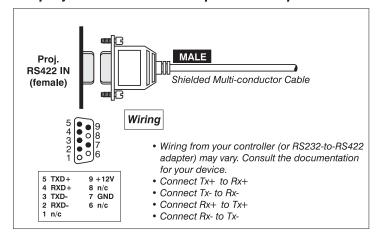

Throw Distance

Calculating Throw Distance

It is important throw distance be precisely calculated for your installation using the appropriate formula from the chart below. To calculate throw distance you must know the screen size and the lens type installed in the projector. In general, the larger you want the image to be the greater the distance you must allow between the lens and the screen.

NOTES: 1) Throw distance is measured from the screen to the center of the projector's front feet. **2)** This measurement is not necessarily parallel to the floor as the projector and screen may be inclined. **3)** Due to lens manufacturing, throw distance calculations have a tolerance of $\pm 5\%$.

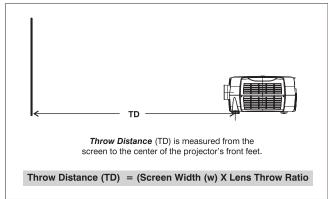


Table A-1 Throw Distance Formulas

Lens Throw Ratio	Throw Distance Formula (cm)	Screen Widths (cm)	
		Min.	Max.
0.73	0.7618*W+6.7624	150	437
1.2:1 (long throw)	1.2521*W+10.817	79	812
1.45-1.8	Min. 1.4789*W-3.6096	160	1102
	Max. 1.8655*W-8.1977	127	889
1.8-2.5	Min. 2.0424*W-74.131	160	1110
	Max. 2.6076*W-16.638	117	800
2.5-4.5	Min. 2.6347*W-11.428	244	1118
	Max. 4.783*W-29.602	137	1110
4.5-7.3	Min. 4.5126*W-6.5502	267	1110
	Max. 7.423*W-25.184	165	1095

NOTES: 1.2:1 (short throw) lens information not available at time of printing. Calculations are not shown for 1.2:1 (long throw) lenses.

Where:

 $TD = projector\ distance\ from\ the\ screen\ to\ the\ center\ of\ the\ projector's\ front\ feet.$ $W = screen\ (image)\ width\ (cm)$

0.73:1 Fi	xed Lens					
Image D	iagonal	Image V	Vidth (W)	Throw Distance (TD)		
Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	
73	186	59	149	47	120	
96	244	77	195	61	155	
103	263	83	210	66	167	
111	281	89	225	70	178	
118	300	94	240	75	190	
125	319	100	255	79	201	
133	338	106	270	84	212	
140	356	112	285	88	224	
148	375	118	300	93	235	
155	394	124	315	97	247	
162	413	130	330	102	258	
170	431	136	345	106	270	
177	450	142	360	111	281	
185	469	148	375	115	292	
192	488	154	390	120	304	
199	506	159	405	124	315	
207	525	165	420	129	327	
214	544	171	435	133	338	

Throw Distance Formula

 $TD = (0.7618 \times W) + 6.7624$

Where

W = image width (cm)

1.45-1.8:1 Zoom Lens

Image Diagonal		Image Width (W)		Throw Distance (TD)		
Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	
79	200	63	160	92	233	
86	219	69	175	100	255	
94	238	75	190	109	277	
101	256	81	205	118	300	
108	275	87	220	127	322	
116	294	93	235	135	344	
123	313	98	250	144	366	
130	331	104	265	153	388	
138	350	110	280	162	410	
145	369	116	295	170	433	
153	388	122	310	179	455	
160	406	128	325	188	477	
167	425	134	340	197	499	
175	444	140	355	205	521	
182	463	146	370	214	544	
189	481	152	385	223	566	
197	500	157	400	231	588	
204 212	519 520	163	415	240 249	610 632	
212	538 556	169 175	430 445	249 258	655	
219	575	175	445 460	266	677	
226	575 594	181	460 475	275	699	
234	613	193	475 490	275 284	721	
241	631	193	505	293	743	
256	650	205	520	301	765	
263	669	211	535	310	788	
271	688	217	550	319	810	
278	706	222	565	328	832	
285	725	228	580	336	854	
293	744	234	595	345	876	
300	763	240	610	354	899	
308	781	246	625	362	921	
315	800	252	640	371	943	
322	819	258	655	380	965	
330	838	264	670	389	987	
337	856	270	685	397	1009	
344	875	276	700	406	1032	
352	894	281	715	415	1054	
359	913	287	730	424	1076	
367	931	293	745	432	1098	
374	950	299	760	441	1120	
381	969	305	775	450	1143	
389	988	311	790	459	1165	
396	1006	317	805	467	1187	
404	1025	323	820	476	1209	
411	1044	329	835	485	1231	
418 426	1063	335	850	493 502	1253	
426	1081	341 346	865 880	502 511	1276 1298	
433	1100 1111	346 350	880 889	516	1311	
440	11119	352	895	520	1320	
448	1138	358	910	528	1342	
455	1156	364	925	537	1364	
463	1175	370	940	546	1387	
470	1194	376	955	555	1409	
477	1213	382	970	563	1431	
485	1231	388	985	572	1453	
492	1250	394	1000	581	1475	
500	1269	400	1015	590	1497	
507	1288	406	1030	598	1520	
514	1306	411	1045	607	1542	
522	1325	417	1060	616	1564	
529	1344	423	1075	624	1586	
536	1363	429	1090	633	1608	
541	1375	433	1100	639	1623	

MINIMUM ZOOM

Throw Distance Formula

TD = (1.4789 x W) -03.6096

W = image width (cm)

1.45-1.8:1 Zoom Lens

Image Diagonal		Image W	/idth (W)	Throw Distance (TD)		
Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	
62	159	50	127	90	229	
64	163	51	130	92	234	
71	181	57	145	103	262	
79	200	63	160	114	290	
86	219	69	175	125	318	
94	238	75	190	136	346	
101	256	81	205	147	374	
108	275	87	220	158	402	
116	294	93	235	169	430	
123	313	98	250	180	458	
130	331	104	265	191	486	
138	350	110	280	202	514	
145	369	116	295	213	542	
153	388	122	310	224	570	
160	406	128	325	235	598	
167	425	134	340	246	626	
175	444	140	355	258	654	
182	463	146	370	269	682	
197	500	157	400	291	738	
204	519	163	415	302	766	
212	538	169	430	313	794	
219	556	175	445	324	822	
226	575	181	460	335	850	
234	594	187	475	346	878	
241	613	193	490	357	906	
249	631	199	505	368	934	
256	650	205	520	379	962	
263	669	211	535	390	990	
271	688	217	550	401	1018	
278	706	222	565	412	1046	
285	725	228	580	423	1074	
293	744	234	595	434	1102	
300	763	240	610	445	1130	
308	781	246	625	456	1158	
315	800	252	640	467	1186	
322	819	258	655	478	1214	
330	838	264	670	489	1242	
337	856	270	685	500	1270	
344	875	276	700	511	1298	
352	894	281	715	522	1326	
359	913	287	730	533	1354	
367	931	293	745	544	1382	
374	950	299	760	555	1410	
381	969	305	775	566	1438	
389	988	311	790	577	1466	
396	1006	317	805	588	1494	
404	1025	323	820	599	1522	
411	1044	329	835	610	1549	
418	1063	335	850	621	1577	
426	1081	341	865	632	1605	
433	1100	346	880	643	1633	
437	1111	350	889	650	1650	

MAXIMUM ZOOM

Throw Distance Formula

TD = (1.8655 x W) - 8.1977 Where

W = image width (cm)

NOTE: The TD formula is provided in centimeters, but the chart shows values in cm and inches for easy reference. Make sure you are using the correct unit of measure when calculating throw distance.

User's Manual

1.8-2.5:1 Zoom Lens

	Image Diagonal		/idth (W)	Throw Distance (TD)		
Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	
79	200	63	160	99	253	
86	219	69	175	112	283	
94	238	75	190	124	314	
101	256	81	205	136	345	
108	275	87	220	148	375	
116	294	93	235	160	406	
123	313	98	250	172	436	
130	331	104	265	184	467	
138	350	110	280	196	498	
145	369	116	295	208	528	
153	388	122	310	220	559	
160	406	128	325	232	590	
167	425	134	340	244	620	
175	444	140	355	256	651	
182	463	146	370	268	682	
189	481	152	385	280	712	
197	500	157	400	292	743	
204	519	163	415	305	773	
212	538	169	430	317	804	
212	556	175	445	317	835	
11	575	181	460	341	865	
226			475			
234	594	187		353	896	
241	613	193	490	365	927	
249	631	199	505	377	957	
256	650	205	520	389	988	
263	669	211	535	401	1019	
271	688	217	550	413	1049	
278	706	222	565	425	1080	
285	725	228	580	437	1110	
293	744	234	595	449	1141	
300	763	240	610	461	1172	
308	781	246	625	473	1202	
315	800	252	640	485	1233	
322	819	258	655	497	1264	
330	838	264	670	510	1294	
337	856	270	685	522	1325	
344	875	276	700	534	1356	
352	894	281	715	546	1386	
359	913	287	730	558	1417	
367	931	293	745	570	1447	
374	950	299	760	582	1478	
381	969	305	775	594	1509	
389	988	311	790	606	1539	
396	1006	317	805	618	1570	
404	1025	323	820	630	1601	
411	1044	329	835	642	1631	
418	1063	335	850	654	1662	
426	1081	341	865	666	1693	
433	1100	346	880	678	1723	
437	1111	350	889	686	1742	
440	1119	352	895	690	1754	
448	1138	358	910	703	1784	
455	1156	364	925	715	1815	
463	1175	370	940	727	1846	
470	1194	376	955	739	1876	
477	1213	382	970	751	1907	
485	1231	388	985	763	1938	
492	1250	394	1000	775	1968	
500	1269	400	1015	787	1999	
507	1288	406	1030	799	2030	
514	1306	411	1045	811	2060	
522	1325	417	1060	823	2091	
529	1344	423	1075	835	2121	
536	1363	429	1090	847	2152	
-						

MINIMUM ZOOM

Throw Distance Formula

TD = (2.0424 x W) - 74.131

W = image width (cm)

1.8-2.5:1 Zoom Lens

Image Diagonal		Image V	/idth (W)	Throw Distance (TD)		
Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	
57	145	46	116	113	286	
62	159	50	127	124	315	
64	163	51	130	127	322	
71	181	57	145	142	361	
79	200	63	160	158	401	
86	219	69	175	173	440	
94	238	75	190	189	479	
101	256	81	205	204	518	
108	275	87	220	219	557	
116	294	93	235	235	596	
123	313	98	250	250	635	
130	331	104	265	266	674	
138	350	110	280	281	713	
145	369	116	295	296	753	
153	388	122	310	312	792	
160	406	128	325	327	831	
167	425	134	340	342	870	
175	444	140	355	358	909	
182	463	146	370	373	948	
189	481	152	385	389	987	
197	500	157	400	404	1026	
204	519	163	415	419	1066	
212	538	169	430	435	1105	
219	556	175	445	450	1144	
226	575	181	460	466	1183	
234	594	187	475	481	1222	
241	613	193	490	496	1261	
249	631	199	505	512	1300	
256	650	205	520	527	1339	
263	669	211	535	543	1378	
271	688	217	550	558	1418	
278	706	222	565	573	1457	
285	725	228	580	589	1496	
293	744	234	595	604	1535	
300	763	240	610	620	1574	
308	781	246	625	635	1613	
315	800	252	640	650	1652	
322	819	258	655	666	1691	
330	838	264	670	681	1730	
337	856	270	685	697	1770	
344	875	276	700	712	1809	
352	894	281	715	727	1848	
359	913	287	730	743	1887	
367	931	293	745	758	1926	
374	950	299	760	774	1965	
381	969	305	775	789	2004	
389	988	311	790	804	2043	
396	1006	317	805	820	2082	

MAXIMUM ZOOM

Throw Distance Formula

 $TD = (2.6076 \times W) - 16.638$ Where

W = image width (cm)

2.5-4.5:1 Zoom Lens

Image Diagonal Image W		/idth (W)	Throw Dis	tance (TD)	
Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)
120	305	96	244	249	631
121	306	96	245	250	634
128	325	102	260	265	674
135	344	108	275	281	713
143	363	114	290	296	753
150	381	120	305	312	792
157	400	126	320	327	832
165	419	132	335	343	871
172	438	138	350	359	911
180	456	144	365	374	950
187	475	150	380	390	990
194	494	156	395	405	1029
202	513	161	410	421	1069
209	531	167	425	436	1108
217	550	173	440	452	1148
224	569	179	455	467	1187
231	588	185	470	483	1227
239	606	191	485	499	1266
239	625	197	500	514	1306
253	644	203	515	530	1345
253	663	203	530	530 545	1345
268	681	209	545	545 561	1424
11			560	576	
276	700	220	575		1464
283	719	226		592	1504
290	738	232	590	607	1543
298	756	238	605	623	1583
305	775	244	620	639	1622
312	794	250	635	654	1662
320	813	256	650	670	1701
327	831	262	665	685	1741
335	850	268	680	701	1780
342	869	274	695	716	1820
349	888	280	710	732	1859
357	906	285	725	748	1899
364	925	291	740	763	1938
372	944	297	755	779	1978
379	963	303	770	794	2017
386	981	309	785	810	2057
394	1000	315	800	825	2096
401	1019	321	815	841	2136
408	1038	327	830	856	2175
416	1056	333	845	872	2215
423	1075	339	860	888	2254
431	1094	344	875	903	2294
438	1113	350	890	919	2333
445	1131	356	905	934	2373
453	1150	362	920	950	2412
460	1169	368	935	965	2452
468	1188	374	950	981	2492
475	1206	380	965	996	2531
482	1225	386	980	1012	2571
490	1244	392	995	1028	2610
497	1263	398	1010	1043	2650
504	1281	404	1025	1059	2689
512	1300	409	1040	1074	2729
519	1319	415	1055	1090	2768
527	1338	421	1070	1105	2808
534	1356	427	1085	1121	2847
541	1375	433	1100	1137	2887
<u> </u>					

MINIMUM ZOOM

Throw Distance Formula

TD = (2.6347 x W) - 11.428

W = image width (cm)

2.5-4.5:1 Zoom Lens

Image Diagonal		Image Width (W)		Throw Distance (TD)	
Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)
67	170	54	136	244	621
69	175	55	140	252	640
76	194	61	155	280	712
84	213	67	170	308	784
91	231	73	185	337	855
98	250	79	200	365	927
106	269	85	215	393	999
113	288	91	230	421	1070
121	306	96	245	450	1142
128	325	102	260	478	1214
135	344	108	275	506	1286
143	363	114	290	534	1357
150	381	120	305	563	1429
157	400	126	320	591	1501
165	419	132	335	619	1573
172	438	138	350	647	1644
180	456	144	365	676	1716
187	475	150	380	704	1788
194	494	156	395	732	1860
202	513	161	410	760	1931
209	531	167	425	789	2003
217	550	173	440	817	2075
224	569	179	455	845	2147
231	588	185	470	873	2218
239	606	191	485	902	2290
246	625	197	500	930	2362
253	644	203	515	958	2434
261	663	209	530	986	2505
268	681	215	545	1015	2577
276	700	220	560	1043	2649
283	719	226	575	1071	2721
285	725	228	580	1071	2745
298	756	238	605	1128	2864
305	775	244	620	1156	2936
312	794	250	635	1184	3008
320	813	256	650	1212	3079
327	831	262	665	1241	3151
335	850	268	680	1269	3223
342	869	274	695	1203	3295
349	888	280	710	1325	3366
357	906	285	725	1354	3438
364	925	291	740	1382	3510
372	944	297	755	1410	3582
379	963	303	770	1438	3653
386	981	309	785	1467	3725
394	1000	315	800	1495	3797
394	1000	313	800	1495	3191

MAXIMUM ZOOM

Throw Distance Formula

 $TD = (4.783 \times W) - 29.602$ Where

W = image width (cm)

4.5-7.3:1 Zoom Lens

Image Diagonal		Image Width (W)		Throw Distance (TD)	
Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)
131	334	105	267	472	1198
138	350	110	280	495	1257
145	369	116	295	522	1325
153	388	122	310	548	1392
160	406	128	325	575	1460
167	425	134	340	601	1528
175	444	140	355	628	1595
182	463	146	370	655	1663
189	481	152	385	681	1731
11		157			1731
197	500		400	708	
204	519	163	415	735	1866
212	538	169	430	761	1934
219	556	175	445	788	2002
226	575	181	460	815	2069
234	594	187	475	841	2137
241	613	193	490	868	2205
249	631	199	505	895	2272
256	650	205	520	921	2340
263	669	211	535	948	2408
271	688	217	550	975	2475
278	706	222	565	1001	2543
285	725	228	580	1028	2611
293	744	234	595	1055	2678
300	763	240	610	1081	2746
308	781	246	625	1108	2814
315	800	252	640	1134	2882
322	819	258	655	1161	2949
330	838	264	670	1188	3017
337	856	270	685	1214	3085
344	875	276	700	1241	3152
352	894	281	715	1268	3220
359	913	287	713	1200	3288
11		293			
367	931		745	1321	3355
374	950	299	760	1348	3423
381	969	305	775	1374	3491
389	988	311	790	1401	3558
396	1006	317	805	1428	3626
404	1025	323	820	1454	3694
411	1044	329	835	1481	3761
418	1063	335	850	1508	3829
426	1081	341	865	1534	3897
433	1100	346	880	1561	3965
437	1111	350	889	1577	4005
440	1119	352	895	1587	4032
448	1138	358	910	1614	4100
455	1156	364	925	1641	4168
463	1175	370	940	1667	4235
470	1194	376	955	1694	4303
477	1213	382	970	1721	4371
485	1231	388	985	1747	4438
492	1250	394	1000	1774	4506
500	1269	400	1015	1801	4574
507	1288	406	1030	1827	4641
514	1306	411	1045	1854	4709
522	1325	417	1060	1881	4777
529	1344	423	1075	1907	4844
536	1363	429	1090	1934	4912
541	1375	433	1100	1952	4957
546	1388	437	1110	1969	5002
L	1000		1110	1.000	0002

MINIMUM ZOOM

Throw Distance Formula

TD = (4.5126 x W) - 6.5502 Where

W = image width (cm)

4.5-7.3:1 Zoom Lens

Image Diagonal		Image Width (W)		Throw Distance (TD)	
Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)	Inches(in.)	Centimeters (cm)
81	205	65	164	469	1192
86	219	69	175	502	1274
94	238	75	190	545	1385
101 108	256	81	205	589	1497
116	275 294	87 93	220 235	633 677	1608 1719
123	313	98	250	721	1831
130	331	104	265	765	1942
138	350	110	280	808	2053
145	369	116	295	852	2165
153	388	122	310	896	2276
160	406	128	325	940	2387
167	425	134	340	984	2499
175	444	140	355	1028	2610
182	463	146	370	1071	2721 2833
189 197	481 500	152 157	385 400	1115 1159	2833
204	519	163	415	1203	3055
212	538	169	430	1247	3167
219	556	175	445	1291	3278
226	575	181	460	1334	3389
234	594	187	475	1378	3501
241	613	193	490	1422	3612
249	631	199	505	1466	3723
256	650	205	520	1510	3835
263	669	211	535	1554	3946
271	688	217	550 565	1597	4057 4169
278 285	706 725	222 228	580	1641 1685	4169
293	744	234	595	1729	4392
300	763	240	610	1773	4503
308	781	246	625	1817	4614
315	800	252	640	1860	4726
322	819	258	655	1904	4837
330	838	264	670	1948	4948
337	856	270	685	1992	5060
344	875	276	700	2036	5171
352	894	281	715	2080	5282
359 367	913 931	287 293	730 745	2123 2167	5394 5505
374	950	299	760	2211	5616
381	969	305	775	2255	5728
389	988	311	790	2299	5839
396	1006	317	805	2343	5950
404	1025	323	820	2386	6062
411	1044	329	835	2430	6173
418	1063	335	850	2474	6284
426	1081	341 346	865	2518	6396
433 437	1100 1111	346 350	880 889	2562 2588	6507 6574
440	1119	352	895	2606	6618
448	1138	358	910	2650	6730
455	1156	364	925	2693	6841
463	1175	370	940	2737	6952
470	1194	376	955	2781	7064
477	1213	382	970	2825	7175
485	1231	388	985	2869	7286
492	1250	394	1000	2913	7398
500 507	1269	400 406	1015	2956	7509 7621
507 514	1288 1306	406 411	1030 1045	3000 3044	7621 7732
522	1325	417	1045	3088	7843
529	1344	423	1075	3132	7955
536	1363	429	1090	3176	8066
				1	

MAXIMUM ZOOM

Throw Distance Formula


 $TD = (7.423 \times W) - 25.184$ Where

W = image width (cm)

System Integration

The GPIO (General Purpose Input Output) connector located on the input panel provides a flexible method of interfacing a wide range of external I/O devices to the projector. There are 7 GIO pins available on the 9pin D-Sub GPIO connector, which are configurable via RS232 commands. The other two pins are reserved for ground and power – see table below for pin identification.



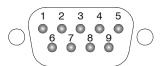

GPIO Pins			
Pin #	Signal		
1	+ 12V (200mA)		
2	GPIO 1		
3	GPIO 2		
4	GPIO 3		
5	Ground		
6	GPIO 4		
7	GPIO 5		
8	GPIO 6		
9	GPIO 7		

The serial cable required for connecting the external device to the projector's GPIO connector, whether it's a standard serial cable or a custom one, must be compatible with the external device.

Configuring the GPIO

The GPIO connector can be configured to automate any number of events using the serial command code GIO. Each pin is defined as either an *input* or *output* depending on the desired outcome. In general, configure the pin as an input if you want the projector to respond to something the external device does and as an output if you want the external device to respond to an action taken by the projector. For example, configure the pin as an output if you want the lighting in a room to automatically dim when the projector is turned on.

By using the GIO command, you can also set the state of each pin as high or low. By default, the state of each pin is high. The voltage applied to pins in the high state is +3.3V.

Example 1. Turn room lighting on when the projector is turned off. (Assumes a control/automation unit is configured to turn the lights on when pin 2 of it's input goes high.)

(GIO C2 O)

Set pin #2 configuration to output

(GIO 2 H)

Set pin #2 to high (state)

Query Command

(GIO?) Request the state and configuration of all pins

(GIO! "HHLLHLH" "OOIOOOI") Reply of pin state and configuration

(GIO? C2) Request configuration for pin #2

(GIO! C2 O) Reply with pin #2 configuration as output

(GIO? 2) Request the state of pin #2

(GIO! H) Reply with pin #2 state as high

Real Time Event

Use the serial command RTE to specify an action that is initiated at a particular time or based on an external stimulus.

For General Purpose IO "G"

Parameter	Name	Value
P1	RTE type	G (Real Time I/O Event)
P2	I/O bit	1-7
P3	Pin state	H = High
	(1 Character)	L = Low
	(String)	"LHXXXHL" Combine multiple inputs and
		trigger occurs when all conditions are met
P4	Commands	Any valid serial protocol command for the device

Example 2. Projector powers up when a switch on the external device is turned on.

(GIO C2 I) Set pin #2 configuration as input

(RTE G 2 H "(PWR 1)") Power on when pin #2 set to high


(RTE G 2 L "(PWR 0)") Power off when pin #2 set to low

Optional Input Modules

There are many optional input modules and accessories currently available for this projector. Contact your dealer for a complete and up-to-date listing.

RGB500 Input Module 38-804606-xx

The *RGB500 Input Module* may be installed in this projector, a *Marquee Signal Switcher*, or a *Marquee Case/Power Supply*. The module receives analog RGB input signals from computers or other RGB source devices.

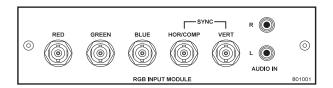


RGB500 Features

- ♦ Accepts 3, 4, or 5 wire RGB video (sync-on-green, composite sync, or separate horizontal and vertical sync), up to 500 MHz bandwidth
- ♦ Accepts YPbPr, composite (on green) and Y/C (on red/blue)
- ♦ BNC connectors for RGB signal inputs

NOTE: The audio connectors are not functional.

RGB400BA Input Module 38-804610-xx

The RGB400 Buffered Amplifier Input Module may be installed in this projector, in a Marquee Signal Switcher or in a Marquee Case/Power Supply. Connect three-, four-, or five-wire RGB video signals of up to 400 MHz bandwidth, signals typically produced by high-resolution computer or workstations. The buffering capability of the module enables the incoming signal to be sent to a remote destination. Inputs are 75Ω terminated.

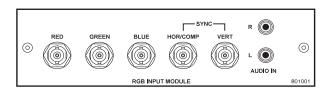


RGB400BA Features

- ♦ Accepts 3, 4, or 5 wire RGB video (sync-on-green, composite sync, or separate horizontal and vertical sync)
- ♦ Accepts YPbPr, composite (on green) and Y/C (on red/blue)
- ♦ BNC connectors for RGB signal inputs
- ♦ Buffered signals to a remote destination

NOTE: The audio connectors are not functional.

RGB400 Active Loop-Thru Input Module 38-804607-xx

The RGB400 ALT Input Module may be installed in this projector, a Marquee Signal Switcher, or a Marquee Case/Power Supply. The module receives analog RGB input signals from computers or other RGB source devices. Video inputs are 75Ω terminated. Video outputs provide buffered loop-through to another display device.

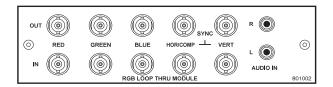


RGB400ALT Features

- ♦ Accepts 3, 4, or 5 wire RGB video (sync-on-green, composite sync, or separate horizontal and vertical sync)
- ♦ Accepts YPbPr, composite (on green) and Y/C (on red/blue)
- ♦ BNC connectors for RGB signal inputs
- ♦ Buffered loop-through video outputs

NOTE: The audio connectors are not functional.

PC250 Analog Input Module 38-804609-xx

The PC250 Analog Input Module may be installed in this projector, a Marquee Signal Switcher or a Marquee Case/Power Supply. The module receives analog RGB input signals from IBM PC compatibles or Macintosh computers. Video inputs are 75Ω terminated. Video outputs are provided for buffered loop-through to another display device.

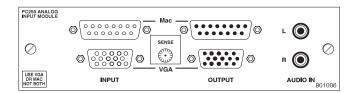


PC250 Analog Features

- ♦ Accepts VGA or MAC RGB video
- ♦ 15 pin D connectors for video
- ♦ Active loop-through video outputs

NOTES: 1) This interface does not accept VGA and MAC signals simultaneously. **2)** The audio connectors are not functional. **3)** Trademarks are the rights of their respective owners.

DVI Input Module '38-804635-xx

This module can display digital video input signals conforming to the DVI (Digital Visual Interface) single-channel standard.

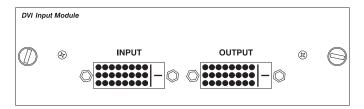


Features

- ♦ Supports Digital Visual Interface (DVI) single-channel
- ♦ Supports VESA® Extended Display Identification Data (EDID™)
- Provides an active-loop-through using a DVI connector (conforming to the DVI Specification)

Serial Digital Input Module ' 38-804602-xx

The module accepts a serial digital 4:2:2 component video signal (YCbCr) via a single **SERIAL IN** BNC connector. The signal can loop through the **SERIAL OUT** BNC out to another device (such as another projector). Inputs are 75Ω terminated.

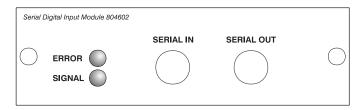


SDI Features

- Accepts serial digital 4:2:2 component video (YCbCr)
- ♦ Provides both a **SERIAL IN** and a **SERIAL OUT** BNC connector; includes status LEDs for signal and error
- ♦ SMPTE 259M compatible

Dual SD/HD-SDI Module 38-804656-xx

The *Dual SD/HD-SDI Module* enables incoming serial digital (SD or HD) data to be tiled across multiple screen displays, overlapped for extra-bright displays, or distributed to additional projectors for multiple, same-image screens.

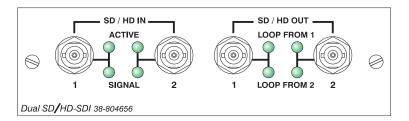

Dual SD/HD-SDI Features

- Accepts and decodes up to two serial digital inputs
- ♦ Outputs up to two 10-bit YCbCr 4:2:2 video signals
- ♦ Provides input(s) to output(s) loop-through capability
- ♦ Supplies interchangeable inputs as part of the Picture-in Picture display
- ♦ SMPTE 259M and 372 compatible

Index

3 3D Simulation, 3-33 3D Stereo Sync, 3-34	Name, 3-18 Number, 3-15, 3-19 Signal Type, 3-16 Channel Copy/Delete, 3-17 Channel Edit Menu, 3-18 Channel Key, 3-6, 3-15
Ambient Lighting, 2-5 Anamorphic, 3-22 Arrow Keys, 3-9 Auto Input Level, 3-29 Auto Key, 3-5 Auto Setup, 3-5 AutoSource Checkbox, 3-19	Channel Selection, 3-15 Channel Setup Menu, 3-16 And Enter Key, 3-17 And Function Key, 3-17 Channels Creating Automatically, 3-15 Creating in Channel Setup Menu, 3- 17, 3-18
В	Definition of, 3-14 Deleting in Channel Setup Menu, 3-
Backlight, 3-41 Bad Sync, 3-69 Baud Rate, 2-17, 3-38 Blacklevels and Drives, 3-29 Blanking, 3-24 Brightness Key, 3-7 Brightness Uniformity Canceling, 3-63 Definition, 3-60 Prerequisites, 3-60 Procedure, 3-60 Submenu, 3-42 Broadcast Key, 3-41 Broadcasting, 3-9 Built-in Keypad, 3-1	Checkbox Toggles, 3-12 Clamp Tip, 3-30 Color Adjustment, 3-32, 3-43 Color Saturation Submenu, 3-45 XY Submenu, 3-44 Color Enable, 3-47 Color Matching, 3-57 Color Space Selecting, 3-26 Color Temperature, 3-33 Communications ASCII Messaging, 3-68 ChristieNET, 3-68 Ethernet, 3-68 Remote Control of Projector, 3-68
C Cables	Submenu, 3-38 Component Video, 2-13
Serial Communication, C-1 Ceiling Mount, 2-11 Channel Locked, 3-19	Composite Video Connection, 2-14 Configuration Menu, 3-36 Contrast Key, 3-7, 3-25 Custom Sizing, 3-21

D	Н
Dark Interval, 3-34	Help
Date and Time	Context-sensitive, 3-11
Setting, 3-36	Horizontal Position, 3-23
Decoder AGC	
Enabling, 3-27	I
Decoder Luma Delay, 3-28	7
Detail	Image
Threshold, 3-35	Brightness, 3-25
Diagnostics and Calibration, Submenu,	Contrast, 3-25
3-47	Detail, 3-26
Display	Gamma, 3-25
Channel List, 3-37	Image Adjustments, 3-19
Error Messages, 3-37	Image Blanking, 3-24
Slidebars, 3-37	Image Resizing, 3-20
DVI, 2-14	Image Size, 3-22, 3-23
2 / 2, 2 1 /	In Menu Checkbox, 3-19
${f E}$	Input
E1 DI 1' 2.42	Definition of, 3-14
Edge Blending, 3-43	Selecting/switching, 3-14
Description, 3-64	Settings, Advanced, 3-32
How Blends are Used, 3-64	Input 3-2, 3-14
Main functions, 3-64	Input Keys, 3-6
Procedure, 3-66	Input Levels, 3-29
Enter Key, 3-9	Color Enable, 3-30
Error Messages	Input Video Pleak 2 28
Bad Sync, 3-69 H-Sync or V-Sync, 3-70	Input Video Black, 3-28 Installation
No Signal, 3-69	
System Warnings/Errors, 3-70	Considerations, 2-3, 2-5
Ethernet	Front Screen, 2-3 Lighting, 2-5
Communications, 2-16	Screen Size, 2-4
Troubleshooting, 5-3	Throw Distance, 2-5
Ethernet Network, 2-18	Installation Type, 2-3
Ethernet Settings, 3-39	Interfaces, Optional, 2-14
Exit Key, 3-9	Interpolated Color, 3-34, 3-35
Latt Rey, 5-7	Invalid Channel, 3-69
${f F}$	IP Address, 3-40
	Setting, 3-18
Fade Time, 3-36	IR Sensors, 2-15
Film Mode Threshold, 3-35	110 00115015, 2 15
Filter, 4-4	K
Freeze Image, 3-47	W 122 D 1
Full Height, 3-22	Keypad, 3-3, B-1
Full Screen, 3-21	Built-in, 3-3
Full Width, 3-21	Enabling Wire Remote, 3-42
Function Key, 3-8	Guidelines, 3-5
G	IR Remote, 3-3
G	Replacing Batteries, 4-5
Gamma, 3-25	Wired, 3-5
Gamma Key, 3-7	Keystone
Geometry and Color, Submenu, 3-42	Correcting, 3-42
Glossary of Terms, A-1	

${f L}$	Motion Filter, 3-35
Lamp 4.2.4.4	Multiple Projectors
Lamp, 4-2, 4-4 Failure to Ignite, 5-3	Description, 3-57
History, 3-55	•
•	${f N}$
Hours, 3-53 Hours of Use, 3-56	Network Routing, 3-38
•	Network, Split. See Split Network
Intensity Setting, 3-54 Limit, 3-53	No Resizing, 3-21
LitteLoc, 3-54	No Signal, 3-69
Manu, 3-53	Noise Reduction, 3-26
Message, 3-53	Numerical Entry, 3-14
Mode, 3-54	Numerical Entry, 3-14
Optical Aperture, 3-55	O
Recording Serial Number, 3-55	
Serial Number, 3-53	Odd Pixel Adjustment, 3-47
Troubleshooting, 5-3	Level Detector, 3-48
Ç,	Offsets
Lamp Door, 3-2 Lamp Modes	Horizontal, 2-6, 2-9
*	Vertical, 2-6, 2-9
Max Brightness, 3-54	Optical Aperture, 3-33
Power, 3-54	Optional Input, 2-14
Language	Optional Input Modules, F-1
Language Chaosing 3 26	OSD Key, 3-8
Choosing, 3-36	
Laser Key, 3-10 LEDs, Status, 3-70	P
Lens	Peak Detector, 3-30, 3-48
Offset Adjustment, 2-6, 2-9	PIP, 3-50
Replacement Procedure, 4-11	Border Color, 3-52
Lens Mount, 3-2	Border Width, 3-51
Level Value, 3-48	Enable, 3-51
Line Cord, 2-2	Image Settings. See Image Settings
Lite LOC Calibration, 3-49	Pixel Phase, 3-22
LiteLOC	Pixel Tracking, 3-22
Troubleshooting, 5-3	Plug & Display (EDID), 3-24
Locked Channel Checkbox, 3-19	Port Number
Luma Delay, 3-28	Changing, 2-18
Duma Delay, 5 20	Entering, 3-40
M	Power
Maria	Connection, 2-20
Menu	Line Cord, 2-2
Channel Edit, 3-18	Setting for Lamp, 3-54
Channel Setup, 3-16	Power Key, 3-5
Configuration, 3-36	Powerup, Auto, 3-36
Image Settings, 3-25	Primary Colors, Adjusting, 3-57
Lamp, 3-53	Projector
Main, 3-10	Assigning/Changing Number, 3-38
Size and Position, 3-20	Error Conditions, 3-69
Test Pattern, 3-42	Features, 1-1
Menu Font Size, 3-37	How it works, 1-2
Menu Key, 3-7 Menu Location on Serson, 3, 37	Mounting, 2-11
Menu Location on Screen, 3-37	Number, 3-14
Menu Navigation, 3-10, 3-19	Ouick Setup, 2-1

Resetting, 3-70 Options for Setup, 2-19 Projector Height, 2-1, 2-11 S-Video Projector Key, 3-8 Connection, 2-14 Pull-Down Lists, Use of, 3-12 Swap Main and PIP Image. See PIP Switcher, 3-19 R **System Integration** GPIO Connector, 2-19, E-1 Remapping Keypad. See Working with PIP or Seamless Switching T **RGB** Test Key, 3-5 Connection, 2-12 RS-232 Test Pattern Grey Level, 3-47 Connection, 2-15 RS-422 Editing, 3-13 Throw Distance, 2-5, D-1 Connection, 2-15 Troubleshooting \mathbf{S} Ethernet, 5-3 Lamp, 5-3 Screen Size, 2-4 Power, 5-1 Seamless Switching. See Working with PIP or Seamless Switching V Fade Time, 3-52 Image Optimization, 3-52 Ventilation, 4-3 Shutter Key, 3-8 Vertical Position, 3-23 Slidebar Adjustment, 3-11 Vertical Stretch, 3-22 Video Standards, 3-27 Slidebars "Direct", 3-12, 3-19 Y Using, 3-12 Source Setup. See Channel YPbPr, 3-26 Splash Screen Setup, 3-37 Connection, 2-13 Split Network, 3-39

Split Networks