



F I I T 1 X TRUE WIRELESS EARBUDS USER MANUAL

⚠ Important Safety Instructions

Please read the following safety instructions carefully before using this product. Please make sure to include these safety instructions with the product when deliver to a third party.

Health and safety

- Do not use the product in case it is apparently damaged;
- Do not use the product at a high volume level for an extended period of time;
- Do not use the product while driving or being engaged in activities that require full concentration;
- Keep the product, its packaging and accessories out of the reach of children and pets to avoid choking hazard;
- Keep the product away from medical devices that may be affected by magnetic field, such as an implanted cardiac pacemaker.

Product care

- Keep this product dry and at room temperature, avoid long time exposure to high temperature or humidity environments;
- Use accessories only provided by fiil;
- Excessive signal level may cause damaging overload;
- Clean the product only with dry and soft cloth.


Battery warning!

The product uses lithium polymer battery. Improper usage may lead to the risk of fire or burn. Please use the charger only supplied by qualified manufacturer (recommended output: voltage 5V, current ~500mA) or charge the product via PC USB port.

Specification and disclaimer


- The product is designed for portable devices and high-fidelity systems;
- Any usage other than those specified in the user manual is deemed as misuse;
- Please note that FIIL will accept no responsibility for any loss incurred by misuse.
- FIIL T1 X is designed by Fengfan(Beijing) Technology Co., Ltd. and made by Fengfan(Suzhou) Audio Tech. Co., Ltd.
- 'FIIL' is a registered trademark[®] of Fengfan (Beijing) Technology Co., Ltd.

Packaging Content

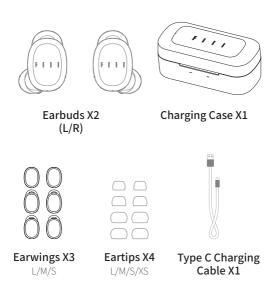


Main User Interfaces

Earbud

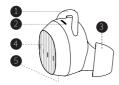

- Earwing
- 2 LED indicator
- 3 Eartip
- Charging Case

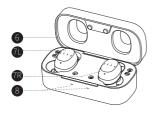


- 6 Charging Case Cover
- Left earbud
- Right earbud

- 4 Touch control
- 6 Microphone



- 8 Charge indicators
- Type C connector

Get Started

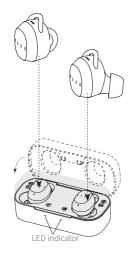



Put earbuds into charging case and close the cover. Please connect USB cable to charge more than 10min if charging case's LED does not light on.



STFP2

Open the charging case then earbuds will automatically get sync and enter pairing mode without any manual operation

^{*}Notes : Please charge the charging case via USB adapter in advance.

Bluetooth Pairing

Bluetooth pairing

For first usage of brand new FIIL T1 X, please refer to page5 "Get Started", the earbud status indicator will continue to blink blue once entered pairing mode.

To begin a new bluetooth pairing, please press and hold any one of earbuds until the LED indicator blinks blue, when the earbuds are turned off.

Search Connection

Enter setup menu of audio source devices, select "search device" in "Bluetooth" then select "FIIL $T1\,X$ " in the device list to connect.






Earbuds Sync

Auto-Sync

Please refer to page5 "Get Started", the left and right earpbuds will automatically get synced after Step2.

Manual Sync

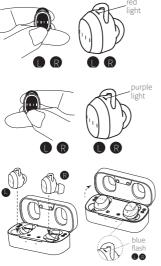

Step 1 - Power Off earbuds

Press and hold both earbuds at the same time, do not release your fingers until both red lights are on.

Step 2 - Reset Sync

Press and hold the earbuds again, do not release your fingers until the purple light comes on.

Note: Please hold your finger until purple light and ignore all other lights during above process.

Step 3 - Reconnect bluetooth

① Put earbuds back in the charging case and close it;


② Delete the "FIIL T1 X" in your bluetooth device list:


③ Repeat the "Search Connection" in Bluetooth Pairing(Page 6);.

*Notes: If a purple light comes on in earbud during ③, please **do not** connect Bluetooth but repeat ① and wait a little longer, or repeat "Step 2 -Reset Sync".

How to Control

User Interface

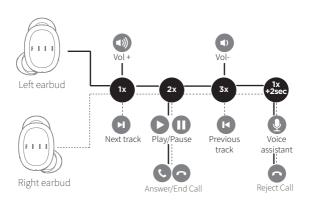

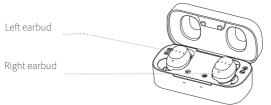

How to charge

Charge earbud

- When earbud reminds "recharge headset" or the LED indicator blinks red, that means battery is low and earbud should be charged.
- Place the earbuds into charging case and close, then earbud will be charged.



*Notes: Earbud will power off during charging.

Charging Case indicator

- When the red LED indicator (left or right) is on, it means the corresponding earbud is being charged.
- When the red LED indicator is off, it means the corresponding earbud is fully charged.



How to charge

Recharge Charging Case

- When charging case is not able to charge earbud or its LED indicator blinks red, it means battery low and charging case should be recharged.
- Please connect Type C cable with USB adapter to recharge charging case.



Charging Case indicator

- When both red LED indicators are light on, it means the charging case is being charged.
- When both red LED indicators are light off, it means the charging case and earbuds are fully charged.



Product Parameters

Item	Specifications
Earbud weight Charging case weight	~4.8g/each ~40g
User Mode	Bluetooth True Wireless
Bluetooth	V5.0, supported protocols: HSP , HFP , A2DP , AVRCP BT range: up to 30m. Pairing code: 0000. iOS and Android devices supported.
Audio specification	Supported Code: AAC (for iOS) /SBC; Speaker specifications: φ 6.1mm, frequency range: 15Hz-22kHz
Power and battery	Rechargeable lithium-polymer battery; music time: up to 6 Hrs (medium level) on a single charge; Bluetooth standby time: up to 6 days; charging time: ~ 40 minutes. Charging case: add 3 more charge cycle (18Hrs+)
Operating environment	Operating temperature: 0°C~50°C; storage temperature: -30°C to 70°C; IEC60529-IP65 Certified(earbuds)
Voice reminder	English
Certification	BQB Bluetooth 5.0,SRRC,RoHS,REACH,FCC,IC,CE,IP65

Warranty and Services



FIIL guaranteed: One Year Warranty for quality issues

Scan the QR code above with mobile phone to download fiil+ APP(FAQ inside). Enter information to register device. Contact the customer service for any quality issue via fiil+/Facebook/ Twitter service account ('Fiil Headphone') / email customer@fiil.com

Trouble Shooting

Problem	What to do
Earbuds don't turn on	Power on the earbuds. Charge the battery.
Earbuds don' t pair with Bluetooth device	On your Bluetooth device: Turn the Bluetooth feature on and then off. Delete your Fill T1 X Earbuds from the Bluetooth list on your device. Pair again. Move your Bluetooth device closer to the earbuds and away from any interference or obstructions.
No sound	Power on the earbuds and charge the battery. Increase the volume on your earbuds and Bluetooth device. Press the Power/Bluetooth button to hear the connected device. Make sure you are using the correct device. Move your Bluetooth device closer to the earbuds and away from any interference or obstructions. Use a different music source. Pair a different Bluetooth device. If two Bluetooth devices are connected, pause the first device and play the other device.

Problem	What to do
Poor sound quality	Use a different music source. Pair a different Bluetooth device. Disconnect the second device. Move the Bluetooth device closer to the headphones, and away from any interference or obstructions. Clear any debris or wax buildup from the earbuds and headphone nozzles.
Earbuds don't charge	Open the USB connector and securely connect the small end of the USB cable to the USB connector. Make sure the connector on the cable is correctly aligned with the connector on the headphones. Secure both ends of the USB cable. If your earbuds have been exposed to high or low temperatures, let the earbuds return to room temperature and then try charging again.



This device complies with Part 15 of the FCC Rules and Industry Canada License-exempt RSS standard(s).

Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules / with Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the radio or television off and on, the user is encouraged to try to correct interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- 3. Connect the equipment into an outlet on another circuit.
- 4. Consult the dealer or an experienced radio/TV technician for help.

CAUTION STATEMENT

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Correct disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product should not be mixed with other commercial wastes for disposal.



CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



To prevent possible hearing damage, do not listen at high volume levels for long periods.



CE Mark Warning

RF Exposure Information

The device meets the EU requirements (1999/519/EC) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

Note: The maximum average emitted power of the device is less than 20mW.

香品服务

司院玉夫返む男裁孫004向答,發答刊繁芳卷し處回从常返Ю群刊熱/// 其 : 中用// 耳川/阳爱亲



77.0	

문

#

세

爴

4 艋

+

H

5

萴 単1

(鄣姑銷對的私既代人非家供协主) 劉槑辛
(韌姑銷對的私既代人非家(に高等) 散熱沈天天正
(PHV)-HW1.134(NV251 IV M3YV)

间 () 请 () 请 () 所 : 玉

php://www.hill.cn/cn/service.php

近 班

策凼司書

그 :는[연취ቤ~ : 因副 : 늗퍖맴և

> 哥件地址: : 訂甲杀翔 : 各数人 47语

: 開日 医侧 : 岩車 [1/重果米例

说型

更尽小班7667088004: 57

"小村且是儿川" 号众公

季55登瓷號計書

紅玉塚

: 田順 "八計

示素" ▶

詩支計

: 中用的遊尊

, 未示號本類 陨 璽 完 図 災 選 , 益 对 去 合 阳 恋 证 呆 大 , 祆 您

。仍真图16年奖刚您验查數以

第一选择正品验证、产品还删。 第一选择正品验证、产品还删。

∘無≭沿

太元中二等 费向查问升馆如不先式本。的真的号串的耳机查 79070850795 活申記書 第四章 所數所不完成本。的真的号串所互的查 78070850799 等的重要的 1000000 中華形象的商誉或代内国的支分时通知服务票只感,用

服务时间:周一至周日 9:30 - 18:30



劉槑辛L國何量司品书: 新承 JIII

扫插上方二维码, 手机 / 整加iii+ 应相程序, 开输入信息, 无删设备 质量问题可随时通过iii+/微信服务号 (iii)要耳却(),

量含双称各的素元旋刮树害育中品书

即位会时9000-63611 1/124 计是令位由1945日 计选择文目 中華 本元書 .○						
0	0	0	0	0	×	特融及协会
0	0	0	0	0	0	(林邱舍) 朴彻及朴主
0	0	0	0	0	0	种胜及褶声调印
多級二苯醚	苯須斯老 (889)	幕令六 ((IV)かの)	版 (PO)	(6H) ≚	(Pp)	淋谷沖器
素元旋剥帡害育					324 1000	

。不以來要量

实験3002-50£11 T\L2越量含的中华环损的一条的书指逐五少全或除者各多不表;
,外替贩突去无前目因阅水技干由, 沖結的"×" 计中素1,末要量别的实别的
、差处储器令载引



博辭玄默的 8005-48611 TLS 縣功替泰本

注: 本产品符合《GB8898-2011 音频, 视频及 类似电子设备 安全要求》 合格证(QC PASS)表明符合产品质量检验 可用下部。有限的是有的。 可用下部。如果的是有的。



疑答計氉

C L	
。音异的西 <u>薰</u> 刷剁狀以套耳殆是小⁄球娥更 时的子/沙妹娥更,溅汕避讥以厄聋耳殆号大获娥 。溅高出突以	接
f盒自充开订訊然,盖合盒申充人放协正古式科 (页7萬等緣)	414(1)
1本是於行爭執1次配於 40年,20年2年, 1年第二十二十二十二十二十二十二十二十二十二十二十二十二十二十二十二十二十二十二十	· 翻
末/〈摆用動,國问抄容兼/从手您器拉翻式三票彩 。。小手的其近尝旋	
并表现我由杂类更成学、另次量由詹申杂录解共 中国的企业,就是一种,是一种的工程,是一种的工程,是一种的工程,可以是一种的工程,可以可以是一种的工程,可以可以可以可以可以可以可以可以可以可以可以,可以可以可以可以可以可以可以可	(本) (本) (本) (本) (本) (本)
水分间语音提示,重新接接手机,更接音和识关 整合耳机和电脑和连,可能需要手动选择各种设备机 以及驱动不完善,可能需要手动选择音频设备机	[果
案亡长辅	松 苗鵐问

拨参品书

ΞίΥί	BQB Bluetooth 5.0,SRRC,RoHS,REACH,FCC,IC,CE,IP65
示點音部	最便是
散和用彭	武學國度:0°C~50°C;储存温度-30°C~7°C;通返1065级防 企內分(可机本协定)(可机本体)
北 申斯東	音階中) [本] (多太分成醫穀計厄元音; 成申獻合寶野的申充厄 ,用動盒申充合循,時代04階; 同时申充; 天3太分间时储券(量 为时用刺2WR1互灰时,181代應劫點厄共
彭 族競音	支持的解码:AAC (用于iOS)/SBC; 喇叭规格:6.1mm高密度较磁铁全频带单元,音乐频响范 国:15Hz-22kHz
- 長類	品本:5.0,支持的协议:HSP、HFP、A2DP、AVRCP 传输距离:0.230米;基础:0000;四值;米06达回:离码解针
た 鄭用 動	終天真天蓝
(古式)量重修耳 量重盒由充	克8.4秒 克04秒
画	帮 服

示計量身茲法式身充

- 事体盒身充咎 ●
- 。即死以盒即死林器即死赛<u>我</u>我32U出艰 ●



示計量身 ●

- 五盒申充示券, 相亮相同改示計盒身充兰 。身体器申充82U階收垃)

。示註式氿腎态状

示計量身及法式身充









起,给耳机充电。 盒男死工台,置立四校財盒男死人双冰柱脊前 ●

。即死144四量即批龄要需时加,时机队以上


. 办关并已益/也同开湘客时申充办耳: 封





示計量身 ●

- **杂**搜表, (对亮[水示計置立)A 人立(水盒)B 充兰 ●
- 。加完申充林耳应核内盒申充

佛控制縣

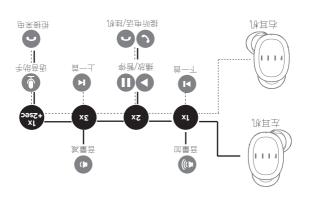

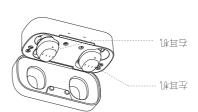

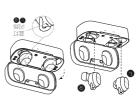


。" 對並七盆 (東里- 也 重香灰,间附为静奇等盒凼即土盖①夏重,长


蓝斑玉似去青,飞溪风水耳灰出中⑤果吹:玉* ;(页0票) 聚步對玉索野中校蹈形盐夏重 ⑤

(1) 有其意此即回知(4) (1)

第3步-重新蓝子连接

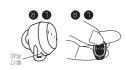

心肝丰铝。 司然, 违宗[汉潔至直, 14耳成两斑分次再 第25年- 重置同步

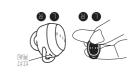

心肝丰铝。 司然,域景(以上全直、小村山近两野汁时间 /林关/// 14 - 电// 课

重新蓝牙连接。

并表同位手樂 也不成朔致貳,(高天塞耳侧单) 美丢 起同 古五中用 動果 成

北同置重 ●

将目动完成监牙同步。 J体耳古式, お燃た式页&策等参貳, 地用動吹首: J体耳X LT JIN码采砌稀

● 蓝子同步(左右耳机)

耳机回染

灰箔モ蓝

校强人逝●

盒电充人划队目科,先式员等考考者,用型次首:你囯X IT JIT 对呼爽納帶曾。 曾。為內表表於近去,抚蒙大學內插下並人进位自唱机宜盒中充于代表,形成社會 近对过的日本表面等實施可以表达的於关--校園需重要需求目的的於, 家是在第四的ILL TIX重要。

妾玄索數 ●

于动注接:进入手礼的设置负面, 在"监小" 远项中点击"搜索设备", 点击字域控地增表到的 □ 11 / 宣告标写副动

连接被搜索到的 FIIL II X, 完成监分配对。 政对过的耳机在打开充电盒后, 无右耳塞自动配对同步, 耳机自动重连 二十二次配列的设备。







注:由于蓝牙目机的特性,如果忽所处环境存在对蓝牙信号的语类或更更重卖索要需要的情况,请您靠近手还靠您就,以引起逐步设备要慢的情况,请您靠于比较小的环境重新是说。

用動欢首

请按照如下步骤,开始激活耳机。

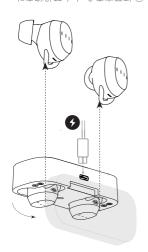



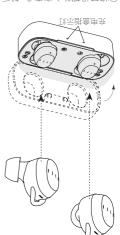

式,等待手机连接。 公 打开充电盒, 左右耳机将自动

。特代OIJ更充 小至,裁BSU對至青, 选亮青 炎[秋示計盒] 克果成; 上合 **司然,盒里充人**放谐冰耳科(J)

申充盒申充给表预表82U用動影:至*

面界协人


- ●耳扒本体
- 山村





- 萬囯 🕕
- 【以示許态状亦耳 4
- 塞垣 😉
- 盒身充●



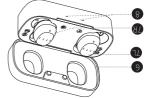

以示計 即 系 **8**


风克麦 👌

₩面對軸 ♣

口声充 J əqvī @

- 盒身充 🔕
- ₩ 其 平 1
- ₩ 世早 🕖

容内装团

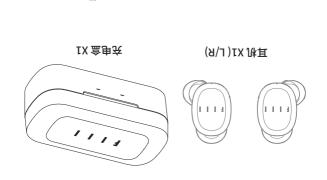

IX 終申充 D 9qvT





F/W/∃ **主蒸X3**

5

公司制定。

- ; 长级而發孫真界高酥畚级发熟更代寺品书本。
- 。· 五贵 明广对 3 (京北) 音樂由 (大安后公别春枝科 (京北) 音樂由 X IT IIIL 71
- * 'fiil' 是峰范(北京)科技有限公司的注册商标®。

示獃全安要重

。开把以用數以不眾本带附公於四八二策餘交品刊出五前 。许把说用更以示影本家的阳鍪完真从前间用更

- ; 用 對 首 心量 首 大 间 时 为 要 个 前 •
- ,用对对内方的甲基尺高式要需过其源规章到要个前。

- 。品用不因虽其太品牌阳即溪成勘受品等器朝场那心址靠要个前。
- 品鬥吒邾
- ;中競和個 巫煅泥1 量加,局五麵暴间內分皮致,熱十吞米,品而本不米1 量常五亩•
- 、計1個/計1個/出新川用東南。
- ; 林迅雄立鄰人辭史以到嗣昭号引入對問至意玉前。
- 。品当古香环深闭絜十用只散。
- i 吕譽此即

。并充品当本[XLI82U]即源(Am002~旅步,V6起身) 豁身还的拱號商 (狀山用動前。武穴源灰火辉岩に芒个用動成,此里際台梁野用動品节本



