

 
 
 
 
Heckler AV



ROLLING STAND

for DTEN Board D7 55"

Assembly & Installation

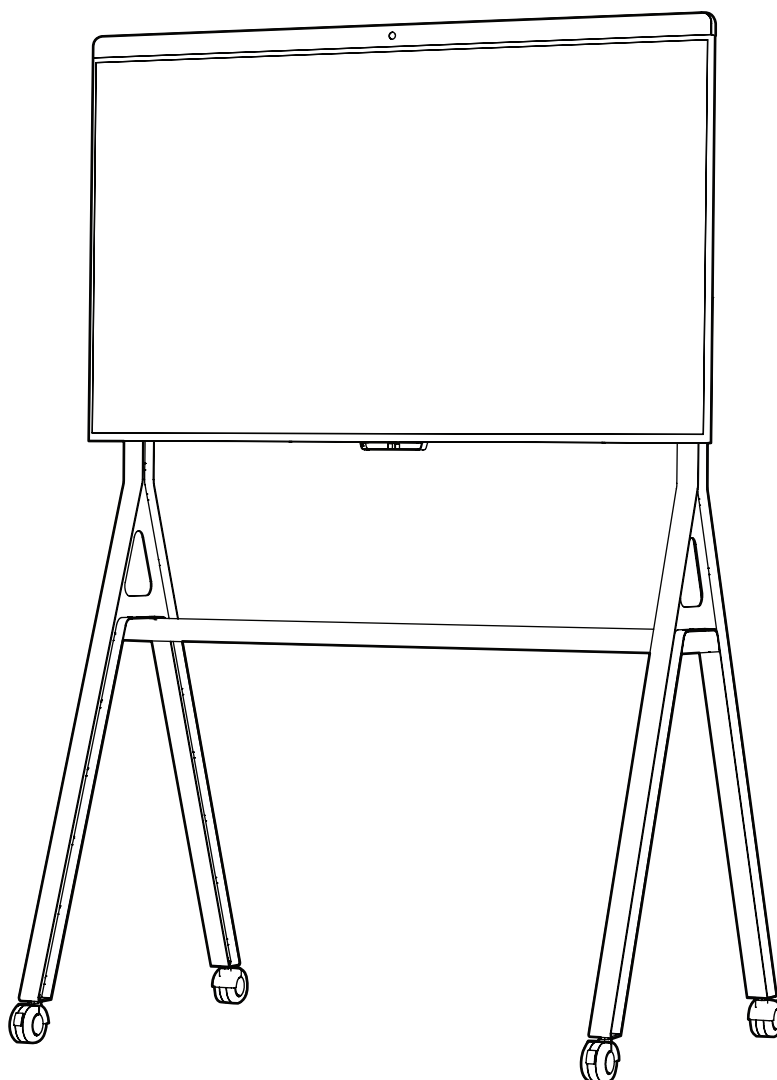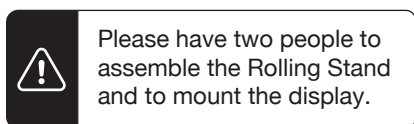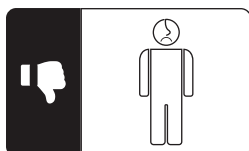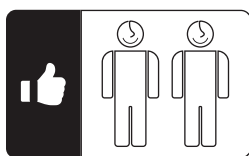


Compatible with

DTEN Board D7 55"


Limited Warranty

Heckler Design warrants your product hardware to be free from defects in material and workmanship throughout the life of the product, and electronic components for a period of one year from the original date of purchase. If you discover a defect in a product covered by this warranty, we will repair at our option using new or refurbished components, or if repair is not possible, replace the item. We reserve the right to request order numbers, receipts, and other supplemental order information as proof of purchase to validate warranty claims.

 1x

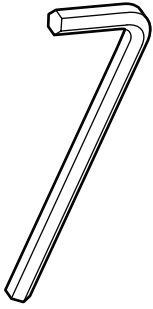

F535

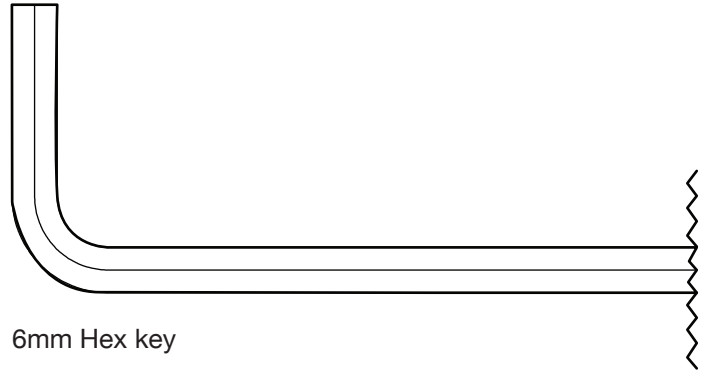 


6mm Hex key

1x



 F674

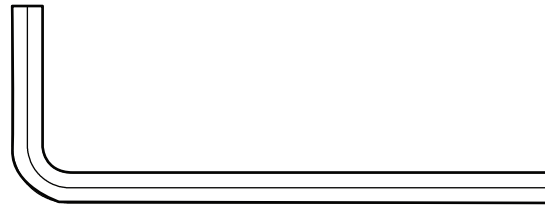

4mm Hex key

1x

 


F180



1/8" Hex Key

4x

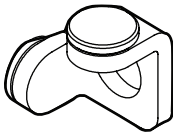

Cable Manager

2x



F530

 
 


Cable Tie

4x



F694




Flange Button Head Screws

8x




 F693





Button Head Screws

 4x




F534

  


Socket Head Screws

 4x





F677

 



Caster post

  4x



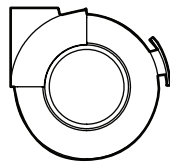
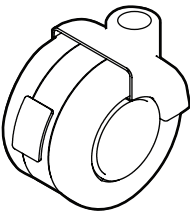


Caster

  
1 Lay down arms as shown.

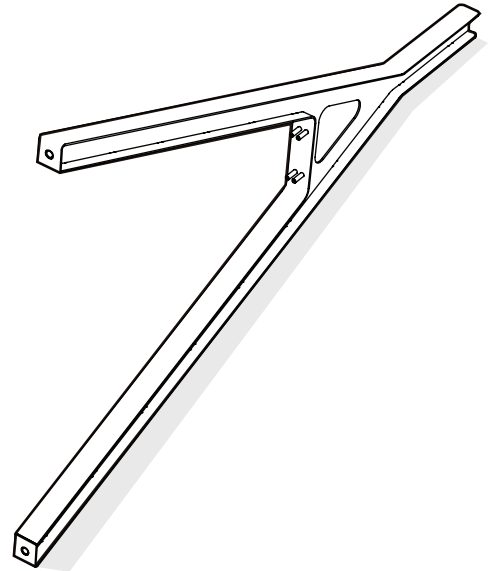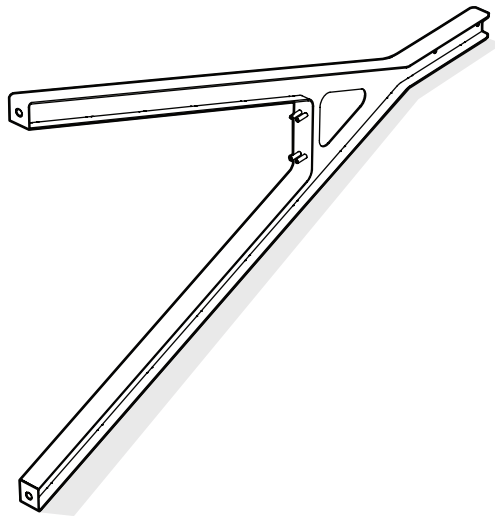

    
2 Install caster posts to the bottom of arms.

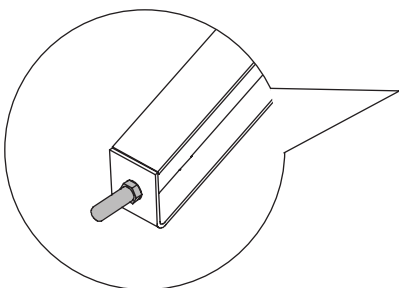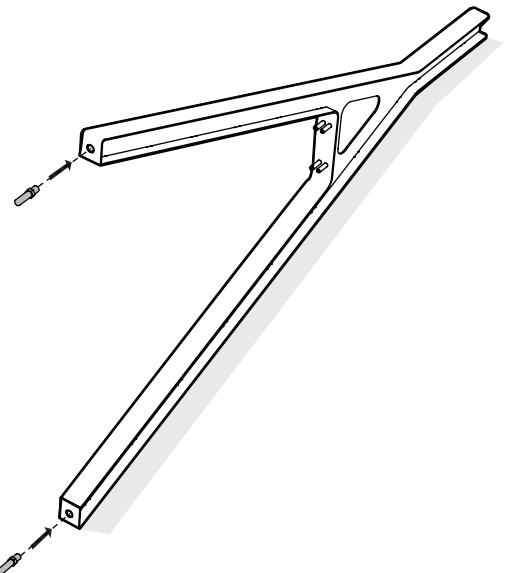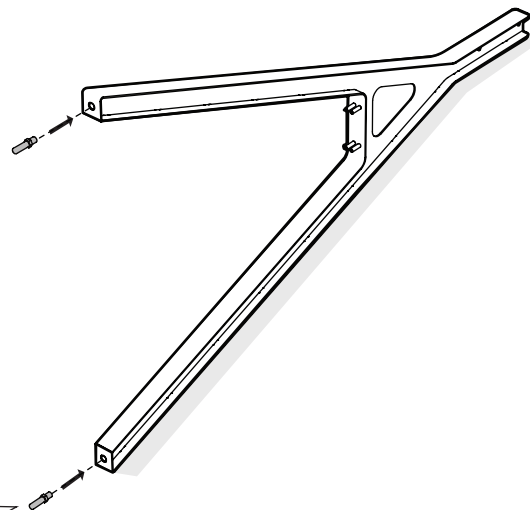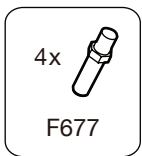

3 Snap casters onto the posts.

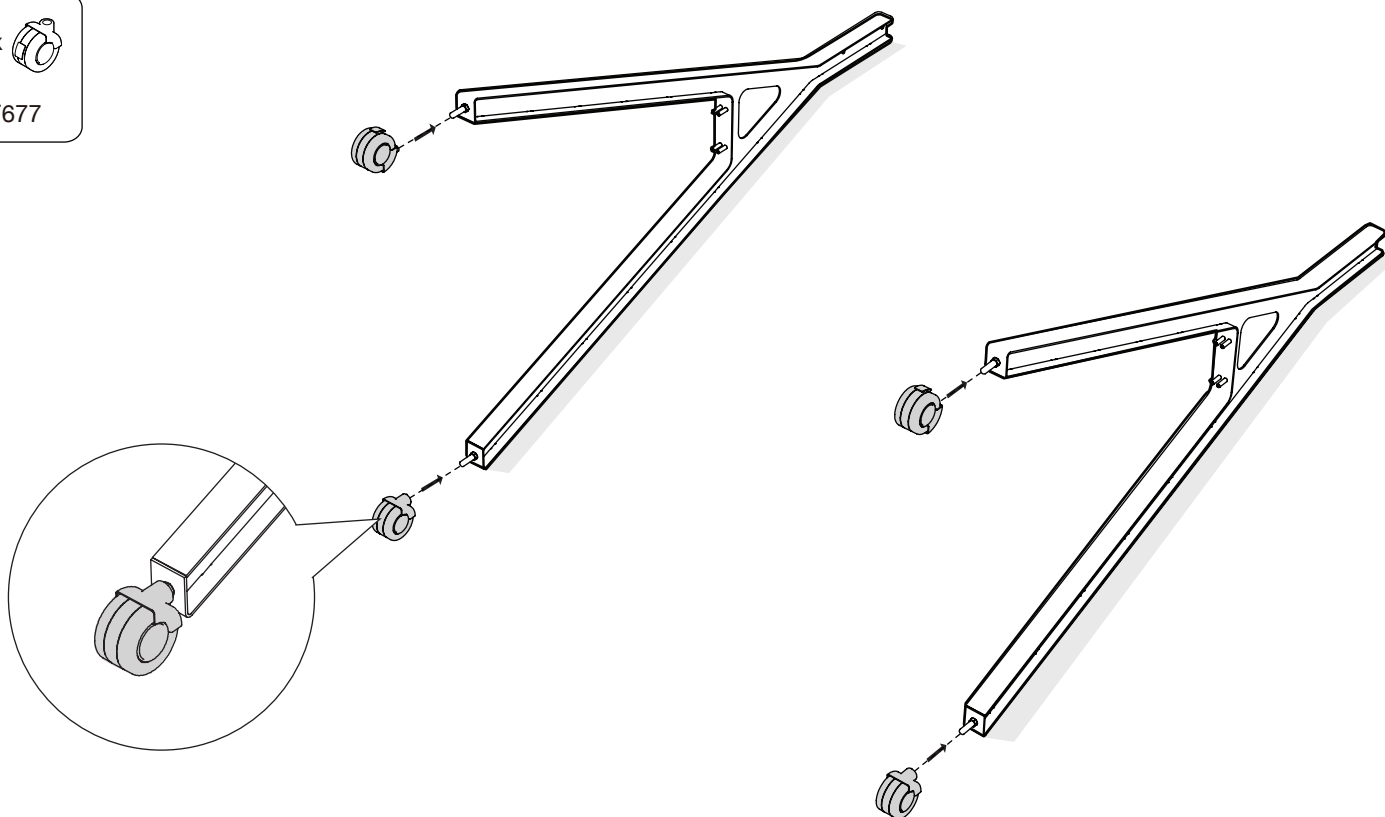 


4 Assemble the wood shelf.

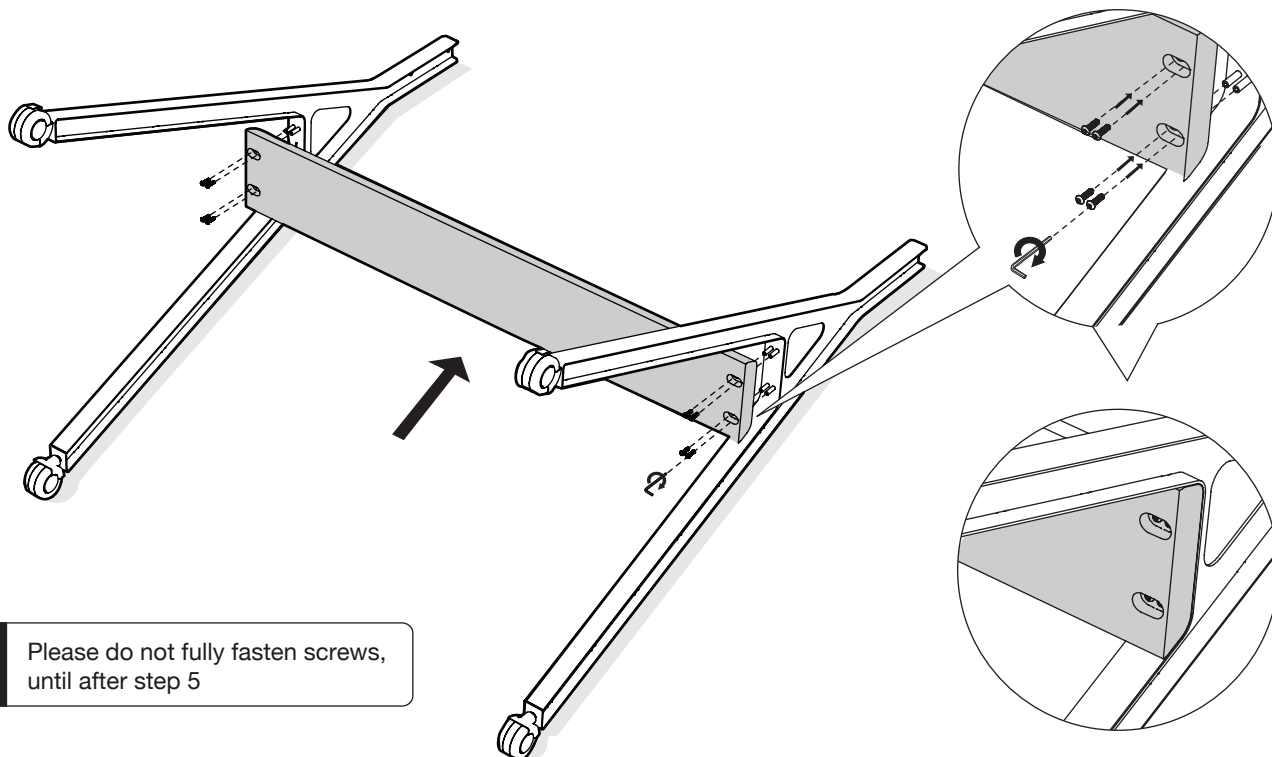 

Please do not fully fasten screws,
until after step 5

 5 Upright the Rolling Stand, slide the bracket in place, and fasten screws.

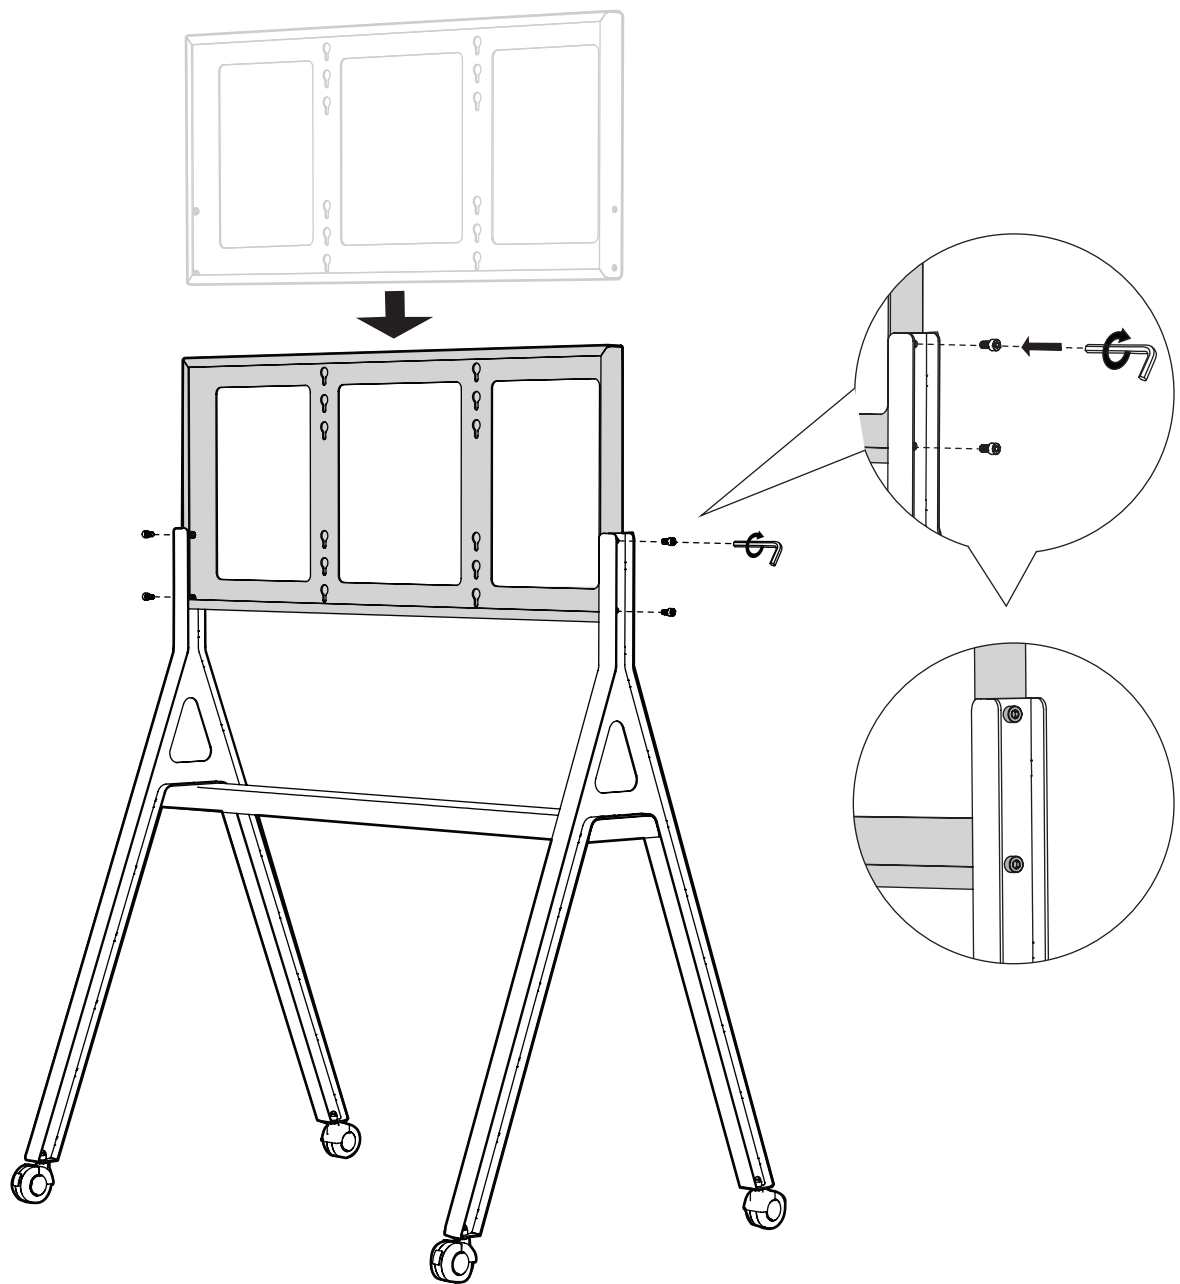


Engage all caster brakes before installing the bracket



Tightly fasten all bracket and wood shelf screws

 6 Partially fasten mounting screws to the back of the D7 Display.



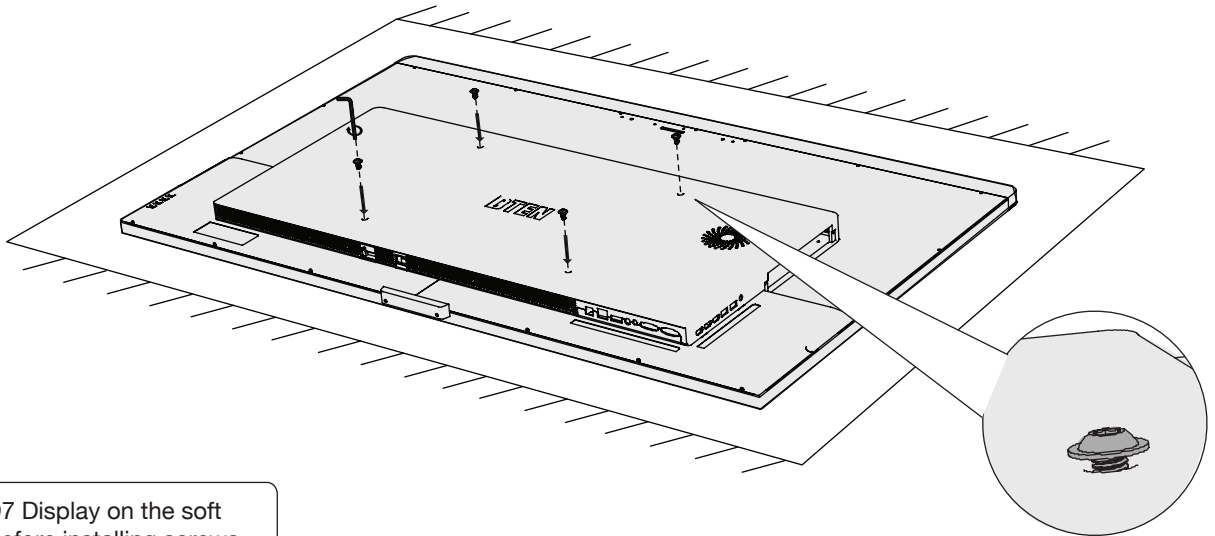


Put the D7 Display on the soft surface before installing screws





Please leave some space between TV and screws

   7 Hang the D7 Display through the keyhole and fasten screws.

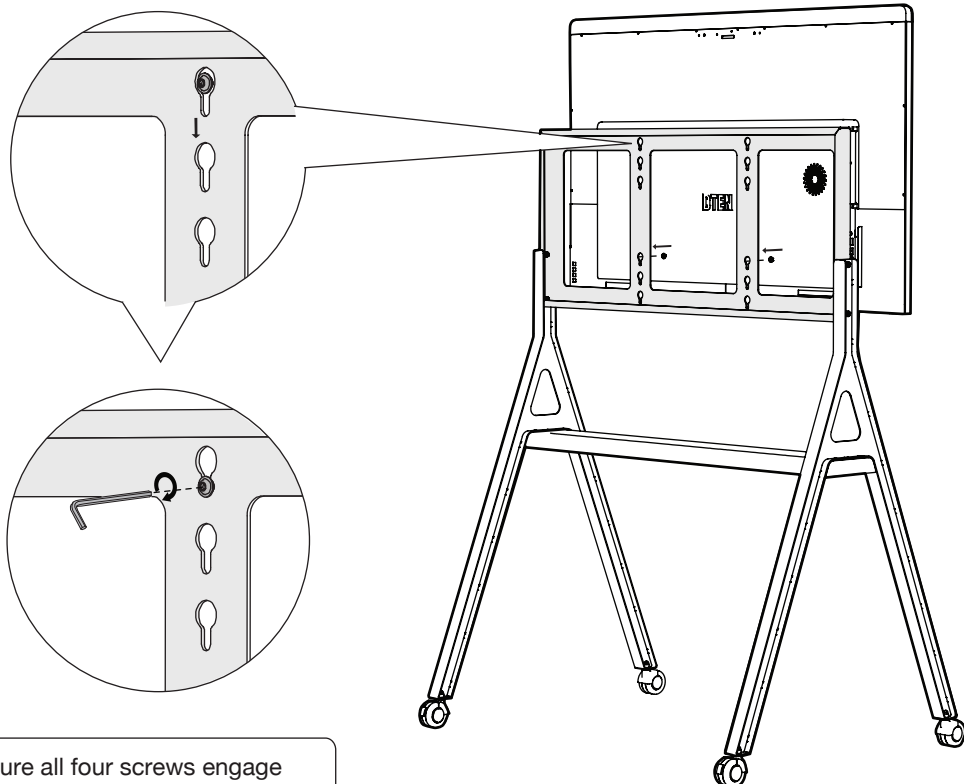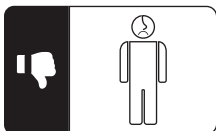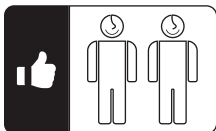


Ensure all four screws engage the keyholes

  
8 Route the power and Ethernet cables

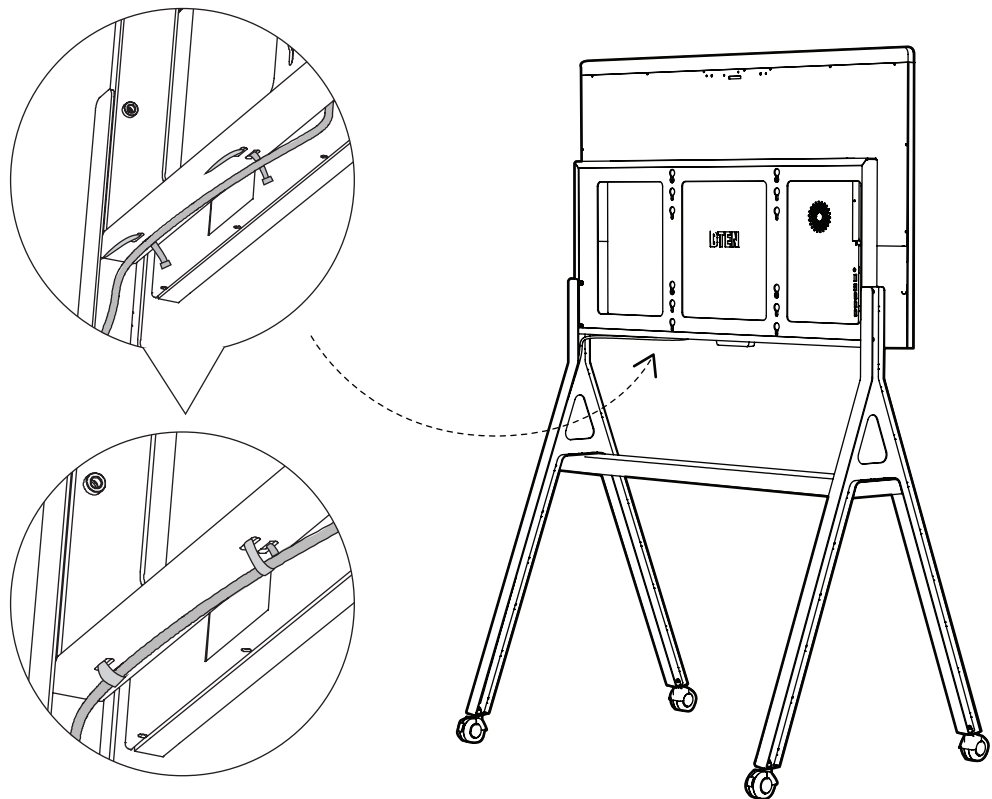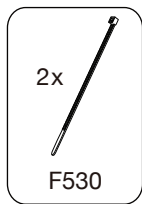


9 Install magnetic cable managers

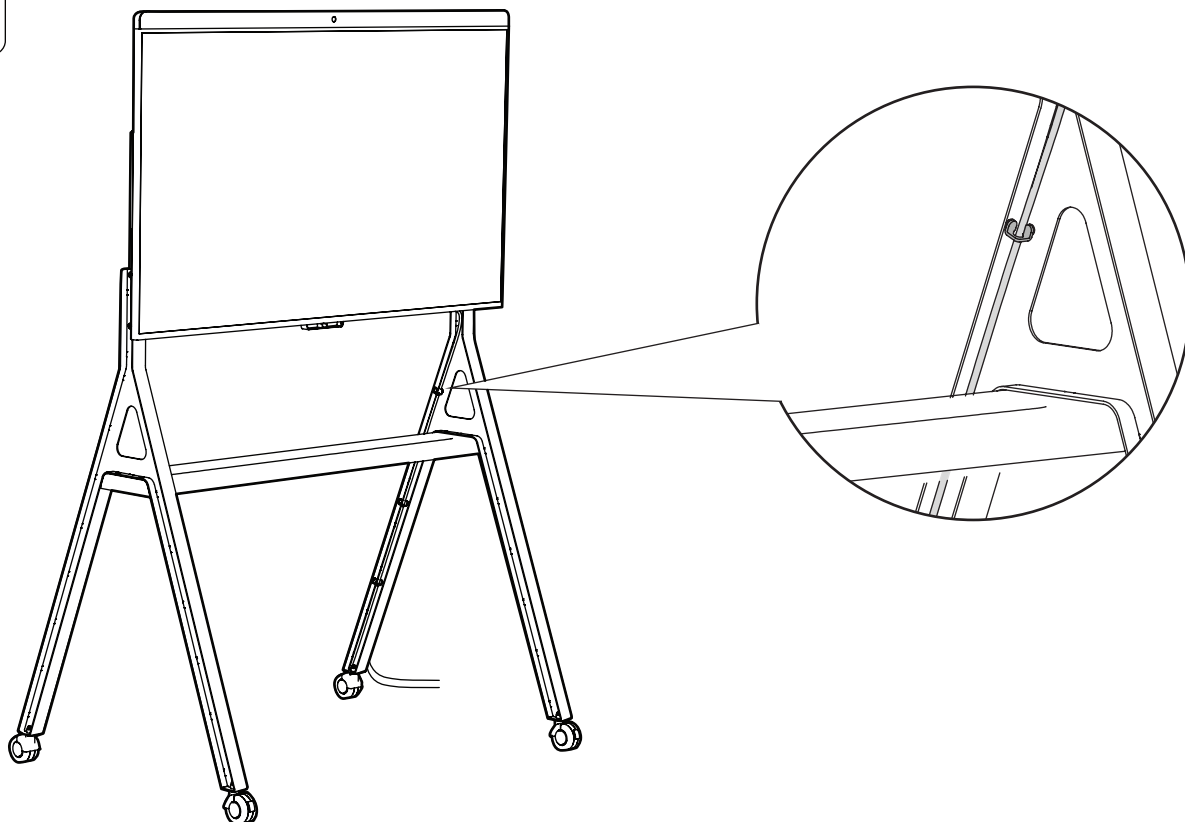 

10 Assembly complete

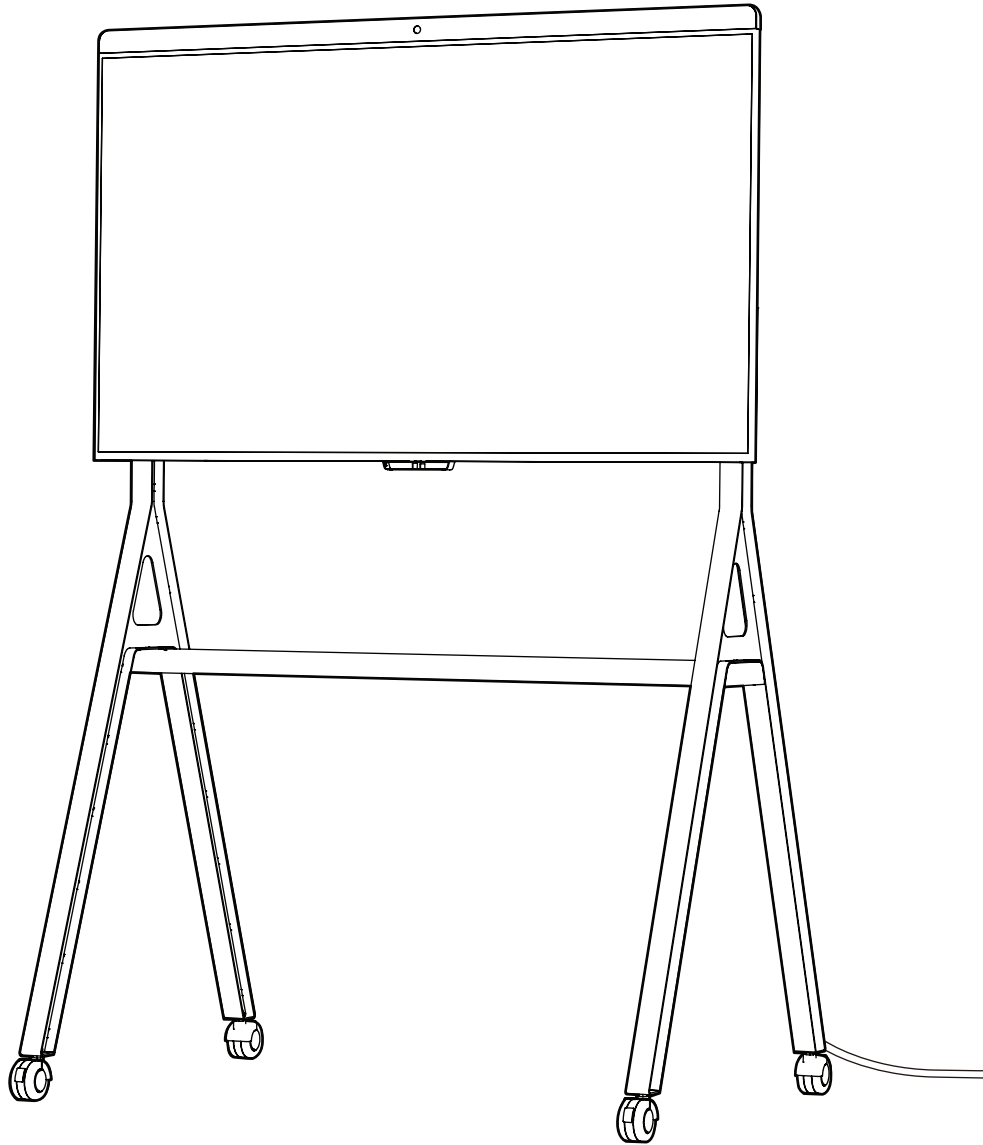 

 For any questions or issues, please
contact service@hecklerdesign.com.