

Helpline Monday to Friday
8.30am to 4.30pm on
01924 438238 **(Option 2)**

Insert the Memory Protection Batteries

 
- Press the printer '**OPEN**' button, located on the left hand side of the register below the printer section.
- Lift the printer arm where it says '**PUSH HERE**'.
- Press the clip and lift the cover off to remove the battery cover.
- Insert 3 x AA batteries.
- Replace the cover.




- Place the roll in the space under the printer arm.
- Feed the paper underneath, ensuring the excess is brought forward over the printer arm which will then close.
- Close the printer arm until it locks steadily.




- The printer can be used as either a customer receipt or manager audit. The setting for which is shown overleaf.
- If the roll is to be used as an audit wind on to the spool as shown opposite.



 - Insert the **OP** key (operator's key) and turn the key to the **REG** position.

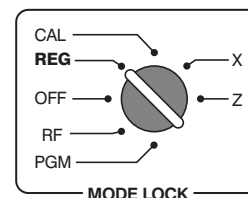

 - Enter the price of the goods without the decimal point and press one of the department buttons.

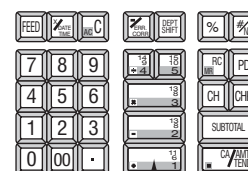

Department

i.e. £1 equals

1

0

0

.

- To enter another sale repeat as above by entering a price then a department button.
- Press the **SUBTOTAL** key **01** to show the amount due.

- If you would like to calculate change:

- Enter the value of money given by the customer.

i.e. £5.00 is entered as

5	0	0
---	---	---

.

(It is optional to enter the money given)

 
- Press the **CA/AMT TEND** key, or for non cash sales press **CHK** or **CH**.

If a cash value was entered, the amount of change due will be displayed on the screen.

The cash register has two reporting modes, one for printing out the information without clearing any figures, this is referred to as the **X Mode**.

The second is for printing and clearing the figures back to zero ready for the next day, this is referred to as the **Z Mode**.

- Insert the **PGM** key (program key) and turn to either the:

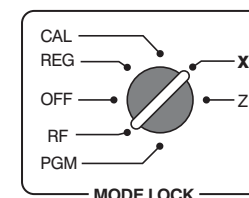

The **X** position to print without clearing **or**

Z position to print and clear sales.

Press one of the keys from the table below to print out the required report:

CA/AMT TEND		Daily End of Day Report
1	0	CA/AMT TEND Periodic End of Day Report

- Turn the key to the **REG** position for normal use.

Example - End of Day Report

Z	07-19-2003	19:35	0073
0000	DAILY	Z	0012
DEPT01	QT	46	
DEPT02	QT	50.10	
DEPT03	QT	76.40	
DEPT04	QT	76.00	
DEPT05	QT	76.00	
DEPT15	QT	4	
GROSS TOTAL	QT	318.46	
NET TOTAL	No	318.46	
CASH-INW	No	325.13	
CHARGE-INW	No	16.22	
TOY-AMT1	No	105.00	
TAX1	No	4.20	
RF-MODE TTL	No	0.50	
CALCULATOR	No	0.50	

Departments can be
named as shown
overleaf

 
Monetary Amounts

4 Print Style


Programming the Company Logo

The cash register can print a receipt header message of upto 5 lines, each with 24 letters per line.

- Insert the **PGM** key and turn to the **PGM** position.
 - Press **2** followed by the **SUBTOTAL** key.
 - Enter the line number you wish to program followed by the **CH** key.
- For example, enter **1 CH** for line 1, **2 CH** for line 2, etc.*
- Enter the text using the keyboard.
- 
- 

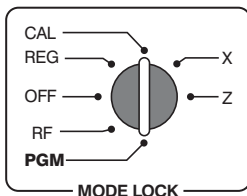

 As the keys are pressed, the letter will appear in the 'CHARACTER' display box.

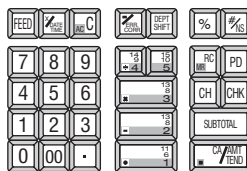

Keep pressing the key until the required letter appears.

Press the key twice to enter a space.

For example, to enter 'THANK YOU' press

2 4 4 8 6 6 5 5 → → 3 3 3 6 6 6 2 2

- Press **CA/AMT TEND** to save the text.
 - Press **SUB TOTAL** to finalise.
- Repeat the process for more lines.

Spool or Receipt Printing

Spool Printing

- Insert the **PGM** key and turn to the **PGM** mode.
- Press **1** then the **SUBTOTAL** key.
- Press **0** (for spool) **CH**, then the **SUBTOTAL** key.
- Turn the key to the **REG** position for normal use.

Receipt Printing

 
- Insert the **PGM** key and turn to the **PGM** mode.
- Press **1** then the **SUBTOTAL** key.
- Press **1** (for receipt) **CH**, then the **SUBTOTAL** key.
- Turn the key to the **REG** position for normal use.

5 Presetting Departments


Programming A Department Name

The cash register has 15 department keys which can be programmed with a name for analysing your sales.
i.e. Food and Non Food buttons.

- Insert the **PGM** key and turn to the **PGM** position.
- Press **2** then the **SUBTOTAL** key.
- Press the required key i.e. Dept 1-15.
- Enter the text using the keyboard.

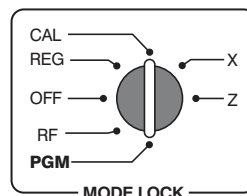

 As the keys are pressed, the letter will appear in the 'CHARACTER' display box. Keep pressing the key until the required letter appears.

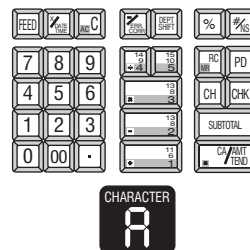

Press the  key twice to enter a space.

For example, to enter 'OPEN FOOD' press

6 6 6 1 9 9 6 6 → → 9 9 9 6 6 6 → 6 6 6 9

- Press **CA/AMT TEND** to save the text.
- Press **SUB TOTAL** to finalise.
- Repeat the process for further department keys.
- Turn the key to the **REG** position for normal use.

 
Programming a Department Price

- The fifteen department keys can be programmed with a preset price (if required).
 - Insert the **PGM** key and turn to the **PGM** position.
 - Enter **1** then the **SUBTOTAL** key.
 - Enter the item price without a decimal point.
- 01
1.25
- For example, for £1.25 enter **1** **2** **5** and press the department key.*
- Press the required department key.
 - Press the **SUBTOTAL** key to finalise.
 - Turn the key to the **REG** position for normal use.

6 Setting the Date & Time

Date _____

- Insert the **PGM** key and turn to the **PGM** position.
 - Press **1** then the **SUBTOTAL** key.
 - Enter the date in the format YYMMDD.
- For example, enter*
- 0 7 0 9 2 8** **2**
- (for 28th Sept. 2007).*
- Press the **X/DATE TIME** key.
 - Press the **AC C** key to finalise.

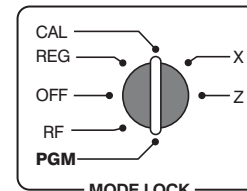


For example, enter

070928
(for 28th Sept. 2007).

28 - 09 - 07

Time

 - Insert the **PGM** key and turn to the **PGM** position.
- Press **1** then the **SUBTOTAL** key.
- Enter the time in the format HHMM.
- *For example, enter 1 5 3 0 (for 3.30pm).*
- Press the **X/DATE TIME** key.
- Press the **AC C** key to finalise.
- Turn the key to the **REG** position for normal use.

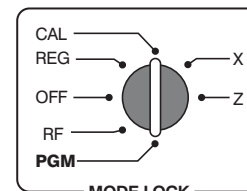

- For example, enter (for 3.30pm).

15 - 30

General Errors

Receipt not Printing

- Check the paper type is 57mm THERMAL paper.

In Constant Error

- Insert the **PGM** key.
- Turn the key to each position and press **AC C** key.
- Then press the **CA/AMT TEND** key.