

# Basic Manual



## A5511T

by TOSHIBA

**au** by KDDI

Contents/  
Getting Ready

Making and  
Answering Calls

Character Input

Phone Book

Pair Function

Mail

Camera

EZweb

EZ Navi Walk

EZ Television

Smart Mode

Others/Index

# Introduction

Thank you for purchasing the A5511T. Before using your A5511T, be sure to read the A5511T Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

## Printed Manuals for the A5511T (Japanese)

The A5511T comes with the Basic Manual and Instruction Manual.

### A5511T Basic Manual



Equivalent to this English PDF manual.

### A5511T Instruction Manual



English version is not available.

The following manual is also available on the au homepage.

- Keyword searchable au Online Manual

(<http://www.au.kddi.com/manual/index.html>)

You can also access the au Online Manual from EZweb.

<EZweb Access>  ⇒  Top Menu

⇒  料金・申込・インフォ (Charges, Applications, and Information)

⇒ auオンラインマニュアル (au Online Manual)

Read this barcode (QR code) for an easy access to au Online Manual. ▶



## Note

- The typeface and shape of fonts used for characters in the sample screens in this manual may differ from those used for characters in actual screens, or some characters may be omitted.


# Cell Phone Etiquette

## Etiquette for Cell Phone Use

- The cell phone always emits weak radio waves when power is on.
- Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

### ● The use of cell phones is not allowed in some places

- Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
- Using a cell phone in an aircraft is prohibited by law. Be sure to turn the cell phone off.

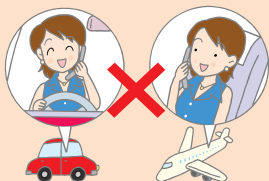

### ● Radio waves from cell phones may interfere with medical electrical equipment

- Some people close to you in busy places such as crowded trains may be using a pace-maker. Turn the cell phone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.



### ● Be considerate of where you use the cell phone and how loudly you talk

- Do not make calls from cinemas, theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode to prevent others around you from being inconvenienced by ring tones for incoming calls or mail.



- Do not use the cell phone in places where you will be in the way of others.
- Move to areas where you will not inconvenience others on trains or in hotel lobbies.
- Take care to avoid talking in a loud voice.



- Obtain the permission of other people before you take their photos with the cell phone's camera.




- Do not use the cell phone's camera for recording information in bookstores and other locations where taking photos is not permitted.

# Cell Phone Basics

## Cell Phone Features

### Mail

You can send mail to other cell phones and personal computers.

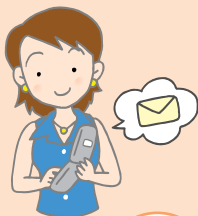

Page  
52

### Smart Mode

You can select a mode that allows simplified operation.


Page  
92

### Camera

You can take photos and movie clips and then send them easily by e-mail.



Page  
65

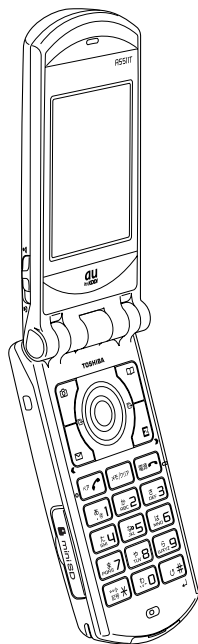

### EZ Television

You can watch TV and record TV programs.



Page  
84

### EZ Navi Walk

Map and voice information lets you know your current location and the route to your destination.

Page  
80

### EZweb

You can download "Chaku-Uta®," and access information sites.



Page  
73

## Manner Mode and Voice Memo

### Manner Mode

You can use manner mode to turn off the incoming call ring tone and other tones so as not to inconvenience other people.



When the standby screen is displayed, hold down  (side key 2) for at least one second.

Page

32

### Voice Memo

When you cannot answer calls, the cell phone can play an answering message (Japanese) and record memos.



When the standby screen is displayed, hold down  for at least one second.

Page

33

## Checking the Power, Signal Strength, and Battery Level

### Normally, you should leave the cell phone turned on



 
To make and receive calls, you need to turn on power.

Hold down  for at least one second.

Page

14

### If a signal is not being received, you cannot talk on the cell phone




Even in service areas, there are some places where it is difficult to receive a signal.

 indicates the signal strength.

Page

14

### Pay attention to the battery level

 

When the battery level is low, the cell phone may not function properly.

 indicates the battery level.

Page

14

## Do not use the cell phone while driving!

Holding a cell phone, talking on a cell phone, looking at a cell phone display to send mail or perform some other operation while driving is against the law in Japan.

(Revised Traffic Control Law, effective November 1, 2004)



× Looking at mail on a cell phone display.




× Holding a cell phone in your hand while talking.

## Turn off your cell phone or put it in Drive Mode while driving.

### Drive Mode

In Drive Mode, a Japanese message meaning "I'm driving now, so I can't answer your call." is played when a call is received, and the cell phone uses voice memo to record a message.

When the standby screen is displayed, press  (side key 2), use  to select  *Drive Mode*, and then press  (Select).

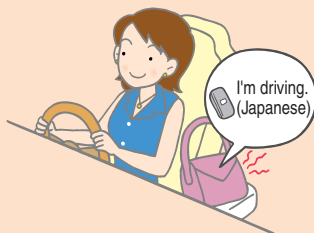

## Spam and One-ring Calls

### If you receive spam:

You can set the mail filters to reject only specific mail or mail indicated by 未承諾広告※ (Unsolicited Advertisement), which often tends to be spam.

The following mail filters are available for rejecting spam:

- ・ 未承諾広告フィルター  
(Unsolicited Advertisement Filter)
- ・ アドレスフィルター (Address Filters)
  - 指定拒否設定  
(for not receiving specific mail)
  - 指定受信設定  
(for receiving specific mail only)



Page

59

### If you receive a call from an unknown phone number:

It may be an attempt to get you to return a call to a service with very high charges.



| Incom History |             |      |       |  |
|---------------|-------------|------|-------|--|
| 01            | N           | 7/ 1 | 16:00 |  |
|               | 030002XXXX  |      |       |  |
| 02            |             | 6/30 | 15:35 |  |
|               | 030001XXXX  |      |       |  |
| 03            |             | 6/29 | 14:48 |  |
|               | Tom Daniels |      |       |  |
| 04            |             | 6/28 | 13:30 |  |
|               | 0900003XXXX |      |       |  |

 in the Incoming History indicates that there was a call which rang three seconds long or shorter.

Page

31

## About Disaster Bulletin Board

When a big scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be referred from anywhere in Japan through EZweb or Internet.

### Registering the safety information

- When a big scale disaster occurs, from au phone, you can register your safety information such as your condition or comments to the 災害用伝言板 (Disaster Bulletin Board) created on the EZweb.
- After the registration of your safety information, you can notify by e-mail your family or acquaintances you have previously designated that you registered your safety information on the 災害用伝言板 (Disaster Bulletin Board).

### Referring the safety information

- You can refer to the safety information of the person you want to know the information of by entering the phone number of the person from EZweb or Internet.\*

\*When you refer to the safety information from other carriers' cellphone (except for TU-KA), PHS or PC, you can refer to it from "<http://dengon.ezweb.ne.jp/>".

### Access

 →  Top menu → 災害用伝言板 (Disaster Bulletin Board)

<http://dengon.ezweb.ne.jp/>

## Top display of the Disaster Bulletin Board

災害用伝言板

伝言板トップ

～サービス提供中～  
安否情報の登録・確認ができます。

**登録** (ご利用可能地域の方のみ登録可能です)

確認  
削除  
お知らせメール設定  
サービス概要  
ご利用地域情報  
お問合せ

(C) KDDI/TU-KA Group

Select Browser

登録 for registration

## Safety information registration display

災害用伝言板

～登録～

被災状況  
☐ 無事です。  
☐ 被害があります。  
☐ 自宅に居ます。  
☐ 避難所に居ます。  
☐ コメント見て

コメント入力(全角100文字まで)

※登録内容確認画面にて、お客様の携帯電話番号および登録日時が表示されます。

登録

伝言板トップへ

(C) KDDI/TU-KA Group

Select Browser

## Safety information reference display

災害用伝言板

～確認～  
安否情報を確認したい相手のsu/ツーカー携帯電話番号を入力して下さい。

XXXXXXXXXXXX

検索する


伝言板トップへ

(C) KDDI/TU-KA Group

Select Browser

確認 for reference

- The maximum preservation period of the registered information is 72 hours.
- The maximum available number of each registration is 10. When the number of registration exceeds 10, old information will be overwritten in order of registration.
- The demonstration of this service can be referred to anytime by pressing → 1 Top menu → 8 料金・申込・インフォ (Charges, Applications, and Information) → 災害用伝言板(デモ版) (Disaster Bulletin Board (Demo version)).

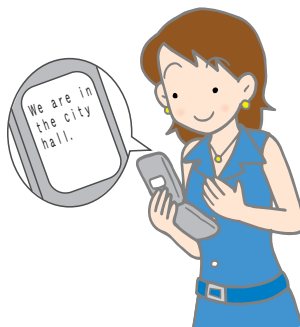

# Contents

|                                                                   |           |
|-------------------------------------------------------------------|-----------|
| ● <b>Introduction</b>                                             |           |
| ● <b>Cell Phone Etiquette</b>                                     | <b>1</b>  |
| Etiquette for Cell Phone Use .....                                | 1         |
| ● <b>Cell Phone Basics</b>                                        | <b>2</b>  |
| Cell Phone Features .....                                         | 2         |
| Manner Mode and Voice Memo .....                                  | 3         |
| Checking the Power, Signal Strength, and Battery Level .....      | 3         |
| Do not use the cell phone while driving! .....                    | 4         |
| Spam and One-ring Calls .....                                     | 5         |
| Disaster Bulletin Board Service .....                             | 6         |
| ● <b>Contents</b>                                                 | <b>8</b>  |
| ● <b>Getting Ready</b>                                            | <b>10</b> |
| Checking the Contents of the Box .....                            | 10        |
| Names of Parts .....                                              | 11        |
| Attaching the Noise Filter .....                                  | 12        |
| Charging the Battery Pack .....                                   | 13        |
| Built-in Antenna .....                                            | 14        |
| Turning On Power .....                                            | 14        |
| Learning the Basics .....                                         | 15        |
| Personal Identification Numbers and Passwords .....               | 17        |
| Configuring Initial Settings .....                                | 18        |
| Switching the Display Language to English .....                   | 19        |
| Using Menus .....                                                 | 20        |
| Indicators .....                                                  | 22        |
| Initializing E-mail and EZweb .....                               | 23        |
| Checking Your Phone Number and E-mail Address .....               | 24        |
| Changing Your E-mail Address .....                                | 25        |
| Using Extra Large Characters .....                                | 27        |
| ● <b>Making and Answering Calls</b>                               | <b>28</b> |
| Making a Call .....                                               | 28        |
| Answering a Call .....                                            | 29        |
| Redialing (Outgoing History/Incoming History) .....               | 30        |
| One-ring Calls .....                                              | 31        |
| Turning On Manner Mode .....                                      | 32        |
| Turning On Voice Memo .....                                       | 33        |
| Playing a Voice Memo .....                                        | 34        |
| Changing the Incoming Ring Tone .....                             | 35        |
| Adjusting the Incoming Ring Tone Volume .....                     | 37        |
| Adjusting the Earpiece Volume during a Call .....                 | 38        |
| ● <b>Character Input</b>                                          | <b>39</b> |
| Character Entry Modes .....                                       | 39        |
| Entering Single-byte Alphanumeric Characters .....                | 39        |
| Entering E-mail Addresses .....                                   | 41        |
| Entering Pictograms .....                                         | 43        |
| ● <b>Phone Book</b>                                               | <b>44</b> |
| Saving a Phone Book Entry .....                                   | 44        |
| Dialing from the Phone Book .....                                 | 46        |
| Editing Phone Book Entries .....                                  | 47        |
| Saving a Phone Number from the Incoming or Outgoing History ..... | 48        |

|                                                                          |           |
|--------------------------------------------------------------------------|-----------|
| <b>● Pair Function</b>                                                   | <b>49</b> |
| Registering a Pair Person .....                                          | 49        |
| Making a Call to a Pair Person .....                                     | 50        |
| Sending a Mail to a Pair Person .....                                    | 51        |
| <b>● Mail</b>                                                            | <b>52</b> |
| Using E-mail .....                                                       | 52        |
| Creating and Sending E-mail Messages .....                               | 53        |
| Reading Received E-mail Messages .....                                   | 56        |
| Reading an E-mail Message with an Attached Photo or Movie .....          | 58        |
| Rejecting Spam .....                                                     | 59        |
| Replying to Received E-mail Messages .....                               | 60        |
| Using C-mail .....                                                       | 62        |
| Creating and Sending C-mail Messages .....                               | 63        |
| Reading Received C-mail Messages .....                                   | 64        |
| <b>● Camera</b>                                                          | <b>65</b> |
| Camera Image Features .....                                              | 65        |
| Photo and Movie Shooting Tips .....                                      | 66        |
| Data Sizes .....                                                         | 67        |
| Taking a Photo .....                                                     | 68        |
| Recording a Movie .....                                                  | 69        |
| Viewing Photos or Movies .....                                           | 71        |
| Attaching Photos or Movies to E-mail Messages .....                      | 72        |
| Photo Mail Service .....                                                 | 72        |
| <b>● EZweb</b>                                                           | <b>73</b> |
| What is EZweb? .....                                                     | 73        |
| Accessing Sites .....                                                    | 74        |
| Viewing the EZ Top Menu .....                                            | 75        |
| Downloading Chaku-Uta® .....                                             | 76        |
| Bookmarking Frequently Accessed Pages .....                              | 78        |
| Viewing Bookmarked Pages .....                                           | 79        |
| Checking Charges .....                                                   | 79        |
| <b>● EZ Navi Walk</b>                                                    | <b>80</b> |
| EZ Navi Walk Features .....                                              | 80        |
| Using EZ Navi Walk .....                                                 | 82        |
| Registering Your Home Location .....                                     | 82        |
| Looking Up the Way Home .....                                            | 83        |
| <b>● EZ Television</b>                                                   | <b>84</b> |
| EZ Television Features .....                                             | 84        |
| Antenna .....                                                            | 86        |
| Watching TV by Connecting the Toshiba Flat-type Stereo Earphone 02 ..... | 86        |
| Watching TV by Connecting the External TV Antenna with a Clip .....      | 87        |
| Watching TV .....                                                        | 88        |
| Recording a TV Program .....                                             | 90        |
| <b>● Smart Mode</b>                                                      | <b>92</b> |
| Entering Smart Mode .....                                                | 92        |
| Exiting Smart Mode .....                                                 | 93        |
| Viewing the Smart Menu .....                                             | 94        |
| Saving a Phone Book Entry Using Smart Mode .....                         | 96        |
| Creating and Sending E-mail/C-mail Messages in Smart Mode .....          | 98        |
| Using the Camera in Smart Mode .....                                     | 100       |
| <b>● Other Functions</b> .....                                           | 102       |
| <b>● Troubleshooting</b> .....                                           | 103       |
| <b>● Index</b> .....                                                     | 104       |


# Getting Ready

## Checking the Contents of the Box




The box contains the cell phone and accessories.


- Cell phone

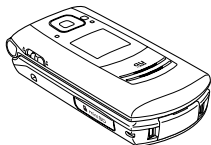

 
- Battery pack (attached to the cell phone)




- Desktop holder

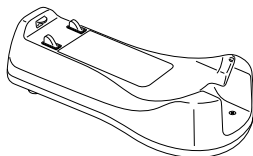

- Toshiba flat-type stereo earphone 02

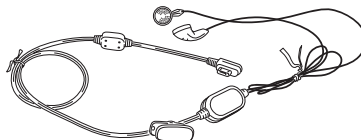

 
- External TV antenna with a clip [free sample]



- miniSD™ Memory Card/  
miniSD™ adapter [free sample]



 - TV stand [free sample]



- Noise filter [free sample]



- CD-ROM (Japanese)



- Basic Manual (Japanese)



- Instruction Manual (Japanese)






- Warranty (Japanese)
- Safety Precautions (Japanese)

### Note

- The AC adapter is not included. Be sure to purchase the Common AC adapter 01.

# Names of Parts

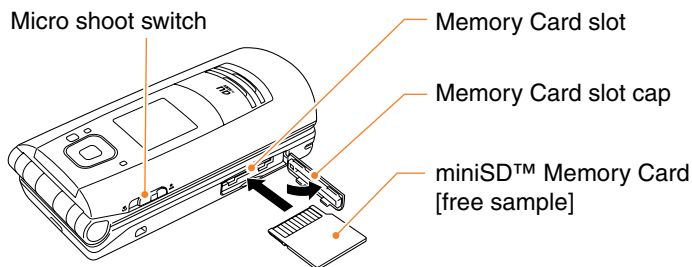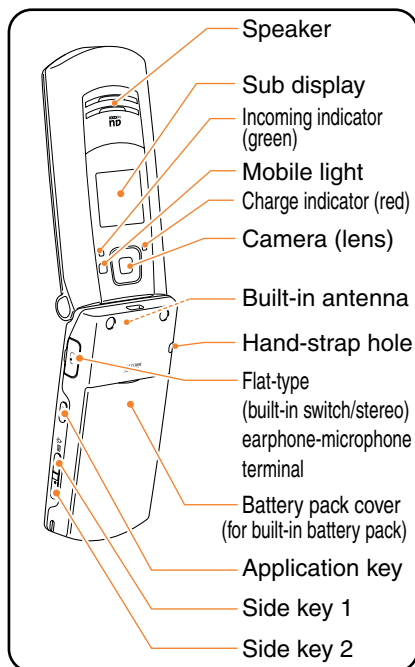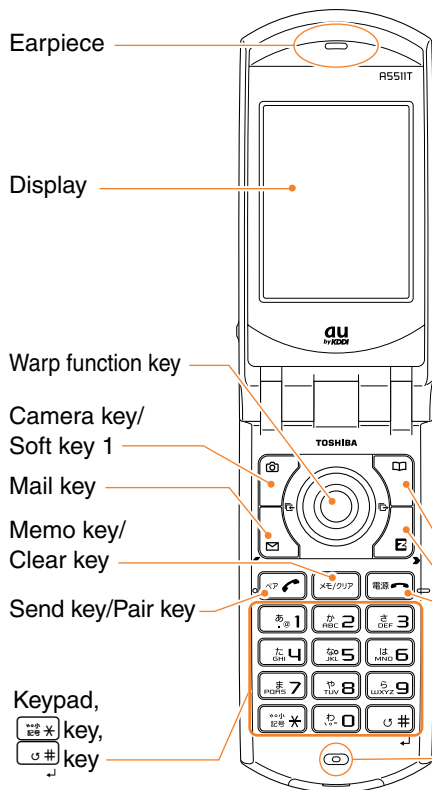

## Attaching the Noise Filter

When you watch EZ Television while charging the battery pack, be sure to attach the noise filter to the cord of the Common AC adapter 01 (option).

- 1 Release the stoppers on both sides to open the noise filter.




- 2 Wind the cord one turn around the noise filter.

- Attach the noise filter to the cord 3 cm apart from the Common AC adapter 01 (option).



- 3 Close the noise filter until it clicks.

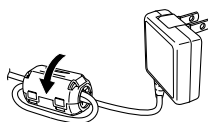

### Note


- Carefully handle the cord not to be caught in the noise filter when you close the filter. Forcefully closing the filter where the cable is caught may cause a failure.

## Charging the Battery Pack

The battery pack is not fully charged at the time of purchase.

Be sure to charge the battery pack before using the cell phone for the first time.

- The AC adapter is not included. Be sure to purchase the Common AC adapter 01.

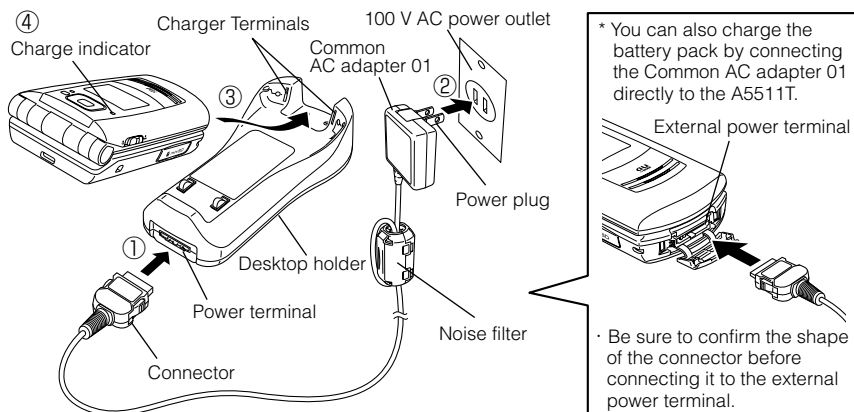

### 1 Connect the Common AC adapter 01 to the desktop holder.

- After you confirm the shape of the connector, connect the Common AC adapter 01 to the power terminal of the desktop holder.

### 2 Turn the Common AC adapter 01's power plug 90 degrees and connect it to a 100 V AC power outlet.

### 3 While the A5511T is closed with the battery pack attached, insert it into the desktop holder as shown in the figure.

### 4 Confirm that the charge indicator lights red.

- Charging: The charge indicator lights red.
- Charging finished: The charge indicator goes out.

If you turn on power to A5511T and charge the battery pack, A5511T beeps when it starts or finishes charging.

#### Note

- Hold the desktop holder while removing the A5511T.
- Hold the buttons on both sides of the connector while removing the connector of the Common AC adapter 01 from the desktop holder or A5511T.


## Built-in Antenna

The antenna of the A5511T is built into its case.

### Note

- Touching or covering the area around the built-in antenna may weaken a signal. In particular, do not affix any stickers or other decorations in the area around the built-in antenna.


Built-in antenna

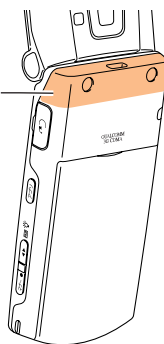

## Turning On Power

1

Hold down  for at least one second.

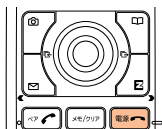

Check the signal strength.


|                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|  |  |  |  |  |
| Strong                                                                            | Medium                                                                            | Weak                                                                              | Very weak                                                                         | Out of range                                                                      |

• You cannot receive or make calls if  is displayed.

Check the battery level.

|                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |  |  |
| Full                                                                                | Low                                                                                 | Very low<br>(requires charging)                                                     | Empty                                                                               | Charging                                                                            |

Standby screen

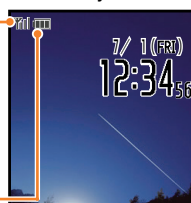

## Turning Off Power

Hold down  for at least one second.

# Learning the Basics

## Key Assignments


 : Incoming History

 : Camera

 : E-mail

 : Make and receive calls; use the Pair function

 ~ 、、  
: Phone number and character input

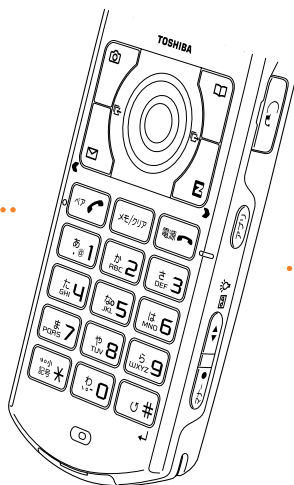

 : Outgoing History

 : Phone Book

 : EZweb

 : Voice memo setting/cancel; character delete; operation cancel


 : Power on/off; end call

 : EZapps startup

 : Mobile light on/off


 : Manner mode

 : Micro shoot switch

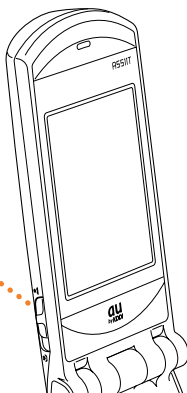

## Warp Function Key


Use the up, down, left, and right parts of the key to select items and to move the cursor. Press the center of the key to confirm a selected item.

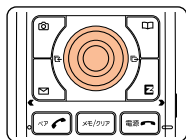

|  |                                                               |
|--|---------------------------------------------------------------|
|  | Selects items, and moves the cursor up, down, left and right. |
|  | Confirms the selected item or starts the selected operation.  |

## Soft Keys


When indications such as the following are displayed at the bottom of the display, you can press the corresponding soft keys to perform the indicated operations. The soft key indications vary depending on the screen.

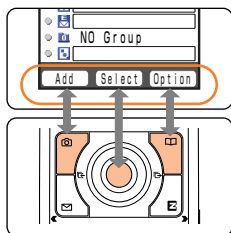

|                |                                                                      |
|----------------|----------------------------------------------------------------------|
| Soft key 1<br> | Performs the operation indicated at the bottom left of the screen.   |
| Center key<br> | Performs the operation indicated at the bottom center of the screen. |
| Soft key 2<br> | Performs the operation indicated at the bottom right of the screen.  |

## If you lose track of where you are or if you make a mistake...

Perform one of the following operations when you lose track of where you are or if you make a mistake while operating the cell phone.

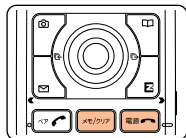

|  |                                 |
|--|---------------------------------|
|  | Returns to the previous screen. |
|  | Returns to the standby screen.  |

## Personal Identification Numbers and Passwords

You can use the personal identification numbers and passwords described below to restrict use of your A5511T.

Take care not to forget numbers and passwords, because they are required for performing various operations and using subscription services.

### PIN

|                 |                                                                                                                                                                                                                                                                                                    |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Usage Examples  | ①Remotely operating the answering service and call forwarding service from a regular phone.<br>②Making inquiries, applications, and changes while using au Customer Service Center voice guidance, au web pages, and EZweb.<br>③Changing various settings from <i>Other Setup</i> of E-mail Setup. |
| Initial Setting | The four-digit number you wrote on your subscription form.                                                                                                                                                                                                                                         |

### Lock No.

|                 |                                                   |
|-----------------|---------------------------------------------------|
| Usage Examples  | Changing various settings of the cell phone, etc. |
| Initial Setting | 1234 (four digits)                                |

### EZ Password


|                 |                                                                                  |
|-----------------|----------------------------------------------------------------------------------|
| Usage Examples  | Concluding/canceling subscriptions for EZweb fee-based content.                  |
| Initial Setting | The number (four digits) specified when first subscribing for fee-based content. |

### Premium EZ Password


|                 |                                                                                                                                                                                                                   |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Usage Examples  | ①Concluding/canceling subscriptions for EZweb fee-based content paid by using まとめてau支払い (Combined au Payment Service).<br>②Purchasing products from EZweb sites that use まとめてau支払い (Combined au Payment Service). |
| Initial Setting | The number (four to eight digits) specified the first time you use まとめてau支払い (Combined au Payment Service).                                                                                                       |

# Configuring Initial Settings


- 1** When the standby screen is displayed, press .

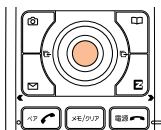

Initial menu

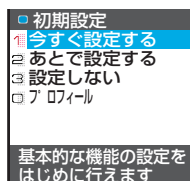

- 2** Press  **設定しない (Do Not Setup).**

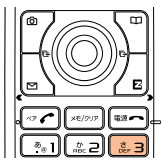

Launcher menu



## Note

- Even if you do not configure the initial settings, you can still make and answer calls.
- The initial settings include changing the lock number, setting the character size, setting the Notify Call ID, and setting the call ring tone.
- You need to configure initial settings before using the cell phone for the first time only. Furthermore, you can also change each of the initial settings later.
- After configuring initial settings, you can switch the display language to English (see page 19).
- If you select **設定しない (Do Not Setup)**, the initial settings are as shown below.

|           |             |                         |             |
|-----------|-------------|-------------------------|-------------|
| Lock No.  | 1234        | EZweb                   | Small font  |
| Telephone | Medium font | Character Input         | Medium font |
| E-mail    | Medium font | Notify Call ID          | ON          |
| C-mail    | Medium font | Incoming Call Ring Tone | Pattern 1   |

# Switching the Display Language to English



You can switch the display language for function names and other items to English.

- 1** When the standby screen is displayed, press .

→The Launcher menu appears.





- 2** Use  to select **機能** (Function) and then press  (**選択 [Select]**).

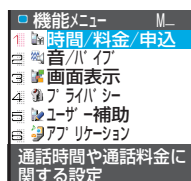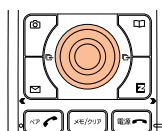


- 3** Press  **画面表示 (Display)**.

→The 画面表示 (Display) menu appears.

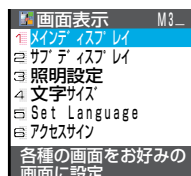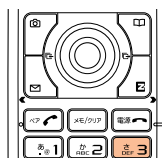



- 4** Press  **Set Language**.

→The Set Language menu appears.

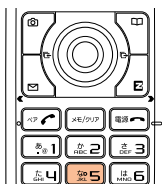


## Switching the Display Language to English (continued)

- 5** Use  to select *English* and then press  (Select).

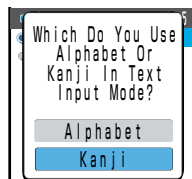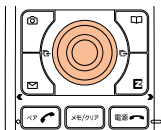

- 6** Use  to select *Alphabet* and then press  (Select).


→ The display language is set to English.

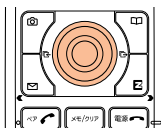

## Using Menus

### Launcher Menu


The Launcher menu provides you with access to various A5511T functions. The Launcher menu contains the following items.

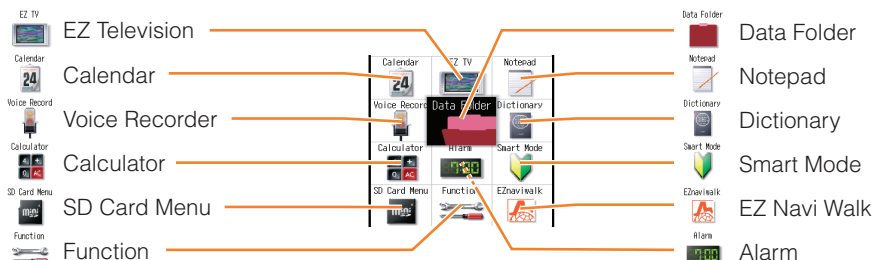

- 1** When the standby screen is displayed, press .




## 2 Use to select an item.

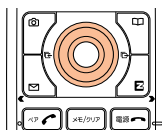

## 3 Press (Select).

→ The item selected in the Launcher menu appears.

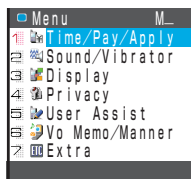

### Note


- If the alert window is displayed on the standby screen, select  *Launcher Menu* and then press  to display the Launcher menu.

Alert Window



## Option Menus


An Option menu for performing various related operations will open if you press  when **Option** is displayed in a screen for configuring function settings, entering characters, or performing other operations.

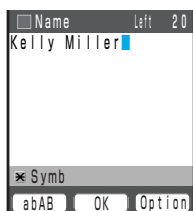

 (Option)



 (Close)

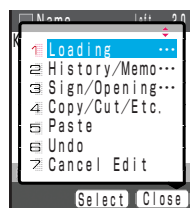


## Indicators

Display indicators keep you informed when new e-mail arrives, about the status of function settings, etc.



| Indicator | Description                                            |
|-----------|--------------------------------------------------------|
| ①         | Indicates signal strength.                             |
| ②         | Indicates battery level.                               |
| ③         | Indicates that EZweb is in use.                        |
| ④         | Indicates a call is in progress.                       |
| ⑤         | Indicates that EZapps is in use.                       |
| ⑥         | Indicates an unanswered call.                          |
| ⑦         | Indicates the current date and time.                   |
| ⑧         | Indicates that manner mode is turned on.               |
| ⑨         | Indicates that voice memo or manner mode is turned on. |
| ⑩         | Indicates that the miniSD™ Memory Card is inserted.    |

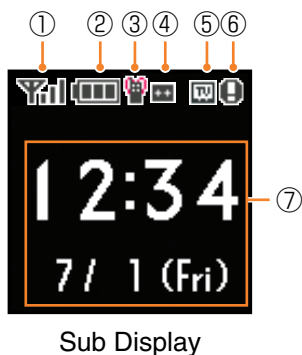

| Indicator | Description                                                |
|-----------|------------------------------------------------------------|
| ①         | Indicates signal strength.                                 |
| ②         | Indicates battery level.                                   |
| ③         | Indicates that the manner mode is turned on.               |
| ④         | Indicates that the voice memo or manner mode is turned on. |
| ⑤         | Indicates that EZ Television is displayed.                 |
| ⑥         | Indicates new mail or an unanswered call.                  |
| ⑦         | Indicates the current date and time.                       |

### Note

- The date and time are set automatically.
- The layout and content of screens in this manual are only for the purpose of explanation and contain some indicators that cannot appear at the same time.

## Initializing E-mail and EZweb

To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

Also, before use, be sure to configure initial settings. Your e-mail address is assigned automatically when you initialize e-mail and EZweb.

- 1 When the standby screen is displayed, press .



EZwebを利用するための初期  
設定を行います  
[OK]を押してしばらくお待ち  
ください

OK

- 2 Press  (OK).

➔After a short while, the screen shown to the right will appear. This indicates that the setup is complete.




Welcome to EZweb.  
Your e-mail address is:  
XXXXXXXXXXXX@ezweb.ne.  
jp

-Hint-  
If you want to change  
your e-mail address, push  
OK and enter a new e-mail  
address at e-mail menu ->  
e-mail setting -> others.

- 3 Press  (OK).

➔The E-mail Menu appears.

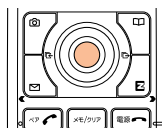



### Note

- You can also configure initial settings by pressing  or .

# Checking Your Phone Number and E-mail Address


- When the standby screen is displayed, press  and then press .

→ Your phone number and e-mail address appear.

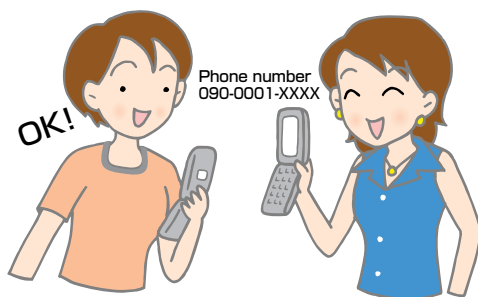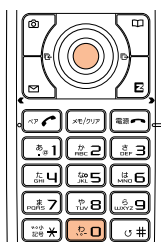


# Changing Your E-mail Address

You can change the account name part of the e-mail address as indicated to the right.

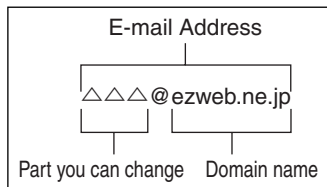

- When the standby screen is displayed, press and then press **E-mail Setup**.

→The E-mail Setup menu appears.

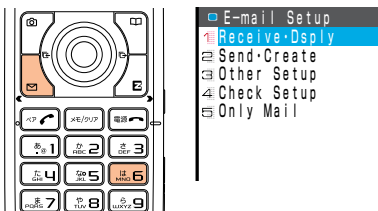

- Press **Other Setup**, use to select **Yes**, and then press (OK).


→The cell phone connects to the server.



- Use to select **Eメールアドレスの変更** (Change E-mail Address), press (Select), use to select the entry box, and then press (Edit).



- Enter your PIN, press (OK), use to select **送信** (Send), press (Select), use to select **承諾する** (Accept), and then press (Select).

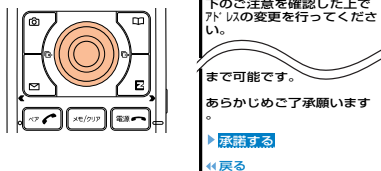


- Your PIN is the four-digit number you wrote on your subscription form.
- Any time the wrong PIN is entered three times during a single day, the e-mail address change operation will be disabled until the following day.

## Changing Your E-mail Address (continued)

- 5** Use  to select the entry box, press  (Edit), and enter an e-mail address using single-byte alphanumeric characters.


• For details on entering e-mail addresses, see page 41.

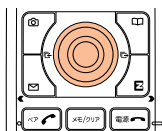

みこ入力ください。  
? Eメールアドレは半角英数字20  
文字まで入力可能です。  
記号は「.」「\_」のみ使用可能  
です。「.」は連続して利用し  
たり、最初と最後には利用  
できません。最初に数字の  
「0」を使用することはできま  
せん。

@@@web.ne.jp

- 6** Press  (OK), use  to select 送信 (Send), and then press  (Select).

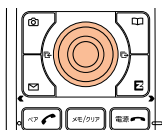

文字まで入力可能です。  
記号は「.」「\_」のみ使用可能  
です。「.」は連続して利用し  
たり、最初と最後には利用  
できません。最初に数字の  
「0」を使用することはできま  
せん。

@@@web.ne.jp

送信 リセット




新しいメールアドレスは  
@@@web.ne.jp  
です。  
よろしいですか？

アドレスを変更した場合は変更  
前のアドレスを再度利用するこ  
とはできません。

OK キャンセル

- 7** Use  to select OK and then press  (Select).

• Check that the e-mail address has been updated and then press  (OK).

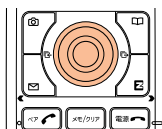

Update is complete.

## Note

- Your e-mail address will not be changed if the address you enter above is already being used. If this happens, enter a different e-mail address.

## Using Extra Large Characters



Turning on extra large characters will display the names of callers and addressees on the Call Screen, the phone book list, etc.

- 1 When the standby screen is displayed, press .

→The Launcher menu appears.





- 2 Use  to select *Function* and then press  (Select).

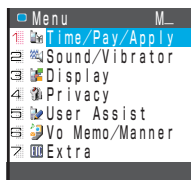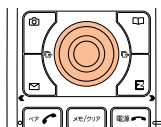



- 3 Press  *Display*.

→The Display menu appears.

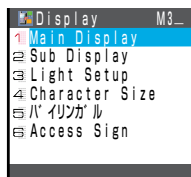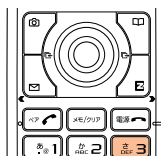


- 4 Press  *Character Size*.

→The Character Size menu appears.

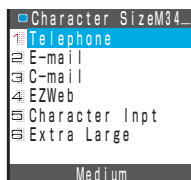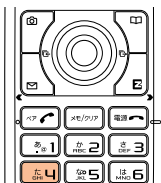

- 5 Press  *Extra Large*, use  to select *ON*, and then press  (OK).

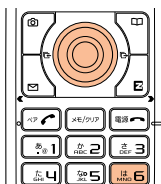

# Making and Answering Calls

## Making a Call

- 1** When the standby screen is displayed, use  to  to enter the phone number you want to call.





030001XXXX

- When calling to a regular phone, you also need to enter the area code even in the same area.

- 2** Press .

- If the caller's phone number and name are in the phone book, the name is also displayed.
- When you have finished the call, press .

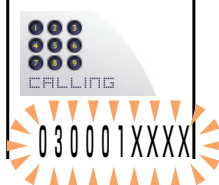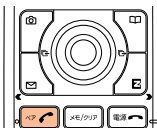


### Note

- After you enter a phone number, you can add 184 or 186 to the phone number if you press , press , and then press  184 or  186.
  - Select  184 if you do not want to inform the party you are calling of your phone number.
  - Select  186 if you want to inform the party you are calling of your phone number.

# Answering a Call

**1** To answer the call, press .

- When you have finished the call, press .

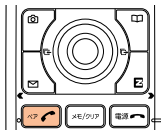

## Display When a Call is Received

The phone number of the caller appears.

If the caller's phone number and name are in your phone book, the name is also displayed.

When the phone number of the caller is not displayed, one of the following indicators may appear.

| Indicator   | Meaning                                                   |
|-------------|-----------------------------------------------------------|
| ID Unsent   | The caller did not send a Caller ID.                      |
| Pay Phone   | The call is from a pay phone.                             |
| Not Support | The call is from a phone that does not support Caller ID. |



## Missed Call Notification

If you did not answer a call,  and  Call are displayed to let you know that you missed a call.

To check the caller's phone number, use  to select

 Call and then press . You can then return the call (see page 30).





## Redialing (Outgoing History/Incoming History)

Example: Returning a call to a phone number in the incoming history


### 1 When the standby screen is displayed, press .

- Pressing  while the standby screen is displayed displays the Outgoing History screen.
- The phone numbers are displayed in order of the most recent to the oldest.

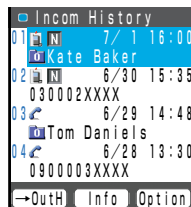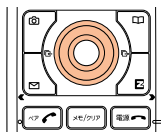

### 2 Use to select the phone number you want to call and then press (Info).

- If you press  (→OutH), the Outgoing History screen will be displayed.

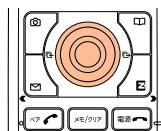

### 3 Press (Call) or .



#### Note

- The cell phone can store up to 20 phone numbers in each of the incoming history and outgoing history in order of the most to least recent.


## One-ring Calls

### What is a One-ring Call?

A one-ring call is a call from an unknown caller that only rings once, causing it to be stored in the incoming history. One-ring calls are often used to get the receiver to return the call, which will connect you to a dating service or some other service that charges caller at high rates.

### One-ring Indicator

 indicator on the display indicates you have received a one-ring call (a call rang for three seconds or shorter) and the call is marked with **Absnt** on the incoming history screen. Be careful when you return a call to an unknown caller.

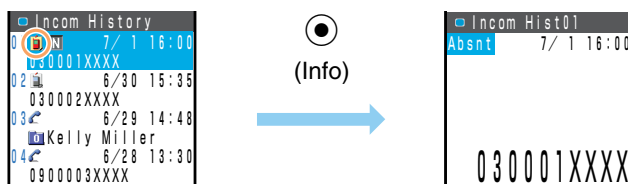

## Turning On Manner Mode

The cell phone informs you of a call by vibrating.

- 1 When the standby screen is displayed, hold down  (side key 2) for at least one second.


➔ This turns on manner mode, and displays  and  on the standby screen. This also turns on voice memo, which is indicated by  on the standby screen.



## Turning Off Manner Mode

When the standby screen is displayed, hold down  (side key 2) for at least one second.

➔ Turning off manner mode causes  and  to disappear from the standby screen. Voice memo is also turned off, which is indicated by  disappearing from the standby screen.

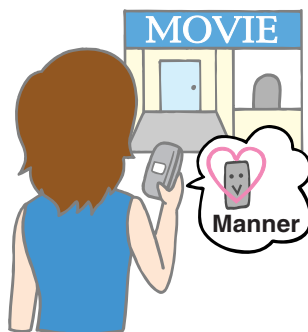



### Note

- The cell phone will continue to emit the record start/end tone and shutter sound during camera use even when manner mode is turned on.

## Turning On Voice Memo

**1** When the standby screen is displayed, hold down  for at least one second.

→ The answering message (Japanese) is played, then voice memo is turned on, which is indicated by  on the standby screen.

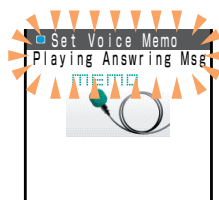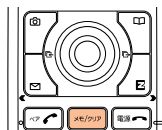

## Turning Off Voice Memo

When the standby screen is displayed, hold down  for at least one second.

→ Voice memo is turned off and  disappears from the standby screen.



## Note

- The cell phone can record a maximum of three messages, each up to 30 seconds long.
- The cell phone can record up to a total of three call voice memos. A call voice memo is for recording the voice of the other party during a call.
- Voice memo is a function that automatically answers calls and allows callers to record messages. Use the answering service when your phone is turned off or when you are in a location where a signal cannot be received.

## Playing a Voice Memo



### If a voice memo is recorded

➔  *Memo* and the number of memos appear on the standby screen.




**1** Use  to select  *Memo* and then press .

➔ The Play Voice Memo list appears.

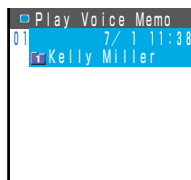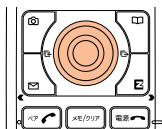

**2** Use  to select the voice memo you want to play and then press  (Play).

• To stop the voice memo, press  (Stop).

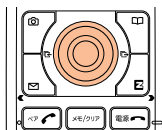

### Deleting a Voice Memo

On the Play Voice Memo list, use  to select the voice memo you want to delete.

➔ Press  (Option) and then press  *Delete*.



➔ Use  to select *Delete One* and then press  (Select).

➔ Use  to select *Yes* and then press  (OK).



# Changing the Incoming Ring Tone

- 1 When the standby screen is displayed, press .

➔The Launcher menu appears.

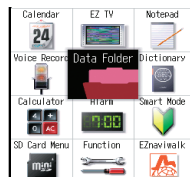
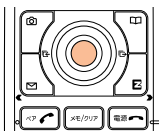


- 2 Use  to select *Function* and then press  (Select).

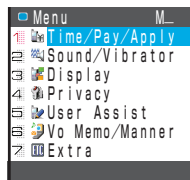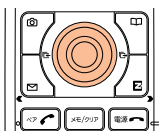



- 3 Press  *Sound/Vibrator*.

➔The Sound/Vibrator menu appears.

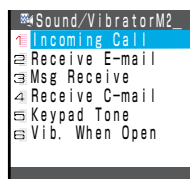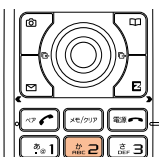



- 4 Press  *Incoming Call*.

➔The Incoming Call menu appears.

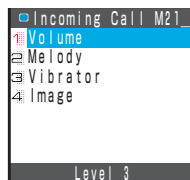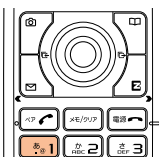

- 5 Press  *Melody*.



➔The Melody menu appears.

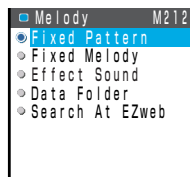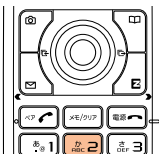

## Changing the Incoming Ring Tone (continued)



- 6** Use  to select *Fixed Pattern* and then press  (Select).

→The Fixed Pattern menu appears.

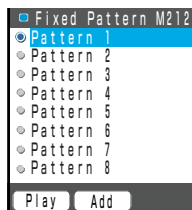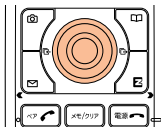

- 7** Use  to select *Pattern 3* and then press  (Play).

- If you press  (Back) or , the tone stops playing and you can select another tone.

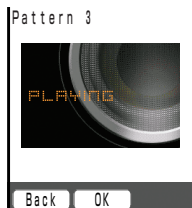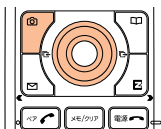

- 8** Press  (OK).

→The incoming ring tone is set.



### Note

- You can select from among fixed patterns, fixed melodies, effect sounds, data folder contents, and EZweb search for your ring tone.
- The initial default setting is the *Pattern 1* fixed pattern.



# Adjusting the Incoming Ring Tone Volume

- 1 When the standby screen is displayed, press .

→The Launcher menu appears.





- 2 Use  to select *Function* and then press  (Select).

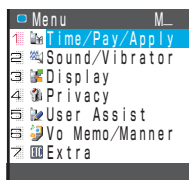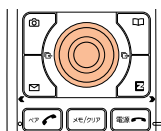


- 3 Press  *Sound/Vibrator*.

→The Sound/Vibrator menu appears.

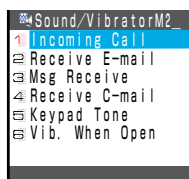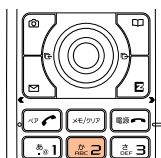



- 4 Press  *Incoming Call*.

→The Incoming Call menu appears.

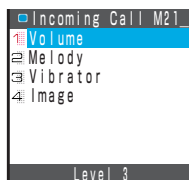


- 5 Press  *Volume*.

→The screen for adjusting the incoming call ring tone appears.

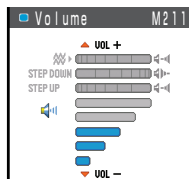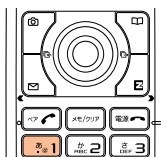

## Adjusting the Incoming Ring Tone Volume (continued)

**6** Use  to adjust the volume and then press  (OK).

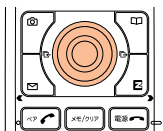

- Each press of  changes the volume one step.

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                                                                                     |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|                                                                                                                                                                                                                                                                                                                                                                                   | After a vibration alert, the ring tone sounds while gradually increasing in volume. |
| STEP DOWN                                                                                                                                                                                                                                                                                                                                                                                                                                                          | The ring tone sounds while gradually decreasing in volume.                          |
| STEP UP                                                                                                                                                                                                                                                                                                                                                                                                                                                            | The ring tone sounds while gradually increasing in volume.                          |
|  Maximum<br> ↑<br> Standard<br> ↓<br> Minimum | The ring tone sounds at the set volume.                                             |
|  (Silent)                                                                                                                                                                                                                                                                                                                                                                         | The incoming ring tone does not sound.                                              |

- Keep on pressing  to set Silent (.

## Adjusting the Earpiece Volume during a Call



During a call, you can use Loud Volume or adjust the earpiece volume to one of five levels (1 to 5).

**1** During a call, press .

→ The Speaker Volume screen appears.


: Increases the volume.

: Decreases the volume.

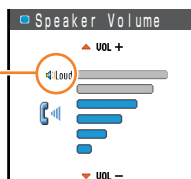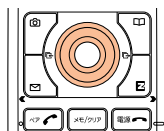

Turning on  Loud (Loud Volume) will increase the volume of the earpiece output to make it easier to hear.

**2** Press  (OK).

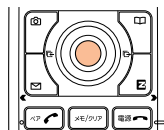

### Note

- Loud Volume can be used only during a call.




# Character Input

## Character Entry Modes

When a character entry screen is displayed, you can select the character entry mode if you press .

### Menu Items

- Kanji : Kanji conversion mode
- a A : Double-byte alphanumeric mode
- abAB : Single-byte alphanumeric mode
- 1 2 : Double-byte number mode
- 1234 : Single-byte number mode

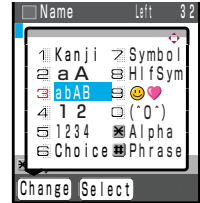

Use to select a character entry mode and then press (Select).

## Entering Single-byte Alphanumeric Characters

You can use the keys to to enter characters. More than one character is assigned to each key.

For example, each press of changes the displayed character to the next character assigned to the key in the order of a ⇒ b ⇒ c ⇒ A ⇒ B ⇒ C ⇒ 2. The following table shows the key assignment for entering characters.

|     | Number of Times to Press the Key                                                        |   |   |   |   |   |   |   |   |    |    |    |
|-----|-----------------------------------------------------------------------------------------|---|---|---|---|---|---|---|---|----|----|----|
| Key | 1                                                                                       | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
|     | .                                                                                       | @ | — | — | / | : | ~ | ? | , | '  | !  | 1  |
|     | a                                                                                       | b | c | A | B | C | 2 |   |   |    |    |    |
|     | d                                                                                       | e | f | D | E | F | 3 |   |   |    |    |    |
|     | g                                                                                       | h | i | G | H | I | 4 |   |   |    |    |    |
|     | j                                                                                       | k | l | J | K | L | 5 |   |   |    |    |    |
|     | m                                                                                       | n | o | M | N | O | 6 |   |   |    |    |    |
|     | p                                                                                       | q | r | s | P | Q | R | S | 7 |    |    |    |
|     | t                                                                                       | u | v | T | U | V | 8 |   |   |    |    |    |
|     | w                                                                                       | x | y | z | W | X | Y | Z | 9 |    |    |    |
|     | 0                                                                                       |   |   |   |   |   |   |   |   |    |    |    |
|     | Single-byte symbols (switches an unconfirmed character between uppercase and lowercase) |   |   |   |   |   |   |   |   |    |    |    |
|     | Adds a line break and displays characters in the opposite order                         |   |   |   |   |   |   |   |   |    |    |    |

When you change your e-mail address, you cannot use the characters in for the account name (part of the address to the left of @).

### Note


- Before you enter single-byte alphanumeric characters, switch to the single-byte alphanumeric mode.

## Entering Two or More Characters Assigned to the Same Key


After you enter the first character, press  to move the cursor () to the right and then enter the next character.

Example: Entering "ab"


Press  once.

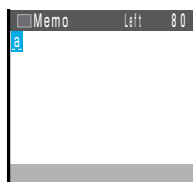

Press  once.

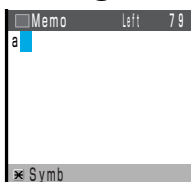

Press  twice.

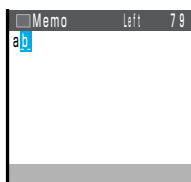

## Deleting Characters

To delete one character at a time, move the cursor to the character you want to delete and then press . To delete all characters to the right of the cursor, hold down  for at least one second. If there are no characters to the right of the cursor, holding down  will delete all the characters.

## Starting a New line

Press .

### Note

- Certain functions such as c-mail does not support entering new lines.

# Entering E-mail Addresses

## E-mail Address Compatible Characters

- Before you enter an e-mail address, switch to single-byte alphanumeric mode.
- For the account name (part to the left of @), you can enter up to 20 single-byte alphanumeric and symbol characters. Note the following points.
  - Two or more periods (.) cannot be used in succession.
  - Zero (0) cannot be used as the first character.


## How to Enter E-mail Addresses

Use  to  to enter characters and numbers.

Example: Entering "taro.23@toshiba.co.jp" for the recipient's e-mail address

### 1 Enter "taro.23".

- t : Press  once.  
a : Press  once.  
r : Press  three times.  
o : Press  three times.  
.: Press  once.  
2 : Press  and then press  once.  
3 : Press  and then press  once.

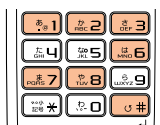


### 2 Enter "@".

- @ : Press  twice.





### 3 Enter "toshiba" and then press (OK).

- t : Press  once.  
o : Press  three times.  
s : Press  four times.  
h : Press  twice and then press .  
i : Press  three times.  
b : Press  twice and then press .  
a : Press  once.

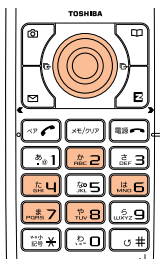


**4** Press  (abAB) and then press  **Phrase**.

→ The category list appears.

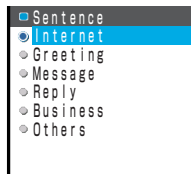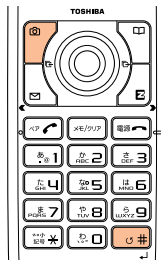


**5** Use  to select *Internet* and then press  (Select).

→ The sentence list appears.

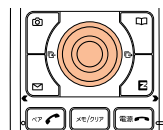

**6** Use  to select *.co.jp* and then press  (Select).

→ ".co.jp" is entered.

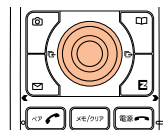



## Note

• To enter ".co.jp" etc., you can use the Sentence menu.

# Entering Pictograms


## 1 When a character entry screen is displayed, press (abAB).

- ➔ The character entry mode menu appears.
  - You can also enter symbols, emoticons, and useful sentences (fixed text) from the character entry mode menu.

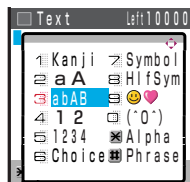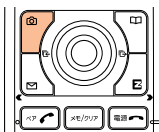


## 2 Press .

- ➔ The Pictogram screen appears.
  - You can switch the Pictogram screen by category, such as Face, if you press  or .

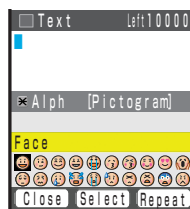

## 3 Use to select the pictogram you want to enter and then press (Select).

- ➔ This enters the pictogram.
  - You can enter pictograms consecutively if you press  (Repeat) instead of  (Select).
  - Pictograms are not displayed properly on non-au cell phones, personal computers, and other devices.

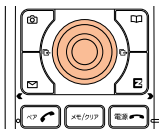


# Phone Book

## Saving a Phone Book Entry





Hold down  for at least one second.

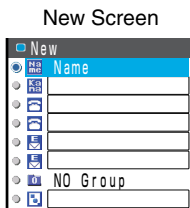

## Phone Book

**1** Use  to select **Na** (Name) and then press  (Select).

➡The Name entry screen appears.

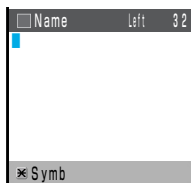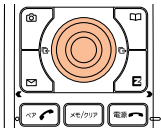

**2** Enter a name and then press  (OK).


➔ The  (Reading) for the name is entered automatically.

- For details on entering characters, see page 39.




**3** Use  to select  (Tel. #1) and then press  (Select).

➡The Tel. #1 entry screen appears.

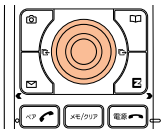

**4** Enter a phone number and then press  (OK).



- ➔ The Tel. #1 Class menu appears.
- If the phone number is for a regular phone, enter the phone number starting with the area code.

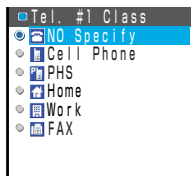

- 5** Use  to select a phone number class and then press  (Select).



➔The New screen reappears.

- Follow the next two steps to enter an e-mail address. If you do not want to enter an e-mail address, proceed to Step 8.

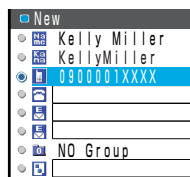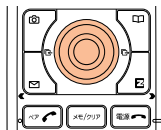

- 6** Use  to select  (E-mail 1) and then press  (Select).



➔The E-mail 1 entry screen appears.

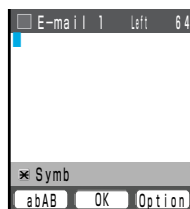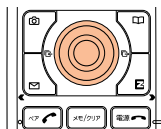

- 7** Enter the e-mail address, press  (OK), select a class, and then press  (Select).

➔The New screen reappears.

- For details on entering e-mail addresses, see page 41.

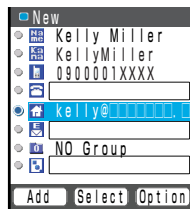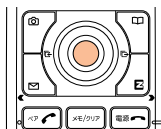

- 8** Press  (Add) and then press  (Add).

➔This saves the data to memory No. 000.




## Note


- The cell phone automatically saves a maximum of 500 entries to the lowest available memory number from 000 to 499.
- You can save two phone numbers and two e-mail addresses for each phone book entry.
- You can also assign a group, and enter address, birthday, URL, and other information.

## Dialing from the Phone Book


- 1 When the standby screen is displayed, press  to display the phone book name list.

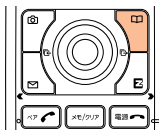

- 2 Use  to select the entry containing the phone number you want to dial and then press  (Select).

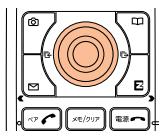


- 3 Press .

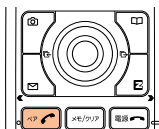



## Editing Phone Book Entries



Select the entry you want to edit, press (Select).

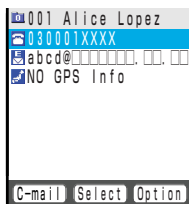


- 1 Press (Option) and then press *Edit*.

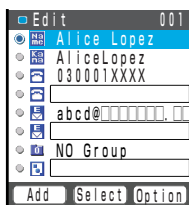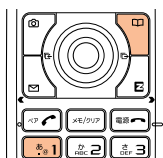

- 2 Edit the contents and then press (Add).





- 3 Use to select *Overwrite* and then press (OK).

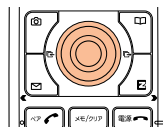



## Saving a Phone Number from the Incoming or Outgoing History

Example: Saving a phone number from the incoming history to the phone book


- When the standby screen is displayed, press  and use  to select the phone number you want to save.

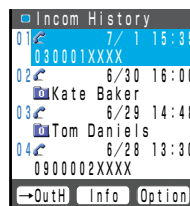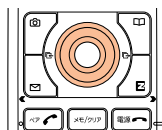

- Press  (Option) and then press  *Add to Ph Book*.

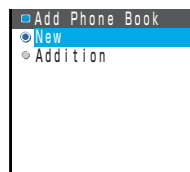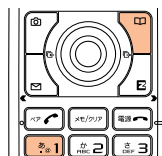

- Use  to select *New* and then press  (Select).

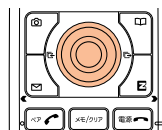

- For details on saving a phone book entry, see page 44.
- To open the Outgoing History screen for saving a phone number to the phone book, press  in Step 1.



# Pair Function

You can register a maximum of five pair persons you contact often to easily call or send mail.

## Registering a Pair Person

- 1 When the standby screen is displayed, press .



→ The pair person screen appears.

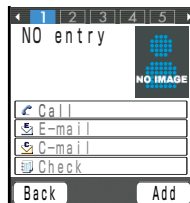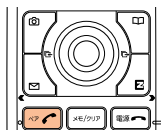

- 2 Use  to select the *NO entry* screen and then press  (Add).

→ The Add•Change menu appears.



- If you select the already-registered pair person, you can either select *Edit* to change the pair person or select *Cancel* to cancel the pair person.

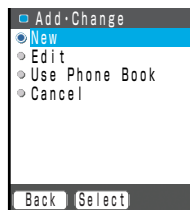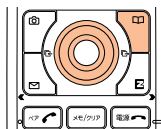

- 3 Use  to select *New* and then press  (Select).

→ The New screen appears.

- You can also use  to select *Use Phone Book* to register a pair person.

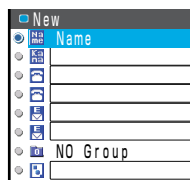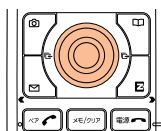

- 4 Perform the procedure under "Saving a Phone Book Entry" on page 44.


### Note

- The member that you register in the Pair function is also registered in the phone book.
- When you delete the phone book registered in the pair person, the phone book is also deleted from the Pair function.


# Making a Call to a Pair Person

**1** When the standby screen is displayed, press .

→ The pair person screen appears.

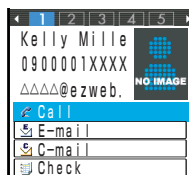


**2** Use  to select the person you want to call.

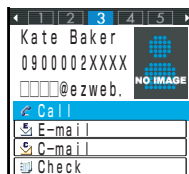

**3** Use  to select *Call* and then press  (Select).

- When you select *Check*, you can confirm the registered contents including the phone number.

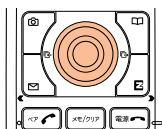


## Note

- Even if the multiple of phone numbers and e-mail addresses are registered in the phone book, you can only use the phone number and e-mail address specified in *Tel. #1* and *E-mail 1*.



## Sending a Mail to a Pair Person

**1** When the standby screen is displayed, press .

→ The pair person screen appears.

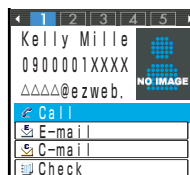


**2** Use  to select the person you want to send a mail.

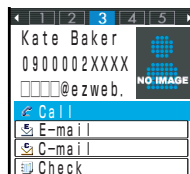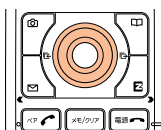


**3** Use  to select *E-mail* or *C-mail* and then press  (Select).

- To create an e-mail message, see "Creating and Sending E-mail Messages" on page 53. To create a c-mail message, see "Creating and Sending C-mail Messages" on page 63.
- To confirm the registered contents of the pair person, select *Check*.

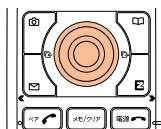


Create Mail screen  
(for e-mail)

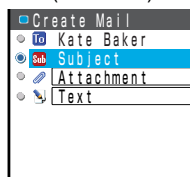

## Using E-mail

To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, be sure to configure initial settings.

You can send and receive e-mail with another cell phone that supports e-mail, or with a computer. In addition to text messages that can contain up to 5,000 double-byte characters, you can also send photos and movies by e-mail.


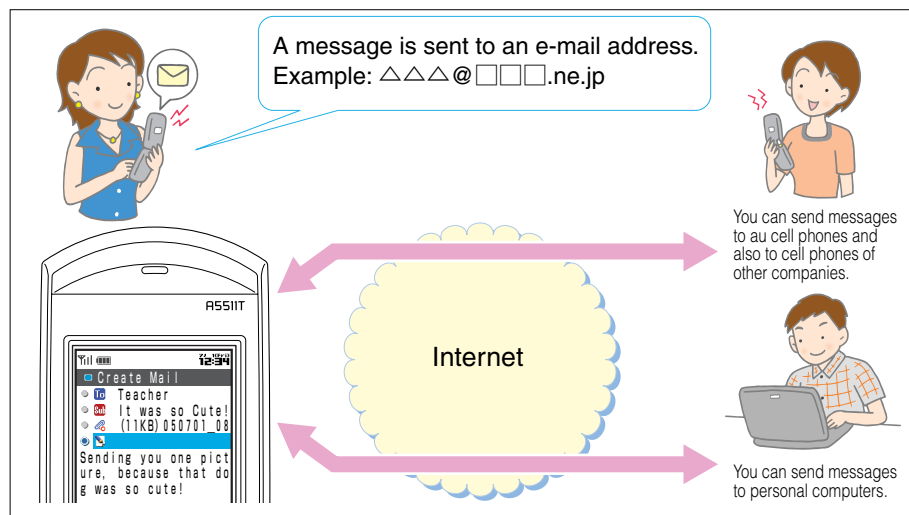


- \* You can send an e-mail message to up to five different addressees at one time.
- \* You can send up to 1,000 e-mail messages per day (a message with multiple recipients is counted as more than one message).

# Creating and Sending E-mail Messages



- 1** When the standby screen is displayed, press  and then press  *Create New*.

➡The Create Mail screen appears.

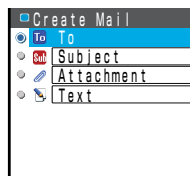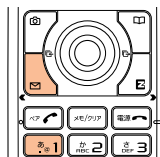

- 2** Use  to select *To* and then press  (**Select**).


➡The Address List screen appears.

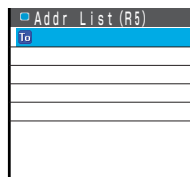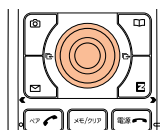

- 3** Press  (**Option**) and then press  *Use Phone Book*.



➡The phone book name list appears.

- You can specify up to 5 addresses for the To, Cc, and Bcc fields.


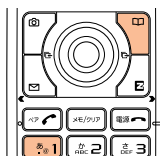


Mail

- 4** Use  to select an addressee, press  (**Select**) and then press  (**OK**).

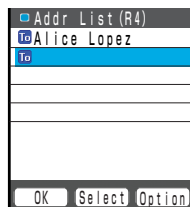
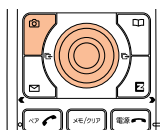


- 5** Press  (**OK**).

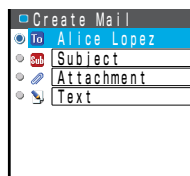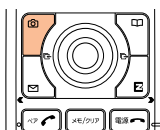



## 6 Use to select *Subject* and then press (Select).

→The Subject entry screen appears.

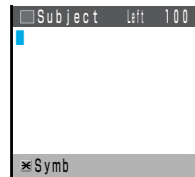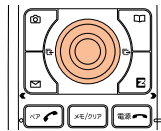



## 7 Enter a subject and then press (OK).

- You cannot enter single-byte Japanese characters or a new line in a subject.

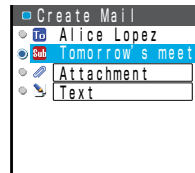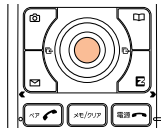



## 8 Use to select *Text* and then press (Select).

→The Text entry screen appears.

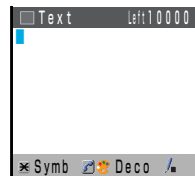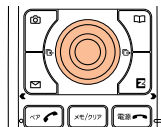



## 9 Enter the text of the message and then press (OK).

- You cannot enter single-byte Japanese characters in the text of a message.

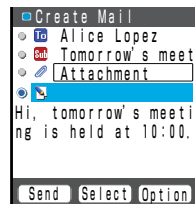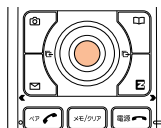


## 10 Press (Send).

➡The Way of Send menu appears.

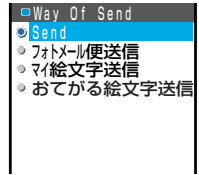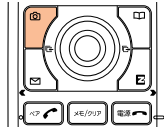

## 11 Use to select *Send* and then press (Select).

➡The animation for sending e-mail is displayed and the e-mail message is sent.

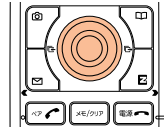

### Note

- You can also display the Sent History (Outgoing History) and use it to select an addressee, or enter the e-mail address directly.

# Reading Received E-mail Messages



## When you receive an e-mail message

➔ "E-mail" appears on the standby screen along with the number of messages received.



**1** Use  to select  *Email* and then press .

➔The Inbox opens.

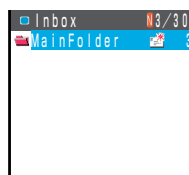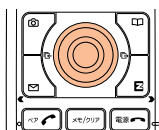


### Indicators

 : Indicates a folder containing a new message.

**2** Press  (Select).

➔The Main Folder opens.

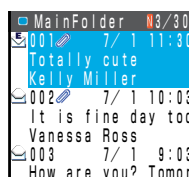

### Indicators


 : Indicates a read message.

 : Indicates an unread message.


 : Indicates a message that has an attachment.

**3** Use  to select the new message and then press  (Select).

➔You can read the message.

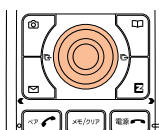

# Viewing a Received Message

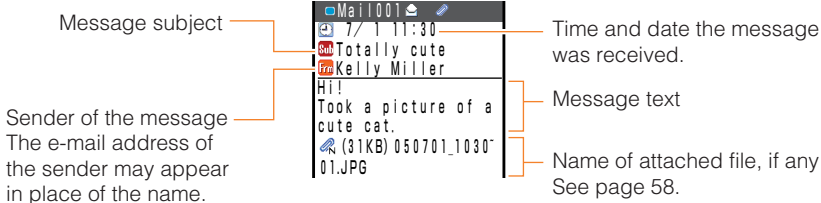


## Note

- The procedure may differ depending on the e-mail settings.

## Changing the Text Size

While an e-mail message is displayed, you can press **アプリ** to temporarily change the size of the displayed text (One-touch Text Size Switching).

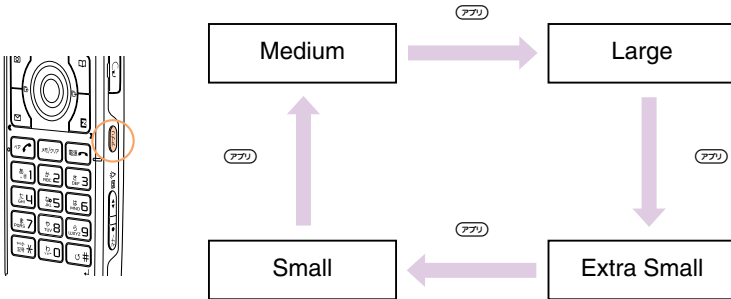


## Reading an E-mail Message from the E-mail Menu

When the standby screen is displayed, press **メール** to display the E-mail Menu and then press **2** *Inbox*.

### Indicators

**X/X** : The number on the right of the indicator indicates the number of unread messages.

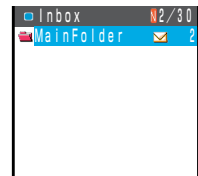

For other operations, see "Reading Received E-mail Messages" (Steps 2 and 3 on page 56).

## Reading an E-mail Message with an Attached Photo or Movie


Example: Viewing an attached photo

**1** Display the e-mail message (page 56).



**2** Use  to select the file name and then press  (Rcv).

→ This receives the photo.

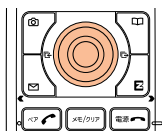

**3** Press  (Play).



### Note

- Some files will already be displayed on the screen in Step 1, while other files will require that you select the file name, and then press  (Play) (Step 2). It depends on the file size.

# Rejecting Spam

The setting of mail filters to reject spam is recommended.

## Setting Mail Filters

When the standby screen is displayed, press .

➡ Press  **E-mail Setup**.

➡ Press  **Other Setup**.

➡ Use  to select **Yes** and then press  (OK) to connect to the server.

➡ Use  to select **メールフィルター (Mail Filter)** and then press .


➡ Use  to select the entry box and then press  (Edit).

➡ Enter your PIN and then press  (OK).

• Your PIN is the four-digit number you wrote on your subscription form.

➡ Use  to select **送信 (Send)** and then press  (Select) to display the mail filter setting screen.

Mail Filters Setting screen

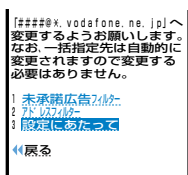

## Unsolicited Advertisement Filter and Address Filters

### 1. 未承諾広告フィルター (Unsolicited advertisement filter)

Rejects mail that has a subject containing the expression "未承諾広告※" (Unsolicited Advertisement).

### 2. アドレスフィルター (Address filters)

|         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 全受信     | All mail is received.                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 指定受信設定  | This setting lets you specify sources from which messages can be received. You can select Internet and cell phone domain options (一括指定) and enter e-mail addresses, domains, and account names (part of the address to the left of @) individually (個別指定).                                                                                                                                                                                                                         |
| 指定拒否設定  | This setting lets you specify sources from which messages will be rejected. Enter e-mail addresses, domains, and account names (part of the address to the left of @) individually.                                                                                                                                                                                                                                                                                                |
| なりすまし規制 | This setting lets you reject messages that appear to come from cell phones or PHS phones, but actually do not. You can use なりすまし規制 (Block Impostor) in combination with 全受信 (Receive All), 指定受信設定 (Receive Specific Mail Only), and 指定拒否設定 (Reject Specific Mail) settings. If you select the 規制する (Restrict) option while 全受信 (Receive All) is selected, for example, only messages made to appear like they come from cell phones or PHS phones, when they do not, are rejected. |

\* You can also configure a list of specific e-mail addresses for mail rejection after configuring 指定受信設定 (Receive Specific Mail Only).



## Note

• You can also prevent spam by changing your e-mail address. For details on changing your e-mail address, see page 25.

# Replying to Received E-mail Messages


- 1 When the standby screen is displayed, press  and then press  **Inbox**.

→The Inbox opens.

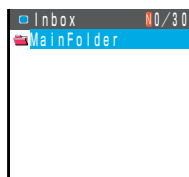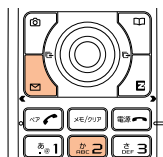


- 2 Press  (**Select**).

→The Main Folder opens.

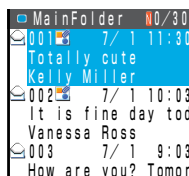



- 3 Use  to select the message you want to reply to and then press  (**Select**).

→You can read the message.

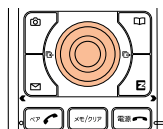


- 4 Press  (**Reply**).

→The Create Mail screen appears. "Re:" is prefixed to the subject, and the text of the message is quoted.

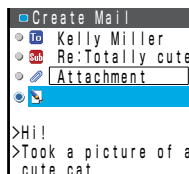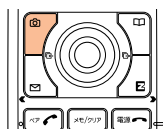


- 5** Refer to "Creating and Sending E-mail Messages" (Steps 8 and 9 on page 54) and enter the text of the message.

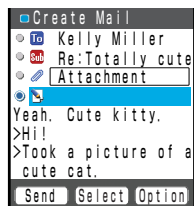


- 6** Press  (Send).

→The Way of Send menu appears.

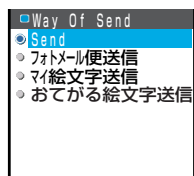

- 7** Use  to select *Send* and then press  (Select).


→The animation for sending e-mail is displayed and the e-mail message is sent.

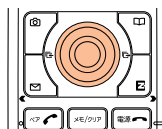

## Using C-mail

C-mail is a service that makes it possible to exchange messages between two au cell phones that support c-mail. A c-mail message can contain up to 50 double-byte (or 100 single-byte) characters.

Subscribers in the Kanto and Chubu areas do not need a separate subscription to use c-mail. For subscribers located outside of these areas, a separate subscription is required.

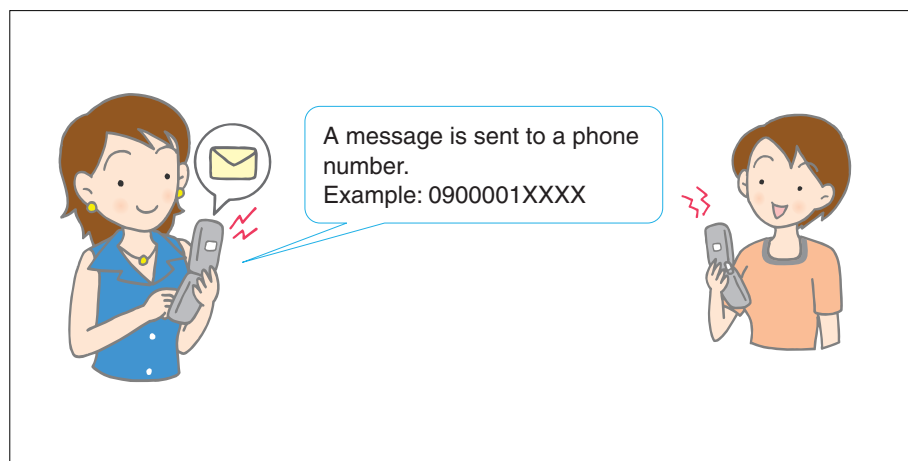

## C-mail Safe Block Function


C-mail safe block function is a function that allows you to reject to receive c-mails that include accessing URL (<http://△△△>, <https://△△△>) or phone numbers in the c-mail message text.

C-mail safe block function is valid by default. You can cancel the setting if you want to receive c-mails that include accessing URL or phone numbers in the message text.

# Creating and Sending C-mail Messages


- 1** When the standby screen is displayed, hold down  for at least one second, and then press  **Create New**.

➔The Text entry screen appears.

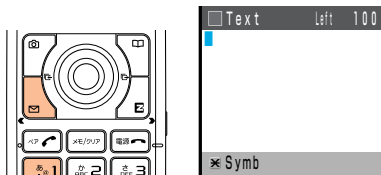


- 2** Enter the text of the message and then press  (**OK**).

➔The To menu appears.

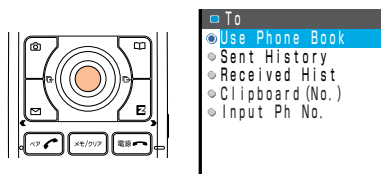


- 3** Use  to select **Use Phone Book** and then press  (**Select**).

➔The phone book name list appears.

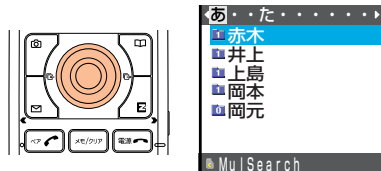


- 4** Use  to select an addressee and then press  (**Select**) twice.

➔The Create Mail screen appears.

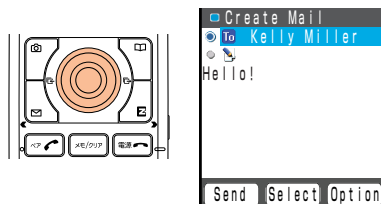

- 5** Press  (**Send**).

➔The animation for sending c-mail is displayed and the c-mail message is sent.

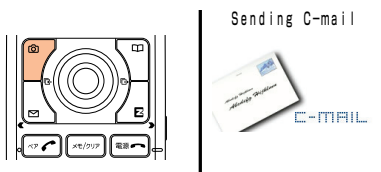

## Note

- You can also display *Sent History* (Outgoing History) or *Received Hist* (Incoming History) and use it to select a recipient or enter the phone number directly.

# Reading Received C-mail Messages

Received c-mail messages are saved to the Inbox.



## When you receive a c-mail message

→ "Cmail" appears on the standby screen along with the number of received messages.



**1** Use to select Cmail and then press .

→ The Inbox opens.

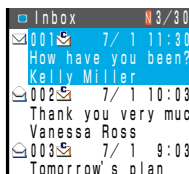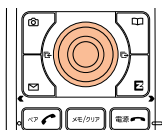



## Indicators

: Indicates a read message.

: Indicates an unread message.

**2** Use to select the new message and then press (Select).

→ You can read the message.

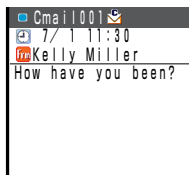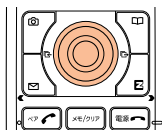


## Reading a C-mail Message from the C-mail Menu

When the standby screen is displayed, hold down for at least one second to display the C-mail Menu, and then press *Inbox*.

## Indicators

X/X : The number on the right of the indicator indicates the number of unread messages.

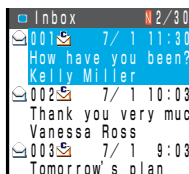

Use to select the message you want to read and then press (Select).

# Camera

Your cell phone has a mega pixel camera (1,300,000 pixels available) that you can use to shoot photos (snapshots) and movies. It also has a self-timer for taking photos.

You can use images you record for the standby screen, and you can attach them to e-mail messages.


## Camera Image Features

### Using Images




You can use images for screens such as the standby screen and call screen, and you can include them in phone book entries.

### Sending Images

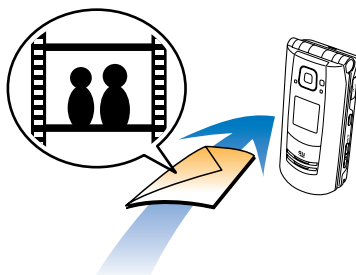

You can attach images up to 280 KB in size to e-mail messages.

### Captured Images

 

Printed out



Displayed on PC

By using the miniSD™ Memory Card, you can send recorded images to the personal computer or printer.

### Displaying/Printing Images

#### Note

- It may take time to send e-mail messages due to radio wave conditions.


## Photo and Movie Shooting Tips

When shooting photos (snapshots) or movies, frame the subject within the display or sub display and hold the A5511T steady with both hands to avoid shaking.

### Taking a Photo


#### Photo Mail, Wallpaper, and Multiple Modes

Orient the A5511T so  appears in the upper right of the display.

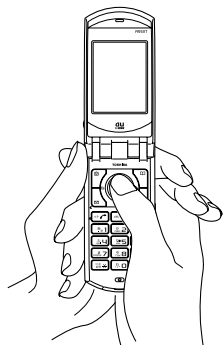

#### VGA and SXGA Modes

Orient the A5511T so  appears in the upper left of the display.

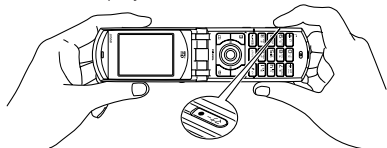


Orient the A5511T sideways when taking the photo.

#### While the Cell Phone is Closed

This feature is mainly for taking photos of yourself.

Orient the A5511T so  appears in the upper right of the sub display.

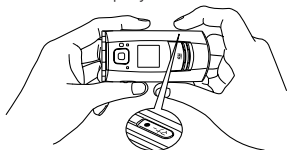


\* The illustration shows how the camera is held when taking with VGA or SXGA mode.

### Recording a Movie

#### Recording a Movie

Orient the A5511T so  appears in the upper left of the display.

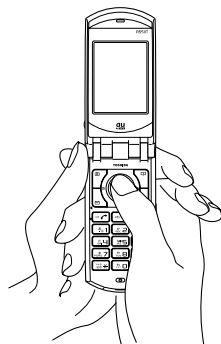

Take care not to cover the microphone with your fingers during recording.

#### While the Cell Phone is Closed

This feature is mainly for recording a movie of yourself.

Orient the A5511T so  appears in the upper right of the sub display.



Certain recording conditions may result in the volume of the movie audio being too low to hear any sound during playback.

## Data Sizes


When the Data Folder is used in the factory settings or the miniSD™ Card (16MB) is inserted, the number of photos/movies you can capture is shown below if all the photos/movies are captured in the same mode. However, the following numbers may vary depending on photography/recording conditions.

### Photo

(Factory setting: Wallpaper)

| Mode               | Photo Quality | Approximate Data Size Per Image | Maximum Number of Images |                      |
|--------------------|---------------|---------------------------------|--------------------------|----------------------|
|                    |               |                                 | Data Folder              | miniSD™ Memory Card* |
| PhotoMail          | —             | 9 KB                            | 500                      | 900                  |
| Wallpaper/Multiple | —             | 30 KB                           | 500                      | 450                  |
| VGA                | Fine Mode     | 120 KB                          | 153                      | 112                  |
|                    | Normal Mode   | 60 KB                           | 307                      | 225                  |
|                    | Mail Mode     | 40 KB                           | 460                      | 300                  |
| SXGA               | Fine Mode     | 300 KB                          | 61                       | 47                   |
|                    | Normal Mode   | 170 KB                          | 108                      | 81                   |
|                    | Mail Mode     | 100 KB                          | 184                      | 128                  |

\* Because the Dictionary data is stored in the miniSD™ Memory Card (free sample), you can take fewer images.

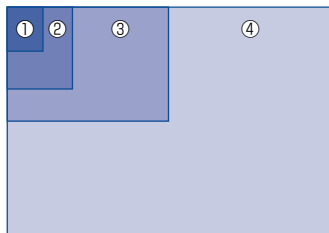

- ①Photo Mail : 144 (W) x 176 (H) dots
- ②Wallpaper/Multiple : 240 (W) x 320 (H) dots
- ③VGA : 640 (W) x 480 (H) dots
- ④SXGA : 1,280 (W) x 960 (H) dots


### Movie

(Factory setting: Std M (Mail))

| Record Mode     | Recording Time | Approximate Data Size Per Image | Maximum Number of Movies |                      |
|-----------------|----------------|---------------------------------|--------------------------|----------------------|
|                 |                |                                 | Data Folder              | miniSD™ Memory Card† |
| Std S (Mail)*2  | 15 sec.        | 69 KB                           | 263                      | 180                  |
| Std M (Mail)*2  | 15 sec.        | 83 KB                           | 219                      | 150                  |
| Std M (Video)*2 | 150 sec.       | 800 KB                          | 23                       | 18                   |

\*1 Because the Dictionary data is stored in the miniSD™ Memory Card (free sample), you can shoot fewer movies.

\*2 The data size and number of movie values are average values for recording up to the allowable recording time per movie.

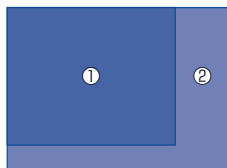

- ①Std S (Mail) : 96 (W) x 80 (H) dots
- ②Std M (Mail/Video) : 128 (W) x 96 (H) dots

# Taking a Photo

## 1 When the standby screen is displayed, press .

- ➔ The monitor screen appears.
- To turn on the mobile light, press  (side key 1) while the monitor screen is displayed.



Monitor Screen




## 2 Point the lens at the subject and then press (Shot) or (side key 2).

- ➔ The photo you just recorded appears (preview screen).



Preview Screen

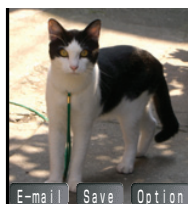

## Saving a Photo

Press  (Save).

## Note

- If you press  ( GUIDE) while the monitor screen is displayed, the key-operation guidance screen will appear for approximately 15 seconds.
- The storage destination is as follows, depending on the capture mode and availability of the miniSD™ Memory Card.

| Mode               | The miniSD™ Memory Card is not inserted.          | The miniSD™ Memory Card is inserted.                         |
|--------------------|---------------------------------------------------|--------------------------------------------------------------|
| PhotoMail          | Photo Folder of the Data Folder in the cell phone | Photo Folder of the Data Folder in the cell phone            |
| Wallpaper/Multiple |                                                   | Digi Camera Folder of Data Folder in the miniSD™ Memory Card |
| VGA                |                                                   |                                                              |
| SXGA               |                                                   |                                                              |

- If you do not want to save the photo, press , use  to select Yes, and then press  (OK) in the preview screen.
- The following shows how to read the file name in the Data Folder when you take a photo in the Wallpaper size.

File Name Example : 050701\_1234~01

Recording Date: July 1, 2005

Time: 12:34


Serial Number: Photo 1

# Recording a Movie

**1** When the standby screen is displayed, hold down  for at least one second.

➔ The monitor screen appears.

- To turn on the mobile light, press  (side key 1) while the monitor screen is displayed.

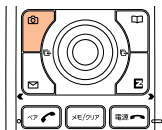

Monitor Screen



**2** Point the lens at the subject and then press  (Rec) or  (side key 2).

➔ The cell phone emits a recording start sound, and  REC lights when recording starts.



## Stopping Recording

Press  (Stop).

## When You Stop Recording or the Recording Time Elapses

The first frame of the movie you just recorded appears (preview screen).

Preview Screen



## To Play Back a Movie Before it is Saved

Press  (Option) and then press  Play.

## Saving a Movie

Press  (Save).

## Note

- If you press  () while the monitor screen is displayed, the key-operation guidance screen will appear for approximately 15 seconds.
- The storage destination is as follows, depending on the capture mode and availability of the miniSD™ Memory Card.

| Mode          | The miniSD™ Memory Card is not inserted.          | The miniSD™ Memory Card is inserted.                   |
|---------------|---------------------------------------------------|--------------------------------------------------------|
| Std S (Mail)  | Movie Folder of the Data Folder in the cell phone | Movie Folder of the Data Folder in the cell phone      |
| Std M (Mail)  |                                                   |                                                        |
| Std M (Video) |                                                   | Movie Folder of Data Folder in the miniSD™ Memory Card |

- If you do not want to save the movie, press , use  to select *Yes*, and then press  (OK) in the preview screen.
- The following shows how to read the file name in the Data Folder when you record a movie in the Std M (Mail) mode.

File Name Example : 050701\_1234~01




# Viewing Photos or Movies

Example: Viewing a photo



**1** When the standby screen is displayed, press .

➔The monitor screen appears.

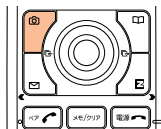


**2** Press  (Option) and then press  **Photo Data**.

➔The Photo Folder opens.

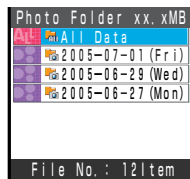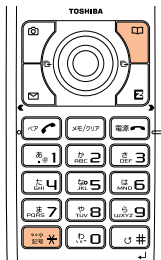

**3** Use  to select a folder and then press  (Select).


➔The folder data appears.

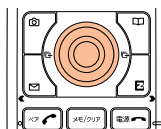

**4** Use  to select the photo you want to view and then press  (Play).

➔The photo appears.

- You can attach the photo to an e-mail message by pressing  (Option) and selecting  **Attach E-mail**.

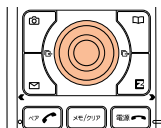

## Note

- To view a movie, hold down  for at least one second while the standby screen is displayed. When the movie monitor screen appears, press  (Option) and then press  **Shot Data**.
- You can view photos and movies you have recorded from the Data Folder.

# Attaching Photos or Movies to E-mail Messages

**1** While the preview screen is displayed after shooting a photo or movie, press  (E-mail).


- ➔ The photo or movie is attached to an e-mail message and the Create Mail screen appears.
- The  (Attachment) indicator changes automatically to , indicating that an image has been attached. For details on creating an e-mail message, see page 53.

## Photo Mail Service

The Photo Mail Service automatically converts photos and movies so they can be viewed on a non-au cell phone.

When sending an e-mail message, select **フォトメール便送信** (Photo Mail Service) on the Way of Send screen.

This will automatically send the message to a special address.

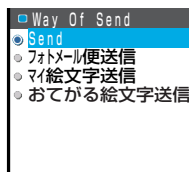

| Phone Company of Cell Phone                      | E-mail Address        | E-mail Address after Change |
|--------------------------------------------------|-----------------------|-----------------------------|
| DoCoMo                                           | △△△@docomo.ne.jp      | △△△@d.nepm.jp               |
| Vodafone                                         | △△△@□*.vodafone.ne.jp | △△△@□*.vodafone.nepm.jp     |
| TU-KA and movie mail incompatible au cell phones | △△△@ezweb.ne.jp       | △△△@ezweb.nepm.jp           |

\* □ varies depending on the subscription region.

### Note


- マイ絵文字送信 (My Pictogram) and おてがる絵文字送信 (Easy Pictogram) are fee-based services. To use these services, you need to apply for the separate **絵文字め〜る** (Pictogram Mail) subscription for EZweb content.

## What is EZweb?

EZweb is an information service that allows you to enjoy using the Internet on your cell phone. You can also download Chaku-Uta®, news, and other data from information web pages.

To use EZweb, you need to apply for an EZweb subscription.

If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, be sure to configure initial settings.

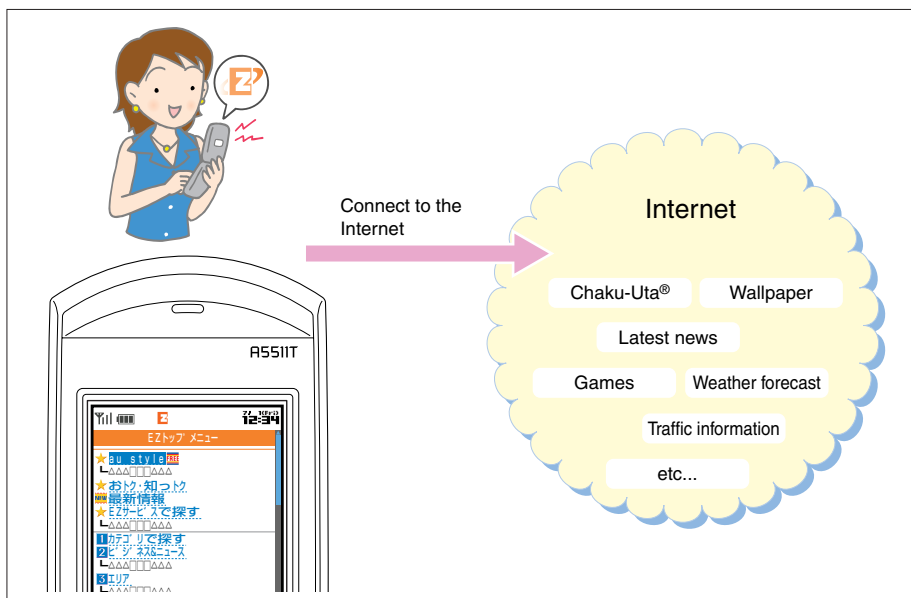


### Note


- The layout and content of the screens in this manual are only for the purpose of explanation. The layout and content of actual screens may be different from the ones shown here.

# Accessing Sites

## Displaying the Top Menu

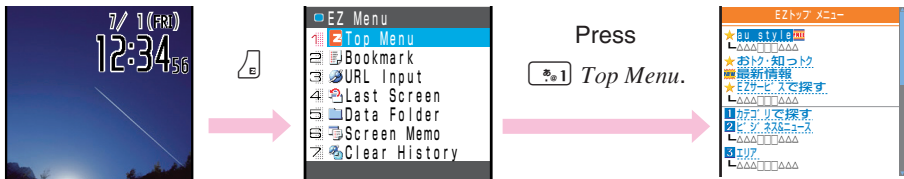

Use to select the site you want to access and then press (Select). Pressing or returns to the previous screen. Holding down either key for at least one second returns to the Top menu.

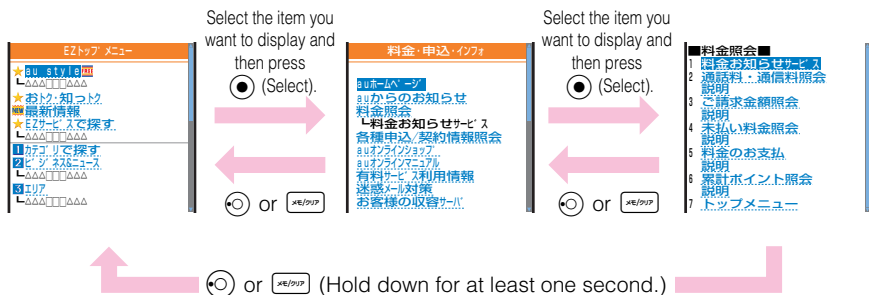

## Note

- The following describes the basic operations that are available while accessing sites.


| Key Operation | Description                                                                                                                                          |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
|               | Exits EZ web and returns to the standby screen.                                                                                                      |
|               | Moves the cursor up and down.<br>When there is data available above or below the current screen, scrolls the screen line-by-line.                    |
| 、             | When there is data available above or below the current screen, scrolls the screen page-by-page.<br>: Scrolls one page up.  : Scrolls one page down. |
|               | Returns to the previous screen.                                                                                                                      |

- In addition to communication charges, some sites charge for providing information.

## Viewing the EZ Top Menu

You can access EZweb from the Top menu. A variety of useful and fun sites are available on EZweb.

### Top Menu

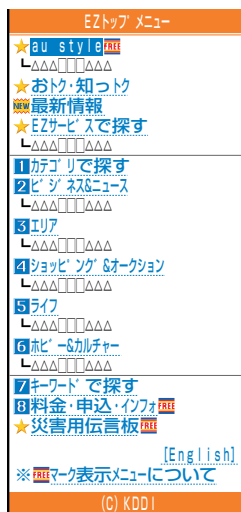

#### au style

Introduces information and sites that au recommends.

#### おトク・知っとク

Presents gifts and push information to the EZweb subscriber for free.

#### 最新情報

Provides an easy access to exclusive information and daily information including weather forecast and fortune telling.

#### EZサービスで探す

Introduces amusing and useful online services that EZweb offers.

#### 1 カテゴリで探す

Searches sites by category.

#### 2 ビジネス&ニュース

Provides the latest information, such as news, weather and stock prices, and other useful information for your business.

#### 3 エリア

Provides local information including weather and maps.

#### 4 ショッピング&オークション

Provides shopping and auction information that you can use from your cell phone.

#### 5 ライフ

Provides useful information for daily living.

#### 6 ホビー&カルチャー

Provides the latest information, such as games, fortune telling, and music, and popular information, such as hobbies and entertainment.

#### 7 キーワードで探す

Sets search by keyword.

#### 8 料金・申込・インフォ

Provides information about charges, various applications, au online manual and notices from au.

#### 災害用伝言板

Register and confirm safety information in time of disaster.



#### English

Introduces English sites.

# Downloading Chaku-Uta®



- 1** From the Top menu, press  **カテゴリで探す (Category Search).**

→The カテゴリで探す (Category Search) screen appears.

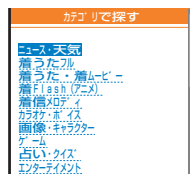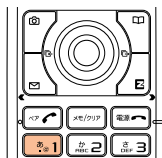

- 2** Use  to select **着うた®・着ムービー (Chaku-Uta®/Chaku-Movie)** and then press  (**Select**).

→The 着うた®・着ムービー (Chaku-Uta®/Chaku-Movie) screen appears.

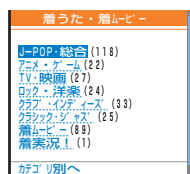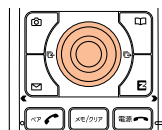

- 3** Use  to select the site you want to access and then press  (**Select**).


→The download procedure appears.

- To use information sites that charge for providing information, you need to enter your EZ password or premium EZ password. If this is your first time to use such sites, you need to set each password.

EZ password: four-digit number you specified when you subscribed for fee-based content.


Premium EZ password: digit number from four to eight you specified when you first use the Combined au Payment Service.

Follow the instructions on the display to specify each password.

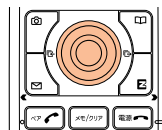


- 4** Follow the instructions that appear on the display.

→Download is completed.

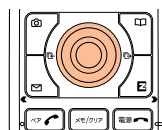

## 5 Press (Play).

- ➔The downloaded Chaku-Uta® plays.
- Downloaded data is saved automatically to the Data Folder.

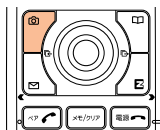


## 6 During playback, press (Add).

- ➔The Register to where? menu appears.



## 7 Use to select the tone you want to use the Chaku-Uta® for and then press (OK).

- ➔The Chaku-Uta® is set as a tone.
- You can use the same operation to download an image and set it to the standby screen, etc.

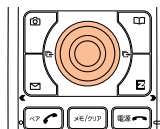

### Note



- This procedure is only an example for the purpose of explanation and may differ from actual procedures. Follow the instructions on the site from which you want to download the data.

# Bookmarking Frequently Accessed Pages

You can save the titles and URLs you often visit, which makes it easy to return to them when you want.


- 1** When the page you want to bookmark is displayed, press  (**Browser**).

→The Browser menu appears.

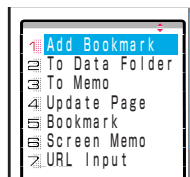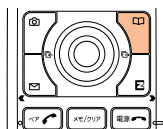

- 2** Press  **Add Bookmark**.

→The title and URL entry screen appears.  
• Some pages cannot be bookmarked.

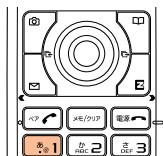

- 3** Press  (**Add**).

→The displayed page is bookmarked, and its title and URL are added to the Bookmark list.





## Note

- The Bookmark list can contain up to 100 titles and URLs.

## Viewing Bookmarked Pages


- 1** When the standby screen is displayed, press .

→The EZ menu appears.

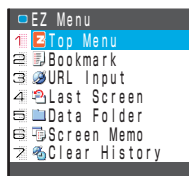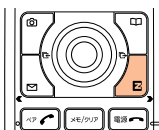


- 2** Press  **Bookmark**.

→The Bookmark list appears.

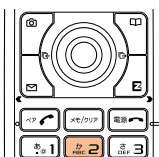

- 3** Use  to select the bookmark for the page you want to view and then press  (**Access**).

→The cell phone connects to the site and displays the page.

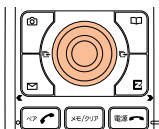


## Checking Charges

You can use EZweb to check call charges, communication charges, and other information.

EZweb



- 1** When the standby screen is displayed, press .

→The Launcher menu appears.

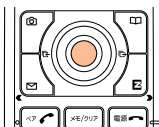

- 2** Press   and then press  (**OK**).

→The 料金照会 (Check Charges) screen appears. Select the items you want to check.

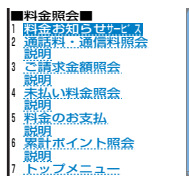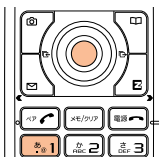

## EZ Navi Walk Features

EZ Navi Walk is a powerful pedestrian navigation system that guides you to your destinations.




### ④ When you want to know where you are, use Current Map.

Just selecting *Current Map* displays a map of your current location in real time.




### ③ When you want to know the way home, use Go Home.

Simple preset the location of where you live, and you will be sent easy-to-follow navigation information on the route back home.

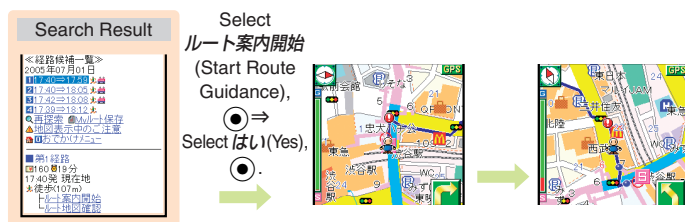

## ① When you are on an outing, use Going-Out Menu.

Outing Menu provides a choice of useful options while you are out.

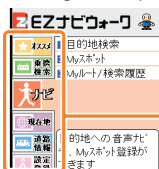

|                               |                                                                                                                         |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| オススメ<br>(Push)                | New and push information.<br>• You can enjoy demo in the voice navigation by using<br><b>おためしナビ</b> (Trial Navigation). |
| 乗換検索<br>(Transfer Search)     | Searchable source of train transfer and timetable information.                                                          |
| ナビ<br>(Navigation)            | Voice navigation to a destination, "My Spot" registration.                                                              |
| 現在地<br>(Current Location)     | Searchable source of maps and shops nearby.                                                                             |
| 道路情報<br>(Traffic Information) | Searchable source of real-time Japan-wide traffic information.                                                          |
| 設定登録<br>(Setup)               | Various settings, membership registration, etc.                                                                         |

## ② When you find a place you like, register it as a My Spot entry.

Register a favorite location, the location of your home, or anywhere else for quick and easy navigation whenever you need it.



Select the navigation item and then press ☐ (Select).

Select *Display Map*, press ☐ (Select), select *Yes*, and then press ☐ (OK).

To map


Select *Go There*, press ☐ (Select), select **はい** (Yes), and then press ☐.

To search results


## ⑤ When you want to let somebody know where you are, use Current Mail.

When, for example, you have arranged to meet somebody, you can send a message to let the person know your current location.

### ● Sending message

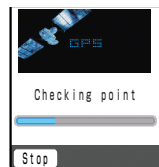

☐ (OK)

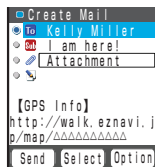

Press ☐ (Send), select the send method, and then press ☐ (Select).




The Current Mail is sent

### ● Once received



Select the URL, press ☐ (Select).

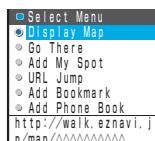

Select *Display Map*, press ☐ (Select), select *Yes*, and then press ☐ (OK).


To map

Select *Go There*, press ☐ (Select), select **はい** (Yes), and then press ☐.

To search results

## Using EZ Navi Walk

### ① Registering Your Home Location

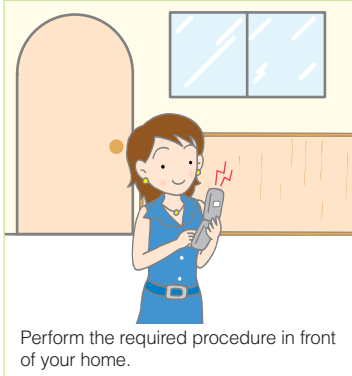

### ② Looking Up the Way Home



## Note



- Before use, be sure to configure initial settings. If you have not yet configured initial settings, see page 23.
- To use this service, you need to apply for an EZweb subscription.
- The layout and content of the screens in this manual are only for the purpose of explanation. The layout and content of actual screens may be different from the ones shown here.
- In addition to packet charges, EZ Navi Walk charges for providing information.

## Registering Your Home Location

Example: Registering your current location as "Home"



- From the EZnaviWalk menu (page 80), press **あ.2** *My Spot*.

➡ The My Spot menu appears.

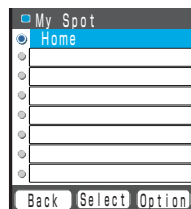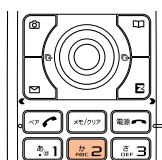


- Use **⬇** to select *Home*, press **⬇** (Option), and then press **あ.1** *Add GPS Info*.

➡ The Select GPS Info menu appears.

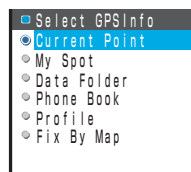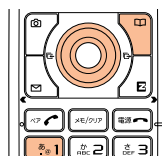

- 3** Use  to select *Current Point*, press  (Select) to obtain the GPS information, and then press  (OK).

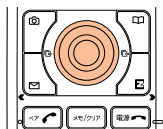


→Your current location is registered as your home.

## Looking Up the Way Home


Using this feature makes it easy to navigate from your current location to the location indicated by GPS information you registered as your home using My Spot.

- 1** From the EZnaviWalk menu (page 80), press  *Go Home*, use  to select *はい* (Yes), and then press .

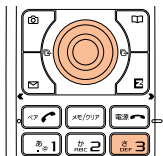

→The route search result appears.

- 2** Use  to select *ルート案内開始* (Start Route Guidance), press , use  to select *はい* (Yes), and then press .

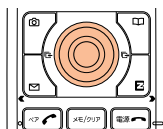

→A map of your current location appears and the map scrolls automatically in accordance with your movement.

You can watch TV by using A5511T. You can also record TV programs.


- EZ Television provides you ground-wave analog broadcasting aired in Japan.
- After you cancel the subscription, you cannot watch EZ Television on A5511T.

## EZ Television Features

### Watching TV Programs



### Recording

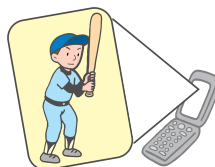

### Saving a Still Image

### Note

- Before use, be sure to configure initial settings. If you have not yet configured initial settings, see page 23.
- When you watch TV, the communication charge and packet charge are not required. Note that the packet charge is required when you use services including the TV program information and music search.
- Specifications are subject to change without notice. Display images are subject to change without notice.
- The sound of EZ Television is monaural.

# Displaying and Operating the EZ Television Screen

## Volume

Displays the current volume in 11 levels (10 steps and silent).

Use  to adjust the volume.

## Channel

Displays the current channel.

Use  or press key pad/  
  to change the channel.

## Information window

Displays information from the TV station.

## Program information

Confirms the current program name and broadcasting hours.



## Earphone indicator

Displayed when イヤホン (Earphone) is set in スピーカー切替 (Switch Speaker).

## Switch screen

Press  to switch to the full screen.

<Full screen>



©KDDI powered by NANO Media Inc.

## To Watch EZ Television Clearly

When you watch TV in the mountain, underground mall, or tunnel, the image and tone may be degraded or the wave cannot be received due to the bad condition.

In this case, do one of the following:

- When you use the Toshiba flat-type stereo earphone 02 or External TV antenna with a clip, fully extend the cord or the antenna and search the direction for better reception.
- When you watch EZ Television indoors, watch TV near the window because the wave comes outdoors.


## Antenna

When you use EZ Television, you are recommended to connect the antenna. You can enjoy EZ Television in higher image and sound quality. You can connect one of the following antennas to A5511T:


- Toshiba flat-type stereo earphone 02
- External TV antenna with a clip

### Watching TV by Connecting the Toshiba Flat-type Stereo Earphone 02

- 1 Open the connector cap for the flat-type (built-in switch/stereo) earphone-microphone terminal.

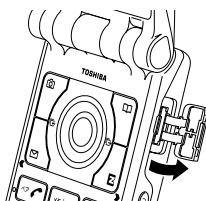

- 2 Connect the Toshiba flat-type stereo earphone 02.

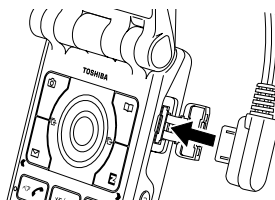

- 3 Perform the procedure under "Watching TV" on page 88 to start EZ Television, and then set **スピーカー切替** (Switch Speaker) on page 89.


- **スピーカー** (Speaker) is set by default.

#### Note


- Even if you connect the earphone, the tone is output from the speaker when you do not set **イヤホン** (Speaker) in **スピーカー切替** (Switch Speaker).

## Watching TV by Connecting the External TV Antenna with a Clip

- 1 Open the connector cap for the flat-type (built-in switch/stereo) earphone-microphone terminal.

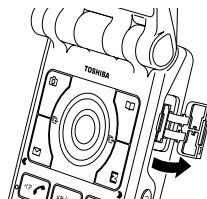

- 2 Connect the External TV antenna with a clip.

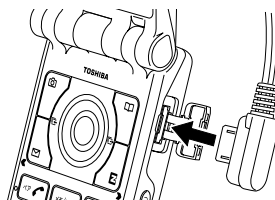

- 3 Follow the procedure under "Watching TV" on page 88 to start EZ Television, and then set **スピーカー切替 (Switch Speaker)** on page 89.

- It is a good idea that you use the TV stand when watching TV in the full screen on page 85.

# Watching TV

When you use EZ Television for the first time, specify the settings by following the procedure.



## 1 When the standby screen is displayed, press .

→The Launcher menu appears.





## 2 Use to select **EZ TV** and then press (Select).

→The notice appears.

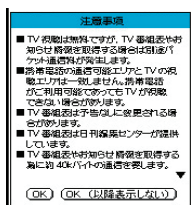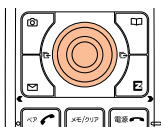

## 3 After you confirm the notice by using , use to select **OK** and then press .



→The 初期設定 (Initial Settings) 1/2 menu appears.

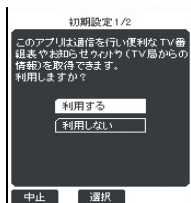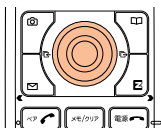

## 4 Use to select **利用する (Use)** and then press (選択 [Select]).


→The 初期設定 (Initial Settings) 2/2 menu appears.

- When you select **利用しない (Do Not Use)**, you cannot obtain the TV program schedule and Information window.

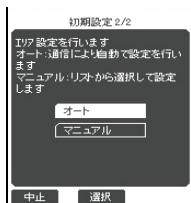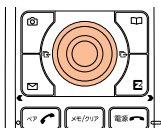


## 5 Use to select **オート (Automatic)** and then press (選択 [Select]).

- When you do **エリア設定 (Area Settings)** manually, select **マニュアル (Manual)**.

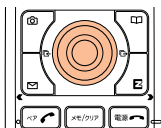

- 6** Use  to select **OK**, press  (**選択 [Select]**), press  (**OK**), use  to select **OK** and then press .

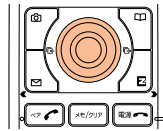

→The reception area and available channels are specified automatically and the EZ Television screen appears.

©KDDI powered by NANO Media Inc.

## Exiting EZ Television


Press  and then press .

## Note

- If the battery indicator is , you cannot start EZ Television.
- If the battery indicator becomes  while EZ Television is active, EZ Television is automatically turned off.
- A maximum of time for using EZ Television is an approximate one hour. After you start EZ Television and one hour elapses, EZ Television is automatically turned off.


## Switching between the Earphone and the Speaker

- 1** When EZ Television is active, press  (**メニュー [Menu]**), use  to select **スピーカー切替** (**Switch Speaker**) and then press  (**選択 [Select]**).

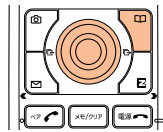

→The **スピーカー切替** (Switch Speaker) menu appears.

- 2** Use  to select **イヤホン** (**Earphone**) or **スピーカー** (**Speaker**), press  (**設定 [Set]**) and then press  (**OK**).

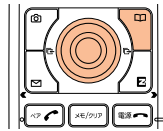

- When you press  (**戻る [Back]**), you return to the EZ Television screen.


## Note

- Even if you connect/disconnect the Toshiba flat-type stereo earphone 02 or External TV antenna with a clip, the setting for **イヤホン** (Earphone) or **スピーカー** (Speaker) is not changed automatically.

## Recording a TV Program


- 1** When a TV program is displayed, press  (メニュー [Menu]).

→ The メニュー (Menu) appears.

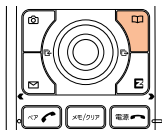

©KDDI powered by NANO Media Inc.

- 2** Use  to select 録画 (Record) and then press  (選択 [Select]).

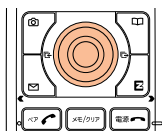

- 3** Press  (録画開始 [Start Recording]).

→ The recording starts.

- When you press  (画像保存 [Save Image]) and then press  (はい [Yes]), you can save the still image.



- 4** Press  (録画停止 [Stop Recording]), and then press  (OK).

→ The recorded data is saved automatically.




### When the recordable time is over

The recording automatically stops and recorded data is saved.

## Note

- The movie images are saved in the EZ Movie Folder of the Data Folder and the still images are saved in the Graphic of the Data Folder.
- You may not record data if sufficient space is not available in the Data Folder.
- The recordable time reduces due to the available space in the Data Folder. When the maximum space (approximate 18 MB) is available, you can record data for approximate 17 minutes.
- The following shows how to read the file name in the Data Folder when you record a movie or still image.

 File Name Example : TV\_050701\_1330~01



- EZ Television can search the TV program by Electric TV Guide or check the song title on air (Song title search: fee-based service).
- The programs saved as the still images or movies are copyright-protected. You cannot attach these files to e-mail nor copy/move them onto external devices. You cannot also register them in the standby screen.



# Smart Mode

Setting Smart Mode limits phone function, phone book, camera, mail, EZweb and other often-used functions, which keeps operation simple.



## Entering Smart Mode

- 1 When the standby screen is displayed, press .



→ The launcher menu appears.

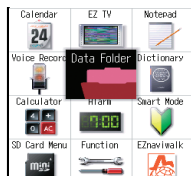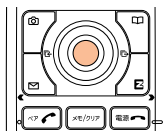

- 2 Use  to select *Smart Mode* and then press  (Select).

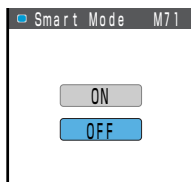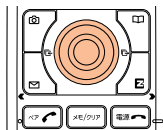


- 3 Use  to select *ON* and then press  (OK).

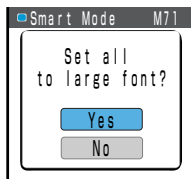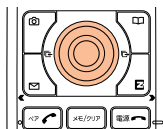

- 4 Use  to select *Yes* and then press  (OK).

→ This enters Smart Mode.

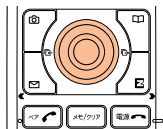



### Note

- Entering Smart Mode causes settings that were previously configured to change to Smart Mode settings.

## Exiting Smart Mode



- 1 When the standby screen is displayed, press .

→ The Smart menu appears.

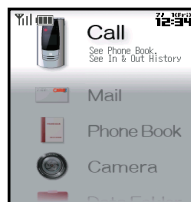
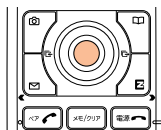


- 2 Use  to select *Function* and then press  (Select).

→ The Set Function menu appears.

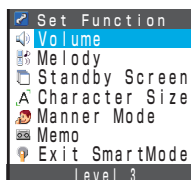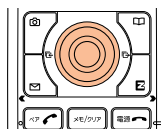


- 3 Use  to select *Exit SmartMode* and then press  (Select).

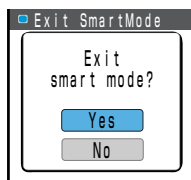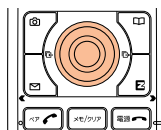


- 4 Use  to select *Yes* and then press  (OK).

→ This exits Smart Mode.

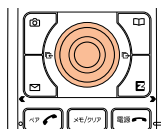

# Viewing the Smart Menu

The Smart menu contains the following items.


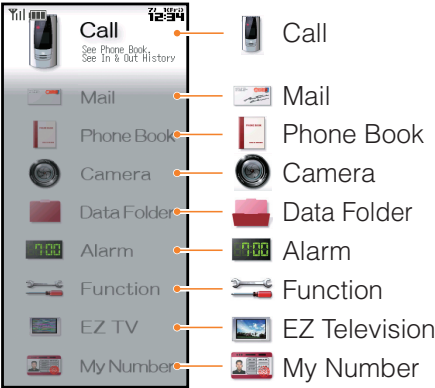


| Indicator                                                                           | Function Name |                | Description                                            | Reference page |
|-------------------------------------------------------------------------------------|---------------|----------------|--------------------------------------------------------|----------------|
|    | Call          | See Phone Book | Phone book number recall for dialing                   | P.46           |
|                                                                                     |               | See incom hist | Calling History recall for dialing                     | P.30           |
|                                                                                     |               | See outgo hist |                                                        |                |
|                                                                                     |               | Add Phone Book | Phone book data registration                           | P.96           |
|                                                                                     |               | See my number  | Display of own phone number and e-mail address         | P.24           |
|    | Mail          |                | E/C mail creation/reading                              | P.98           |
|   | Phone Book    |                | Phone book recall/add                                  | P.96           |
|  | Camera        |                | Photo/movie recording                                  | P.100          |
|  | Data Folder   |                | Data folder data and photo/movie file display/playback | P.101          |
|  | Alarm         |                | Alarm sounds at preset time                            | —              |

| Indicator                                                                         | Function Name |                | Description                                    | Reference page |
|-----------------------------------------------------------------------------------|---------------|----------------|------------------------------------------------|----------------|
|  | Function      | Volume         | Call ring tone setting                         | P.35, P.37     |
|                                                                                   |               | Melody         |                                                |                |
|                                                                                   |               | Standby Screen | Standby screen setting                         | —              |
|                                                                                   |               | Character Size | Display character size setting                 | —              |
|                                                                                   |               | Manner Mode    | Normal manner mode setting                     | P.32           |
|                                                                                   |               | Memo           | Voice memo setting                             | P.33           |
|                                                                                   |               |                | Voice recorder recording                       | —              |
|                                                                                   |               | Exit SmartMode | Smart mode exit                                | P.93           |
|  | EZ Television |                | TV viewing                                     | P.84           |
|  | My Number     |                | Display of own phone number and e-mail address | P.24           |



# Saving a Phone Book Entry Using Smart Mode

- 1** When the standby screen is displayed, press .

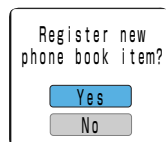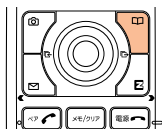


- 2** Use  to select *Yes* and then press  (OK).

→The Name entry screen appears.

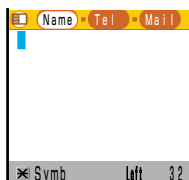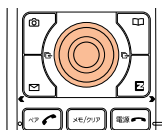

- 3** Enter a name and then press  (OK).

→The phone number input method menu appears.


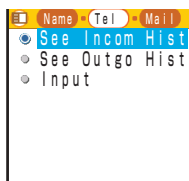


- 4** Use  to select *Input* and then press  (Select).

→The phone number input screen appears.

- If you do not want to enter a phone number, press  (OK) and proceed to Step 6.



- You can also use  to select *See Incom Hist* or *See Outgo Hist* and enter a phone number from there.

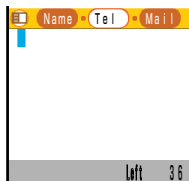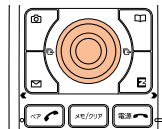

- 5** Enter a phone number and then press  (OK).

→The e-mail address input method menu appears.



- If the phone number is for a regular phone, enter the phone number starting with the area code.

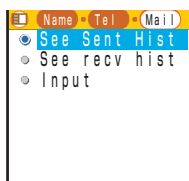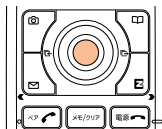

## 6 Use to select *Input* and then press (Select).

→ The e-mail address input screen appears.


- If you do not want to enter an e-mail address, press  (OK) and proceed to Step 8.
- You can also use  to select *See Sent Hist* or *See rcv hist* and enter an e-mail address from there.

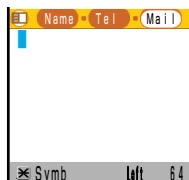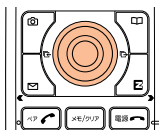

## 7 Enter an e-mail address and then press (OK).


→ The New screen appears.

- You can use  to select an item and then press  (Edit) to edit something you have already entered, or to configure call ring tone and mail ring tone settings.

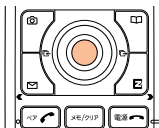

## 8 Press (Add).

→ The entry is saved in the phone book.

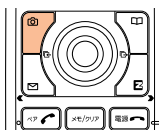

### Note



- When you have already stored data in the phone book, pressing  while the standby screen is displayed displays a phone book list. To store new phone book data, press  (New) and perform Steps 3 through 8 of the above procedure.
- To edit phone book contents, press  while the standby screen is displayed. Use  to select the phone book entry you want to edit, press  (Select), and then press  (Edit).
- For other details, see page 44.

# Creating and Sending E-mail/C-mail Messages in Smart Mode

Example : Creating and sending an e-mail message



- 1 When the standby screen is displayed, press .

→The Select Mail menu appears.

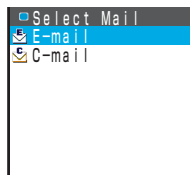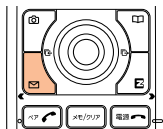



- 2 Use  to select *E-mail* and then press  (Select).

- To create a c-mail message, select *C-mail*. With c-mail you enter the text first and then enter the address.

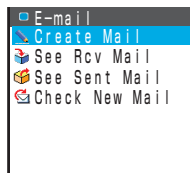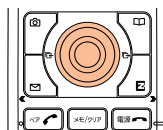

- 3 Use  to select *Create Mail* and then press  (Select).



→The Address input method menu appears.

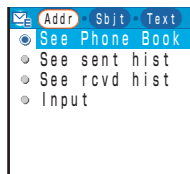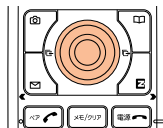

- 4 Use  to select *See Phone Book* and then press  (Select).



→The phone book list appears.

- You can specify only one address.
- Only entries that include an e-mail address are displayed.
- You can also use  to select *See sent hist*, *See rcvd hist* or *Input* and select an address from there.

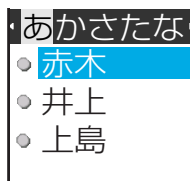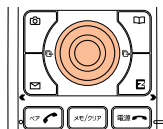


- 5 Use  to select the recipient you want to send to and then press  (Select).

→The Subject input screen appears.

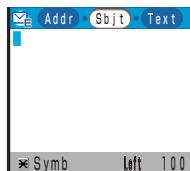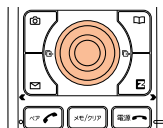

## 6 Enter a subject and then press (OK).



➔The Text entry screen appears.

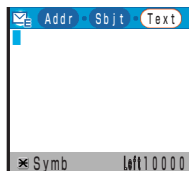

## 7 Enter the text of the message and then press (OK).


➔The Create Mail screen appears.

- You can edit the currently selected item by pressing  (Edit). You can also save the mail message in the Outbox by pressing  (Save).
- You can attach a photo or other data in the Data Folder by using  to select *Attachment*. You can also change or remove the current attachment. A mail message can have only one attachment.

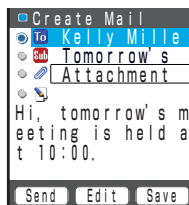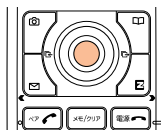

## 8 Press (Send).

➔The animation for sending e-mail is displayed and the e-mail message is sent.


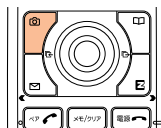


## Using the Camera in Smart Mode

### Taking a Photo

- 1 When the standby screen is displayed, press .


→ The Camera menu appears.

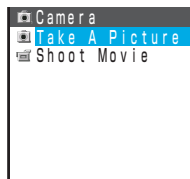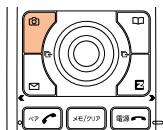

- 2 Use  to select *Take A Picture* and then press  (Select).

→ The monitor screen appears.

- You can change the mode by pressing  (Size).

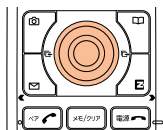

- 3 Perform Step 2 of the procedure under "Taking a Photo" on page 68.


#### Note

- When you select Digi Camera in Mode, a photo is taken in the SXGA size.

## Viewing a Photo



- 1** When the standby screen is displayed, press .

→The Smart menu appears.

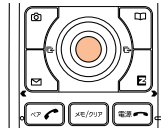



- 2** Use  to select *Data Folder* and then press  (**Select**).

→The Data Folder menu appears.

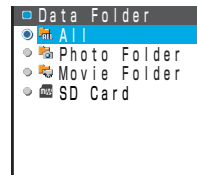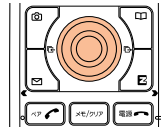

- 3** Use  to select *Photo Folder* and then press  (**Select**).

→The Photo Folder opens.

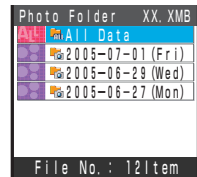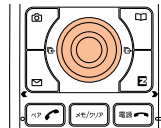

- 4** Perform Steps 3 and 4 under "Viewing Photos or Movies" on page 71.

# Other Functions

---

In addition to the functions covered in this Basic Manual, the A5511T also has the following features.

## Only Mail

You can send a message with a movie or photo attachment to a specific recipient without opening the A5511T.

## Cuckoo Clock

A movie is played on the sub display to inform you of the time, every hour on the hour.

## EZ Chaku-Uta®

You can specify the actual song of a particular artist as an incoming ring tone.

## Movie Setting

You can specify a movie you recorded as an incoming ring tone or incoming screen.

## Edit Movie

You can add subtitles (two lines of 10 characters each) and record a voiceover after recording a movie.

## EZapps (BREW®)

You can enjoy using various applications including large-volume games that are rich in expressive content, and standby applications.

## Photo Mixer

You can use an animation template with melody to create your own original animation from a mixture of photos and text. You can attach animations to e-mail messages.

## Voice Recorder

You can record voice memos while the cell phone is in standby. This feature comes in handy for recording during a meeting of seven or eight people, when having a discussion with few people, etc.

# Troubleshooting

| Symptom                                                                                                | Check                                                                                                                                                                               | Measure                                                                                                                                                                    | Reference Page |
|--------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Cannot turn on power.                                                                                  | ● Is the battery pack charged?                                                                                                                                                      | Charge the battery pack.                                                                                                                                                   | 13             |
|                                                                                                        | ● Did you hold down  for at least one second?                                                      | Hold down  for at least one second.                                                       | 14             |
| Cannot make calls.                                                                                     | ● Is power turned on?                                                                                                                                                               | Hold down  for at least one second.                                                       | 14             |
|                                                                                                        | ● Is  (out of range indicator) displayed?                                                          | Move to a location where  (out of range indicator) is no longer displayed, and try again. | 14             |
|                                                                                                        | ● Is your hand covering the area around the built-in antenna?                                                                                                                       | Make sure your fingers or any other part of your hand is not touching or covering the area around the built-in antenna.                                                    | 14             |
|                                                                                                        | ● Did you enter the phone number starting with the area code?                                                                                                                       | When making a call to a phone other than a cell phone, you need to enter the area code first even if you are inside the same area.                                         | 28             |
| Cannot receive calls.                                                                                  | ● Is  (out of range indicator) displayed?                                                          | Move to a location where  (out of range indicator) is no longer displayed.                | 14             |
|                                                                                                        | ● Is power turned on?                                                                                                                                                               | Hold down  for at least one second.                                                       | 14             |
| No response when a key is pressed.                                                                     | ● Is power turned on?                                                                                                                                                               | Hold down  for at least one second.                                                       | 14             |
| A warning tone sounds and power turns off.                                                             | ● Is there enough power left in the battery pack?                                                                                                                                   | Charge the battery pack.                                                                                                                                                   | 13             |
| Calls are answered automatically.                                                                      | ● Is voice memo turned on?                                                                                                                                                          | Hold down  for at least one second to turn off voice memo.                                | 33             |
| Cannot hear the other party.                                                                           | ● Is the earpiece volume level too low?                                                                                                                                             | While talking, press  . Increase the earpiece volume.                                     | 38             |
| When making a call, a beeping sound is heard from the earpiece and a connection cannot be established. | ● Is  (out of range indicator) displayed? Or are you in a location where the signal is too weak? | Move to a location where  (out of range indicator) is no longer displayed.              | 14             |
|                                                                                                        | ● Is the wireless line congested or is the phone you are calling busy?                                                                                                              | End the call and try again later.                                                                                                                                          | 28             |
| The incoming indicator flashes but the ring tone does not play.                                        | ● Is manner mode turned on?                                                                                                                                                         | Hold down  (side key 2) for at least one second to turn off manner mode.                | 32             |
|                                                                                                        | ● Is  (silent indicator) displayed on the standby screen?                                        | Increase the volume of the incoming call ring tone.                                                                                                                        | 37             |
| Cannot charge the battery pack.                                                                        | ● Is the Common AC adapter 01 plugged into a power outlet?                                                                                                                          | Insert the adapter in the power outlet properly.                                                                                                                           | 13             |
| Cannot get a clear reception.                                                                          | ● Is the wave is too strong? For example, the TV tower is near.                                                                                                                     | Set TV Amp Setup to OFF.                                                                                                                                                   | —              |
|                                                                                                        | ● Is the Toshiba flat-type stereo earphone 02 or External TV antenna with a clip connected?                                                                                         | Connect the Toshiba flat-type stereo earphone 02 or External TV antenna with a clip.                                                                                       | 86, 87         |

# Index

## A

|                                     |    |
|-------------------------------------|----|
| Accessories .....                   | 10 |
| Adjusting the earpiece volume ..... | 38 |
| Antenna .....                       | 14 |

## B

|                     |          |
|---------------------|----------|
| Battery level ..... | 14       |
| Battery pack .....  | 10,11,13 |

## C

|                                  |    |
|----------------------------------|----|
| Camera .....                     | 65 |
| Movies .....                     | 69 |
| Photos .....                     | 68 |
| Cell phone etiquette .....       | 1  |
| Cell phone features .....        | 2  |
| Character input .....            | 39 |
| Character entry mode .....       | 39 |
| Charging the battery pack .....  | 13 |
| Checking charges .....           | 79 |
| C-mail .....                     | 62 |
| C-mail safe block function ..... | 62 |
| Creating and sending .....       | 63 |
| Reading .....                    | 64 |

## D

|                                       |       |
|---------------------------------------|-------|
| Desktop holder .....                  | 10,13 |
| Disaster Bulletin Board Service ..... | 6     |
| Display .....                         | 11,22 |
| Domain .....                          | 25    |
| Downloading Chaku-Uta® .....          | 76    |

## E

|                                           |    |
|-------------------------------------------|----|
| E-mail .....                              | 52 |
| Attaching images (photos or movies) ..... | 72 |
| Creating and sending .....                | 53 |
| Incoming mail .....                       | 56 |
| Initial settings .....                    | 23 |
| Reading .....                             | 56 |
| Replying .....                            | 60 |
| Viewing attached images .....             | 58 |

|                                             |       |
|---------------------------------------------|-------|
| E-mail address .....                        | 24    |
| Changing .....                              | 25    |
| Enter .....                                 | 41    |
| Entering characters .....                   | 39    |
| Entering characters from the same key ..... | 40    |
| Entering pictograms .....                   | 43    |
| Extra large characters .....                | 27    |
| EZ Navi Walk .....                          | 80    |
| Current Mail .....                          | 81    |
| Current Map .....                           | 80    |
| Go Home .....                               | 80,83 |
| Going-Out Menu .....                        | 81    |
| My Spot .....                               | 81,82 |
| EZ Television .....                         | 84    |
| EZweb .....                                 | 73    |
| Accessing sites .....                       | 74    |
| Initial settings .....                      | 23    |
| Top menu .....                              | 74,75 |

## I

|                           |       |
|---------------------------|-------|
| Images (photos or movies) |       |
| Attaching to e-mail ..... | 72    |
| Photo Mail Service .....  | 72    |
| Incoming history .....    | 30    |
| Incoming indicator .....  | 11    |
| Indicators .....          | 22    |
| Initial settings .....    | 18,23 |
| Internet .....            | 73    |
| Sites .....               | 74,75 |

## K

|                       |    |
|-----------------------|----|
| Key assignments ..... | 15 |
|-----------------------|----|

## L

|                           |    |
|---------------------------|----|
| Language .....            | 19 |
| Launcher menu .....       | 20 |
| Learning the basics ..... | 15 |
| Loud Volume .....         | 38 |

## M

### Mail

|              |    |
|--------------|----|
| C-mail ..... | 62 |
| E-mail ..... | 52 |

### Manner mode.....32

### miniSD™ Memory Card [free sample] ...10

|                                  |    |
|----------------------------------|----|
| miniSD™ adapter [free sample]... | 10 |
|----------------------------------|----|

### Movies

|                           |    |
|---------------------------|----|
| Attaching to e-mail ..... | 72 |
| Photo Mail Service.....   | 72 |
| Recording .....           | 69 |
| Viewing .....             | 71 |

## N

|                      |    |
|----------------------|----|
| Names of parts ..... | 11 |
|----------------------|----|

## O

### One-touch Text Size Switching ...57

### One-ring calls.....31

### Option menu ..... 21 |

### Outgoing history.....30

## P

### Pair Function ..... 49 |

|                                    |    |
|------------------------------------|----|
| Making a call to a pair person ... | 50 |
| Registering a pair person .....    | 49 |
| Sending a mail to a pair person... | 51 |

### Password ..... 17 |

### Phone (call)

|                 |    |
|-----------------|----|
| Answering ..... | 29 |
| Making.....     | 28 |
| Redialing.....  | 30 |
| 184/186 .....   | 28 |

### Phone book ..... 44 |

|                                                                |    |
|----------------------------------------------------------------|----|
| Dialing .....                                                  | 46 |
| Editing .....                                                  | 47 |
| Saving .....                                                   | 44 |
| Saving a phone number from<br>Incoming or outgoing history ... | 48 |

### Phone number ..... 24 |

### Photo Mail Service ..... 72 |

### Photos (snapshots)

|                           |    |
|---------------------------|----|
| Attaching to e-mail ..... | 72 |
|---------------------------|----|

|                         |    |
|-------------------------|----|
| Photo Mail Service..... | 72 |
|-------------------------|----|

|              |    |
|--------------|----|
| Taking ..... | 68 |
|--------------|----|

|               |    |
|---------------|----|
| Viewing ..... | 71 |
|---------------|----|

### PIN ..... 17 |

### Playback

|                  |    |
|------------------|----|
| Voice memo ..... | 34 |
|------------------|----|

### Power supply

|                         |    |
|-------------------------|----|
| Turning off power ..... | 14 |
| Turning on power .....  | 14 |

## R

### Ring tones

|                           |    |
|---------------------------|----|
| Changing the type.....    | 35 |
| Changing the volume ..... | 37 |

## S

### Signal ..... 14 |

### Sites ..... 74,75 |

|                              |    |
|------------------------------|----|
| Bookmarking .....            | 78 |
| Viewing from bookmarks ..... | 79 |

### Smart mode ..... 92 |

|                                                          |     |
|----------------------------------------------------------|-----|
| Creating and sending e-mail and<br>C-mail messages ..... | 98  |
| Entering .....                                           | 92  |
| Exiting .....                                            | 93  |
| Saving a phone book entry .....                          | 96  |
| Using the camera .....                                   | 100 |
| Viewing the Smart Menu .....                             | 94  |

### Soft key ..... 11,16 |

### Spam ..... 59 |

### Standby screen ..... 14 |

### Sub display ..... 11,22 |

## V

### Viewing

|              |    |
|--------------|----|
| Movies.....  | 71 |
| Photos ..... | 71 |

### Voice memo

|                  |    |
|------------------|----|
| Playback .....   | 34 |
| Turning on ..... | 33 |

## W

### Warp function key ..... 11,16 |

## For inquiries, call:

au Customer Service Center (General Information)

From regular phones:



**0077-7-111**

(toll free)

From **au** cellphones:

**157** area code not required

(toll free)

Pressing "zero" will connect you to an operator,  
after calling "157" on your au cellphone.



### モバイル・リサイクル・ネットワーク

携帯電話・PHSのリサイクルにご協力を。  
Cellphone and PHS operators collect and  
recycle unused telephones, batteries and  
battery chargers at stores bearing the  logo regardless of brand and  
manufacturer to protect the environment  
and reuse valuable resources.

Sales: KDDI CORPORATION・

OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by:

**TOSHIBA CORPORATION**

July 2005 Edition

Read this code for  
an easy access to  
au Online Manual.

