



美国高端厨房设备品牌

使用说明书

INSTRUCTION
MANUAL

滋养您的身体 丰富您的心灵

www.omegajuicerschina.com

全营养调理机

BLENDER

BL632系列



使用本产品前请仔细阅读说明书

Please Read These Instructions Carefully Before Use

TABLE OF CONTENTS

01	TABLE OF CONTENTS	10	使用须知
02	IMPORTANT SAFEGUARDS	11	安全警告说明
03	BLENDER SAFETY	12	产品型号列表
04	PRODUCT FEATURES	13	程序控制面板
05	BLENDER OPERATION	14	操作说明
06	CLEANING INSTRUCTIONS	15	产品特征
07	TROUBLESHOOTING	16	营养食谱
08	MAINTENANCE	17	拆卸和清洗
09	PRODUCT SPECIFICATION	18	产品信息

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all the instructions before using the blender.
2. Plug into a grounded outlet.
3. Do not remove ground.
4. Do not use an adapter.
5. Do not use an extension cord.
6. To protect against risk of electrical shock, do not put the blender in water or other liquid.
7. Close supervision is necessary when any appliance is used near children.
8. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
9. Avoid contact with moving parts, especially blades.
10. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination /repair /electrical or mechanical adjustment, or contact your distributor.
11. Caution: Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. If scraping, folding, etc. is necessary, turn off and unplug the blender, and use a rubber spatula only.
12. Warning: Blades are sharp. Handle carefully.
13. To reduce the personal injury, never place cutting blades on base without jar properly attached.
14. Screw on locking ring firmly. Injury can result if moving blades accidentally become exposed.
15. Always operate blender with lid in place.
16. When blending hot liquids, place a hand towel over the cover. Do not fill blender container beyond 2/3 full. Always begin processing at the lowest speed setting. Keep hands, arms and face away from the feeder cup opening to prevent possible burns.
17. Do not use outdoors.
18. Do not let cord hang over edge of table or counter, or touch hot surfaces.
19. Do not leave blender unattended while it is operating.
20. The use of unapproved attachments may cause injuries.
21. The capacity can be substantially less than normal with thick mixtures.
22. Inspect the container assembly daily. Do not use a broken, chipped or cracked container. Check cutter for wear, nicks or broken blades.
23. This appliance is intended for short period of operation, with a average rated operating time of approximately 3 minutes.
24. This appliance is not intended for use by persons (including Children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance

BLENDER SAFETY



DANGER Electricity



GENERAL Caution



DANGER Risk of Electrical Shock



 
DANGER Keep Hands Clear



IMPORTANT: Please adhere to all safety guidelines contained in this manual.
DANGER: You can be seriously injured if you do not follow these instructions.

 WARNING 	 WARNING 
Electrical Shock Hazard Plug into a grounded outlet. Do not remove ground. Do not use an adapter. Do not use an extension cord. Failure to follow these instructions can result in death, fire or electrical shock.	Moving Parts! Always cover the lid on the container when blending. Do not put hands, spoons or other utensils in container when blending. Failure to follow these instructions can result in broken bones, cuts or other injuries.

The appliance does not work, please operate as follows :

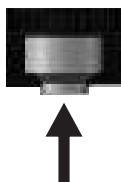

1. Please check if the power cord disconnected
2. Press reset switch as left picture shown (over current protection device automatically)

PRODUCT FEATURES

Innovative, safe
blending vegetables, salsas, fruits, soups
and even ice for great frozen drinks.

Every Omega blender features
automatic shut off
in the event of an overload.

Powerful peak variable speed motor
outperforms the competition.

container and stainless steel blades
are uniquely designed to guarantee
blending consistency.



BLENDER OPERATION

To operate the blender, proceed as follows

1. For the first time user, wash the container assembly, including the lid, before using it. (Refer to "Cleaning Instruction") Do not put the container assembly & blender base assembly in the dishwasher.
2. Place the blender on a dry, clean, level surface, and be sure it is set to off.
3. Place the container onto the blender base. Make sure it rests securely on the base.
4. Plug the blender into an electric outlet.
5. Place the ingredients into the container.
6. Place the lid and feeder cap tightly on the container.
7. Set desired speed (High/Low toggle or variable knob) and time (on timer model only).
8. Switch blender on.

PROFESSIONAL BLENDER TIPS

1. Processing hot liquid
 - Always cover the lid and feeder cap before blending hot liquid or mixture.
 - Use the feeder cap to add liquids to the container while the unit is running.
 - Never stand with your face directly over the container when you are putting ingredient through the feeder cap.
2. Blending Icy mixtures
 - Steps for blending ice:
 - Pour in liquid, and then add ice.
 - Place the lid.
 - Set to desired speed
 - Chunks of frozen fruit can be added to milk or fruit juice to produce a sherbet or slush.
 - Use the feeder cap to add liquids or ingredients to the container while the unit is running.

CLEANING INSTRUCTIONS

Blender container parts are corrosion resistant, sanitary and easily cleaned. Do not put the container assembly & blender base assembly in the dishwasher.

1. Before first use and after every use, separate container parts from the base.
2. Add cleaning solution to the container. Use washing solution of tepid water (less than 115°F/46°C) and a non-sudsing detergent. Use the recommended amount of detergent.
3. Scrub and flush out the container interior lid and feeder cap to remove food residue. Empty container.
4. Fill container 1 /4 full with fresh washing solution and place it on the base.
5. Replace the lid on the container and run the blender on high speed for 1 minutes.
6. Repeat step 4 using clean rinse water (95°F/35°C).
7. Wipe down the container, feeder cap, and lid with a soft cloth or sponge, dampened with fresh washing solution.
8. Wipe the exterior of the base with a damp cloth or sponge. The base contains electrical components: do not immerse, use a high-pressure washer, or use a dishwasher to clean the base.

CARING TIPS

To care for your blender, please read the tips as follows:

1. Periodically check all parts before reassembly. As use of damaged or non-recommended parts could result in a severe personal injury and/or damage to the blender
2. Blades:
If the processing blades are stuck or difficult to turn, DO NOT USE BLENDER (Check by carefully turning the blades in a counterclockwise direction, where the opposite edges are sharp. Blades should turn freely.)
3. Container:
If the Tritan™ container is cracked, DO NOT USE BLENDER, further use could result in the container breakage during use.
4. Blender Base:
Never immerse the blender base in water. Unplug unit. The housing can be cleaned with a damp cloth.
5. Motor:
The motor is permanently lubricated and does not require any additional lubrication.

TROUBLESHOOTING

Lid

Separate the lid and plug, then wash in warm soapy water. Rinse clean under running water and dry. Reassemble before use.

Container

1. To clean: Fill pitcher 1/4 full with warm water and add 2–3 drops of dish soap. Return container to motor base and firmly position the two part lid. Run machine for 30 seconds. Empty container. Repeat this step.

Troubleshooting

Problem	Probable Cause	Probable Solution
Loud noise from the container	•Container blades do not spin •Increased vibration •Leaking from bottom of container	•Broken or worn drive socket. Replace drive socket. •Check blade assembly for damaged components and replace. •Tighten retainer nut on the bottom of the container
Machine starts then shuts off	•Motor •Reset button	•Press reset button •Call Customer Service
Machine starts then shuts off	•Power failure •Power supply cord damage	•Check to make sure there is power to the machine •Check the power supply cord and the connection to the power outlet

MAINTENANCE

Inspect the blender and its various parts and replace as follows:

Daily	1. Unplug the blender and remove the container from the base. 2. Inspect the container blades for wear, nicks, and broken or loose blades. Replace if necessary.
Weekly	1. Unplug the blender. 2. Inspect the power cord insulation and power plug for cracks.
Quarterly	1. Review the condition of the container assembly and Mushroom Clutch Set at least every 90 days. 1. Replace if necessary.

PRODUCT SPECIFICATION

PRODUCT NAME: Blender

MODE NAME: BL632 Series

RATED VOLTAGE: 220V

RATED FREQUENCY: 50/60Hz

RATED POWER CONSUMPTION: 1400W

RPM: 25000RPM

CORD LENGTH: 1.5m

MOTOR: Single phase series motor

OUTWARD DIMENSION: 440X340X330mm

RATED OPERATING TIME: Less than 3minutes

使用须知

在使用本机之前请仔细阅读此手册：

- 阅读后请保存此手册，以备将来参考使用。
- 使用前请确认提供电压和铭牌上额定电压是否一致。
- 如果电源线、插头损坏或电器失效，或是其他任何方式的损坏，请不要使用电器，交给最近的授权维修点进行测试、维修、更换和调整。请不要自行更换，以避免触电。
- 操作时不要让其处于无人看管状态。
- 不可让小孩使用本电器，机器在工作时，小孩不要靠近。
- 在放置、拆下部件或是拆洗容器之前确保插头已拔出接地插座。
- 在操作时，手或身体的任何部位都不可触及产品运动部件。
- 为了避免触电，请不要将搅拌机浸到水或其他溶液中。
- 不要在户外使用。
- 不要让电源线挂在桌子边上或放置于灼热的表面。
- 当马达还在工作的时候，不要把手或是器具放在容器里面，以免手受伤或者对产品产生损伤。
- 刀片很锋利，要小心。容器还在主机上的时候不要试图去拆下刀片。如果刀片松驰，或已经损坏，请停止使用。为减少伤害，不要把刀片放在没有正确装配的杯子上。
- 产品在工作时一定要盖上盖子。
- 当处理热液体时必须确保盖子已安全盖好，从而确保水蒸气不会喷出。也能防止当机器翻转时盖子掉下。
- 不要敲击容器来使容器底下榨汁混合物倒出。应该把容器从主机移开，用橡皮刀片把容器底部的积压混合物清理出来。
- 当容器还放在主机上时，不要用力晃动容器。
- 不要在机器还没有完全停止前移开容器。
- 在容器放在主机之前不要开动马达。
- 本设备适用于短时间内操作，一次操作时间约3分钟。
- 这个设备不适用于行动能力、知觉、精神能力下降或缺乏经验和知识的人（包括儿童）使用，除非他们被监督或通过一个人负责他们的安全。应该监督孩子们确保他们不玩这个产品。

安全警告说明



搅拌食物时先加水再开机。

违反警告将会对产品造成严重的损坏。



不要用湿手操作。

违反警告将会对产品造成严重的损坏或触电。



开机时确保杯子完全放入杯胶垫。

违反警告将会对产品造成严重的损坏。



不要用手指、异物碰触运动部件。

违反警告将会对人体造成严重伤害。



机器工作时，小孩不得靠近。

违反警告将会对人体造成严重伤害。

当产品堵住不能工作的时候请按如下操作：



1. 检查电源线是否断开
2. 按左图指示按一下复位开关
(过电流自动保护装置)


产品型号列表

BL632E3S-C (2个量杯：1000ml，2000ml)


BL632E3R-C (2个量杯：1000ml，2000ml)

BL632S-C (1个量杯：2000ml)

 BL632R-C (1个量杯：2000ml)

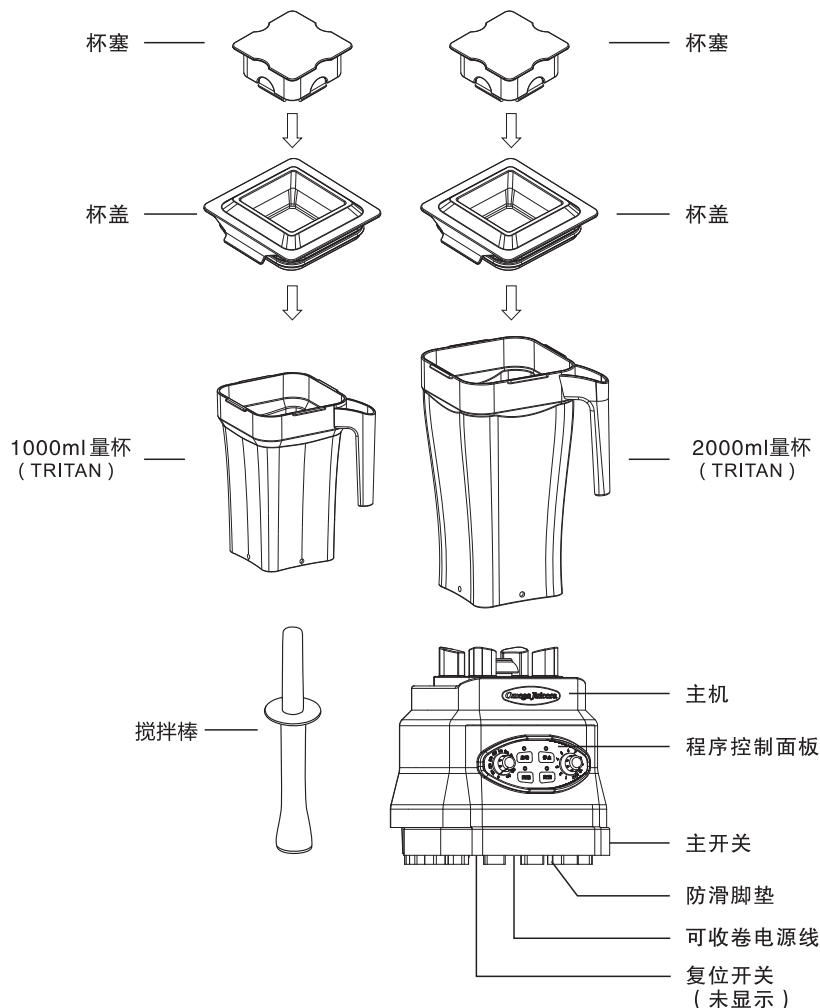

程序控制面板

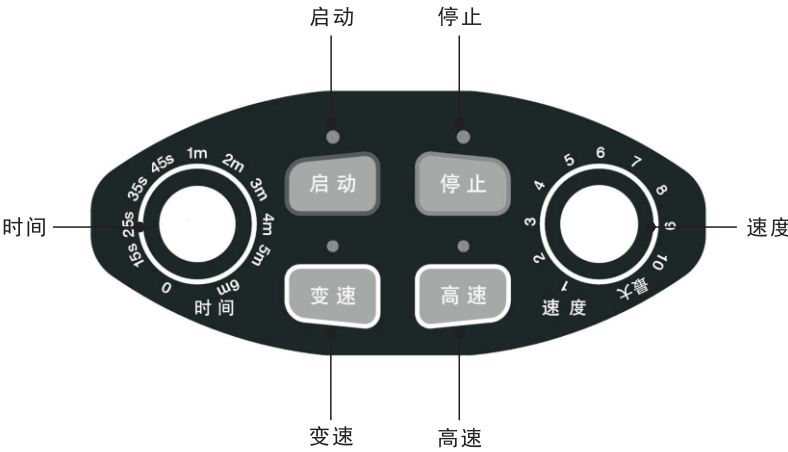 

程序项目	程序说明
启动	启动
停止	停止
变速	变速
高速	高速
时间	时间调节旋钮
速度	速度调节旋钮

操作说明

注意:当搅拌机在工作时:

- 不要干扰刀片转动
- 不要拿掉杯盖

搅拌机操作

这款搅拌机有可调速度、可调时间、变速、高速等功能。

具有一机双杯组合，其中2000ml杯子组件可以制作新鲜果汁、豆浆、冰糕等；
1000ml杯子组件可以干磨咖啡豆、干豆、调料等坚硬的食物。

1 将杯子正确放置在杯槽里

2 如果选择2000ml杯子组件，选择需要搅拌的物品，倒入适量水（总容量不得超过杯体最大刻度容量）
如果选择1000ml杯子组件，选择需要干磨的物品，倒入杯体（物品容量不得超过杯体最大刻度容量）

3 将杯盖和杯塞盖好

4 接通电源，把主开关拨到“开”档，程序控制面板“停止”指示灯亮

5 根据需要将时间调节旋钮调至自己需要的时间，将起始速度调节旋钮调到最低（因马力较大），按下“启动”，用户在使用过程中可根据需要调节速度来控制整个搅拌过程

6 搅拌过程中，五谷、干豆、调料等坚硬食材，可使用搅拌棒协助完成，效果更佳

7 搅拌结束后，将速度调节旋钮调到最低，按下“停止”按钮停止搅拌，把主开关拨到“关”档，搅拌机停止使用

8 断开电源线

产品特征

- ◎ 超强单相串励电机
- ◎ 每分钟最大转速25000转以上
- ◎ 可变无极调速
- ◎ 15秒到6分钟的时间调节
- ◎ 一机多功能
- ◎ 大杯可制作豆浆、冰沙、果汁等
- ◎ 小杯可干磨五谷、干豆、调料等坚硬的食物
- ◎ 优良的隔音材料
- ◎ 科学的隔音结构
- ◎ 柔韧有弹性的橡胶底垫设计，使产品运行平稳、低噪音
- ◎ 高低速自动循环
- ◎ 高速点动模式



不含双酚A
2000ml杯子 (TRITAN材质)



不含双酚A
1000ml杯子 (TRITAN材质)





蔬果蜜



果蔬汁



精力汤



奶浆



养生粥



浓汤



奶昔



调味酱



果酱



干磨（粉）



冰沙



冰淇淋



婴儿辅食



甜品



创意料理

拆卸和清洗

- 1 注入温水，加入3-5片柠檬，盖紧盖子。



- 2 开机冲洗，按开机3步骤，打30秒，完成后，按关机3步骤。



- 3 倒掉清洗后的污水。



- 4 再用清水冲洗一遍，用布擦干或自然凉干即可。



- 5 警告：主机不可浸入水或其他溶液中清洗！也不能对主机进行拆卸清洗。

Omega Juicers

产品信息



型号	BL632系列
尺寸	长：203mm 宽：203mm 高：483mm（大杯）
重量	BL632E3R/S-C：6.5Kg BL632R/S-C：5.3Kg
电压	220V，50/60Hz
电机	单相串励电动机
转速	最大转速25000转以上/分钟



美国高端厨房设备品牌
www.omegajuicerschina.com

电话：**4008113928**



官方微信



官网