

**FILEMATE®** joy<sup>♥</sup>



## Digital Photo Frame Instruction Manual

Model 3FMPF215BK15-R



SAFETY INFORMATION .....	4
PACKAGE CONTENTS.....	4
SPECIFICATIONS SUMMARY .....	5
DPF INTRODUCTION .....	6
QUICK START .....	8
OPERATION GUIDE.....	8
Movie Display.....	8
Music Display.....	9
Picture Display .....	9
Combo Display .....	9
Edit .....	9
Computer Connecting.....	10
Setup .....	10
Splitscreen Function.....	11
Calendar/Clock/Alarm .....	11
OSD MENU FUNCTION.....	12
CUSTOMER SERVICE.....	14
FAQ.....	15

## Safety Information

---

- Keep away from water, moisture and dusty areas
- Working temperature 0-40 C. Never store in a hot or very cold place
- Be careful not to drop or knock the photo frame
- Never try to open the case yourself, always seek technical support
- Connect the AC adaptor to both the DC IN jack and to the power outlet (main socket)
- Only use attachments/accessories approved by the manufacturer
- When left unused for a long period of time, the unit should be unplugged from the household AC outlet

WARNING: To reduce the risk of fire or electric shock, do not expose to rain, moisture, dripping or splashing.

## Package Contents

---



Digital Photo Frame



Remote Control



Adapter



USB Cable

### MAIN FEATURES

Plays digital photos as slideshows with background music

Plays video & music

Display calendar and clock with alarm/timer on/off

Rotate/Zoom/Slideshow/Split-screen photos

Brightness, contrast and color adjustable

Built-in memory

Easy to use on-screen menus & button controls

### MEMORY CARD SLOTS

Secure Digital (SD)

Multi Media Card (MMC)

Memory Stick (MS), MS Pro, MS Duo, MS Pro Duo

Secure Digital High Capacity (SDHC)

Compact Flash (CF)

- MS Duo adaptor required

### SPECIFICATIONS

Pictures: JPEG up to 16 mega pixel resolution


Video: MPEG-1\2\4, Motion JPEG

Audio: MP3


USB ports: USB 2.0 Device, USB 2.0 Host

AC adapter: Input AC 100V~240V. 50-60Hz, Output DC12V

### BACKSIDE OVERVIEW

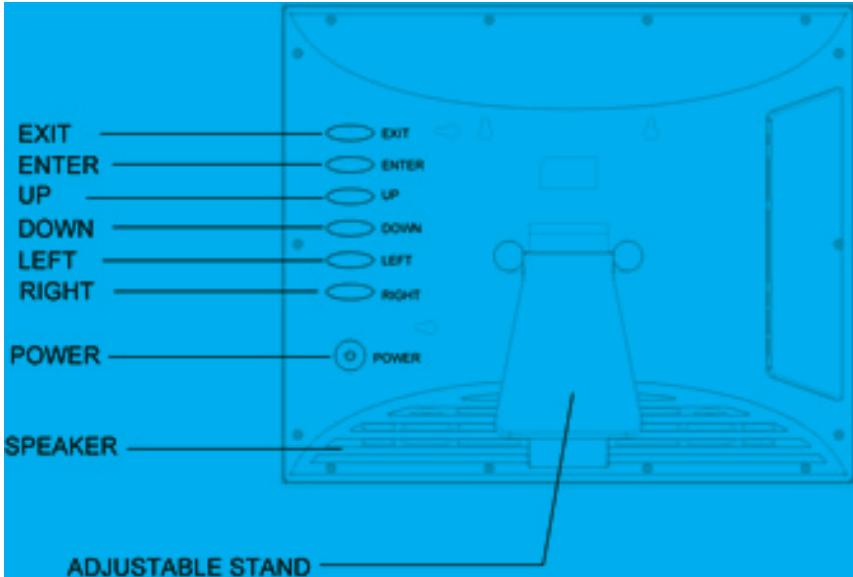

### SIDE OVERVIEW

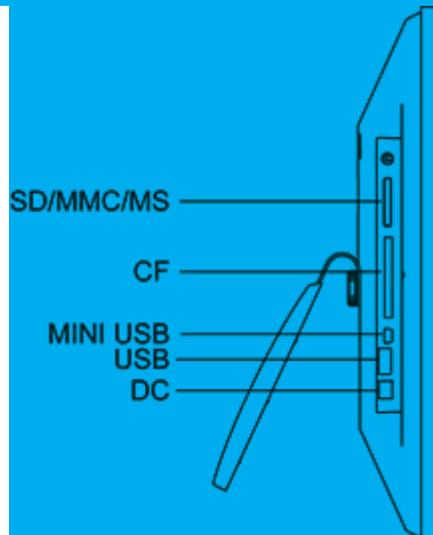

---

## REMOTE CONTROL OVERVIEW



### NOTE

- To edit or adjust, press MENU on the remote control; or press button M on the frame for 3 seconds.
- To go back a step or to the main menu, press EXIT on the remote control; or press button M on the frame.

## Quick Start

---

Insert the jack of the DC adaptor into the digital photo frame, and then plug the DC adapter into a standard power outlet.

## Operation Guide

---

### MAIN MENU

- 1) Card select: shows which card you insert into frame
- 2) Setup: adjust frame settings
- 3) Calendar: display a calendar with time and alarm settings

### MEMORY SELECT

- 1) Movie: Select to play movie files
- 2) Music: Select to play music files
- 3) Picture: Select to play photo as a slideshow
- 4) Combo: Slideshow pictures with music background
- 5) Edit: Select to copy or delete files

### MOVIE DISPLAY

- Choose movie icon, all the movie files will list on the screen
- Press [▲][▼] to choose movie and press **ENTER** to play
- Press **MENU** during movie playback, the info bar appears on the screen or you can instead press button **Exit** on the frame for 3 seconds
- Press [◀][▶] and **ENTER** to make selection on the info bar

Note: Press [▲][▼] on remote control to increase or decrease volume

---

## MUSIC DISPLAY

- Choose music icon, all the music files will list on the screen
- Press [▲][▼] to choose music and press **ENTER** to play

Note: Press [▲][▼] on remote control to increase or decrease volume.

## PICTURE DISPLAY

- Choose picture icon, all the pictures will list on the screen
- Press [▲][▼][◀][▶] to choose movie and press **ENTER** to play
- Press **MENU** during display pictures, the info bar appears on the screen or you can instead press button **Exit** on the frame for 3 seconds
- Press [◀][▶] and **ENTER** to make selection on the info bar

## COMBO DISPLAY

- Choose combo icon, all the combo files will list on the screen
- Press [▲][▼] to choose music or picture and press **ENTER** to play

## EDIT

Select **EDIT** icon

*All the files and folders will be listed on the screen*

- Press [▲][▼] to choose different files
- Press [▶] to select one file, a ✓ will be marked beside the file
- Deselect the file by pressing [▶] again

## Operation Guide (Cont.)

---

### Copy

- After file selected, press **MENU** and select **copy**
- Press [**▲**][**▼**] and **ENTER** to select the copy destination
- Press **ENTER**, copy finished

### Delete

- After file is selected, press **MENU** and select **delete**
- Press **ENTER** to **delete**
- Select  $\sqrt{\quad}$  then press **ENTER** to delete selected file

## Computer Connecting

---

- Connecting the frame to computer by using USB cable
- Edit files in computer

## Set Up

---

Select the setup icon from the main menu to setup your frame

Operation method:

[**▲**][**▼**] button: Shift items or choose parameters

[**□**][**□**] button: change the parameters

**ENTER** button: confirm the setup result

**EXIT** button: back to item list


Use the split-screen function to display several images at the same time.

Note: If you want split-screen display, you need to go to setup to turn on the function of “split-screen” before use.

For single display function, turn off the “split-screen” function.



Single Model

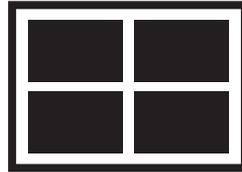

Split-Screen Display

Press [▲][▼] to select year

Press [◀][▶] to change month and year

### OSD MENU

### *SUB-Menu & Function Description*

---

#### **FUNCTION MENU**

Photo	Picture Slideshow
Music	MP3 display
Movie	Movie display
Combo	Combo display
Edit	Copy/ Delete
Calendar	Calendar/ Clock / Alarm

---

#### **MEMORY MENU**

SD/MMC	Different memory device
MS	
CF	
Min/USB	
Internal Memory	

---

#### **SETTINGS**

Language	Multi language
Slideshow Time	3/5/15 seconds, 1/15min, 1 hour
Slideshow Mode	14 mode
Music Repeat Mode	Repeat all/one/off

---

Movie Repeat Mode	Repeat all/one/off
Display Mode	<p><i>Original</i> Preserves dimension ratios of original picture</p> <p><i>Stretch</i> Stretches picture to fit screen</p> <p><i>Crop</i> Full-screen picture, preserves dimension ratios, but crops picture to do so.</p>
Time	Set time (year/month/day/hour/minute)
Alarm	Set alarm
Brightness	Brightness adjust
Contrast	Contrast adjust
Saturation	Saturation adjust
Auto Power on Time	Set time to power on automatically
Auto Power off Time	Set time to power off automatically
Splitscreen Function	Several photos display on screen the same time
Auto Play	Picture/music/movie/calendar/main menu
Default	Restore to the factory settings.

## Customer Service

---

Customer Service Representative

408.856.0614 from 9am-17:00 M-F

Customers may directly create a support ticket via our website form based tool or by emailing: [supportcenter@wintecind.com](mailto:supportcenter@wintecind.com)

Additional methods for customer or technical support is available on our website: [wintecind.com](http://wintecind.com) > Support, which includes chat function, RMA and technical support tools.

**Q.** Why can't the Digital Photo Frame play all images or movie files?

**A.** The Digital Photo Frame can support JPEG, MP3 and some video format depending on the product specification. It may not read some files downloaded from the internet.

**Q.** I have a memory card in the Digital Photo Frame, but it's not reading the card, what should I do?

**A.** First, make sure that you are using a memory card that is supported by the Digital Photo Frame. Second, ensure that the memory card is inserted all the way into the correct slot. Third, choose the correct card icon which you want to play.

**Q.** Why do some pictures load faster than others?

**A.** Higher resolution pictures usually load slower.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

**NOTE:** All rights for modifications reserved. The above settings are subject to change if the product specifications are modified.

