

Notice

The information in this user's manual is subject to change without notice.

THE MANUFACTURER OR RESELLER SHALL NOT BE LIABLE FOR ERRORS OR OMISSIONS CONTAINED IN THIS MANUAL AND SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL DAMAGES WHICH MAY RESULT FROM THE PERFORMANCE OR USE OF THIS MANUAL.

The information in this user's manual is protected by copyright laws. No part of this manual may be photocopied or reproduced in any form without prior written authorization from the copyright owners.

Copyright 10/2005
All rights reserved.

Microsoft and Windows are registered trademarks of Microsoft Corporation. DOS and Windows 95/98/ME/2000/NT/XP/VISTA are trademarks of Microsoft Corporation.

Product names mentioned herein may be trademarks and/or registered trademarks of their respective owners/companies.

The software described in this manual is delivered under a license agreement. The software may be used or copied only in accordance with the terms of the agreement.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Rev 1.0

TABLE OF CONTENTS

PREFACE

Symbols and Conventions

Protecting Your Computer - Avoid Abusive Handling and Adverse Environment

Chapter Summaries

1. GETTING TO KNOW THE BASICS

Performance Features (1-2,3)

System at a Glance (1-4)

Top View (1-4,5,6,7)

Front and Rear Views (1-8,9)

Side Views (1-10,11)

Bottom View (1-12,13)

AC Adapter (1-14)

LED Status Indicators (1-15)

Keyboard Features (1-16)

Function (Quick) Keys (1-16)

Windows Keys (1-17)

Embedded Numeric Keypad (1-17)

Touchpad (1-18)

Graphics Subsystem (1-19)

Adjusting the Display Brightness (1-19)

Extending the Life of the TFT Display Panel (1-19)

Opening and Closing the Display Panel (1-20)

Audio Subsystem (1-21)

Adjusting the Volume in Windows (1-21)

Voice Recording (1-21)

Modem and Modem Settings (1-22)

Ethernet Adapter (1-23)

2. BIOS SETUP AND SECURITY

Entering the BIOS Setup Screen (2-3)

Leaving the BIOS Setup Screen (2-3)

BIOS Action Keys (2-3)

Modifying the BIOS Settings (2-4)

 Main Setup (2-4)

 Advance Setup (2-4,5)

 Security Setup (2-5,6)

 Power Setup (2-6,7)

 Boot Setup (2-7,8)

 Exit Setup (2-8)

3. BATTERY POWER & POWER MANAGEMENT

The Battery Pack (3-2)

 Lithium-Ion Battery Technology (3-2)

 Battery Low-Power Warning (3-3)

Installing and Removing the Battery Pack (3-4,5)

Charging the Battery and Charging Time (3-5)

Checking the Battery Level (3-6)

Prolonging the Battery's Life and Usage Cycles (3-6)

Using Windows Power Options (3-7)

 Windows' Power Schemes (3-7,8)

 Suspend Modes (3-9,10)

 Power Button Action (3-11)

 Low Battery Warning (3-12)

 Power Manual Quick Access (3-13)

4. UPGRADING YOUR COMPUTER

Upgrading the Hard Disk Drive (4-2,3,4,5)

Upgrading the System Memory (4-6,7,8,9,10)

Installing a Mini PCI Card to the System (4-11,12,13)

5. TROUBLE-SHOOTING²

First Step (5-2,3)

Audio Problems (5-4)

Hard Disk Problems (5-5,6)

Optical Drive Problems (5-7)

Display Problems (5-8)

Keyboard and Mouse Problems (5-9)

CMOS Battery Problems (5-10)

Memory Problems (5-11)

Modem Problems (5-12)

Network Adapter/Ethernet Problems (5-13)

PC Card/PCMCIA Problems (5-14)

Performance Problems (5-15)

Firewire (IEEE1394) and USB2.0 Problems (5-16)

APPENDIX A Product Specification

APPENDIX B Agency Regulatory Notices

Preface

Using This Manual

This user's manual contains general information about the hardware and software setup, troubleshooting, and technical specifications of the notebook computer.

Symbols and Conventions

The following conventions and symbols are used in this manual:

- ✦ When keys are to be pressed at the same time, a plus (+) symbol is used. For instance, Fn+F7 means holding Fn and F7 keys at the same time.
- ✦ When a series of clicking actions is needed in a Windows O/S, the [] and > symbols are used. For instance, [Start > Settings > Control Panel > Display] means clicking the Start icon first, then the Settings, then the Control Panel, then the Display icon.
- ✦ When you need to make a selection with the touchpad (or mouse), you will be asked to 'select', 'click', 'double-click', or 'right-click' the item.



Note: Text in this format and symbol indicates specific instructions, commentary, sidelights, or any additional information or notes that you should be aware of.



Warning: Text in this format and symbol means that failure to comply with the given instructions or information could result in damage to your computer or could cause bodily harm or loss of life.

Protecting Your Computer - Avoid Abusive Handling and Adverse Environment

Following the advice below will help ensure that you get the most out of your investment.

Your computer will serve you well if you take good care of it:

- ⚡ Do not expose the computer to direct sunlight or place it near sources of heat.
- ⚡ Do not subject it to temperatures below 0°C (32°F) or above 30°C (86°F).
- ⚡ Do not expose the computer to magnetic fields.
- ⚡ Do not expose the computer to moisture or rain.
- ⚡ Do not spill water or liquid on the computer.
- ⚡ Do not subject the computer to adverse shock and vibration.
- ⚡ Do not expose the computer to dust and dirt.
- ⚡ Do not place objects on top of the computer in order to avoid damaging the computer.
- ⚡ Do not place the computer on rocky surfaces.

Here are some ways of taking care of your AC adapter.

- ⚡ Do not connect the adapter to any devices other than your computer.
- ⚡ Do not let water get into the adapter.
- ⚡ Do not block the ventilation airway of the adapter.
- ⚡ Keep the adapter in a cool and ventilated place.
- ⚡ Do not step on the power cord or place heavy objects on top of it.
- ⚡ Carefully tuck away the power cord and any cables away from pedestrian traffic.
- ⚡ When unplugging the power cord, do not pull on the cord itself; pull on the plug instead.
- ⚡ Keep the adapter away from children.

⚡ The total ampere ratings of the equipment plugged in should not exceed the ampere rating of the cord if you are using an extension cord.

⚡ The total current rating of all equipment plugged into a single wall outlet should not exceed the fuse rating.

⚡ Do not connect another AC adapter to your notebook. This notebook uses exclusively the AC adapter: Lishin 0202A2090 (90W), Liteon PA-1900-05 (90W),

When cleaning the computer, observe these steps:

1. Power off the computer and remove the battery pack.
2. Disconnect the AC adapter.
3. Use a soft cloth dampened with water. Do not use liquid or aerosol cleaners.

Contact tech support or see your service technician if any of the following occurs:

- ⚡ The computer has been dropped or the body has been damaged.
- ⚡ Liquid has been spilled into the product.
- ⚡ The computer does not operate normally.

Cleaning the Ventilation Grills:

It is suggested that you clean the ventilation grills regularly to maintain optimal thermal regulation of the notebook. To do this, you may use a soft brush or a vacuum cleaner (with appropriate head adapter) to remove the dust buildup on the ventilation grills.

Chapter Summaries

The following is a summary of the available chapters and appendices in this manual.

Chapter 1: Getting to Know the Basics

In this chapter, you will learn the basic operations and features of your computer. It gives you a general understanding of the components of your computer.

Chapter 2: BIOS Setup / Security

In this chapter, you will learn how to change various firmware settings and what the settings mean. Also, you will learn how to take advantage of the built-in security feature provided by the BIOS.

Chapter 3: Battery Power & Power Management

In this chapter, you will learn the fundamentals of power management and how to use them to achieve longer battery life.

Chapter 4: Upgrading Your Computer

In this chapter, you will learn how to upgrade the system memory and the hard disk drive, as well as how to install a wireless mini PCI card.

Chapter 5: Troubleshooting

In this chapter, you will learn how to solve common hardware and software problems.

Appendix A: Product Specification

In this section, you will find a list of the computer's system specifications.

Appendix B: Agency Regulatory Notices

In this section, you will find the general electro-magnetic and safety regulatory information.

C H A P T E R O N E

GETTING TO KNOW THE BASICS

This chapter introduces the features and components of the computer.

Performance Features

High-Performance Processor with Alviso Chipset

The notebook PC is equipped with a powerful Mobile Intel Pentium M or Celeron M processor. Together with the latest Alviso chipset and technologies, the system offers advanced PC performance.

Unique Dual Graphic Boot Feature

The system has two graphics engines built-in. A switch allows you to choose either the external MXM graphics engine or the integrated Intel GMA900 Extreme3 graphics engine. This unique feature gives you the flexibility to select the graphics engine that is best-suited for your needs – higher performance or lower battery consumption. Both graphic engines are DirectX 9 compatible.

LCD Display

The computer is equipped with a wide 15.4" TFT high-resolution display panel for clear text and brilliant colors.

Expandability

The system offers an upgradeable hard disk drive and 2 DDR SDRAM sockets for expansion, allowing you to easily increase the storage and system capacities as the need arises.

Built-in Multiple Card Reader

The built-in 4-in-1 card reader lets you access many portable media formats (SD Card, MMC Card, MS Card, and MS Pro Card).

Ethernet Port

The system provides a built-in 10/100Mbps or 10/100/1000Mbps Ethernet network adapter for high-bandwidth network connection.

Firewire (IEEE1394/1394a) and USB2.0 ports

In addition to a full array of built-in I/O ports, the computer offers

IEEE1394 for ultra high-speed connection to high-bandwidth digital video devices and USB2.0 ports to connect to any USB-based peripheral devices.


Wireless LAN

The internal wireless LAN module allows your notebook to connect wirelessly to other 802.11-enabled systems, devices, or networks.

Internal USB Slot for Integrated USB Devices (Optional)

The optional USB Bluetooth module or USB thumb drive gives you added function with the notebook.

System At A Glance

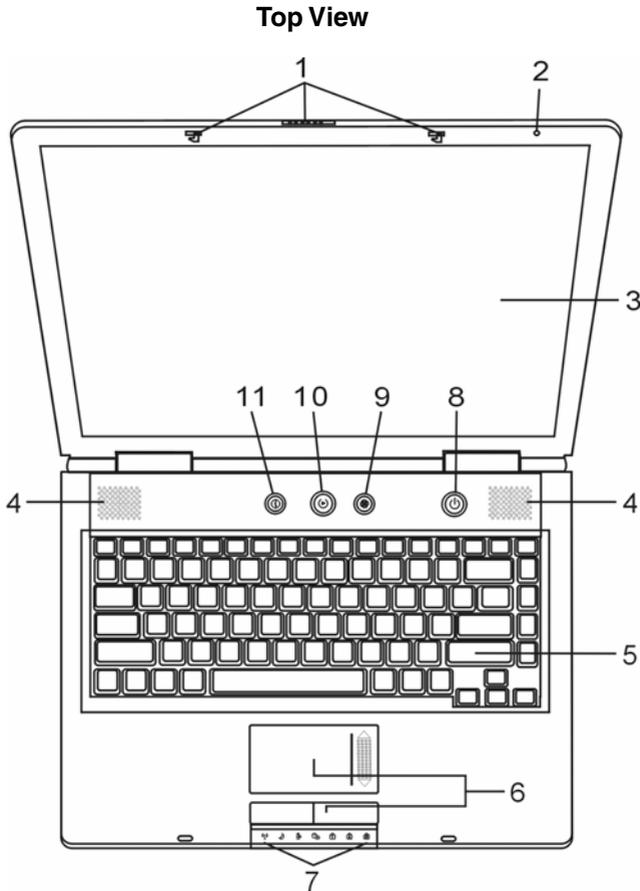

1. LCD Latch


The LCD latches lock / unlock the LCD panel.

2. Built-in Microphone

The built-in microphone records sound.

3. LCD Display

This panel is where the system content is displayed. The LCD panel has a maximum opening of 135 degrees. Do not push it down forcibly.

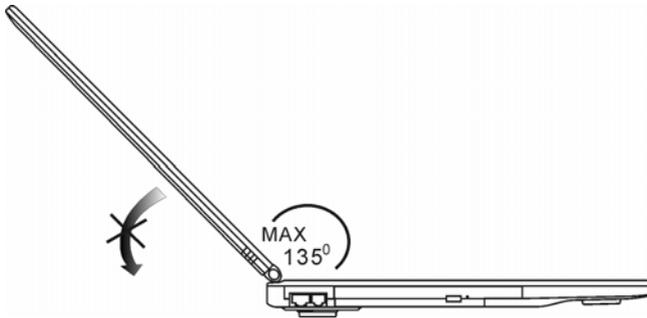

4. Built-in Stereo Speakers

The built-in speakers output the sound in stereo.

5. Keyboard

The keyboard is used to enter data. It has an embedded numeric keypad and cursor control keys. (See Keyboard Section for details.)

6. Touchpad

The touchpad is a built-in pointing device with functions similar to a mouse.

7. LED Status Indicator

The LED Status indicators reveal the status of these functions: Numeric keypad, cap lock, scroll lock, WLAN module enabling and disabling, and also the ODD/HDD activities. (See the LED Status Indicator Section for details.) The LED Status indicators also reveal the status of the system power state and battery-charging state. See the LED Status Indicator Section for details.

8. Power/Suspend Button

The power/suspend button turns the notebook on and off and also acts as a system suspend key. Press it momentarily to turn on the system. Press and hold it for at least 4 seconds to turn off the system. How this key behaves can be defined in the [Start >

Settings > Control Panel > Power Options > Advanced] menu. Press the power / suspend button again to return from the suspend mode. (See Chapter 3 for more details on system suspend function.)



Note: When the system power is initially turned on, the Scroll-lock, Cap-lock, and Numeric keypad LED indicators will light up momentarily to indicate the start of the Power-On sequence.

9. Wireless On/Off Button

Press the switch to disable or enable the wireless function. If the WLAN function is enabled, the WLAN LED turns green; otherwise, the WLAN LED is dark.

10. Instant-On Multimedia Player Launch Key

When the system is powered off, pressing the key launches a multimedia application that allows you to watch movies files, listen to music, or view photos in the optical drive or hard disk drive without having to boot to Windows.




Note: The way the Instant-On software works is that when the quick key is pressed (when the system is in Power-Off mode), the system boots to a Linux-based O/S and media player application.

11. Internet Explorer Quick Key

Pressing the button launches Internet Explorer in Windows.

Front and Rear View

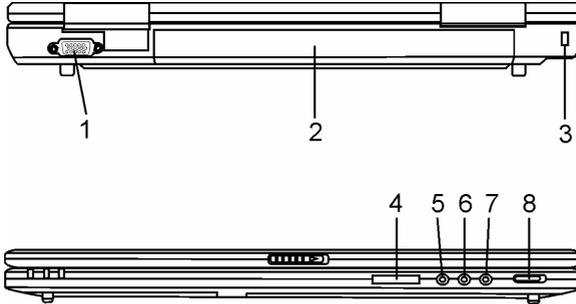

 **Warning:** Do not place any heavy objects on top of the notebook. This may damage the display.

1. External VGA Port

The 15-pin VGA analog port is for connecting the external CRT monitor or projector.

2. Battery Pack

The battery pack is a built-in power source for the notebook.

3. Kensington Lock Key Hole

A Kensington-type security lock latches to this keyhole for anti-theft purposes.

4. 4-in-1 Card Reader

The 4-in-1 card reader supports SD cards, MS cards, MMC cards, and MS-Pro cards.

5. Microphone Jack

The microphone jack (3.5-mm diameter) is where you connect a microphone.

6. Audio Line-in Jack

The audio line-in jack (3.5-mm diameter) is where you connect an external audio input source such as a CD player.


7. Stereo Headphone/SPDIF-out Jack

The stereo headphone jack (3.5-mm diameter) is where you connect the headphones or external speakers. Alternatively, you may connect the SPDIF output to an external DTS, AC3, or PCM sound processor/decoder in your home stereo system.

8. External VGA On/Off Switch

You must make the selection before you turn on the notebook. If you leave the switch in the ON position, the computer will boot to the external graphic engine (NVIDIA GeForce Go 6600, which has higher performance and higher power consumption). If you leave the switch in the OFF position, the computer will boot to the integrated graphics engine (Intel GMA900 Extreme3, which has lower performance and lower power consumption).

Side Views

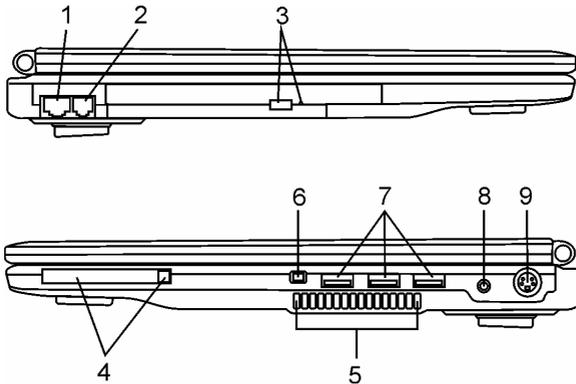

Warning: Do not place any heavy objects on top of the notebook. This may damage the display.

1. Ethernet/LAN Port

The port connects to a network hub via the RJ-45 cable and also conforms to 10/100Base-TX transmission protocol.

2. Modem Port

This is where you plug the phone jack (RJ-11) for fax/modem functions.

3. Optical Drive and Disk Eject Button and Manual Eject Key Hole

If your computer comes with the combo drive, DVD-RW, DVD+RW, or DVD-Dual drive, you may save data onto a CD-R/CD-RW or DVD RW disc. Press the eject button to eject the disk tray. The manual eject keyhole allows you to manually eject a jammed disk.

4. PC Card Slot (Type II PCMCIA) and Card Eject Button

The slot is where the PC card (Type II PCMCIA) is inserted. Press the eject button to release the PC card.

5. Ventilation Grill

The fan grill is where air is exchanged to dissipate the internal heat. Do not block this airway completely.

6. Firewire/IEEE1394 / 1394a Port

This is a high-speed serial data port. You may connect any Firewire-ready device to this port.

7. USB2.0 Port (x3)

The Universal Serial Bus (USB2.0-compliant) port allows you to connect a wide variety of devices to your computer at a rate of up to 480 Mbps. This port conforms to the latest USB2.0 plug-and-play standards.


8. Power Jack (DC-in)

The DC-out jack of the AC adapter connects here and powers the computer.

9. TV (S-Video) Port


The S-Video port permits you to redirect the screen output to a television set or any analog video playback device. This TV port is copyright protected; when a DVD movie is played, the output is scrambled to prevent analog recording.

Bottom View

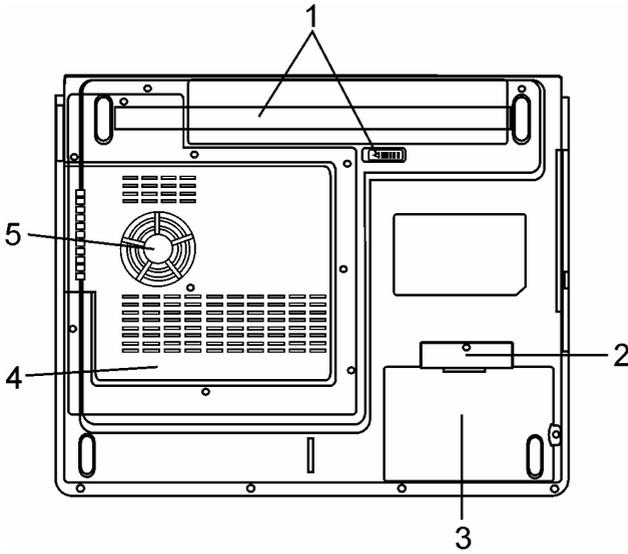

1. Battery Pack and Battery Latch

The battery pack is a built-in power source for the notebook. Slide the battery latch to release the battery pack.

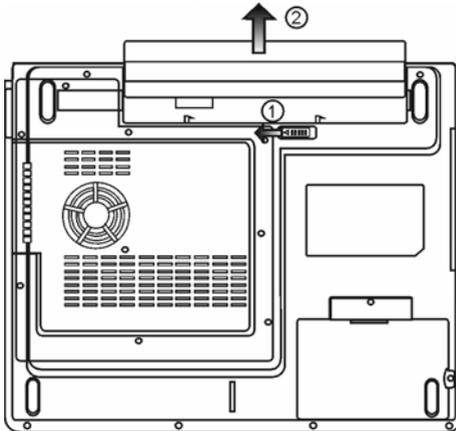

2. USB Device Cover (Optional)

Underneath the cover, there is a USB connector. You may install the optional Bluetooth module or USB thumb drive into this slot.

3. Hard Disk Drive Cover

The system's hard disk drive is located under the cover. The HDD can be upgraded to a larger capacity. (See Chapter 4 for instructions on a HDD upgrade.)

4. System Device Cover

The system's processor with cooler assembly, wireless LAN module, and DDR memory module are located under the case cover. You may install the WLAN module and the system memory can be upgraded to a larger capacity. (See Chapter 4 for instructions on a memory upgrade.)


5. Ventilation Grill

The fan grill is where air is exchanged to dissipate the internal heat. Do not block this airway completely.



Warning: Do not block the fan grill outlet. Place the machine on hard surfaces only. The bottom of the case may get very hot.

AC Adapter

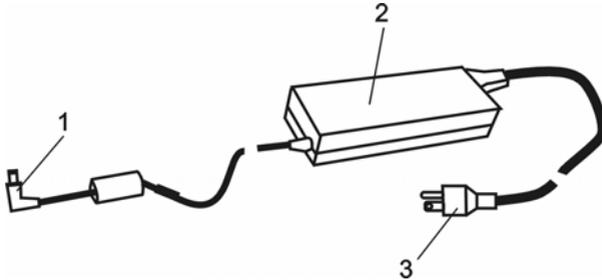

- 1. DC-out Connector**
The DC-out connector docks to the power jack (DC-in) on the computer.
- 2. Adapter**
The adapter converts alternating current into constant DC voltage for the computer.
- 3. AC Plug**
The AC plug plugs into the AC wall outlet.



Warning: Make sure you are using a standard 3-prong AC wall socket with a ground pin. If not, you may feel a slight tingling sensation on any of the computer's metal parts such as the I/O ports. This is caused by leakage current when the AC adapter is not properly grounded (via the ground pin). However, the amount of leakage current is within the safety regulation and is not harmful to the human body.

LED Status Indicator

The LED Status Indicator displays the operating status of your notebook. When a certain function is enabled, an LED will light up. The following section describes its indication.

System & Power Status Indicators

LED Graphic Symbol	Indication
	Blue light indicates the WLAN module is active.
	Blinking blue light indicates the notebook is in suspend mode. Persistent blue light indicates the Silent mode is active.
	Blinking blue light indicates the battery is being charged. Blinking red light indicates the battery power is low when the system is turned ON. Persistent blue light indicates the battery is full.
	Blue light indicates the hard drive and/or optical drive are being accessed.
	Blue light indicates the numeric keypad is activated.
	Blue light indicates the Cap-Lock is activated.
	Blue light indicates the Scroll-Lock is activated.



Note: When the system power is initially turned on, the Scroll-Lock, Cap-Lock, and Numeric keypad LED indicators will light up momentarily to indicate the start of the Power-On sequence.

Keyboard Features

Function Keys (Quick Keys)

Graphic Symbol	Action	System Control
	Fn + F1	Enters suspend mode.
	Fn + F3	Audio mute on or off.
	Fn + F4	Changes display mode: LCD-only, CRT-only and LCD&CRT.
	Fn + F5	Turns speaker volume up.
	Fn + F6	Turns speaker volume down.
	Fn + F7	Increases display brightness.
	Fn + F8	Decreases display brightness.
	Fn+Num Lk	Enables the embedded keypad to work in numeric mode. The keys act like numeric keypads in a calculator. Use this mode when you need to do a lot of numeric data entry. An alternative would be to connect an external numeric keypad.
	Fn + Scr Lk	Press the Scroll Lock key and then press  or  to move one line up or down.

For various system controls, press the Fn (Function) key and the Fx key simultaneously.

Windows Keys

Your keyboard also has two Windows keys:



1. Start Key

This key allows you to pull up the Windows Start Menu at the bottom of the taskbar.




2. Application Menu Key

This key brings up the popup menu for the application, similar to a click of the right mouse button.

Embedded Numeric Keypad

Press Fn+NumLk to enable the embedded numeric keypad. The numbers are printed in the upper right corner of a key in a color different from the normal characters. This keypad also includes arithmetic operators (+, -, *, /).

Press Fn+NumLk to revert to normal character keys.

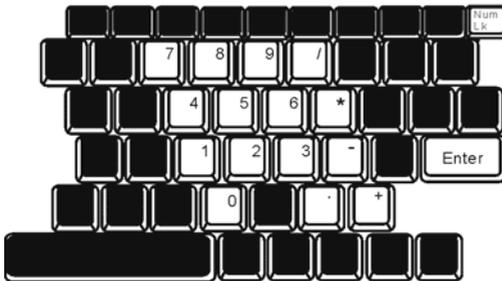

Touchpad

The built-in touchpad, which is a PS/2-compatible pointing device, senses movement on its surface. As you move your fingertip on the surface of the pad, the cursor responds accordingly.

The following items teach you how to use the touchpad:

1. Move your finger across the touchpad to move the cursor.
2. Press buttons to select or execute functions. These two buttons are similar to the left and right buttons on a mouse. Tapping on the touchpad twice is similar to clicking the left button of a mouse.

Function	Left Button	Right Button	Equivalent Tapping Action
Execution	Click twice quickly		Tap twice (at the same speed as double-clicking the mouse button)
Selection	Click once		Tap once
Drag	Click and hold to drag the cursor		Tap twice quickly and on the second tap hold your finger to the touchpad to drag the cursor
Access Context Menu		Click once	
Move One Page Up or Down			

Tips on Using the Touchpad:

1. The double-click speed is timed. If you double-click too slowly, your notebook will respond as if you single-clicked twice.
2. Keep your fingers dry and clean when using the touchpad. Also keep the surface of the touchpad clean and dry to prolong its life.
3. The touchpad is sensitive to finger movements. Hence, the lighter the touch, the better the response. A heavy touch does not produce a better response.

Graphic Subsystem

Your computer uses a high performance 15-inch or 15.4-inch (wide) active matrix TFT panel with high resolution and multi-million colors for comfortable viewing. The system has two graphics engines built-in. A switch allows you to choose either the external MXM graphics engine or the integrated Intel GMA900 Extreme3 graphics engine. This unique feature gives you the flexibility to select the graphics engine that is best-suited for your needs – higher performance or lower battery consumption. Both graphics engines are DirectX 9-compatible.

Adjusting the Display Brightness

The notebook uses special key combinations, called hot keys, to control brightness.

Press Fn+F7 to increase the brightness.

Press Fn+F8 to decrease the brightness.



Note: To maximize your battery operating time, set the brightness to the lowest comfortable setting, so that the internal backlight uses less power.

Extending the Life of the TFT Display Device


Observe the following guidelines to maximize the life of the backlight in the display:

1. Set the brightness to the lowest comfortable setting (Fn+F8).
2. When working at your desk, connect your notebook to an external monitor and disable the internal display Fn+ F4.
3. Do not disable the suspend time-outs.
4. If you are using AC power and have no external monitor

attached, change to suspend mode when not in use.

Opening and Closing the Display Panel

To open the display, push the LCD latch inwardly and lift up the lid. Then tilt it to a comfortable viewing position. The LCD panel has a maximum opening of 135 degrees. Do not push it down forcibly.

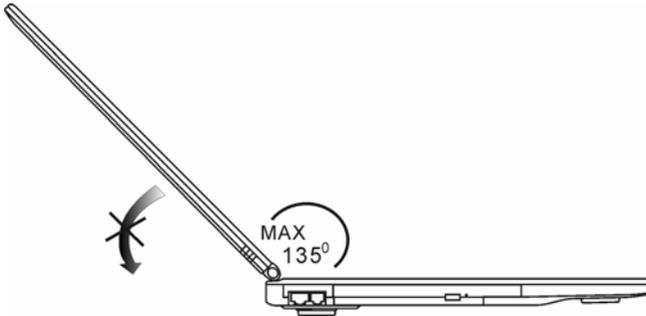

To close the display cover, fold it down gently until the LCD latches click into place.

Warning: To avoid damaging the display, do not slam it when closing. Do not place any object on top of the computer when the display is closed

Audio Subsystem

Your computer's audio subsystem is Sound Blaster Pro-compatible.

Adjusting the Volume Manually

To increase the volume, press Fn+ F5.

To decrease the volume, press Fn+F6.

Adjusting the Audio Volume in Windows

1. Click the speaker symbol in the task tray in Windows.
2. Drag the volume control bar up or down to adjust the volume.
3. To temporarily silence the speaker without changing the volume setting, click Mute.

Voice Recording

A built-in microphone allows you to record sound. You will need to use audio processing software to enable the built-in microphone.

For example, you may use Microsoft Sound Recorder.

Modem

Your computer comes with a 56K V.92 internal fax/modem and a phone jack (RJ-11), which is located on the left side of your computer.

Use a telephone cable to connect the computer to the telephone wall outlet.


Connecting the Modem

1. Plug one end of the phone line into the modem port located on the rear side of the computer. (For EMI compliance, you need to clip the included EMI CORE to the phone line.)
2. Plug the other end of the line into the analog phone wall outlet.

Depending on where your computer is used, you may need to change settings in the modem. The correct settings will allow you to maintain a stable connection in a country where the telecommunication system may be different to others.

To change the modem setting, do the following:

1. Go to [Start > Settings > Control Panel] and double-click on the Modem Settings icon. You will see a similar dialog box.

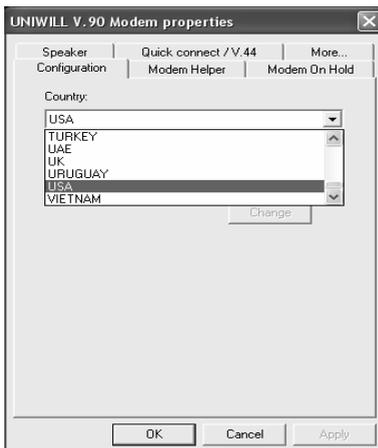

2. Click on the pull-down menu and select the country where it is applicable. Click on OK to exit.

Ethernet

Your computer is equipped with a 10/100Base-TX or 10/100/1000Base-TX Fast Ethernet network adapter. Connect the active LAN cable to the RJ-45 LAN port located on the left side of the computer. This allows you to access and transmit data in the local area network.

Connecting to the Network

Use an Unshielded Twisted Pair (UTP) Ethernet cable only.

1. Insert one end of the UTP cable into the network connector until the connector snaps securely into the receptacle.
2. Connect the other end of the cable to either an RJ-45 jack wall outlet or to an RJ-45 port on a UTP concentrator or hub in the network.

Cabling Restriction for Networks

The following restrictions should be observed for

10/100/1000BASE-TX networks:

The maximum cable run length is 100 meters(m) (328 feet[ft]).

For 100Mbps or 1000Mbps operations, use Category 5 wiring and connections.



Note: Consult the Windows manual and/or the Novell Netware user's guide for the software installation, configuration, and operation of the network.

C H A P T E R T W O

BIOS SETUP AND SECURITY FEATURE

In this chapter, you will learn how to enter the BIOS Setup Menu and manipulate various hardware control settings. You will also learn how to use the built-in security features.

The Setup Utility is a hardware configuration program built into your computer's BIOS (Basic Input/Output System). It runs and maintains a variety of hardware functions. It is menu-driven to allow you to easily configure and change the settings.

The BIOS contains the manufacturer's default settings for the computer's standard operations. However, there are occasions when you may be required to modify the default settings in the BIOS. For example, you may need to configure the BIOS power management (APM) settings if you are using DOS or a non-Windows operating system.

The BIOS allows you to set up passwords to limit access to users. This is an important feature because a great deal of vital information is carried within a computer nowadays. Unauthorized access can be prevented. Later in this chapter, you will learn how to use this security feature.

Entering the BIOS Setup Screen

First, turn on the power. When the BIOS performs the POST (Power-On Self Test), press the F2 key quickly to activate the AMI BIOS Setup Utility.



Note: You may need to press the F2 key fairly quickly. Once the system begins to load Windows, you may have to retry by cycle-power on again.

Leaving the BIOS Setup Screen

When you have finished modifying the BIOS settings, exit the BIOS. It takes a few seconds to record changes in the CMOS.

BIOS Action Keys

Function Key	Command	Description
ESC	Exit	Leaves a sub-menu to return to the previous menu OR exits the BIOS setup while saving changes.
Enter	Go to Sub Screen	Shows the Sub Menu
F1	General Help	Shows the Help Screen
F10	Save and Exit	Saves changes and reboots the computer.
<Tab>	Select a field	Selects the next field.
	Select an item	Selects the next upper item.
	Select an item	Selects the next lower item.
-	Lower value	Selects the next value within a field.
+	Higher value	Selects the next value within a field.

Modifying the BIOS Settings

The AMIBIOS setup main menu is divided into sub-menus. Each menu item is described in this section.

Main Setup

Under this menu, you may change the time/date and view basic processor and system memory information.

Item	Selections / Sub-menu	Description
Date	N/A	Type in the current date in MM/DD/YY format.
Time	N/A	Type in the current date in HH:MM:SS format.

Advanced Setup

IDE Configuration

Item	Selections / Sub-menu	Description
Primary IDE Master	Hard Disk	The primary master is where BIOS tries to boot from first. The primary master controls the hard drive.
Secondary IDE Master	ATAPI CDROM	The secondary master controls the ATAPI CD-ROM drive.



Note: The sub-menu is not selectable. Press enter to view information about the

storage device.

Item	Selections / Sub-menu	Description
Touchpad Support	Enabled Disabled	Enable or disable the built-in touchpad.
LCD Auto DIMM Function	Enable Disable	[Enable]: The system automatically reduces the LCD brightness when AC power is removed to save power. [Disable]: The LCD brightness remains the same whether or not AC power is present.
BIOS Post Beep Sound	Enable Disable	[Enable]: The system beeps when performing POST on boot. [Disable]: The beep is disabled.

Security Setup

Boot Settings Configuration

Item	Selections / Sub-menu	Description
Change Supervisor Password	N/A	Install or change the password.
Change User Password	N/A	Install or change the password

Using Password Protection

Two levels of password protection are available. The BIOS provides both a Supervisor and a User password. If you try to activate both

passwords, the Supervisor password must be set first.

The passwords activate two different levels of protection:

1. The system always asks for a password every time it is powered on.
2. The system asks for a password only when you attempt to enter the BIOS utility.

The passwords are encrypted and stored in NVRAM. Make sure you write them down or memorize them. If you lost the passwords, the computer may need to be sent back to the factory or to an authorized service dealer to reset the passwords.

Power Setup

Item	Selections / Sub-menu	Description
Power Button Mode	On/Off Suspend	[On/Off]: When the power button is pressed, the system is turned off. [Suspend]: When the power button is pressed, the system enters the suspend mode.
High Performance Mode	Enable Disable	When enabled, maximum system performance can be achieved. The processor performance is enhanced.
Long Battery Life Mode	Enable Disable	When enabled, maximum battery life can be achieved. The processor performance is lowered.



Note: The suspend mode selection in BIOS only applies to older Windows versions

(such as Windows 3.1 or Windows 95 or NT4) or non-Windows operating systems. In Windows ME/98SE/2000/XP, the suspend mode and settings are determined by settings in the Power Options Properties (Start > Control Panel > Power Options).

Boot Setup

Boot Settings Configuration

Item	Selections / Sub-menu	Description
Quiet Boot	Disabled Enabled	When enabled, the system will display the OEM logo instead of POST messages. When disabled, the system will display POST messages (i.e. device information.)

Boot Device Priority

Item	Selections / Sub-menu	Description
1st Boot Device	Removable Dev. CD/DVD Hard Drive Realtek Boot Agent Disabled	Set the type of device for the 1st drive BIOS attempts to boot from. If Realtek Boot Agent is selected, the system will attempt to load the boot sector from the Ethernet port.
2nd Boot Device		Set the type of device for the 2nd drive BIOS attempts to boot from.
3rd Boot Device		Set the type of device for the 3rd drive BIOS attempts to boot from.
4th Boot Device		Set the type of device for the 4th drive BIOS attempts to boot from.



Note: If you select Realtek Boot Agent, the system will attempt to boot from the network.

Note: When the BIOS performs POST, you may also press the F12 Key to enable the Boot Device selection menu. You may choose CD/DVD, Hard Drive, or Realtek Boot Agent as the first storage device to boot from. If you have already connected a USB floppy disk drive before powering up, it will appear as a Removable Device in the Boot Device selection menu

Exit Setup

Item	Selections / Sub-menu	Description
Saves Changes and Exit	N/A	After you have completed the BIOS settings, select this item to save all settings, exit the BIOS Setup utility, and reboot. New system settings will take effect on the next power-up. The F10 key can be used for this operation.
Discard Changes and Exit	N/A	Discards changes done so far to any of the setup questions and exit.
Discard Changes	N/A	Discards changes done so far to any of the setup questions.
Load Optimal Defaults	N/A	Loads the optimal default value for all the setup questions. The F9 key can be used for this operation.

C H A P T E R T H R E E

BATTERY POWER & POWER MANAGEMENT

In this chapter, you will learn the fundamentals of power management and how to use it to achieve longer battery life.

In this chapter, you will learn how to operate your notebook on battery power, how to handle and maintain the battery pack, and learn about the system's power saving features.

The TFT display, central processor, and hard disk drive are the major hardware subsystems that consume the most power. Power management deals with how these key components should behave to conserve power. For example, you can have the system turn off its display after 2 minutes of inactivity to save power. Efficient power management can help you work longer sessions before having to recharge the battery.

The Battery Pack

Lithium-Ion Battery

Your notebook uses a six-cell or nine-cell (optional) Lithium-Ion battery pack that provides power when you don't have access to an AC outlet.



Note: It is necessary that you charge the battery pack for at least 6 hours before using it for the first time.

Note: In the standby suspend mode, a fully charged battery loses its power in roughly 1/2 of a day or less. When not being used, the battery's power will deplete in 1-2 months.

Battery Low-Power Warning

1. Low Battery Warning

A low battery condition occurs when battery power is reduced to 6%. The red battery status LED indicator will blink and the system will beep once every 16 seconds or so.

2. Very Low Battery Warning

A very low battery condition occurs when battery power is reduced to 3%. The red battery status LED indicator will blink and the system will beep at 4-second intervals.

When the notebook warns you of its low battery condition, you will have about 3-5 minutes to save your current work.



Warning: Do not expose battery packs to temperatures below 0 degrees Celsius (32 degrees F) or above 60 degrees C (140F). These temperatures may adversely affect the battery pack.




Note: Press Fn+F3 to turn off the battery warning beep.

Installing and Removing the Battery Pack


To Remove the Battery Pack:

1. Place the notebook bottom-side up on a flat and secure surface.
2. Push the latch and pull the battery's hard case away from the notebook.

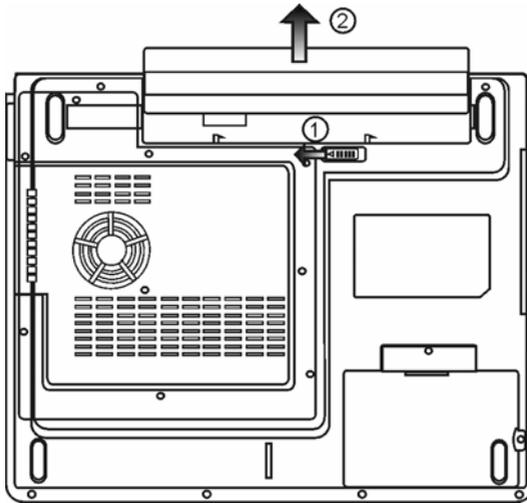

To Install the Battery Pack:

1. Place the notebook bottom-side up on a flat and secure surface.
2. Carefully insert the battery pack into the battery compartment of the notebook.

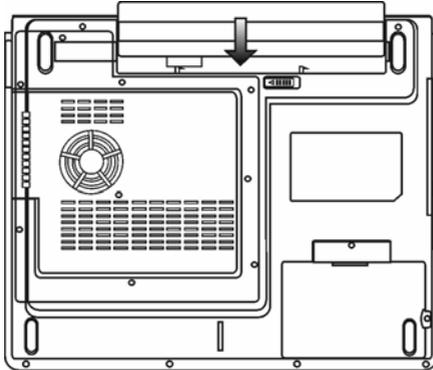

Charging the Battery and Charging Time

To charge the battery while the battery pack is in the notebook, plug the AC adapter into the notebook and an electrical outlet. The charging time is approximately 4-6 hours when the notebook is turned off and approximately 6-10 hours when the notebook is turned on. When the battery is fully charged, the battery charge indicator becomes blue.



Note: If the system runs at heavy loading or in a high-temperature environment, the battery may not be fully charged. You need to continue to charge it with the AC adapter plugged in until the charging LED turns blue.

Checking the Battery Level

You can check the remaining battery power in the Windows battery status indicator, which is located at the lower right-hand corner of the task bar. (If you do not see a battery or AC-in icon on the task tray, go to the Power Options Properties box and click on the Advanced tab. Check off ``Always show icon on the task bar``.) Alternatively, you can access the power meter by clicking the Power Options icon in the Windows Control Panel.

Prolonging the Battery's Life and Usage Cycles

There are things you can do to prolong the use of the battery:

Use the AC adapter wherever an AC wall outlet is available. This will ensure uninterrupted computing.

Purchase an additional battery pack.

Store the battery pack at room temperature. Higher temperatures tend to deplete the battery's power faster.

Make good use of the power management function. The Save To Disk (Hibernate) option saves the most energy by storing current system contents in a hard disk space reserved for this function.

The life expectancy of the battery is approximately 300 recharges.

See the notices section in the beginning of the user manual on how to care for the battery pack.



Note: Read the section about protecting your notebook in the beginning of this manual for tips on how to maintain the battery pack.

Note: To achieve optimal battery performance, you may need to do a battery calibration at a 3-month interval. To do this:

1. Fully charge the battery.
 2. Discharge the battery by entering the BIOS setup screen. (Press the F2 key as soon as you turn on the computer. Let it remain at the setup screen until the battery runs out.)
 3. Fully charge the battery again.
-


Using Windows Power Options

Windows Power Management provides basic power saving features. In the Windows Power Options Properties [Start > Settings > Control Panel > Power Options] dialogue box, you may enter time-out values for the display and hard disk drive. Windows Power Management saves power by turning off the hard drive after 1 minute of inactivity, for example.

Windows' Power Schemes

The power management control panel in Windows XP, known as Power Schemes, is designed to provide the user with an easy-to-use interface. The Power Schemes tab can be found in the Power Options Properties panel that is accessible via the control panel window. Schemes are easy to understand, are based on notebook usage scenarios, and control not only processor power usage but other system peripherals as well. Go to [Start > Settings > Control Panel] and double-click the Power Options icon.

The *Always on* mode puts the processor into maximum performance mode, which provides no power saving. The other schemes control processor performance based on demand. For example, Max Battery mode lowers the processor's speed and voltage to conserve power as much as possible.

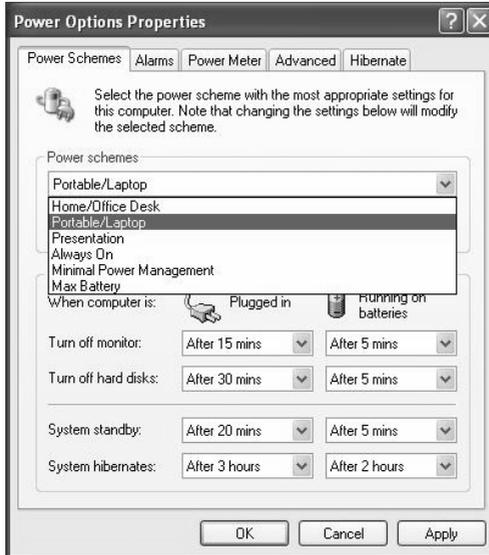

In this dialog box, you can manually set the LCD and hard drive's time-out values in the Plugged-in column and in the Running on Batteries column. Lower time-out values will save more battery power.



Note: Also consult the Windows user guide for more information on how to use Windows power management functions.

Note: The actual dialogue box may appear slightly different than the dialog box shown above.

Suspend Mode

Standby Suspend

The system automatically enters this mode after a period of inactivity, which is set in the Power Schemes dialog box. In Standby mode, hardware devices, such as the display panel and hard disk, are turned off to conserve energy.

Hibernate Suspend

In this mode, all system data is saved in the hard disk before powering down. When this mode is activated, all system states and contents are saved to the hard disk drive after a period of inactivity defined by the user. No power or very little power is drawn from the battery module under this mode. However, depending on how much RAM has been installed on your computer, the amount of time the system requires to restore all its previous contents can range from 5 to 20 seconds.

For Windows 2000/XP users, hibernation is handled by the operating system; therefore, no special disk partition or disk file is necessary. If you wish to activate the Hibernate mode, you need to enable Hibernate Support in the Hibernate tab of the Power Options menu.




Note: Do not install or remove the memory module when the system is in the suspend mode.

Note: The actual dialogue box may appear slightly different than the dialog box shown above.

Power Button Action

The notebook PC's power button can be set to turn off the system or activate the suspend mode.

Go to [Start > Settings > Control Panel > Power Options] and click on the Advanced tab. In the pull-down menu, select how you wish the power button to work.

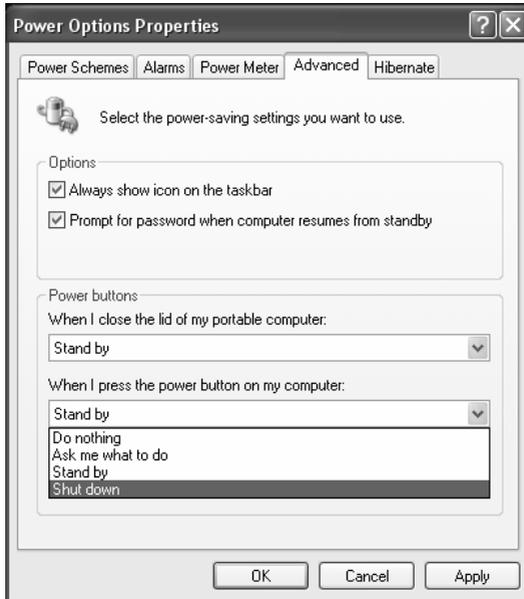

Note: The actual dialogue box may appear slightly different than the dialog box shown above.




Warning: In the *When I close the lid of my portable computer* pull-down menu, DO NOT select *Do nothing* – otherwise the system will still run at high speed while the processor's fan grill is fully blocked by the closed LCD panel. The heat will damage the LCD panel.

Low Battery Warning

You can define when and how the system warns you of its low-battery condition.

Go to the Alarms tab in the Power Options Properties box. If you wish to hear audible beeps, click on the Alarm Action button and put a check on Sound Alarm.

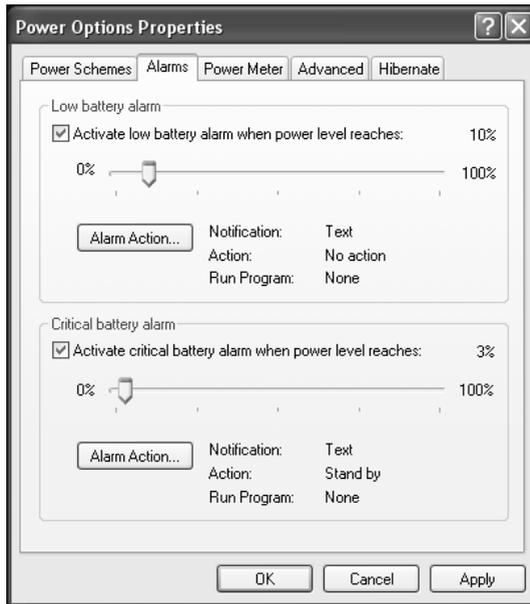


Note: Consult the Windows user guide for more information on how to use Windows power management functions.

Note: The actual dialogue box may appear slightly different than the dialog box shown above.

Power Menu Quick Access

Instead of making specific selections in the Power Options Properties box, you can quickly and easily specify which pre-set power saving function you desire by clicking on the battery icon at the lower right-hand corner of the task bar. (If you do not see a battery or AC-in icon, go to the Power Options Properties box and click on the Advanced tab. Check off ``Always show icon on the task bar``.) Select Max Battery if you want the system to enter suspend mode more often. Or select Always On if your notebook PC is plugged into an AC power source.

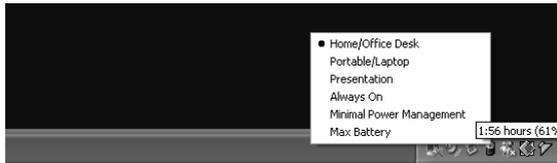

Note: The actual dialogue box may appear slightly different than the dialog box shown above.

C H A P T E R F O U R

UPGRADING YOUR COMPUTER

In this chapter, you will learn how to upgrade the DRAM and hard disk drive, as well as how to install the optional wireless LAN mini PCI.

Upgrading the Hard Disk Drive

Replacing the original drive with one of larger capacity can increase the hard drive capacity of your computer. Depending on the model, the computer may use a 9.5 mm (height), 2.5-inch Ultra ATA-type hard disk drive.

Before the upgrade: In order to find out what type of hard disk drive the system uses, you need to follow the steps below to remove the hard disk drive and identify the drive's model number. Then look up the drive's model number in the HDD manufacturer's website to find out what type of hard disk your notebook uses.

Be sure to make a backup copy of all your data before attempting this operation.



Warning: A hard drive upgrade is a delicate process. Please observe the following instructions carefully or have a qualified technician install it for you. Damages due to mishandling of this procedure are NOT covered by the manufacturer's warranty.



Warning: Apply care when handling the hard disk.

Do not drop or apply any shock.

Do not press on the cover.

Do not touch the connector with your fingertips.

Mishandling of the hard drive can result in permanent loss of data. Make a backup copy of the drive's content before you remove it.




Note: Certain models that come with the IBM-brand hard drive emit a clattering sound when they are being rattled. This is a normal condition.


Upgrading the Hard Disk Drive

To replace the hard disk drive, do the following:


1. Turn OFF the computer. Unhook the AC cord and all cables/devices attached to the notebook. Remove the battery.
2. Place your hand on a large metal object momentarily to discharge any static electricity.
3. Locate and remove Screw A.
4. Remove the HDD cover.

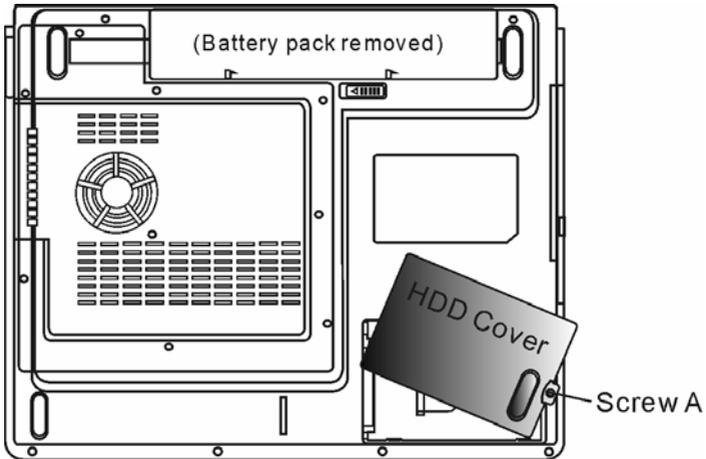

5. Push the HDD module to the right and separate it from the connector. Lift the module away from the bay.

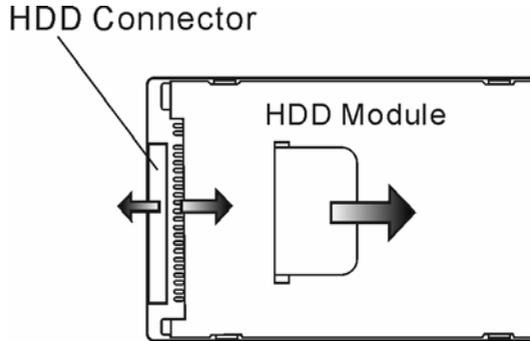

6. Locate and remove the 4 Screw B's from the HDD module. Remove the upper and lower metal cases.

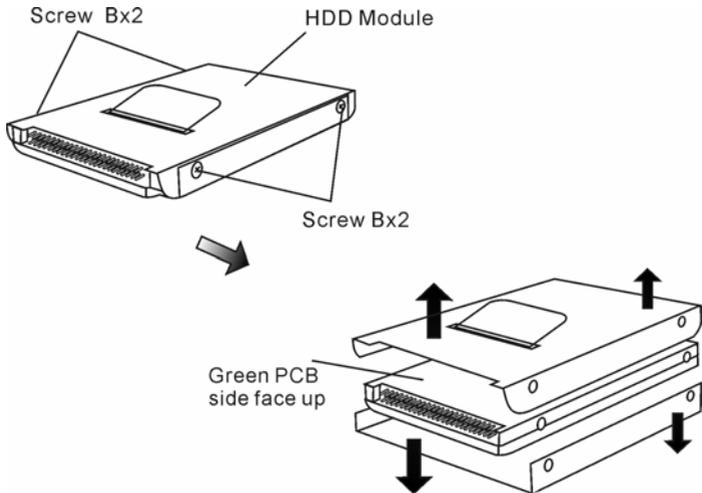

7. Re-attach the metal cases to the new hard drive and tighten the 4 Screw B's. Note that the green PC board of the hard disk drive is facing up.
8. Re-attach the HDD module to the HDD connector.
9. Put the HDD cover back and re-attach Screw A.

Congratulations! You have now completed the hard drive upgrade.

When you boot up the PC, you may need to create a primary HDD partition, reformat the new drive, and re-install the O/S, drivers, and all necessary applications.

Upgrading the System Memory

Many applications will generally run faster when the computer's dynamic memory capacity is increased. The computer provides two DDR memory sockets, which are located underneath the system device cover. You can increase the amount of memory by replacing the existing one with a dual inline memory module (commonly known as SO-DIMM) of a higher capacity. The SO-DIMM can be 128MB, 256MB, 512MB, or higher in capacity. Depending on the model, your computer may use DDR I SDRAM (2.5V) or DDR II SDRAM (1.8V).

Before the upgrade: In order to find out what type of DDR module the system uses, you need to reboot the system. The initial boot message shows you what type of DDR SDRAM module your notebook uses.



Warning: A memory upgrade is a delicate process. Please observe the following instructions carefully or have a qualified technician install it for you. Damages due to mishandling of this procedure are NOT covered by the manufacturer's warranty.



Warning: Changing memory while your computer is in suspend or power-saving mode may cause permanent damage to the hardware. Make sure you turn off the power and unplug the AC cord before proceeding with a memory upgrade.




Warning: You should only use the DIMM module that is approved by the reseller or the manufacturer; otherwise the system may become unstable.


Installing a Memory Module (DIMM) into the System

To install the DIMM, do the following:


1. Power OFF the notebook. Unplug the AC cord and all cables/devices attached to the notebook. Remove the battery.
2. Place your hand on a large metal object momentarily to discharge any static electricity. Place the notebook on a flat surface and fully close the LCD lid.
3. Locate and remove the 9 Screw C's on the system device cover.

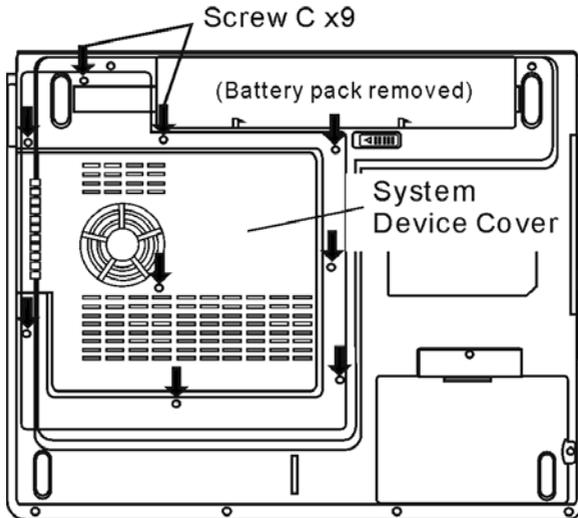


4. Remove the system device cover. The DIMM socket is now seen as shown in the following diagram.

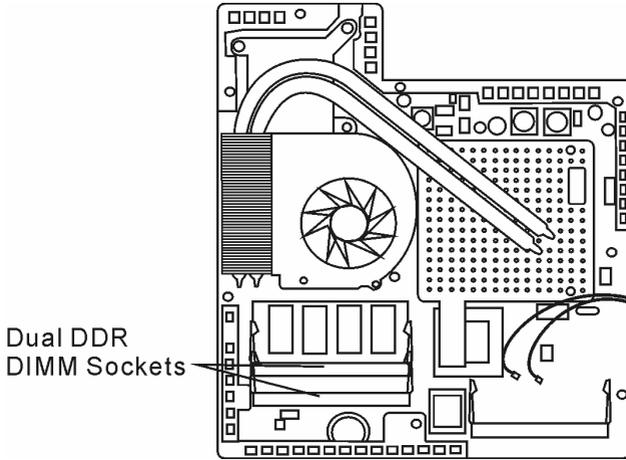

5. If you need to remove an old DIMM from the socket, press out on the latches located on both edges of the socket at the same time. The DIMM should pop up to an angle of 30 degrees (see diagram below). Pull the DIMM module out of the memory socket. Store away the DIMM for future use.

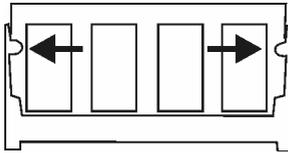

6. Install the new DIMM module into the memory socket. The DIMM will only fit in one orientation. Insert the DIMM at an angle of approximately 30 degrees into the empty memory socket. Then press it firmly so that the contact edge is driven into the receiving socket.

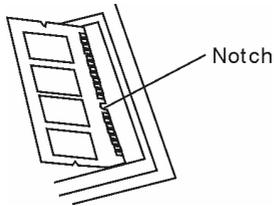


7. Pivot the DIMM until the latches on both sides of the socket snap into place.



Note: Notice the notch on the DIMM. The notches should fit nicely with the socket.

8. Put the system device cover back and tighten the 9 Screw C's.

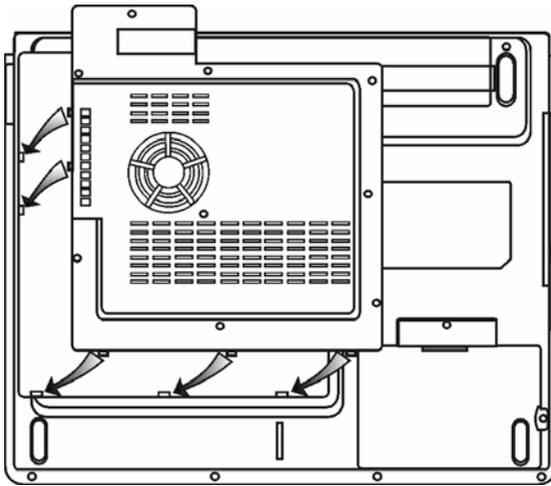

Congratulations! You have just completed the memory upgrade. When you boot up the computer, you should expect to see an increase in DRAM capacity.



Note: Your computer has been tested with a wide range of DIMM on the market. However, not all memory modules are compatible. Check with your system vendor for a list of compatible DIMM for your computer.

Adding a Mini PCI-Type Wireless LAN Card (Optional Device)

Your computer comes with a unique mini PCI card socket, which is located next to the DRAM socket and underneath the WLAN module cover. The socket allows the computer to add unique features such as wireless LAN (IEEE802.11x). Ask your dealer about the availability of the mini PCI card.



Warning: Installing a mini PCI card is a delicate process. Please observe the following instructions carefully or have a qualified technician install it for you. Damages due to mishandling of this procedure are NOT covered by the manufacturer's warranty.




Warning: Installing the mini PCI card while your computer is in suspend or power-saving mode may cause permanent damage to the hardware. Make sure you turn off the power and unplug the AC cord before proceeding with a memory upgrade.

Installing a Mini PCI Card into the System

To install a new mini PCI card, do the following:

1. Follow the steps in the earlier section, *Installing a Memory Module (DIMM) into the System*, to access the mini PCI socket.

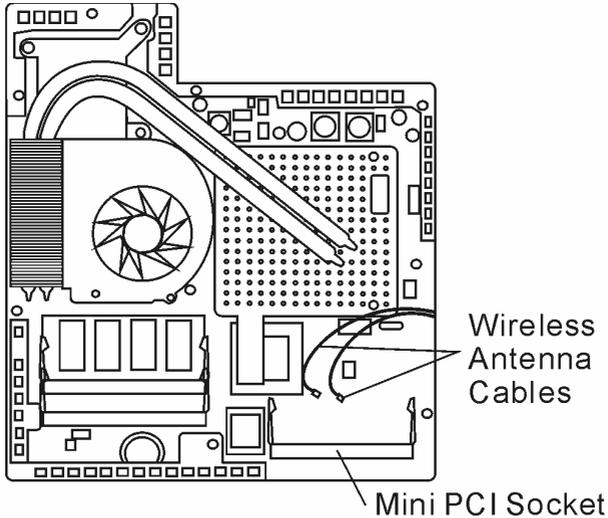


2. The mini PCI card will only fit in one direction. Align the small notch in the module with the socket on the connector and insert the card at an angle of approximately 30 degrees into the empty socket. Then press it firmly so that the contact edge is driven into the receiving socket. Pivot the mini PCI card until the latches on both sides of the socket snap into place.



Note: If you want to remove a mini PCI card from the socket, press out on the latches located on both edges of the socket at the same time. The card should pop up to an angle of 30 degrees.

3. Locate the 2 antenna cables with connectors. Snap the cable onto the golden connector on the mini PCI wireless LAN card. (*Note: The connectors are fairly small, so this may take some maneuvering. You may want to connect the antenna cables before inserting the wireless card into the socket.*)

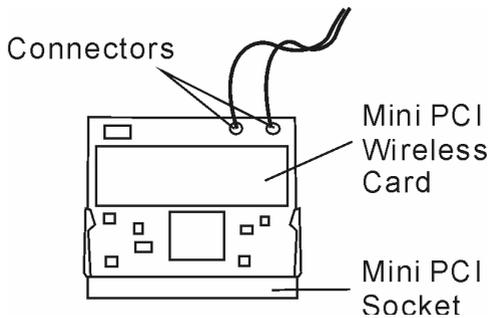

4. Put the system device cover back and tighten the 9 Screw C's.

Congratulations! You have now completed the mini PCI card installation. During the next time the system boots to Windows, the system will prompt for driver location. Insert the factory CD-ROM and point to the directory where the wireless LAN driver can be found. In addition to installing the driver, you may also need to run a Setup.exe program to install the card's utility applications before it is fully operational.

C H A P T E R F I V E

TROUBLESHOOTING

In this chapter, you will learn how to solve common hardware and software problems.

Your computer has been fully tested and complies with the system specifications before shipping. However, incorrect operations and/or mishandling may cause problems.

This chapter provides a reference for identifying and correcting common hardware and software problems that you may encounter.

When you encounter a problem, you should first try to go through the recommendations in this chapter. Instead of returning the computer and waiting for repair, you may be able to easily solve the problem by considering the following scenarios and possible solutions. If the error continues, contact your tech support for service information.

Before taking further actions, consider the following suggestions:

- Check to see if the problem persists when all the external devices are removed.
- Check to see that the green light indicator on the AC adapter is lit.
- Check to see that the power cord is properly plugged into the wall outlet and into the computer.
- Check to see that the power indicator of the computer is on.
- Check to see if your keyboard is operational by pressing and holding any key.
- Check for any incorrect or loose cable connections. Make sure the latches on the connectors latch securely on to the receptor end.
- Be sure you have not performed an incorrect setting on the hardware devices in the BIOS Setup utility. A faulty setting may

cause the system to misbehave. If you are not sure of the changes you made, try to restore all the settings to factory defaults.

- Be sure all the device drivers are installed properly. For example, without the audio driver properly installed, the speakers and microphone will not work.
- If external devices such as a USB camera, scanner, or printer do not function correctly when connected to the system, it is usually due to a problem with the device itself. Consult the device's manufacturer first.
- Some software programs which have not gone through rigorous coding and testing may cause problems during your routine use. Consult the software vendor for problem solving.
- Legacy peripherals are not plug-and-play capable. You need to restart the system with these devices powered up and connected first.
- Be sure to go to BIOS SETUP and load DEFAULT SETTING after BIOS re-flash.
- Be sure the Quick Key Lockout Switch on the bottom of the computer is not engaged; otherwise the quick keys will not work.

Audio Problems

No audio output -

- Software volume control is turned down in Microsoft Sound System or is muted. Double-click the speaker icon on the lower right corner of the taskbar to see if the speaker has been muted or turned down all the way.
- Most audio problems are software-related. If your computer worked before, chances are that the software may have been set incorrectly.
- Go to [Start > Settings > Control Panel] and double-click the sounds and audio devices icon. In the Audio page, make sure that Realtek HD Audio is the default playback device.

Sound cannot be recorded -

- Double-click the speaker icon on the lower right corner of the taskbar to see if the microphone has been muted.
 1. Click Options and select Properties.
 2. Select Recording and click the OK button.
 3. After clicking the OK button, the recording volume control panel will appear.
- Go to [Start > Settings > Control Panel] and double-click the multimedia icon (or sounds and audio devices icon). In the Volume or Audio page, make sure that Realtek HD Audio is the default recording device.

Hard Disk Problems

The hard disk drive does not work or is not recognizable -

- If you had just performed a hard disk upgrade, make sure that the hard drive connector is not loose and that the hard disk drive is also correctly seated. Remove it and reinsert it firmly, and then restart your PC. (Refer to Chapter 4 for details.)
- The new HDD may need to be partitioned and reformatted. The O/S and drivers will need to be re-installed as well.
- Check the hard disk indicator LED. When you access a file, the LED lamp should light up momentarily.
- The new HDD may be defective or is not compatible.
- If your computer has been subjected to static electricity or physical shock, you may have damaged the disk drive.

The hard drive is making abnormal whining noises -

- You should back up your files as soon as possible.
- Make sure the source of the noise is indeed from the hard drive and not from the fan or other devices.

The hard disk drive has reached its capacity -

- Run Disk Cleanup utility in Windows. [Start > All Programs > Accessories > System Tools > Disk Cleanup] The system will prompt you for what to do.
- Archive files or programs that you no longer use by moving them to an alternative storage medium (floppy disk, optical recordable disk, etc.) or by uninstalling programs that you no longer use.
- Many browsers store files in the hard drive as a cache to speed up the performance. Check the program's online help for

instructions on decreasing the cache size or on removing temporary Internet files.

- Empty the Recycle Bin to create more disk space. When you delete files, Windows saves them to the Recycle Bin.

The hard disk takes longer to read a file -

- If you have been using the drive for a period, the files may be fragmented. Go to [Start > Programs > Accessories > System Tools > Disk Defragmenter] to perform a disk defragmentation.

This operation may take a while.

- Interrupt requests or problems with other hardware devices may have occupied the CPU and will therefore slow down the system's performance.

The files are corrupted -

- Run the Error-checking utility in Windows to check the HDD. Double-click My Computer. Right-click C: and select Properties. Click Check Now in Error-checking in Tools.

Optical Drive Problems

The optical drive does not work -

- Try rebooting the system.
- The disk is damaged or files are not readable.
- After you have inserted a CD-ROM disk, it may take a moment before you can access its content.

The drive does not read any disks -

- The CD may not be properly seated in the tray. Make sure the disk is firmly seated onto the spindle.
- The disk is damaged or not readable.

The disk cannot be ejected -

- Normally, it takes a few seconds to eject the disk.
- If the disk cannot be ejected, it may be mechanically jammed. Straighten out a paper clip and insert it to a tiny hole next to the eject button. This should eject the disk tray. If not, return the unit for repair. Do not forcefully pull on the disk tray.

The combo or DVD RW drive (optional device) cannot record -

- You need to purchase and install a burner utility program to record files to a blank media.

Display Problems

The display panel is blank when the system is turned on -

- Make sure the computer is not in the standby or hibernate suspend modes. The display is turned off to conserve energy in these modes.

The screen is difficult to read -

- The display resolution should be set to at least 1024x768 for optimal viewing.
 1. Go to [Start > Settings > Control Panel] and double-click the display icon.
 2. Under the Settings page, set the screen resolution to at least 1024x768 and choose at least 256 colors.

The screen flickers -

- It is normal if the display flickers a few times while shutting down or powering up.

Keyboard and Mouse Problems

The built-in touchpad performs erratically -

- Make sure there is no excess perspiration or humidity on your hand when using the touchpad. Keep the surface of the touchpad clean and dry.
- Do not rest your palm or wrist on the surface of the touchpad while typing or using the touchpad.

The built-in keyboard accepts no input -

- If you are connecting an external keyboard to the system, the built-in keyboard may not work.
- Try restarting the system.

The characters on the screen repeat while I type.

- You may be holding the keys down too long while you're typing.
- Keep the keyboard clean. Dust and dirt under the keys could cause them to stick.
- Configure the keyboard to wait longer before the auto repeat feature starts. To adjust this feature, Go to [Start > Settings > Control Panel] and double-click the keyboard icon. A dialogue box shows up with the adjustable settings for the keyboard.

CMOS Battery Problem

A message “CMOS Checksum Failure” displays during the booting process or the time (clock) resets when booting -

- Try to reboot the system.
- If the message “CMOS Checksum Failure” appears during the booting procedure even after rebooting, it may indicate failure of the CMOS battery. If so, you need to replace the battery. This battery normally lasts two to five years. The battery is of type CR2032 (3V). You can replace it by yourself. The battery is located under the system device cover on the bottom of the notebook. See Chapter 4 for more details.

Memory Problems

The POST does not show an increased memory capacity when you have already installed additional memory -

- Certain brands of memory modules may not be compatible with your system. You should ask your tech support for a list of compatible DIMM.
- The memory module may not be installed properly. Go back to Chapter 4 to review the details of this operation.
- The memory module may be defective.

The O/S issues an insufficient memory error message during operation -

- This is often a software or Windows-related problem. A program is draining the memory resources.
- Close the application programs you're not using and restart the system.
- You may need to install an additional memory module. For instructions, go to Chapter 4: Upgrading Your Computer.

Modem Problems

The built-in modem does not respond -

- Make sure the modem driver is loaded properly.
- Go to [Start > Settings > Control Panel > Phone and Modem Options] and go to the Modems tab. Make sure the SmartLink 56K voice modem or V.92 modem is listed. Otherwise, click the Add button to add the modem drive, which is located in the factory CD-ROM (or floppy diskette).
- Go to [Start > Settings > Control Panel > System] and click the Device Manager button on the Hardware page to check for a possible resource or driver conflict. See Windows' online help or manual for how to handle such problems.
- Make sure the phone line, which the computer is connected to, is working.

Connection difficulties -

- Be sure to disable call waiting on the phone line.
- Be sure to have the correct country setting for where your computer is used. [Start > Settings > Control Panel > Modem Settings > Configuration] In the Country/Area pull-down menu, select the appropriate country setting.
- Excessive line noise might cause the connection to be dropped. To check this, put the regular phone handset on the line and place a phone call. If you hear abnormal noise, try to make the modem connection with a different line or contact your local telephony company for service.
- Make sure the cable connection is firm.
- Try a different receiver number and see if the problem persists.

Network Adapter / Ethernet Problems

The Ethernet adapter does not work -

- Go to [Start > Settings > Control Panel > System > Hardware > Device Manager]. Double-click on Network Adapters and check if Realtek RTL8139/810x Family Fast Ethernet NIC (or Realtek RTL8169/8110 Family Gigabit NIC) appears as one of the adapters. If it does not exist, that means that either Windows has not detected the Ethernet NIC or the device driver has not been installed properly. If there is a yellow mark or red cross on the network adapter, it may be a device or resource conflict. Replace or update the device driver from the factory CD-ROM disk or consult the Windows manual for how to solve the resource conflict problem.
- Make sure the physical connections on both ends of the cable are good.
- The hub or concentrator may not be working properly. Check to see if other workstations connected to the same hub or concentrator are working.

The Ethernet adapter does not appear to operate in the 100/1000Mbps transmission mode -

- Make sure the hub you are using supports 100/1000Mbps operation.
- Make sure that your RJ-45 cable meets the 100/1000Base-TX requirements.
- Make sure the Ethernet cable is connected to the hub socket that supports 100/1000Base-TX mode. The hub may have both 100Base-TX and 1000Base-T sockets.

PC Card/PCMCIA Problems

PC cards do not function-

- Make sure you have properly installed the driver for the card.
- Consult the card's manual or contact the vendor for troubleshooting.

The PC card cannot be recognized -

- Windows NT 4.0 does not support PCMCIA (PC card) function. You may need an external program for this.
- Make sure the card is fully inserted; the outer end of the card should be even with the edge of the computer.
- Remove and insert the PC card again.
- Make sure there is no IRQ conflict with the card. See Windows' online help for solving IRQ conflicts.
- Reboot the computer and see if the problem persists.
- The card may be defective. Try the card on another system, if possible.

Windows crashes or freezes when you remove the PC card

-

- Make sure you have clicked <Stop> before removing the PC card. Double-click the safely remove hardware icon at the lower right corner of the taskbar and select the card you wish to stop. When you click <Close>, Windows will prompt you to remove the card a few seconds later.

Performance Problems

The computer becomes hot -

- In a 35°C environment, certain areas of the computer's back case are expected to reach 50 degrees.
- Make sure the air vents are not blocked.
- If the fan does not seem to be working at a high temperature (50 degrees Celsius and up), contact the service center.
- Certain programs that are processor-intensive may increase the computer temperature to a level where the computer automatically slows down its CPU clock to protect itself from thermal damage.

The program appears stopped or runs very slowly -

- Press CTRL+ALT+DEL to see if an application is still responding.
- Restart the computer.
- This may be normal for Windows when it is processing other CPU-intensive programs in the background or when the system is accessing slow-speed devices such as the floppy disk drive.
- You may be running too many applications. Try to close some applications or increase system memory for higher performance.
- The processor may have been overheated due to the system's inability to regulate its internal heat. Make sure the computer's ventilation grills are not blocked.

Firewire (IEEE1394) and USB2.0 Problems

The USB device does not work -

- Windows NT 4.0 does not support USB protocols.
- Check the settings in the Windows Control Panel.
- Make sure you have installed the necessary device drivers.
- Contact the device vendor for additional support.

The IEEE1394 port does not work -

- Go to [Start > Settings > Control Panel > System > Hardware > Device Manager]. You should see an entry which reads "Texas Instrument OHCI Compliant IEEE 1394 Host Controllers". If it does not exist, that means that either Windows has not detected the host controller or the device driver has not been installed properly. If there is a yellow mark or red cross on the 1394 host controller, it may be a device or resource conflict. Replace or update the device driver from the factory CD-ROM disk or consult the Windows manual for how to solve the resource conflict problem.
- Make sure the cable is fully connected.
- Make sure you have installed the necessary device drivers.
- Contact the device vendor for additional support.

A P P E N D I X A

PRODUCT SPECIFICATION

Processor and Core Logic

■ Processor

- Mobile Intel Pentium M (Dothan), up to 2.13GHz, 2 MB L2 cache or

■ Core Logic

- Mobile Intel Celeron M, up to 1.70GHz, 1MB L2 cache

Intel Alviso 915GM + ICH6-M (FW82801FBM) chipset with video, audio, modem, and USB2.0 controllers integrated

533 MHz (Pentium M)/400 (Celeron M) front side bus
400/533 MHz DDR1/DDR2 interface

System Memory

■ Memory Type

DDR1/DDR2 SDRAM 333/400/533MHz, PC2700 and PC2 3200/4200 compatible

■ Default

128/256/512MB, 2.5-Volt (DDR1) or 1.8-Volt (DDR2)
64-bit bus

■ Memory Expansion

Two 200-pin DIMM sockets

Display

■ LCD Panel

- 15.4-inch WXGA (1280x800) TFT LCD or

■ Graphic Accelerator

- 15.4-inch WUXGA (1920x1200) TFT LCD

MXM 2 Graphics 2D / 3D graphic slot with 64/128/256 VRAM support

■ Motion Playback

Intel integrated GMA900 Extreme3 graphics engine

Hardware motion compensation and IDCT supported for MPEG1/2 playback

■ Other Features

Direct3D compatible, DirectX compatible

- Chipset
- Audio Codec
- Sound Capabilities

Audio

Intel (ICH6M) integrated audio controller
Realtek ALC880
DirectSound 3D, EAX 1.0 & 2.0 compatible
A3D, I3DL2 compatible
AC97 V2.3 compatible
7.1 multi-channel compatible (through S/PDIF)
Supports Azalia standard
2 stereo speakers

- Chipset
- Transmission Rate

Modem

Intel (ICH6M) integrated modem controller with MDC card.
V.92/V.90/K56flex for download data speed up to 56Kbps.
V.34, V.17, V.29 protocol supported

- Module
- Transmission Protocol

Wireless LAN

Intel PRO/Wireless 2200, MiniPCI Interface
IEEE802.11 B&G

■ Chipset

■ PnP Function

■ Flow Control

■ Speed Selection

■ Other Features

LAN / Ethernet

- Realtek 8100CL Ethernet function for 10/100Base-TX network standards or
 - Realtek 8110SBL Ethernet function for 10/100/1000Base-TX network standards
- Windows 2000/XP Plug and Play compatible
Automatic Jam and auto-negotiation for flow control
Auto Negotiation and Parallel detection for automatic speed selection (IEEE 802.3u)
High-performance 32-bit PCI bus master architecture with integrated DMA controller for low CPU and bus utilization
Remote Wake-up Scheme supported
Hot Insertion supported
Remote Wake-up Scheme supported
Hot Insertion supported

■ Chipset

■ Capabilities

Firewire IEEE1394(a)

TI TSB43AB22A IEEE1394 OHCI Host Controller
Up to 400 Mbps
Expandable up to 63 devices in chains

■ Hard Drive

■ Combo Drive

■ DVD±R/±RW or DVD-Dual or DVD-Multi Standards

▼ Storage

P-ATA 2.5-inch format hard disk drive
5.25-inch format (12.7mm height) fixed module (Optional Purchase)
5.25-inch format (12.7mm height) fixed module (Optional Purchase)

■ Keyboard

■ Touch pad

▼ Keyboard & Touch pad

87-key or 86-key QWERTY keyboard with embedded numeric keypad and Windows keys, 19.05mm pitch
Built-in touchpad

■ Chipset

■ PC Card

■ 4-in-1 Card
Reader Format
Support

▼ PC Card & Multiple Card Reader

TI1410 (PC Card), Genesys GL817E (Card Reader)
Single Slot TYPE II, hot insertion and removal supported
Multimedia Card (MMC), Secure Digital Card (SD),
Memory Stick (MS), and MS Pro Card

■ Mic-In Port

■ Audio-Out/SPDIF

■ Audio-in Port

■ Firewire

■ USB2.0 Port

■ Ethernet

■ Modem

■ S-Video

■ Power-In

■ VGA Port

■ Card Reader

■ PC Card Slot

▼ Ports and Connectors

One microphone-in jack

One headphone / SPDIF jack

One line-in jack

One Firewire (IEEE1394) host connector

Three USB2.0-compliant connectors + one for built-in for
Bluetooth or other USB-integrated device

One standard network Ethernet connector (RJ-45)

One modem / phone connector (RJ11)

One S-video (TV-out) output connector

One DC-in connector

One 15-pin VGA connector

One 4-in-1 card reader slot

One PC card slot (type II)

■ Primary Battery Pack
■ Feature
■ Adapter AC-Input / DC-Output

▼ **Battery Pack / AC Adapter**

- Li-ion 6-Cell pack, 11.1V x 4400 mAH or
- Li-ion 6-Cell pack, 10.8V x 4400 mAH or
- Li-ion 9-Cell pack, 10.8V x 6600 mAh

Low battery state with low battery warning beep
SmartPower Power Management
Smart Battery Compliant; low battery warning beep
Auto-sensing AC-in 100~240V, DC-out 20V, 90W

■ PnP Function
■ Self Test
■ Auto Detection
■ Power Management
■ Security
■ Other Features

▼ **BIOS**

AMI PnP BIOS
Power On Self Test
DRAM auto-detection, auto-sizing
L2 Cache auto-detection
Hard disk type auto-detection
APM 1.2 (Advanced Power Management) &
ACPI 2.0 (Advanced Configuration Power Interface)
Two level password protections
32-bit access, Ultra DMA, PIO5 Mode support
Multi-boot capability

■ O/S

Compatible with Microsoft Windows 2000/XP/DOS

■ Dimension

■ Weight

■ Environmental
Limits

▼ Physical Specification

- m5500 Series: 358 (W) x 272 (D) x 25.9~34.1 (H) mm
- m5500 Series: 7.2 lbs / 3.27Kg (with 15.4"LCD, DVD-ROM Drive, and 6-cell battery pack)
Operating Temperature: 5 to 30°C (41 to 86°F)
Operating Humidity: 20 to 90 percent RH (5 to 35°C)
Storage Temperature: -15 to 50°C (-5 to 122°F)

A P P E N D I X B

AGENCY REGULATORY NOTICES

Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

"Alienware declare that the m5500 SERIES (with wireless card: Intel WM3B2200BG/ WM3B2915ABG) is limited in CH1~CH11 by specified firmware controlled in USA."

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

Connections to Peripheral Devices

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

Declaration of Conformity

This device complies with Part 15(CLASS B)/68 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

European Notice

Products with the CE Marking comply with both the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) and R&TTE Directive (1999/5/EC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms:

- EN55022 : 1998+A1: 2000+A2: 2003, CLASS B
- EN61000-3-2 : 2000
- EN61000-3-3 : 1995+A1: 2001
- EN55024 : 1998+A1 : 2001+A1: 2003
- IEC61000-4-2: 2001
- IEC61000-4-3:2002+A1:2002
- IEC61000-4-4:1995+A1:2000+A2:2001
- IEC61000-4-5:2001
- IEC61000-4-6:2001
- IEC61000-4-8:2001
- IEC61000-4-11:2001
- EN50082 (IEC801-2, IEC801-3, IEC801-4) Electro-magnetic Immunity
- EN 300 328-2, EN 300 328-1, EN 301 489-1, EN 301 489-17 (ETSI 300 328, ETSI 301 489) Electro-magnetic Compatibility and Radio Spectrum Matter
- TBR21 (ETSI TBR21) Terminal Equipment
- EN60950 (IEC950) I.T.E. Product Safety

Canadian Notice

This digital apparatus does not exceed the Class B limits for radio noise

emissions from digital apparatus as set out in the radio interference regulations of the Canadian Department of Communications.

Le present appareil numerique nemet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques de Classe B prescrites dans le reglement sur le brouillage radioelectrique edicte par le Ministere des Communications du Canada.

Power Cord Requirement

The power cord supplied with the AC adapter should match the plug and voltage requirements for your local area. Regulatory approval for the AC adapter has been obtained using the power cord for the local area. However, if you travel to a different area and need to connect to a different outlet or voltage, you should use one of the power cords listed below. To purchase a power cord (including one for a country not listed below) or a replacement AC adapter, contact your local dealer.

U.S. and Canada

- The cord set must be UL-Listed and CSA-Certified or C-UL Listed.
- The minimum specifications for the flexible cord are (1) No. 18 AWG, (2) Type SJ, and (3) 3-conductor.
- The cord set must have a rated current capacity of at least 10 A.
- The attachment plug must be an earth-grounding type with a NEMA 5-15P (15A, 125V) or NEMA 6-15P (15 A, 250V) configuration.

Japan

- All components of the cord set (cord, connector, and plug) must bear a `PSE` mark and registration number in accordance with the Japanese Dentori Law.
- The minimum specifications for the flexible cord are: (1) 0.75 mm² conductors, (2) Type VCT or VCTF, and (3) 3-conductor.
- The cord set must have a minimum rated current capacity of 7 A.
- The attachment plug must be a two-pole, grounded type with a Japanese Industrial Standard C8303 (15 A, 125 VAC) configuration.

Other Countries

- The cord set fittings must bear the certification mark of the agency responsible for evaluation in a specific country. Acceptable agencies are:
 - BSI (UK)
 - OVE (Australia)
 - CEBEC (Belgium)
 - SEMKO (Sweden)

FIMKO (Finland)
DEMKO (Denmark)
NEMKO (Norway)
SETI (Finland)
EANSW (Australia)
SEV (Switzerland)
IMQ (Italy)
UTE (France)
CCC (China)
PSB (Singapore)
PSE (Japan)
BSMI (Taiwan)
B (Polish)
VDE (Germany)
SASO (Saudi Arabia)

- The flexible cord must be of a HAR (harmonized) type HO5VV-F 3-conductor cord with a minimum conductor size of 0.03 square inches.
- The minimum specification for the flexible cord for Class II product are: (1) 2X0.75 mm² conductors, (2) 2-conductor cord.
- The cord set must have a current capacity of at least 10 A and a nominal voltage rating of 125 / 250 VAC.

CAUTION: MODEL M-5500 SERIES IS DESIGNED TO USE WITH THE FOLLOWING AC ADAPTER MODEL ONLY

Manufacturer: LITE-ON ELECTRONICS, INC

Model: PA-1900-05 (90W)

Manufacturer: LISHIN INTERNATIONAL ENTERPRISE CORP.

Model: LSE0202A2090 (90W)

Telephone lines requirement

- The appropriate utilization of a 26AWG telephone line cord on the unit.
CAUTION: Always disconnect all telephone lines from the wall outlet before servicing or disassembling this equipment.
CAUTION: To reduce the risk of fire, use only No. 26AWG or larger telecommunication line cord.

Battery Pack Safety

The battery pack is intended to use only with this notebook.

Do not disassemble the pack.

Do not dispose of the battery pack in fire or water.

To avoid risk of fire, burns, or damage to your battery pack, do not allow a metal object to touch the battery contacts.

Handle a damaged or leaking battery with extreme care. If you come in contact with the electrolyte, wash the exposed area with soap and water. If it contacts the eye, flush the eye with water for 15 minutes and seek medical attention.

Do not charge the battery pack if the ambient temperature exceeds 45°C (113°F).

To obtain a replacement battery, contact your local dealer.

Do not expose the battery pack to high storage temperatures (above 60 °C , 140 °F).

- When discarding a battery pack, contact your local waste disposal provider regarding local restrictions on the disposal or recycling of batteries.
- Use only the supplied AC Adapter for charging.

CAUTION: There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions or local laws.

VORSICHT! Explosionsgefahr bei unsachgemäßen Austausch der Batterie. Ersatz nur durch denselben oder einem vom Hersteller empfohlenem ähnlichen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

Laser Safety

The optical drive used with this computer is certified as a Class 1 laser device according to the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard and International Standards IEC 825 / IEC 825-1 (EN60825 / EN60825-1). The device is not considered harmful, but the following precautions are recommended:

- Do not open the unit.
- Avoid direct exposure to the laser beam.
- If the unit requires service, contact an authorized service center.
- Ensure proper use by reading and following the instructions carefully.
- Do not attempt to make any adjustment of the unit.

CLASS 1 LASER PRODUCT
APPAREIL A LASER DE CLASSE 1
LASERSCHUTZKLASSE 1 PRODUKT

Warning!

Do not attempt to disassemble the cabinet containing the laser. The laser beam used in this product is harmful to the eyes. The use of optical instruments, such as magnifying lenses, with this product increases the potential hazard to your eyes. For your safety, have this equipment serviced only by an authorized service provider.

Lithium battery warning / Bridge battery warning

This computer contains a lithium battery to power the clock and calendar circuitry.

CAUTION: There is a danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

ATTENTION: Il y a danger d'xplosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avcc unc batterie du meme type ou d'un type recommande par le constructeur. Mettre au rebut les batteries usagees conformement aux instructions du fabricant.

VORSICHT! Explosionsgefahr bei unsachgemBen Austausch der Batterie Ersatz nur durch denselben oder einem vom Hersteller empfohlenem ahnlichen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

Der Arbeitsplatzbezogene Schalldruckpegel nach DIN 45 635 betragt 70dB (A) oder weniger.

Zum Netzanschlua dieses Gerates ist eine geprufte Leitung zu verwenden. Fur einen Nennstrom bis 6A und einem Gerategewicht groBer 3kg ist eine Leitung nicht leichter als (1)H05VV-F, 3G, 0.75mm² (2)2X0.75 mm² conductors einzusetzen.

Die Steckdose muB nahe dem Gerat angebracht und leicht zuganglich sein.



When you see this symbol, be careful as this spot may be very hot.