

 


KONICA MINOLTA












magicolor® 2480 MF Quick Guide


1760562-001A

4556-9583-00



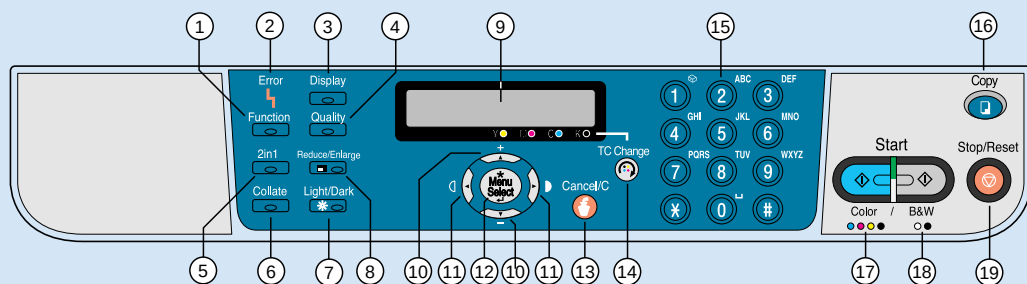


Item	Name	Function
1	Function key	Specify the media tray setting for copying (when an optional tray and/or optional duplex unit are installed)
2	Error LED	Indicates an error condition
3	Display key	Shows information, like copy settings, remaining toner, and error messages
4	Quality key	Select type of document to be copied and the copy resolution
5	2in1 key	Specify that two originals be copied onto one page
6	Collate key	Sort multiple copies into sets
7	Light/Dark key	Adjust the brightness of the copy
8	Reduce/Enlarge key	Set the size of the copy
9	Message Window	Displays settings, menus, and messages
10	+/- keys	Move up and down through menus, options, or choices
11	◀/▶ keys	Move left and right through menus, options, or choices
12	Menu Select key	Enter configuration mode or select a setting
13	Cancel/C key	Cancel the current setting or clear specified number of copies
14	TC Change key	Prepare the printer for toner replacement
15	Numeric Keypad	Enter the number of copies
16	Copy key/LED	Enter copy mode
17	Start (Color) key/LED	Start a color copy
18	Start (B/W) key/LED	Start a monochrome copy
19	Stop/Reset key	Stop the current process or exit a menu

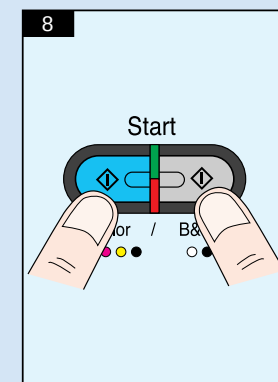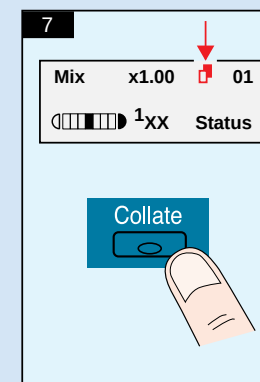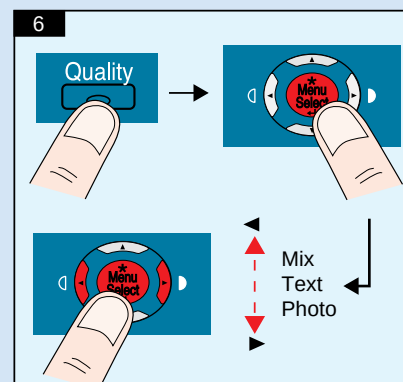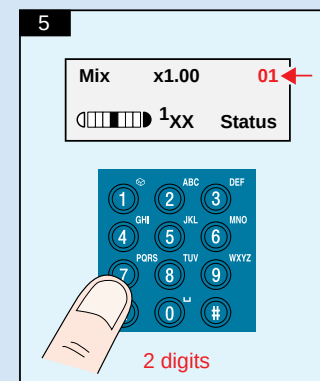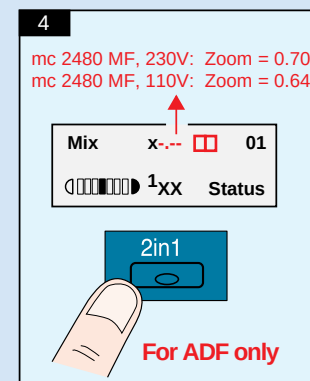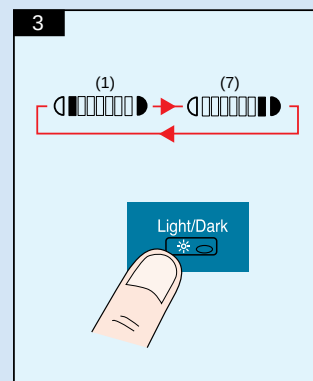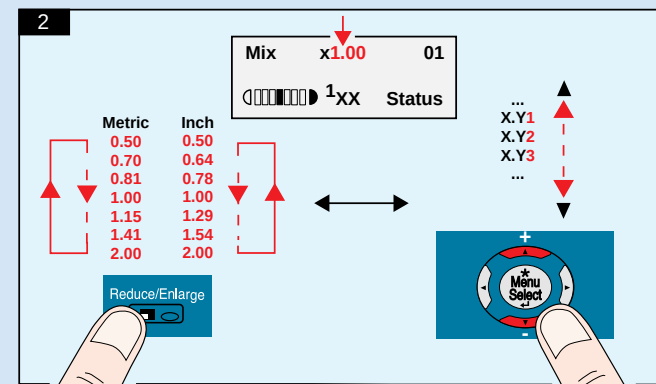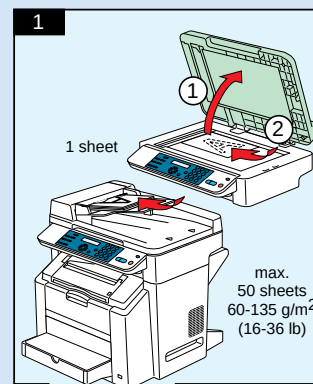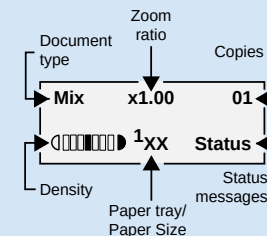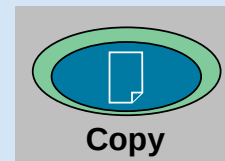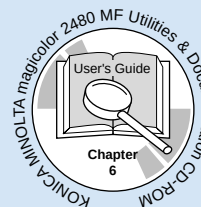           


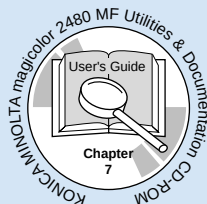 

Scan







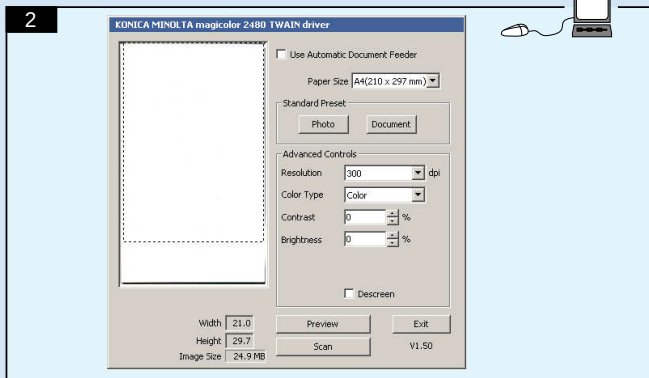 
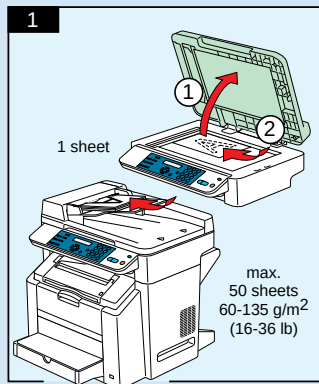 
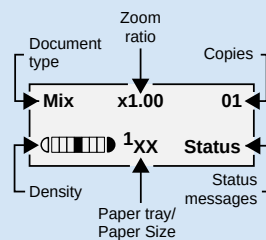 


 
Note : Refer to the Installation Guide for details on how to install the TWAIN plug-in driver in your software application. Refer to the User's Guide for details on how to use the TWAIN driver.

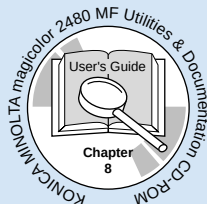

REPLACING CONSUMABLES

   
 
 
 
 
 
 
 
TONER

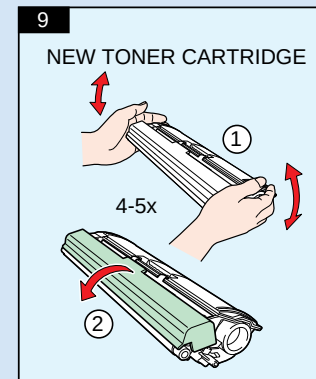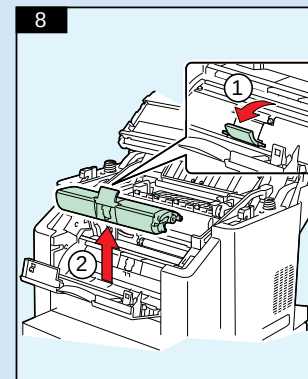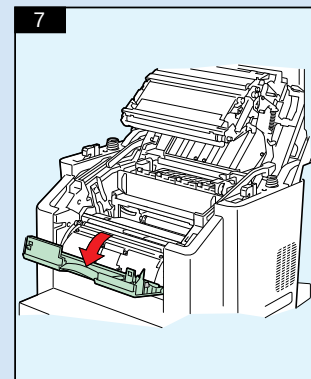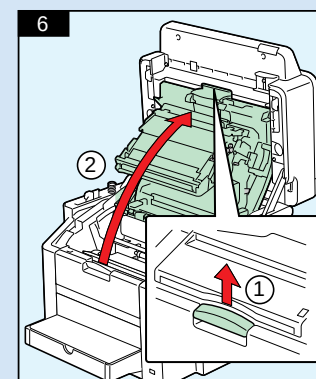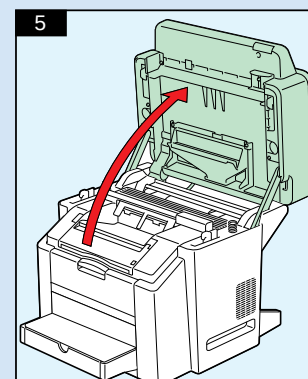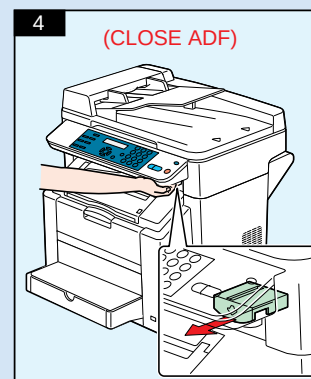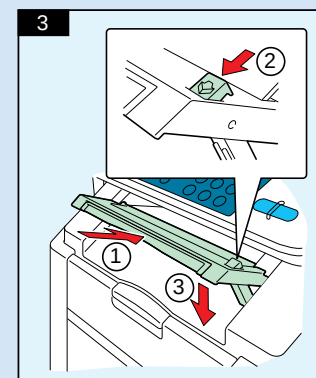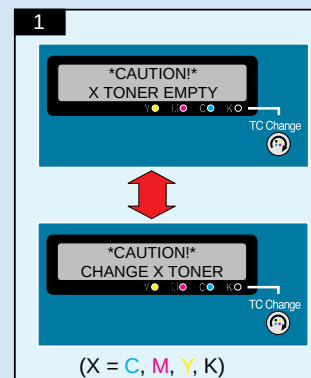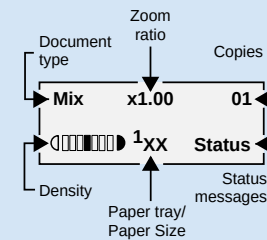

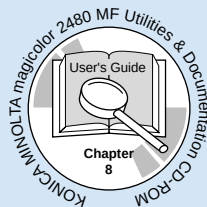

REPLACING CONSUMABLES

        TONER (cont.)

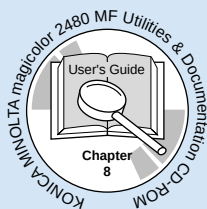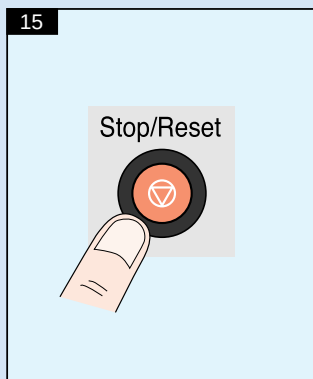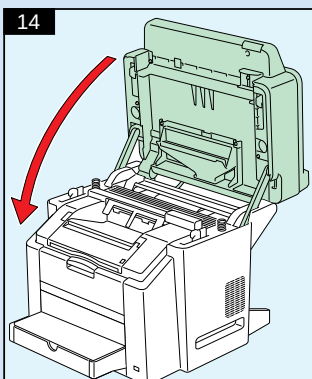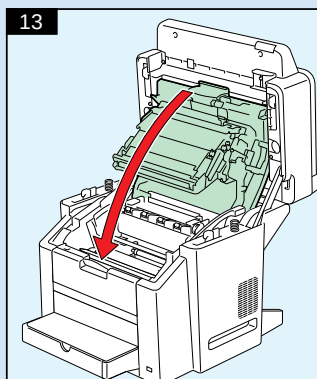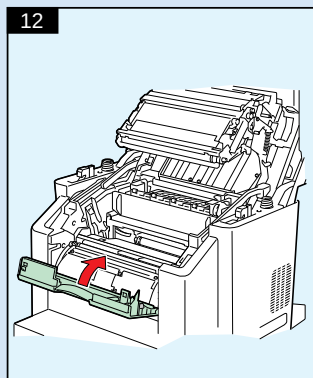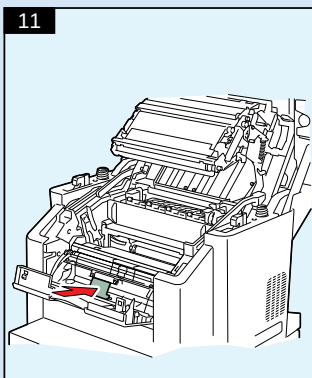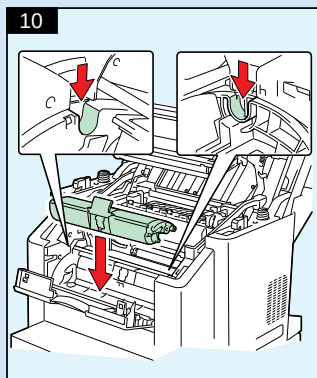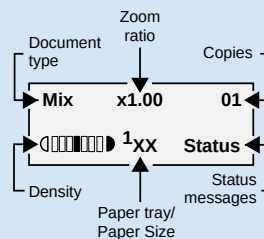

REPLACING CONSUMABLES

DRUM CARTRIDGE

