

SONY

CS
GB

数码录音棒 IC Recorder

快速入门指南



* 4 2 6 5 8 2 3 4 2 * (1)

4-265-823-42(1)

IC RECORDER

© 2011 Sony Corporation
Printed in China

ICD-AX412F

感谢阁下选用Sony IC录音机！

您可使用快速入门指南获取有关IC录音机的基本操作说明。请仔细阅读本指南。希望Sony IC录音机能为阁下带来快乐。

注意

说明书储存在数码录音棒内，详细信息请见快速入门指南。

制造商：索尼（中国）有限公司
地 址：北京市朝阳区东三环北路霞光里18号
佳程大厦A座25层

产 地：广东省东莞市
产品标准：Q/CYSNC007
出版日期：2010年12月

使用产品前请仔细阅读本使用说明书，并请妥善保管。

应确保儿童不可触及电池；如误吞下，请速联系医院。

产品中有毒有害物质或元素的名称及含量

(○:不含有，×:含有)

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
内置线路板	×	○	○	○	○	○
外壳	×	○	○	○	○	○
显示板	○	○	○	○	○	○
扬声器	×	○	○	○	○	○
附件	○	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006标准规定的限量要求以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。

检查附件。

- IC录音机 (1)
- 立体声耳机 (1)
- USB连接电缆 (1)
- LR03 (AAA尺寸) 碱性电池 (2)
- 便携袋 (1)
- 驻极体电容器话筒 (1)
- 应用软件, Sound Organizer (CD-ROM) (1)
- 操作说明 (存储在内置内存中)

警告

请勿将电池（已安装的电池组或电池）长时间暴露于例如阳光，火等极热的地方。




额定电流:800 mA

也可以连接适用本型号的Sony USB 充电交流电源适配器（另购）对电池进行充电。

容量（可用容量）
2GB（约1.80GB = 1932735283字节）
部分存储空间被用作管理区

让我们来试用您的新IC录音机

1. 打开电源。

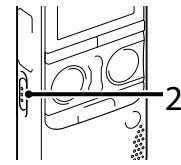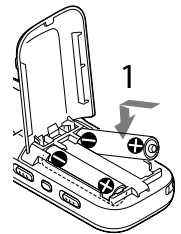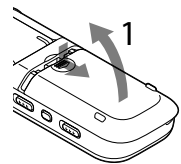


1 按照正确极性插入两节电池。

2 打开电源。




若要关闭电源，朝“POWER ON/OFF”方向滑动HOLD•POWER ON/OFF开关2秒钟以上。

 防止误操作（HOLD）



若要释放IC录音机的HOLD状态，请朝中心位置滑动HOLD•POWER ON/OFF开关。


2. 设置日期和时间。

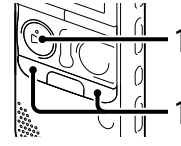

1 按-◀◀或▶▶+设置年份，然后按▶PLAY/STOP•ENTER。

2 按照相同的方式依次设置月、日和分。
按-◀◀或▶▶+选择所需的数字，然后按▶PLAY/STOP•ENTER。

3. 选择菜单语言。

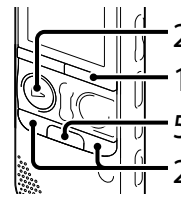

1 按住•DISP-MENU。



2 按-◀◀或▶▶+选择“详细菜单”，然后按▶PLAY/STOP•ENTER。

3 按-◀◀或▶▶+选择“语言(Language)”，然后按▶PLAY/STOP•ENTER。

4 按-◀◀或▶▶+选择显示窗口所用的语言，然后按▶PLAY/STOP•ENTER。

5 按■（停止）。

4. 录音。

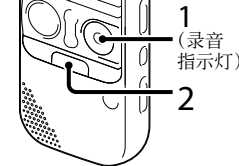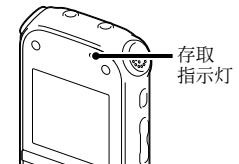



使用IC录音机之前，务必朝中心位置滑动HOLD•POWER ON/OFF开关以释放HOLD状态。

1 按●REC/PAUSE。
录音开始，录音指示灯呈红色亮起。

您可以按●REC/PAUSE暂停录音。再次按●REC/PAUSE可重新开始录音。

2 按■（停止）停止录音。
录音停止，存取指示灯呈橙色闪烁。

5. 聆听。

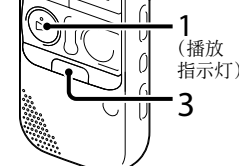
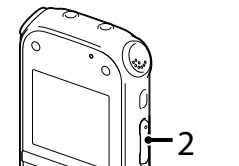


1 按▶PLAY/STOP•ENTER。
播放开始，播放指示灯呈绿色亮起。

2 按VOL -/+调整音量。

3 按■（停止）停止播放。

6. 删除。

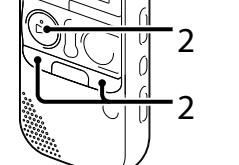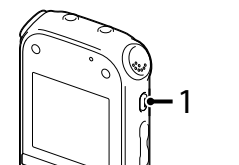

文件一旦删除，则将无法恢复。

1 按ERASE。
“确定删除?”出现在显示窗口，同时播放所要删除的文件以便确认。

2 用-◀◀或▶▶+选择“是”，然后按▶PLAY/STOP•ENTER。
在删除所选文件的同时，显示“正在删除...”。

下一步操作

祝贺阁下！您已成功设置IC录音机，并完成首次录音操作。现在让我们进入下一步。本机提供某些更为有用的功能和信息，以便可以充分使用IC录音机。

选择文件夹/文件


您可以选择要在其中录制文件的文件夹。您还可以确定所选文件夹中将要播放或要删除的文件。

1 选择文件夹。
① 按FOLDER显示文件夹选择窗口。
② 按-◀◀或▶▶+选择文件夹。

2 选择文件。
按▶PLAY/STOP•ENTER移至所选的文件夹中，然后按-◀◀或▶▶+选择文件。

如果存储卡已插入IC录音机，则可使用菜单在内置内存和外置内存（存储卡）之间进行切换。

将操作说明复制到您的电脑中

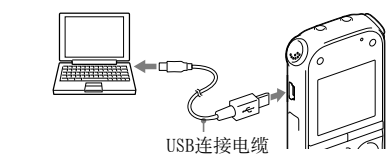

用以说明IC录音机所有特性和功能的操作说明以PDF文件的格式保存在IC录音机的内置内存中。


您还可以从Sony的产品支持主页上下载操作说明：
<http://www.sony-asia.com/support>

将IC录音机连接到电脑上。

2 在电脑上打开“Instructions”文件夹。
在Windows上：单击[我的电脑]或[计算机] - [IC RECORDER] - [Instructions]。
在Macintosh上：单击桌面上的[IC RECORDER] - [Instructions]。

更先进的功能

有关各项操作的详情，请参阅复制到您电脑上的PDF操作说明。

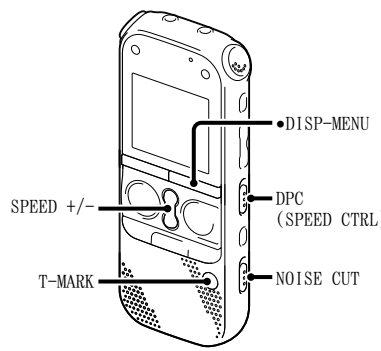

场景选择

您可以根据各种录音场景选择菜单项目，以最佳设置进行录音。

NOISE CUT

减少环境噪音以使播放声音更加清晰。

T-MARK

添加曲目标记，设置录音或播放文件的起点。

DPC (SPEED CTRL)/
SPEED +/-
调整播放速度。

•DISP-MENU

设置各种菜单项目，如录音模式、话筒灵敏度等。

FM收音机

您可使用菜单调谐FM电台并录制FM广播节目。您可以预设电台轻松调台，或更改接收设置。

Sound Organizer (电脑应用软件*)

可在电脑上使用Sound Organizer进行各种操作。您还可以将IC录音机录制的文件导入到Sound Organizer上进行编辑。您可以将音乐CD的音乐文件或播客文件导入到IC录音机上。您还可以刻录您喜欢的音乐CD。

* 仅限Windows

注意事项

电源

仅使用3.0 V或2.4 V DC电源工作。请使用两节LR03 (AAA尺寸) 碱性电池或两节NH-AAA可充电电池。

安全

驾车、骑车或操作任何机动车时不要操作本机。

操作管理

• 不要让本机靠近热源或放置于阳光直射、灰尘很多或有机械振动的地方。

• 若有任何固体或液体落入本机，在进一步操作前，请取出电池并请有资格的人员进行检查。

如果对本机有任何疑问或问题，请向最近的Sony经销商咨询。

SONY®

GB
CS

IC Recorder

Quick Start Guide

IC RECORDER

ICD-AX412F

Welcome to your new Sony IC recorder!

This is the Quick Start Guide, which provides you with instructions on the basic operations of the IC recorder. Please read it carefully. We hope you enjoy using your new Sony IC recorder.

Note

The complete instruction manual is stored in the built-in memory of the IC recorder.

WARNING

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

RATED CURRENT CONSUMPTION: 800 mA

Capacity (User available capacity)

2GB (approx. 1.80GB = 1,932,735,283Byte)


A part of the memory capacity is used as a management area.

Check the supplied items.

- IC Recorder (1)
- Stereo headphones (1)
- USB connecting cable (1)
- LR03 (size AAA) alkaline batteries (2)
- Carrying pouch (1)
- Electret condenser microphone (1)
- Application software, Sound Organizer (CD-ROM) (1)
- Operating Instructions (Stored in the built-in memory)

Let's try out your new IC recorder

1. Power on.

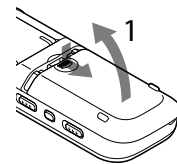

1 Insert two batteries with the correct polarity.

2 Turn the power on.

HOLD/POWER ON/OFF

 


for more than 1 second

To turn the power off, slide the HOLD/POWER ON/OFF switch in the direction of "POWER ON/OFF" for more than 2 seconds.


To prevent unintentional operations (HOLD)

HOLD/POWER ON/OFF



To release the IC recorder from the HOLD status, slide the HOLD/POWER ON/OFF switch towards the center.


2. Set the date and time.

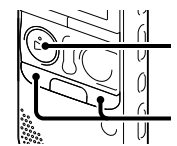

1 Press -I< or >I+ to set the year, and then press ►PLAY/STOP•ENTER.

2 Set the month, day, hour, and minute in sequence in the same way. Press -I< or >I+ to select the desired figures, and then press ►PLAY/STOP•ENTER.

3. Select the menu language.

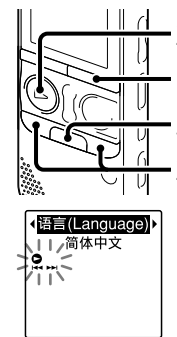

1 Press and hold •DISP-MENU.


2 Press -I< or >I+ to select "详细菜单," and then press ►PLAY/STOP•ENTER.

3 Press -I< or >I+ to select "语言(Language)," and then press ►PLAY/STOP•ENTER.

4 Press -I< or >I+ to select the language that you want to use in the display window, and then press ►PLAY/STOP•ENTER.

5 Press ■ (stop).

4. Record.

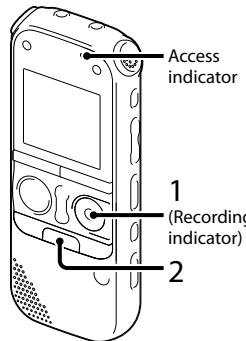

Before you start using the IC recorder, make sure that you slide the HOLD/POWER ON/OFF switch towards the center to release the HOLD status.

1 Press ●REC/PAUSE.


Recording starts and the recording indicator lights in red.

You can pause recording by pressing ●REC/PAUSE. Press ●REC/PAUSE again to restart recording.

2 Press ■ (stop) to stop recording.

Recording stops and the access indicator flashes in orange.

5. Listen.

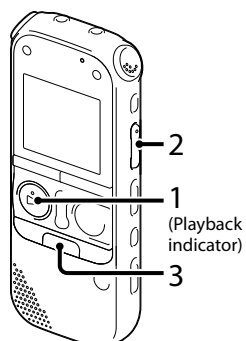


1 Press ►PLAY/STOP•ENTER.

Playback starts and the playback indicator lights in green.

2 Adjust the volume by pressing VOL -/+.

3 Press ■ (stop) to stop playback.

6. Erase.

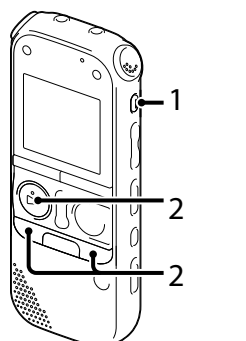

Once a file is erased, you cannot restore it.

1 Press ERASE.

"确定删除?" is displayed and the file to be erased is played back for confirmation.

2 Select "是" using -I< or >I+, and then press ►PLAY/STOP•ENTER. "正在删除..." is displayed while the selected file is being erased.

What to do next

Congratulations! You have set up your IC recorder and enjoyed your first recording. Let's step up to the next stage. There are some more useful functions and information that you can use to fully utilize your IC recorder.

Selecting a folder/file

You can select a folder in which you are going to record a file. You can also specify the file to be played back or erased in the selected folder.

1 Select a folder.


- Press FOLDER to display the folder selection window.
- Press -I< or >I+ to select a folder.

2 Select a file.

Press ►PLAY/STOP•ENTER to move to the folder you have selected, and then press -I< or >I+ to select a file.

When a memory card has been inserted into the IC recorder, you can switch between the built-in memory and the external memory (memory card) using the menu.

Copying the operating instructions to your computer

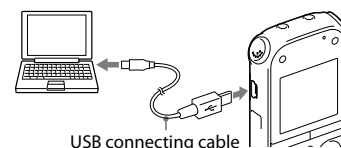

The operating instructions explaining all the features and functions of the IC recorder are stored as PDF files in the built-in memory of the IC recorder.

You can also download the operating instructions from the Sony support home page: <http://www.sony-asia.com/support>

3 Drag and drop the files of the operating instructions from the "Instructions" folder to the local disk on your computer.

The file names of the operating instructions are as follows:
Product name_language name_version.pdf (e.g. ICD-AX412F_English_11.pdf)

4 Disconnect the IC recorder from your computer.

To read the operating instructions, double-click the PDF file you want to read.

1 Connect the IC recorder to your computer.


2 Open the "Instructions" folder on your computer.

On Windows: Click [My Computer] or [Computer] - [IC RECORDER] - [Instructions].

On Macintosh: Click [IC RECORDER] on the desktop - [Instructions].

More advanced features

For details on each operation, refer to the PDF operating instructions copied to your computer.

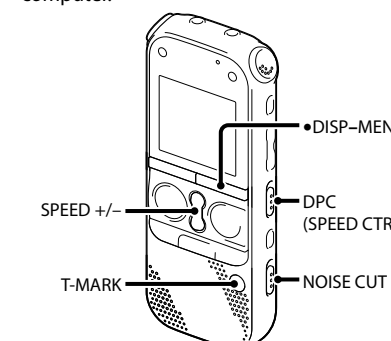

Scene selection

You can select the menu items for recording to the most appropriate settings according to various recording scenes.

NOISE CUT

Reduces ambient noise to make the playback sound clearer.

T-MARK

Adds a track mark to set the starting point when recording or playing back a file.

DPC (SPEED CTRL)/SPEED +/-

Adjusts the playback speed.

•DISP-MENU

Sets various menu items, such as 录音模式, 话筒灵敏度, etc.

FM radio

Allows you to tune in and record an FM radio station using the menu. You can preset stations for easy tuning, or change reception settings.

Sound Organizer (PC application software*)

Various operations can be performed using Sound Organizer on your computer. You can import files recorded with the IC recorder into Sound Organizer to edit. You can import music files of a music CD or podcast files to transfer to the IC recorder. You can also burn CDs of the music you like.

* For Windows only

Precautions

On power

Operate the unit only on 3.0 V or 2.4 V DC. Use two LR03 (size AAA) alkaline batteries or two NH-AAA rechargeable batteries.

On safety

Do not operate the unit while driving, cycling or operating any motorized vehicle.

On handling

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.

- Should any solid object or liquid fall into the unit, remove the batteries and have the unit checked by qualified personnel before operating it any further.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.