

JVC

JVC

Portable CD Player with Bluetooth

RD-N327A



User Manual

TABLE OF CONTENTS

Warnings and Precautions	2
Important Safety Instructions	3
Important Safety Instructions	4
Powering the Unit	5
Tuning the FM Radio	5
Playing a CD	6
Using the Auxiliary Input	6
Connecting your Bluetooth device	6
Playback from USB device	6
Locations of Controls	7
Control Definitions	8

Warnings and Precautions



This symbol, located on the back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the Product’s enclosure that may constitute a risk of electric shock to persons.

CAUTION: TO PREVENT ELECTRIC SHOCK, ENSURE TO INSERT 2 PIN PLUG CORRECTLY IN TO MATCHING. SOCKET OR ADAPTOR

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.



This symbol, located on the back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. **This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is Open and the CD player’s lid Damaged. Invisible laser radiation is present when the CD player is open and the system’s interlock has failed or has been damaged. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to Damage or bypass the safety switches**

WARNING: To prevent fire or shock hazards, do not expose this unit to rain or moisture.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Do not mix old and new batteries.
DO not mix alkaline, standard (carbon-zinc), or rechargeable (NiCad, NiMH or similar) batteries.

Important Safety Instructions

1. **Read Instructions** - All the safety and operating instructions should be read before the product is Operated.
2. **Keep Instructions** - The safety and operating instructions should be kept for future reference.
3. **Warnings** - All warnings on the product and in the operating instructions should be adhered to.
4. **Follow instructions** - All operating and user instructions should be followed.
5. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with dry cloth.
6. **Attachments** - Do not use attachments not recommended by the product manufacturers as it may cause serious injuries.
7. **Water and Moisture** - Do not use this product near water – for example, near a bath tub, washing bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, etc. The apparatus should not be exposed to dripping or splashing and objects filled with liquids, such as vases, should not be placed on apparatus.
8. **Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked or covered by Placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.
9. **Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
10. **Power-Cord Protection** - Power supply cords should not be walked on or pinched by items placed on or against them, particular attention should be paid to outlets, convenience receptacles, and points where they exit from the product.
11. **Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.
12. **Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
13. **Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
14. **Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel only.
15. **Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product.
 - c) If the product has been exposed to rain, water or moisture.
 - d) If the product does not operate properly when operating instructions were followed, adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance – this indicates need for service.
16. **Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
17. **Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Battery shall not be exposed to excessive heat such as sunshine, fire, etc.
18. Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet Completely.

Important Safety Instructions

19. Excessive sound pressure from earphones and headphones can cause hearing loss.
20. To prevent fire or shock hazard, do not use this plug with an extension cord, receptacle or other outlet unless the pins can be fully inserted to prevent pin exposure.
21.  Symbol is used to indicate that a specific component shall be replaced only by the component specified in that documentation for safety reasons.
22.  This symbol indicates that this product incorporates double insulation.

 
Technical Specifications:

Input voltage: AC 100-240V~ 50/60Hz
Output power: 2 x 4W
Battery: 4 x 'C' size batteries (not included)
Net weight: 1.20 KG

Powering the Unit


AC Power

Plug the detachable AC cord into a standard AC outlet (100-240V~ 50/60Hz)

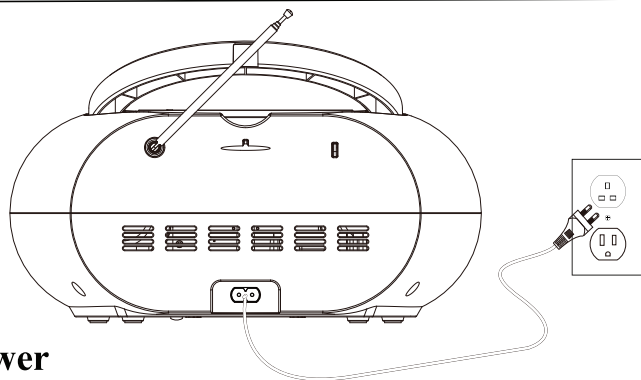

Battery Power

 Requires 4 C batteries, not included.

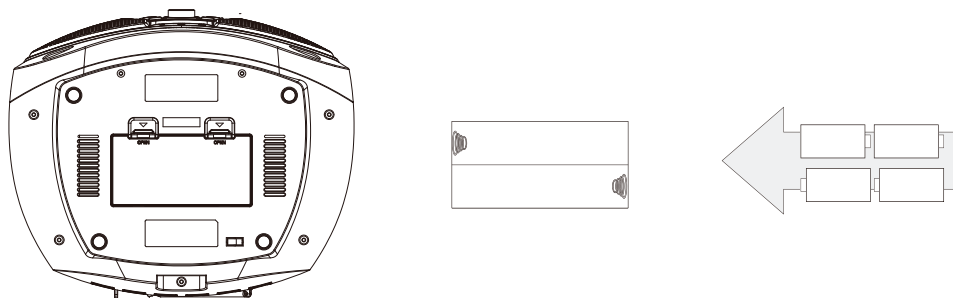

Tuning the FM Radio

Step 1: Adjust the **EQ/ MODE button** to *FM mode*.

- *Extend the FM antenna to improve FM radio reception.*

Step 2: Short press **⏮** or **⏭** to jump to the previous or next available station.

Playing a CD

Step 1: Open the CD door, and place a CD or CD-R/RW INTO THE PLAYER.

Step 2: Adjust the **EQ/ MODE button** to *CD mode*.

Step 3: Press the **Play/Pause Button** to begin playing the loaded CD.

Using the Auxiliary Input

Audio Source	Required Connector
MP3 Player	mini-phone 3.5mm Cable (not included)

Step 1: Connect a *mini-phone 3.5mm Cable* (not included) to the **Auxiliary Input** on the unit and the audio output on an MP3 player.

Step 2: Adjust the **EQ/ MODE button** to *AUX IN mode*.

- *Audio played through the connected MP3 player will now be heard through the unit.*

Connecting your Bluetooth device

Step 1: Press the **EQ/MODE button** on the unit repeatedly until Bluetooth (BT) mode is selected.

Step 2: Activate Bluetooth feature on your phone, tablet or other Bluetooth enabled device.

Step 3: On your phone/tablet, find the option to 'Search for nearby devices' (or similar). When 'RD-N327A' is detected, select it to connect wirelessly via Bluetooth.

Step 4: You can now play audio from your phone/tablet; you will hear it through the RD-N327A unit's speakers.

Note: *The above procedure is for first use; for subsequent Bluetooth playback, RD-N327A should already be in your phone/tablet's Bluetooth connection history.*

 
Playback from USB device

Step 1: Connect a USB memory device to the USB port.

Step 2: Press the **EQ/MODE button** on the unit repeatedly until USB mode is selected.

Step 3: Press the **Play/ Pause button** to play mp3 format files from the USB device.

Locations of Controls

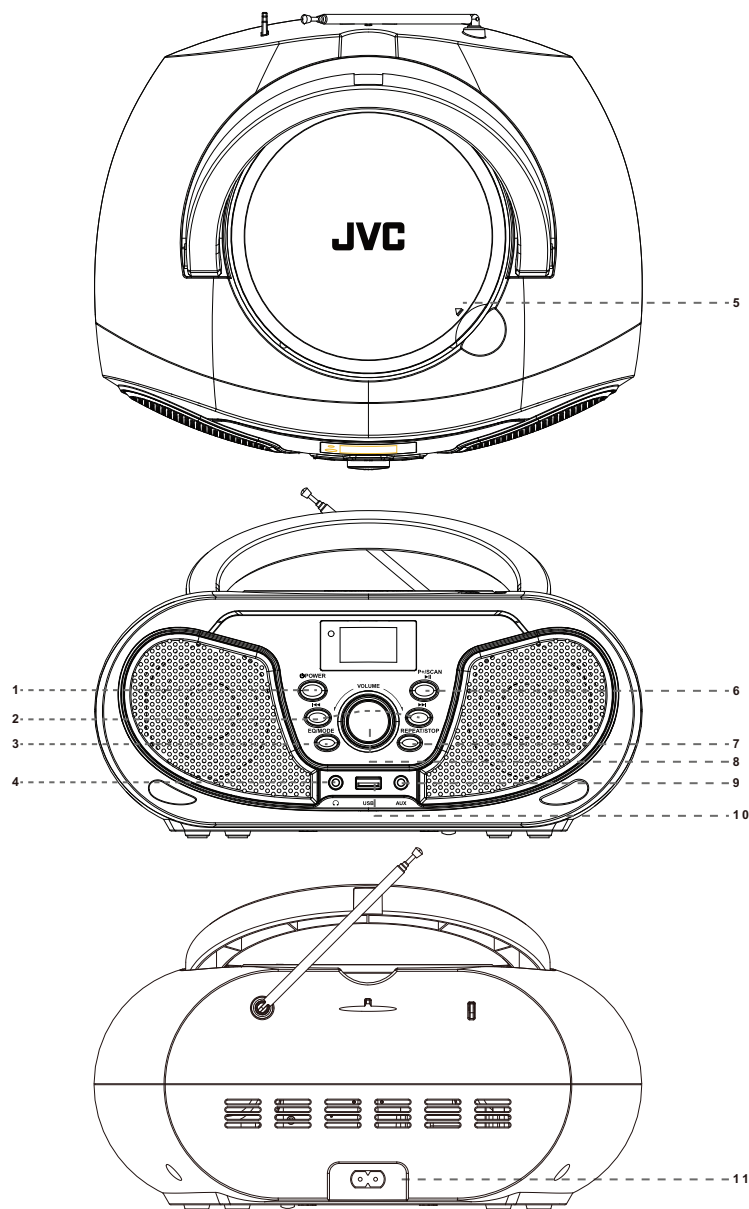

Control Definitions

1. POWER

Press to turn on the unit or switch to Standby mode. The default mode is FM.

2. ◀◀ and ▶▶ PREV/TUN- and NEXT/TUN+

Press ◀◀ or ▶▶ shortly to play the previous or next song in CD/ USB/ BT modes.

Note: Previous and Next functions do not work in AUX mode.

In FM mode, short press ◀◀ or ▶▶ to jump to the previous or next available station.

Press and hold ◀◀ or ▶▶ for semi-automatic search through lower or higher frequencies.

3. EQ/MODE

Press shortly to switch between the sound sources: Radio/CD/USB/AUX/BT.

Press and hold to switch between the EQ functions: ROCK/POP/FLAT/CLASS/JAZZ.

4. Earphone Out

Connect headphones/ earphones here.

Note: Connecting earphones will mute the sound from the unit's own speakers.

5. Open/Close

CD Compartment

6. P+/ SCAN/ ▶▶

In CD mode, press to play or pause the CD.

In FM mode, press shortly to select a stored FM station; press and hold for automatic scanning of available frequencies.

7. REPEAT/ STOP

In CD/ USB mode, press this button shortly to repeat a particular song; press and hold to stop playing.

Note: REPEAT/ STOP button doesn't work in AUX/ BT modes.

In FM mode, press this button to store a particular station into the memory.

Note: Up to 20 stations can be stored.

8. VOLUME +/-

Turn dial clockwise or anticlockwise to increase or decrease volume.

9. AUX

Use a 3.5mm auxiliary cable to connect to an external audio source. (eg. MP3 player)

10. USB

Connect a USB memory device to play audio files from it.

Note: Only mp3 format files can be played

11. AC Power Input

Connect one end of the detachable Power cord here and connect the other end to a suitable mains socket.