



Model No.: TFC-5817

User Manual

Thank you for purchasing the Tatung Electric Rice Cooker. Please read the user Manual carefully before using and keep it for future reference. Diagram images are for reference only, and may not be your exact model.



IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Important: Read all instructions carefully before first use.
2. Do not touch hot surfaces. Use the handles or knobs.
3. Use only on a level, dry and heat-resistant surface.
4. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or the appliance in water or any other liquid. See instructions for cleaning.
5. Close supervision is necessary when the appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Tatung customer service for examination, repair or adjustment.
8. The use of accessory attachments not recommended by Tatung may result in fire, electrical shock or injury.
9. Do not use outdoors.
10. Do not touch hot surfaces or let the cord hang over the edge of a counter or table.
11. Do not place on or near a hot gas or electric burner or in a heated oven.
12. Do not use the appliance for other than its intended use.
13. Extreme caution must be used when moving the appliance containing rice, hot oil or other liquids.
14. Do not touch, cover or obstruct the steam vent on the top of the rice cooker as it is extremely hot and may cause scalding.
15. Use only with a 120V AC power outlet.
16. Always unplug from the base of the wall outlet. Never pull on the cord.
17. The rice cooker should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances, the appliance may not operate properly.
18. Always make sure the outside of the inner cooking pot is dry prior to use. If the inner pot is returned to the cooker when wet, it may damage or cause the product to malfunction.

19. Use extreme caution when opening the lid during or after cooking. Hot steam will escape and may cause scalding.
20. Rice should not be left in the inner cooking pot with the Keep-Warm function on for more than 12 hours.
21. To prevent damage or deformation, do not use the inner cooking pot on a stovetop or burner.
22. To disconnect, turn any control to OFF, then remove the plug from the wall outlet.
23. CAUTION: To reduce the risk of electrical shock, cook only in the removable inner cooking pot provided.

SAVE THESE INSTRUCTIONS



IMPORTANT SAFEGUARDS

Short Cord Instructions

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The longer cord should be arranged so that it will not dangle over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.

DO NOT DANGLING CORD!



Polarized Plug

 
This appliance has a polarized plug (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

If the supply cord is damaged, it must be replaced by the manufacturer, please contact us at 1-800-829-2850 ext.216.

**THIS APPLIANCE IS FOR
HOUSEHOLD USE ONLY.**

Parts Name

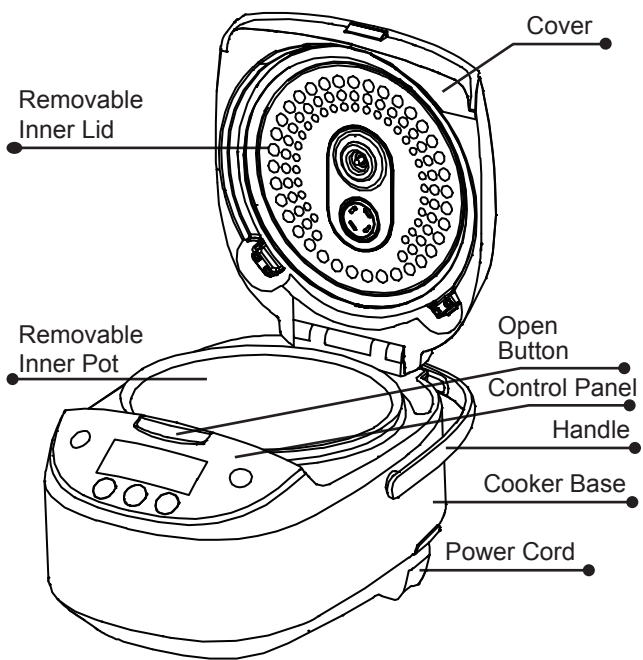

Accessories

Scoop



Spoon



Measuring cup



Steamer



 
Control Panel

Standby Mode

(----) on the display indicates that the unit is in Standby Mode

Warm/Cancel Button

If you want your food to stay warm (around 158-168°F) after cooking, press this button. The indicator light will be on when the warming mode is active. This button only works in Standby Mode. To cancel the keep warm function, press this button until the indicator light is off.

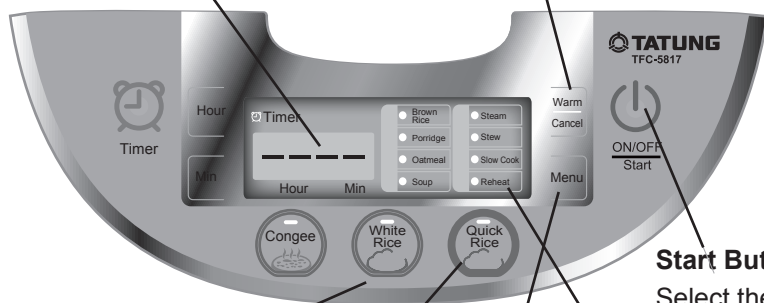

Main Cooking Buttons

(Congee, White Rice, Quick Rice)

Quick Rice Button

Cooks White Rice about 10mins Faster
Note: Rice texture and taste is different compared to using the White Rice Button

Menu Button

Press the Menu Button to access 8 additional cooking modes: (Brown Rice, Porridge, Oatmeal, Soup, Steam, Stew, Slow Cook, Reheat)

Start Button

Select the desired cooking mode then press Start to ignite the cooking process

Reheat Button

Reheat food around 248-266°F

Cooking Modes/Menu

Your rice cooker features many cooking options. The 3 common cooking modes are listed below. These cooking modes are prominently displayed on your rice cooker.

1. **Congee** the default cook time is 2hr. Use the Hour or Min button to adjust the time from 1.5hr to 4hr. *Please refer to the measurement lines in the inner pot when cooking congee.
2. **White Rice**
3. **Quick Rice** for White Rice Only. Cooks about 10 minutes faster than using the White Rice Cooking Mode. Use this button for when you're in a rush. The rice texture and taste will be different compared to using the White Rice Button.

Press the Menu button to access (8 additional Cooking Modes)

 
1. **Brown Rice**
2. **Porridge** *Please refer to the measurement lines in the inner pot when cooking congee
3. **Oatmeal** the default cooking time is 40 mins. Use the Hour or Min button to adjust the time from 20 mins to 2 hours
4. **Soup** the default cook time is 2 hr. Use the Hour or Min button to adjust the time from 1.5 hr to 4 hr.
5. **Steam** the default cook time is 5 mins. Use the Hour or Min button to adjust the time from 5 mins to 30 mins. The "Hour" button will increase the time by 1 hours and the "Min "button will decrease the time by 1 mins. Make sure to use the steaming tray when steaming. Always add at least 1 to 2 measuring cups of water. Please use the measuring cup provided.

Cooking Modes/Menu

- 6. **Stew** the default cook time is 2 hr. Use the Hour or Min button to adjust the time from 45 min to 2 hr.
- 7. **Slow Cook** the default cook time is 2 hr. Use the Hour or Min button to adjust the time from 2 hr to 10 hr.
- 8. **Reheat** Use this button to reheat food. The reheating temperature starts at 120-130°F.

*Inner Pot Measurement Lines

Please follow the measurement indicated in the inner pot when adding water. See Cooking Instructions for more details.

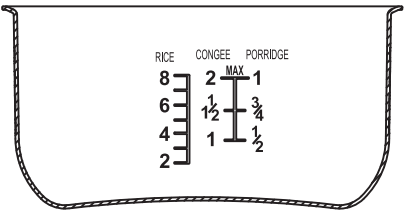

Function	Proportion		The minimum amount of uncooked rice	The maximum amount of uncooked rice
	Rice (cup)	Water (Mark)		
White Rice	2 CUP	2 (RICE)	2	8
Quick Rice	2 CUP	2 (RICE)	2	8
Brown Rice	2 CUP	2 (RICE)	2	8
Congee	1 CUP	1 (CONGEE)	2	2
Porridge	1 CUP	1 (PORRIDGE)	1/2	1

Initial Use

Clean Before First Time Use

1. Wash lid and accessories in warm soapy water. Rinse and dry thoroughly.
2. Remove inner pot from rice cooker and clean with warm soapy water. Rinse and dry thoroughly before returning to cooker
3. Never immerse the rice cooker base, cord or plug in water

Cooking Instructions

How To Cook White or Brown Rice

Remove the inner pot and place it on a flat level surface

 
1. Using the measuring cup provided, measure the desired amount of uncooked rice
2. Pour rice into a separate container to rinse
3. Rinse rice with cold water until the entire powdery residue has been removed. The water should become relatively clear
4. Pour rinsed rice into the inner pot and add the appropriate amount of water. Use the marking on the inner pot as a guide. For example if you measured 2 cups of rice you will need to add water until the level reaches line "2" in the inner pot.

Warning: Do not fill water over the max water level marked in the inner pot; water will overflow into the cooker and damage it.


5. Place the inner pot into the cooker
6. Close the lid on the cooker until you hear a "click" sound
7. Plug the power cord into the wall outlet. Once the power cord is plugged in correctly the LED will display "----" and the indicator light on the Start button will flash. The flashing lights indicate that the appliance is in Stand-By Mode.
8. Select the type of rice you are cooking by using the buttons on the control panel.
Select White Rice, Quick Rice, or Brown Rice.

(To select Brown Rice simply press the "Menu" until the "Brown Rice" indicator is lit.

9. Press the Start Button. The indicator light will be on (not flashing) when it is in cooking mode. You will also see lights following each other in the shape of a rectangle on the timer display.

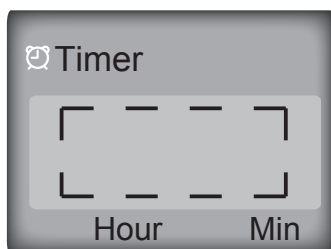

 
Running Lines indicate that the unit is cooking.

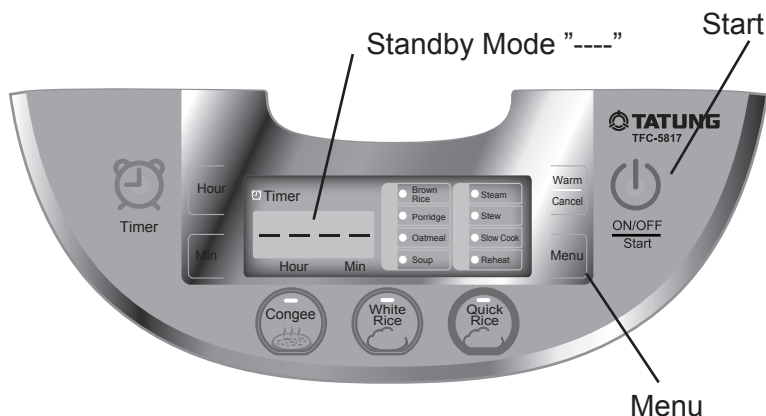

Timer

Your rice cooker features a 24 hour timer. Select your cooking function then press "Timer". The default time for the Timer is 2 hours (2:00 will be displayed on the timer and it will flash). Use the Hour or Min button to adjust the time. The "Min" button will adjust in increments of 10 minutes and the "Hour" button will adjust in increments on 1 hour. Set your time then press "Start". You will see the Timer Icon illuminate.

 Note: You cannot set the timer for less than 2 hours.

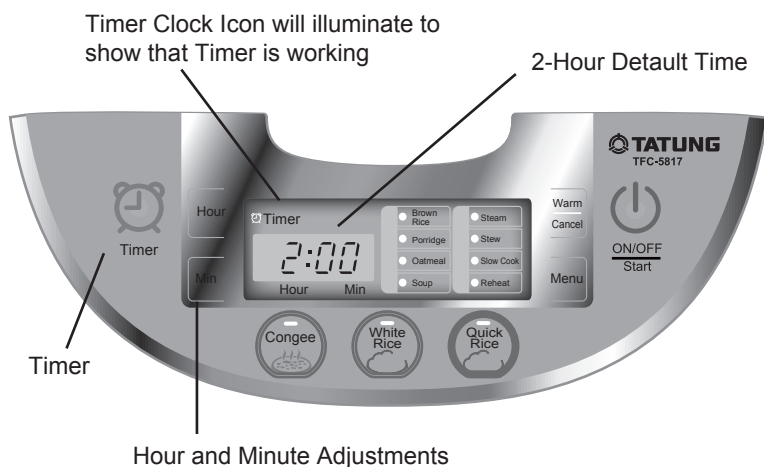


keep Warm

Your rice cooker will automatically keep food warm for you after the cooking process is complete. The "Warm" indicator light will light up to indicate that it is in "Warm" mode and the number 0 will be displayed under Hour. In "Warm" mode the display will show "0" in the first hour, and then display 1 for the 1st hour, 2 for the 2nd hour and so forth until the 12th hour. The 12th hour you will see "----" displayed; please cancel the keep warm mode when you see this.

Food should never be in "Warm" mode for over 12 hours. Rice will dry out and turn yellow if you warm for too long.

 The Warm temperature is 158°F~168.8°F

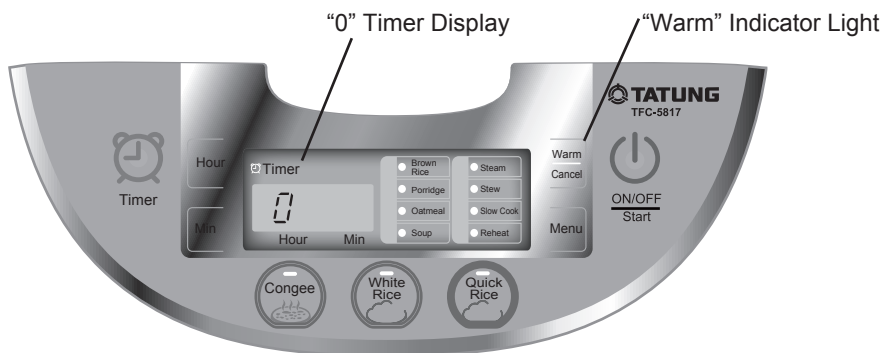

If rice has been cooked and cooled already (meaning at some point you unplugged the power cord or cancelled the "Warm" function) and you want to warm your food simply press the Warm/Cancel button while the unit is in Standby-By Mode. The "Warm" indicator light will light up to indicate that it is in "Warm" mode and the number 0 will be displayed under Hour

 
Reheat

The "Reheat" button will heat at a temperature of 248°F~266°F, which is a higher temperature than the "Warm" mode temperature of 158°F~168.8°F. Use the "Reheat" button if you would like to make your food hotter than 158°F~168.8°F. We suggest sprinkling a small amount of water over your rice to add moisture. Press the "Menu" button until the "Reheat" indicator is lit then press "Start" .


Please note that after 30 minutes in "Reheat" mode the unit will automatically switch to "Warm" mode which is at a temperature of 158°F~168.8°F.

Cleaning Inner Lid Instructions

- After removing inner lid, wipe the inside panel with a dry cloth

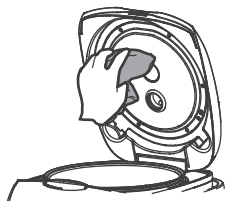


- Dry this area with a dry cloth.

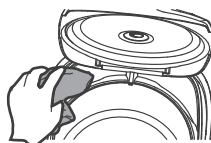 


Cleaning Inner Pot and Heating Plat

 - Remove the inner pot.

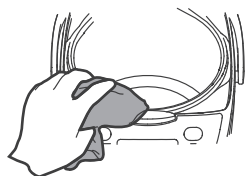

 
- Fully dry the exterior surface of the inner pot.

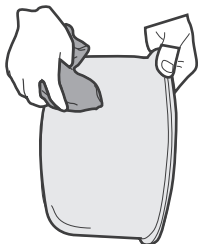

- Using a dry cloth to dry any visible water on the heating plate.



 Method of disassembling and cleaning the cover plate


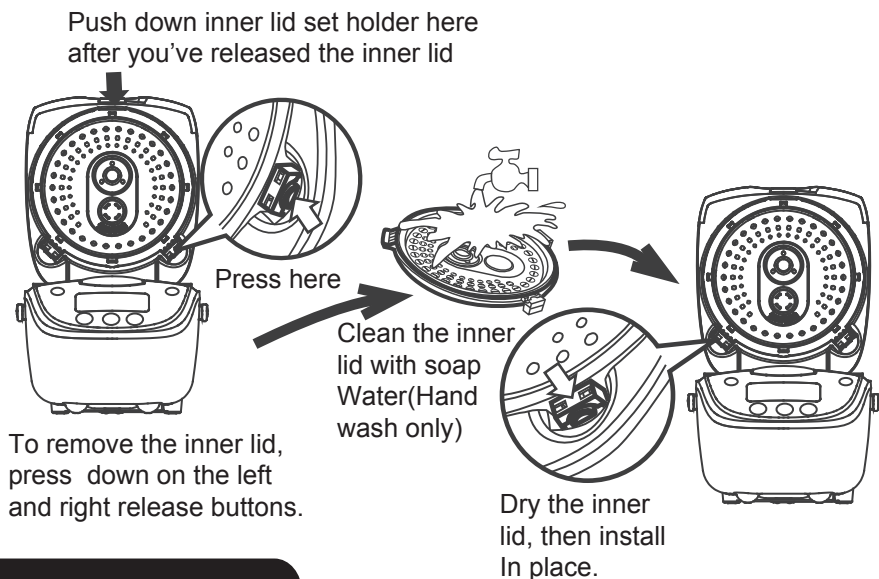


Cleaning and Maintenance

Disassembling, cleaning and installing the steam valve


Note: It is suggested to clean the steam valve frequently to ensure smooth steam outlet, please clean it after cooling to avoid scald.

  - Hold the handle of the steam valve and lift it up.
- As shown in Drawing, turn anticlockwise to open it.

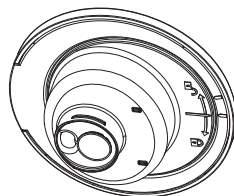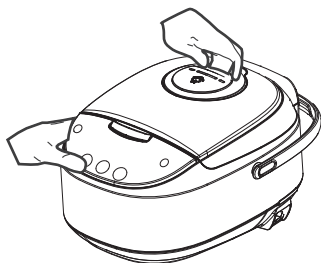

Cleaning and Maintenance

 
- Clean the cap

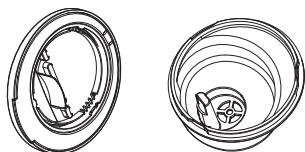


- Clean it with water after opening.



 - To install the steam cap, align the unlock/lock icons under the lines and turn it clockwise to lock.

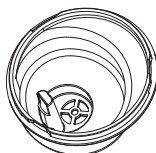

 - Press it down to install the steam valve.

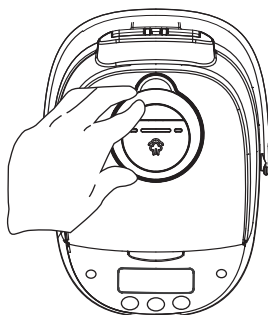


Troubleshooting

When you think that the product has problem, please carefully check the following circumstances before contact the customer service Department

	Problem	Possible Causes	Solution
1	Key did not respond	The power cord loose	Plug the power cord securely
2	Cooking time is too long	Water Add too much	Add correct amount of water and rice
		Inner bottom of the pot section had stained rice or main thermostat heating plate dirty	Clear stained rice from inner pot or clear thermostat heating plate
		Deformation or damaged inner pot	Replace with new inner pot
		Wrong function selected.	Select the correct function
3	Can not close the cover	Loose inner lid set holder	Re-install inner lid and inner lid set holder
4	Leaks from outside steam valve	Outside of the inner pot is not clean with water droplets	Please clean
		Deformation or damaged of the inner pot	Replace with new inner pot
		Seal is damaged	Replace with new seal
5	The cover automatically bounce	The upper cover not closed tightly	It is normal close the upper cover
6	There are strange sounds	Slight "click" sound is automatically adjusted when the sound of the fire relay	Non-fault, please continue to use
7	There is water vapor on the display panel.	The water on the outside of the Inner Pot is not wiped out	Please wipe dry the outside of the inner pot
		The sealing ring at the display panel is damaged	Replace sealing ring
8	Error code "E" "—" flickering	Open circuit of the bottom sensor(Bad patch bottom sensor)	
	Error code "E" "—" flickering	Short circuit of the bottom sensor	
	Error code "E" "—" flickering	Open circuit of the Outer Lid sensor(Bad patch Outer Lid sensor)	
	Error code "E" "—" flickering	Short circuit of the Outer Lid sensor	
	Error code "E rd"	Communication breakdown (reception failure) or connection cable plug bad	

 Schematic circuit diagram

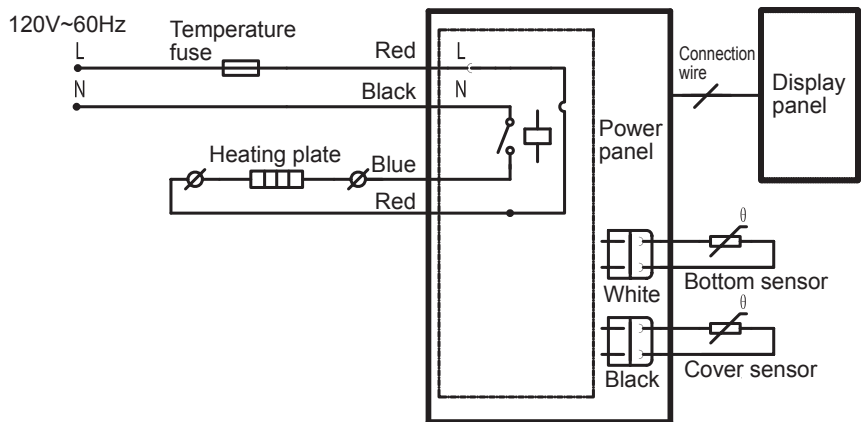

VII.WARRANTY

保修卡

大同美國公司一年保證

1. 非人為因素，憑收據自購買日起一年保證
2. 保證期間內，因下列情形故障者，大同美國公司將不負責任
 - a. 使用不當或自行拆卸
 - b. 不正當清洗
 - c. 無收據
 - d. 天災或未按規定電壓所造成的損害
3. 保證期間內，大同美國公司僅負責產品維修，產品更換費用及寄回費用，產品送修費用由消費者承擔

大同美國售後服務

2850 El Presidio Street
Long Beach, CA 90810
1-800-827-2850 Ext. 242

Tatung USA One Year Warranty

1. One year carry in warranty from the day of purchase.
2. During the warranty, Tatung USA will not be responsible of the condition listed as below:
 - a. Improper use or self-disassembly.
 - b. Improper maintenance.
 - c. No receipt.
 - d. Exceed one year form the purchased time.
 - e. Natural disaster or product was not used with required voltage.
3. During the warranty period, Tatung USA only responsible for produc repairs, product replacement, and rturn delivery fee. Customers are responsible for the postage fee for shipping back products for repair or replacemen to Tatung USA.

Tatung USA Customer Service
2850 El Presidio Street
Long Beach, CA 90810
1-800-827-2850 Ext. 242

VIII.DISCLAIMER

Information in this User's Manual is subject to change without notice.Tatung assumes no responsibility for any inaccuracies that may be contained in this User's Manual. If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions

Tatung Company of America, Inc.
2850 El Presidio St., Long Beach, CA 90810
www.tatungusa.com



大同微電腦電子鍋



型號：TFC-5817

用戶手冊

感謝你購買大同電子鍋。使用前，請仔細閱讀本用戶使用手冊，
并妥善保存以備日后參考。圖片僅供參考，產品以實物為準。



重要的保障措施

使用本電器時，請務必遵循以下基本安全預防措施：

1. 注意：首次使用前，請仔細閱讀所有說明書。
2. 請勿接觸高溫表面。請使用把手或旋鈕。
3. 僅在水平、干燥且耐熱的表面使用。
4. 為防止火災、觸電和傷人，請勿將電線、插頭或設備浸入水或其他液體中。請參閱清潔說明。
5. 任何器具在使用中或靠近兒童時，需要密切監督。
6. 在設備不工作時及清潔前，請從插座中拔出插頭。待設備冷卻後，方能安裝或拆卸部件及清潔設備。
7. 禁止在設備的電線或插頭受損後、出現故障後或以任何方式受損後操作該設備。請聯系大同售後服務以獲取檢查、維修或調整的信息。
8. 使用未經大同推薦的配套附件可能引發火災、觸電或受傷。
9. 請勿在室外使用。
10. 請勿接觸高溫表面或使電線懸掛在櫃台或桌子邊緣。
11. 請勿置於熱燃氣爐、電爐上方或附近，且勿置於烤箱內。
12. 請勿將本產品用於使用用途之外的目的。
13. 設備內盛有米飯、熱油或其他液體時，在移動設備時必須格外謹慎。
14. 由於極熱可能造成燙傷，因此，請勿觸碰、遮蓋或阻塞電飯煲頂部的蒸汽孔。
15. 僅能使用120V交流電源插座。
16. 務必將插頭從牆上插座的基座上拔出。切勿拉扯電線。
17. 電子鍋應與其他操作設備的電路分開，使用獨立電路。如果連接其他設備的電路過載，本電器可能無法正常工作。
18. 務必確保使用前，內鍋的外表面干燥。如果將濕內鍋放回電子鍋，可能損壞或導致產品故障。

19. 蒸煮期間或之後打開蓋子時，請格外謹慎。熱蒸汽逸出，且可能導致燙傷。
20. 在保溫功能下，米飯留在電飯煲內鍋的時間不得等於或超過12小時。
21. 為防止損壞或變形，請勿將內鍋在爐灶或燃燒器上使用。
22. 如需斷開電源，請將控制旋鈕轉至OFF檔，並將插頭從牆上插座中拔出。
23. 注意：為減少觸電危險，僅在電飯煲的可移動內鍋內烹飪。

請妥善保存本說明



重要的保障措施

短線說明

1. 短電源線旨在減少因長電線而纏結或導致絆倒的風險。
2. 如果使用時有密切監督，則可以使用加長電線。
3. 如果使用加長電線：
 - a. 加長電線標記的電氣規格至少應與設備的電器規格一致。
 - b. 加長電線需謹慎安置，以免其掛於台面或桌面而因此可能被兒童拉扯或導致誤絆。



極性插頭

 
該設備擁有極性插頭（一個插片比另一個插片寬）；
請遵守以下說明：

為減少觸電危險，此插頭旨在僅用一種方式插入極性插座中。
如果插頭未完全插入插座，請扭轉插頭。如果仍未插入，
請聯系專業電工。請勿試圖以任何方式改造該插頭。

如果電源線損壞，則必須由制造商進行更換，請撥打
1-800-829-2850（分機216）聯系我們。

本電器僅供家庭使用

部件名稱

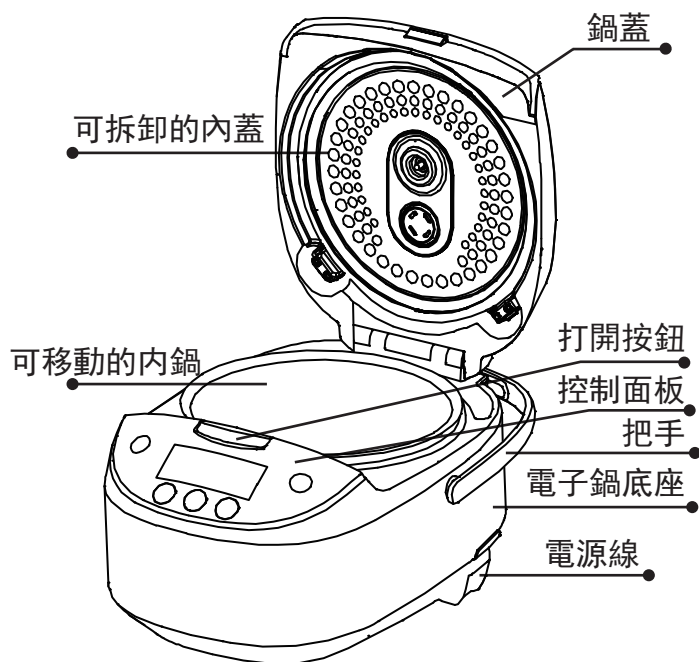

配件

飯勺



湯勺



量杯



蒸籠



 
控制面板

待機模式

顯示器上的 (----)
表示本裝置處於待機模式

保溫/取消按鈕

如果您希望您的食物在烹調後保溫（約158-168°F），請按壓此鍵。啟動加熱模式時，指示燈亮起。該按鈕僅在待機模式下工作。如需取消保溫功能，則按壓此鍵，直至指示燈熄滅

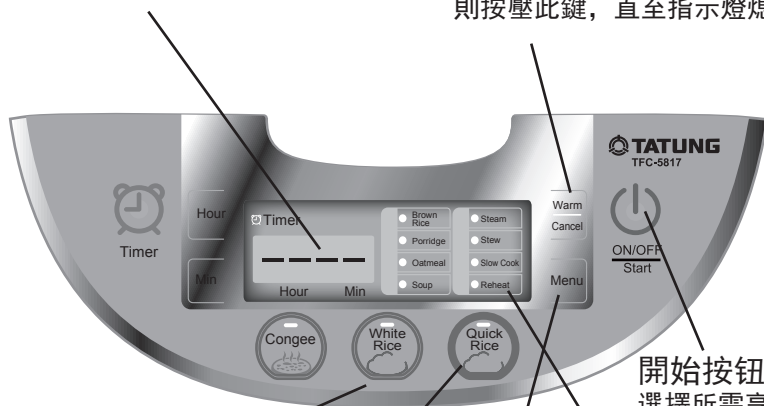

主要的烹飪按鈕
(稀飯，白米飯，快煮)

開始按鈕
選擇所需烹飪模式，
然後按壓開始按鈕
開始烹飪

快煮按鈕

快煮白米飯約10分鐘，注意：米飯口感和味道與使用白米飯按鈕不同

菜單按鈕

按壓菜單按鈕可進入8種烹飪模式：
(糙米、粥、燕麥粥、煲湯、蒸煮、燜、慢燉、再加熱)

再加熱按鈕

將食物重新加熱至約248-266°F

烹飪模式/菜單

您的電飯煲具有多種烹飪選擇。3種普通烹飪模式具體如下。
您的電飯煲上已對些烹飪模式明顯標記。

1. 稀飯 默認的蒸煮時間為2小時。請使用小時或分鐘按鈕，將時間調整為1.5小時至4小時。*煮稀飯時，請參考內鍋測量線。
2. 白米飯。
3. 快煮 僅限於白米飯。快煮模式比白米飯烹飪模式約快10分鐘。時間較匆忙時，請使用該按鈕。米飯口感和味道與使用白米飯按鈕時的口感和味道不同。

按壓菜單按鈕進入（8種烹飪模式）

 
1. 糙米
2. 粥 *煮稀飯時，請參考內鍋測量線。
3. 燕麥粥 默認的烹飪時間為40分鐘。請使用小時或分鐘按鈕，將時間調整為20分鐘至2小時。
4. 煲湯 默認的烹飪時間為2小時。請使用小時或分鐘按鈕，將時間調整為1.5小時至4小時
5. 蒸煮 默認的烹飪時間為5分鐘。請使用小時或分鐘按鈕，將時間調整為5分鐘至30分鐘。“小時”按鈕每按一次，增加1小時時間，“分鐘”按鈕每按一次，減少1分鐘時間。請確保蒸煮時使用蒸籠。務必至少添加1至2量杯水。請使用提供的量杯。

烹飪模式/菜單

- 6. 炖湯 默認的烹飪時間為2小時。請使用小時或分鐘按鈕，將時間調整為45分鐘至2小時。
- 7. 慢炖 默認的烹飪時間為2小時。請使用小時或分鐘按鈕，將時間調整為2小時至10小時。
- 8. 再加熱 請使用該按鈕重新加熱食物。再加熱溫度始於120-130°F。

*內鍋測量綫

加水時，請遵循內鍋所示的測量綫。請參閱烹飪說明，以獲取更多詳細信息。

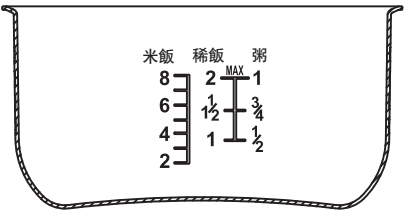

功能	比例		最小的米量	最大的米量
	大米 (杯)	水 (刻度)		
白米飯	2 杯	2 (大米)	2	8
快煮	2 杯	2 (大米)	2	8
糙米	2 杯	2 (大米)	2	8
稀飯	1 杯	2 (稀飯)	2	2
粥	1 杯	2 (粥)	1/2	1

初次使用

首次使用前請仔細清潔

1. 用溫肥皂水清洗蓋及附件。請徹底衝洗并干燥。
2. 取出電飯煲內鍋，用溫肥皂水進行清潔。放回電飯煲前，請徹底衝洗并干燥。
3. 切勿將電飯煲底座、電綫或插頭浸入水中。

烹飪說明

如何煮白米或糙米

取出內鍋，并將其放置在平坦的水平面上

 
1. 使用提供的量杯，量取所需米量。
2. 倒入單獨的容器中進行衝洗。
3. 用冷水衝洗大米，直至清除所有粉末狀殘留物。水應變成比較澄清。
4. 將洗淨大米倒入內鍋，并添加適量的水。使用內鍋上的標記作為指導。例如，如果您量取2杯大米，則您添加的水量需使液面達到內鍋的測量綫“2”。

警告：請勿使水超過內鍋標記的最高水位；水將溢出，造成損壞電飯煲。

5. 將內鍋放入電飯煲中。
6. 蓋上電飯煲蓋，直至聽到“咔嗒”聲。
7. 將電源綫插頭插入牆上插座。一旦正確插入電源綫，LED將顯示“——”，指示燈亮起，開始按鈕閃爍。該設備處于待機模式。
8. 通過控制面板上的按鈕選擇烹飪類型。
選擇白米、快煮或糙米。

如需選擇糙米，只需按壓“菜單”，直至“糙米”的指示燈亮起。

9. 按下“開始”按鈕。烹飪模式時，指示燈亮起（不閃爍）。
您還可以在定時器顯示屏上看到呈矩形排列的指示燈。

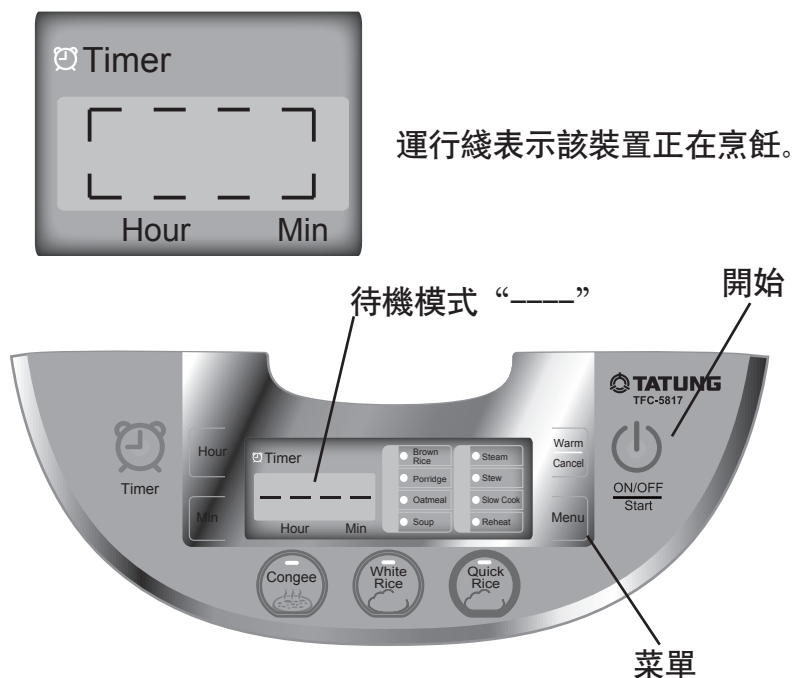

定時器

您的電飯煲具有24小時定時器。選擇烹飪功能，然後按壓“定時器”。定時器的默認時間為2小時（定時器將顯示為2:00，且會閃爍）。使用“時”或“分”按鈕來調整時間。“分”按鈕每按一次增加10分鐘，“時”按鈕每按一次增加1小時。設置好時間，然後按壓“開始”。您會看到定時器圖標亮起。

注意：您在定時器上設置的時間不能少於2小時。



保温

您的電飯煲將在烹飪過程完成后自動保温食物。“保温”指示燈將亮起，表明它處於“保温”模式，且將在“時”下方顯示數字0。在“保温”模式下，第1個小時內顯示屏將顯示為“0”，然后1個小時后將顯示為1，2個小時后將顯示為2，并依此類推，直至第12個小時后。12個小時后，您將會看到顯示為“——”；如看到此顯示，請取消保温模式。

切勿使食品處於“保温”模式的時間超過12小時。如果保温時間過長，米飯將變干變黃。

保温溫度為158°F~168.8°F



如果米飯已煮熟且已經冷卻（在某些時候，這意味着您已拔出電源插頭或取消“保温”功能），而您希望再加熱食物，只需電飯煲處於待機模式時，按壓保温/取消按鈕。“保温”指示燈將亮起，表明它處於“保温”模式，且將在“時”下方顯示數字0。

 
再加熱

“再加熱”按鈕的加熱溫度為248°F~266°F，其溫度比“保溫”模式溫度158°F~168.8°F高。如果您希望您的食物溫度高于158°F~168.8°F，請使用“再加熱”按鈕。我們建議在米飯上灑少量水，以補充水分。按壓“菜單”按鈕，直至“再加熱”指示燈亮起，然後按壓“開始”。


請注意，“再加熱”模式30分鐘後，本電飯煲將自動切換至溫度為158°F~168.8°F的“保溫”模式。

清潔內蓋

- 打開內蓋后，
用干布擦拭內部面板

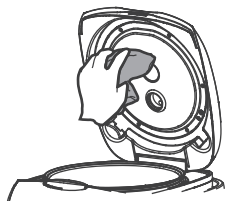


- 用干布擦干該區域

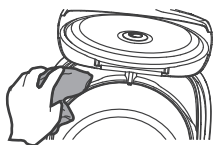 


清潔內鍋和加熱板

 - 取出內鍋

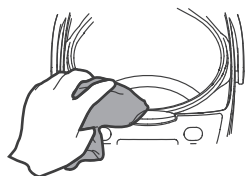


- 使內鍋的外表面充分干燥

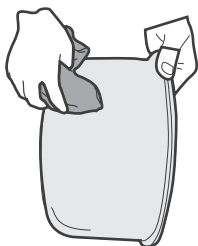 

- 用干布擦干加熱板
上任何可見水漬



 鍋蓋的拆卸和清潔方法


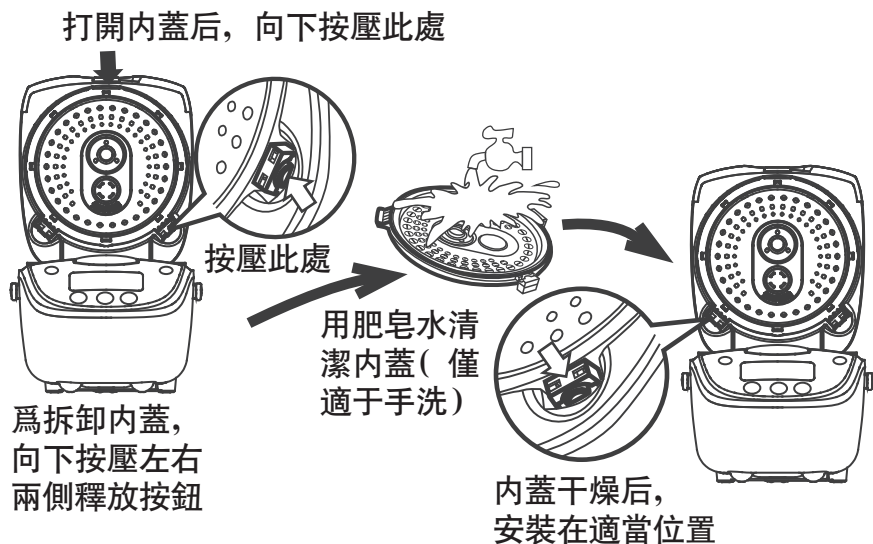


清理與維護

拆卸、清潔和安裝蒸汽閥


注意：建議經常清潔蒸汽閥，以確保蒸汽順利排出，請在冷卻后進行清潔，避免燙傷。

  - 握住蒸汽閥把手，將其抬高
- 如圖所示，逆時針旋轉以將其打開

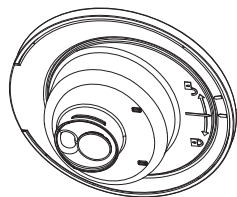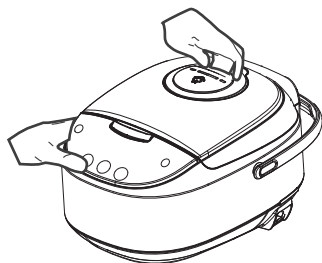

清理與維護

 - 清潔蒸汽蓋

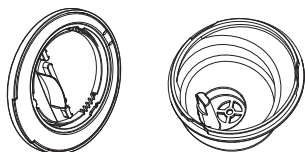


- 打開后用清水清潔



- 安裝蒸汽蓋，對齊綫下的解鎖/鎖定圖標，順時針旋轉鎖定



 - 向下按以安裝蒸汽閥

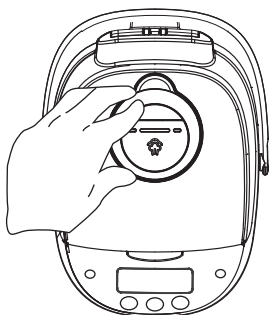


故障排除

您認為產品存在問題時，在聯系售後服務部前，請仔細檢查以下情形

	問題	可能的原因	解決方案
1	按鍵無反應	電源線是否鬆動	請將電源插頭插緊
2	烹飪時間過長	添加的水是否過多	更換新的內鍋
		鍋的內底上是否沾有米飯或主恆溫加熱板是否變髒	
		內鍋是否變形或損壞	去維修站更換新的內鍋
		是否選擇錯誤的功能	選擇正確的功能
3	無法合上鍋蓋		
4	局部蒸汽閥外側泄漏	是否未擦乾內鍋外側的水滴	請擦乾
		內鍋是否損壞變形	去維修站更換新的內鍋
		密封件是否損壞	去維修站更換
5	鍋蓋自動彈開	是否未關閉上鍋蓋	關閉鍋蓋
6	有奇怪的聲響	火災繼電器自動調整發出輕微的“咔嚓”聲	并非故障，請繼續使用
7	顯示面板上有水蒸汽。顯示屏變模糊	內鍋外側是否有水	請擦乾內鍋外側
		密封環是否破損或有異物	清除異物，更換密封環
8	故障碼“E” “—” 閃爍	底部傳感器開路（底部傳感器破損）	
	故障碼“E” “—”	底部傳感器短路	
	故障碼“E” “—” 閃爍	外蓋傳感器開路（外蓋傳感器破損）	
	故障碼“E” “—”	外蓋傳感器短路	
	故障碼“E rd”	通信故障（接收失敗）連接電纜插頭損壞	

 電路原理圖

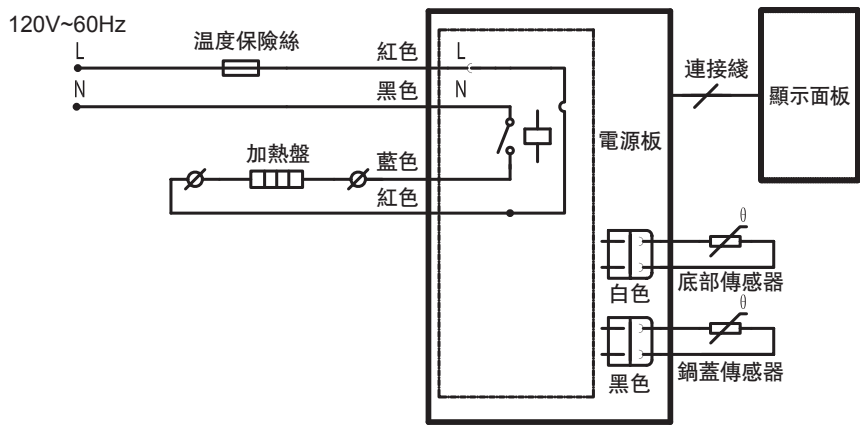

Specifications

Model number	TFC-4817	TFC-5817
Capacity	5.5 Cups(uncooked)	8 Cups(uncooked)
Rating (120V, 60Hz)		875 Watts
Product Dimensions		15.5"x11.3"x10.1"
Product Weight		8.2 Lbs

VII. 保修

保修卡

大同美國公司一年保證

1. 非人為因素，憑收據自購買日起一年保證
2. 保證期間內，因下列情形故障者，大同美國公司將不負責任
 - a. 使用不當或自行拆卸
 - b. 不正當清洗
 - c. 無收據
 - d. 天災或未按規定電壓所造成的損害
3. 保證期間內，大同美國公司僅負責產品維修，產品更換費用及寄回費用，產品送修費用由消費者承擔

大同美國售後服務

2850 El Presidio Street
Long Beach, CA 90810
1-800-827-2850 Ext. 242

Tatung USA One Year Warranty

1. One year carry in warranty from the day of purchase.
2. During the warranty, Tatung USA will not be responsible of the condition listed as below:
 - a. Improper use or self-disassembly.
 - b. Improper maintenance.
 - c. No receipt.
 - d. Exceed one year form the purchased time.
 - e. Natural disaster or product was not used with required voltage.
3. During the warranty period, Tatung USA only responsible for produc repairs, product replacement, and rturn delivery fee. Customers are responsible for the postage fee for shipping back products for repair or replacemen to Tatung USA.

Tatung USA Customer Service
2850 El Presidio Street
Long Beach, CA 90810
1-800-827-2850 Ext. 242

VIII. 免責聲明

本用戶手冊信息如有更改，恕不另行通知。對於本用戶手冊所包含的任何誤差，大同公司不承擔任何責任。如果您發現本手冊存在任何錯誤、誤導性或不完整信息，請及時告知。對於您的意見和建議，我們將不勝感激。

Tatung Company of America, Inc.
2850 El Presidio St., Long Beach, CA 90810
www.tatungusa.com