
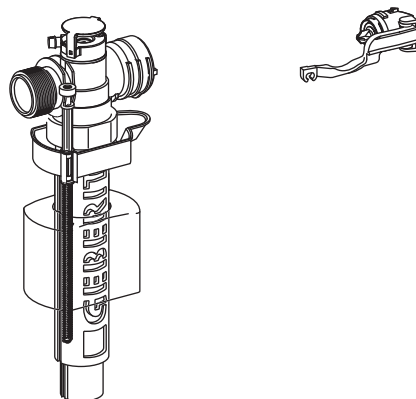
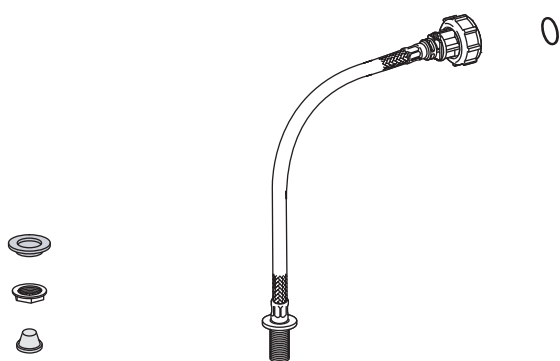



吉博力产品安装指导说明书- “Impuls380” 进水阀无补水

Geberit Product Installation-inlet valve “Impuls380” without refill

■ GEBERIT

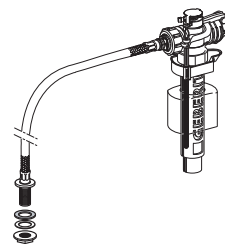


1a.

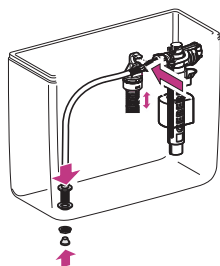

将进水阀卡入溢流管上部的固定架内；将进水管的接头套上封水垫圈，插入进水孔，并拧紧安装螺母，之后装入过滤网。

Fix the filling valve into the fixation frame; Assemble a seal on screw connector, insert it to water inlet hole and fasten the nut then to be fixed with a filter.


1b.

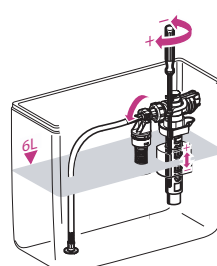

旋转调节杆以调整工作水位，顺时针方向水位升高，反之降低；确保工作水位到溢流管顶部的距离不小于2cm。

Turning regulation pin in clockwise can adjust working level, the water level will rise and vice versa. Assure the minimum distance between working level to the overflow top not less than 2cm.


2a.

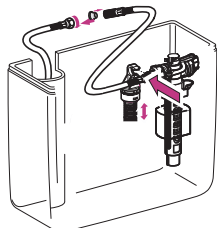

将进水阀固定在溢流管上部的固定架内，然后将进水管的软管接头与进水管的螺母装配好，注意装好密封圈和过滤网。

Assemble the filling valve into the filling valve fixation above the overflow pipe. Then assemble the mental flexible pipe and connector nut. Advert to assemble the seal and the filter.

2b.

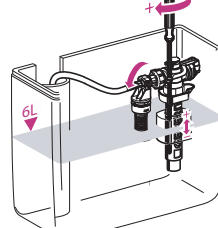

旋转调节杆以调整工作水位，顺时针方向水位升高，反之降低；确保工作水位到溢流管顶部的距离不小于2cm。

Turning regulation pin in clockwise can adjust working level, the water level will rise and vice versa. Assure the minimum distance between working level to the overflow top not

170.543.00.0




注意：必须安装过滤网，并且定期清洗。

Please note that the filter must be assembled and it should be cleaned regularly.


吉博力产品安装指导说明书-“Impuls380” 进水阀无补水

Geberit Product Installation-inlet valve “Impuls380” without refill


■ GEBERIT

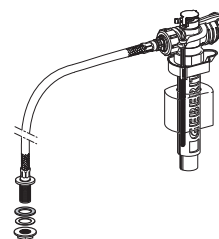


- 1 旋开螺母，取下进水阀
loose nut and take out the valve

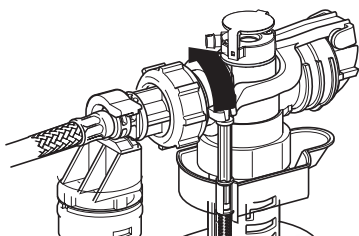


- 2 将调节杆与摇臂分开
separate the regulation pin and lever

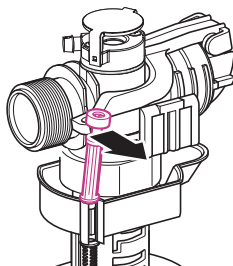


- 3 转动密封组件
turning the seal set

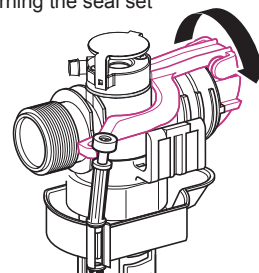


- 4 取出密封组件
take out the seal set

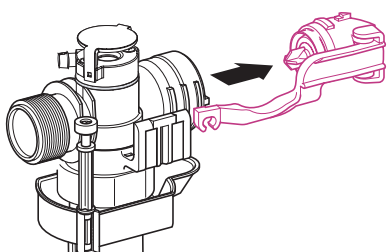


- 5 清洗水压腔及膜片组件
clean the closing cap and membrane

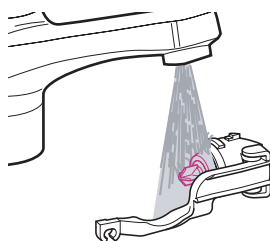


- 6 装配膜片
assemble the membrane

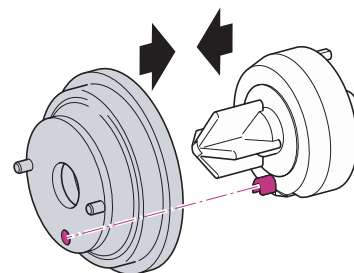


- 7 装配水压腔及膜片组件
assemble the closing cap and membrane

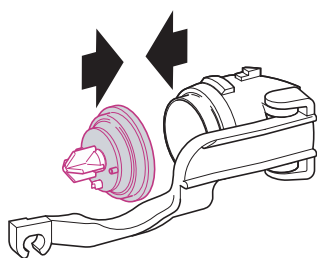


- 8 装入密封组件
insert the seal set

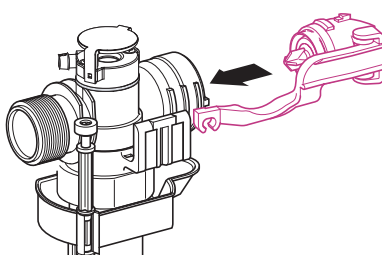


- 9 旋紧密封组件
fasten the seal set

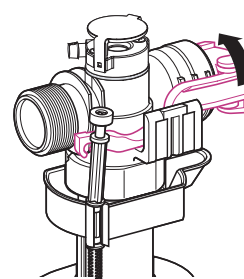

- 10 将调节杆与摇臂连接
connect the regulation pin and lever

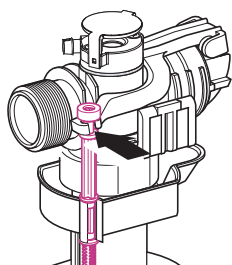

- 11 装入进水阀并旋紧螺母
insert the valve and fasten the nut

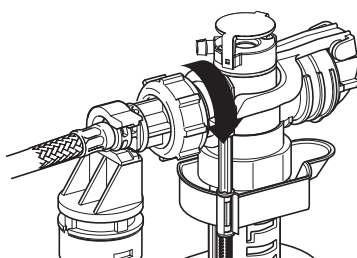

- 12 恢复原工作水位
readjust the working level

