



Hamilton Beach®
C O M M E R C I A L

90-CUP RICE COOKER

Operation Manual –
Page 2

90 杯电饭锅

操作手册 –
第 6 页

READ BEFORE USE.

使用前请阅读。



37590 Series

For more

Good Thinking®

visit www.hamiltonbeachcommercial.com

IMPORTANT: This operation manual should be reviewed with all equipment operators as part of your operator training program.

IMPORTANT SAFETY INSTRUCTIONS

 
WARNING – When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not touch hot surfaces. Use handles or knobs. Use pot holders when removing hot containers.
5. To protect against a risk of electrical shock do not immerse cord, plug, or base in water or other liquid.
6. Unplug from outlet when not in use. Unplug before putting on or taking off parts and allow to cool before cleaning.
7. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot food, water, or other hot liquids. Do not use lid handle to carry cooker when contents are hot.
13. Turn the appliance OFF (O), then unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
14. Do not use appliance for other than intended purpose. Any misuse can result in fire, electric shock, or injury to persons.
15. Lift and open cover carefully to avoid scalding, and allow water to drip into the cooker.
16. **WARNING!** Risk of electric shock. Cook only in removable container.
17. Do not place the unit directly under cabinets when operating as this product produces large amounts of steam. Avoid reaching over the product when operating.
18. This appliance is not intended to be operated by means of an external timer or separate remote-control system.

– SAVE THESE INSTRUCTIONS –

Rice Cooker Safety


⚠ WARNING

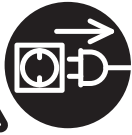

Electrical Shock Hazard
Disconnect power before cleaning base.
Failure to follow these instructions can result in death or electrical shock.



 Electrical Shock Hazard
Plug into a grounded outlet.
Do not remove ground.
Do not use an adapter.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electrical shock.

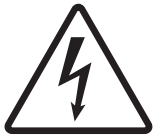

Electrical Shock Hazard
Cook only in removable cooking pot.
Never place water or food directly into base.
Failure to follow these instructions can result in death, fire, or electrical shock.

⚠ WARNING



Burn Hazard
Never use lid handle to carry cooker when contents are hot.
Failure to follow these instructions can result in burns or serious injury.

Technical Services

For assistance or replacement parts, call or email Technical Services:

 
866-285-1087 (USA, Canada) or +1-910-693-4277
commercial.support@hamiltonbeach.com

APAC Region: +86-400-930-2722,
hbcapac.support@hamiltonbeach.com
www.hamiltonbeachcommercial.com


For Commercial Use Only

220 V ~ 50 Hz 2500 W
Capacity: 22 L

Parts and Features

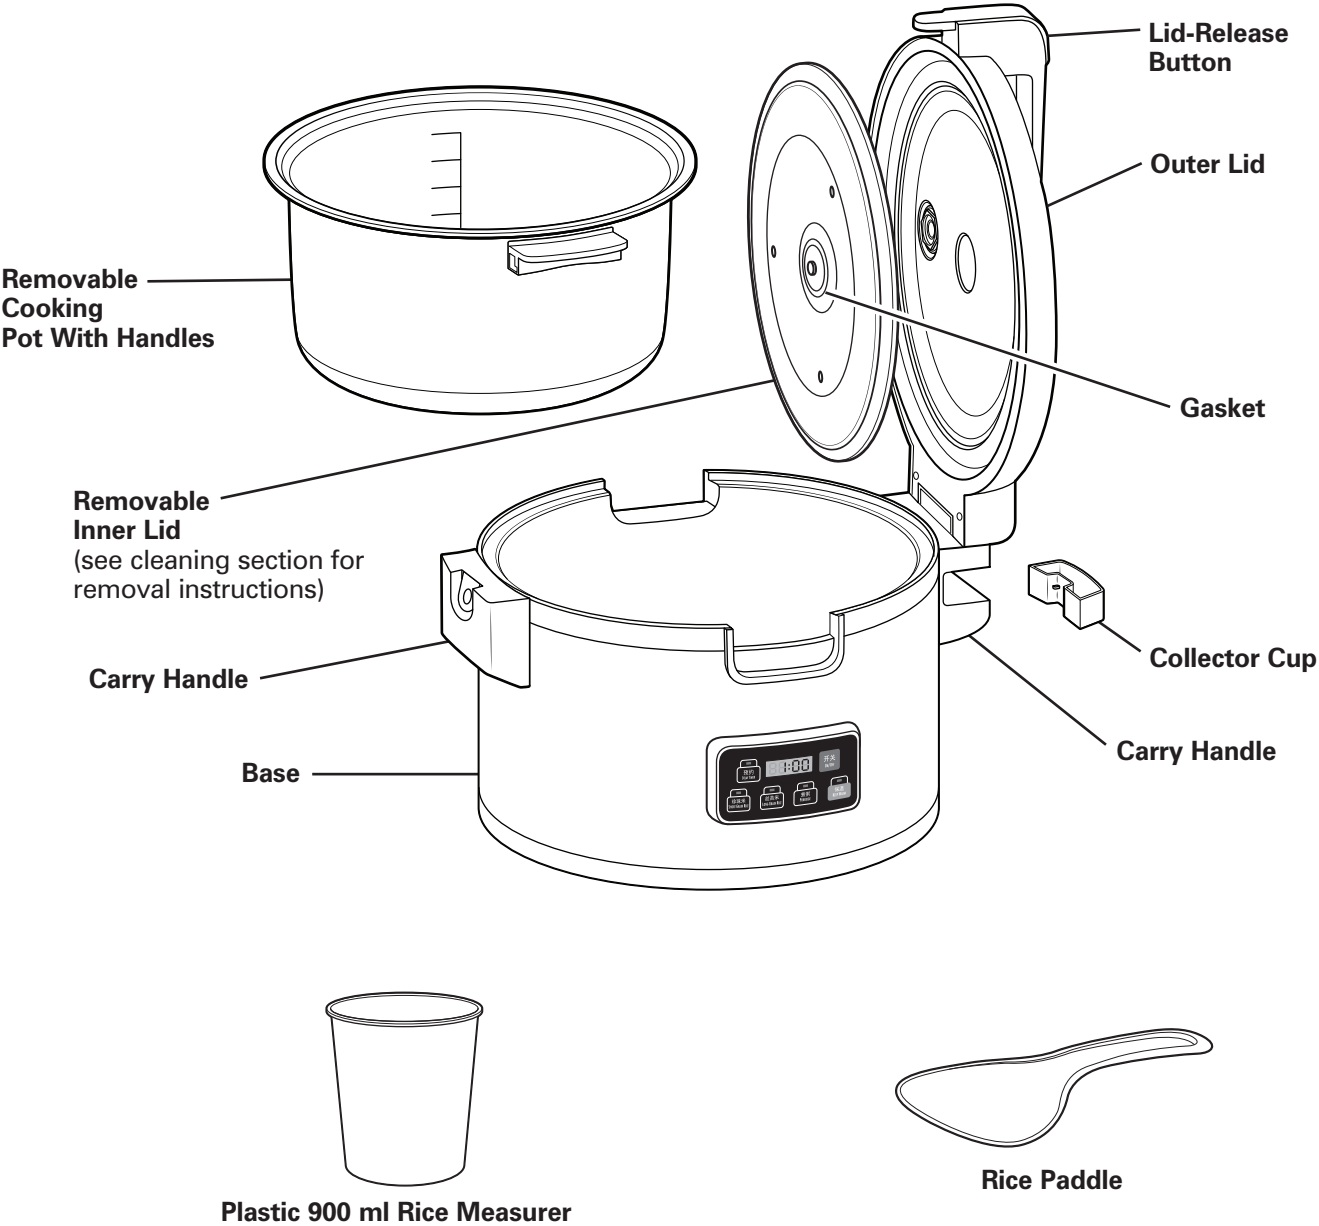

Control Panel

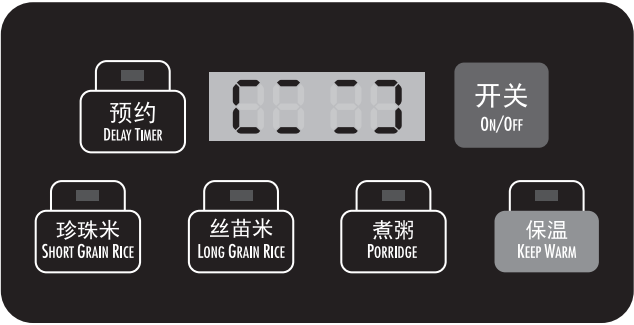 



NOTE: Clean rice cooker after each use to prevent the accumulation of dirt and debris. Sanitize daily.

Sanitizing

1. Immerse cooking pot, removable lid, rice paddle, and measuring cup in sanitizing solution for 2 minutes.
2. Allow to air dry.
3. Wipe down all areas of inner lid with a clean paper towel and sanitizing solution.
4. Rinse with clean water before using.

Recommended sanitizing solution:

The sanitizing solution should consist of 1 tablespoon (15 ml) of bleach per 1 gallon (3.8 liters) of clean, cool water (60°F [16°C]) mixed according to the instructions on the bleach.

TIPS:

- Cook times and water levels will vary with other varieties of rice.
- The most important detail when cooking rice is the ratio of rice to water. Please refer to rice package directions.
- To prevent overflow and/or overheating, do not exceed the maximum 45 cup (8.2 L) fill line when both rice and water are added to cooking pot.

Rice Cooking Chart

Type of Rice	Step 1: Add uncooked rice	Step 2: Fill water to line on cooking pot	Yield (Standard 8-oz [227 g] Dry Measure Cup)	Approximate cook time
Long grain	9 Rice Measurer Cups	45	90 Cups +	65–75 minutes
Short grain	9 Rice Measurer Cups	45	90 Cups +	55–60 minutes

Troubleshooting Guide

Problem	Solution
Cooker does not turn on.	• Cooker is not plugged in. Make sure rice cooker is plugged into a properly operating electrical outlet. Press ON button.
Rice is not cooked.	• Not enough water/cooking liquid. • Place cooking pot securely into the base. NOTE: Make sure bottom of cooking pot is not bent or warped, or it will not conduct heat correctly. To replace cooking pot, call the toll-free customer assistance number listed on page 3 of this guide.
Rice is mushy.	• Too much liquid added to cooking pot. Reduce liquid.

重要信息：作为操作者培训计划的一部份，所有设备操作者皆应阅读本操作手册。

 
 
重要安全说明书

警告 — 使用电器时，应时刻遵守基本的安全防范措施，以减少火灾、触电和/或人身伤害的风险，包括以下：

1. 阅读所有说明。
2. 本电器非供用于身体、感官或精神能力衰退的人员，或缺乏经验和知识的人员使用，包括儿童在内，除非他们是在负责其安全的人员的密切监督和指导下使用该设备。
3. 儿童使用任何电器，或在儿童身旁使用任何电器时，必须受到密切监督。请密切监督儿童，以免他们拿本设备玩耍。
4. 请勿接触高温表面。使用手柄或把手。移除高温容器时，请使用隔热垫。
5. 为免触电，请勿将电源线、插头或底座浸在水或其他液体中。
6. 不使用时，请从插座上拔下插头。在进行清洁前，请拔掉电源，并等待冷却后才装嵌或移除零件。
7. 切勿在电源线或插头损坏时操作设备，也不要操作任何已故障、曾掉落或以任何形式受损的设备。如果电源线损坏，为了避免危险，必须由制造商、其维修部门或类似部门的专业人员更换。请致电本手册提供的客户服务电话号码，了解关于检查、维修和调整的信息。
8. 使用非本电器生产商推荐的附件可导致受伤。
9. 请勿在户外使用。
10. 请勿让电线搭在桌子或柜台的边缘上或触及热表面。
11. 请勿放置在灼热的气体或电燃烧器上或附近，或放置在热的焗炉中。
12. 移动装有高温食品、热油或其他高温液体的电器时必须非常谨慎。内容物为高温时，请勿使用盖子的手柄移动电饭锅。
13. 不使用时、安装/移除部件前、以及清洁前，请关闭设备 (O)，然后从插座拔掉插头。请紧握插头，从插座拉出它。切勿拉扯电源线。
14. 请勿将电器用于其他非预期的目的。任何误用均可导致火灾、触电或人身损害的风险。
15. 小心抬起及打开盖子以避免灼伤，并让水滴回饭锅内。
16. **警告！触电危险。**只使用提供的可移除容器煮食。
17. 操作本产品时请勿将其直接置于厨柜下，因为会产生大量蒸汽。操作时请避免越过产品上方。
18. 本电器并非设计供通过外部计时器或独立遥控系统运作。

— 妥善保存本说明 —

电饭锅安全

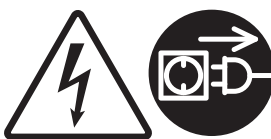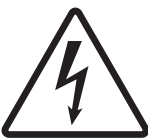⚠ 警告	
	触电危险 请拔除电源后再清洁底座。 不遵循指示可能会造成触电甚至死亡。
	触电危险 把电源插进已接地的插座。 切勿移除接地设备。 切勿使用转插器。 切勿使用延长线。 不遵循指示可能会造成触电、火灾、甚至死亡。
	触电危险 只使用提供的可移除煮食锅煮食。 切勿将水或食物直接置于底座内。 不遵循指示可能会造成触电、火灾、甚至死亡。

⚠ 警告	
	烫伤危险 内容物为高温时，切勿使用盖子的手柄移动电饭锅。 不遵循指示可能会造成烫伤甚至死亡。

技术服务

如需协助或取得替换部件，请致电或寄送电子邮件联系技术服务

 
866-285-1087 (美国/加拿大) 或 +1-910-693-4277
commercial.support@hamiltonbeach.com

亚太地区：+86-400-930-2722，
hbcapac.support@hamiltonbeach.com
www.hamiltonbeachcommercial.com


只供商业使用

220 V ~ 50 Hz 2500 W
容量：22 L

零件和功能

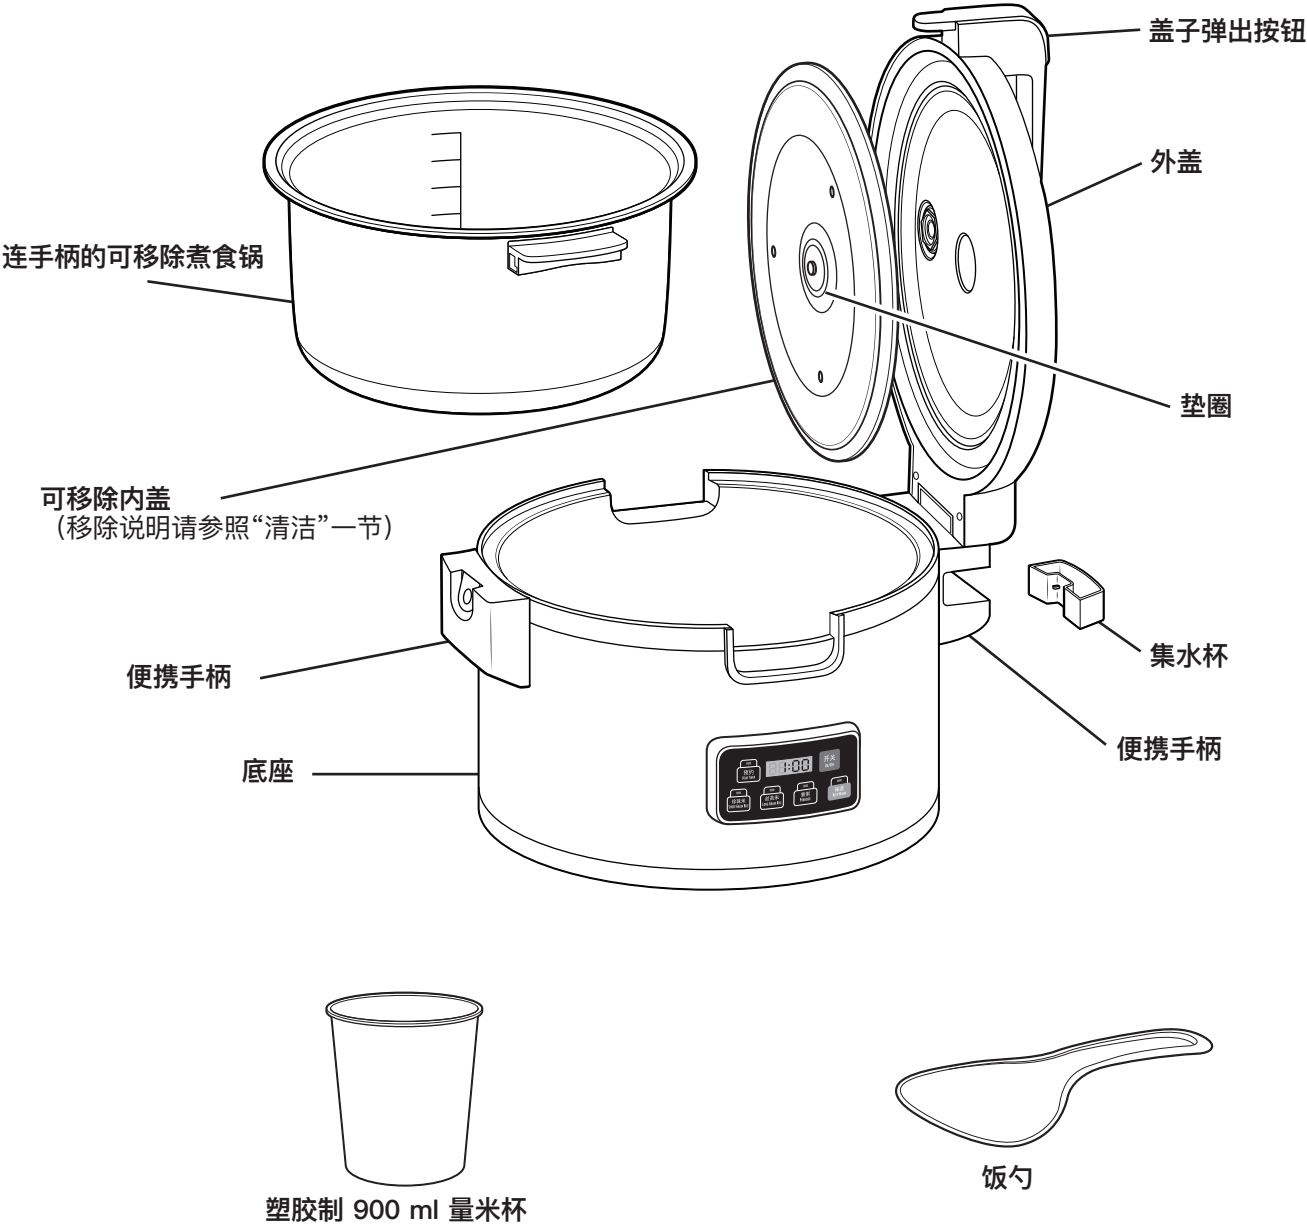

控制板

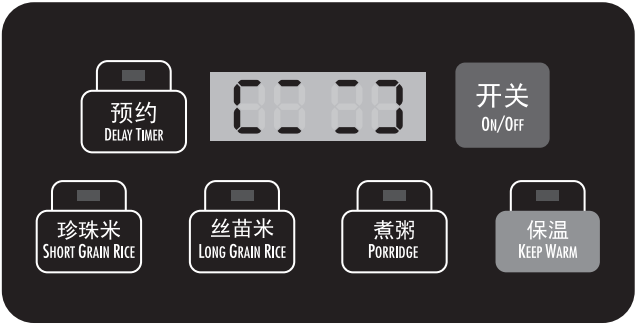 



备注：每次使用后应清洁电饭锅，避免残渣累积。请每天消毒。

消毒

1. 将电饭锅、可移除盖子、饭勺和量杯于消毒溶液中浸 2 分钟。
2. 请风干。
3. 使用干净的纸巾和消毒剂擦内盖的所有区域。
4. 使用前请用清水冲洗。

建议消毒溶液：

每 1 加仑 [3.8 公升] 清水 (60°F [16°C]) 加 1 汤匙 [15 ml] 家用漂白剂，按漂白剂的指示混合。

实用小建议：















- 煮食时间和水位应根据米粒种类而有所不同。
- 煮饭时，米与水的比例最重要。请参照米包的指示。
- 为避免溢出和/或过热，切勿让加进煮食锅的米和水超出 45 杯 (8.2 公升) 指示线。


















电饭锅煮饭表











米粒类型	第一步：添加生米	第二步：把水加到煮食锅的水线	饭量 (标准 8 盎司 [227 g] 量杯)	大约煮食时间
丝苗米	9 个量米杯	45	90 杯 +	65–75 分钟
粳米	9 个量米杯	45	90 杯 +	55–60 分钟

疑难解答指南

问题	解决方法
无法启动电饭锅。	• 电饭锅电源未插入。请确认电饭锅的电源插头已插进正常运作的电插座。按“开”。
饭未煮熟。	• 水量不足。 • 把煮食锅稳固置于底座内。备注：确认煮食锅的底部并未弯曲或变形，否则将无法良好导热。如需替换煮食锅，请致电本指南第 3 页的免费客户支持电话。
饭煮得糊烂。	• 水量太多，请减少水量。

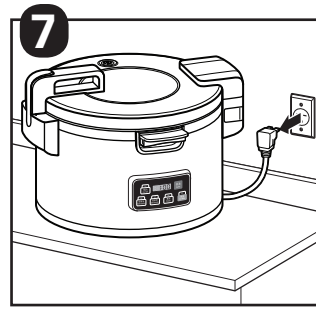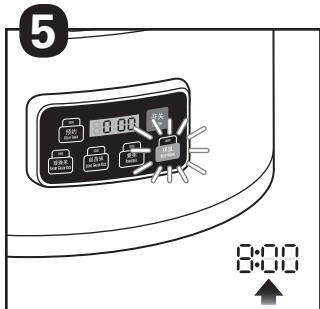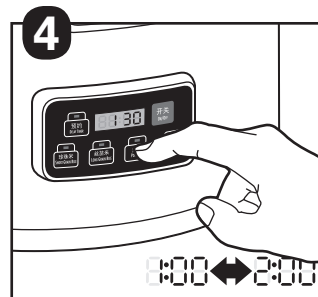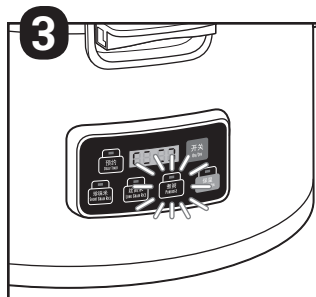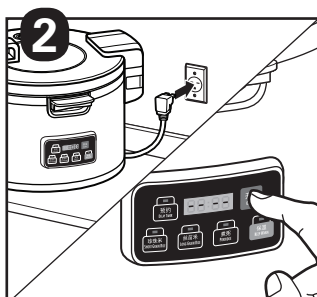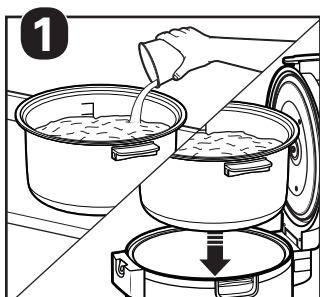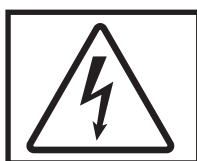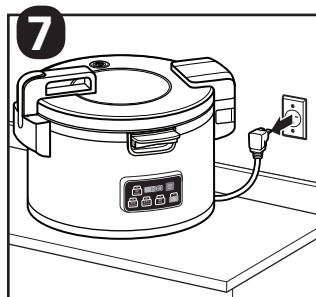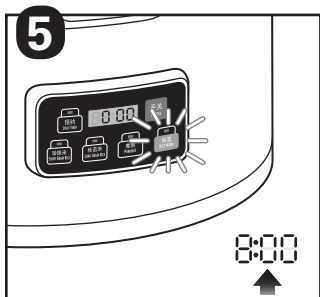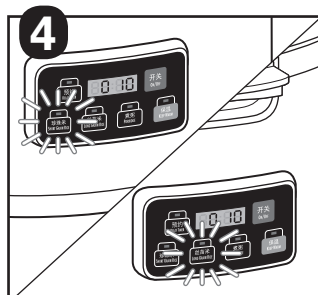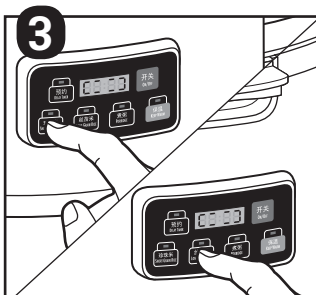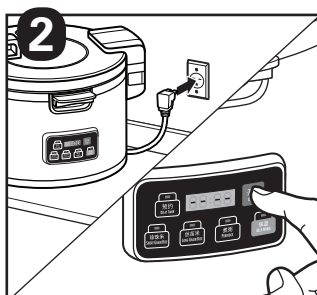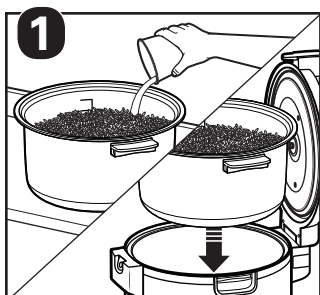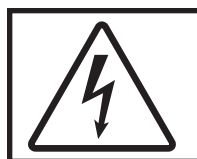              

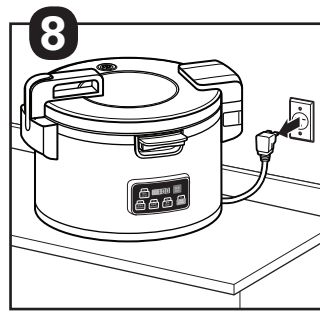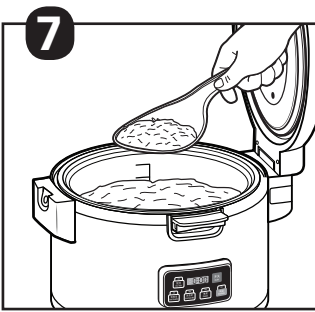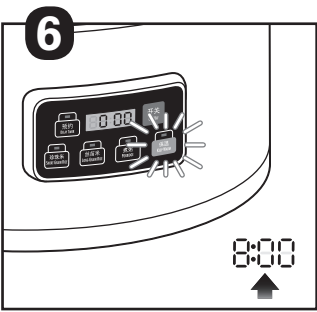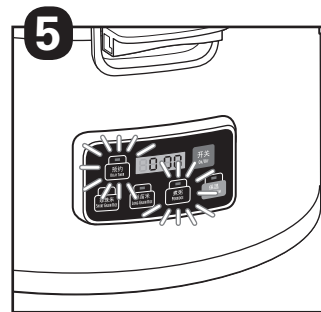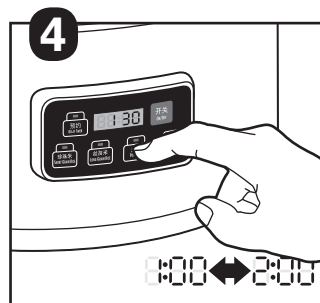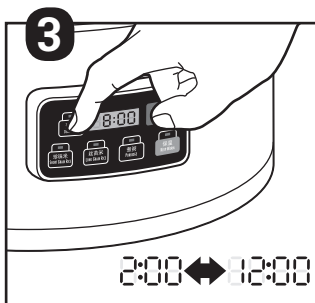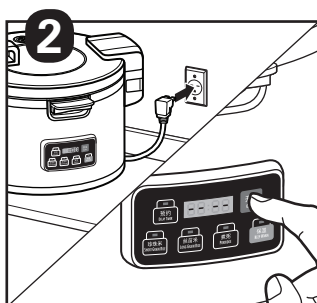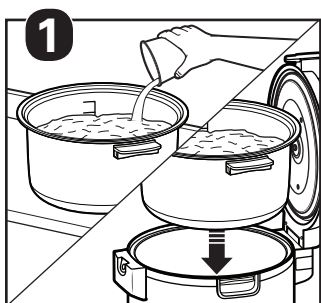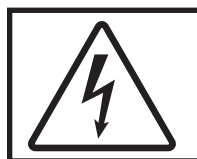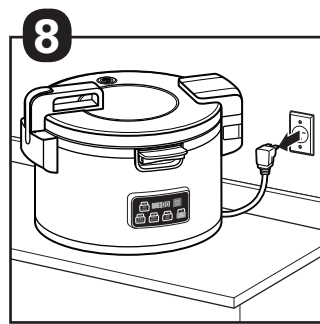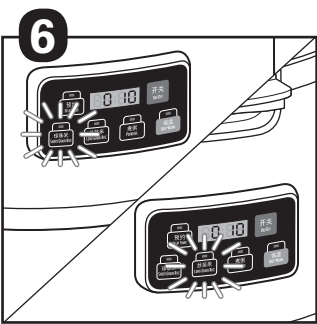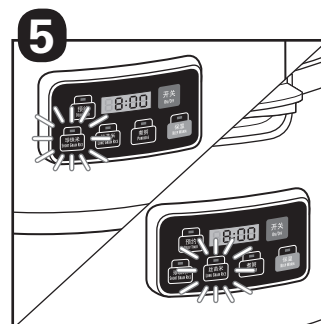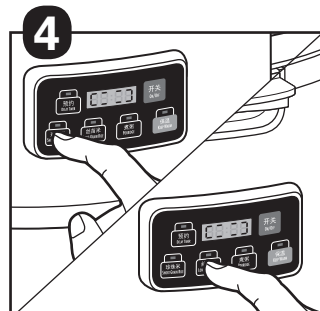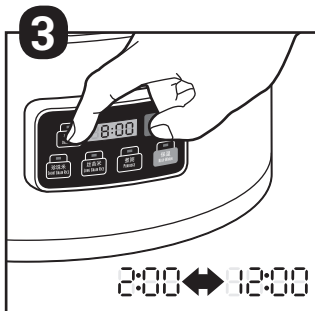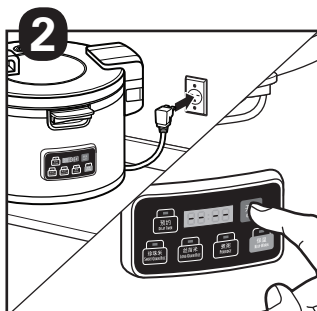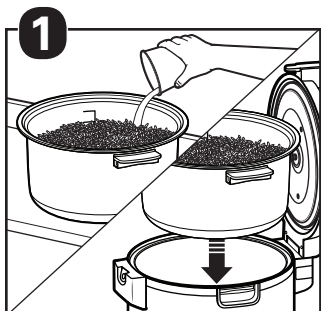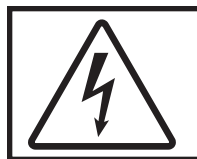                 

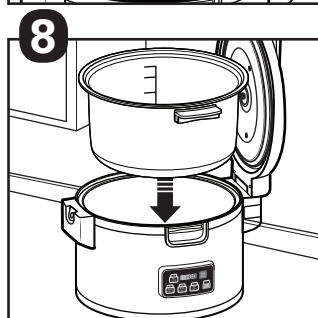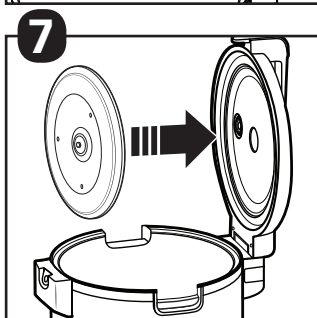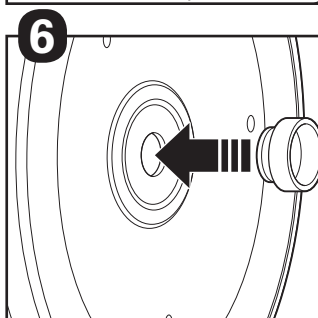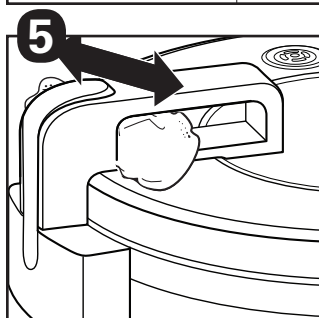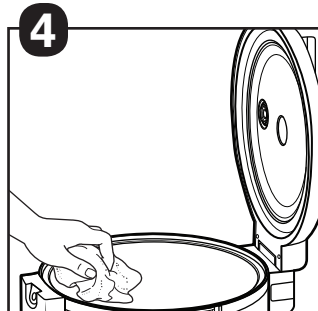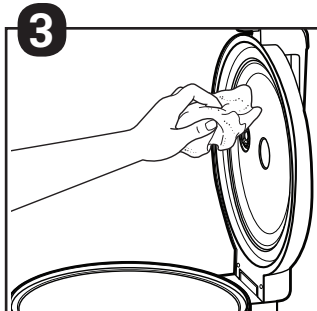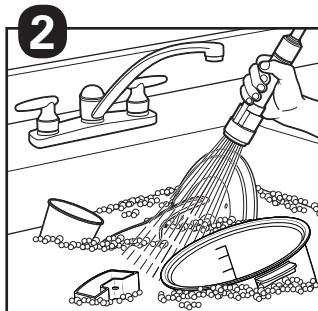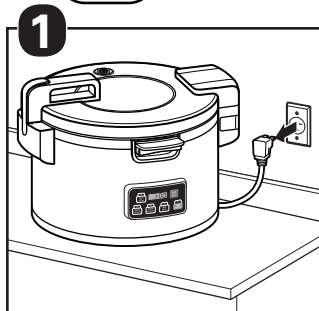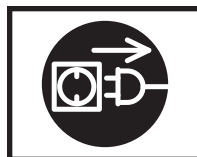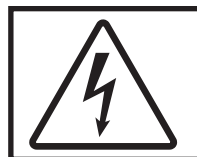          

产品中有害物质的名称及含量
Name and content of hazardous substances in product

部件名称 (Component name)	有害物质 (hazardous substance)					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr(VI))	多溴联苯 Polybrominated diphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
线路板	X	O	X	O	O	O
发热盘	X	O	O	O	O	O
电源线	X	O	O	O	O	O
中层	X	O	O	O	O	O
五金结构件	X	O	O	O	O	O

本表格依据 SJ/T 11364 的规定编制。

This table is prepared in accordance with the provisions of SJ/T 11364.

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

Indicates that the said hazardous substance contained in all the homogeneous materials for this component is below the limit requirement in GB/T 26572.

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。这是由于目前技术或经济等的原因暂时无法实现替代。

Indicates that the said hazardous substance contained in at least one of the homogeneous materials used for this component is above the limit requirement in GB/T 26572. Due to technological and/ or economic reasons, these hazardous substances cannot be easily replaced at this time.

这是环保使用标志。标志内的数字代表在正常使用状态下, 产品的环保使用推荐年限。

This is the logo of environmental protection use. The number inside indicates the environmental protection use recommended period (Year) of product in normal use.

Hamilton Beach
COMMERCIAL

4421 Waterfront Drive
Glen Allen, VA 23060

840333201
10/19

www.hamiltonbeachcommercial.com