

PC DEVICE

1. PC's minimum system requirement

- WIN98/ME/2000/XP, IBM compatible private Computer, notebook.
- Pentium 166MHz or above,
- USB port,
- 32MB memory (64MB for WIN2000) or above,
- 20MB hard disk space
- CD-ROM Drive
- Sound card
- Available for internet

2. Connect Mp4 player to your PC

Using USB cable (it is provided in the accessories) to connect USB port terminal of the player to USB port at PC correctly.

Notice: please power off the player before insert USB cable. Then turn on the player. Otherwise it will influence the player's function. Other USB cables than the provided USB cable should not be used.

Dear customer, thank you for choosing our product, Really hope our products can bring happiness to you. Please read the following instruction carefully before your using.

1. Forbid to use in high temperature, high humidity environment, especially don't use in the high temperature bathroom. 0 degrees Centigrade- 40 degrees Centigrade is the best working temperature or Mp4.
2. Avoid putting the MP4 player at the place where the sunshine penetrate directly.
3. Inserting or pulling out the SD card should be on the power off state, Because to insert or pull out the SD card might cause unpredictable damage to Mp4.

1

DIGITAL PMP
USERS` GUIDE

JXD209

Thank you for purchasing our latest product--PMP. Please read the instruction carefully for safe use. We recommend you to keep this instruction manual for future reference.

Product Introduction

JXD209

4. put it in the place where the children can't touch, avoid touching the sharp object and cause serious damage.
5. Please don't dismantle the MP4 without authorization. Please contact with distributor or our company, if any query.
6. Please don't change the battery or poke the battery, be care that the battery explodes and hurts people, if put the battery into fire.
7. Please don't use it at driving or your brain need highly centralized.
8. We suggest customer copying the data to avoid the data loss caused by unstable power, otherwise our company will be not responsible for any damage.
9. when insert CD card, please make sure inserting direction is correct, or damage SD card jack self-worth.


Product Introduction

- 1) MOVIE play function: support ASF(MPEG-4), AVI(Divx, Xvid), 3GP, MP4 format.
- 2) Audio play function, support MP3/WMA/WAV/AAC format etc.
- 3) Photo browse function, used for browsing photos in JPEG format.
- 4) Built-in Microphone / Line-in recording.
- 5) Support the video recording--AV in.
- 6) Video, picture output/AV out (NTSC/PAL)
- 7) Calendar, Calculator, Game download.
- 8) Multiple languages setting.
- 9) Learning function: E-book, English <=> Chinese Dictionary.
- 10) Support SD card.
- 11) Built-in Lithium battery.
- 12) Built-in speaker.
- 13) Camera function.
- 14) DV function.
- 15) Press button with voice.

2

BUTTON AND CONNECTOR

 JXD209

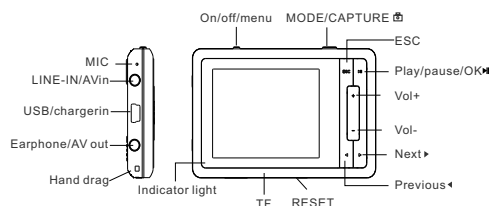

Press "ESC" button to escape current operation.
Working state when the green light on.
Charge state when the red light on.

I Power on operation

Press Power on button for long, then enter the menu stand-by mode of MP4.

II Power off operation

Press Power on button for 3 seconds to enter power off state.

III Charge operation

Connect the charger to the power, and connect the port with the MP4 charge port. At this moment, the Mp4 enter charge state and the power instruction light is red. The charge time is around 5 hours in usual. It is best on the power off state to charge.

3

OPERATION DETAILS

JXD209

Notice: charge operates at both on/off state. The red light will be on at charging, it will die after full of electricity, then you can pull the charger out and use the player.

Connect PC operation.

Power on the MP4 player, use USB cable of the accessories, connect the big plug side to the PC's USB port, and connect the small side to the MP4 USB port, then the Mp4 screen will show the connection picture. At this moment, open.

MY COMPUTER will find two REMOVABLE DISC. The first one is flash memory disc, the second is SD card memory. Attention it can't be opened without SD card.


I. Video operation:

1. Press power on button for long time to open MP4 player and wait for the player enter stand-by interface.
2. Select Video play function by " < / > " button, and press " < / > " confirm.
3. After enter operate interface, press " + / - " button to select the video content you wanted. Press " < / > " button to play.
4. Press " MENU " button to enter setting interface, Press " + / - " button to select Display mode, Play mode, File protection, File delete, AV out, Exit. Operation as below: Press " < / > " to enter pre-set submenu, move the optional up/down through " + / - ", press " < / > " back to the main menu, and press " < / > " to confirm and exit. (as picture display)
5. In play mode, press " < / > " to select video file up/down, press " + / - " to adjust the volume, press " < / > " button to display the play bar, when volume symbol change into blue (press " < / > " button to switch the color), press " < / > " to FF/FW, and press " < / > " to pause play.
6. Press "ESC" back to the previous menu. Notice: Video file in "(removable disk):/VIDEO" folder.

4

OPERATION DETAILS

 JXD209

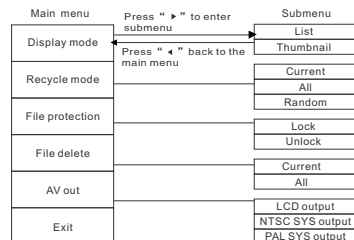

Press " + / - " to move up/down, press " < / > " to confirm, and press "ESC" to exit.

Video output:

Connect the AV cable with the input port of TV, the other side connect with the AVOUT port of MP4, there are PAL and NTSC output system, select the best system, then it can receive the best signal. Press " + / - " to move the cursor on the "AV out", select the best system, press " < / > " to confirm, now MP4 back to the video main menu, select the video file you want to play, press " < / > " to play, at this time, the MP4 screen is black, and it will display on the TV screen, press "ESC" to exit and back to the MP4 video main menu.


5

OPERATION DETAILS

JXD209

II. AUDIO PLAY

 1. Turn on the Mp4 player. Press " < / > " button to select "Audio play" function, press " < / > " button to confirm.
2. Press " + / - " to select up/down, and press " < / > " to play, and press " < / > " again to pause.
3. In play mode, press " < / > " to switch previous/next file, press " + / - " to adjust volume, press " < / > " when volume symbol change into blue (picture 1), press " < / > " to FF/FW, press " + / - " to switch EQ modes.
4. In the list menu, press MENU to pop the set menu, press " + / - " to select Recycle mode, File protection, File delete, EQ modes, Exit through move up/down, operation as below: Press " < / > " to enter pre-set submenu, move the optional up/down through " + / - ", press " < / > " back to the main menu, and press " < / > " to confirm and exit. (as picture display)
5. Press ESC back to the previous menu.

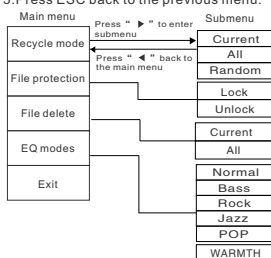

Music play interface (Picture 1)

Press " + / - " to move up/down,
press " < / > " to confirm.
(Picture 2)

6

OPERATION DETAILS

JXD209

- Notice: 1. Lyric display synchronous when play music: Download lrc format lyric file, put it in the same folder of the music; and keep their the same name then it can be display (e.g.: ABC.MP3 and ABC.LRC).
2. After download music and lyric file, put in "(Removable disk):/AUDIO" folder.

III. Picture browse

1. Power on Mp4, select "picture" function through " < / > ", press " < / > " to confirm;
2. After enter the operate interface, press " + / - " to select the file, and press " < / > " to display in full screen;
3. Press "MENU" to enter the set menu, move by " + / - " to select "display mode, file protect, file delete, desktop background, open picture, close picture, AV out, exit", operation as below:

 
Press " < / > " to enter pre-set submenu, move the optional up/down through " + / - ", press " < / > " back to the main menu, and press " < / > " to confirm and exit. (as picture display)

Press " + / - " to move up/down, press " < / > " to confirm, and press "ESC" to exit.

Notice: Picture are in "(Removable disk):/PICTURE" folder.

4. Select the photo through " + / - " in photo display in full screen, when set it as PPT, can browse the photo automatically.

Notice: When delete file, it will remind whether should delete the file, press " < / > " to select or press " < / > " to switch, and press " < / > " to confirm.

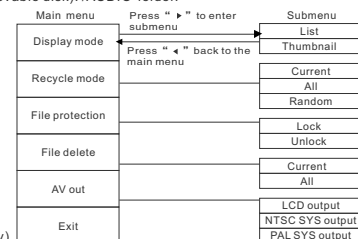


7

IV.Camera

- 1.Power on Mp4 player,press"◀/▶","+/-"to select"Camera ",press"⏏"to enter camera interface;
2.After enter Camera interface,press"+/-"to adjust the focus,press"📷"to take photo,and press ESC to exit;
3.Press MENU to enter set menu in camera mode,move to select camera mode,picture size,picture quality, special effect,date mark,exit by press"+/-".

Operation as below:

 Press"▶"to enter pre-set submenu,move the optional up/down through"+/-",press"◀"back to the main menu,and press"⏏"to confirm and exit.(as picture display)

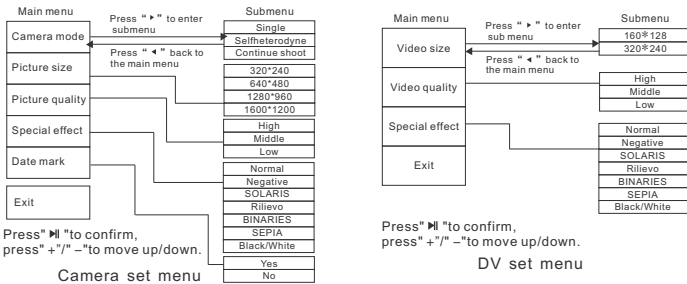


VI.Record

- 1.Power on Mp4, select"Record" through"◀/▶", press"⏏"to confirm;
2.Press"◀/▶"to switch record mode:MIC,Line in;
3.Press"⏏"to start record voice,and press"⏏"to stop;then press"⏏"again to continue record,and press ESC to exit;
4.Open the recorded audio file in the"AUDIO PLAY"function;

VII.Game

 - 1.Power on Mp4, press"◀/▶"to select"GAME" function, press"⏏"to confirm;
2.Press"+/—"to move the cursor,and select the game,press"⏏"to start game;
3.In game list interface,press"MENU"to pop game set menu,e.g.:File protection,File delete.Detail operation as below picture;
4.Press Power on button to exit during game play.




Press"⏏"to confirm,press"+/-"o move up/down.
Notice: Game in the(Removable disk): /GAME folder.

VIII.Learning


Dictionary

 - 1.Power on MP4,press"◀/▶"to select LEARNING function,press"⏏"to confirm;
2.Press"◀/▶"to move the cursor and select DICTIONARY,press"⏏"to confirm;
E-book
1.This Mp4 player support TXT format ebook;
2.Power on the MP4,select"Learning"through"◀/▶",press"⏏"to confirm;
3.Press"◀/▶"to select E-book,press"⏏"to enter E-book menu,press"+/-"to move the cursor,press"⏏"to read,then press"+/-"to move up/down,and press"◀/▶"to turn page;
4.Press MENU to set menu in E-book list menu,e.g.:File protection,File delete;

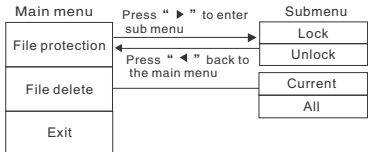

Press"⏏"to confirm,press"+/-"o move up/down.

 - 5.Press"MENU"to pop the menu during read E-book,and press"◀/▶"to select submenu,press"+/-"to move up/down,and press"⏏"to confirm;details operation as below picture:

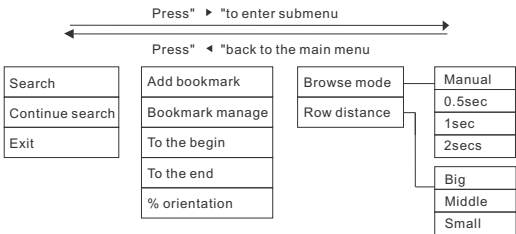

Notice: E-book in"(Removable disk): /EBOOK"folder.

IX.Tool

Press"◀/▶"to move to select,press"⏏"to confirm and press"ESC"to exit.

Calendar

On the left of the screen display current year,month,date ,week,on the right display the lunar date.
Press"📅"adjust date,month,year,press"⏏"confirm.

Calculator: Press"◀/▶"to move to select,and press"⏏"to confirm.

Notebook: Equal to E-book function,read E-book.

Memory management

Display memory state,set work area,format flash, press"⏏"to confirm.
Notice: before format, please make copy of your data.

Version information: Display the current version no.date.

X.System set

Press"◀/▶"to move to select,press"⏏"to confirm,and press"ESC"to exit.

Language selection:

With multiple language, move up/down through" + " "- ",press"⏏"to confirm,the player will power off itself,need to reboot the player to make the set effect.

Default set:

Set all parameter into the default state of factory set,but the inner data of the player will not change,the open logo will also return to the default set of factory set.

Voice set:

This operation can control speaker on/off,and the button voice on/off,move left/right through"◀/▶",press"+/—"to move up/down,and press"⏏"to confirm.

Auto power off:

In stand-by state and nothing operation,the player will power off automatically as the set time.

Interface style:

Two interface,press"⏏"to confirm selection.

Time set:

Press"◀/▶"to move left/right,press" + " "- "to change the value,and press"⏏"to confirm after selection.

Power save mode

In stand-by state without any operation,the player will turn off the screen itself as set time.

Record

- 1.Power on Mp4,after enter the stand-by state, connect with the AV cable,MP4 with AV in port;
2.Through"◀/▶"to select"record"function,press"⏏"to confirm;
3.Press"⏏"to start record,after record,press"⏏"to save and enter the prepare state of next record,press"ESC"to save and exit.

Trouble shooting:

1.Can't power on:

Maybe no power, Connect PMP with the charger adapter, and connect The adapter with the current power, then the PMP will be opened upon the PMP with power. If disorderly system leads to halted of the PC, then press the RESET button. If the program damaged, update the program.

2.Auto power off after power on:

Not enough power, auto power off. The auto power off setting time shortly, then the PMP will be power off with no operation during some minutes.

3.Have not response when press button:

"Lock"key lock position, Move"Lock" the"Lock"defective button, if the button not work.

4.The saving file can not be found:

Storage cards are inserted, the data are stored in the memory, the storage card has priority to read. So, can not find. Have not stored in, cut off and transmit when the file has not been finished yet.

Product specification

Built-in flash memory capacity:	2GB	Signal to noise ratio	90dB
Power Supply	Built-in Li-Ion battery	Earphone output rate	5mW+5mW
LCD	2.8inch TFT	Recording rate	60KHz- 16KHz
Dimension	100*55. 6*13. 7mm	Compress ratesupport	Mp3 8kbps up to 320kbps WMA 5kbps up to 192kbps
Camera pixels	1.3 mega	USB interface	USB2.0(full speed)

Accessories

User's guide: 1
Stereo earphone: 1
USB cable: 1
AV cable: 1
Line in cable: 1