

数码录音棒 IC Recorder

注意

说明书储存在数码录音棒内，详细信息请见快速入门指南。

Note

The complete instruction manual is stored in the built-in memory of the IC recorder.

制造商：索尼（中国）有限公司

地址：北京市朝阳区东三环北路霞光里18号
佳程大厦A座25层

产地：广东省东莞市

产品标准：Q/CYSNC007

出版日期：2010年9月

使用产品前请仔细阅读本使用说明书，
并请妥善保管。

快速入门指南

CS

Quick Start Guide

GB

IC RECORDER

本快速入门指南仅描述如何录制、播放或删除文件等的基本操作。**解释IC录音机的所有特征及功能的操作说明以2种语言PDF文件形式保存在IC录音机的内置内存中。**要将操作说明从IC录音机复制至电脑，请参见第8页上的“第6步：将操作说明复制到电脑”。

也可以从Sony支持主页重新获取操作说明：

<http://www.sony-asia.com/section/support>

另外，要安装附带的应用软件(Sound Organizer)，请参阅以PDF文件形式保存的操作说明。有关使用Sound Organizer软件的详情，请访问其帮助文件。

也可以连接适用本型号的Sony USB充电交流电源适配器（另购）对电池进行充电。

容量（可用容量）

ICD-UX512F：2 GB

（约1.80 GB = 1932735283字节）

ICD-UX513F：4 GB

（约3.60 GB = 3865470566字节）

部分存储空间被用作管理区。

警告

请勿将电池（已安装的电池组或电池）长时间暴露于例如阳光，火等极热的地方。

额定电流：800 mA

产品中有毒有害物质或元素的名称及含量



(○ : 不含有, × : 含有)

CS

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
内置线路板	×	○	○	○	○	○
外壳	×	○	○	○	○	○
显示板	○	○	○	○	○	○
扬声器	×	○	○	○	○	○
附件	○	○	○	○	○	○

○ : 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006标准规定的限量要求以下。

× : 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。

第1步：检查包装内的内容

IC录音机（1）

使用IC录音机之前，应去除显示窗口的薄膜。

立体声耳机（1）

USB连接补助电缆（1）

如果无法将IC录音机直接连接到电脑，请使用附带的USB连接补助电缆。

电话录音话筒（1）

（仅限ICD-UX513F）

应用软件，Sound Organizer （CD-ROM）（1）

便携袋（1）

NH-AAA（AAA尺寸）可充电电池 （1）

电池盒（1）

操作说明

 
操作说明为保存在IC录音机的内置内存中的PDF文件。

第2步：给电池充电

用电脑给电池充电


1 插入可充电电池。

滑动并提起电池仓盖，按正确极性插入NH-AAA可充电电池，然后关闭仓盖。

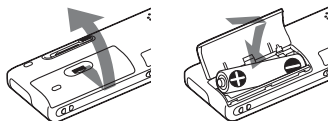

2 将IC录音机连接到电脑上。

 沿箭头方向滑动IC录音机背面上的USB滑杆，然后将USB DIRECT接口插入正在运行的电脑的USB端口。

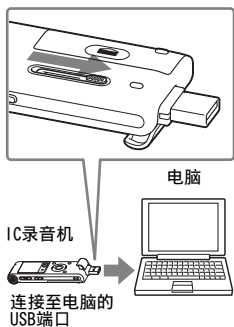

3 将IC录音机从电脑上断开。
按照以下步骤进行操作，否则，
如果IC录音机中存有数据文件，
则可能会损坏文件或无法播放这
些文件。

- ① 确认IC录音机的操作指示灯没
有亮起。
- ② 在电脑上进行如下操作。
在Windows画面上，左键单击电
脑桌面底部的图标。



 
→ 左键单击 “弹出IC
RECORDER”。

显示的图标和菜单因操作系统而
异。

在Macintosh画面上，将桌面上的
“IC RECORDER”拖放到“回
收站”。


有关从电脑上断开IC录音机的详
情，请参阅您的电脑附带的操作
说明。

- ③ 将IC录音机从电脑的USB端口上
断开，沿箭头方向滑动USB滑
杆，收回USB DIRECT接口。

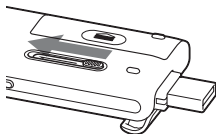

第3步：打开IC录音机电源

 打开电源

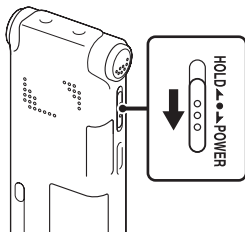


沿“POWER”方向滑动HOLD/POWER开关1秒钟以上。IC录音机电源打开，并显示“正在访问...”动画。

关闭电源

沿“POWER”方向滑动HOLD/POWER开关2秒钟以上，显示“关机”动画。

 第4步：设置时钟

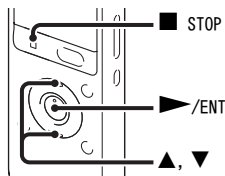

为了使用闹铃功能或记录日期和时间，必须设置时钟。
当首次插入电池，或在IC录音机超过1分钟未装入电池的情况下插入电池时，则会出现“请设置日期时间”动画，年份设置部分随之在时钟设置显示窗口中闪烁。

给电池充电之后设置时钟

- 1 按▲或▼控制按钮依次设置年、月、日、时和分，然后按►/ENT。

设置年份时，请选择最后两位数。

 


- 2 按■ STOP返回停止模式中的显示。

使用菜单设置时钟

请参阅“使用菜单设置时钟”
（“操作说明”的第17页）。

第5步：设置显示窗口所用的语言

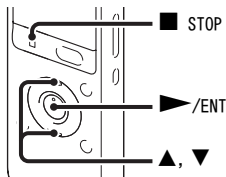

可以从2种语言中选择信息、菜单、文件夹名、文件名等所用的语言。

- 1 在菜单中选择 (IC录音机设置) 选项卡→“语言 (Language)”，然后按▶/ENT。



- 2 按▲或▼控制按钮选择所需的语言，然后按▶/ENT。



可以选择以下语言。
English (英文)、简体中文

- 3 按■ STOP退出菜单模式。

第6步：将操作说明复制到电脑

- 1 将IC录音机连接到电脑（第4页）。
- 2 在电脑上完成以下步骤。
在Windows画面上，打开“我的电脑”或“计算机”、— “IC RECORDER” — “Instructions”。
在Macintosh画面上，打开桌面上的“IC RECORDER”驱动器— “Instructions”。
- 3 将操作说明的文件从“Instructions”文件夹拖放到电脑的本地磁盘上。
操作说明的文件名如下：
产品名_语言名_版本.pdf（如 ICD-UX512F_UX513F_Chinese_11.pdf）
- 4 将IC录音机从电脑上断开（第5页）。

录音

 
要点

建议在开始录音前首先进行试录或监听录音。


选择文件夹

1 将HOLD/POWER开关滑至中央，取消IC录音机的HOLD状态。

2 按显示文件夹选择窗口。



3 按控制按钮，再按或控制按钮选择（语音）选项卡，然后按控制按钮。

 

4 按或控制按钮选择存放录制文件的文件夹。
购买IC录音机时，已有5个文件夹可供使用（ FOLDER01-05）。

 


5 按/ENT。




开始录音（自动（AGC）录音）

- 1 放置IC录音机时，应将内置话筒正对所要录制的声源方向。

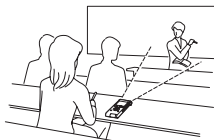

 - 2 在停止模式中按● REC/PAUSE。
操作指示灯呈红色亮起。
无需在录音时按住● REC/PAUSE不放。
上一个文件录完后会自动录制新文件。

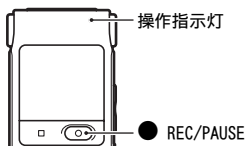

若要停止录音

- 1 按■ STOP。
出现“正在访问...”动画，IC录音机在当前录音文件的开始处停止工作。



聆听

 
开始播放

1 将HOLD/POWER开关滑至中央，取消IC录音机的HOLD状态。

2 按.




3 按控制按钮，再按▲或▼控制按钮选择
Ⓢ（语音）选项卡、🎵（音乐）选项卡或
Ⓢ（播客）选项卡，然后按控制按钮。



4 按▲或▼控制按钮选择文件夹。



 5 按控制按钮。




6 按▲或▼控制按钮选择所要播放的文件。



7 按 **▶/ENT**。

播放即将开始，操作指示灯呈绿色亮起。

 （在菜单中将“LED”设为“关”时，操作指示灯不会亮起。）

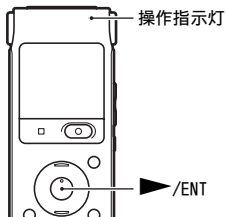

8 按VOL -/+调节音量。



若要停止播放

1 按 **■ STOP**。



删除

■注

 
录音一旦被删除，将无法恢复。

选择文件，将其删除


1 将HOLD/POWER开关滑至中央，取消IC录音机的HOLD状态。

2 当IC录音机处于停止或播放模式时，选择所要删除的文件。

3 按ERASE。
“确定删除？”出现在显示窗口，同时播放所指定的文件以便确认。



4 按▲或▼控制按钮选择“执行”。

 


5 按▶/ENT。
显示窗口出现“正在删除...”动画，所选文件将被删除。
当某个文件被删除后，其余的文件将会前移，使文件之间不留空间。



若要取消删除

 1 在“选择文件，将其删除”的第4步中选择“取消”，然后按▶/ENT。



This Quick Start Guide describes only basic operations, such as how to record, play back, or erase files. **The operating instructions explaining all the features and functions of the IC recorder are stored as PDF files in 2 languages in the built-in memory of the IC recorder.** To copy the operating instructions from the IC recorder to your computer, see “Step 6: Copying the Operating Instructions to Your Computer” on page 6.

You can also get another copy of the operating instructions from the Sony support home page:

<http://www.sony-asia.com/section/support>

Moreover, to install the supplied application software (Sound Organizer), refer to the operating instructions stored as PDF files.

For details on using the Sound Organizer software, visit its help files.

WARNING

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

RATED CURRENT CONSUMPTION: 800 mA

Capacity (User available capacity)

ICD-UX512F: 2 GB

(approx. 1.80 GB = 1,932,735,283 Byte)

ICD-UX513F: 4 GB

(approx. 3.60 GB = 3,865,470,566 Byte)

A part of the memory capacity is used as a management area.

Step 1: Checking the Contents of the Package

IC Recorder (1)

Remove the film on the display window before you use the IC recorder.

Stereo headphones (1)

USB connection support cable (1)

If the IC recorder cannot be connected to a computer directly, use the supplied USB connection support cable.

Telephone recording microphone (1)

(for ICD-UX513F only)

Application software, Sound Organizer (CD-ROM) (1)

Carrying pouch (1)

NH-AAA (size AAA) rechargeable battery (1)

Battery case (1)

Operating Instructions

The operating instructions are stored as PDF files in the built-in memory of the IC recorder.

 
Step 2: Recharging the Battery

Recharging the battery using a computer

1 Insert a rechargeable battery.

Slide and lift the battery compartment lid, insert one NH-AAA rechargeable battery with correct


polarity, and close the lid.

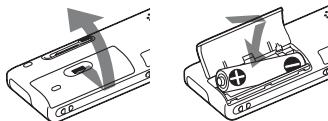

2 Connect the IC recorder to your computer.

Slide the USB slide lever on the back of the IC recorder in the direction of the arrow, and insert the USB DIRECT connector into the USB port of a running computer.

 GB

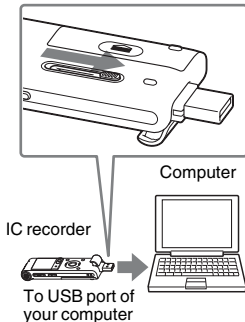

3 Disconnect the IC recorder from your computer.

Follow the procedures below; otherwise, when the IC recorder contains data files, the files may be damaged or become unplayable.

- ① Make sure that the operation indicator of the IC recorder does not light.

- ② Perform the following operation on your computer.

On a Windows screen, left-click the icon at the bottom of the desktop of the computer.




→ Left-click “弹出IC RECORDER.”

The icon and menu displayed can be different on different operating systems.

On a Macintosh screen, drag “IC RECORDER” on the desktop to “回收站” and drop it there.


For details on disconnecting the IC recorder from your computer, refer to the operating instructions supplied with your computer.

 - ③ Disconnect the IC recorder from the USB port of the computer, and slide the USB slide lever in the direction of the arrow to retract the USB DIRECT connector.

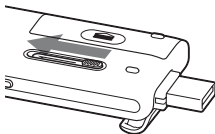

Step 3: Turning the IC Recorder On

 Turning the power on

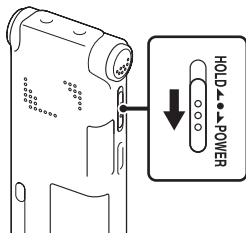


Slide the HOLD/POWER switch in the direction of “POWER” for more than 1 second. The IC recorder is turned on, and the “正在访问...” animation is displayed.

Turning the power off

Slide the HOLD/POWER switch in the direction of “POWER” for more than 2 seconds, and the “关机” animation is displayed.

 Step 4: Setting the Clock

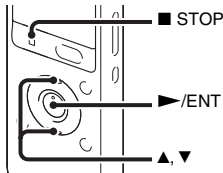

You need to set the clock to use the alarm function or record the date and time.

When you insert a battery for the first time, or when you insert a battery after the IC recorder has been without a battery for more than 1 minute, the “请设置日期时间” animation appears, and then the year section begins to flash in the clock setting display window.

Setting the clock after recharging the battery

- 1 Press ▲ or ▼ on the control button to set the year, month, day, hour, and minute in sequence, and then press ►/ENT.

Select the last two digits of the year when you set the year.

 


- 2 Press ■ STOP to return to the stop mode display.

Setting the clock using the menu

Refer to “Setting the clock using the menu” (page 14 in “Operating Instructions”).

Step 5: Setting the Language to Be Used in the Display Window

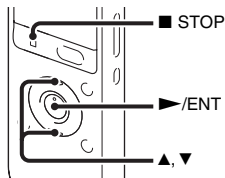

You can select the language to be used for messages, menus, folder names, file names, etc. from 2 languages.

- 1 Select the 𠄎 (IC recorder setting) tab → “语言(Language)” in the menu, and then press ►/ENT.



- 2** Press ▲ or ▼ on the control button to select the language that you want to use, and then press ►/ENT.



You can select the following languages.
English, 简体中文 (Chinese)

- 3** Press ■ STOP to exit the menu mode.

Step 6: Copying the Operating Instructions to Your Computer

- 1** Connect the IC recorder to your computer (page 3).
- 2** Complete the following procedure on your computer.
- On a Windows screen; open “我的电脑” or “计算机,” - “IC RECORDER” - “Instructions.”
- On a Macintosh screen; open the “IC RECORDER” drive on the desktop - “Instructions.”

- 3** Drag and drop the files of the operating instructions from “Instructions” folder to the local disk on your computer.
- The file names of the operating instructions are as follows:
- Product name_language name_version.pdf (e.g. ICD-UX512F_UX513F_Chinese_1 1.pdf)
- 4** Disconnect the IC recorder from your computer (page 3).

Recording



Tip

Before you start recording, we recommend you make a trial recording first, or monitor the recording.

 
Selecting a folder

- 1 Slide the HOLD/POWER switch towards the center to release the IC recorder from the HOLD status.

- 2 Press  to display the folder selection window.




- 3 Press  on the control button, press  or  on the control button to select the  (Voice) tab, and then press  on the control button.



- 4 Press  or  on the control button to select the folder in which you want to record files.

 When you purchase the IC recorder, there are 5 folders already available ( FOLDER01-05).



- 5 Press /ENT.

 


Starting to record (Auto (AGC) recording)

- 1 Place the IC recorder so that the built-in microphones face the direction of the source to be recorded.



- 2 Press **● REC/PAUSE** in the stop mode.
The operation indicator lights in red.
You do not need to press and hold **● REC/PAUSE** while recording.
The new file will be automatically recorded after the last recorded file.

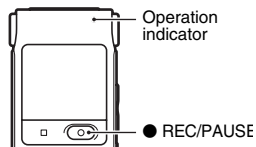

To stop recording

- 1 Press **■ STOP**.
The “正在访问...” animation appears and the IC recorder stops at the beginning of the current recording file.

 


Listening


Starting playback

- 1 Slide the HOLD/POWER switch towards the center to release the IC recorder from the HOLD status.


- 2 Press .



 
- 3** Press **◀◀** on the control button, press **▲** or **▼** on the control button to select the **🎤** (Voice) tab, the **🎵** (Music) tab, or the **🎧** (Podcast) tab, and then press **▶▶** on the control button.



 - 4** Press **▲** or **▼** on the control button to select the folder.



 - 5** Press **▶▶** on the control button.




- 6** Press **▲** or **▼** on the control button to select the file you want to play.



- 7** Press **▶/ENT**.

 Playback will start soon, and the operation indicator will light in green. (When “LED” is set to “关” in the menu, the operation indicator does not light.)

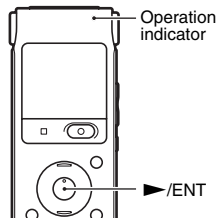

-
- 8** Press VOL -/+ to adjust the volume.



To stop playback

- 1** Press ■ STOP.



Erasing

■ Note

 
Once a recording has been erased, you cannot retrieve it.

Selecting a file and erasing it


-
- 1** Slide the HOLD/POWER switch towards the center to release the IC recorder from the HOLD status.

-
- 2** Select the file you want to erase when the IC recorder is in the stop or playback mode.

-
- 3** Press ERASE.
“确定删除?” is displayed and the specified file is played back for confirmation.

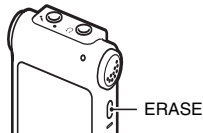

 -
- 4** Press ▲ or ▼ on the control button to select “执行.”



-
- 5** Press ►/ENT.

The “正在删除...” animation appears in the display window and the selected file will be erased.

When a file is erased, the remaining files will advance so that there will be no space between files.



To cancel erasing

- 1** Select “取消” in step 4 of “Selecting a file and erasing it,” and then press ►/ENT.



<http://www.sony.net/>

© 2010 Sony Corporation

Printed in China



* 4 1 9 6 5 4 8 4 2 * (1)