

红外线电烤炉使用说明书
Infrared Electric BBQ
Instruction Manual

目录
Contents

产品简介	Product instruction	1-2
安装说明	Installation instruction	3-6
使用说明	Usage instruction	7-8
注意事项	Notes	9
清洁保养	Maintenance	10

非常感谢购买红外线电烤炉产品。
使用前请仔细阅读本说明书。
说明书请妥为保管。
Thank you for the infrared BBQ purchase.
Please read the instruction carefully before using.
Please make the manual safekeep.

产品简介 Brief introduction


产品特点: Features

Glory系列远红外线电烧烤炉是利用远红外线做为加热热源,使肉或者蔬菜从内到外同时快速均匀受热,水分蒸发少,肉质非常香嫩可口;烧烤时候无燃烧现场,不会产生大的烟雾,最大限度的保证烧烤环境的清洁、舒适。炉子的温控调节简单,可靠性高,操控性非常方便快捷,是烧烤料理餐厅最理想的工具。


Glory series far infrared electric barbeque is used far infrared ray as the heating source, less water steamer comes from the meat or vegetables, the meat is very tender and tasty; no combustion field when cook, less smoke, maximum to make the environment clean, comfortable, the temperature control is simple, high reliability, easy to operate, is the ideal device for barbecue restaurant

产品简介 Brief introduction

零部件名称: Components

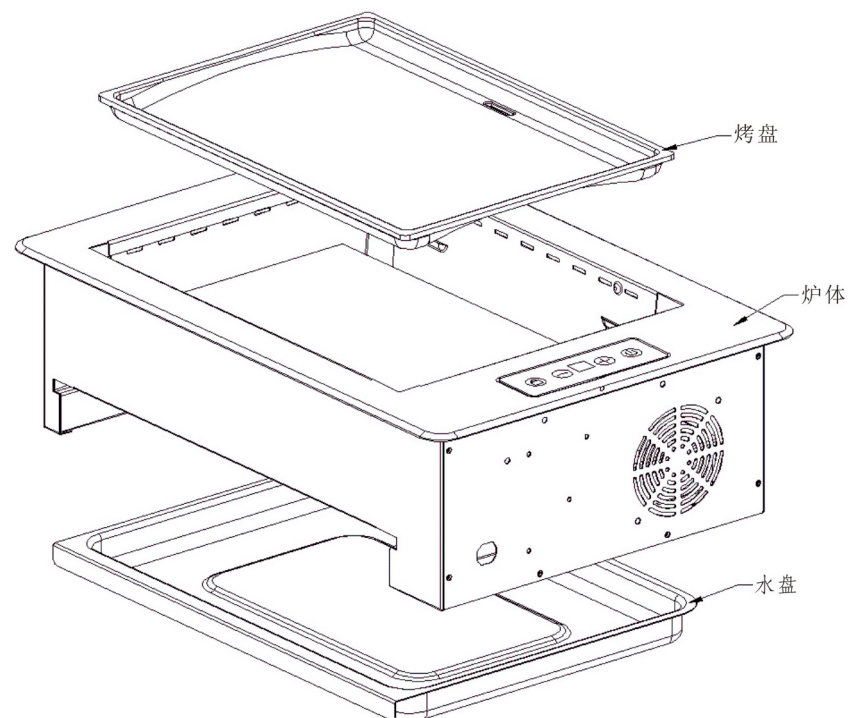

安装说明
Installation instructions

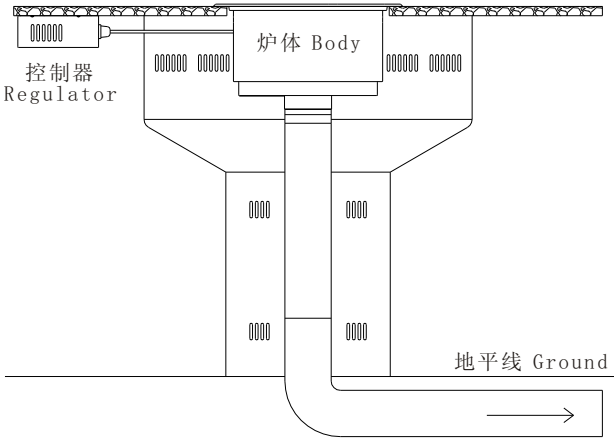

安装示意图/Installation Diagram

取出包装内的下排烟管并与底板
孔位对接
Remove the exhaust pipe
inside the packing bag to
dock the bottom hole of the
unit

将下排烟管使用附带的4粒螺丝
与底板锁紧
To lock the bottom plate
with 4 screws used for
exhaust pipe

排烟管安装示意图
Installation Diagram For Exhaust Pipe

安装说明
Installation instructions

1,取出包装中的烧烤炉和排烟管并安装，安装好后将烧烤炉放入以开好的孔内将烧烤炉面板贴平桌面，炉体放入桌面孔位时要注意面板夹手！
Remove the stove and exhaust pipe to install, after installed, to put the stove into the corresponding position which have been opened just now, to flatten to the desktop with stove panel, be careful to put oven into the hole to avoid hand clamp
2,取出包装中的电控盒安装于桌面下方，将烧烤炉数据线和电源线插入电控盒对应的插口中，并锁紧数据线上的锁紧螺母。
Remove the control box, installed it below the desktop, and inserted into the corresponding socket of electric control box with cords and locked the lock-nuts on the cord

1,按照开完后的孔位将烤炉放入到对应的位置，炉子面板贴平桌面，炉体放入桌面孔位时要注意面板夹手！
Put the oven into the corresponding position which have been opened just now, to flatten the desktop with the stove panel, be careful to put oven into the hole to avoid hand clamp
2,取出包装中的电控盒安装于桌面下方，将烧烤炉数据线和电源线插入电控盒对应的插口中，并锁紧数据线上的锁紧螺母。
Remove the control box, installed it below desktop, and inserted into the corresponding socket of electric control box with cords and locked the lock-nuts on the cord

使用说明

Usage instruction

1、使用前先检查插头跟插座之间是否接触良好。

To check the good connect with plug and socket before use

2、开机之前请先将盖子拿开，在水盘中注入1/2的水。

Please move the cover before use, pouring 1/2 water into water tray

3、打开电源开关，指示灯亮，炉子开始工作。（初次使用出厂状态新炉子时，需要拿掉烤盘，选择烧烤最大档位将炉子空烧15分钟左右，将出厂前炉子涂的防腐、防锈油等物质给挥发掉。）

Switch on the power, the indicate light on, the oven works.

(select the biggest barbecue stalls at first time use, air burning about 15 minutes, to volatilize the coating anticorrosion, and antirust oil)

4、使用完毕后请及时关闭电源，以免发生危险。

Please turn off the power timely after use, to avoid the dangerous

1.打开电源开关，指示灯亮，轻启⊕按键，炉子开始工作；轻触⊕按键将功率调节到最大档位，让炉子预热5分钟后再放置食物烤制，可根据需要轻触⊕⊖按键调节到合适的档位。

Switch on the stove, the indicator light, soft press⊕button, the stove works; to adjust⊕button to maximum position, preheat 5 minutes firstly, place the food to cook, to adjust the appropriate position by touching⊕⊖accordingly

2.炉子工作期间，如有小孩在旁，防止小孩触摸按键，可以选择童锁按键，轻触⊗按键，童锁指示灯亮，表示童锁功能启动；在童锁工作期间，开关按键⊗可以关闭，但是再启动开关按键需要关闭童锁功能；解开童锁长按⊗按键3秒钟，自动解锁。

During the works, if child nearby, please choose the child lock button to prevent the child touch, soft press⊗button, the child lock light on, means child lock function starts, during child lock works, on/off ⊗button be locked, but restart on/off button, it need close the child lock function; press⊗button 3 seconds to unlock the child lock function, unlock automatically

3.使用完毕后轻触开关按键⊗烤炉关闭，此时烤炉为待机状态，如果长时间不使用请及时关闭电源，以免发生危险。

Soft touch⊗on/ off button after finish, the stove stops, it turned into standby condition at the moment, shut off the power in time if long time no use to avoid any dangers

注意事项

Attention

1. 请务必在炉子工作之前将水盘注入2/3的水。
Please make sure 2/3 of water be powered into the water tray before use
2. 在烧烤过程中，请不要使用尖锐的器具，以免划伤烤盘的漆。
Do not use the sharp object, so as not to scratch the painting during the barbecue works
3. 本烤炉是用来烤制食物，请不要用于其他用途，如烘烤衣物等，以免产生蒸汽从而导致产生漏电的危险。
The oven is used for cook, do not use for other purposes, such as to dry clothing, etc, so as not to generate steam which lead to dangerous leakage
4. 使用时，炉具应要放平，四周距离墙面要有15cm以上的距离。
The oven should be flat placed in use, more than 15cm to the allround walls
5. 请勿将炉具摆放在瓦斯、煤气等易燃物品的环境中使用。
Don't be used in inflammable gas stove, gas environment
6. 使用中请勿触摸烤盘、炉具面板和炉体，以免高温烫伤。
Don't touch barbeque tray, barbeque panel or body when it works, to avoid high temperature burns
7. 对该炉具除了专业人员以为绝对不允许任意拆卸，以免有漏掉的危险。
Only professional staff assembly, so as not to dangerous leakage
8. 请勿用水直接冲洗炉具，以免发生漏电危险。
Don't flush water directly oven body, so as to avoid the leakage risk
9. 请勿让儿童、残疾人、智障者单独操作，需要在有经验人士的监督下使用，以免发生危险。
Children, the disabled, mentally retarded person not be allowed alone to use, with the assistant supervision of experience person, to avoid the dangerous

清洁保养

Clean and maintenance

1. 清洁及维护炉具时请务必切断电源，待炉具冷却后进行，以免触电及伤。
Please cut off the power supply when clean and make the maintenance for oven, until the oven is cooling, so as to avoid the electric shock and burn
2. 清洁烤盘时请使用塑料毛刷或软布，以免刮花烤盘表面涂层。
please use plastic brush or soft cloth to clean, so as not to scratch the surface coating
3. 请用湿的软布清洁炉体，清洗时注意不要让水或者清洁剂流入入炉体内，以免在工作时发生短路。
Please use the wet and soft cloth to clean the oven body, pay attention not to let the water or cleaning agent enter inside, so as to avoid short circuit at work
4. 长时间不使用请将电源插头拔离开关，并做好炉子的防尘保护。
Please plug out the power cord if no use for long time, and do good dust protection for stove

故障处理

Attention

现象 appearance	原因分析 Reason analysis	处理方式 Process mode
设备不启动 Doesn't work	1、 没有连接好电源 Worse power connection	1、 检查电源 To check power supply
	1、 发热体损坏 Heating element damage	1、 更换发热体 To exchange heating element
工作中途停止 Stops at midway	1、 发热体烧坏 Heating element burnt out	1、 更换发热体 To exchange heating element
	2、 电路板元器件损坏 PCB component damage	2、 更换电路板 To exchange PCB
	3、 控制开关损坏 Control switch damage	3、 更换控制开关 To exchange control switch

故障代码

Attention

故障代码		解决方法
E1	热电偶没有插好	插好主板上脱落的热电偶插头
E2	主板上热电偶插口损坏	更换主板
E3	热电偶损坏	更换热电偶
E4	主板温度过高	1, 查看控制器底部风扇的进风口和出风口是否被堵塞。 2, 查看炉体控制器放置的地方是否被封闭, 如被封闭建议加开散热孔
E5	主板上传感器损坏	更换主板
E6	主板上传感器损坏或风扇吸风口堵塞	查看炉体控制器风扇吸风口是否堵塞, 无堵塞更换主板
E7	风扇2不工作	查看主板上的风扇插头是否脱落, 无脱落更换电控盒风扇
E8	风扇1不工作	查看主板上的风扇插头是否脱落, 无脱落更换烤炉底部风扇

保修卡

Clean and maintenance

产品型号			经销商	销售商	
购买日期	年 月 日				
用户	姓名			地址	
	地址			电话	

维修记录

Clean and maintenance

[illegible]