BALDOR MN403 Air Motors Operating manual

http://www.manuallib.com/baldor/mn403-air-motors-operating-manual.html

This manual contains general procedures that apply to BaldorReliance Motor products. Be sure to read and understand the Safety Notice statements in this manual. For your protection, do not install, operate or attempt to perform maintenance procedures until you understand the Warning and Caution

statements.

ManualLib.com collects and classifies the global product instrunction manuals to help users access anytime and anywhere, helping users make better use of products.

http://www.manuallib.com

BALDOR · RELIANCE

AC Immersible Type Continuous In Air Motors Frame 210–449 600VAC and less

Installation & Operating Manual

7/10

MN403

Any trademarks used in this manual are the property of their respective owners.

Be sure to check <u>www.baldor.com</u> for the latest version of this manual in Adobe Acrobat PDF format.

Table of Contents

Section 1	
General Information	1–1
Overview	1–1
Limited Warranty	1–1
Safety Notice	1–1
Receiving	1–2
Handling	1–2
Storage	1–3
Removal From Storage	1–4
Section 2	
Installation & Operation	2–1
Overview	2–1
Installation	2–1
Grounding	2–3
Operation	2–4
Section 3	
Maintenance & Troubleshooting	3–1
General Inspection	3–1
Flood Environment Maintenance	3–1
Important	3–1
Disassembly	3–1
Bearing Lubrication Procedure	3–1
Seal Carrier Lubrication Procedure	3–2
Troubleshooting Chart	3–3
Appendix A	
Blower Motor	A-1
Overview	A-1
Receiving	A-1
Mounting	A-1
Wiring	A-1
Relubrication & Bearings	A-1
Operation	A-2

ii Table of Contents

Section 1 General Information

<u>Overview</u>	This manual contains general procedures that apply to Baldor•Reliance Motor products. Be sure to read and understand the Safety Notice statements in this manual. For your protection, do not install, operate or attempt to perform maintenance procedures until you understand the Warning and Caution
	A Warning statement indicates a possible unsafe condition that can cause harm to personnel. A Caution statement indicates a condition that can cause damage to equipment.

Important: This instruction manual is not intended to include a comprehensive listing of all details for all procedures required for installation, operation and maintenance. This manual describes general guidelines that apply to most of the motor products. If you have a question about a procedure or are uncertain about any detail, Do Not Proceed. Please contact your Baldor District Office for more information or clarification.

Before you install, operate or perform maintenance, become familiar with the following:

- NEMA Publication MG-2, Safety Standard for Construction and guide
- for Selection, Installation and Use of Electric Motors and Generators.
- The National Electrical Code
- Local codes and Practices

Limited Warranty

www.baldor.com/support/warranty standard.asp

Safety Notice	2: This equipment contains high voltage! Electrical shock can cause serious or fatal injury. Only qualified personnel should attempt installation, operation and maintenance of electrical equipment.
	Be sure that you are completely familiar with NEMA publication MG-2, safety standards for construction and guide for selection, installation and use of electric motors and generators, the National Electrical Code and local codes and practices. Unsafe installation or use can cause conditions that lead to serious or fatal injury. Only qualified personnel should attempt the installation, operation and maintenance of this equipment.
WARNING:	The Adjustable Speed Controller may apply hazardous voltages to the motor leads after power to the controller has been turned off. Verify that the controller is incapable of delivering hazardous voltages and that the voltage at the motor leads is zero before proceeding. Failure to observe this precaution may result in severe bodily injury or death.
WARNING:	Do not touch electrical connections before you first ensure that power has been disconnected. Electrical shock can cause serious or fatal injury. Only qualified personnel should attempt the installation, operation and maintenance of this equipment.
WARNING:	Be sure the system is properly grounded before applying power. Do not apply AC power before you ensure that all grounding instructions have been followed. Electrical shock can cause serious or fatal injury. National Electrical Code and Local codes must be carefully followed.
WARNING:	Avoid extended exposure to machinery with high noise levels. Be sure to wear ear protective devices to reduce harmful effects to your hearing.
WARNING:	Surface temperatures of motor enclosures may reach temperatures which can cause discomfort or injury to personnel accidentally coming into contact with hot surfaces. Protection should be provided by the user to protect against accidental contact with hot surfaces. Failure to observe this precaution could result in bodily injury.
WARNING:	This equipment may be connected to other machinery that has rotating parts or parts that are driven by this equipment. Improper use can cause serious or fatal injury. Only qualified personnel should attempt to install operate or maintain this equipment.
WARNING:	Do not by-pass or disable protective devices or safety guards. Safety features are designed to prevent damage to personnel or equipment. These devices can only provide protection if they remain operative.
WARNING:	Avoid the use of automatic reset devices if the automatic restarting of equipment can be hazardous to personnel or equipment.
WARNING:	Be sure the load is properly coupled to the motor shaft before applying power. The shaft key must be fully captive by the load device. Improper coupling can cause harm to personnel or equipment if the load decouples from the shaft during operation.
WARNING:	Use proper care and procedures that are safe during handling, lifting, installing, operating and maintaining operations. Improper methods may cause muscle strain or other harm.

MN403

General Information 1-1

Safety Notice	Continued
WARNING:	Pacemaker danger – Magnetic and electromagnetic fields in the vicinity of current carrying carrying conductors and permanent magnet motors can result result in a serious health hazard to persons with cardiac pacemakers, metal implants, and hearing aids. To avoid risk, stay way from the area surrounding a permanent magnet motor.
WARNING:	Incorrect motor rotation direction can cause serious or fatal injury or equipment damage. Be sure to verify motor rotation direction before coupling the load to the motor shaft.
WARNING:	Do not use non UL/CSA listed explosion proof motors in the presence of flammable or combustible vapors or dust. These motors are not designed for atmospheric conditions that require explosion proof operation.
Caution:	Do not lift the motor and its driven load by the motor lifting hardware. The motor lifting hardware is adequate for lifting only the motor. Disconnect the load (gears, pumps, compressors, or other driven equipment) from the motor shaft before lifting the motor.
WARNING:	Guards must be installed for rotating parts such as couplings, pulleys, external fans, and unused shaft extensions, should be permanently guarded to prevent accidental contact by personnel. Accidental contact with body parts or clothing can cause serious or fatal injury.
WARNING:	Thermostat contacts automatically reset when the motor has slightly cooled down. To prevent injury or damage, the control circuit should be designed so that automatic starting of the motor is not possible when the thermostat resets.
Caution:	To prevent equipment damage, be sure that the electrical service is not capable of delivering more than the maximum motor rated amps listed on the rating plate.
Caution:	If a HI POT test (High Potential Insulation test) must be performed, follow the precautions and procedure in NEMA MG1 and MG2 standards to avoid equipment damage.
Caution:	Never raise or lower the motor/pump by the power cords. Use motor lift provisions. Failure to lift this motor properly may seriously damage the lead connections and water seals and seriously damage the motor.
Caution:	Never mix or use incompatible lubricants. Watch for signs of lubricant incompatibility. Failure to use compatible lubricants could result in damage to motor.
Caution:	Lift the motor using Lift Provisions only. Disconnect the load from the motor before lifting. Use a spreader bar to evenly distribute lift force of motor. Angle of lift rope (no spreader bar) should not exceed 45° from vertical, excessive lift angle can damage motor.
	If you have any questions or are uncertain about any statement or procedure, or if you require additional information please contact your Baldor District Office or an Authorized Baldor Service Center.
<u>Receiving</u>	Each Baldor•Reliance Motor is thoroughly tested at the factory and carefully packaged for shipment. When you receive your motor, there are several things you should do immediately.
	 Observe the condition of the shipping container and report any damage immediately to the commercial carrier that delivered your motor. The carrier is responsible for all damage.
	2 Verify that the part number of the motor you received is the same as the part number listed on your

2. Verify that the part number of the motor you received is the same as the part number listed on your purchase order and please contact your Baldor District Office if there is a problem.

1-2 General Information

<u>Storage</u> Storage requirements for motors and generators that will not be placed in service for at least six months from date of shipment.

Improper motor storage will result in seriously reduced reliability and failure. An electric motor that does not experience regular usage while being exposed to normally humid atmospheric conditions is likely to develop rust in the bearings or rust particles from surrounding surfaces may contaminate the bearings. The electrical insulation may absorb an excessive amount of moisture leading to the motor winding failure.

A wooden crate "shell" should be constructed to secure the motor during storage. This is similar to an export box but the sides & top must be secured to the wooden base with lag bolts (not nailed as export boxes are) to allow opening and reclosing many times without damage to the "shell".

Minimum resistance of motor winding insulation is 5 Meg ohms or the calculated minimum, which ever is greater. Minimum resistance is calculated as follows: $\mathbf{Rm} = \mathbf{kV} + \mathbf{1}$

- where: (Rm is minimum resistance to ground in Meg-Ohms and
 - kV is rated nameplate voltage defined as Kilo-Volts.)

Example: For a 480VAC rated motor Rm = 1.48 meg-ohms (use 5 M Ω).

For a 4160VAC rated motor Rm = 5.16 meg-ohms.

Preparation for Storage

- 1. Some motors have a shipping brace attached to the shaft to prevent damage during transportation. The shipping brace, if provided, must be removed and stored for future use. The brace must be reinstalled to hold the shaft firmly in place against the bearing before the motor is moved.
- 2. Store in a clean, dry, protected warehouse where control is maintained as follows:
 - a. Shock or vibration must not exceed 2 mils maximum at 60 hertz, to prevent the bearings from brinelling. If shock or vibration exceeds this limit vibration isolation pads must be used.
 - b. Storage temperatures of 10°C (50°F) to 49°C (120°F) must be maintained.
 - c. Relative humidity must not exceed 60%.
 - d. Motor space heaters (when present) are to be connected and energized whenever there is a possibility that the storage ambient conditions will reach the dew point.
 - Note: Remove motor from containers when heaters are energized, reprotect if necessary.
- 3. Measure and record the resistance of the winding insulation (dielectric withstand) every 30 days of storage.
 - a. If motor insulation resistance decreases below the minimum resistance, contact your Baldor District office.
 - b. Place new desiccant inside the vapor bag and re-seal by taping it closed.
 - c. If a zipper-closing type bag is used instead of the heat-sealed type bag, zip the bag closed instead of taping it. Be sure to place new desiccant inside bag after each monthly inspection.
 - d. Place the shell over the motor and secure with lag bolts.
- 4. Where motors are mounted to machinery, the mounting must be such that the drains and breathers are fully operable and are at the lowest point of the motor. Vertical motors must be stored in the vertical position. Storage environment must be maintained as stated in step 2.
- 5. Motors with anti-friction bearings are to be greased at the time of going into extended storage and the motor shafts are to be rotated manually every 3 months and greased every 6 months in accordance with Section 3 of this manual.
- 6. Coat all external machined surfaces with a rust preventing material. An acceptable product for this purpose is Exxon Rust Ban # 392 or equivalent.

Immersible Motor, Horizontal or Vertical

Before storage, the following procedure must be performed.

- 1. Remove the grease drain plug, if supplied, (opposite the grease fitting) on the bottom of each bracket prior to lubricating the motor.
- 2. The motor with regreaseable bearing must be greased as instructed in Section 3 of this manual.
- 3. Replace the grease drain plug after greasing.
- 4. The motor shaft must be rotated a minimum of 15 times after greasing.
- 5. Motor Shafts are to be rotated at least 15 revolutions manually every 3 months and additional grease added every nine months (see Section 3) to each bearing.
- 6. Bearings are to be greased at the time of removal from storage.

Removal From Storage

- 1. Remove all packing material.
- 2. Measure and record the electrical resistance of the winding insulation resistance meter at the time of removal from storage. The insulation resistance must not be less than 50% from the initial reading recorded when the motor was placed into storage. A decrease in resistance indicates moisture in the windings and necessitates electrical or mechanical drying before the motor can be placed into service. If resistance is low, contact your Baldor District office.
- 3. Regrease the bearings as instructed in Section 3 of this manual.
- 4. Reinstall the original shipping brace if motor is to be moved. This will hold the shaft firmly against the bearing and prevent damage during movement.

Section 2 Installation & Operation



Level 2 Maximum depth is 30 ft. Level 1 Below Level 1



- WARNING: Do not touch electrical connections before you first ensure that power has been disconnected. Electrical shock can cause serious or fatal injury. Only qualified personnel should attempt the installation, operation and maintenance of this equipment.
- WARNING: The Adjustable Speed Controller may apply hazardous voltages to the motor leads after power to the controller has been turned off. Verify that the controller is incapable of delivering hazardous voltages and that the voltage at the motor leads is zero before proceeding. Failure to observe this precaution may result in severe bodily injury or death.
- **Installation** When the immersible motor leaves the factory it is ready for installation. No adjustment, venting or oil filling is required. When mounting the motor it is essential that motor and driven unit be rigidly supported in correct alignment. All motors and generators covered by this publication should be installed and protected in accordance with the National Electric Code.

The user must select a motor starter and over current protection suitable for this motor and its application. Consult motor starter application data as well as National Electric Code and/or other applicable local codes.

MN403

Installation & Operation 2-1

Installation Procedure

To prevent damage to the motor, do not use force to drive pump on (drive impeller onto motor shaft) or to remove pump from motor shaft.

- 1. Turn off and lockout all power and verify the voltage at the motor starter connectors are zero.
- Connect the motor power leads "T1", "T2", "T3" and "G" (ground C/Box) to the connectors in the motor starter, see Figure 2-2.



Figure 2-2 AC Motor Connection Diagram

2-2 Installation & Operation

3. Three Phase Motors ONLY.

- a. Turn off and lockout all power and verify the voltage at the motor starter connectors are zero.
- b. Be sure the motor shaft is disconnected from the load and will not cause mechanical rotation of the motor shaft.
- c. Remove all unused shaft keys and loose rotating parts to prevent them from flying off.
- d. Momentarily apply power and check the direction of rotation of the motor shaft. Motors are designed for bi-directional shaft rotation. When voltages in an A-B-C phase sequence are applied to leads U/T1, V/T2, W/T3 clockwise shaft rotation facing the opposite drive end will result. If shaft rotation is incorrect, change the direction of rotation as follows:
 - i. Turn off and lockout all power and verify that the voltage at the motor leads is zero.
 - ii. Reverse any two of three motor power leads at the motor starter.
 - iii. Restore power and verify correct rotation.
- iv. Turn off and lockout all power and verify that the voltage at the motor leads is zero.
- 4. Connect the two Thermal Leads "P1" & "P2" at the motor starter as shown in Figure 2-2.
- 5. Connect the two Heater Leads "H1" & "H2" at the motor starter as shown in Figure 2-2.
- 6. Connect the "G" (ground C/Box) lead at the motor starter as shown in Figure 2-2 (for Cable Cap Exit Conduit Box only).
- 7. If optional "Moisture Sensor" is present, do the following:
 - a. Connect the Moisture Sensor "1TD1", "2TD2", "3TD3" and "4TD4" leads at the motor starter as shown in Figure 2-2.
 - b. Connect the Moisture Sensor "G" (ground C/Box) lead at the motor starter as shown in Figure 2-2 (for Cable Cap Exit Conduit Box only).
- Caution: Never raise or lower the motor/pump by the power cords. Use motor lift provisions. Failure to lift this motor properly may seriously damage the lead connections and water seals and seriously damage the motor.

Caution: Lift the motor using Lift Provisions only. Disconnect the load from the motor before lifting. Use a spreader bar to evenly distribute lift force of motor. Angle of lift rope (no spreader bar) should not exceed 45° from vertical, excessive lift angle can damage motor.

- 8. Use spreader bar and lifting eyes (see Figure 2-1) to lower the motor to the mounting foundation. Be sure that motor wires are not damaged (contact with metal objects etc.)
- 9. Follow pump manufacturer's instructions and mount the pump onto the motor shaft.
- 10. Secure the pump case to the motor flange maintaining proper alignment.
- 11. Attach drain piping to pump.
- 12. Mount the motor on a foundation sufficiently rigid to prevent vibration.
- After careful alignment, bolt motor securely in place.
- 13. Set control parameter values (if applicable) according to motor nameplate values.
- **Grounding** In the USA consult the National Electrical Code, Article 430 for information on grounding of motors and generators, and Article 250 for general information on grounding. In making the ground connection, the installer should make certain that there is a solid and permanent metallic connection between the ground point, the motor or generator terminal housing, and the motor or generator frame. In non–USA locations consult the appropriate national or local code applicable.

- WARNING: Surface temperatures of motor enclosures may reach temperatures which can cause discomfort or injury to personnel accidentally coming into contact with hot surfaces. Protection should be provided by the user to protect against accidental contact with hot surfaces. Failure to observe this precaution could result in bodily injury.
- WARNING: Do not touch electrical connections before you first ensure that power has been disconnected. Electrical shock can cause serious or fatal injury. Only qualified personnel should attempt the installation, operation and maintenance of this equipment.
- WARNING: Disconnect all electrical power from the motor windings and accessory devices before disassembly of the motor. Electrical shock can cause serious or fatal injury.
- WARNING: Be sure the system is properly grounded before applying power. Do not apply AC power before you ensure that all grounding instructions have been followed. Electrical shock can cause serious or fatal injury. National Electrical Code and Local codes must be carefully followed.
- **Operation** Verify the installation is complete, all connections are made, and the motor and load are properly aligned and mounted. Apply power to the motor and observe the motor during operation.

During operation, observe the motors performance.

- It should run smoothly with little noise.
- Observe the condition of the motor cable and all connections.
 Damaged insulation or damaged connection points must be repaired at once.

Motor operation may stop for one of the following trip conditions:

- 1. If moisture infiltrates the motor, the optional moisture detector circuit will activate (if present).
- 2. If the motor overheats, the Thermal Protection circuit will activate.
- Motors supplied with thermal protectors are furnished with automatic reset type to protect against destructive overheating. If the protector trips, proceed as follows:

For Automatic Reset Type

This type will reset itself when the motor cools sufficiently. If the thermal protector continues to trip, some abnormal condition exists. This condition must be corrected before motor will operate normally.

3. Other condition detected by motor starter (over current, over voltage, etc. if equipped)

Unbalanced voltage or single-phase operation of poly phase motor may cause excessive heating and ultimate failure. Only a slight unbalance of voltage applied to a poly phase motor will cause large unbalanced currents and resultant overheating. Periodic checks of phase voltage, frequency and power consumption of a motor (measured at the motor starter) while in operation are recommended; such checks assure the correctness of frequency and voltage applied to the motor and yield an indication of the load offered by the apparatus which the motor drives.

Comparisons of this data with previous no load and full-load power demands will give an indication of the performance of the complete machine. Any serious deviations should be investigated and corrected.

Should the Cable Cap assembly be damaged or the integrity of the encapsulation be in question, it is required that a replacement Cable Cap assembly be ordered from Baldor, contact your Baldor District Office. Renewal instructions will be provided with the replacement parts.

Section 3 Maintenance & Troubleshooting

<u>General Inspection</u> Inspect the motor at regular intervals, approximately every 500 hours of operation or every 3 months, whichever occurs first. Keep the motor clean and the ventilation openings clear. The following steps should be performed at each inspection:

WARNING: Do not touch electrical connections before you first ensure that power has been disconnected. Electrical shock can cause serious or fatal injury. Only qualified personnel should attempt the installation, operation and maintenance of this equipment.

Flood Environment Maintenance

Immersible motors are designed to tolerate operation for a short period of time when submerged. The motor must never be submerged more than 30 feet. When a motor becomes submerged, the external OEM provided float switch must disconnect power to the external blower motor. Whenever this condition (submerged operation) exists, the motor must be repaired according to the following procedure. This maintenance repairs are to be performed by a Baldor approved repair facility. The costs for this maintenance is the customers responsibility and is necessary to continue the warranty.

- **Important** If motor has run in a flood environment, it must be disassembled and the following maintenance performed.
 - 1. Replace blower motor, contact Baldor District Office to order replacement. See Appendix A.
 - 2. Inspect bearings.
 - a. If the bearings are dry, re–grease per Bearing Lubrication Procedure.
 - b. If the bearings are wet, replace bearings and re-grease per Bearing Lubrication Procedure.
 - 3. Replace O-rings on brackets.
 - 4. Replace seals in carrier.
 - 5. Completely fill seal carrier with grease per Seal Carrier Lubrication Procedure.

Disassembly If it becomes necessary to disassemble this motor, care should be taken not to damage the stator windings as the insulation may be injured by improper or rough handling.

Precautions to keep bearings clean should be exercised.

- 1. Remove bearing cap screws before removing end shield screws. Marking end shields relative to position on frame will make reassembly easier.
- 2. Bearings should not be removed unless they are to be replaced.
- 3. If it is necessary to open the conduit box, refer to Figure 2-2 for proper connections.
- 4. The O-ring should be replaced when reassembled.

Bearing Lubrication Procedure

This motor has been properly lubricated at the time of manufacture and it is not necessary to lubricate at time of installation. If motor has been in storage for a period of six months or more, lubricate before starting. Lubrication of anti friction bearings and seal carrier should be done as a part of a planned maintenance schedule. The Recommended Lubrication interval should be used as a guide to establish this schedule.

Cleanliness is important in lubrication. Any grease used to lubricate anti-friction bearings should be fresh and free from contamination. Similarly, care should be taken to properly clean the grease inlet area of the motor to prevent grease contamination.

Recommended Lubricant For Bearings

Use lubricant stated on motor nameplate. If lubricant is not specified, for motors operating in ambient temperatures from -25°C to +65°C, use the following: Chevron Black Pearl EP N-2.

Table 3-1 Recommended Lubricant Volume

Frame Size	Lubricant Amount
210-215	0.5 cu. In.
254-286	1.0 cu. In.
324-365	1.5 cu. In.
404-449	2.5 cu. In.

Lubrication Frequency

Baldor anti-friction bearings may be lubricated with the motor running or stationary, however, stationary with the motor warm is preferred.

- 1. Locate the grease inlet, clean the area and replace the pipe plug with a grease fitting.
- 2. The motor is equipped with a grease drain plug. Remove the plug and loosen any hardened grease that may block the drain.
- 3. Add recommended lubricant volume (Table 3-1) using a hand operated grease gun.
- 4. Run the motor for two hours.
- 5. Replace the grease drain plug.
- 6. Replace the pipe plug in grease inlet.

Caution: Never mix or use incompatible lubricants. Watch for signs of lubricant incompatibility. Failure to use compatible lubricants could result in damage to motor.

Special Applications:

For high temperature applications, contact your Baldor District Office for recommended lubricants. Mixing lubricants is not recommended due to the possibility of incompatibility. If it is desired to change lubricant without motor disassembly, follow instructions for lubrication and repeat lubrication a second time after 100 hours of service.

Watch for signs of lubricant incompatibility visible from the grease relief area. Incompatible lubricant could result in damage to equipment.

Seal Carrier Lubrication Procedure

Seal Carrier should be greased every 6 months.

- 1. Remove plugs located on seal carrier.
- 2. Add Chevron Black Pearl EP N-2 grease until new grease purges out the drain.
- 3. Replace other plug.

Lubricant for Seal Carrier Chevron Black Pearl EP N-2. Substitutions are not recommended.

Table 3-2 Troubleshooting Chart

Symptom	Possible Causes	Possible Solutions
Motor will not start	Usually caused by line trouble, such	Check source of power. Check overloads, fuses,
	as, single phasing at the starter.	controls, etc.
Excessive humming	High Voltage.	Check input line connections.
	Eccentric air gap.	Have motor serviced at local Baldor service center.
Motor Over Heating	Overload. Compare actual amps	Locate and remove source of excessive friction in
	(measured) with nameplate rating.	motor or load.
		Reduce load or replace with motor of greater capacity.
	Single Phasing.	Check current at all phases (should be approximately
		equal) to isolate and correct the problem.
	Improper ventilation.	Check external cooling fan to be sure air is moving
		properly across cooling fins.
		Excessive dirt build-up on motor. Clean motor.
	Unbalanced voltage.	Check voltage at all phases (should be approximately equal) to isolate and correct the problem.
	Rotor rubbing on stator.	Check air gap clearance and bearings.
		Tighten "Thru Bolts".
	Over voltage or under voltage.	Check input voltage at each phase to motor.
	Open stator winding.	Check stator resistance at all three phases for
		balance.
	Grounded winding.	Perform dielectric test and repair as required.
	Improper connections.	Inspect all electrical connections for proper
		termination, clearance, mechanical strength and
		electrical continuity. Refer to motor lead connection
		diagram.
Bearing Over Heating	Misalignment.	Check and align motor and driven equipment.
	Excessive belt tension.	Reduce belt tension to proper point for load.
	Excessive end thrust.	Reduce the end thrust from driven machine.
	Excessive grease in bearing.	Remove grease until cavity is approximately ³ / ₄ filled.
	Insufficient grease in bearing.	Add grease until cavity is approximately ³ / ₄ filled.
	Dirt in bearing.	Clean bearing cavity and bearing. Repack with correct
		grease until cavity is approximately 3/4 filled.
Vibration	Misalignment.	Check and align motor and driven equipment.
	Rubbing between rotating parts and stationary parts.	Isolate and eliminate cause of rubbing.
	Rotor out of balance.	Have rotor balance checked are repaired at your Baldor Service Center.
	Resonance.	Tune system or contact your Baldor Service Center
		for assistance.
Noise	Foreign material in air gap or	Remove rotor and foreign material. Reinstall rotor.
	ventilation openings.	Check insulation integrity. Clean ventilation openings.
Growling or whining	Bad bearing.	Replace bearing. Clean all grease from cavity and
		new bearing. Repack with correct grease until cavity is approximately ³ / ₄ filled.

Figure 3-1 Cross Section Diagram



- Frame
- Stator
- Rotor
- Drive End bracket (DE) Opposite Drive End bracket (ODE)
- 1 2 3 4 5 6 7 Shaft

 - 8
 - Back end inner cap Drive End Bearing Opposite Drive End bracket plug 9
 - 10 Back end bracket bolts
 - Fan cover 11
 - 12 Outer Fan
 - 13 Fan Clamp
 - 14 15
 - Drip Cover Drip Cover Bolts
 - 16
 - Seal Carriage Opposite Drive End bearing 17
 - 18 19
 - Blower Cable Entry Lip seals, Tandem arrangement Lifting Plates

 - 20
 - Conduit Box/Cable Cap Assembly Blower motor O ring, ODE bracket O ring, DE bracket O ring, Seal Carrier 21 22

 - 23
 - 24 25

Motors are regreaseable.

Grease inlet and outlet not shown

Note: 210TY Frame TENV.

Appendix A Blower Motor

<u>Overview</u>	Blower Motor is a Fractional Horsepower AC Motor. Poly phase, 1/2 hp Frame 56C (does not apply to 210TY)	
	When a motor has been submerged, it must be replaced. These instructions are for the Blower Motor.	
<u>Receiving</u>	Each Baldor•Reliance Motor is thoroughly tested at the factory and carefully packaged for shipment. When you receive your motor, there are several things you should do immediately.	
	 Observe the condition of the shipping container and report any damage immediately to the commercial carrier that delivered your motor. The carrier is responsible for all damage. 	
	2. Verify that the part number of the motor you received is the same as the part number listed on your purchase order and please contact your Baldor District Office if there is a problem.	
Mounting	Mount the motor on a foundation sufficiently rigid to prevent vibration. After careful alignment, bolt motor securely in place.	
Wiring	Check nameplate data on motor before installing to ensure correct rating and that the available power supply is compatible. If in doubt, check local power company. Fuses, wires, thermal cutouts and other protective devices should be the proper size and rating to safely carry the load and to interrupt the circuit on overloads. Thermal devices, when installed, are of proper size to provide the required protection.	
	All motors contain wiring instructions either as a label on the inside of the conduit box cover or by separate sheet or tag. All motors should be installed in accordance with the National Electric Code and local requirements. Check leads or terminals with connection diagrams or label so the proper connections to the incoming power leads are made.	
	Rotation Refer to notation on wiring diagram (inside 140 box) for method of changing rotation. Ambient Temperature	
	Each motor nameplate states a maximum ambient temperature rating. Motors should not be operated at ambient temperatures in excess of their rating.	
Relubrication & Bearings		
	Ball Bearings	

Ball Bearings

The ball bearing has deep grooved, double shielded bearings with sufficient lubricant packed into the bearings by the manufacturer for "life Lubrication". The initial lubricant is supplemented by a supply packed into larger reservoirs in the end shield at time of assembly. (No grease fittings are provided).

Operation Verify the installation is complete, all connections are made, and the motor and load are properly aligned and mounted. Apply power to the motor and observe the motor during operation.

During operation, observe the motors performance.

- It should run smoothly with little noise.
- Observe the condition of the motor cable and all connections.
 Damaged insulation or damaged connection points must be repaired at once.

Motor operation may stop for one of the following trip conditions:

- 1. If moisture infiltrates the motor, the moisture detector circuit will activate.
- If the motor overheats, the Thermal Protection circuit will activate. Motors supplied with thermal protectors are furnished with either a manual or automatic reset type to protect against destructive overheating. If the protector trips, proceed as follows:

For Manual Reset Type

- a. Wait two minutes.
- b. Push in reset plunger until it catches.

For Automatic Reset Type

This type will reset itself when the motor cools sufficiently.

If the thermal protector continues to trip, some abnormal condition exists.

This condition must be corrected before motor will operate normally.

Troubleshooting

If trouble develops during motor operation, be sure that:

- 1. The bearings are in normal condition and have been properly lubricated with a high grade, ball bearing lubricant, free of dirt or grit. (If dirt enters bearing, flush and relubricate.)
- 2. Mechanical adjustment is correct to allow free rotation of moving parts of motor and drive.
- 3. All bolts and nuts are properly tightened.
- 4. Motor instructions have been carefully followed.
- 5. Full rated voltage is available in all phases at the motor terminals.
- 6. That the line voltage, frequency and phase correspond to the values stamped on the nameplate.
- 7. That all connections and contacts are properly made in all circuits between motor and line, and between motor and control.

UNITED STATES

ARIZONA PHOENIX 4211 S 43RD PLACE PHOENIX, AZ 85040 PHONE: 602-470-0407 FAX: 602-470-0464

ARKANSAS CLARKSVILLE 1001 COLLEGE AVENUE CLARKSVILLE, AR 72830 PHONE: 479-754-9108 FAX: 479-754-9205

CALIFORNIA LOS ANGELES 6480 FLOTILLA STREET COMMERCE, CA 90040 PHONE: 323-724-6771 FAX: 323-721-5859

HAYWARD 21056 FORBES AVENUE HAYWARD, CA 94545 PHONE: 510-785-9900 FAX: 510-785-9910

COLORADO DENVER 3855 FOREST STREET DENVER, CO 80207 PHONE: 303-623-0127 FAX: 303-595-3772

CONNECTICUT WALLINGFORD 65 SOUTH TURNPIKE ROAD WALLINGFORD, CT 06492 PHONE: 203-269-1354 FAX: 203-269-5485

FLORIDA TAMPA/PUERTO RICO/ VIRGIN ISLANDS 3906 EAST 11TH AVENUE TAMPA, FL 33605 PHONE: 813-248-5078 FAX: 813-247-2984

GEORGIA ATLANTA 62 TECHNOLOGY DRIVE ALPHARETTA, GA 30005 PHONE: 770-772-7000 FAX: 770-772-7200

ILLINOIS CHICAGO 340 REMINGTON BLVD. BOLINGBROOK, IL 60440 PHONE: 630-296-1400 FAX: 630-226-9420

INDIANA INDIANAPOLIS 5525 W. MINNESOTA STREET INDIANAPOLIS, IN 46241 PHONE: 317-246-5100 FAX: 317-246-5110

IOWA DES MOINES 1800 DIXON STREET, SUITE C DES MOINES, IA 50316 PHONE: 515-263-6515 FAX: 515-263-6515 MARYLAND BALTIMORE 6660 SANTA BARBARA RD. SUITES 22-24 ELKRIDGE, MD 21075 PHONE: 410-579-2135 FAX: 410-579-2677

MASSACHUSETTS BOSTON 6 PULLMAN STREET WORCESTER, MA 01606 PHONE: 508-854-0708 FAX: 508-854-0291

MICHIGAN DETROIT 5993 PROGRESS DRIVE STERLING HEIGHTS, MI 48312 PHONE: 586-978-9800 FAX: 586-978-9969

MINNESOTA MINNEAPOLIS 21080 134TH AVENUE NORTH ROGERS, MN 55374 PHONE: 763-428-3633 FAX: 763-428-4551

MISSOURI ST LOUIS 422 INDUSTRIAL DRIVE MARYLAND HEIGHTS, MO 63043 PHONE: 314-298-1800 FAX: 314-298-7660

KANSAS CITY 1501 BEDFORD AVENUE NORTH KANSAS CITY, M0 64116 PHONE: 816-587-0272 FAX: 816-587-3735

NEW YORK AUBURN ONE ELLIS DRIVE AUBURN, NY 13021 PHONE: 315-255-3403 FAX: 315-253-9923

NORTH CAROLINA GREENSBORO 1220 ROTHERWOOD ROAD GREENSBORO, NC 27406 PHONE: 336-272-6104 FAX: 336-273-6628

OHIO CINCINNATI 2929 CRESCENTVILLE ROAD WEST CHESTER, OH 45069 PHONE: 513-771-2600 FAX: 513-772-2219

CLEVELAND 8929 FREEWAY DRIVE MACEDONIA, OH 44056 PHONE: 330-468-4777 FAX: 330-468-4778

OKLAHOMA TULSA 7170 S. BRADEN, SUITE 140 TULSA, OK 74136 PHONE: 918-366-9320 FAX: 918-366-9338

Baldor District Offices

OREGON PORTLAND 20393 SW AVERY COURT TUALATIN, OR 97062 PHONE: 503-691-9010 FAX: 503-691-9012

PENNSYLVANIA PHILADELPHIA 1035 THOMAS BUSCH MEMORIAL HIGHWAY PENNSAUKEN, NJ 08110 PHONE: 856-661-1442 FAX: 856-663-6363

PITTSBURGH 159 PROMINENCE DRIVE NEW KENSINGTON, PA 15068 PHONE: 724-889-0092 FAX: 724-889-0094

TENNESSEE MEMPHIS 4000 WINCHESTER ROAD MEMPHIS, TN 38118 PHONE: 901-365-2020 FAX: 901-365-3914

TEXAS DALLAS 2920 114TH STREET SUITE 100 GRAND PRAIRIE, TX 75050 PHONE: 214-634-7271 FAX: 214-634-8874

HOUSTON 10355 W. LITTLE YORK ROAD SUITE 300 HOUSTON, TX 77041 PHONE: 281-977-6500 FAX: 281-977-6510

UTAH SALT LAKE CITY 2230 SOUTH MAIN STREET SALT LAKE CITY, UT 84115 PHONE: 801-832-0127 FAX: 801-832-8911

WISCONSIN MILWAUKEE 1960 SOUTH CALHOUN ROAD NEW BERLIN, WI 53151 PHONE: 262-784-5940 FAX: 262-784-1215

INTERNATIONAL SALES FORT SMITH, AR P.O. BOX 2400 FORT SMITH, AR 72902 PHONE: 479-646-4711 FAX: 479-648-5895

CANADA EDMONTON, ALBERTA 4053-92 STREET EDMONTON, ALBERTA T6E 6R8 PHONE: 780-434-4900 FAX: 780-438-2600

TORONTO OAKVILLE, ONTARIO 2750 COVENTRY ROAD OAKVILLE, ONTARIO L6H 6R1 PHONE: 905-829-3301 FAX: 905-829-3302 MONTREAL, QUEBEC 5155 J-ARMAND BOMBARDIER SAINT-HUBERT, QUEBEC CANADA J3Z 164 PHONE: 514-933-2711 FAX: 514-933-8639

VANCOUVER, BRITISH COLUMBIA 1538 KEBET WAY PORT COQUITLAM, BRITISH COLUMBIA V3C 5M5 PHONE 604-421-2822 FAX: 604-421-3113

WINNIPEG, MANITOBA 54 PRINCESS STREET WINNIPEG, MANITOBA R3B 1K2 PHONE: 204-942-5205 FAX: 204-956-4251

AUSTRALIA UNIT 3, 6 STANTON ROAD SEVEN HILLS, NSW 2147, AUSTRALIA PHONE: (61) (2) 9674 5455 FAX: (61) (2) 9674 2495

UNIT 8, 5 KELLETTS ROAD ROWVILLE, VICTORIA, 3178 AUSTRALIA PHONE: (61) (3) 9753 4355 FAX: (61) (3) 9753 4366

EL SALVADOR RESIDENCIAL PINARES DE SUIZA POL. 15 #44, NVA. SAN SALVADOR, EL SALVADOR PHONE: +503 2288-1519 FAX: +503 2288-1518

CHILE LUIS THAYER OJEDA 166, OF 402 - PROVIDENCIA SANTIAGO, CHILE PHONE: +56 2 816 9900

CHINA 160 SONG SHENG ROAD SONGJIANG INDUSTRY ZONE SHANGHAI 201613, CHINA PHONE: +86 21 5760 5335 FAX: +86 21 5760 5336

GERMANY HERMANN-HEINRICH - GOSSEN 3 50858 KOLN, GERMANY PHONE: 49-2234379410 FAX: 49-22343794164

DIESELSTRASSE 22 D-85551 KIRCHHEIM MUNICH, GERMANY PHONE: +49 89 90 5080 FAX: +49 89 90 50 8492

INDIA 14, COMMERCE AVENUE MAHAGANESH COLONY PAUD ROAD PUNE - 411038 MAHARASHTRA, INDIA PHONE: +91 20 25 45 27 17 / 18 FAX: +91 20 25 45 27 19

INDONESIA TALAVERA OFFICE PARK, 28TH FLOOR, SUITE M18 JI. T.B. SIMATUPANG, KAV. 22-26 JAKARTA 12430, INDONESIA PHONE: +62 21 7599 9879 FAX: + 62 21 7599 9878 ITALY VIA SOTTOBISIO 30 BALERNA CH-6828 PHONE: +41 91 683 6161

FAX: +41 91 630 2633

JAPAN DIA BLDG 802, 2-21-1 TSURUYA-CHO, KANAGAWA-KU YOKOHAMA, 221-0835, JAPAN PHONE: 81-45-412-4506 FAX: 81-45-412-4507

MEXICO LEON, GUANAJUATO KM. 2.0 BLVD. AEROPUERTO LEÓN 37545, GUANAJUATO, MÉXICO PHONE: +52 477 761 2030 FAX: +52 477 761 2010

MIDDLE EAST & NORTH AFRICA VSE INTERNATIONAL CORP. P. 0. BOX 5618 BUFFALO GROVE, IL 60089-5618 PHONE: 847 590 5547 FAX: 847 590 5587

PANAMA AVE. RICARDO J. ALFARO EDIFICIO SUN TOWERS MALL PISO 2, LOCAL 55 CIUDAD DE PANAMÁ, PANAMÁ PHONE: +507 236-5155 FAX: +507 236-0591

SINGAPORE 18 KAKI BUKIT ROAD 3, #03-09 ENTREPRENEUR BUSINESS CENTRE SINGAPORE 415978 PHONE: (65) 6744 2572 FAX: (65) 6747 1708

SWITZERLAND POSTFACH 73 SCHUTZENSTRASSE 59 CH-8245 FEUERTHALEN SWITZERLAND PHONE: +41 52 647 4700 FAX: +41 52 659 2394

TAIWAN 1F, NO 126 WENSHAN 3RD STREET, NANTUN DISTRICT, TAICHUNG CITY 408 TAIWAN R.O.C PHONE: (886) 4 238 04235 FAX: (886) 4 238 04263

UNITED KINGDOM 6 BRISTOL DISTRIBUTION PARK HAWKLEY DRIVE BRISTOL BS32 0BF U.K. PHONE: +44 1454 850000 FAX: +44 1454 859001

VENEZUELA AV. ROMA. QTA EL MILAGRO. URB. CALIFORNIA NORTE CARACAS, 1070 VENEZUELA PHONE/FAX: +58 212 272 7343 MOBILE: +58 414 114 8623





World Headquarters P.O. Box 2400 Fort Smith, AR 72902–2400 (479) 646–4711 Fax (479) 648–5792 www.baldor.com

© 2010 Baldor Electric Company MN403

All rights reserved. Printed in USA 7/10