

QUICK INSTALLATION GUIDE

 
Wireless-N Home Router

Model: WRT120N



Installation

A. Insert the Setup CD-ROM into your CD-ROM drive.



B. If you use a PC, select your language from the drop-down menu. Click **Start Setup**.

If you use a Mac, skip to step D.



C. The Setup Wizard will guide you through the steps to set up the Router. It will also install Cisco Network Magic software to help you configure and manage your network. Click **Next** and skip to step F.



D. Double-click the CD on your desktop. Then double-click the **Start Setup** icon **②**.



E. Select your language from the drop-down menu. Click **Next**.



F. Select **I accept this agreement**. Click **Next**.



G. The Setup Wizard will guide you through the Router's physical installation and setup. Follow the instructions in these screens.









H. Follow the instructions until you see the *Network Configured* screen. Click **Next** to finish the setup.



Congratulations! Setup is complete.

Wireless Connection to Your PC

The Setup Wizard will guide you through the steps to install Cisco Network Magic on your computer. When the *Network Tasks* screen appears, click **Go Wireless**, and Cisco Network Magic will help you create a wireless connection between the Router and your computer. Then follow the on-screen instructions.



Wireless Connection to Your Mac

- 1. Click the **Wireless** icon on your desktop.
- 2. Select your wireless network.



If security is enabled, you will be prompted for a password. (The password, also known as a network security key, was saved in the Linksys.txt file on your desktop. Double-click the file to open it.)



Enter the password, and then click **OK**.





09032610NC-JL 3240-00289