




Cordless Chain Saw

MODEL UC120D

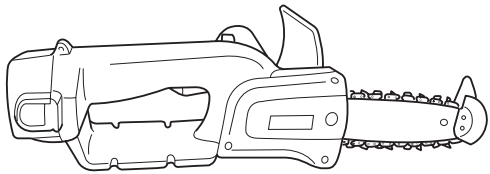

I N S T R U C T I O N M A N U A L

⚠ WARNING:

For your personal safety, READ and UNDERSTAND before using.
SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

www.makitatools.com

SPECIFICATIONS

Model UC120D						
Chain speed per minute	Length of guide bar	Saw chain			Overall length	Net weight
		Type	Pitch	No. of drive links		
160 m/min.	115 mm (4-1/2")	25 AP	1/4"	42	468 mm (18-1/2")	2.2 kg (4.8 lbs)

Battery Cartridge 1222	Model DC1414 Battery Charger			
Voltage	Input		Output	Charging time
12 V	A.C. only 50 Hz - 60 Hz		D.C. 7.2 V - 14.4 V	45 min.

Battery Cartridge 1234	Model DC1414 Battery Charger			
Voltage	Input		Output	Charging time
12 V	A.C. only 50 Hz - 60 Hz		D.C. 7.2 V - 14.4 V	60 min.

Battery Cartridge 1235	Model DC1414 Battery Charger			
Voltage	Input		Output	Charging time
12 V	A.C. only 50 Hz - 60 Hz		D.C. 7.2 V - 14.4 V	70 min.

- Manufacturer reserves the right to change specifications without notice.
- Specifications may differ from country to country.

IMPORTANT SAFETY INSTRUCTIONS

USA013-1

⚠ WARNING:
WHEN USING A CORDLESS CHAIN SAW, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS

1. Keep Work Area Clean

Cluttered areas invite injuries. Do not start cutting until you have a clear work area, secure footing, and a planned retreat path from the falling tree.
2. Consider Work Area Environment

Use extreme caution when cutting small size brush and saplings because the slender material may catch the saw chain and be whipped toward you or pull you off balance. Do not operate a chain saw in a tree unless specifically trained to do so. When

-
- cutting a limb that is under tension be alert for spring back so that you will not be struck when the tension in the wood fibers is released. Do not expose chain saw to rain. Do not use chain saw in damp or wet locations. Do not use chain saw in presence of flammable liquids or gases.
3. **Guard Against Electric Shock**
Prevent body contact with grounded surfaces. For example: metal pipes, wire fences.
 4. **Keep Children Away**
Do not let visitors contact chain saw. All visitors should be kept away from work area.
 5. **Store Idle Chain Saw**
When not in use, chain saws should be stored in a dry, and high or locked-up place - out of the reach of children. When storing saw, use a scabbard or carrying case.
 6. **Do not Force Chain Saw**
It will do the job better and safer at the rate for which it was intended.
 7. **Use Right Tool**
Cut wood only. Do not use chain saw for purpose not intended - for example - Do not use chain saw for cutting plastic, masonry non-wood building materials.
 8. **Dress properly**
Do not wear loose clothing or jewelry. They can get caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.
 9. **Use Safety Glasses**
Also use safety footwear; snug fitting clothing; protective gloves; and head protection.
 10. **Carrying Saw**
Carry the chain saw with the saw stopped, finger off the switch, the guide bar and saw chain to the rear.
 11. **Maintain Chain Saw With Care**
Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. Keep handles dry, clean, and free from oil and grease.
 12. **Disconnect Chain Saw**
Disconnect battery cartridge from chain saw when not in use, before servicing, and when changing accessories and attachments, such as saw chain and guard.
 13. **Stay Alert**
Watch what you are doing. Use common sense. Do not operate chain saw when you are tired. Keep all parts of the body away from the saw chain when the motor is operating. Before you start the saw, make sure the saw chain is not contacting anything.
 14. **Check Damaged Parts**
Before further use of the chain saw, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by authorized service center. Do not use chain saw if switch does not turn it on and off. Do not operate a chain saw that is damaged, improperly adjusted, or is not completely and securely assembled. Be sure that the saw chain stops moving when the trigger is released.
 15. **Guard Against Kickback**
WARNING: KICKBACK may occur when the nose or tip of the guide bar touches an object, or when the wood closes in and

pinches the saw chain in the cut. Tip contact in some cases may cause a lightning fast reverse reaction, kicking the guide bar up and back towards the operator. Pinching the saw chain along the top of the guide bar may push the guide bar rapidly back towards the operator. Either of these reactions may cause you to lose control of the saw which could result in serious injury to user.


The following precautions should be followed to minimize kickback.

- (1) **Grip Saw Firmly.** Hold the chain saw firmly with both hands when the motor is running. Use a firm grip with thumbs and fingers encircling the chain saw handles.
- (2) **Do not over reach.**
- (3) **Keep proper footing and balance at all times.**
- (4) **Do not let the nose of the guide bar contact a log, branch, ground, or other obstruction.**
- (5) **Do not cut above shoulder height.**
- (6) **Use devices such as special guide bars that reduce the risks associated with kickback.**
- (7) **Only use replacement bars and chains specified by the manufacturer.**
16. **Replacement Parts**
when servicing use only identical replacement parts.
17. **Before marking a felling cut, remove dirt, stones, loose bark, nails, staples and wire from the tree.**
18. **Secure the log so that it will not roll or move suddenly during operation.**
19. **AVOID UNINTENTIONAL STARTING.** Do not carry the tool with finger on switch. Be sure switch is in OFF position before inserting battery cartridge.
20. **Attention! Do not expose this tool to rain.**
21. **The chain saw must not be left outdoors during rain and it must not be used when wet.**
22. **Disconnect battery pack from tool or place the switch in the locked or off position before making any adjustments, changing accessories, or storing the tool. Such preventive safety measures reduce the risk of starting the tool accidentally.**

SAVE THESE INSTRUCTIONS

Chain Saw Nomenclature

001728

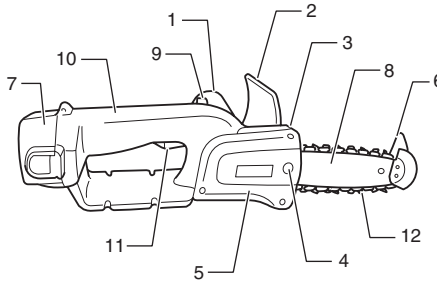

- | | |
|-----------------------|--------------------|
| 1. Front handle | 7. Guide bar |
| 2. Front handle guard | 8. Lock-off button |
| 3. Spike bar | 9. Rear handle |
| 4. Fastening bolt | 10. Switch trigger |
| 5. Sprocket guard | 11. Saw chain |
| 6. Bar tip guard | |

Bar Tip Guard - An attachment that may be provided on the end of the guide bar to prevent the chain at the end of the guide bar from contacting the wood.

Chain Saw powerhead - A chain saw without the saw chain and guide bar.

Drive Sprocket or Sprocket - The toothed part that drives the saw chain.

Felling - The process of cutting down a tree.

Front Handle - The support handle located at or toward the front of the chain saw.

Handle Guard Front - A structural barrier between the front handle of a chain saw and the guide bar, typically located close to the hand position on the front handle and sometimes employed as an activating lever for a chain brake.

Guide Bar - A solid railed structure that supports and guides the saw chain.

Kickback - The backward or upward motion, or both of the guide bar occurring when the saw chain near the nose of the top area of the guide bar contacts any object such as a log or branch, or when the wood closes in and pinches the saw chain in the cut.

Kickback, Pinch - The rapid pushback of the saw which can occur when the wood closes in and pinches the moving saw chain in the cut along the top of the guide bar.

Kickback, Rotational - The rapid upward and backward motion of saw which can occur when the moving saw chain near the upper portion of the tip of the guide bar contacts an object, such as a log or branch.

Rear Handle - The support handle located at or toward the rear of the saw.

Reduced Kickback Guide Bar - A guide bar which has been demonstrated to reduce kick-back significantly.

Replacement Saw Chain - A chain that complies with the kickback performance requirements of ANSI B175.1 when tested with specific chain saws. It may not meet the ANSI performance requirements when used with other saws.

Saw Chain - A loop of chain having cutting teeth, that cut the wood, and that is driven by the motor and is supported by the guide bar.

Spiked Bumper (Spike) - The pointed tooth or teeth for use when felling or bucking to pivot the saw and maintain position while sawing.


Switch - A device that when operated will complete or interrupt an electrical power circuit to the motor of the chain saws.

Lock-Off Button - A Movable stop that prevents the unintentional operation of the switch until manually actuated.

FUNCTIONAL DESCRIPTION

CAUTION:


- Always be sure that the tool is switched off and the battery cartridge is removed before adjusting or checking function on the tool.

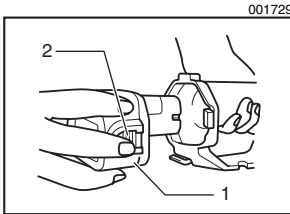

1. Battery cartridge
2. Button

Installing or removing battery cartridge

- Always switch off the tool before insertion or removal of the battery cartridge.
- To remove the battery cartridge, withdraw it from the tool while pressing the buttons on both sides of the cartridge.
- To insert the battery cartridge, align the tongue on the battery cartridge with the groove in the housing and slip it into place. Always insert it all the way until it locks in place with a little click. If not, it may accidentally fall out of the tool, causing injury to you or someone around you.
- Do not use force when inserting the battery cartridge. If the cartridge does not slide in easily, it is not being inserted correctly.

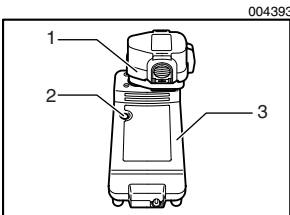

1. Battery cartridge
2. Charging light
3. Battery charger

Charging

- Plug the battery charger into the proper AC voltage source. The charging light will flash in green color.
- Insert the battery cartridge so that the plus and minus terminals on the battery cartridge are on the same sides as their respective markings on the battery charger. Insert the cartridge fully into the port so that it rests on the charger port floor.
- When the battery cartridge is inserted, the charging light color will change from green to red and charging will begin. The charging light will remain lit steadily during charging.
- When the charging light color changes from red to green, the charging cycle is complete.
- If you leave the battery cartridge in the charger after the charging cycle is complete, the charger will switch into its "trickle charge (maintenance charge)" mode.

-
- After charging, unplug the charger from the power source.

 CAUTION:

- The battery charger is for charging Makita battery cartridge. Never use it for other purposes or for other manufacturer's batteries.
- When you charge a new battery cartridge or a battery cartridge which has not been used for a long period of time, it may not accept a full charge. This is a normal condition and does not indicate a problem. You can recharge the battery cartridge fully after discharging it completely and recharging a couple of times.
- If you charge a battery cartridge from a just-operated tool or a battery cartridge which has been left in a location exposed to direct sunlight or heat for a long time, the charging light may flash in red color. If this occurs, wait for a while. Charging will begin after the battery cartridge cools. The battery cartridge will cool faster if you remove the battery cartridge from the battery charger.
- If the charging light flashes alternately in green and red color, a problem exists and charging is not possible. The terminals on the charger or battery cartridge are clogged with dust or the battery cartridge is worn out or damaged.

Trickle charge (Maintenance charge)

If you leave the battery cartridge in the charger to prevent spontaneous discharging after full charge, the charger will switch into its “trickle charge (maintenance charge)” mode and keep the battery cartridge fresh and fully charged.

Tips for maintaining maximum battery life


1. Charge the battery cartridge before completely discharged.
 - Always stop tool operation and charge the battery cartridge when you notice less tool power.
2. Never recharge a fully charged battery cartridge.
 - Overcharging shortens the battery service life.

3. Charge the battery cartridge with room temperature at 10°C - 40°C (50°F - 104°F).
 - Let a hot battery cartridge cool down before charging it.
4. Charge the Nickel Metal Hydride battery cartridge when you do not use it for more than six months.

Switch action

⚠ CAUTION:

- Before inserting the battery cartridge into the tool, always check to see that the switch trigger actuates properly and returns to the "OFF" position when released.

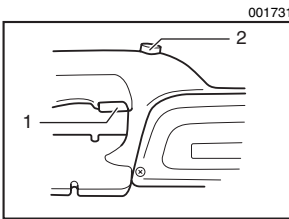

1. Switch trigger
2. Lock-off button

To prevent the switch trigger from being accidentally pulled, a lock-off button is provided.

To start the tool, depress the lock-off button and pull the switch trigger. Release the switch trigger to stop.

ASSEMBLY

⚠ CAUTION:

- Always be sure that the tool is switched off and the battery cartridge is removed before carrying out any work on the tool.

Installing or removing saw chain


⚠ CAUTION:

- Always be sure that the tool is switched off and the battery cartridge is removed before installing or removing the saw chain.
- Always wear gloves when installing or removing the saw chain.
- Use only saw chain and guide bar with bar tip designed for this chain saw (see the Extract from the spare parts list).

- In order to prevent kickback, do not remove the bar tip or replace the guide bar with one without a bar tip.

Loosen the screws with a screwdriver. Remove the sprocket guard.


001732

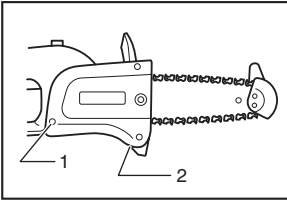

1. Screw
2. Sprocket guard

Loosen the hex socket head bolt with the hex wrench provided. Remove the guide bar.


001733

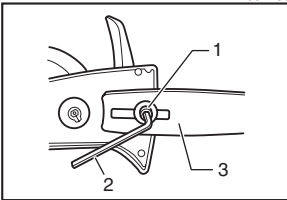

1. Hex socket head bolt
2. Hex wrench
3. Guide bar

Fit the saw chain over the guide bar. Notice that the cutters must be facing the revolving (arrow) direction.

001734

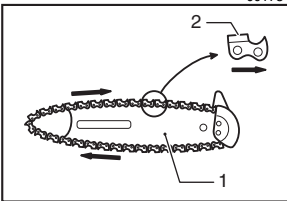


1. Guide bar
2. Cutter

Fit the saw chain over the sprocket. Install the guide bar so that its concave portion will contact the saw chain tension adjusting spring.

Tighten the bolt to secure the guide bar. Install the sprocket guard and tighten the screws to secure it.

001735

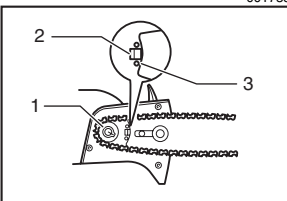


1. Sprocket
2. Saw chain tension adjusting spring
3. Concave portion of guide bar


Adjusting saw chain tension

The saw chain may become loose after many hours of use. From time to time check the saw chain tension before use.

Grasp the saw chain in the middle of the guide bar and lift up. The gap between the guide bar and the tie strap of the saw chain should be approx. 2 - 3 mm (5/64" - 7/64"). If the gap is not approx. 2 - 3 mm (5/64" - 7/64"), slightly loosen the hex socket head bolt which secures the guide bar. The gap will be automatically adjusted to approx. 2 - 3 mm (5/64" - 7/64") by the saw chain tension adjusting spring.

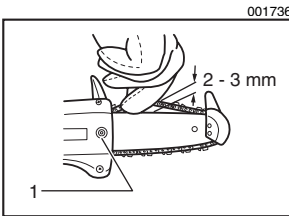

1. Hex socket head bolt

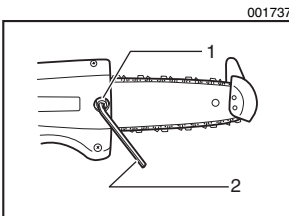

1. Hex socket head bolt
2. Hex wrench

Then tighten the hex socket head bolt securely after making sure that gap is approx. 2 - 3 mm (5/64" - 7/64").


OPERATION

Lubrication

⚠ CAUTION:

- Always be sure that the tool is switched off and the battery cartridge is removed before lubricating the saw chain.
- Always use vegetable oil when pruning fruit trees. Mineral oil may harm trees.

Lubricate the whole saw chain evenly before each use. Also lubricate it whenever replacing a fully discharged battery cartridge with a charged one.

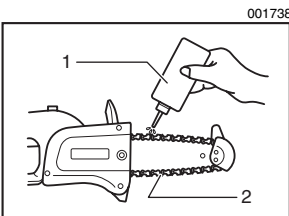

1. Chain oil
2. Saw chain


Pruning trees

CAUTION:

- Keep all parts of the body away from the saw chain when the motor is operating.
- Hold the chain saw firmly with both hands when the motor is running.
- Do not overreach. Keep proper footing and balance at all times.


Bring the tip guide/lower guide into contact with the branch to be cut before switching on. Cutting without bringing the tip guide/lower guide into contact with the branch may cause the guide bar to wobble, resulting in injury to operator.

001739

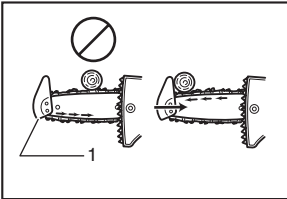


1. Tip guide

001740

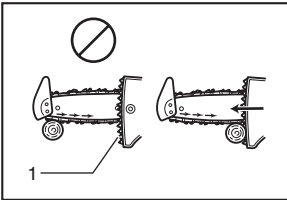


1. Lower guide

001741

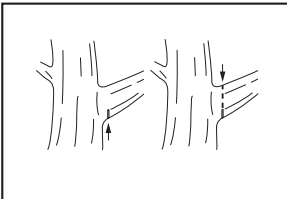

When cutting thick branches, first make a shallow undercut and then make the finish cut from the top.


001742

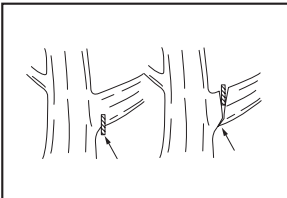

If you try to cut off thick branches from the bottom, the branch may close in and pinch the saw chain in the cut.

If you try to cut off thick branches from the top without a shallow undercut, the branch may splinter.

001743

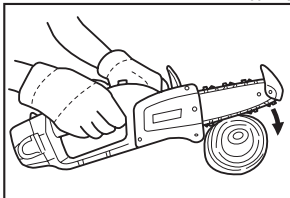


If you cannot cut the timber right through with a single stroke: Apply light pressure to the handle and continue sawing and draw the chain saw back a little; then apply the spike a little lower and finish the cut by raising the handle.

Carrying tool

Always remove the battery cartridge from the tool and cover the guide bar with the scabbard before carrying the tool. Also cover the battery cartridge with the battery cover.

001744

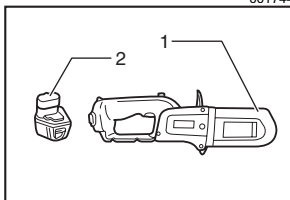

1. Scabbard (chain cover)
2. Battery cover

MAINTENANCE


⚠ CAUTION:

- Always be sure that the tool is switched off and the battery cartridge is removed before carrying out any work on the tool.
- Always wear gloves when performing any inspection or maintenance.

Filing saw chain


File the saw chain so that the cutters meet the specifications indicated in illustration.

001745

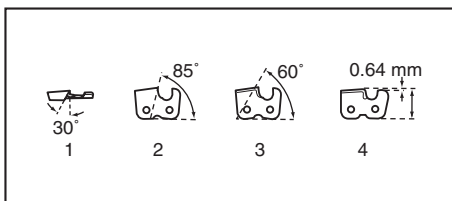

1. Top plate angle
2. Side plate angle
3. Top filing angle
4. Depth gauge


001746

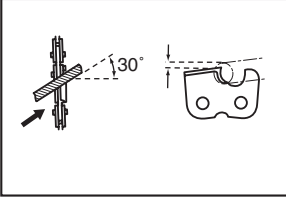


1. Filing cutters

Use a round file 4 mm (5/32") in outer diameter to file the cutters. Apply it to the cutter so that it will be angled 30° to the guide bar and protrude 1/5 of the outer diameter from the tip of the cutter. Hold the file level and push it away from you while filing. Be careful not to touch the cutters with the file when pulling it back toward you.

001747

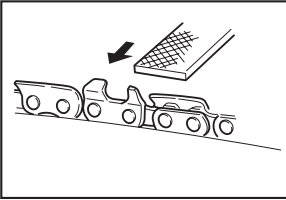


001748

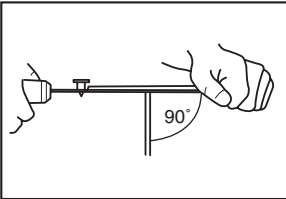

2. Filing depth gauges


Use a flat file to file the depth gauge. Hold the file level when filing. Round off the front corner of the depth gauge to maintain its original shape.

001749

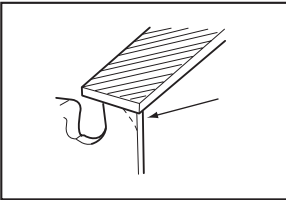

After filing the saw chain, immerse it in oil and wash off filing chips and sawdust from the saw chain.

001750

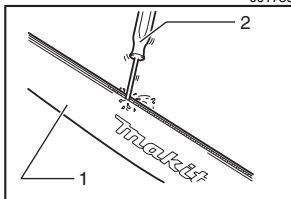

1. Guide bar
2. Screwdriver

Cleaning guide bar

Chips and sawdust will build up in the guide bar groove, clogging it and impairing oil flow. Always clean out the chips and sawdust when sharpening or replacing the saw chain.

Storing tool

Clean the tool before storing. Remove any chips and sawdust from the tool after removing the chain cover. After cleaning the tool, run it under no load. Then remove the battery cartridge from the tool and lubricate the saw chain and guide bar.

To maintain product SAFETY and RELIABILITY, repairs, any other maintenance or adjustment should be performed by Makita Authorized or Factory Service Centers, always using Makita replacement parts.

EN0001-1


Recycling the Battery

The only way to dispose of a Makita battery is to recycle it. The law prohibits any other method of disposal.

To recycle the battery:

1. Remove the battery from the tool.
2. a) Take the battery to your nearest Makita Factory Service Center
or
b) Take the battery to your nearest Makita Authorized Service Center or Distributor that has been designated as a Makita battery recycling location.

Call your nearest Makita Service Center or Distributor to determine the location that provides Makita battery recycling. See your local Yellow Pages under "Tools-Electric".

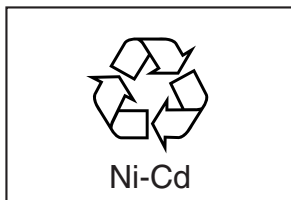

ACCESSORIES

CAUTION:

- These accessories or attachments are recommended for use with your Makita tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. Only use accessory or attachment for its stated purpose.

If you need any assistance for more details regarding these accessories, ask your local Makita service center.

- Various type of Makita genuine batteries and chargers
- Saw chain
- Scabbard
- Guide bar complete
- File
- Hex wrench
- Oil supply

Cut



First-Class
Postage
Required

Post Office will
not deliver
without proper
postage.

Makita U.S.A., Inc.
14930 Northam Street
La Mirada, CA 90638-5753



Fold

MAIL THIS PORTION

Your answers to the following questions are appreciated.

1. This product was purchased from:

☐ Home Center

☐ Hardware/Lumber Store

☐ Tool Distributor

☐ Industrial Supply

☐ Construction Supply

☐ Other ()

3. How did you learn about this product:

☐ Magazine

☐ From Dealer

☐ Newspaper

☐ Store Display

☐ Catalog

☐ Radio

☐ Exhibition

☐ From Friend

☐ Previous Usage

☐ Other ()

2. Use of the product is intended for:

☐ Construction Trade

☐ Industrial Maintenance

☐ Home Maintenance

☐ Hobby

☐ Other ()

4. Most favored points are:

☐ Design

☐ Features

☐ Size

☐ Price

☐ Makita Brand

☐ Repair Service

☐ Durability

☐ Power

☐ Other ()

5. Any comments:

DATE PURCHASED												MODEL NO.																	
MONTH				DAY				YEAR				SERIAL NO.																	
INTL.		LAST NAME / COMPANY NAME														STATUS Married Single				SEX M F									
STREET ADDRESS																													
CITY																													
STATE				ZIP CODE								PHONE				AREA CODE													
AGE:		☐ Under 19		☐ 20-29		☐ 30-39		☐ 40-49		☐ 50-60		☐ Over 60																	

BE SURE TO COMPLETE THE CUSTOMER'S PORTION OF THIS FORM AND RETAIN FOR YOUR RECORDS.

Please return this portion by facsimile or mail.

Facsimile No: (714) 522-8133

FACTORY SERVICE CENTERS

1-800-4-MAKITA

RETAIN THIS PORTION FOR YOUR RECORDS

ARIZONA 3707 E. Broadway Rd., Ste. 6 Phoenix, AZ 85040 (602) 437-2850	FLORIDA 750 East Sample Road Pompano Beach, FL 33064 (954) 476-6333	MISSOURI 9876 Watson Road St. Louis, MO 63126-2221 (314) 909-9889	PENNSYLVANIA 1704 Babcock Blvd. Pittsburgh, PA 15209 (412) 822-7370
CALIFORNIA 41850 Christy St. Fremont, CA 94538-5107 (510) 657-9881 14930 Northam St. La Mirada, CA 90638-5753 (714) 522-8088 1970 Fulton Avenue Sacramento, CA 95825 (916) 482-5197 7674 Clairemont Mesa Blvd. San Diego, CA 92111 (858) 278-4471 16735 Saticoy St., Ste. 105 Van Nuys, CA 91406 (818) 782-2440	GEORGIA 4680 River Green Parkway NW Duluth, GA 30096 (770) 476-8911 ILLINOIS 1450 Feehanville Dr. Mt. Prospect, IL 60056-6011 (847) 297-3100 MARYLAND 7397 Washington Boulevard, Suite 104 Elkridge, MD 21075 (410) 796-4401 MASSACHUSETTS 232 Providence Hwy. Westwood, MA 02090 (781) 461-9754 MINNESOTA 6427 Penn Ave. South Richfield, MN 55423 (612) 869-5199	NEBRASKA 4129 S. 84th St. Omaha, NE 68127 (402) 597-2925 NEVADA 3375 S. Decatur Blvd. Suites. 22 - 24 Las Vegas, NV 89102 (702) 368-4277 NEW JERSEY 251 Herrod Blvd. Dayton, NJ 08810-1539 (609) 655-1212 NEW YORK 4917 Genessee Street Cheektowaga, NY 14225 (716) 685-9503 OREGON 828 19th Avenue, N.W. Portland, OR 97209 (503) 222-1823	PUERTO RICO 200 Guayama St. Hato Rey, PR 00917 (787) 250-8776 TENNESSEE 1120 Elm Hill P. Suile 170 Nashville, TN 372 (615) 248-3321 TEXAS 12801 Stemmons Fwy Ste. 809 Farmers Branch, TX 75234 (972) 243-1150 12701 Directors Dr. Stafford, TX 77477-3701 (281) 565-8665 3453 IH-35 North, Ste. 101 San Antonio, TX 78219 (210) 228-0676 WISCONSIN Lincoln Plaza Shopping Ctr. 2245 S. 108th St. West Allis, WI 53227 (414) 541-4776

CUSTOMER'S RECORD

When you need service: Send complete tool (prepaid) to one of the Makita Factory Service Centers listed, or to an Authorized Makita Service Center. Be sure to attach a letter to the outside of the carton detailing the problem with your tool.	Date Purchased
	Dealer's Name & Address
	Model No.
	Serial No.

WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

MAKITA LIMITED ONE YEAR WARRANTY

Warranty Policy

Every Makita tool is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects from workmanship and materials for the period of ONE YEAR from the date of original purchase. Should any trouble develop during this one year period, return the COMPLETE tool, freight prepaid, to one of Makita's Factory or Authorized Service Centers. If inspection shows the trouble is caused by defective workmanship or material, Makita will repair (or at our option, replace) without charge.

This Warranty does not apply where:

- repairs have been made or attempted by others:
- repairs are required because of normal wear and tear:
- the tool has been abused, misused or improperly maintained:
- alterations have been made to the tool.

IN NO EVENT SHALL MAKITA BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM THE SALE OR USE OF THE PRODUCT. THIS DISCLAIMER APPLIES BOTH DURING AND AFTER THE TERM OF THIS WARRANTY.

MAKITA DISCLAIMS LIABILITY FOR ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF "MERCHANTABILITY" AND "FITNESS FOR A SPECIFIC PURPOSE," AFTER THE ONE YEAR TERM OF THIS WARRANTY.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Makita Corporation
3-11-8, Sumiyoshi-cho,
Anjo, Aichi 446-8502 Japan