Register your product and get support at www.philips.com/welcome

HTS3270 HTS3377 HTS3377W



PHILIPS



Philips Consumer Lifestyle

SGP 09-CE-HTS3377W/12 (report No.)

EC DECLARATION OF CONFORMITY

We,

Philips Consumer Electronics (manufacturer's name)

Philips, Glaslaan 2, 5616 JB Eindhoven, The Netherlands (manufacturer's address)

declare under our responsibility that the electrical product:

Philips

(name)

HTS3377W/12

(type or model)

Home Theatre System with wireless

(product description)

to which this declaration relates is in conformity with the following standards:

EN 60065 : 2002 + A1 : 2006 EN 55013 : 2001 + A1 : 2003 + A2 : 2006 EN 55020 : 2007 EN 61000-3-2 : 2006-04 EN 61000-3-3 : 1995-01 + A1 : 2001-06 + A2:2005-11 EN 300 328 V1.7.1 + EN 301 489-1 V1.6.1, 489-17 V1.2.1 EN 62311 : 2008

(title and/or number and date of issue of the standards)

following the provisions of 2006/95/EC, 2004/108/EC & RTTE 1999/5/EC directives and is produced by a manufacturing organisation on ISO 9000 level.

Frank Dethier

Eindhoven, 11th March 2009 (place, date)

Frank Dethier Innovation Lab Manager Philips Leuven (signature, name and function)

Contents

Important	4
•	4
	5
	5
Your Home Theater System	7
Feature highlights	7
Product overview	8
Connect	11
	11
,	12
	13
	13
	14
•	
	15
	15
	16
_	18
Get started	19
Insert the remote control batteries	19
Find the correct viewing channel	20
Select menu display language	20
Change speaker settings	21
Use Philips EasyLink	22
Select a play source	24
Play	25
	25
,	25
,	29
7	30
, ,	30 31
,	31
, , , , , , , , , , , , , , , , , , , ,	32 32
ι ιαχ ΙΙ ΟΙΤΙ Ι αΟΙΟ	JZ
	Product overview Connect Place the Home Theater System Connect video cables Connect speaker cables to speakers Connect speaker to speaker stand Connect speakers and subwoofer Connect rear speakers to wireless receiver Connect radio antenna Connect audio cables/other devices Connect power cord Get started Insert the remote control batteries Find the correct viewing channel Select menu display language Change speaker settings Use Philips EasyLink

6	Advanced features	34
	Create MP3 audio files	34
7	Adjust sound	35
	Control the volume	35
	Select surround sound	35
	Select a preset sound	35
8	Adjust settings	36
	General setup	36
	Audio setup	38
	Video setup	40
	Preferences	42
9	Additional Information	44
	Update software	44
	Care	44
10	Specifications	45
11	Troubleshooting	47
12	Glossary	49

Glossary	49
----------	----

Contents

1 Important

Safety and important notice

Warning

- Risk of overheating! Never install the Home Theater System in a confined space. Always leave a space of at least 4 inches around the Home Theater System for ventilation. Ensure curtains or other objects never cover the ventilation slots on the Home Theater System.
- Never place the Home Theater System, remote control or batteries near naked flames or other heat sources, including direct sunlight.
- Only use this Home Theater System indoors. Keep this Home Theater System away from water, moisture and liquid-filled objects.
- Never place this Home Theater System on other electrical equipment.
- Keep away from this Home Theater System during lightning storms.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Visible and invisible laser radiation when open. Avoid exposure to beam.

(6

This product complies with the radio interference requirements of the European Community.

This product complies with the requirements of the following directives and guidelines: 2006/95/EC, 2004/108/EC.

C E (0560)

Hereby, Philips Consumer Lifestyle, declares that this Home Theater System HTS3377W is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

This product is in compliance with EEE directives.

Mains fuse (UK only)

This Home Theater System is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

- 1 Remove fuse cover and fuse.
- 2 The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.

3 Refit the fuse cover.

In order to maintain conformity to the EMC directive, the mains plug on this product must not be detached from the mains cord cable.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheeled bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on the separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences for the environment and human health.

Copyright notice



Be responsible Respect copyrights

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performers' Protection Acts 1958 to 1972.

Trademark notice



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.



DivX, DivX Ultra Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

Official DivX® Ultra Certified product. Plays all versions of DivX® video (including DivX® 6) with enhanced playback of DivX® media files and the DivX® Media Format. Plays DivX® video with menus, subtitles and audio tracks.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.



ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.




The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



• This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 - Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



English

2 Your Home Theater System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Feature highlights

Video upscaling to 1080p

Enjoy watching discs in the highest picture quality available for your HDTV. This Home Theater System offers full high-definition video playback up to 1080p resolution that provides a highly detailed picture and increased sharpness that delivers a more true-to-life picture for an amazing viewing experience.

Philips EasyLink

Your Home Theater System supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.



• Philips does not guarantee 100% interoperability with all HDMI CEC devices.

Listen to rich uncompressed multi-channel surround sound

This Home Theater System supports 5.1 channels of uncompressed audio that delivers a real-to-life sound experience as if you are listening to it live.

Hi speed USB 2.0 Link and MP3 link

Simply plug your USB device into the USB jack to play your MP3/WMA/JPEG/DivX files; or plug your portable media player to the MP3 LINK jack to enjoy the music play in superb sound quality.

Sync the audio output with the video play

Synchronise audio and video by delaying the audio output if the video signal sent to the TV is slower than the audio streams.

Create MP3 files

Convert your favorite audio tracks from an audio CD into MP3 format. The created MP3 files are saved in your USB device.

Screen Fit

View the movie in full screen display on any TV.


Region codes

You can play discs with the following region codes.

DVD region code	Countries
	Europe
	Russia

Product overview

Main unit

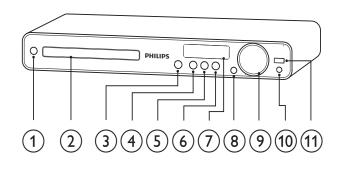

- (1) (Standby-On)
 - Turns on the Home Theater System or switches to standby mode.
- 2 Disc compartment
- ③ ▲ (Open/Close)
 - Opens or closes the disc compartment.

(4) ►II (Play/Pause)

- Starts, pauses or resumes disc play.
- In radio mode, automatically tunes radio stations during first-time setup.

(5) ■ (Stop)

- Stops disc play.
- In radio mode, erases the current preset radio station.

6 SOURCE

• Selects a media to play or listen to audio from the connected device.

7 Display panel

• Displays the current status or disc information.

8 IR sensor

• Detects signals from the remote control. Point the remote control at the IR sensor.

9 VOL

• Increases or decreases volume.


10 MP3 LINK

• Connects a portable audio player

(USB)

• Connects a USB supported device.

Remote control

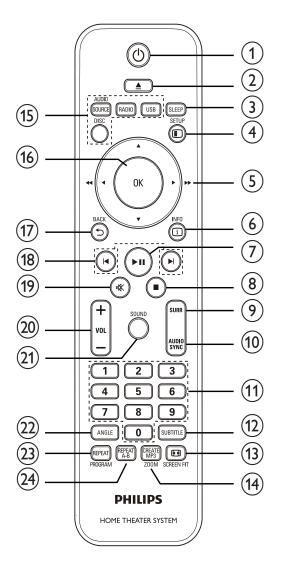

(1) (Standby-On)

- Turns on the Home Theater System or switches to standby mode.
- Press and hold to turn off the Home Theater System and all HDMI CEC compliant devices.

2 ▲ (Open/Close)

- Opens or closes the disc compartment.
- 3 SLEEP
 - Sets a delay after which the Home Theater System switches to standby.
- (4) 🗉 SETUP
 - Accesses or exits the setup menu.

5 ▲▼◀► (Navigation buttons)

- Navigates through the menus.
- Press left and right for fast backward or forward search.
- In radio mode, press up and down to tune the radio frequency.
- In radio mode, press left or right to start auto search.

6 🗉 INFO

- For discs, displays information about the current status or the disc.
- For slideshows, displays a thumbnail view of photo files.

(7) ►II (Play/Pause)

- Starts, pauses or resumes disc play.
- In radio mode, automatically tunes radio stations during first-time setup.

(8) ■ (Stop)

- Stops disc play.
- In radio mode, erases the current preset radio station.

(9) SURR (Surround Sound)

Switches to supported surround sound or stereo sound.

10 AUDIO SYNC

- Selects an audio language or channel.
- Press and hold to access the setting for audio sync, then press VOL +/- to set the audio delay time.
- (1) Numeric buttons
 - Selects an item to play.
- 12 SUBTITLE
 - Select DVD or DivX subtitle languages.

13 🖽 SCREEN FIT

• Fits the picture format to the TV screen.

(14) CREATE MP3/ZOOM

- Accesses the menu to create MP3.
- Zooms in or out of the picture.

English

(15) Source buttons

- AUDIO SOURCE: Selects an audio input source.
- **RADIO**: Switches to FM band.
- **USB**: Switches to the USB source.
- **DISC**: Switches to the disc source.

(16) OK

• Confirms an entry or selection.

(17) ➡ BACK

- Returns to a previous screen.
- For DVD, goes to the title menu.
- For VCD version 2.0 or SVCD with PBC turned on, returns to the menu during playback.

(18) ► / ► (Previous/Next)

• Skips to the previous or next title, chapter, or track.

(19) ા≪ (Mute)

- Mutes or restores audio output.
- 20 VOL +/-
 - Increases or decreases volume.
- (21) SOUND
 - Selects a predefined sound effect.

22 ANGLE

• Displays video from different camera angles.

23) REPEAT/PROGRAM

- Selects or turns off repeat or shuffle mode.
- In radio mode, resets the list of preset stations: press to manually reset; press and hold to automatically reset.

24) REPEAT A-B

• Marks the section for repeat play or turns off repeat mode.

English

3 Connect

Make the following connections to use your Home Theater System.

Basic connections:

- Video
- Speakers and subwoofer
- Wireless receiver (for HTS3377W only)
- Power

Optional connections:

- Radio antenna
- Audio
 - Audio from TV
 - Audio from cable box/recorder/ game console
- Other devices
 - Portable media player
 - USB device

Note


- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all the devices are disconnected from the power outlet.

🔆 Тір

• Different types of connectors may be used to connect this product to your TV, depending on availability and your needs. A comprehensive interactive guide to help you connect your product is available at www.connectivityguide.philips.com.

Place the Home Theater System

- Place the Home Theater System where it cannot be pushed, pulled over or knocked down. Do not place it in an enclosed cabinet.
- Be sure that you have full access to the power cord for easy disconnection of the Home Theater System from the power supply.

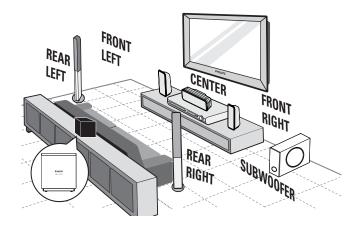

Wireless receiver is for HTS3377W only. Different set of speakers for HTS3270. (see 'Specifications' > 'Speakers').

- 1 Place this Home Theater System near the TV.
- 2 Place the speakers system at normal listening ear-level and directly parallel to the listening area.
- **3** Place the subwoofer at the corner of the room or at least three feet away from the TV.
- 4 Place the wireless receiver (for HTS3377W only) near the AC outlet and in between the rear speakers. Position the wireless receiver (with Philips logo) directly parallel to the Home Theater System.

🔆 Tip

• To avoid magnetic interference or unwanted noise, never place this Home Theater System too close to any radiation devices.

Connect video cables


Connect this Home Theater System to TV to view disc play. Select the best video connection that the TV can support.

- Option 1: Connect to the SCART jack
- Option 2: Connect to the HDMI jack (for a HDMI, DVI or HDCP-compliant TV).
- Option 3: Connect to the video (CVBS) jack (for a standard TV).

```
- Note
```

• You must connect this Home Theater System directly to a TV.

Option 1: Connect to the SCART jack

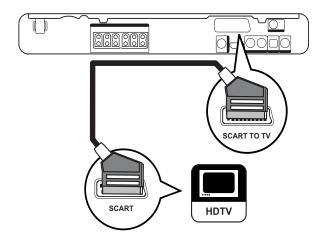


1 Connect a scart cable to the SCART TO TV jack on this Home Theater System and the SCART input jack on the TV.

- Note

- Scart connection allows TV's audio output through the speakers. Press **AUDIO SOURCE** repeatedly until 'SCART IN' is displayed on the display panel.
- This type of connection provides good picture quality.

Option 2: Connect to the HDMI jack

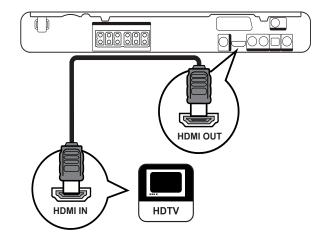

1 Connect an HDMI cable (not supplied) to the HDMI OUT jack on this Home Theater System and the HDMI input jack on the TV.

- Note


• If your device supports HDMI CEC, you can control compliant devices with a single remote control. (see 'Get started' > 'Use Philips EasyLink').

⊁ Тір

- If the TV has a DVI connection only, connect via a HDMI/DVI adaptor. Connect an audio cable for sound output.
- You can optimise the video output. (see 'Adjust settings' > 'Video setup' > [HDMI Setup]).
- This type of connection provides the best picture quality.

Connect

Option 3: Connect to the Video (CVBS) jack

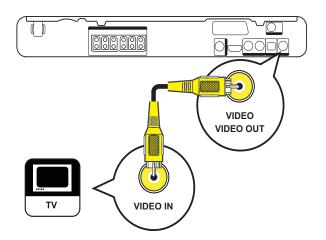


1 Connect a composite video cable (not supplied) to the VIDEO jack on this Home Theater System and the VIDEO input jack on the TV.

Note

- The video input jack on the TV might be labeled as A/V IN, VIDEO IN, COMPOSITE or BASEBAND.
 This type of connection provides standard picture
- This type of connection provides standard picture quality.

Connect speaker cables to speakers

 
For the rear speakers of HTS3377 and HTS3377W only



1 Connect the speaker cables to the matching color jacks on the speakers (or speaker stands).

Connect speaker to speaker stand


For the rear speakers of HTS3377 and HTS3377W only

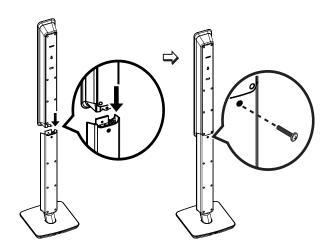


1 Attach the speakers to the speaker stands and secure the position with screws.

Connect speakers and subwoofer

For HTS3377W only

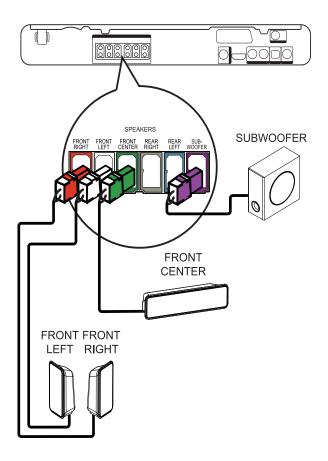

For HTS3270 and HTS3377 (HTS3270 has a different set of speakers)

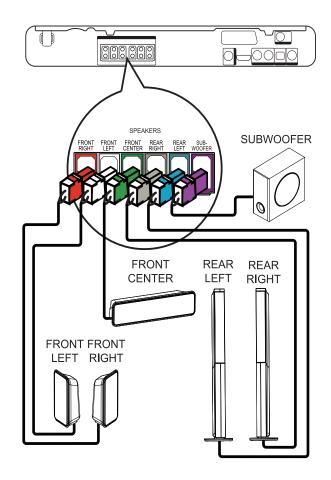

1 Connect the speakers and subwoofer to the matching jacks on the Home Theater System.


Note

• Ensure that the colors of the plugs and jacks are matched.

Connect


Connect rear speakers to wireless receiver

For the rear speakers of HTS3377W only

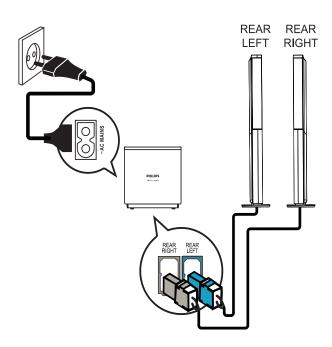

1 Connect the rear left and right speakers to the matching jacks at the bottom of the wireless receiver.

Connect radio antenna

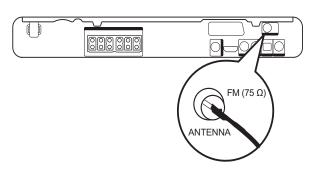

- 1 Connect the FM antenna to the FM75 Ω jack on this Home Theater System (for some models, this cable is already connected).
- 2 Extend the FM antenna and fix its ends to the wall.




• For better FM stereo reception, connect to an external FM antenna.

Connect audio cables/other devices

Route the audio from other devices to this Home Theater System to enjoy audio play with multi-channel surround capabilities.

Connect audio from TV

(also used for EasyLink control)

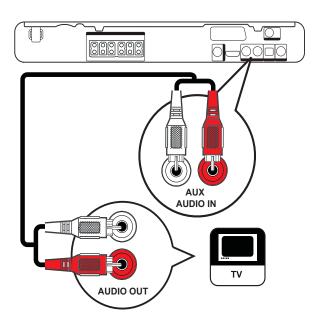

1 Connect the audio cables (not supplied) to the AUDIO IN-AUX jacks on the Home Theater System and the AUDIO output jacks on the TV.


- Note

• To listen to the audio output from this connection, press **AUDIO SOURCE** repeatedly until 'AUX' is displayed on the display panel.

Connect audio from cable box/ recorder/game console

You can choose to connect to analog or digital jack depending on the device capabilities.

Connect to analog jacks

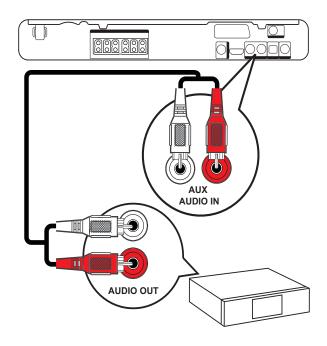


1 Connect the audio cables (not supplied) to the AUDIO IN-AUX jacks on the Home Theater System and the AUDIO output jacks on the device.

Note

 To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'AUX' is displayed on the display panel.

Connect to coaxial jack

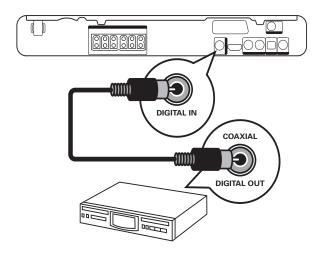


1 Connect a coaxial cable (not supplied) to the COAXIAL DIGITAL-IN jack on the Home Theater System and the COAXIAL/DIGITAL output jack on the device.

Note

To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'COAX IN' is displayed on the display panel.

Connect to optical jack

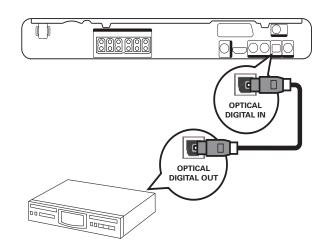


1 Connect an optical cable (not supplied) to the **OPTICAL DIGITAL-IN** jack on the Home Theater System and the OPTICAL/SPDIF output jack on the device.



Note

To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'OPTI IN' is displayed on the display panel.


Connect portable media player

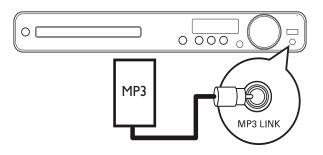

- 1 Connect a 3.5mm stereo audio cable (not supplied) to the **MP3 LINK** jack on this Home Theater System and the phone jack on the portable media player (such as MP3 player).
 - Note

• To listen to the audio output from this connection, press **AUDIO SOURCE** repeatedly until 'MP3 LINK' is displayed on the display panel.

Connect USB device

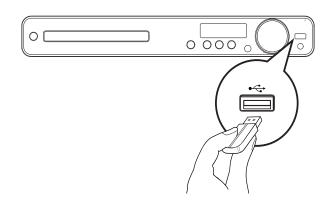

1 Connect the USB device to ⊷↔ USB jack on this Home Theater System.




- This Home Theater System can only play/view MP3, WMA, DivX (Ultra) or JPEG files that are stored on such devices.
- Press **USB** to access the content and play the files.

Connect power cord


Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the Home Theater System.
- 1 Connect the power cords from the Home Theater System, wireless receiver and other devices to the power outlets when all the required connections are done.
 - → The wireless indicator on the wireless receiver light up. (Only applicable for HTS3377W)
 - → The Home Theater System is ready to be set up for use.

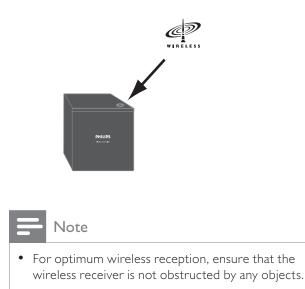

4 Get started

Insert the remote control batteries

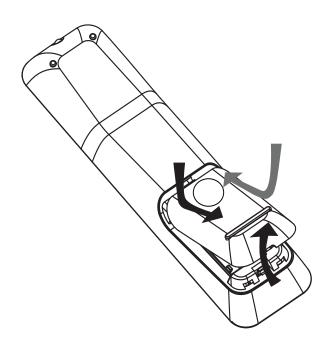

- 1 Slide the battery cover off the back of the remote control.
- 2 Insert the 2 supplied batteries (AAA). Be sure the + and - ends of the batteries line up with the markings inside the case.
- **3** Slide the cover back into position.


Note

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed off properly.

Control a play source

- 1 Press **RADIO**, **USB** or **DISC** button to select the source you wish to control.
- 2 Select the desired function (for example $| \triangleleft, \rangle |$).

Navigate through the menu

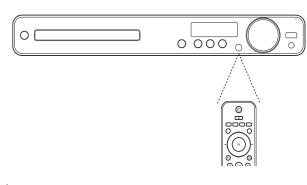

- 1 Point the remote control directly at the remote sensor on the Home Theater System and select the desired function.
- 2 Press the following buttons on the remote control to navigate through the on-screen menus.

Button	Action
▲▼	Move up or down
↓	Move left or right
ОК	Confirm a selection
1 2 3 4 5 6 7 8 9 0 0	Enter numbers

English

Find the correct viewing channel

- 1 Press © to turn on the Home Theater System.
- 2 Press **DISC** to switch to disc mode.
- **3** Turn on the TV and switch to the correct video-in channel in one of the following ways:
 - Go to the lowest channel on your TV, then press the Channel Down button until you see the Philips screen.
 - Press SOURCE button repeatedly on the remote control of your TV.
 - 🔆 Тір
 - The video-in channel is between the lowest and highest channels and may be called FRONT, A/V IN, VIDEO, HDMI etc. See the TV user manual on how to select the correct input on the TV.

Select menu display language

- Note

• Skip this setting if this Home Theater System is connected to a HDMI CEC compliant TV. It switches automatically to the same OSD menu language as per your TV setting.

General Setup	
EasyLink Setup	O Auto
Disc Lock	O English
Display Dim	O Dansk
OSD Language	O Nederlands
Screen Saver	O Suomi
Sleep Timer	O Français
DivX(R) VOD Code	O Deutsch
	O Italiano ▼

1 Press DISC.

- 2 Press 🗈 SETUP.
 - → [General Setup] menu is displayed.

3 Press ►.

4

- Press ▲▼ to select **[OSD Language]** in the menu, then press ►.
 - The language options are different depending on your country or region. It may not correspond to the illustration shown here.
- 5 Press ▲▼ to select a language, then press OK.

🔆 Тір

 You can set the default language for DVD disc menu (see 'Adjust settings' > 'Preferences' > [Disc Menu]).

Change speaker settings

Ideally, the distance between listening position and all the speakers should be the same. If not, change the speaker settings based on their distance from the listening position to obtain the best possible surround sound.

Audio Setup	
Speakers Volume	
Speakers Delay	
HDMI Audio	
CD Upsampling	
Audio Sync	

- 1 Press DISC.
- 2 Press I SETUP.
- 3 Press ▼ to select [Audio Setup] in the menu, then press ►.
 - If the speaker setup option is not accessible, press ■ twice before you press ■ SETUP.

To set the speakers level

1 Select [Speakers Volume] in the menu, then press ►.

Speakers Volume Setup	
Front Left	OdB
Front Right	0dB
Center	0dB
Subwoofer	0dB
Rear Left	0dB
Rear Right	0dB

- 2 Press ◀► to change the volume level, then press OK.
 - → The test tone is emitted from the speaker.
 - Repeat the above setting for other speakers until all the speakers output level sounds equally balance.
 - To exit the menu, press 🗈 SETUP.

To set the output delay time (center and rear speakers only)

1 Select [Speakers Delay] in the menu, then press ►.

Speakers Distance Setup

OMS
0MS
0MS

- 2 Press ↔ to set the delay time, then press OK.
 - Repeat the above setting for other speakers until the sound output from different speakers reach the listening position at the same time.
 - To exit the menu, press 🗈 SETUP.

🗶 Тір

- Set a longer delay time if the center speaker or rear speaker is closer to the listening position than the front speaker.
- Allow 1ms setting for every 1 foot distance between the speaker and the listening position.

Use Philips EasyLink

Your Home Theater System supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.

- Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.
- 1 Turn on the HDMI CEC operations on the TV and other connected devices. See TVs/devices manual for details.
- 2 You can now enjoy the following Philips EasyLink controls.

EasyLink

You can turn off or turn on all EasyLink features.

One-touch play

When you connect your Home Theater System to devices that support one-touch play, you can control your Home Theater System and the devices with one remote control. For example, when you press Play on your Home Theater System remote control, your TV automatically switches to the correct channel to show the DVD content. To enable One-touch play, a video disc must be placed in the disc compartment before operation.

One-touch standby

When you connect your Home Theater System to devices that support standby, you can use your Home Theater System remote control to put your Home Theater System and all connected HDMI devices in standby mode. You can perform one-touch standby using the remote control from any of the connected HDMI devices.

System Audio Control

When you connect your Home Theater System to HDMI CEC compliant devices, your Home Theater System can switch automatically to play audio from the connected device.

To use one-touch audio, you must map the audio input from the connected device to your Home Theater System.

Audio Input Mapping

When you map the audio input correctly, this Home Theater System switches to the audio from the played device automatically.

Map the audio inputs to the connected devices



Note

Before you start, ensure that the audio output of the HDMI TV and other HDMI devices have been connected to the audio input jacks on this Home Theater System.

General Setup	
EasyLink Setup	O EasyLink
Disc Lock	One Touch Play
Display Dim	One Touch Standby
OSD Language	O System Audio Control
Screen Saver	O Audio Input Mapping
Sleep Timer	
DivX(R) VOD Code	

- 1 Press **DISC**.
- 2 Press E SETUP.
 - → [General Setup] menu is displayed.
- 3 Press ▶.
- 4 Select [EasyLink Setup], then press ►
 - [One Touch Play] and [One Touch Standby] functions are turned on by default in the factory.
- 5 Select [System Audio Control] > [On], then press **OK** to start scanning devices.
 - → Once complete, audio input mapping menu is displayed.

Audio Input Mapping


Scart In	O [TV]
Aux	O [DVD 3400]
Optical In	O other (Non-HDMI)
Coaxial In	

For example, if the TV audio is connected to the AUX jack on this Home Theater System, select [Aux] and map with the TV (brand name) at the right panel.

- 6 Select the audio input of this Home Theater System that is used to connect to other HDMI device (e.g. AUX, SCART IN), then press \blacktriangleright .
- 7 Select the correct connected device, then press OK.
 - → Repeat steps 5–7 to map other connected devices.
- 8 Press **E SETUP** to exit the menu.


Select a play source

On the main unit

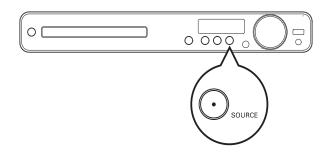

 Press the SOURCE button repeatedly to select: DISC > USB > FM > SCART IN > AUX > COAX IN > OPTI IN > MP3 LINK > DISC ...

 On the remote control



• Press AUDIO SOURCE repeatedly to switch to the connected audio source:

Display	Device connected to
AUX	AUDIO IN-AUX sockets
SCART IN	SCART TO TV socket
COAX IN	COAXIAL DIGITAL IN
	socket
OPTI IN	OPTICAL DIGITAL IN
	socket
MP3 LINK	MP3 LINK socket

- Press **RADIO** to switch to FM band.
- Press **USB** to switch to USB mode.
- Press **DISC** to switch to disc mode.

5 Play

Play a disc

Caution

- Never place any objects other than discs into the disc compartment.
- Never touch the disc optical lens inside the disc compartment.

1 Press \blacktriangle to open the disc compartment.

- 2 Insert a disc with its label facing up.
 - For double-sided disc, load the side to play faces up.
- 3 Press ≜ to close the disc compartment and start disc play.
 - To view disc play, turn on the TV to the correct viewing channel for this Home Theater System.
 - To stop disc play, press ■.

Note

- Check the types of discs supported. (see 'Specifications' > 'Playback media').
- If the password entry menu is displayed, enter the password before you can play the locked or restricted disc.
- If you pause or stop a disc for about 5 minutes, the screen saver activates. To deactivate the screen saver, press **DISC**.
- After you pause or stop a disc and no buttons are pressed within 15 minutes, this Home Theater System automatically switches to standby mode.

Play video

Note

• For video disc, playback always resumes from the point where it was last stopped. To start play from the beginning, press I◀ while the message is displayed.

Control video play

- 1 Play a title.
- 2 Use the remote control to control the title.

Button	Action
► II	Starts, pauses or resumes disc
	play.
	Stops disc play.
	Skips to the next title or chapter.
◀	Skips to the beginning of the
	current title or chapter. Press
	twice to jump to the previous
	title or chapter.
◀◀ / ▶▶	Searches fast-forward (right)
	or fast-backward (left). Press
	repeatedly to change the search
	speed.
	In pause mode, slow motion
	backward or forward play.
▲ / ▼	Searches slow-forward (down)
	or slow-backward (up). Press
	repeatedly to change the search
	speed.
	For VCD, only slow-forward play
	is possible.

Play

Change video play


- **1** Play a title.
- 2 Use the remote control to change the video play.

Button	Action	
AUDIO	Selects an audio language or	
SYNC	channel on a disc.	
SUBTITLE	Selects the subtitle language on	
	a disc.	
REPEAT	Selects or turns off repeat or	
	shuffle mode.	
	Repeat options vary depending	
	on the disc type.	
	For VCDs, repeat play is only	
	possible if the PBC mode is	
	turned off.	
ZOOM	Zooms in or out of the picture.	
	To pan through the zoomed	
	image, press the Navigation	
	buttons.	
INFO	Displays the current status or	
	disc information.	
	You can change the video	
	play options here without	
	interrupting disc play.	
	Fits the picture format to the	
SCREEN	TV screen.	
FIT	You can watch the movie in full	
	screen on TV.	

Note

• Some operations may not work with some discs. See the information accompanying the disc for details.

Access DVD menu

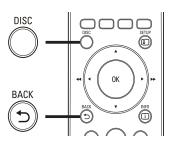

1 Press **DISC** to access disc main menu.

2 Select a play option, then press OK.

- In some menus, press the **Numeric buttons** to input your selection.
- To return to the title menu during play, press → BACK.

Play

Access VCD menu or preview menu

The PBC (Playback Control) for VCD is activated by default in the factory. When you load in a VCD, the contents menu is displayed.

- 1 Press ▲▼ to select a play option, then press **OK** to start play.
 - If PBC is off, it skips the menu and starts play from the first title.
 - To return to the menu during play, press **DBACK** (only possible if the PBC mode is on).
- 2 Press **DISC** to preview the contents of the disc.
 - To exit the menu, press **DISC**.

Select Digest Type:		
Track Digest Disc Interval		

Track Interval

3 Select a preview play option, then press OK

[Track Digest]

Plays the first few seconds of each track in a disc.

[Disc Interval]

Divides the total disc time by six and play the first few seconds of these intervals.

[Track Interval]


Divides the current track by six and play the first few seconds of these intervals. This option is not available in stop mode.

Tip

You can change the PBC setting (see 'Adjust settings' > 'Preferences' > [PBC]).

Sync audio output with video play

If the video play is slower than the audio output (sound does not match with the pictures), you can delay the audio output to match the video.

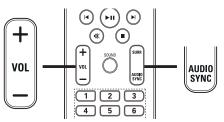


- 1 Press and hold AUDIO SYNC until 'AUDIO SYNC' is displayed.
- 2 Within five seconds, press VOL +/- to set the delay time for audio output.



Note

• If the volume control is not used within five seconds, it resumes normal volume control function.

 Quick skip play to a specific time



1 During play, press 🛈 INFO.

 \mapsto The disc status menu is displayed.

- 2 Press \blacktriangle to view information, then press OK.
 - **[TT Time]** (title time)
 - [Ch Time] (chapter time)
 - [Disc Time] (disc time)
 - [Track Time] (track time)
- 3 Press the Numeric buttons to enter the time where you want to skip to, then press **OK**.

Note

• The options are different depending on the disc type.

Repeat play a specific section

- 1 During play, press **REPEAT A-B** where you want to set as the starting point.
- 2 Press **REPEAT A-B** again to set the ending point.
 - → Repeat play starts.
- **3** To cancel repeat play, press **REPEAT A-B** again.



• The marked section for repeat play is only possible within a track/title.

View video play from different camera angles

- During play, press □ INFO.
 → The disc status menu is displayed.
- 2 Select [Angle], then press ►.
- **3** Press the Numeric buttons to select an angle, then press OK.
 - ightarrow Play changes to the selected angle.

- Note

• Applicable only to discs contain multi-angle scenes.

Play DivX® video

DivX video is a digital media format that retains high quality despite a high rate of compression. You can enjoy DivX video on this DivX® Certified Home Theater System.

- 1 Insert a disc or USB that contains the DivX videos.
- 2 Press DISC or USB.
 - \mapsto A contents menu is displayed.
- 3 Select a title to play, then press ► II.
- **4** Use the remote control to control the title.

Button	Action	
AUDIO	Selects an audio language or	
SYNC	channel.	
SUBTITLE	Select DVD or DivX subtitle	
	languages.	
	Stops play.	
	For DivX Ultra video, press	
	this button again to display the	
	contents menu.	
INFO	Displays DivX Ultra video	
	information.	

- Note

- You can only play DivX videos that were rented or purchased with the DivX registration code of this Home Theater System (see 'Adjust settings' > 'General setup' > [DivX(R) VOD Code]).
- You can play DivX video files of up to 4GB.
- If the subtitle does not appear correctly, change the character set (see 'Adjust settings' > 'Preferences' > [DivX Subtitle]).
- This Home Theater System can display up to 45 characters in the subtitle.

Play music

Control audio track play

- 1 Play a track.
- 2 Use the remote control to control the track.

Button	Action
►II	Starts, pauses or resumes
	disc play.
	Stops disc play.
	Skips to the next track.
	Skips to the beginning of
	the current track. Press
	twice to jump to the
	previous track.
1 2 3 4 5 6 7 8 9 0 0	Selects an item to play.
◀◀ / ▶▶	Searches fast-forward
	(right) or fast-backward
	(left). Press repeatedly to
	change the search speed.
REPEAT	Selects or turns off repeat
	or shuffle mode.

Play MP3/WMA music

MP3/WMA is a type of highly compressed audio file (files with .mp3 or .wma extensions).

- 1 Insert a disc or USB that contains the MP3/WMA music.
- 2 Press DISC or USB.

 \mapsto A contents menu is displayed.

- **3** Select a folder, then press **OK**.
- 4 Select a track to play, then press ► II.
 - To return to the main menu, press → BACK or press ▲ until 'Previous' folder is selected, then press OK.

Note

- For disc recorded in multiple sessions, only the first session is played.
- This Home Theater System does not support MP3PRO audio format.
- If any special characters are present in the MP3 track name (ID3) or album name, it might not be displayed correctly on the screen because these characters are not supported.
- Some WMA files are protected by Digital Rights Management and cannot be played on this Home Theater System.
- Folders/files that exceed the supported limit of this Home Theater System will not be displayed or played.

🔆 Тір

 You can select the display of data contents, view folders or files (see 'Adjust settings' > 'Preferences' > [MP3/JPEG Display]). Play

Play photo

Play photo as slideshow

This Home Theater System can play JPEG photos (files with .jpeg or .jpg extensions).

- 1 Insert a disc or USB that contains the JPEG photos.
- 2 Press **DISC** or **USB**.
 - → Slideshow begins (for Kodak disc) or a contents menu (for JPEG disc) is displayed.
- 3 Select the folder/album you want to play.
 - To preview the photos in the folder/ album, press 🗈 INFO.



- To go to previous or next screen • display, press ◀ / ▶.
- To select a photo, press the Navigation buttons.
- To display the selected photo only, press OK.
- 4 Press ▶II to start slideshow play.
 - To return to the menu, press ➡ BACK.



Note

- You may require longer time to display the disc content on the TV due to the large number of songs/ photos compiled onto one disc.
- If the JPEG photo is not recorded with an 'exif' type file, the actual thumbnail picture is not be shown on the display. It is replaced by a 'blue mountain' thumbnail picture.
- This Home Theater System can only display digital camera pictures according to the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG and pictures in formats other than JPEG, or sound clips associated with pictures.
- Folders/files that exceed the supported limit of this Home Theater System are not displayed or played.

Play

Control photo play

- 1 Play photo slideshow.
- 2 Use the remote control to control the photo.

Button	Action	
•	Skips to the previous photo.	
•	Skips to the next photo.	
A	Rotates the photo clockwise.	
▼	Rotates the photo anti-	
	clockwise.	
ZOOM	Zooms in or out of the	
	picture.	
	Play pause in zoom mode.	
	Stops play.	

Play musical slideshow


Play MP3/WMA music files and JPEG photo files simultaneously to create musical slideshow. The MP3/WMA and JPEG files must be stored on the same disc or USB device.

- 1 Play MP3/WMA music.
- 2 Navigate to the photo folder/album and press **OK** to start slideshow play.
 - ➡ Slideshow begins and continues till the end of the photo folder or album.
 - → Audio continues to play till the end of the disc.
 - To stop slideshow play, press■.
 - To stop music play, press again.

Play from USB device

This Home Theater System plays/views MP3, WMA, DivX (Ultra) or JPEG files on the following USB devices:

- digital camera that complies with the PTP standard
- flash drive
- memory card reader
- HDD (external power source needed)

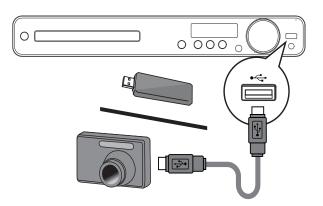


- 1 Connect a USB device to the ⊷↔ (USB) jack.
- 2 Press USB.
 - \mapsto A contents menu is displayed.
- 3 Select a file to play, then press ►II.
 → Play starts.
 - To stop play, press or remove the USB device.

- Note

- If the device does not fit into the USB jack, connect it through a USB extension cable.
- If you connect a multiple USB card/device reader, only one card/device can be accessed.

Play from portable media player

Simply connect your portable media player (e.g. MP3 player) to this Home Theater System to enjoy superb sound quality from your music collections.

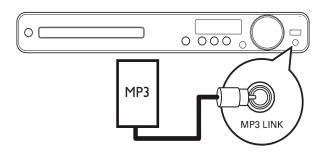


- 1 Connect a 3.5mm stereo audio cable (not supplied) from the **MP3 LINK** jack on this Home Theater System to the 'headphone' jack on the portable media player.
- 2 Press AUDIO SOURCE repeatedly until 'MP3 LINK' is displayed.
- **3** Start play on your portable media player.
 - To stop play, press **STOP** on the portable media player.

- Control playback is only possible on the portable media player.
- Stop play on the portable media player before you switch to other play media/source.

Play from radio

Check if the FM antenna has been connected to this Home Theater System. If not, connect the supplied FM antenna to the FM75 Ω jack and fix its ends to the wall.

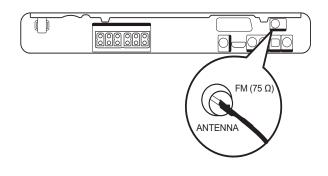

🔆 Тір

- For better FM stereo reception, connect an external FM antenna (not supplied).
- Position the antenna as far away as possible from your TV, VCR or other radiation source to prevent interference.

First time tuning

When you access to radio mode for the first time, follow the instructions to install the radio stations.

- 1 Press RADIO.
 - → 'AUTO INSTALL ... PRESS PLAY' is displayed.
- 2 Press ►II.
 - \mapsto All detected radio stations are stored.
 - → Once complete, it tunes to the first preset radio station.
 - To stop auto tuning, press ■.

- Note

- This Home Theater System can store up to a maximum of 40 radio stations.
- If auto installation is not activated or less than 5 radio stations are stored, you will be prompted to install the radio stations again.

Note

Listen to radio

- 1 Press RADIO.
- 2 Use the remote control to control the radio.

Button	Action	
	Selects a preset radio station.	
AV	Tunes the radio frequency up or	
	down.	
Press and hold this button to		
	erase the current radio station	
	from the preset list.	
	The preset number for other	
	radio stations remain unchanged.	

Reinstall all the radio stations

- 1 Press RADIO.
- 2 Press and hold **PROGRAM** for more than 5 seconds.
 - → All previously stored radio stations are replaced.

- Note

• Check the radio antenna connection if no stereo signal is detected or less than 5 stations are detected during radio installation.

Search and store radio stations individually

- 1 Press RADIO.
- 2 Press ◄◀ / ►►.
 - → It starts searching until a radio station is detected.
- **3** Repeat step 2 until you tune to the radio station you wish to store.
 - To finetune the radio frequency, press ▲ / ▼.

4 Press **PROGRAM**.

- \mapsto The preset station number blinks.
- ➡ If no action is carried out within 20 seconds after the above step, it exits the preset mode.
- 5 Press I / → (or the Numeric buttons) to select a preset number to store.
- 6 Press **PROGRAM** to confirm.

- Note

• If the FM radio station transmits RDS (Radio Data System) data, the name of the radio station is displayed.

6 Advanced features

Create MP3 audio files

You can convert audio CDs into MP3 audio files with this Home Theater System. The created MP3 audio files are saved in your USB device.

Option	Description	
[Speed]	Selects the write-to-file speed.	
	If [Normal] speed is selected,	
	music play can be heard while	
	creating the MP3 file.	
[Bitrate]	Selects the quality level. Higher	
	bitrate for better sound quality	
	and bigger file size.	
	Default setting is [128kbps] .	

CREATE MP3			
OPTI	ONS	TRA	СК
Speed	Normal	O Track01	04:14
Bitrate	128kbps	O Track02	04:17
		O Track03	03:58
		O Track04	04:51
		O Track05	03:53
SUMMARY		O Track06	04:09
Select Track 0		O Track07	04:38
Time	00:00	· ·	
Start	Exit	Select All	Deselect All

- 1 Insert an audio CD. (CDDA/HDCD)
- 2 Connect the USB flash drive to ↔ (USB) jack on this Home Theater System.
- **3** During disc play, press **CREATE MP3**.
- 4 Select the conversion options in the [OPTIONS] panel, then press OK.
- 5 Press ► to access the **[TRACK]** panel.

- 6 Select the audio track, then press OK.
 - To select another track, repeat step 6.
 - To select all tracks, select **[Select All]** in the menu and press **OK**.
 - To deselect all tracks, select
 [Deselect all] in the menu and press
 OK.
- 7 Select [Start] in the menu to convert, then press OK.
 - → Once complete, a new folder is created automatically in the USB device to store all the new MP3 files.
 - To exit the menu, select **[Exit]** and press **OK**.

Note

- While you convert, do not press any buttons.
- DTS CDs and copy-protected CDs cannot be converted.
- Write-protected or password-protected USB devices cannot be used to store MP3 files.

English

7 Adjust sound

Control the volume

- 1 Press VOL +/- to increase or decrease the volume.
 - To mute, press 🕸.
 - To restore the volume, press K again or press VOL +.


Select surround sound



1 Press **SURR** repeatedly to select the best surround output that's available on the disc.

Option	Description	
5 CH	Enhances the stereo channel	
STEREO	output by duplicating the	
	sound output to the center	
	and rear speakers. Ideal for	
	party music.	
MULTI-	Multi-channel surround	
CHANNEL/	output: DTS (Digital Theater	
DPLII	Systems), Dolby Digital, and	
	Dolby Pro Logic II.	
STEREO	Stereo sound from two front	
	speakers.	

 Select a preset sound



1 Press **SOUND** repeatedly to select the sound effect that most suitable for the video or music you play.

Video/Music	Description
ACTION / ROCK	Enhance low and high range for great sounding movie effects and atmosphere. Great for action movies and
CONCERT/ CLASSIC	rock/pop music. Flat and pure sound mode. Ideal for listening to classical music and watching live concert disc.
DRAMA / JAZZ	Clear mid and high range. Recreates the atmosphere of a live club with the artist just in front of you. Good for jazz music and watching dramas.
SPORTS	Moderate mid range and surround effects for clear vocals and the atmosphere of a live sports venue. It is also ideal for video gaming.
NIGHT	Dynamically controlled sound mode suitable for watching movies at night or for nonintrusive background music.

Adjust settings 8

You can customise various kinds of settings as you prefer. Refer to the following instructions to navigate through the setup menus.

Symbol	Options
\$	[General Setup]
	[Audio Setup]
Ο	[Video Setup]
	[Preferences]
	is grayed out, it means the setting at the current state.

General setup

General Setup	
EasyLink Setup	
Disc Lock	
Display Dim	
OSD Language	
Screen Saver	
Sleep Timer	
DivX(R) VOD Code	

1 Press E SETUP. → [General Setup] menu is displayed. 2 Press ►. 3 Select an option, then press **OK**. 4

- Select a setting, then press **OK**.
 - To return to the previous menu, • press **D BACK**.
 - To exit the menu, press I SETUP.

Note

• See the explanations of the above options in the following pages.

Adjust settings

[EasyLink Setup]

If this Home Theater System is connected to HDMI CEC compliant TV/devices, all connected devices can respond to the following commands simultaneously:

Option	Description	
[EasyLink]	Turns off or on all EasyLink	
	features.	
	To disable this feature, select	
	[Off].	
[One	When you press PLAY , the	
Touch	TV and Home Theater System	
Play]	are turned on. Disc play starts	
	if there is a disc in the Home	
	Theater System.	
	To disable this feature, select	
	[Off].	
[One	If you press and hold STANDBY	
Touch for at least 3 seconds, the Hor		
Standby]	Theatre System and all the HDMI	
	CEC devices switch to standby	
	simultaneously.	
	To disable this feature, select	
	[Off].	
[System	When you play audio that is	
Audio	routed from the connected	
Control]	devices, this Home Theater	
	System switches to the	
	corresponding audio source	
	automatically.	
	To enable this feature, select	
	[On] . Then proceed to [Audio	
	Input Mapping] to scan and map	
	all the connected devices.	
[Audio	When you map the audio	
Input	input correctly, this Home	
Mapping]	Theater System switches to the	
	audio from the played device	
	automatically.	

- You must turn on the HDMI CEC operations on the TV/devices before you can enjoy the EasyLink controls. See the TV/devices manual for details.
- Philips does not guarantee 100% interoperability with all HDMI CEC compliant devices.

[Disc Lock]

Sets play restriction for a specific discs. Before you start, place the disc in the disc compartment (maximum 40 discs can be locked).

- [Lock] Restricts access to the current disc. Once activated, a password is needed to unlock and play the disc.
- **[Unlock]** Plays all discs.

🔆 Тір

 You can set or change the password (see 'Adjust settings' > 'Preferences' > [Password]).

[Display Dim]

Changes the brightness level of the display panel on this Home Theater System.

- [100%] Normal brightness.
- [70%] Medium brightness.
- [40%] Dimmest display.

[OSD Language]

Selects the default on-screen menu language.

[Screen Saver]

Turns off or on the screen saver mode. Helps to protect the TV screen from being damaged due to over exposure to a static image for too long.

- **[On]** Sets the screen saver to appear after 5 minutes of inactivity (for example, in pause or stop mode).
- [Off] Disable screen saver mode.

[Sleep Timer]

Switches to standby automatically after the preset time.

- **[15 mins]**, **[30 mins]**, **[45 mins]**, **[60 mins]** – Selects the count down time before the Home Theater System switches to standby.
- **[Off]** Disables sleep timer mode.

Note

[DivX(R) VOD Code]

Displays the DivX® registration code.



• Enter this Home Theater System DivX registration code when you rent or purchase video from www. divx.com/vod. The DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which it is registered.

Audio setup

Audio Setup

Speakers Volume	
Speakers Delay	
HDMI Audio	
CD Upsampling	
Audio Sync	

1 Press SETUP.

→ [General Setup] menu is displayed.

- 2 Press ▼ to select [Audio Setup], then press ►.
- **3** Select an option, then press **OK**.
- 4 Select a setting, then press OK.
 - To return to the previous menu, press → BACK.
 - To exit the menu, press 🗈 SETUP.

Note

• See the explanations of the above options in the following pages.

[Speakers Volume]

Sets the volume level of each speaker to get the ideal audio balance.

1) To start, press **OK**.

2) Select a speaker in the menu, then press

◆ to adjust the volume level.

3) Press **OK** to confirm and exit.

Note

• The test tone is emitted from the speaker which you adjust.

[Speakers Delay]

Sets the delay time for the center and rear speakers if they are placed closer to the listening position, so that the sound output from all speakers reach the listening position at the same time.

1) To start, press OK.

2) Select a speaker in the menu, then press

◆ to set the delay time.

3) Press **OK** to confirm and exit.



• Allow 1ms setting for every 1 foot distance between the speaker and the listening position.

[HDMI Audio]

Selects the HDMI audio setting when you connect this Home Theater System and the TV with a HDMI cable.

- **[On]** Allows audio output through the TV and the speaker system. If the audio format on the disc is not supported, it will be downmixed to two-channel sound (linear-PCM).
- **[Off]** Disables audio output from the TV. The sound is only output through the speaker system.

[CD Upsampling]

Converts the music CD to a higher sampling rate using sophisticated digital signal processing for better sound quality.

- [Off] Disables CD-upsampling.
- **[88.2kHz (X2)]** Converts the sampling rate of the CDs twice as high as the original rate.



• CD upsampling is only available in stereo mode.

[Audio Sync]

Sets the default delay time for audio output when you play a video disc.

1) To start, press OK.

2) Select a speaker delay in the menu, then

- press \blacktriangleleft to set the delay time.
- 3) Press **OK** to confirm and exit.

Video setup

Video Setup	
TV System	
TV Display	
Screen Fit	
Picture Setting	
HDMI Setup	
Closed Caption	

1 Press E SETUP.

- → [General Setup] menu is displayed.
- 2 Press ▼ to select [Video Setup], then press ▶.
- 3 Select an option, then press OK
- 4 Select a setting, then press **OK**.
 - To return to the previous menu, press **D** BACK.
 - To exit the menu, press SETUP.

Note

See the explanations of the above options in the following pages.

[TV System]

Change this setting if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- **[PAL]** For PAL-system TV.
- [NTSC] For NTSC-system TV.
- [Multi] For TV that is compatible with both PAL and NTSC.

[TV Display]

Selects one of the following display formats:



4:3 Pan Scan (PS)

16:9 (Wide Screen)

- [4:3 Pan Scan] For 4:3 screen TV: fullheight display with the trimmed sides.
- [4:3 Letter Box] For 4:3 screen TV: wide-screen display with black bars on the top and bottom of the screen.
- [16:9 Wide Screen] For wide-screen TV: display ratio 16:9.

[Screen Fit]

Fits the picture format to the TV screen to enjoy watching disc play in full screen mode.

- [Select] Displays various types of full screen format, press OK to select a suitable picture format that best fits to the TV screen.
- [Off] Returns to normal screen display.

[Picture Setting]

Selects a predefined set of picture color settings or customise the personal setting.

- **[Standard]** Original color setting.
- [Bright] Vibrant color setting.
- **[Soft]** Warm color setting.
- [Personal] Customises the color setting. Set the level of brightness, contrast, sharpness/tint and color saturation, then press OK.

[HDMI Setup]

Selects the HDMI video setting when you connect this Home Theater System and the TV with a HDMI cable.

• [Wide Screen Format] – Defines the wide screen format for disc play.

Option	Description
[Superwide]	Center position
	of the screen is
	stretched less than
	the side. Applicable
	only to 720p
	and above video
	resolution setting.
[4:3 Pillar Box]	No stretching of
	the picture. Black
	bars are displayed
	on both sides of the
	screen.
[Off]	Picture is displayed
	according to the
	format of the disc.

Note

• This setting is only available if you have set the **[TV Display]** setting to **[16:9 Wide Screen]**.

• **[HDMI Video]** – Selects the HDMI video output resolution that is compatible with your TV display capability.

Option	Description
[Auto]	Detects and selects
	the best supported
	video resolution
	automatically.
[480i], [576i],	Selects a video
[480p], [576p],	resolution that is best
[720p] , [1080i] ,	supported by the TV.
[1080p]	See the TV manual for
	details.

- Note

If the setting is not compatible with your TV, a blank screen appears. Wait for 15 seconds for auto recover or switch to its default mode as follows: 1) Press ▲.
 2) Press ◄. 3) Press ZOOM.

[Closed Caption]

Turns off or on display captions.

- **[On]** Shows the sound effects in subtitles. Applicable only to discs with Closed Caption information included and the TV supports this feature.
- **[Off]** Disables closed caption.

Preferences

- Note

• Stop disc play before you can access to [Preferences].

Preferences		
Audio		
Subtitle		
Disc Menu		
Parental		
PBC		
MP3/JPEG Display		
Password		
DivX Subtitle	▼	

1 Press SETUP.

- → [General Setup] menu is displayed.
- 2 Press ▼ to select [Preferences], then press ►.
- **3** Select an option, then press **OK**.
- 4 Select a setting, then press OK.
 - To return to the previous menu, press **🕁 BACK**.
 - To exit the menu, press 🗈 SETUP.

- Note

• See the explanations of the above options in the following pages.

[Audio]

Selects the default audio language for disc play.

[Subtitle]

Selects the default subtitle language for disc play.

[Disc Menu]

Selects the language for disc menu.



14000

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some discs, the subtitle/audio language can only be changed from the disc menu.
- To select the languages that are not listed in the menu, select **[Others]**. Then check the Language Code list at the back of this user manual and enter the respective 4-digit language code.

[Parental]

Restricts access to discs that are unsuitable for children. These types of discs must be recorded with ratings.

1) Press OK.

2) Select a rating level, then press OK.

3) Press the **Numeric buttons** to enter the password.

Note

- Rated discs above the level you set in [Parental] require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select '8'.
- Some discs have ratings printed on them but are not recorded with ratings. This function has no effect on such discs.



• You can set or change the password (see 'Preferences' > [Password]).

[PBC]

Turns off or on the content menu of VCDs/ SVCDs with PBC (playback control) feature.

- **[On]** Displays index menu when you load a disc for play.
- **[Off]** Skips the menu and start play from the first title.

[MP3/JPEG Display]

Selects to display the folders or display all the files.

- **[View Folders]** Displays the folders of MP3/WMA files.
- [View Files] Displays all the files.

[Password]

Sets or changes the password for locked discs and play restricted DVDs.

Change Password	
Old Password	
New Password	
Confirm Password	
	ОК

1) Press the **Numeric buttons** to enter '136900' or the last set password at

[Old Password] field.

2) Enter the new password at

[New Password] field.

3) Enter the new password again at **[Confirm Password]** field.

4) Press **OK** to exit the menu.

- Note

• If you forget the password, enter '136900' before you set a new password.

[DivX Subtitle]

Selects a character set that supports the DivX subtitle.

[Standard]	English, Irish, Danish,
	Estonian, Finnish,
	French, German,
	Italian, Portuguese,
	Luxembourgish, Norwegian
	(Bokmål and Nynorsk),
	Spanish, Swedish, Turkish
[Central	Polish, Czech, Slovak,
Europe]	Albanian, Hungarian,
	Slovene, Croatian, Serbian
	(Latin script), Romanian
[Cyrillic]	Belarusian, Bulgarian,
	Ukrainian, Macedonian,
	Russian, Serbian
[Greek]	Greek
[Hebrew]	Hebrew
[Chinese(Simp)]	Simplified Chinese
[Korean]	Korean

- Note

• Ensure that the subtitle file has the exact same file name as the movie file. If for example the file name of the movie is 'Movie.avi', then you will need to name the text file 'Movie.sub' or 'Movie.srt'.

[Version Info.]

Displays the software version of this Home Theater System.

🔆 Тір

• This information is required when you want to find out if a newest software version is available at the Philips website that you may download and install on this Home Theater System.

[Default]

Resets all the settings of this Home Theater System to factory default, except for [Disc Lock], [Password] and [Parental] settings.

9 Additional Information

Update software

To check for new updates, compare the current software version of your Home Theater System with the latest software version (if available) at the Philips website.

Preferences	
Disc Menu	
Parental	
PBC	
MP3/JPEG Display	
Password	
DivX Subtitle	
Version Info.	
Default	

- 1 Press E SETUP.
- 2 Select [Preferences] > [Version Info.], then press OK.
- **4** Go to www.philips.com/support to check the latest software version available for this Home Theater System.
- 5 If the latest software version is higher than the software version of this Home Theater System, download it and store onto a CD-R or USB flash drive.
- 6 Insert the CD-R or USB flash drive to this Home Theater System.
- 7 Press **DISC** or **USB**, then follow the instruction on the TV to confirm update operation.
 - ➡ Once software update is complete, this Home Theater System turns off to standby automatically.



Note

- Do not remove the CD-R or USB when software updating is in progress.
- 8 Disconnect the power cord for a few seconds and connect again to reboot the system.

Care

Caution

• Never use solvents such as benzene, thinner, cleaners available commercially or anti-static sprays intended for discs.

Clean discs

Wipe the disc with a micro fibre cleaning cloth from the centre to the edge in a straight line movement.

Clean main unit screen

Wipe the screen surface with a micro fibre cleaning cloth.

Specifications

10 Specifications

Note

• Specification and design are subject to change without notice

Playback media

 DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture CD, MP3-CD, WMA-CD, DivX-CD, USB flash drive

Amplifier

- Total output power:
 - For HTS3270: 420 W RMS

(2 × 100 + 4 × 55) For HTS3377: 1000 W RMS (6 × 167) For HTS3377W: 1000 W RMS (wired, 6 ×167) 1000 W (wireless, 10% tolerance)

- Frequency response: 40 Hz ~ 20 kHz
- Signal-to-noise ratio > 60 dB(Aweighted)
- Input sensitivity:
 - AUX: 400 mV
 - SCART TO TV: 200 mV
 - MP3 LINK: 250 mV

Disc

- Laser Type: Semiconductor
- Disc diameter: 12cm / 8cm
- Video decording: MPEG1/ MPEG2 / DivX / DivX Ultra
- Video DAC: 12 bits, 108 MHz
- Signal system: PAL / NTSC
- Video S/N: 56 dB
- Audio DAC: 24 bits / 96 kHz
- Frequency response:
 - 4 Hz 20 kHz (44.1 kHz)
 - 4 Hz 22 kHz (48 kHz)
 - 4 Hz 44 kHz (96 kHz)

- PCM: IEC 60958
- Dolby Digital: IEC 60958, IEC 61937
- DTS: IEC 60958, IEC 61937

Radio

- Tuning range: FM 87.5–108 MHz (50 kHz)
- 26 dB quieting sensitivity: FM 22 dBf
- IF rejection ratio: FM 60 dB
- Signal-to-noise ratio: FM 50 dB
- Harmonic distortion: FM 3%
- Frequency response: FM 180 Hz~10 kHz / ±6dB
- Stereo separation: FM 26 dB (1 kHz)
- Stereo Threshold: FM 29 dB

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)
- File system: FAT12, FAT16, FAT32

Main Unit

- Power supply:
 - HTS3270: 110–240 V; ~ 50–60 Hz
 - HTS3377, HTS3377W: 220 ~ 240V; ~50 Hz
- Power consumption:
 - For HTS3270: 80 W
 - For HTS3377, HTS3377W: 180 W
- Standby power consumption: < 1 W
- Dimensions (WxHxD):
 - For HTS3270, HTS3377: 360 x 57 x 331 (mm)
 - For HTS3377W: 360 x 57 x 341 (mm)
- Weight:
 - For HTS3270, HTS3377: 2.87 kg
 - For HTS3377W: 3.01 kg

Speakers

- System: full range satellite
- Speaker impedance:
 - For HTS3270: 4 ohm (centre),
 8 ohm (Front/Rear)
 - For HTS3377, HTS3377W:
 4 ohm (centre), 4 ohm (Front/Rear)
- Speaker drivers:
 - Centre/Front/Rear: 3'' full range
- Frequency response: 150 Hz ~ 20 kHz
- Dimensions (WxHxD):
 - For HTS3270:
 - Centre/Front/Rear: 100 × 100 × 75 (mm)
 - For HTS3377, HTS3377W:
 - Centre: 244 × 103 × 74 (mm)
 - Front: 103 × 203 × 71 (mm)
 - Rear: 262 × 1199 × 264 (mm)
- Weight:
 - For HTS3270:
 - Centre: 0.66 kg
 - Front: 0.39 kg
 - Rear: 0.38 kg
 - For HTS3377, HTS3377W:
 - Centre: 0.79 kg
 - Front: 0.54 kg
 - Rear: 3.38 kg

Subwoofer

- Impedance: 4 ohm
- Speaker drivers:
 - For HTS3270: 165 mm (6.5") woofer
 - For HTS3377, HTS3377W: 165 (6.5") woofer
- Frequency response: 40 Hz ~ 150 Hz
- Dimensions (WxHxD):
 - For HTS3270: 123 × 310 × 369 (mm)
 - For HTS3377, HTS3377W: 163 x 363 x 369 (mm)
- Weight:
 - For HTS3270: 3.88 Kg
 - For HTS3377, HTS3377W: 4.85 kg

Wireless receiver (For HTS3377W only)

- Power Consumption: 50 W
- Frequency Response: 6000 Hz
- S/N Ratio: 60 dB (A-Weighted)
- Input Sensitivity: 400-600 mV
- Distortion: 1%
- Dimensions (WxHxD): 126 x 130.5 x 126 (mm)
- Weight: 1.11 kg

Laser specification

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 645 665 nm (DVD), 770 - 800 nm (CD)
- Output power: 6 mW (DVD), 7 mW (VCD/CD)
- Beam divergence: 60 degrees.

11 Troubleshooting

Warning

• Risk of electric shock. Never remove the casing of the Home Theater System.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the Home Theater System, check the following points before requesting service. If the problem remains unsolved, register your Home Theater System and get support at www.philips.com/ welcome.

If you contact Philips, you will be asked for the model and serial number of your Home Theater System. The model number and serial number are on the back or bottom of your Home Theater System. Write the numbers here:

Model No._____

Serial No._____

Main unit

The buttons on this Home Theater System do not work.

• Disconnect this Home Theater System from the power outlet for a few minutes, then connect again.

Picture

No picture.

- See TVs manual for correct video input channel selection. Change the TV channel until you see the DVD screen.
- Press **DISC**.
- If you have changed the [TV Display] setting, switch back to default mode:
 1) Press ▲ to open the disc compartment.
 2) Press ◄.
 - 3) Press **SUBTITLE**.

No picture on HDMI connection.

- Check if the HDMI cable is faulty. Replace a new HDMI cable.
- If this happens when you change the HDMI video resolution, you have to switch to its default mode:
 1) Press ▲. 2) Press ◄. 3) Press ZOOM.

Sound

No sound.

 Ensure that the audio cables are connected and press the correct input source (for example, AUDIO SOURCE, USB) to select the device you want to play.

No sound on HDMI connection.

- Sound cannot transmit through HDMI connection if the connected device is non-HDCP compliant or only DVIcompatible. Make an analog or digital audio connection.
- Ensure that the **[HDMI Audio]** setting is turned on.

No sound from TV program.

 Connect an audio cable from the AUDIO input on this Home Theater System to the AUDIO output on your TV. Then press AUDIO SOURCE repeatedly to select the corresponding audio input source.

No surround sound effect from the speakers.

- Press **SURR** to select a correct surround sound setting.
- Ensure that the source you are playing is recorded or broadcast in surround sound (Dolby Digital, etc).Sound cannot transmit through HDMI connection if the connected device is non-HDCP compliant or only DVI-compatible. Make an analog or digital audio connection.

Play

DivX video files cannot be played.

- Ensure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Ensure that the DivX video file is complete.

The aspect ratio of the screen is not aligned with the TV display setting.

• The aspect ratio is fixed on the disc.

DivX subtitle does not display correctly.

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set:
 - 1) Press 🗈 SETUP.
 - 2) Select [Preferences], then press ►.
 - 3) Select [DivX Subtitle], then press OK.

4) Select the character set that supports the subtitle.

The contents of the USB flash drive cannot be read.

- The USB flash drive format is not compatible with this Home Theater System.
- Drive is formatted with different file system which is not supported by this unit (e.g. NTFS).
- Maximum size of memory supported is 160GB.

No sound from the rear speakers and the indicator on the wireless receiver blinks continuously for more than one minute. (For HTS3377W only)

- Ensure that all required connections are done and do the following steps:
 - 1) Press **≜**.
 - 2) Press 🖸 INFO, a screen is displayed.

3) Press **1**, then press **SURR** button within 5 seconds. 'PAIRING SUCCESS' is displayed.

4) If 'PAIRING FAIL' is displayed, repeat step 1 to 3.

12 Glossary

A

Aspect ratio

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

D

DivX®

The DivX® codec is a patent-pending, MPEG-4 based video compression technology developed by DivX®, Inc. It can shrink the file size of digital video and still maintain the high visual quality.

Dolby Digital

A surround sound system developed by Dolby Laboratories that contains up to six channels of digital audio (front left and right, surround left and right, centre and subwoofer.)

Η

HDCP

High-bandwidth Digital Content Protection. This is a specification that provides a secure transmission of digital contents between different devices (to prevent unauthorised copyright.)

HDMI

High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality, completely free from noise. HDMI is fully backwardcompatible with DVI.

As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (High-bandwidth Digital Content Protection) will result in no Video or Audio output.

J IPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognised by their file extension '.jpg' or '.jpeg.'

Μ

MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

MPEG

Motion Picture Experts Group. A collection of compression systems for digital audio and video.

Ρ

PBC

Playback Control. A system where you navigate through a Video CD/Super VCD with on-screen menus that are recorded onto the disc. You can enjoy interactive playback and search.

PCM

Pulse Code Modulation. A digital audio encoding system.

Progressive scan

The progressive scan displays twice the number of frames per second than in an ordinary TV system. It offers higher picture resolution and quality.

W

WMA

Windows Media[™] Audio. Refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded with Windows Media player version 9 or Windows Media player for Windows XP. Files are recognised by their file extension '.wma.'

WMV

Windows Media Video. Refers to a video compression technology developed by Microsoft Corporation. WMV content can be encoded by using Windows Media® Encoder 9 series. Files are recognised by their file extension '.wmv'.