



UFP-420 INSTALLATION INSTRUCTIONS

Mounting Bracket (Qty 1)		<p>Westinghouse (LTV-30W2) – M4 x 20mm Phillips Head Screws (Qty 4); M4 Flat Washer (Qty 4); Flat Washer (Qty 16)</p> <p>ViewSonic (N325W) – M6 x 20mm Phillips Head Screws (Qty 4); Flat Washer (Qty 16)</p> <p>Sony (KDLV40XBR1) – M5 x 16mm Phillips Head Screws (Qty 4)</p>
--------------------------	--	---

- NOTE:** For the Westinghouse and Viewsonic displays, the following spacers must be used:
- Westinghouse** –One M4 Flat Washer must be used with each screw (between the screw and the adapter plate) for a total of four M4 Flat Washers. Four flat washers must be placed between the adapter plate and the display (four per screw; sixteen total).
- ViewSonic** –Four flat washers must be placed between the adapter plate and the display (four per screw; sixteen total).
1. Invert the flat panel display and place it on a soft, flat surface.
 2. Locate the four (4) mounting points that are found on the back of the flat panel display (Figure 1).
 3. Align the UFP-420 to the flat panel display mounting points.
 4. Use the four (4) M4 x 20mm Phillips head screws to secure the UFP-420 to the flat panel display (Figure 2). Be sure to place the 1/4" nylon washer between the bracket and the display. Do not overtighten.
 5. Mount the flat panel display to the LCD mount that was purchased, following the supplied instructions.



Figure 1

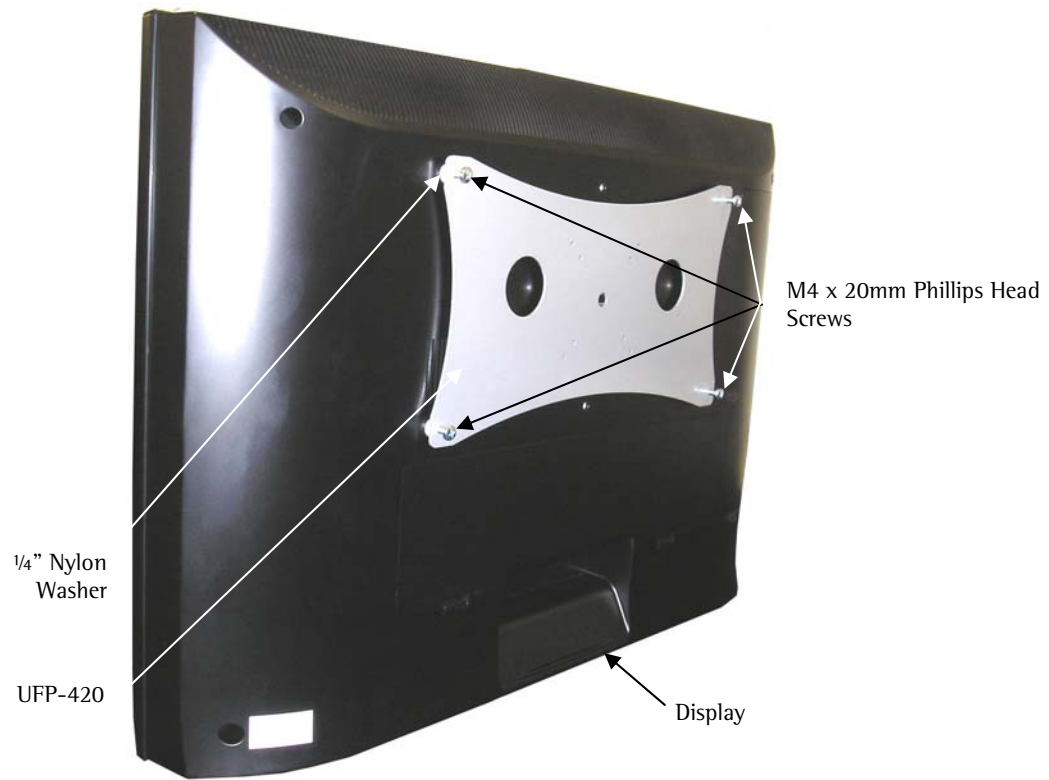


Figure 2