

Samsung GALAXY **5** **GT-I5503**  
user manual



# Using this manual

Thank you for purchasing this Samsung mobile device. This device will provide you with high quality mobile communication and entertainment based on Samsung's exceptional technology and high standards.

This user manual has been specially designed to guide you through the functions and features of your device.

- Please read this manual carefully before using your device to ensure safe and correct use.
- The descriptions in this manual are based on the default settings of your device.
- Please keep this manual for future reference.

## Instructional icons

Before you start, familiarize yourself with the icons you will see in this manual:




**Warning**—situations that could cause injury to yourself or others



**Caution**—situations that could cause damage to your device or other equipment



**Note**—notes, usage tips, or additional information

- **Refer to**—pages with related information; for example: ► p.12 (represents “see page 12”)
- **Followed by**—the order of options or menus you must select to perform a step; for example: Select **Messaging**→ **New message** (represents **Messaging**, followed by **New message**)
- [ ] **Square brackets**—device keys; for example: [] (represents the Power/End key)

## Copyright information

 
Rights to all technologies and products that comprise this device are the property of their respective owners:

- This product has an Android platform based on Linux, which can be expanded by a variety of JavaScript-based software.
- Google, Android Market, Google Talk, Gmail, and Google Maps are trademarks of Google, Inc.
- YouTube is a trademark of YouTube, LLC. YouTube® logo is a registered trademark of YouTube, LLC.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.

- Java™ is a trademark of Sun Microsystems, Inc.
- **SRS** CS Headphone and **SRS** WOW HD are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc.
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.



**CE0168!**

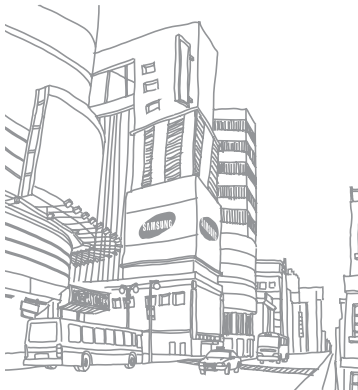

# Contents

## Assembling ..... 9

Unpack ..... 9

Install the SIM or USIM card and battery ..... 9

Charge the battery ..... 11

Insert a memory card (optional) ..... 13

Attach a hand strap (optional) ..... 15

## Getting started ..... 16

Turn your device on and off ..... 16

Get to know your device ..... 16

Use the touch screen ..... 20

Lock or unlock the touch screen and keys .. 21

Get to know the idle screen ..... 21

Access applications ..... 23

Customize your device ..... 24

Enter text ..... 26

Download applications from  
Android Market ..... 31

Download files from the web ..... 33

Synchronize data ..... 33

## Communication ..... 35

Calling ..... 35

Messages ..... 39

Gmail ..... 41

Email ..... 42

Talk ..... 44

## Entertainment ..... 45

Camera ..... 45

Gallery ..... 52

Music ..... 54

FM Radio ..... 57

## Personal information ..... 60

Contacts ..... 60

Calendar ..... 63

Memo ..... 64

## Web ..... 65

Internet ..... 65

Samsung Apps ..... 67

Layar ..... 67

Maps ..... 68

YouTube ..... 69

## Connectivity ..... 72

Bluetooth ..... 72

Wi-Fi ..... 74

AllShare ..... 75

## Tools ..... 78

Clock ..... 78

Calculator ..... 79

My Files ..... 79

Write and Go ..... 80

## Settings ..... 81

Access the Settings menu ..... 81

Wireless & networks ..... 81

Call settings ..... 82

Sound & display ..... 83

Location & security ..... 84

Applications ..... 85

Accounts & sync ..... 86

Privacy ..... 86

SD card, USB Mass Storage &  
phone storage ..... 86

Search .....	87
Language & keyboard .....	87
Accessibility .....	89
Text-to-speech .....	90
Date & time .....	90
About phone .....	90

Troubleshooting .....	91
-----------------------	----

Safety and usage information .....	97
------------------------------------	----



# Assembling

## Unpack

Check your product box for the following items:

- Mobile device
- Battery
- Travel adapter (charger)
- User manual



Use only Samsung-approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by your manufacturer's warranty.




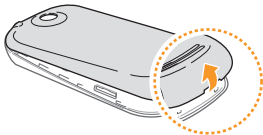 
- The items supplied with your device may vary depending on the software and accessories available in your region or offered by your service provider.
- You can purchase additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your device.

## Install the SIM or USIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services. To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card.

 
To install the SIM or USIM card and battery,

- 1 If the device is on, press and hold [>] and select **Power off** to turn it off.
- 2 Remove the cover and battery.




Be careful not to damage your fingernails when you remove the back cover.

- 3 Insert the SIM or USIM card.

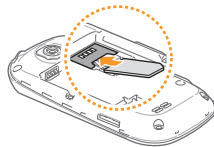


- Place the SIM or USIM card into the device with the gold-colored contacts facing down.
- If you do not insert a SIM or USIM card, you can only use your device's non-network services and some menus.

 - 4 Insert the battery.



- 5 Replace the back cover.

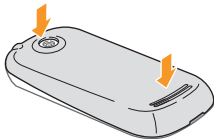 

## Charge the battery


Before using the device for the first time, you must charge the battery.

You can charge the device with the provided travel adapter or by connecting the device to a PC with a PC data cable.



 
Use only Samsung-approved chargers and cables. Unauthorized chargers or cables can cause batteries to explode or damage your device.




When your battery is low, a warning tone and a low battery pop-up message will appear. The battery icon  will also be empty and blinking. If the battery level becomes too low, the device will automatically power off. Recharge your battery to continue using your device.

## Charge with the travel adapter

- 1 Open the cover of the multifunction jack on the side of the device.
- 2 Plug the small end of the travel adapter into the multifunction jack.

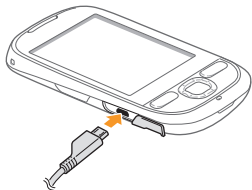

 Connecting the travel adapter improperly may cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.

- 3 Plug the large end of the travel adapter into a power outlet.




- You can use the device while it is charging, but it may take longer to fully charge the battery.
  - While charging, the device may heat up. This is normal and should not affect your device's lifespan or performance.
  - If your device is not charging properly, bring your device and the charger to a Samsung Service Center.
- 4 When the battery is fully charged (the battery icon is no longer moving), unplug the travel adapter from the device and then from the power outlet.



Do not remove the battery before removing the travel adapter. Doing this may cause damage to the device.

## › Charge with the PC data cable

Before charging, ensure that your PC is turned on.

- 1 Open the cover of the multifunction jack on the side of the device.
  - 2 Plug one end (Micro-USB) of the PC data cable into the multifunction jack.
  - 3 Plug the other end of the PC data cable into a USB port on a PC.
-  Depending on the type of PC data cable you are using, it may take some time before charging begins.
- 4 When the battery is fully charged (the battery icon is no longer moving), unplug the PC data cable from the device and then from the PC.

## Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your device accepts microSD™ or microSDHC™ memory cards with maximum capacities of 32 GB (depending on memory card manufacturer and type).

 


Samsung uses approved industry standards for memory cards, but some brands may not be fully compatible with your device. Using an incompatible memory card may damage your device or the memory card and can corrupt data stored on the card.



- Your device supports only the FAT file structure for memory cards. If you insert a card formatted with a different file structure, your device will ask you to reformat the memory card.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

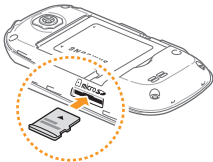

- 1 Remove the cover and battery.
- 2 Insert a memory card with the gold-colored contacts facing down.



- 3 Push the memory card in the memory card slot until it locks in place.
- 4 Replace the back cover.

## ➤ Remove the memory card

Before removing a memory card, first unmount it for safe removal.

- 1 In Idle mode, select  → **Settings** → **SD card, USB Mass Storage & phone storage** → **Unmount SD card**.
  - 2 Remove the back cover.
  - 3 Push the memory card gently until it disengages from the device.
  - 4 Pull the memory card out of the memory card slot.
  - 5 Remove the memory card.
  - 6 Replace the back cover.
-  Do not remove a memory card while the device is transferring or accessing information, as this could result in loss of data or damage to the memory card or device.

## › Format the memory card

Formatting your memory card on a PC may cause incompatibilities with your device. Format the memory card only on the device.

 
In Idle mode, select  → **Settings** → **SD card, USB Mass Storage & phone storage** → **Format SD card**.



Before formatting the memory card, remember to make backup copies of all important data stored on your device. The manufacturer's warranty does not cover loss of data resulting user actions.

## Attach a hand strap (optional)


- 1 Remove the back cover.
- 2 Slide a hand strap through the slot and hook it over the small projection.

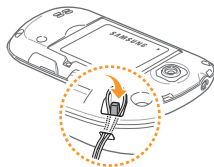

- 3 Replace the back cover.

# Getting started

## Turn your device on and off


To turn on your device, press and hold [  ]. Your device will automatically connect to the cellular network.

To turn off your device,

1 Press and hold [  ].

 
2 Select **Power off**.



 
- Follow all posted warnings and directions from authorized personnel when in areas where the use of wireless devices is restricted, such as airplanes and hospitals.
- To use your device's non-network services only, switch to Airplane mode. Press and hold [  ] and select **Airplane mode**.

## Get to know your device



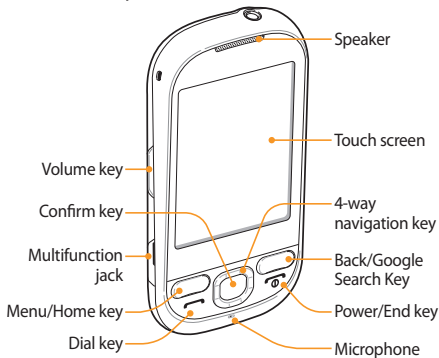

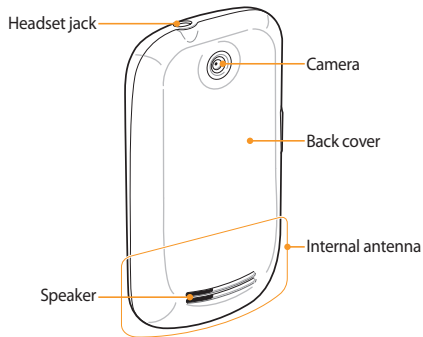





### › Device layout









   


## > Keys











Key	Function
 Menu/Home	Press [  &#9633;] to open a list of options available on the current screen; Press [  &#9633;] to return to the idle screen; Press and hold [  &#9633;] to open the list of recent applications.
 4-way navigation	Scroll through applications or menu options.
 Confirm	Confirm your input.
 Back/Google Search	Press [  &#9633;] to return to the previous screen; Press [  &#9633;] to access the Google search.
 Dial	Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers.











Key	Function
 Power	Turn on the device (press and hold); End a call; Access the quick menus (press and hold); Lock the touch screen.
 Volume	Adjust the device's volume.





## ➤ Indicator icons

 Icons shown on the display may vary depending on your region or service provider.

Icon	Definition
	Signal strength
	GPRS network connected
	EDGE network connected

Icon	Definition
	UMTS network connected
	HSDPA network connected
	Roaming (outside of normal service area)
	More status icons are available (touch the icon to see them)
	Call in progress
	Call diverting activated
	Missed call
	Speakerphone activated
	Connected to PC
	Wi-Fi activated

Icon	Definition
	Bluetooth activated
	Bluetooth device connected
	GPS activated
	Synchronized with the web
	No SIM or USIM card
	New text or multimedia message
	New email message
	New voice mail message
	Alarm activated
	Silent mode activated

Icon	Definition
	Airplane mode activated
	Music playback in progress
	Error occurred or caution required
	Battery power level
10:00	Current time

## Use the touch screen

Your device's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.



- To avoid scratching the touch screen, do not use sharp tools.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water.



- For optimal use of the touch screen, remove the screen protection film before using your device.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen.

Control your touch screen with the following actions:



- Tap: Tap once with your finger to select or launch a menu, option, or application.
- Tap and hold: Tap an item and hold it for more than 2 seconds to open a pop-up option list.
- Scroll: Tap and drag your finger up, down, left, or right to move to items on lists.
- Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item.
- Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos or web pages.



- Your device turns off the touch screen when you do not use the device for a specified period. To turn on the screen, press any key.
- You can also adjust the backlight time. From the application list, select **Settings** → **Sound & display** → **Screen timeout**.

## Lock or unlock the touch screen and keys

You can lock the touch screen and keys to prevent any unwanted device operations.

To lock, press []. To unlock, press any key and drag  to the right.

## Get to know the idle screen


When the device is in Idle mode, you will see the idle screen. From the idle screen, you can view your device's status and access applications.

The idle screen has multiple panels. Scroll left or right to switch panels. You can add new panels to the idle screen.

► p. 23

### › Add items to the idle screen

You can customize the idle screen by adding shortcuts to applications or items in applications, widgets, or folders. To add items to the idle screen,

*I* In Idle mode, press [] → **Add**.

2 Select the item category → an item:

- **Samsung Widgets/Android Widgets:** Add widgets, such as various clocks, photos, favorite contact list, and online services.
- **Shortcuts:** Add shortcuts to items, such as applications, bookmarks, and contacts.
- **Folders:** Create a new folder or add folders for your contacts.
- **Wallpapers:** Set a background image.



Available items may vary depending on the current idle screen mode.


## ➤ Move items on the idle screen

1 Tap and hold an item to move.

2 Drag the item to the location you want when the item is magnified.

## ➤ Remove items from the idle screen

1 Tap and hold an item to remove.

The item is magnified and the  icon appears on the application area, meaning that the application area at the bottom of the idle screen changes to the trash.

2 Drag the item to the trash.

3 When the item and the trash bar turn red, release the item.

## ➤ Use shortcuts panel

In Idle mode, tap the indicator icons area and drag your finger down to open the shortcuts panel. You can access the network information and the notification list. To hide the list, drag the bottom of the list up.

- **Wi-Fi:** Activate or deactivate the WLAN connection feature. ► p. 74
- **Bluetooth:** Activate or deactivate the Bluetooth wireless connection feature. ► p. 72

- **Silent:** Activate or deactivate the silent mode.
- **Vibrate:** Activate or deactivate vibration mode.



## ➤ Add or remove panels to the idle screen



You can add or remove panels of the idle screen to organize widgets according to your preferences and needs.

- 1 In Idle mode, press [] → **Edit**.
- 2 Select  to add new panels or  to remove a panel.
- 3 Press [] to return to the idle screen.

## Access applications



To access your device's applications,

- 1 In Idle mode, select  to access the application list.
  - 2 Select an application.
-  If you tap and hold an application, it will be added to the Idle screen.


- 3 Press [] to return to the previous screen; Press [] to return to the Idle screen.

## ➤ Organize applications

You can reorganize the applications in the application list by changing their order or grouping them into categories to suit your preferences and needs.

- 1 In the application list, press [] → **Edit**.
- 2 Tap and hold an application.
- 3 Drag the application to the location you want when the application is magnified.  
You can move an application icon to another main menu screen.
- 4 Press [] to save the order of applications.

## › Access recent applications

- 1 Press and hold [] to open the list of applications you have accessed recently.
- 2 Select an application to access.

## Customize your device

Get more from your device by customizing it to match your preferences.

## › Set the current time and date

- 1 In Idle mode, open the application list and select **Settings** → **Date & time**.
- 2 Set the time and date and change other options.

## › Turn on or off the touch tone




In Idle mode, open the application list and select **Settings** → **Sound & display** → **Audible selection**.

## › Adjust the volume of the ringtones

In Idle mode, press the Volume key up or down to adjust the ringtone volume.

## › Switch to the silent mode

To mute or unmute your device, do one of the followings:

- In Idle mode, press [] or select  → **Keypad**, and tap and hold #.
- In Idle mode, press and hold [] and select **Silent mode**.

## › Change your ringtone

- 1 In Idle mode, open the application list and select **Settings** → **Sound & display** → **Phone ringtone**.
- 2 Select a ringtone from the list and select **OK**.



## › Select a wallpaper for the idle screen

- 1 In Idle mode, press [≡] → **Wallpaper** → an option.
- 2 Select an image.
- 3 Select **Set wallpaper**.

If you selected an image from **Gallery**, select **Save**.



Samsung is not responsible for any use of default images or wallpapers provided on your device.

## › Activate animation for switching windows

- 1 In Idle mode, open the application list and select **Settings** → **Sound & display** → **Animation**.
- 2 Select an option from the list.

## › Adjust the brightness of the display

- 1 In Idle mode, open the application list and select **Settings** → **Sound & display** → **Brightness**.
- 2 Drag the slider to adjust the level of brightness.
- 3 Select **OK**.




The brightness level of the display will affect how quickly the device consumes battery power.

## › Set an unlock pattern

You can set an unlock pattern to prevent unauthorized people from using the device without your permission.

- 1 In Idle mode, open the application list and select **Settings** → **Location & security** → **Set unlock pattern**.
- 2 See the on-screen instructions and example patterns and select **Next** (if necessary).

- 3 Draw a pattern by dragging your finger to connect at least 4 dots.
  - 4 Select **Continue**.
  - 5 Draw the pattern again to confirm.
  - 6 Select **Confirm**.
-  Once you set an unlock pattern, your device will require the pattern each time you turn it on. If you do not want the device to require the pattern, clear the check box next to **Require pattern** in **Location & security**.

## › Lock your SIM or USIM card

You can lock your device by activating the PIN supplied with your SIM or USIM card.

- 1 In Idle mode, open the application list and select **Settings** → **Location & security** → **Set up SIM card lock** → **Lock SIM card**.
- 2 Enter your PIN and select **OK**.

Once the PIN lock is enabled, you must enter the PIN each time you turn on the device.



- If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card.
- If you block your SIM or USIM card by entering an incorrect PUK, bring the card to your service provider to unblock it.

## Enter text

You can enter text by selecting characters on the virtual keypad or by inputting handwriting on the screen.

## › Change the keyboard type

You can change the keyboard type. Tap and hold the text input field and select **Input method** → a keyboard type (Swype, Samsung keypad, or DioPen Chinese IME).

## ➤ Enter text using the Swype keyboard

- 1 Select the first character of a word and drag your finger to the second character without releasing the finger from the screen.
- 2 Pause on the second character for a moment and drag the finger to the next character.
- 3 Continue until you have finished the word.



- 4 Release the finger on the last character. The word is inserted into the text input field.
- 5 Repeat steps 1-4 to complete your text.  
Tap and hold each key to enter additional characters.

You can also use the following keys:



Number	Function
1	Change case.
2	Switch between Symbol mode and ABC/Number mode.
3	Clear your input.
4	Start a new line.
5	Insert a space.



- To hide the Swype keyboard, press [↵].
- To view help information for using the Swype keyboard, select

## › Enter text using the Samsung keypad

1 Select  → a text input method.

Option	Function
Qwerty Keypad	Select characters on the QWERTY keypad.
3x4 Keypad	Select characters on the keypad.
Handwriting box 1	Write in an appropriate column of the input box.
Handwriting box 2	Write in the input box.
Handwriting full screen	Write anywhere on the screen.

2 Enter text by selecting alphanumeric keys or writing on the screen.

You can also use the following keys:



Number	Function
1	Change case.
2	Switch between Number/Symbol mode and ABC mode.
3	Change the text input method; Access the keypad settings (tap and hold).
4	Clear your input.
5	Start a new line.
6	Insert a space.



To hide the Samsung keypad, press [].

## Enter text using the DioPen Chinese IME keyboard

1 Select  and select a text input method.

Option	Function
Qwerty Keypad	Select characters on the QWERTY keyboard.
3x4 Keypad	Select characters on the 3x4 keypad.
Handwriting box	Write in the input box.

2 Enter text by selecting alphanumeric keys or writing on the screen.

You can also use the following keys:



Number	Function
1	Change case or switch to Caps lock mode (the dot turns green).
2	Insert a space
3	Clear your input.
4	Start a new line.
5	Switch to Pinyin, English, Number or Symbol mode; Available input modes vary depending on the selected text input method.



- To hide the keyboard, select
- In the handwriting modes, you can use the following gestures:

Function	Gesture
Space	●—┐ (Chinese), ●— (English)
Enter	┐●
Backspace	—●

When entering text with the DioPen Chinese IME keyboard, you can use the following modes:

Mode	Function
Pinyin	<ol style="list-style-type: none"><li>1. Select appropriate virtual keys to enter pinyins or write pinyins.</li><li>2. Select a pinyin.</li><li>3. Scroll left or right until the character you want appears.</li><li>4. Select the character.</li></ol>

Mode	Function
English	Select an appropriate virtual key to enter characters or write characters. Select  to activate the smart input feature (word completion and word combination).
Number	Select an appropriate virtual key to enter a number or write a number.
Symbol	<ol style="list-style-type: none"><li>1. If you are using the 3x4 keyboard, select ◀ or ▶ to scroll to a symbol set you want.</li><li>2. Select an appropriate virtual key to enter a symbol or write a symbol.</li></ol>

## › Copy and paste text

While you are entering text, you can use the copy and paste feature to use text in other applications.

- 1 Tap and hold the text input field.
- 2 Select **Select text** from the option list.
- 3 Drag your finger across the text you want to highlight.
- 4 Tap and hold the highlighted text.
- 5 Select **Copy** or **Cut** to copy and paste, or cut and paste the text onto the clipboard.
- 6 In another application, tap and hold the text input field.
- 7 Select **Paste** to insert the text from the clipboard into the text field.

## Download applications from Android Market

Based on the Android platform, your device's functionality can be extended by installing additional applications. Android Market provides you an easy and quick way to shop for games and mobile applications.



- This feature may be unavailable depending on your region.
- Your device will save user files from downloaded applications to the moviNAND™ memory. To save the files to the SD memory card, connect your device to a PC and copy them from moviNAND to SD memory card.
- You cannot use some applications that use the Auto Focus feature of camera.

## ➤ Search for an application

- 1 In Idle mode, open the application list and select **Market**.
- 2 Select **Accept** when the terms and conditions appears.
- 3 Press [≡] → **Search**.
- 4 Enter a word of an application and select [Q].
- 5 Select an application you want to access.

## ➤ Install an application

- 1 In Idle mode, open the application list and select **Market**.
- 2 Select an item category → an item.

- 3 Select **Install** (for free items) or **Buy** → **OK**.  
If you select **Install**, the item will start downloading immediately.  
If you select **Buy**, you need to enter your credit card information. Follow the on-screen instructions.

## ➤ Uninstall an application

- 1 From the Android Market home screen, press [≡] → **Downloads**.
- 2 Select the item you want to delete.
- 3 Select **Uninstall** → **OK**.



## Download files from the web

When you download files or web applications from the web, your device saves them in a memory card. For checking supported file formats, see “Supported file formats.”



Files you download from the web can include viruses that will damage your device. To lessen your risk, only download files from sources you trust.



Some media files include Digital Rights Management to protect copyrights. This protection may prevent you from downloading, copying, modifying, or transferring some files.

To download files from the web,

- 1 In Idle mode, open the application list and select **Browser**.
- 2 Search for a file or application and download it.

To install applications downloaded from websites other than Android Market, you must select **Settings** → **Applications** → **Unknown sources**.

## Synchronize data

You can synchronize data (Google messages, calendar, and contacts) with various web servers and back up or restore your data.

Once the synchronization is completed, your device stays connected to the web. If any change is made on the web, the updated information will appear on your device and automatically will begin synchronization, and vice versa.

### › Set up a server account

- 1 In Idle mode, open the application list and select **Settings** → **Accounts & sync**.
- 2 Select **Add account** → an account type.

- 3 Follow the on-screen instructions to complete the account setup.

For online community services, such as Facebook, MySpace, or Twitter, enter your user name and password and select **Log in**.

### ➤ **Activate automatic sync**

If you add or edit data in any of the applications (Gmail, Calendar, and Contacts) on the web, the updated information will appear on your device, and vice versa.

- 1 In Idle mode, open the application list and select **Settings** → **Accounts & sync**.
- 2 Select **Auto-sync** → an account.
- 3 Select the applications you want to synchronize.

To exclude applications from automatic synchronization, clear the check boxes next to the applications you want.

### ➤ **Synchronize data manually**

- 1 In Idle mode, open the application list and select **Settings** → **Accounts & sync**.
- 2 Select an account.
- 3 Press [≡] → **Sync now**. Your device will start synchronizing the data you set for synchronization.

# Communication




## Calling

Learn to use calling functions, such as making and answering calls, using options available during a call or customising and using call-related features.

### › Make and answer a call

You can use the buttons or the touch screen when you make, accept, end or reject calls.

#### Make a call

- 1 In Idle mode, press [] or select  → **Keypad**, and enter an area code and a phone number.
- 2 Select  to make a call.

- 3 To end the call, press [] → **End call** or press [].



Use the phonebook to save numbers you dial frequently. ► p. 60

#### Answer a call

- 1 When a call comes in, press [].






When the device is ringing, press the Volume key to adjust the volume, or press and hold the Volume key down to mute the ringtone.

- 2 To end the call, press [] → **End call** or press [].

#### Reject a call

When a call comes in, press []. The caller will hear a busy tone.

## Call an international number

- 1 In Idle mode, press [] or select  → **Keypad**, and tap and hold **0** to insert the + character.
- 2 Enter the complete number you want to dial (country code, area code and phone number), and then select  to dial the number.

## › Use the headset


By plugging the supplied headset into the device, you can answer and mute calls:

- To answer a call, press and hold the headset button.
- To mute a call, press and hold the headset button.

## › Use options during a call







You can use the following options while a call is in progress:

- To adjust the voice volume, press the Volume key up or down.

- To activate the speakerphone feature, press [] → **Speaker**.



In noisy environments, you may have difficulty hearing some calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

- To turn off the microphone so that the other party cannot hear you, press [] → **Mute**.
- To listen and talk to the other party via the headset, press [] → **Bluetooth**.
- To place a call on hold or retrieve a held call, press [] → **Hold**.
- To dial a second call, press [] → **Add call** and then dial a new number. You must subscribe to the call waiting service to use this feature.
- To answer a second call when a call waiting tone sounds, press [] → **Hold current call & answer** to hold the first call. Alternatively, press [] → **End current call & answer** to end the first call. You must subscribe to the call waiting service to use this feature.

- To switch between the two calls, press [] → **Swap calls**.
- To end the call on hold, press [] → **Swap calls** and press [] → **End call**.
- To make a multiparty call (conference call), make or answer a second call and press [] → **Merge calls** when connected to the second party. Repeat to add more parties. You must subscribe to the multiparty call service to use this feature.

## › View and dial missed calls

Your device will display the missed call icon when you have missed calls.

Open the shortcuts panel and select a missed call. Select the call from the call log and press [] to dial.

## › Use additional features

You can use various other call-related features, such as Fixed Dialing Number (FDN) mode, or call diverting or waiting.

### Use Fixed Dialing Number (FDN) mode

In FDN mode, your device will restrict outgoing calls, except for the numbers stored in the FDN list. To activate FDN mode,

- 1 In Idle mode, open the application list and select **Settings** → **Call settings** → **Fixed Dialing Numbers** → **Enable FDN**.
- 2 Enter the PIN2 supplied with your SIM or USIM card and select **OK**.
- 3 Select **FDN list** and add contacts to be used in FDN mode.

## Set call forwarding

Call diverting is a network feature to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the device or when you are outside of the service area.

- 1 In Idle mode, open the application list and select **Settings** → **Call settings** → **Call forwarding**.
- 2 Select an option from the list.
- 3 Select a contact or enter a number to which calls will be forwarded.
- 4 Select **Enable**.  
Your setting will be sent to the network.




## Set call waiting

Call waiting is a network feature to alert you of an incoming call while you are on a previous call.

In Idle mode, open the application list and select **Settings** → **Call settings** → **Additional settings** → **Call waiting**.  
Your setting will be sent to the network.

## View call logs

You can view logs of your calls filtered by their types.

- 1 In Idle mode, press [] or select  → **Call log**.
- 2 Select a log to view its details.  
 From the detail view, you can dial the number, send a message to the number or add the number to the phonebook or reject list.

## Messages

Learn to create and send text (SMS), multimedia (MMS), or email messages, and view or manage messages you have sent or received.



You may incur additional charges for sending or receiving messages while outside your home service area. For details, contact your service provider.


### › Send a text message

- 1 In Idle mode, open the application list and select **Messaging** → **New message**.
- 2 Enter a name or recipient number.
- 3 Select **Type to compose** and enter your message text.  
To insert emoticons, press [≡] → **Insert smiley**.
- 4 Select **Send** to send the message.

### › Send a multimedia message

- 1 In Idle mode, open the application list and select **Messaging** → **New message**.
- 2 Enter a name or recipient number.
- 3 Select **Type to compose** and enter your message text.  
To insert emoticons, press [≡] → **Insert smiley**.
- 4 Press [≡] → **Attach** → an option and add an item.  
You can select a file from the file list or create a new photo, video, or sound.
- 5 Press [≡] → **Add subject** and add a subject for the message.
- 6 Select **Send** to send the message.

## › View a text or multimedia message




- 1 In Idle mode, open the application list and select **Messaging**.  
Your messages are grouped into message threads by contact like a messenger.
- 2 Select a contact.
- 3 Select a text or multimedia message from the message thread.
- 4 For a multimedia message, select the attachment (with an image file) or select  to view the attachment.

From the message view, use the following options:

- To forward the message to other people, tap and hold the message and select **Forward**.
- To protect the message from being deleted, tap and hold the message and select **Lock message**.

## › Listen to voice mail messages

If you have set missed calls to be diverted to the voice mail server, callers may leave voice messages when you do not answer incoming calls. To access your voice mail inbox and listen to voice mail messages,

- 1 In Idle mode, press [] or select  → **Keypad**, and then tap and hold **1**.
  - 2 Follow the instructions from the voice mail server.
-  You must save the voice mail server number before accessing the server. Your service provider can give you the number.



## Gmail

You can retrieve new email messages from Gmail™ to your Inbox. When you access this application, the Inbox screen appears. The total number of unread messages displays in the title bar and unread messages display in bold. If you have labeled a message, its label appears in a colored rectangle on the message.

### › Send an email message

- 1 In Idle mode, open the application list and select **Gmail**.
- 2 Press [≡] → **Compose**.
- 3 Enter a name or address in the recipient field.
- 4 Enter a subject and message.
- 5 To attach an image file, press [≡] → **Attach** → a file.
- 6 Select **Send** to send the message.

### › View email messages

- 1 In Idle mode, open the application list and select **Gmail**.
- 2 Select an email message from the message thread list.

From the message view, use the following options:

- To go to the top of the message text, press [≡] → **Newer**.
- To make the message as unread, press [≡] → **Mark unread**.
- To move the message to **Inbox**, press [≡] → **Back to Inbox**.
- To reply to the message, select **Reply**.
- To reply to the message including all recipients, select **Reply to all**.
- To forward the message to other people, select **Forward**.

- To mute the message, press [☰] → **More** → **Mute**.
- To report the message as a spam, press [☰] → **More** → **Report spam**.

## › Organize email by labels

You can organize your email by labeling your messages, adding stars to mark important messages or store messages. You can sort messages by label filter.

### Add a label to a message

- 1 From the Inbox screen, tap and hold a message.
- 2 Select **Change labels**.
- 3 Select a label to add and select **OK**.

### Add a star to a message

- 1 From the Inbox screen, tap and hold a message.
- 2 Select **Add star**. The star icon next to the message is activated.

## Archive messages

- 1 From the Inbox screen, tap and hold a message.
- 2 Select **Archive**.  
The message will move to **Archive**.

## Filter messages

- 1 From the Inbox screen, press [☰] → **View labels**.
- 2 Select the label of the messages you want to view.

## Email

Learn to send or view email messages via your personal or company email account.

## › Set up an email account

- 1 In Idle mode, open the application list and select **Email**.

- 2 Enter your email address and password, and then select **Next**.
- 3 Select an account type (POP3, IMAP, or Exchange).
- 4 Follow the on-screen instructions.

## ➤ Send an email message

- 1 In Idle mode, open the application list and select **Email** → an email account.
- 2 Press [≡] → **Compose**.
- 3 Enter a name or address in the recipient field.
- 4 Press [≡] and select **Add Cc/Bcc** to add more recipients.
- 5 Select the subject field to enter a subject.
- 6 Select the text input field to enter your email text.
- 7 Press [≡] → **Add attachment** and attach a file.  
You can select a file from the file list.

- 8 Select **Send** to send the message.



If you are offline or outside your service area, the message will be held in the message thread list until you are online and in your service area.

## View an email message

When you open an email account, you can view previously retrieved emails offline or connect to the email server to view new messages. After retrieving email messages, you can view them offline.

- 1 In Idle mode, open the application list and select **Email** → an email account.
- 2 Press [≡] → **Refresh** to update the messages folder.
- 3 Select an email message from the message thread list.

From the message view, use the following options:

- To delete the message, press [≡] → **Delete**.
- To forward the message to other people, press [≡] → **Forward**.

- To reply to the message, press [≡] → **Reply**.
- To reply to the message including all recipients, press [≡] → **Reply all**.
- To mark the message as unread, press [≡] → **Mark as unread**.

## Talk

Learn to chat with friends and family via Google Talk™.



This feature may be unavailable depending on your region.

### ➤ Add friends to your friend list

- 1 In Idle mode, open the application list and select **Talk**. The friend list shows all of your Google Talk contacts at a glance, divided into Available, Busy, and Invisible categories.
- 2 Press [≡] → **Add friend**.

- 3 Enter an email address in the search field.  
If you want to select from your the contact list, enter a name and select the contact from the search list
- 4 Select **Send invitation** to start a conversation.

### ➤ Start a chat

- 1 In Idle mode, open the application list and select **Talk**.
- 2 Select a friend from the friend list. The chat screen opens.
- 3 Enter your message and select **Send**.  
To insert emoticons, press [≡] → **More** → **Insert smiley**.
- 4 To switch between active chats, press [≡] → **Switch chats**.
- 5 To end the chat, press [≡] → **End chat**.

# Entertainment

## Camera

Learn how to capture and view photos and videos. You can take photos at resolutions up to 1600 x 1200 pixels (2 mega pixels) and videos at resolutions up to 320 x 240 pixels.

To use the camera, you must first insert a memory card.

### › Capture a photo

 
- 1 In Idle mode, open the application list and select **Camera**.





- 2 Rotate the device counterclockwise to landscape view.

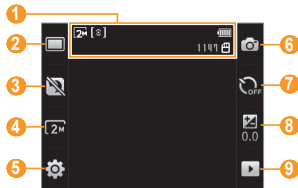

- The camera interface appears only in the landscape orientation.
- Tap the screen to hide or display icons in the viewfinder.
- The camera automatically turns off when you do not use it for a specified period.
- The memory capacity may differ depending on the shooting scene or shooting conditions.

- 3 Aim the lens at the subject and make any necessary adjustments.





Number	Function
1	Check the camera status and settings. <ul style="list-style-type: none"> <li>• : Resolution</li> <li>• : Exposure meter type</li> <li>• : Number of photos you can take (according to available memory)</li> <li>• : Storage location</li> </ul>
2	Change the shooting mode.
3	Set whether to use Night shot mode.
4	Change the resolution option.
5	Change the camera settings.
6	Switch to the camcorder.
7	Set the timer.
8	Adjust the brightness; Select + to increase or – to decrease.

Number	Function
9	View the photo or video you capture last.

4 Press the Volume key to zoom in or out.


5 Press the Confirm key to take a photo.  
The photo is saved automatically.

After taking photos, select  to view the taken photos.

- To view more photos, scroll left or right.
- To zoom in or out, select  or . You can also double-tap the screen to zoom in or out.
- To send a photo to others, select **Share**.
- To set a photo as wallpaper or a caller ID image for a contact, select **Set as**.
- To delete a photo, select **Delete**.


## ➤ Capture a series of photos

You can easily take a series of photos of moving subjects. This is useful when you are photographing children at play or a sporting event.

- 1 In Idle mode, open the application list and select **Camera**.
- 2 Rotate the device counterclockwise to landscape view.
- 3 Select  → **Continuous**.
- 4 Make any necessary adjustments.
- 5 Press and hold the Confirm key. The camera will continue to take photos until you release the Confirm key.


## ➤ Capture a panoramic photo

You can take wide panoramic photos using Panorama shooting mode. This mode is convenient for photographing landscapes.


- 1 In Idle mode, open the application list and select **Camera**.
- 2 Rotate the device counterclockwise to landscape view.
- 3 Select  → **Panorama**.
- 4 Make any necessary adjustments.
- 5 Press the Confirm key to take the first photo.
- 6 Slowly move the device in any direction and align the green frame with the viewfinder.  
When you have aligned the green frame and viewfinder, the camera will automatically take the next photo.
- 7 Repeat step 6 to complete the panoramic photo.

## ➤ Capture a photo in Smile shot mode

Your camera can recognize people's faces and help you take photos of their smiling faces.



- 1 In Idle mode, open the application list and select **Camera**.
- 2 Rotate the device counterclockwise to landscape view.
- 3 Select  → **Smile shot**.
- 4 Make any necessary adjustments.
- 5 Press the Confirm key.
- 6 Aim the camera lens at your subject.  
Your device recognizes people in an image and detects their smiles. When the subject smiles, the device automatically takes a photo.


## ➤ Customize camera settings

Before taking a photo, select  →  to access the following options:

Option	Function
White balance	Adjust the color balance according to lighting conditions.
Effects	Apply a special effect, such as sepia or black and white tones.
ISO	Adjust the sensitivity of the camera imaging sensor.
Metering	Select a type of exposure meter.
Image quality	Set the quality level for your photos.




Before taking a photo, select  →  to access the following settings:

 
Setting	Function
Guidelines	Display guidelines on the preview screen.
Review	Set the camera to display the taken image.
GPS	<p>Set the camera to include location information for your photos.</p> <p> • To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in low-lying areas, or in poor weather conditions.</p> <p>• Alternately, customize the GPS connection settings to improve GPS reception.</p> <p>► p. 84</p>

Setting	Function
Shutter sound	Set the camera shutter to make a sound when capturing a photo.
Reset	Reset menus and shooting options.

## ➤ Capture a video


- 1 In Idle mode, open the application list and select **Camera**.
- 2 Rotate the device counterclockwise to landscape view.
- 3 Select  to switch to the camcorder.

- 4 Aim the lens at the subject and make any necessary adjustments.

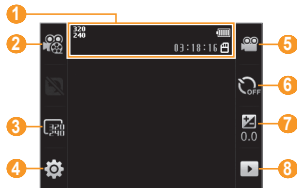


Number	Function
1	Check the camcorder status and settings. <ul style="list-style-type: none"> <li>• <b>320</b> <b>240</b>: Resolution</li> <li>• <b>03:18:16</b>: Length of video that can be captured (according to available memory)</li> <li>• : Storage location</li> </ul>

Number	Function
2	Change the recording mode (for attaching to a multimedia message or for saving normally).
3	Change the resolution option.
4	Change the camcorder settings.
5	Switch to the camera.
6	Set the timer.
7	Adjust the brightness; Select + to increase or – to decrease.
8	View the photo or video you capture last.

- 5 Press the Volume key to zoom in or out.
- 6 Press the Confirm key to start recording.
- 7 Select  or press the Confirm key to stop recording.



The video is saved automatically.

 The camera may not be able to properly record videos to a memory card with a slow transfer speed.



After capturing videos, select  to view the captured videos.

- To view more videos, scroll left or right.
- To send a video to others, select **Share**.
- To play a video, select **Play**.
- To delete a video, select **Delete**.

## › Customize camcorder settings

Before capturing a video, select  →  to access the following options:

Option	Function
White balance	Adjust the color balance according to lighting conditions.
Effects	Apply a special effect, such as sepia or black and white tones.
Video quality	Set the quality level for your videos.

Before capturing a video, select  →  to access the following settings:

Setting	Function
Guidelines	Display the guidelines on the preview screen.
Audio recording	Turn the audio on or off.

Setting	Function
Review	Set the camera to display the recorded video.
Reset	Reset menus and shooting options.

## Gallery

Learn to view photos and play videos saved in your device's memory and memory card.

### › Supported file formats

Type	Format
Image	Extension: bmp, gif, jpg, png



Type	Format
Audio	<ul style="list-style-type: none"> <li>• Extension: amr, mp3, aac, ogg, wav, mid, rtttl, rtx, ota, imy</li> <li>• Codec: MP3, AAC/AAC+/eAAC+, OGG, AMR-NB/AMR-WB, WAV, MIDI, RTTTL/RTX, OTA, i-Melody</li> </ul>
Video	<ul style="list-style-type: none"> <li>• Extension: 3gp, mp4</li> <li>• Codec: MPEG4, H.263, H.264</li> </ul>



- Some file formats are not supported depending on the software of the phone.
- If the file size exceeds the available memory, an error can occur when you open files.



### › View a photo

- 1 In Idle mode, open the application list and select **Gallery**.
- 2 Select a folder.


- 3 To change the view mode, select  or  at the top right of the screen.
- To view photos or videos captured on a specific date, select the arrows on the tab at the bottom or drag the tab left or right.

- 4 Select a photo (with no icon) to view.

 
While viewing a photo, use the following options:

- To view more photos, scroll left or right.
- To zoom in or out, select  or .
- To start a slideshow with photos and videos, select **Slideshow**. Tap the screen to stop the slideshow.

## › Play a video

- 1 In Idle mode, open the application list and select **Gallery**.
- 2 Select a folder → a video (with the  icon) to play.
- 3 Rotate the device counterclockwise to landscape view.

- 4 Control playback with the following keys:

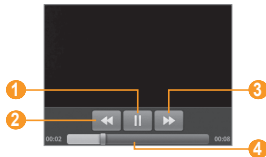

Number	Function
1	Pause playback; Select ► to resume playback.
2	Scan backward in a file.
3	Scan forward in a file.
4	Move to a point of the file by dragging the bar.

## › Share images or videos

- 1 In Idle mode, open the application list and select **Gallery**.
- 2 Select a folder and press [≡] twice.
- 3 Select image or video files.
- 4 Select **Share** → a sharing option.
- 5 Send the file via a multimedia or email message or Bluetooth or upload the file to the online album or community site.

## Music

Learn to listen to your favorite music while on the go with the music player. For details about file formats that the music player supports, see "Supported file formats."

► p. 52

## › Add music files to your device

Start by transferring files to your device or memory card:

- Download from the wireless web. ► p. 65
- Receive via Bluetooth. ► p. 73

## › Play music

After transferring music files to your device or memory card,

- 1 In Idle mode, open the application list and select **Music**.
- 2 Select a music category → a music file.

### 3 Control playback with the following keys:



Number	Function
1	Pause playback; Select ► to resume playback.
2	Skip backwards; Scan backward in a file (tap and hold).
3	Move to a point of the file by dragging the bar.
4	Open the playlist.

Number	Function
5	Activate Shuffle mode.
6	Change the repeat mode (off, repeating a file, or repeating all files).
7	Skip forward; Scan forward in a file (tap and hold).



- SRS CS Headphone™ delivers a 5.1 surround sound experience over standard headphones or earbuds when listening to multichannel content, such as DVD movies.
- WOW HD™ significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.

## › Create a playlist


- 1 In Idle mode, open the application list and select **Music**.
- 2 Select a category → a music file.
- 3 Press [≡] → **Add to playlist** → **New**.
- 4 Enter a title for your new playlist and select **Save**.
- 5 To add more music files to the playlist, play a file and press [≡] → **Add to playlist** → the new playlist.

## › Use the party shuffle feature

You can add all music files to the playlist that is currently playing.

- 1 In Idle mode, open the application list and select **Music**.
- 2 Select a category → a music file.

- 3 Press [≡] → **Party shuffle**.

- 4 To turn off the party shuffle feature, select .

## › Customize music player settings

- 1 In Idle mode, open the application list and select **Music**.
- 2 Select a category → a music file.
- 3 Press [≡] → **Settings**.
- 4 Adjust the following settings to customize your music player:

Option	Function
5.1 channel	Set whether or not to activate the 5.1 channel surround sound system when a headset is connected.
Equalizer	Select a default equalizer type.



## FM Radio

Learn to listen to music and news on the FM radio. To listen to the FM radio, you must connect the supplied headset, which serves as the radio antenna.

### › Listen to the FM radio

- 1 Plug the supplied headset into the device.
- 2 In Idle mode, open the application list and select **FM Radio**.

The FM radio scans and saves available stations automatically.



The first time you turn on the FM radio, you will be prompted to start automatic tuning.

- 3 Control the FM radio with the following keys:



Number	Function
1	Adjust the volume.
2	Turn off the FM radio; Select ► to turn on the FM radio.
3	Change the frequency by 0.1 MHz.
4	Search for an available radio station.

Number	Function
5	Add the current radio station to the favorites list.
6	Change the sound output (headset or device's speaker).

## › Save a radio station automatically

- 1 Plug the supplied headset into the device.
- 2 In Idle mode, open the application list and select **FM Radio**.
- 3 Select **Scan** → a scanning option.  
The FM radio scans and saves available stations automatically.
- 4 Select the radio station you want from the all station list and press [↩] to return to the FM radio screen.

## › Add a radio station to the favorites list

 
- 1 Plug the supplied headset into the device.
- 2 In Idle mode, open the application list and select **FM Radio**.
- 3 Select ► to turn on the FM radio.
- 4 Scroll to the radio station you want.
- 5 Select + to add to the favorites list.

## › Customize FM radio settings

- 1 In Idle mode, open the application list and select **FM Radio**.
- 2 Press [≡] → **Settings**.

### 3 Adjust the following settings to customize your FM radio:

Option	Function
Region	Select your region.
Background playing	Set whether or not to run the FM radio in the background while using other applications.
Show Station ID	Set whether or not to show the station ID on the FM radio screen; Station IDs are available only from radio stations that provide this information.
FM auto off	Set the FM radio to automatically turn off after a specified length of time.

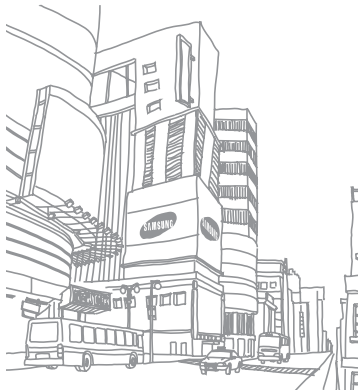


# Personal information



## Contacts

Learn to create and manage a list of your personal or business contacts stored on the phone's memory or a SIM or USIM card. You can save names, mobile phone numbers, home phone numbers, email addresses, birthdays and more for your contacts.



### › Create a contact

- 1 In Idle mode, select .
- 2 Select **Create contact**.
- 3 Select a memory location.
- 4 Enter contact information.
- 5 Select **Save** to add the contact to memory.



You can also create a contact from the dialing screen.

- 1 In Idle mode, press [>] or select  → **Keypad** and enter a phone number.
- 2 Select **Add to Contacts** → **Create contact**.
- 3 Select a memory location.
- 4 Enter contact information.
- 5 Select **Save** to add the contact to memory.

### › Import or export contacts

- 1 In Idle mode, select .
- 2 Press [>] → **More** → **Import/Export**.
- 3 Select an option to import or export.
- 4 For importing contacts, select an importing option and select **OK**.

## › Find a contact



- 1 In Idle mode, select .
- 2 Press [Q].
- 3 Enter the first letters of the name you want and select .
- 4 Select the contact's name from the contact list.





Once you find a contact, you can:

- call the contact by selecting a number or **Call**.
- send a message by selecting **Send message**.
- link a contact from your community accounts to the contact by pressing [≡] → **Link contact**.
- edit the contact information by pressing [≡] → **Edit**.
- set the contact as your favorites by selecting ☆ on the top right of the screen.
- set the default contact name and a phone number by pressing [≡] → **Mark as default**.

## › Set a speed dial number


- 1 In Idle mode, select .
  - 2 Press [≡] → **Speed dial**.
  - 3 Select a location number → a contact.
-  You can quickly dial this number by touching and holding the location number from the dialer screen.

## › Create your namecard

- 1 In Idle mode, select .
  - 2 Press [≡] → **My profile**.
  - 3 Enter your own personal details.
  - 4 Select **Save**.
-  You can send your namecard by attaching it to an email or transferring it via the Bluetooth wireless feature.


## › Retrieve contacts from your community accounts

You can view the list of community website accounts and select an account to add a contact from the website to your phone contacts.

- 1 In Idle mode, select .
- 2 Press [≡] → **Get friends**.
- 3 Select an account.


## › Create a group of contacts

By creating groups of contacts, you can manage multiple contacts and send messages or email to an entire group. Start by creating a group.

- 1 In Idle mode, select  → **Groups**.
- 2 Press [≡] → **Create**.

- 3 Enter a name and select a ringtone for the group.
- 4 Select **Save**.

## › Copy contacts

- 1 In Idle mode, select .
- 2 Press [≡] → **More** → **Copy contacts**.
- 3 Select a copy option (from the phone to the SIM or USIM card or vice versa).
- 4 Select contacts to copy.
- 5 When you are finished selecting contacts, select **Copy**.

## Calendar

Learn to create and manage daily, weekly or monthly events, and set alarms to remind yourself of important events.

### › Create an event

- 1 In Idle mode, open the application list and select **Calendar**.
- 2 Press [≡] → **New event**.
- 3 Enter the details of the event as required.
- 4 Select **Done**.

### › View events

To change the calendar view,

- 1 In Idle mode, open the application list and select **Calendar**.
- 2 Press [≡] and select **Day**, **Week**, or **Month**.

To view events of a specific date,

- 1 In Idle mode, open the application list and select **Calendar**.
- 2 Select a date on the calendar. In month view, days with scheduled events are indicated by a green bar.  
To select today's date, press [≡] → **Today**.
- 3 Select an event to view its details.

## › Stop an event alarm

If you set an alarm for a calendar event, the event alarm icon will appear at the specified time.

- 1 Open the shortcuts panel from the top of the screen.
- 2 Select a reminder to view more details about the event.
- 3 To snooze or dismiss the reminder, select **Snooze all** or **Dismiss all**.

## Memo


Learn to record important information to save and view at a later date.

## › Create a memo

- 1 In Idle mode, open the application list and select **Memo**.

- 2 Select **Create memo** (if necessary).
- 3 Enter your memo text.
- 4 Press [↵] and select a color to change a background color.
- 5 Select **Save**.

## › View memos

- 1 In Idle mode, open the application list and select **Memo**.
  - 2 Select a memo to view its details.  
To view all details of memos from the memo list, press [≡] → **Maximize**.
-  You can send the memo to others by tapping and holding the memo, and selecting an option.



# Web

## Internet

Learn to access and bookmark your favorite web pages.



- You may incur additional charges for accessing the web and downloading media. For details, contact your service provider.
- Available icons may vary depending on your region.

### › Browse web pages



*I* In Idle mode, open the application list and select **Browser** to launch a specified homepage.  
To access a specific web page, select the URL input field, enter the web address (URL) of the web page, and select **Go**.

2 Navigate web pages with the following keys:



Number	Function
1	Enter a web address of the web page to access.
2	Enter a keyword to search for information.
3	Open a list of saved bookmarks, frequently visited pages and recent internet history.


While browsing the web page, use the following options:

- To zoom in or out, flick to any direction to display  or  and select a zoom icon.
- To reload a web page, press [≡] → **Refresh**.
- To go to a next page in history, press [≡] → **Forward**.
- To bookmark the current web page, press [≡] → **More** → **Add bookmark**.
- To search for text on the web page, press [≡] → **More** → **Find on page**.
- To select text on the web page, press [≡] → **More** → **Select text**. Highlight the text you want with your finger. The highlighted text is copied to the clipboard and you can paste it anywhere.
- To view the web page details, press [≡] → **More** → **Page info**.
- To send the web address (URL) of the web page to others, press [≡] → **More** → **Share page**.

- To view the download history, press [≡] → **More** → **Downloads**.
- To customize the browser settings, press [≡] → **More** → **Settings**.

## ➤ Bookmark your favorite web pages

You can bookmark web pages you frequently visit for quick access. To add a bookmark,

- 1 In Idle mode, open the application list and select **Browser**.
- 2 Select .
- 3 Press [≡] → **Bookmark last-viewed page**.
- 4 Enter a page title and a web address (URL).
- 5 Select **OK**.

## › Open multiple pages

You can open multiple pages and switch back and forth between them.

- 1 While browsing a web page, press [≡] → **New window**.
- 2 Open another web page on the new window.
- 3 Press [≡] → **Windows** → **New window** to open more web pages.
- 4 To view the currently active windows, press [≡] → **Windows** and select a web page to retrieve.

## Samsung Apps

Samsung Apps allows you to simply and easily download an abundance of applications directly to your device. Featuring a wealth of games, news, reference, social networking, navigation, health related applications and more, Samsung Apps gives you instant access to a huge choice of mobile experience.

Your device gets smarter with fully optimized applications from Samsung Apps. Explore amazing applications and make your mobile life even better.



- The service may be unavailable depending on your region or service provider.
- For details, please visit [www.samsungapps.com](http://www.samsungapps.com).

- 1 In Idle mode, open the application list and select **Samsung Apps**.
- 2 Search for and download applications as desired.

## Layar

Layar allows you to browse locations for real-time local information or maps through the camera of your device and to share the information with others.

In Idle mode, open the application list and select **Layar**.



- This feature may be unavailable depending on your region.

## Maps

Learn to use Google Maps™ find your location, search the online map for streets, cities, or countries, and get directions.





To use the Google Maps, you must select **Settings** → **Location & security** → **Use wireless networks** or **Use GPS satellites**.

### › Change the map view

- 1 In Idle mode, open the application list and select **Maps**.
- 2 Select **OK** to close the intro window (if necessary).
- 3 Press [≡] → **Layers** → a view mode.

### › Search the map


- 1 In Idle mode, open the application list and select **Maps**.
- 2 Scroll through the map.
- 3 To zoom in or out, tap the screen and select  or .

### › Find your location



- 1 In Idle mode, open the application list and select **Maps**.
- 2 Press [≡] → **My Location**.



### › Search for a specific location

- 1 In Idle mode, open the application list and select **Maps**.
- 2 Press [≡] → **Search**.

- 3 Use one of the following methods:
  - Enter the address.
  - Enter the category of the business.
  - Select an address you have visited from the drop-down menu.
- 4 Select .

## ➤ Get directions to a specific destination

- 1 In Idle mode, open the application list and select **Maps**.
- 2 Press [] → **Directions**.
- 3 Enter the addresses of the starting location and the ending location.  
To enter an address from your contact list or point the location on the map, select  → **Contacts** or **Point on map**.

- 4 Select a travel method (car, bus, or walk) and select **Go**.
- 5 Select a travel route to view details of your trip (if necessary).
- 6 Press [] → **See map**.
- 7 When you are finished, press [] → **More** → **Clear Map**.

 
## YouTube

YouTube is a free online video streaming service. Learn to view and share videos via YouTube.

## ➤ Watch videos

- 1 In Idle mode, open the application list and select **YouTube**.
- 2 Select a video from the list of the featured videos.
- 3 Rotate the device counterclockwise to landscape view.

#### 4 Control playback with the following keys:

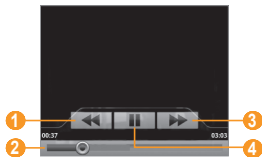


Number	Function
1	Scan backward in a file.
2	Move to a point of the file by dragging the bar.
3	Scan forward in a file.
4	Pause playback; Select ► to resume playback


### › Share videos

 - 1 In Idle mode, open the application list and select **YouTube**.
- 2 Tap and hold a video.
- 3 Select **Share** → an option.

### › Upload videos

- 1 In Idle mode, open the application list and select **YouTube**.
- 2 Press [≡] → **Upload** and select a video. Skip to 7. If you want to upload new videos, select [▶] to turn on the camcorder.
- 3 Rotate the device counterclockwise to landscape view.
- 4 Aim the lens at the subject and make any adjustments.

- 5 Press the Confirm key to start recording.
- 6 Select  to stop recording.
- 7 Select **Save** to upload the video that you have recorded.
- 8 Enter your user name and password and select **Sing in**.

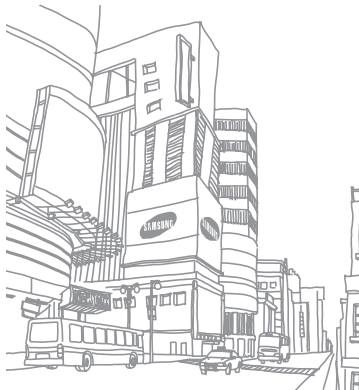

# Connectivity

## Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 10 meters without requiring a physical connection.

You do not need to line up the devices to beam information with Bluetooth. If the devices are within range of one another, you can exchange information between them even if they are located in different rooms.



- Samsung is not responsible for the loss, interception, or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

### › Turn on the Bluetooth wireless feature

- 1 In Idle mode, open the application list and select **Settings** → **Wireless & networks**.
- 2 Select **Bluetooth** to turn on the Bluetooth wireless feature.

You can also open the shortcuts panel and select **Bluetooth**.



## ➤ Find and pair with other Bluetooth-enabled devices

- 1 In Idle mode, open the application list and select **Settings** → **Wireless & networks** → **Bluetooth settings** → **Scan for devices**.
- 2 Select a device.
- 3 Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and select **OK**. Alternatively, select **Pair** to match the PIN between your device and the device.

When the owner of the other device enters the same PIN or accepts the connection, pairing is complete. If the pairing is successful, the device will automatically search for available services.



Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you must enter it.

## ➤ Send data using the Bluetooth wireless feature

- 1 Select a file or item, such as a contact, ~~memo~~, or media file, from an appropriate application or **Gallery**.
- 2 Press [≡] → ~~Send via~~ or **Send namecard via** → **Bluetooth**. *share*
- 3 Search for and paired with a Bluetooth-enabled device.

## ➤ Receive data using the Bluetooth wireless feature

- 1 In Idle mode, open the application list and select **Settings** → **Wireless & networks** → **Bluetooth settings** → **Discoverable**.  
Your device is visible to other Bluetooth devices for 120 seconds.
- 2 When prompted, enter the PIN for the Bluetooth wireless feature and select **Pair** (if necessary).

- 3 Select **Accept** to confirm that you are willing to receive data from the device (if necessary).

Received data is saved to an appropriate application or folder according to its type. For example, a music or sound clip is saved to the sound folder and a contact to the phonebook.

## Wi-Fi

Learn to use your device's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 b/g standards.

You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.



Your device uses non-harmonized frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

## › Activate the WLAN feature

In Idle mode, open the application list and select **Settings** → **Wireless & networks** → **Wi-Fi**. You can also open the shortcuts panel and select **Wi-Fi**.



An active WLAN running in the background will consume battery power. To preserve battery power, activate the WLAN only when needed.

## › Find and connect to a WLAN

- 1 In Idle mode, open the application list and select **Settings** → **Wireless & networks** → **Wi-Fi settings**. The device will automatically search for available WLANs.
- 2 Select a network under **Wi-Fi networks**.

- 3 Enter a password for the network and select **Done** (if necessary).
- 4 Select **Connect**.

## ➤ Add a WLAN manually

- 1 In Idle mode, open the application list and select **Settings** → **Wireless & networks** → **Wi-Fi settings** → **Add Wi-Fi network**.
- 2 Enter the SSID for the network and select the security type.
- 3 Set the security settings depending on the selected security type.
- 4 Select **Save**.

## AllShare

Learn to use the Digital Living Network Alliance (DLNA) service that enables you to share media files between DLNA-enabled devices in your home over a WLAN.

You must first activate the WLAN feature and add a WLAN profile. ► p. 74

## ➤ Customize DLNA settings for sharing media files

To allow other DLNA-enabled devices to access media files on your device, you must activate media sharing.


- 1 In Idle mode, open the application list and select **AllShare**.
- 2 Select **Settings**.

- 3 Adjust the following settings to customize the DLNA feature:

Option	Function
Media server name	Enter a name for your device as a media server.
Share media	Turn on video sharing, image sharing or music sharing with other DLNA-enabled devices.
Access point network	Select a connection profile to use for DLNA connections.
Upload from other devices	Set whether or not to accept the upload from other devices.

 
- 4 When you are finished, select **Save** or **Yes**.

## ► Play your files on another DLNA-enabled device

- 1 In Idle mode, open the application list and select **AllShare**.
  - 2 Select **Play file from my phone on another player**.
  - 3 Select a media category → a file.
  - 4 Select a player—the one that will play the media file. Playback begins at the selected player.
  - 5 Control playback using icons of your device.
-  Playback may be buffered, depending on the network connection and the connected server.

## ▶ Play files of one device on the other device

- 1 In Idle mode, open the application list and select **AllShare**.
- 2 Select **Play file from server on another player via my phone**.  
Your device automatically searches for DLNA-enabled devices.
- 3 Select a device as the media server—the one that contains media files.
- 4 Select a media category and a file.
- 5 Select a player—the one that will play the media file.  
Playback begins at the selected player.
- 6 Control playback using icons of your device.

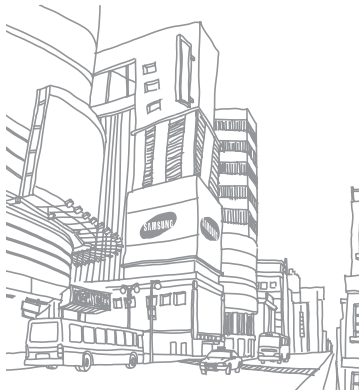






# Tools

## Clock

Learn to use clock display on the Idle screen, and set and control alarms for important events.

### › Use the clock display

- 1 In Idle mode, open the application list and select **Clock**.
- 2 Press [≡] → **Alarms**.
- 3 Press [≡] → **Desk clock**.
- 4 While using the clock display, use the following features:
  - To create or delete an alarm, select .
  - To access Gallery, select .

- To launch the music player, select .
- To return to the idle screen, select .
- To set the brightness of the screen, select .

### › Set a new alarm

- 1 In Idle mode, open the application list and select **Clock**.
- 2 Press [≡] → **Add alarm**.
- 3 Select **Turn alarm on**.
- 4 Set alarm details.
- 5 When you are finished, select **Done**.

### › Stop an alarm

When the alarm sounds,

- Select **Dismiss** to stop the alarm.
- Select **Snooze** to repeat the alarm after a specified length of time.

## › Delete an alarm

- 1 In Idle mode, open the application list and select **Clock**.
- 2 Press [≡] → **Alarms**.
- 3 Tap and hold an alarm to delete.
- 4 Select **Delete alarm** → **OK**.

## Calculator

Learn to perform mathematical calculations directly on your device like a typical hand-held or desktop calculator.

- 1 In Idle mode, open the application list and select **Calculator**.
- 2 To use the keys that correspond to the calculator display to perform basic mathematical operations.
- 3 Press [≡] → **Advanced panel** to use scientific calculator.

## My Files

Learn to quickly and easily access all of your images, videos, music, sound clips, and other types of files stored a memory card.

- 1 In Idle mode, open the application list and select **My Files**.
- 2 Select a folder → a file.



To move up one level in the file directory, select **Up**.

In a folder, press [≡] to use the following options:

- To send a video to others via multimedia message, email or the Bluetooth wireless feature, select **Share**.
- To create a new folder, select **Create folder**.
- To delete files or folders, select **Delete**.
- To change the view mode, select **View by**.

- To sort files or folders, select **List by**.
- To use additional features using a photo, such as moving, copying or renaming options, select **More**.

## Write and Go

Learn to enter text and send it as a message, upload it to a community website, or save it as a memo or calendar event.

- 1 In Idle mode, open the application list and select **Write and Go**.
- 2 Enter text using the text input panel.
- 3 When you are finished, select one of the options under the text input field.
  - To send a text message with the text, select **Send message**.

- To upload the text to a community website, select **Update status**.
- To save the text as a memo or calendar event, select **Save**.

- 4 Send a message, log in to a community service to upload the text, or create a memo or event according to the selected option.



# Settings

## Access the Settings menu

- 1 In Idle mode, open the application list and select **Settings**.
- 2 Select a setting category and select an option.

## Wireless & networks

Change the settings for wireless network connections.

### › Airplane mode

Disable all wireless functions on your device. You can use only non-network services.

### › Wi-Fi

Activate the WLAN feature to connect to the internet or other network devices. ► p. 74

### › Wi-Fi settings

- **Wi-Fi:** Turn the WLAN feature on or off.
- **Network notification:** Set the device to notify you when an open network is available.
- **Add Wi-Fi network:** Add WLAN networks.

### › Bluetooth

Activate the Bluetooth feature to exchange information over a distance. ► p. 72

### › Bluetooth settings

- **Bluetooth:** Turn the Bluetooth wireless feature on or off.
- **Device name:** Set a Bluetooth name for your device.

- **Discoverable:** Set your device to be visible to other Bluetooth devices.
- **Scan for devices:** Search for available Bluetooth devices.

## › VPN settings

Set up Virtual Private Network (VPN) server connections.

## › Mobile networks

- **Data roaming:** Set the device to connect another network when you are roaming or your home network is not available.
- **Enable always-on mobile:** Set the device to use data connection automatically when the WLAN network is unavailable.
- **Access Point Names:** Set up access point names (APNs).
- **Use only 2G networks:** Set the device to connect only to a 2G network.
- **Network operators:** Search for available networks and select a network for roaming.

## Call settings

Customize the settings for calling features:

### › Fixed Dialing Numbers

- **Enable FDN:** Activate or deactivate FDN mode to restrict calls to number in the FDN list. You must enter the PIN2 supplied with your SIM or USIM card and reboot the device.
- **Change PIN2:** Change the PIN2, which is used to protect the primary PIN.
- **FDN list:** Set up a list of contacts for fixed dialing.

### › Voicemail service

Select your service provider's voicemail service. You can also select other voicemail services if you downloaded applications that support them.

## › Voicemail settings

Enter the number to access the voicemail service. You can obtain this number from your service provider.

## › DTMF Tones

Set short or long DTMF (Dual-tone multi frequency) tones to be sent to access teleservices, such as bank accounts.

## › Call forwarding

Divert incoming calls to another number.

## › Additional settings

- **Caller ID:** Display your caller ID to other parties for outgoing calls.
- **Call waiting:** Allow incoming call alerts when a call is already in progress.

## Sound & display

Change the settings for various sounds on your device and for the display.

- **Silent mode:** Activate Silent mode to mute the device.
- **Ringer volume:** Adjust the volume level for the call ringtone.
- **Media volume:** Set the default volume for music and videos.
- **Phone ringtone:** Select a ringtone to alert you to incoming calls.
- **Phone vibrate:** Set the device to vibrate to alert you to incoming calls.
- **Notification ringtone:** Select a ringtone to alert you to events, such as incoming messages, missed calls, and alarms.

- **Audible touch tones:** Set the device to sound when you touch the keys on the dialer.
- **Audible selection:** Set the device to sound when you select an application or option on the touch screen.
- **Haptic feedback:** Set the device to vibrate when you touch the keys.
- **SD card notifications:** Set the device to sound when a memory card is recognized.
- **Orientation:** Set whether or not to rotate the content automatically when the device is rotated.
- **Animation:** Set the device to display animation when you switch between windows.
- **Brightness:** Set the brightness of the display.
- **Screen timeout:** Set the length of time the device waits before turning off the display's backlight.

## Location & security

Change the settings for securing your device and the SIM or USIM card, and GPS functionality.

- **Use wireless networks:** Set the device to use the wireless networking for checking locations, if supported in an application.
- **Use GPS satellites:** Enable the GPS functionality for checking locations, if supported in an application. You can view locations at street level by using the GPS.
- **Set unlock pattern:** Activate the gesture unlock feature that allows you to unlock the touch screen and keys by drawing a specified character. ► p. 25
- **Require pattern:** Set the device to require the unlock pattern you have set each time you turn it on. By doing this, you can prevent unauthorized people from unlocking the device.
- **Use visible pattern:** Set the unlock pattern to be visible or invisible as you draw it.

- **Use tactile feedback:** Set the device to vibrate when you touch and draw the unlock pattern.
- **Set up SIM card lock:**
  - **Lock SIM card:** Activate or deactivate the PIN lock feature to require the PIN before using the device.
  - **Change SIM PIN:** Change the PIN used to access SIM or USIM data.
- **Visible passwords:** By default, the device displays your password as \* for security. Set the device to display your password as you enter.
- **Use secure credentials:** Use certificates and credentials to ensure secure use of various applications.
- **Install from SD card:** Install encrypted certificates that are stored on a memory card.
- **Set password:** Create and confirm a password for accessing credentials.
- **Clear storage:** Erase the credential contents from the device and reset the password.

## Applications

Change the setting for managing installed applications.

- **Unknown sources:** Select to download applications from any source. If you do not select this option, you can download applications only from Android Market
- **Manage applications:** Access the list of the applications installed on the device and check the application information. To view the applications that are currently running or third-party applications installed additionally, press [≡] → **Filter**.
- **Running services:** View the services you are using and access them to manage.
- **Development:**
  - **USB debugging:** Select to connect your device to a PC by using a PC data cable. This is for application development.

- **Stay awake:** Set the device's screen to stay on while charging the battery.
- **Allow mock locations:** Allow mock locations and service information to be sent to a Location Manager service for testing. This is for application development.
- **Samsung Apps:** Select a network connection (Wi-Fi or packet switched data network) to get application update notification from Samsung Apps.

## Accounts & sync

Change the settings for the auto sync feature or manage accounts for synchronization.

- **Background data:** Select this setting to use the auto sync feature. The auto sync will run in the background without opening applications synchronize data.
- **Auto-sync:** Set the device to synchronize contact, calendar, and email data automatically.

## Privacy

Change the settings for managing your settings and data.

- **Use My Location:** Set the device to use your current location for Google services.
- **Factory data reset:** Reset your settings to the factory default values and delete all your data.

## SD card, USB Mass Storage & phone storage

Check memory information of memory cards and your device, format the external or internal memory, and reset the device.

## Search

Change Google Search settings.

- **Google search settings:**
  - **Show web suggestions:** Set the device to display suggestions while you are entering a keyword.
  - **Search history:** Set the device to show the search history of your Google account.
  - **Manage search history:** Manage the search history of your Google account.
- **Searchable items:** Select the types of items to include in your search.
- **Clear search shortcuts:** Clear the information from recent searches.

## Language & keyboard

Change the settings for text input.

### › Select locale

Select a display language for all menus and applications, and a writing language for all text editors.

### › Swype

- **Language:** Select a language for text input.



You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages.

- **Auto-spacing:** Set the device to automatically insert a space between words.
- **Auto-capitalization:** Set the device to automatically capitalize the first letter after a final punctuation mark, such as a period, question mark, or exclamation mark.

- **Word Prediction:** Set the device to predict words according to your input and display word suggestions.
- **Enable Tip Indicator:** Activate the indicator for quick help.
- **Audio Feedback:** Turn audio for the Swype keyboard on or off.
- **Vibrate on keypress:** Set the device to vibrate when you touch a key.
- **Display Trace:** Set how long the trace of your dragging will display on the keyboard.
- **Word Choice Window:** Set how often the word list will display.
- **Speed vs. Accuracy:** Set the balance for the speed and accuracy.
- **Auto-select word after:** Set the timeout to insert words automatically.
- **Swype Help:** Access help information for using the Swype keyboard.

- **Tutorial:** Learn how to enter text faster with the Swype keyboard.
- **Version:** View version information.

## › DioPen Chinese IME

- **Vibrate on keypress:** Set the device to vibrate when you touch a key.
- **Sound on keypress:** Set the device to sound when you touch a key.
- **Show suggestions:** Set the device to display suggestions while you are entering text.
- **Detail setting:** Customize the settings for DioPen Chinese IME keypad, such as word suggestion, spell check, and auto space when **Show suggestions** is selected.
- **Recognize delay time:** Select a recognition time for Handwriting mode.



- **Pen thickness:** Select a line thickness for Handwriting mode.
- **Pen color:** Select a line color for Handwriting mode.
- **Use Fuzzy:** Set the device to use the Fuzzy settings.
- **Fuzzy settings:** Customize the Fuzzy settings.
- **About:** View DioPen Chinese IME information.

## › Samsung keypad

- **Keypad types:** Select the default input method, such as the QWERTY keypad, traditional keypad, or handwriting screen.
- **Writing language:** Select a language for text input.
- **XT9:** Activate XT9 mode to enter text using Predictive input mode.
- **XT9 advanced settings:** Activate the advanced features of XT9 mode, such as auto completion, auto correction, or auto substitution, and set up your own word list.

- **Keypad sweeping:** Enable the sweeping feature for the keypad input method. You can enter text by sweeping keys instead of tapping.
- **Auto-capitalization:** Set the device to automatically capitalize the first letter after a final punctuation mark, such as a period, question mark, or exclamation mark.
- **Handwriting settings:** Customize the settings for Handwriting mode, such as recognition time, pen thickness, or pen color.
- **Tutorial:** Learn how to enter text with the Samsung keypad.

## Accessibility

Set a type or intensity of the vibration as your preference. You can install accessibility applications from the web, such as Talkback or Kickback.

## Text-to-speech

Change the settings for the text-to-speech feature that reads aloud text from messages or applications that support the feature.

- **Listen to an example:** Listen to the spoken text for an example.
- **Install voice data:** Download and install voice data for the text-to-speech feature.
- **Always use my settings:** Set the device to use the settings you specify in applications rather than the default settings.
- **Speech rate:** Select a speed for the text-to-speech feature.
- **Language:** Select a language for the text-to-speech feature.

## Date & time

Access and alter the following settings to control how time and date are displayed on your device:

- **Automatic:** Automatically update the time when you move across time zones.
- **Set date:** Set the current date manually.
- **Select time zone:** Set your home time zone.
- **Set time:** Set the current time manually.
- **Use 24-hour format:** Set to the time to be displayed in 24-hour format.
- **Select date format:** Select a date format.

## About phone

Access information about your device, check the device's status, and learn how to use your device.

# Troubleshooting

When you turn on your device or while you are using the device, it prompts you to enter one of the following codes:

Code	Try this to solve the problem:
Password	When the device lock feature is enabled, you must enter the password you set for the device.
PIN	When using the device for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using the <b>Lock SIM card</b> menu.

Code	Try this to solve the problem:
PUK	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
PIN2	When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For details, contact your service provider.

## Your device displays "Service unavailable" or "Network error"


- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

## The touch screen responds slowly or improperly

If your device has a touch screen and the touch screen is not responding properly, try the following:

- Remove any protective covers from the touch screen. Protective covers may prevent the device from recognising your inputs and are not recommended for touch screen devices.
- Ensure that your hands are clean and dry when tapping the touch screen.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take it to your local Samsung Service Center.

## Your device freezes or has fatal errors

If your device freezes or hangs, you may need to close programs or reset the device to regain functionality. If your device is frozen and unresponsive, press and hold the Volume key up and [>] simultaneously for 8-10 seconds. The device will reboot automatically.

If this does not solve the problem, perform a factory data reset.

- In Idle mode, open the application list and select **Settings** → **Privacy** → **Factory data reset** → **Reset phone** → **Erase everything**.
- When the device is turned off, simultaneously press the Volume key up and down, and then press [>]. When an exclamation mark appears, press the Home key to reboot.

## Calls are being dropped

When you are in areas with weak signals or poor reception, you may lose your connection to the network. Move to another area and try again.

## Outgoing calls are not connected

- Ensure that you have pressed the Dial key.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number you are dialing.

## Incoming calls are not connected

- Ensure that your device is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the incoming phone number.

## Others cannot hear you speaking on a call

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

## Audio quality is poor

- Ensure that you are not blocking the device's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

## When dialing from contacts, the call is not connected

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

- Ensure that you have not set call barring for the contact's phone number.

### The device beeps and the battery icon flashes

Your battery is low. Recharge or replace the battery to continue using the device.

### The battery does not charge properly or the device turns off

- The battery terminals may be dirty. Wipe both gold-colored contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery (refer to your local ordinances for proper disposal instructions).

### Your device is hot to the touch

When you use applications that require more power or use applications on your device for an extended period of time, your device may feel hot to the touch. This is normal and should not affect your device's lifespan or performance.

### Error messages appear when launching the camera

Your Samsung mobile device must have sufficient available memory and battery power to operate the camera application. If you receive error messages when launching the camera, try the following:

- Charge the battery or replace it with a battery that is fully charged.
- Free some memory by transferring files to a PC or deleting files from your device.
- Restart the device. If you are still having trouble with the camera application after trying these tips, contact a Samsung Service Center.

## Error messages appear when launching the FM radio

The FM radio application on your Samsung mobile device uses the headset cable as an antenna. Without a headset connected, the FM radio will be unable to receive radio stations. To use the FM radio, first ensure that the headset is properly connected. Next, scan for and save the available radio stations.

If you still cannot use the FM radio after performing these steps, try accessing your desired station with another radio receiver. If you can hear the station with another receiver, your device may require service. Contact a Samsung Service Center.

## Error messages appear when opening music files

Some music files may not play on your Samsung mobile device for a variety of reasons. If you receive error messages when opening music files on your device, try the following:

- Free some memory by transferring files to a PC or deleting files from your device.
- Ensure that the music file is not Digital Rights Management (DRM)-protected. If the file is DRM-protected, ensure that you have the appropriate license or key to play the file.
- Ensure that your device supports the file type.

 
## Another Bluetooth device is not located

- Ensure that the Bluetooth wireless feature is activated on your device.
- Ensure that the Bluetooth wireless feature is activated on the device you wish to connect to, if necessary.
- Ensure that your device and the other Bluetooth device are within the maximum Bluetooth range (10 meters).

If the tips above do not solve the problem, contact a Samsung Service Center.

## A connection is not established when you connect the device to a PC

- Ensure that the PC data cable you are using is compatible with your device.
- Ensure that you have the proper drivers installed and updated on your PC.

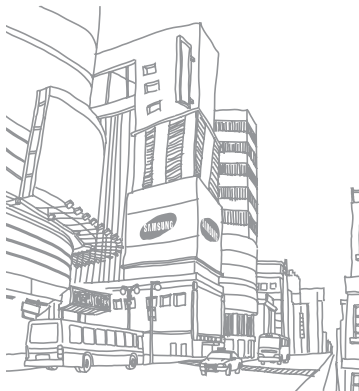



# Safety and usage information

This safety and usage information should be followed to safely use your device.



## Safety warnings

### Keep your device away from small children and pets

Keep your device and all accessories out of the reach from small children or pets. Small parts may cause choking or serious injury if swallowed.

### Protect your hearing



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

### Install mobile devices and equipment with caution

Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted. Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

### Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.

- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

### Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile devices and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research.

If you have any reason to suspect that your device is interfering with a pacemaker or other medical device, turn off the device immediately and contact the manufacturer of the pacemaker or medical device for guidance.

### Turn off the device in potentially explosive environments

Do not use your device at refueling points (service stations) or near fuels or chemicals. Turn off your device whenever directed by warning signs or instructions. Your device could cause explosions or fire in and around fuel or chemical storage, transfer areas and blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

### Reduce the risk of repetitive motion injuries

While using your device, hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

## Do not use the device if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the device to a Samsung Service Center to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.

## Safety precautions

### Drive safely at all times

Avoid using your device while driving and obey all regulations that restrict the use of mobile devices while driving. Use hands-free accessories to increase your safety when possible.

### Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile device in a certain area.

## Use only Samsung-approved accessories

Using incompatible accessories may damage your device or cause injury.

## Turn off the device near medical equipment

Your device can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

## Turn off the device or disable the wireless functions when in an aircraft

Your device can cause interference with aircraft equipment. Follow all airline regulations and turn off your device or switch to a mode that disables the wireless functions when directed by airline personnel.

## Protect the device, batteries and chargers from damage

- Avoid exposing your device and batteries to very cold or very hot temperatures (below 0° C or above 45° C).

- Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

### Handle your device carefully and sensibly

- Disassembling your device may cause an electric shock.
- Do not allow your device to get wet—liquids can cause serious damage and will change the color of the label that indicates water damage inside the device. Do not handle your device with wet hands. Water damage to your device can void your manufacturer's warranty.
- Avoid using or storing your device in dusty, dirty areas to prevent damage to moving parts.

- Your device is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your device, as paint can clog moving parts and prevent proper operation.
- If your device has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your device may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

### Avoid interference with other electronic devices

Your device emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



## Important usage information

### Use your device in the normal position

Avoid contact with your device's internal antenna.

### Allow only qualified personnel to service your device

Allowing non-qualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

### Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

### Handle SIM or USIM cards or memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-colored contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

### Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before traveling in remote areas without signal coverage, plan an alternate method of contacting emergency services personnel.

## Specific Absorption Rate (SAR) certification information

Your device conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

During testing, the maximum SAR recorded for this model was 0.645 W/kg. In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.


For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

## Correct disposal of this product



(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

 This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

## Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

## Disclaimer

 
Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

“THIRD PARTY CONTENT AND SERVICES ARE PROVIDED “AS IS.” SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH

THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.”

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.


Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

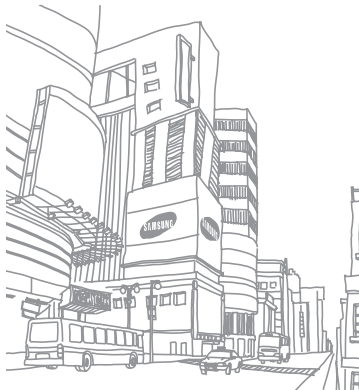



Some contents in this manual may differ from your device depending on the software of the device or your service provider.

### To install Kies (PC Sync) Kies

1. Download the latest version of Kies from the Samsung website ([www.samsungmobile.com](http://www.samsungmobile.com)) and install it in your PC.
2. In Idle mode, select  → **Settings** → **Applications** → **Development** → **USB debugging**.
3. Using a PC data cable, connect your device to your PC.
4. Select **Kies** → **OK**.  
Refer to the Kies help for more information.