

SONY®

4-172-673-21(1)

DSC-HX5/HX5V

GB Digital Still Camera/Instruction Manual

ES Cámara fotografía digital/Manual de instrucciones

GB

ES



InfoLITHIUM™



AVCHD HDMI

Cyber-shot

English

Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. DSC-HX5/HX5V

Serial No. _____

WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS DANGER TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

If the shape of the plug does not fit the power outlet, use an attachment plug adaptor of the proper configuration for the power outlet.

CAUTION

| Battery pack

If the battery pack is mishandled, the battery pack can burst, cause a fire or even chemical burns. Observe the following cautions.

- Do not disassemble.
- Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit and do not allow metal objects to come into contact with the battery terminals.
- Do not expose to high temperature above 60°C (140°F) such as in direct sunlight or in a car parked in the sun.
- Do not incinerate or dispose of in fire.
- Do not handle damaged or leaking lithium ion batteries.

- Be sure to charge the battery pack using a genuine Sony battery charger or a device that can charge the battery pack.
- Keep the battery pack out of the reach of small children.
- Keep the battery pack dry.
- Replace only with the same or equivalent type recommended by Sony.
- Dispose of used battery packs promptly as described in the instructions.

Battery charger

Even if the CHARGE lamp is not lit, the battery charger is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet (wall socket). If some trouble occurs while using the battery charger, immediately shut off the power by disconnecting the plug from the wall outlet (wall socket).

For Customers in the U.S.A. and Canada

RECYCLING LITHIUM-ION BATTERIES

Lithium-Ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.



For more information regarding recycling of rechargeable batteries, call toll free

1-800-822-8837, or visit <http://www.rbrcl.org/>

Caution: Do not handle damaged or leaking Lithium-Ion batteries.

Battery pack

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

GB

For Customers in the U.S.A.

UL is an internationally recognized safety organization.
The UL Mark on the product means it has been UL Listed.

If you have any questions about this product, you may call:

Sony Customer Information Center
1-800-222-SONY (7669)

The number below is for the FCC related matters only.

| Regulatory Information

Declaration of Conformity

Trade Name: SONY

Model No.: DSC-HX5V

Responsible Party: Sony Electronics Inc.

Address: 16530 Via Esprillo,
San Diego, CA 92127 U.S.A.

Telephone No.: 858-942-2230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

| CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

| Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

GB – Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

For Customers in Europe



Hereby, Sony Corporation, declares that this DSC-HX5V Digital Still Camera is in compliance with the essential requirements and other relevant provisions of the Directive 1999/5/EC. For details, please access the following URL:

<http://www.compliance.sony.de/>

Notice for the customers in the countries applying EU Directives

GB

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

This product has been tested and found compliant with the limits set out in the R&TTE Directive for using connection cables shorter than 3 meters (9.8 feet).

Attention

The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit.

Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product,

please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

I Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)



This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.

On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.

By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.



For all other batteries, please view the section on how to remove the battery from the product safely.

Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Notice for customers in the United Kingdom

A moulded plug complying with BS 1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i.e., marked with an  or  mark) must be used.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

Table of contents

Getting started

Refer to “Cyber-shot Handbook” (PDF) on supplied CD-ROM	8
Checking the accessories supplied	8
Notes on using the camera.....	8
Identifying parts	12
Charging the battery pack.....	13
Inserting the battery pack/a memory card (sold separately)	15
Setting the clock	18

GB

Shooting/viewing images

Shooting still images.....	19
Shooting movies	20
Viewing images.....	21

“Cyber-shot Handbook” (PDF)

Learning more about the camera (“Cyber-shot Handbook”).....	22
---	----

Others

List of icons displayed on the screen	23
Number of still images and recordable time of movies	25
Precautions	26
Specifications	28

Refer to “Cyber-shot Handbook” (PDF) on supplied CD-ROM

For details on advanced operations, please read “Cyber-shot Handbook” (PDF) on the CD-ROM (supplied) using a computer.

Refer to “Cyber-shot Handbook” for in-depth instructions on shooting or viewing images and connecting the camera to your computer, printer or TV (page 22).



Checking the accessories supplied

- Battery charger BC-CSGD/BC-CSGE (1)
- Power cord (mains lead) (not supplied in the USA and Canada) (1)
- Rechargeable battery pack NP-BG1 (1)/Battery case (1)
- USB, A/V cable for multi-use terminal (1)
- HDMI adaptor (1)
- Wrist strap (1)
- CD-ROM (1)
 - Cyber-shot application software
 - “Cyber-shot Handbook”
- Instruction Manual (this manual) (1)

Notes on using the camera

Changing the language setting


The screen language setting, press the MENU button, then select

 (Settings) →  (Main Settings) → [Language Setting].

Internal memory and memory card back up

Do not turn off the camera, remove the battery pack, or remove the memory card while the access lamp is lit. Otherwise, the internal memory data or the memory card may be damaged. Be sure to make a backup copy to protect your data.

Functions built into this camera

- This manual describes the functions of GPS-compatible/incompatible devices, TransferJet-compatible/incompatible devices, 1080 60i-compatible devices and 1080 50i-compatible devices.
 - To determine whether your camera supports the GPS function, check the model name of your camera.
GPS-compatible: DSC-HX5V
GPS-incompatible: DSC-HX5
 - To check if your camera supports the TransferJet function, and whether it is a 1080 60i-compatible device or 1080 50i-compatible device, check for the following marks on the bottom of the camera.
TransferJet-compatible device:  (TransferJet)
1080 60i-compatible device: 60i
1080 50i-compatible device: 50i
- In an airplane, make sure to turn off the camera following cabin announcements.

GB

On GPS-compatible devices (DSC-HX5V only)

- Use GPS in accordance with regulations of countries and regions where you use it.
- The direction or location information will be recorded to your camera in the default setting. If you do not record the direction or location information, set [GPS setting] to [Off].

On database files

When you insert a memory card without a database file into the camera and turn on the power, part of the memory card capacity is used to automatically create a database file. It may take some time until you can perform the next operation.

Notes on recording/playback

- When you use a memory card with this camera for the first time, it is recommended to format the card using the camera for stable performance of the memory card before shooting.
Note that formatting permanently erases all data on the memory card, and is unrecoverable. Save precious data on a computer, etc.
- If you repeatedly record/delete images, fragmentation of data may occur on the memory card. Movies may not be able to be saved or recorded. In such a case, save your images to a PC or other storage location, then [Format].
- Before you start recording, make a trial recording to make sure that the camera is working correctly.
- The camera is neither dust-proof, nor splash-proof, nor water-proof. Read “Precautions” (page 26) before operating the camera.

- Avoid exposing the camera to water. If water enters inside the camera, a malfunction may occur. In some cases, the camera cannot be repaired.
- Do not aim the camera at the sun or other bright light. It may cause the malfunction of the camera.
- Do not use the camera near a location that generates strong radio waves or emits radiation. Otherwise, the camera may not properly record or play back images.
- Using the camera in sandy or dusty locations may cause malfunctions.
- If moisture condensation occurs, remove it before using the camera.
- Do not shake or strike the camera. It may cause a malfunction and you may not be able to record images. Furthermore, the recording media may become unusable or image data may be damaged.
- Clean the flash surface before use. The heat of flash emission may cause dirt on the flash surface to become discolored or to stick to the flash surface, resulting in insufficient light emission.

Notes on the LCD screen and lens

- The LCD screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process, and do not affect the recording.
- When the battery level becomes low, the lens might stop moving. Insert a charged battery pack and turn on the camera again.

On camera's temperature

Your camera and battery may get warm due to continuous use, but it is not a malfunction.

On the overheat protection

Depending on the camera and battery temperature, you may be unable to record movies or the power may turn off automatically to protect the camera. A message will be displayed on the LCD screen before the power turns off or you can no longer record movies.

On image data compatibility

- The camera conforms with DCF (Design rule for Camera File system) universal standard established by JEITA (Japan Electronics and Information Technology Industries Association).
- Sony does not guarantee that the camera will play back images recorded or edited with other equipment, or that other equipment will play back images recorded with the camera.

Notes when playing movies on other devices

- This camera uses MPEG-4 AVC/H.264 High Profile for AVCHD format recording. Movies recorded in AVCHD format with this camera cannot be played by the following devices.
 - Other devices compatible with AVCHD format that does not support High Profile
 - Devices incompatible with the AVCHD format
- This camera also uses MPEG-4 AVC/H.264 Main Profile for MP4 format recording. For this reason, movies recorded in MP4 format with this camera cannot be played on devices other than those that support MPEG-4 AVC/H.264.
- Discs recorded with HD image quality (high definition) can be played back only on AVCHD format-compatible devices. DVD-based players or recorders cannot play back HD image quality discs, as they are incompatible with the AVCHD format. Also, DVD-based players or recorders may fail to eject HD image quality discs.

GB 




Warning on copyright

Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws.

No compensation for damaged content or recording failure

Sony cannot compensate for failure to record or loss or damage of recorded content due to a malfunction of the camera or recording media, etc.

Identifying parts

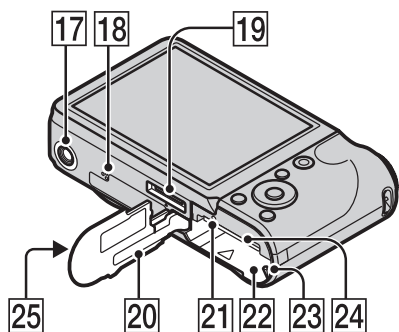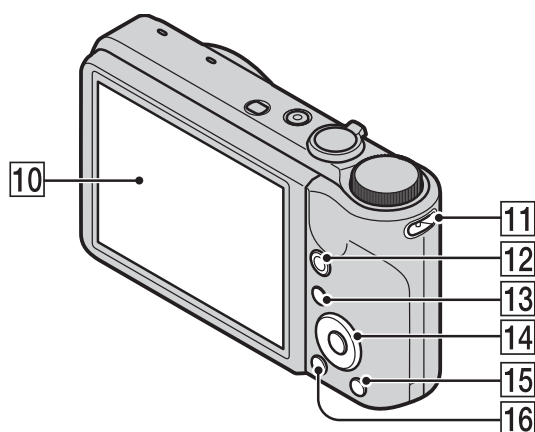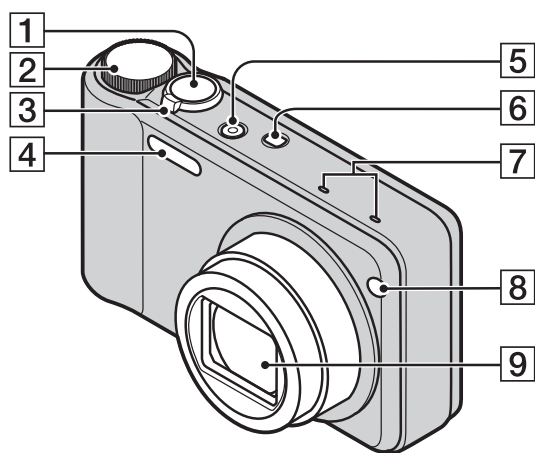


- 1** Shutter button
- 2** Mode dial
- 3** For shooting: W/T (Zoom) lever
For viewing: (Playback zoom) lever/ (Index) lever
- 4** Flash
- 5** ON/OFF (Power) button
- 6** (Burst/Bracket) button
- 7** Microphone
- 8** Self-timer lamp/Smile Shutter lamp/AF illuminator
- 9** Lens
- 10** LCD screen
- 11** Hook for wrist strap
- 12** MOVIE (Movie) button
- 13** (Playback) button
- 14** Control button
Menu on: ////
Menu off: DISP//
- 15** (Delete) button
- 16** MENU button
- 17** Tripod receptacle
 - Use a tripod with a screw less than 5.5 mm (7/32 inches) long. Otherwise, you cannot firmly secure the camera, and damage to the camera may occur.
- 18** Speaker
- 19** Multi connector
- 20** Battery/memory card cover
- 21** Access lamp
- 22** Battery insertion slot
- 23** Battery eject lever
- 24** Memory card slot
- 25** (TransferJet™) mark

Charging the battery pack

1 Insert the battery pack into the battery charger.

- You can charge the battery even when it is partially charged.

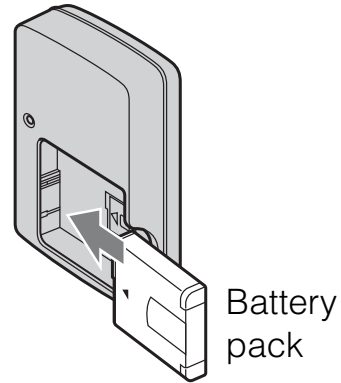

2 Connect the battery charger to the wall outlet (wall socket).

If you continue charging the battery pack for about one more hour after the CHARGE lamp turns off, the charge will last slightly longer (full charge).


CHARGE lamp

Lit: Charging


Off: Charging finished
(normal charge)

For customers in the USA and Canada

GB

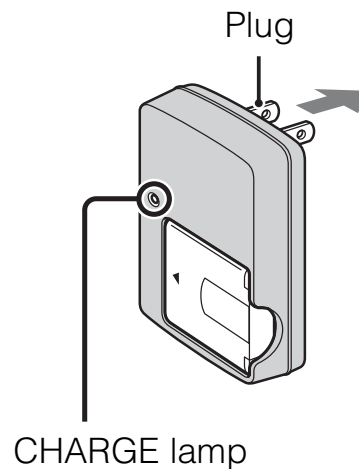

For customers in countries/regions other than the USA and Canada

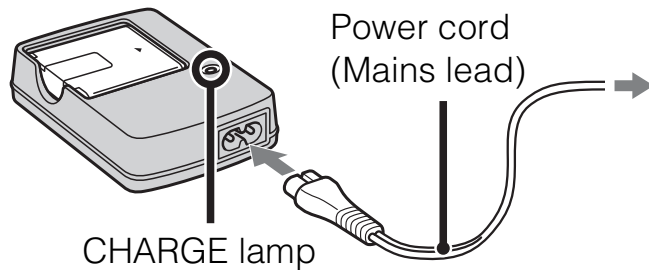

3 When charging is finished, disconnect the battery charger.

■ Charging time

Full charge time	Normal charge time
Approx. 330 min.	Approx. 270 min.

Notes

- The table above shows the time required to charge a fully depleted battery pack at a temperature of 25 °C (77 °F). Charging may take longer depending on conditions of use and circumstances.
- Connect the battery charger to the nearest wall outlet (wall socket).
- When charging is finished, disconnect the power cord (mains lead) from the wall outlet (wall socket), and remove the battery pack from the battery charger.
- Be sure to use the battery pack or the battery charger of the genuine Sony brand.

■ Battery life and number of still images you can record/view

	Battery life (min.)	No. of Images
Recording	Approx. 155	Approx. 310
Viewing	Approx. 260	Approx. 5200

Notes

- The number of still images that can be recorded is based on the CIPA standard, and is for shooting under the following conditions.
(CIPA: Camera & Imaging Products Association)
 - DISP (Screen Display Settings) is set to [Normal].
 - Shooting once every 30 seconds.
 - The zoom is switched alternately between the W and T ends.
 - The flash strobes once every two times.
 - The power turns on and off once every ten times.
 - A fully charged battery pack (supplied) is used at an ambient temperature of 25 °C (77 °F).
 - Using Sony “Memory Stick PRO Duo” media (sold separately).
- Figures are calculated based on optimum GPS triangulating conditions. The number of recordable images/time may vary depending on GPS triangulating status (DSC-HX5V only).




Using the camera abroad


You can use the camera and the battery charger (supplied) in any country or region where the power supply is within 100 V to 240 V AC, 50/60 Hz. Do not use an electronic transformer (travel converter). This may cause a malfunction.

Inserting the battery pack/a memory card (sold separately)

- 1 Open the cover.

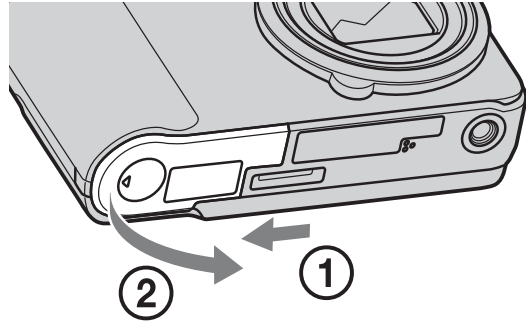


- 2 Insert the memory card (sold separately).
With the notched corner facing as illustrated, insert the memory card until it clicks into place.

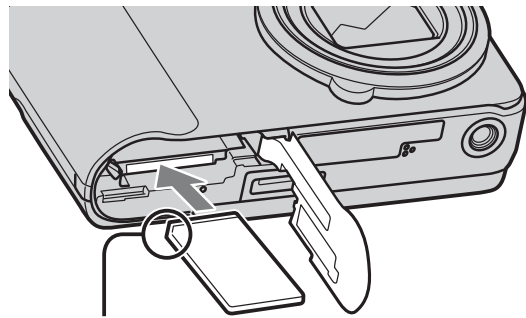


GB

Ensure the notched corner faces correctly.

- 3 Insert the battery pack.
Check the direction of the battery, insert the battery pack while pressing the battery eject lever in the direction of the arrow. Insert the battery until the battery eject lever is locked.

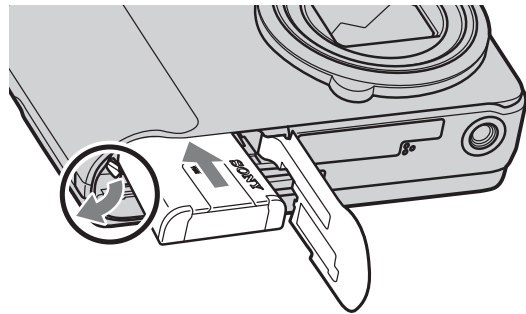

- 4 Close the cover.
Closing the cover with the battery inserted incorrectly may damage the camera.

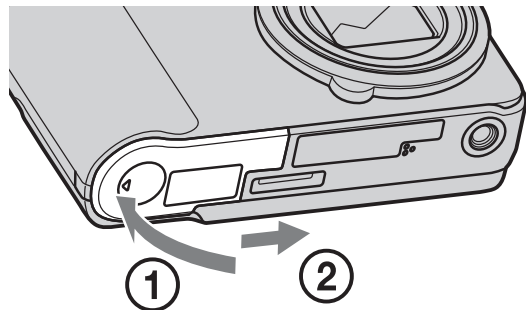

■ Memory cards that you can use

The following memory cards are compatible with this camera: “Memory Stick PRO Duo” media, “Memory Stick PRO-HG Duo” media, “Memory Stick Duo” media, SD memory cards and SDHC memory cards. MultiMediaCard is not compatible.

In this manual, “Memory Stick PRO Duo” media, “Memory Stick PRO-HG Duo” media and “Memory Stick Duo” media are collectively referred to as “Memory Stick Duo” media.

On “Memory Stick Duo” media




For recording movies, it is recommended that you use a “Memory Stick Duo” media of 1 GB or larger marked with:

- **MEMORY STICK PRO DUO** (“Memory Stick PRO Duo” media)*
- **MEMORY STICK PRO-HG DUO** (“Memory Stick PRO-HG Duo” media)

* Only “Memory Stick PRO Duo” media marked with Mark2 can be used.

For details on the number of images/time that can be recorded, see page 25.

■ To remove the memory card

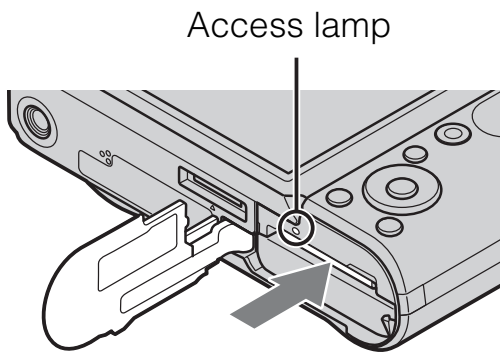



Make sure that the access lamp is not lit, then push the memory card in once.

Note


- Never remove the memory card/battery pack when the access lamp is lit. This may cause damage to data in the memory card/internal memory.

■ When there is no memory card inserted

Images are stored in the camera’s internal memory (approximately 45 MB).

To copy images from the internal memory to a memory card, insert the memory card in the camera, then select MENU →  (Settings) →  (Memory Card Tool) → [Copy].

■ To remove the battery pack

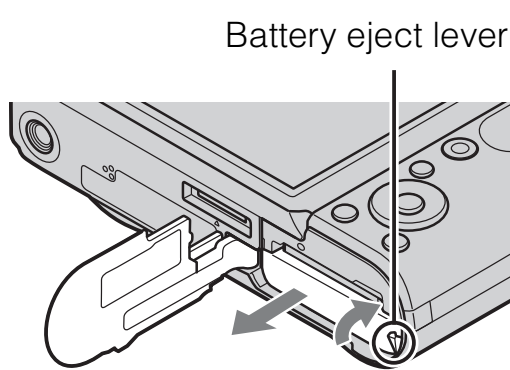

Slide the battery eject lever. Be sure not to drop the battery pack.

■ Checking the remaining battery charge

A remaining charge indicator appears on the LCD screen.



GB

Notes


- It takes about one minute until the correct remaining charge indicator appears.
- The remaining charge indicator may not be correct under certain circumstances.
- When [Power Save] is set to [Stamina] or [Standard], if you do not operate the camera running on a battery pack for a certain amount of time, the brightness level on the LCD screen becomes dark, and then the camera automatically turns off to prevent wearing down the battery pack (Auto Power off).
- To prevent terminal contamination, or short-circuiting with metallic objects, etc., always carry or store the battery in the supplied case.

Setting the clock

1 Press the ON/OFF (Power) button.

The camera is turned on.

- It may take time for the power to turn on and allow operation.

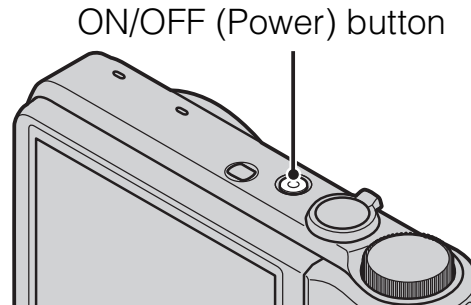


2 Select a setting item with ▲/▼ on the control button, then press ●.

Date & Time Format: Selects the date and time display format.

Daylight Savings: Selects Daylight Savings On/Off.

Date & Time: Sets the date and time.

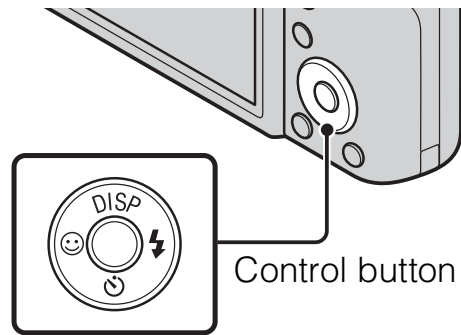

3 Set the numeric value and desired settings with ▲/▼/◀/▶, then press ●.

- Midnight is indicated as 12:00 AM, and noon as 12:00 PM.

4 Follow the instructions on the screen. Select your desired area with ▲/▼/◀/▶ on the control button, then press ●.


5 Select [OK], then press ●.

■ Setting the date and time again

Press the MENU button, then select  (Settings) →  (Clock Settings).


Shooting still images

- 1 Set the mode dial to **i** (Intelligent Auto Adjustment), then press the ON/OFF (Power) button.

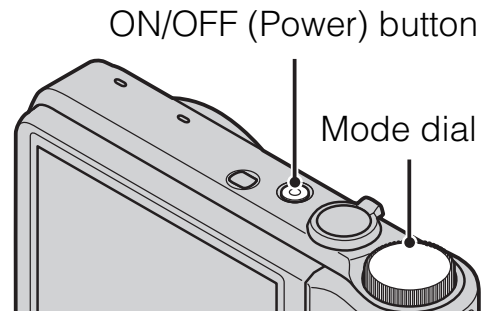

- 2 Hold the camera steady as illustrated.


- Turn the W/T (zoom) lever to (T) to zoom in, and to (W) to zoom out.

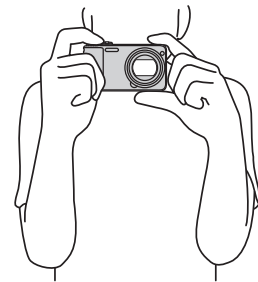

GB

- 3 Press the shutter button halfway down to focus.

When the image is in focus, a beep sounds and the ● indicator lights.

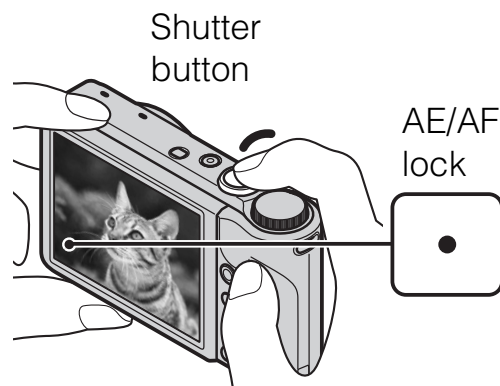


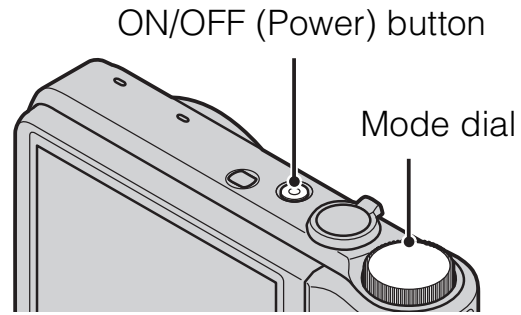
- 4 Press the shutter button fully down.

- Do not cover the part showing with the illustration.



Shooting movies


- 1 Set the mode dial to  (Movie Mode), then press the ON/OFF (Power) button.



- 2 Press the shutter button fully down to start recording.

- You can start recording also by pressing MOVIE (Movie) button.
- Do not cover the microphone.

Do not cover with your fingers.

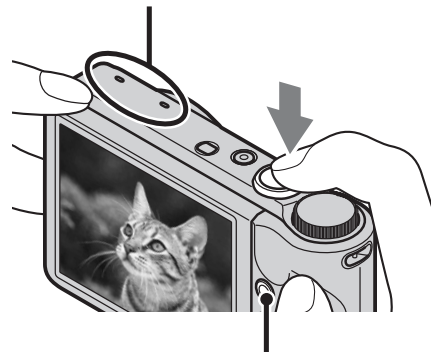



- 3 Press the shutter button fully down again to stop recording.
-

Note

- The operating sound of the lens is recorded when the zoom function operates while shooting a movie.


■ Changing the Movie format

Change the Movie format by MENU →  (Settings) →  (Shooting Settings) → [Movie format].



Viewing images


1 Press the (Playback) button.

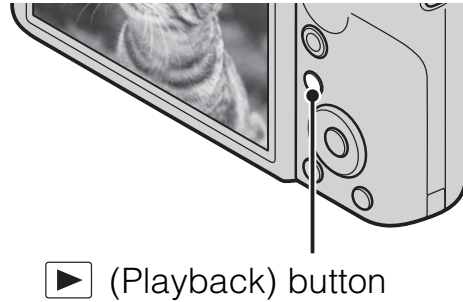- When images on a memory card recorded with other cameras are played back on this camera, the registration screen for the data file appears.






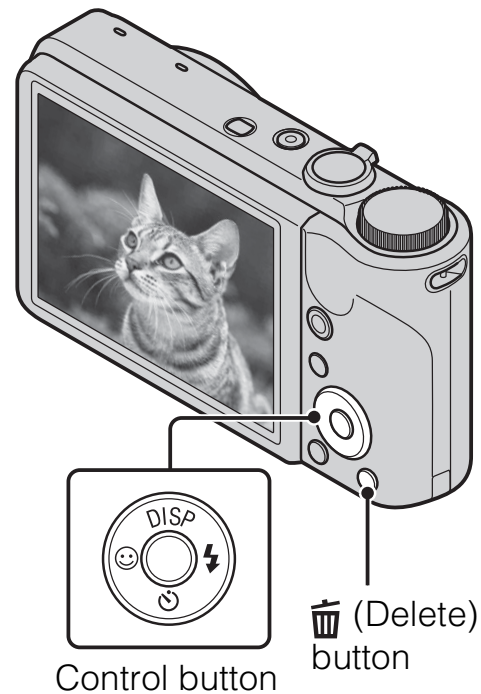
■ Selecting next/previous image

Select an image with  (next)/ (previous) on the control button.

- Press  in the center of the control button to view movies.

■ Deleting an image

- ① Press  (Delete) button.
- ② Select [This Image] with  on the control button, then press .



■ Returning to shooting images

Press the shutter button halfway down.

■ Turning off the camera

Press ON/OFF (Power) button.

Learning more about the camera ("Cyber-shot Handbook")

"Cyber-shot Handbook", which explains how to use the camera in detail, is included on the CD-ROM (supplied). Refer to it for in-depth instructions on the many functions of the camera.

■ For Windows users


-
- 1 Turn on your computer, and insert the CD-ROM (supplied) into the CD-ROM drive.
-
- 2 Click [Cyber-shot Handbook].
-
- 3 Start "Cyber-shot Handbook" from the shortcut on the desktop.
-

■ For Macintosh users

-
- 1 Turn on your computer, and insert the CD-ROM (supplied) into the CD-ROM drive.
-
- 2 Select the [Handbook] folder and copy "Handbook.pdf" stored in the [GB] folder to your computer.
-
- 3 After copying is complete, double-click "Handbook.pdf".
-


List of icons displayed on the screen

When shooting still images

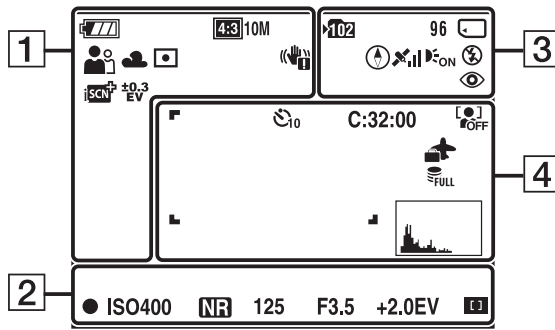

- The icons are limited in Easy Shooting mode.

When shooting movies

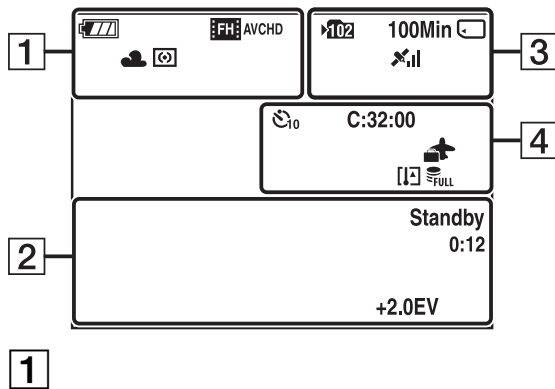









Display	Indication
	Battery remaining
	Low battery warning
	Image Size/Quality
	Scene Selection
	Mode dial (Intelligent Auto Adjustment/Anti Motion Blur/Hand-held Twilight/Backlight Correction HDR/Movie Mode/iSweep Panorama/Manual Exposure Shooting/Program Auto)
	Scene Recognition icon
	White balance

Display	Indication
	Metering Mode
	Vibration warning
	Scene Recognition
	Burst Shooting Interval
	Bracket Shooting
	Bracket Settings
	Smile Detection Sensitivity indicator
	Zoom scaling








 

Display	Indication
	AE/AF lock
	ISO number
	NR slow shutter
	Shutter speed
	Aperture value
	Exposure Value
	Focus
	Recording a movie/ Standby a movie
	Recording time (m:s)

GB

3

Display	Indication
	Recording folder
96	Number of recordable images
100Min	Recordable time
	Recording/Playback Media (Memory card, internal memory)
	Direction (DSC-HX5V only)
	GPS triangulating status (DSC-HX5V only)
	AF illuminator
	Red-eye reduction
	Flash mode
	Flash charging

4

Display	Indication
	Self-timer
C:32:00	Self-diagnosis display
	Destination
	Overheating warning
	Face Detection
	Database file full/ Database file error
	AF range finder frame
	Spot metering cross hair
	Histogram <ul style="list-style-type: none">  appears when histogram display is disabled.

Number of still images and recordable time of movies

The number of still images and recordable time may vary depending on the shooting conditions and the memory card.

■ Still images/Panoramic images

(Units: Images)

Capacity Size	Internal memory	Memory card formatted with this camera				
	Approx. 45 MB	2 GB	4 GB	8 GB	16 GB	32 GB
10M	9	402	808	1637	3334	6588
5M	14	582	1168	2366	4819	9524
VGA	284	11760	23600	47810	97350	192380
16:9(7M)	9	400	802	1626	3311	6543
16:9(2M)	47	1960	3934	7968	16220	32060
Wide (horizontal)	12	516	1035	2096	4270	8437
Standard (horizontal)	15	625	1255	2543	5178	10230
Wide (vertical)	10	423	849	1719	3502	6920
Standard (vertical)	10	442	887	1797	3660	7232

GB

Notes

- When the number of remaining shootable images is greater than 99,999, the “>99999” indicator appears.
- When an image shot with other cameras is played back on this camera, the image may not appear in the actual image size.

■ Movies

The table below shows the approximate maximum recording times. These are the total times for all movie files. Continuous shooting is possible for approximately 29 minutes.

(Units: hour : minute : second)

Capacity Quality/Size	Internal memory	Memory card formatted with this camera				
	Approx. 45 MB	2 GB	4 GB	8 GB	16 GB	32 GB
AVC HD 17M FH	—	0:14:00	0:28:30	0:58:10	1:58:50	3:55:20
AVC HD 9M HQ	—	0:28:00	0:57:00	1:56:20	3:57:50	7:50:40
MP4 12M	—	0:20:40	0:41:40	1:24:40	2:52:30	5:41:00
MP4 6M	—	0:40:40	1:21:50	2:45:50	5:37:50	11:07:50
MP4 3M	0:01:40	1:15:10	2:31:10	5:06:20	10:23:50	20:33:00

Note

- The continuous shooting time differs according to the shooting conditions (temperature, etc.). The value above apply when DISP (Screen Display Settings) is set to [Normal].

Precautions

Do not use/store the camera in the following places

- In an extremely hot, cold or humid place
In places such as in a car parked in the sun, the camera body may become deformed and this may cause a malfunction.
- Under direct sunlight or near a heater
The camera body may become discolored or deformed, and this may cause a malfunction.
- In a location subject to rocking vibration
- Near strong magnetic place
- In sandy or dusty places
Be careful not to let sand or dust get into the camera. This may cause the camera to malfunction, and in some cases this malfunction cannot be repaired.

On carrying

Do not sit down in a chair or other place with the camera in the back pocket of your trousers or skirt, as this may cause malfunction or damage the camera.

On cleaning

Cleaning the LCD screen

Wipe the screen surface with an LCD cleaning kit (sold separately) to remove fingerprints, dust, etc.

Cleaning the lens

Wipe the lens with a soft cloth to remove fingerprints, dust, etc.

Cleaning the camera surface

Clean the camera surface with a soft cloth slightly moistened with water, then wipe the surface with a dry cloth. To prevent damage to the finish or casing:

- Do not expose the camera to chemical products such as thinner, benzine, alcohol, disposable cloths, insect repellent, sunscreen or insecticide.
- Do not touch the camera with any of the above on your hand.
- Do not leave the camera in contact with rubber or vinyl for a long time.

GB

On operating temperatures

Your camera is designed for use under the temperatures between 0 °C and 40 °C (32 °F and 104 °F). Shooting in extremely cold or hot places that exceed this range is not recommended.

On the internal rechargeable backup battery

This camera has an internal rechargeable battery for maintaining the date and time and other settings regardless of whether the power is on or off.

This rechargeable battery is continually charged as long as you are using the camera. However, if you use the camera for only short periods, it discharges gradually, and if you do not use the camera at all for about one month it becomes completely discharged. In this case, be sure to charge this rechargeable battery before using the camera.

However, even if this rechargeable battery is not charged, you can still use the camera, but the date and time will not be indicated.

Charging method of the internal rechargeable backup battery

Insert charged battery pack in the camera, and then leave the camera for 24 hours or more with the power off.

Specifications

Camera

[System]

Image device: 7.59 mm (1/2.4 type)

Exmor R CMOS sensor

Total pixel number of camera:

Approx. 10.6 Megapixels

Effective pixel number of camera:

Approx. 10.2 Megapixels

Lens: Sony G 10× zoom lens

f = 4.25 mm – 42.5 mm (25 mm – 250 mm (35 mm film equivalent))

F3.5 (W) – F5.5 (T)

While shooting movies (16:9):

30 mm – 300 mm

While shooting movies (4:3):

36 mm – 360 mm

Exposure control: Automatic exposure,

Scene Selection (11 modes)

White balance: Automatic, Daylight,

Cloudy, Fluorescent 1/2/3,

Incandescent, Flash, One Push

Signal format:

For 1080 50i: PAL color, CCIR standards HDTV 1080/50i specification

For 1080 60i: NTSC color, EIA standards HDTV 1080/60i specification

File format:

Still images: JPEG (DCF Ver. 2.0, Exif Ver. 2.21, MPF Baseline) compliant, DPOF compatible

Movies (AVCHD format):

AVCHD Ver. 1.0 compliant

Video: MPEG-4 AVC/H.264

Audio: Dolby Digital 2ch, equipped with Dolby Digital Stereo Creator

- Manufactured under license from Dolby Laboratories.

Movies (MP4 format):

Video: MPEG-4 AVC/H.264

Audio: MPEG-4 AAC-LC 2ch

Recording media: Internal Memory (Approx. 45 MB), “Memory Stick Duo” media, SD memory cards, SDHC memory cards (Class 4, 6, 10)

Flash: Flash range (ISO sensitivity (Recommended Exposure Index) set to Auto):

Approx. 0.05 m to 3.8 m (W) (2 inches to 12 ft 5 5/8 inches)

Approx. 1.0 m to 2.6 m (T) (3 ft 3 3/8 inches to 8 ft 6 3/8 inches)

[Input and Output connectors]

Multi use terminal Type2c

(AV-out (SD/HD Component)/HDMI/USB/DC-in):

Video output

Audio output (Stereo)

USB communication

USB communication: Hi-Speed USB (USB 2.0 compliant)

[LCD screen]

LCD panel: 7.5 cm (3.0 type) TFT drive

Total number of dots: 230 400 (960 × 240) dots

[Power, general]

Power: Rechargeable battery pack

NP-BG1, 3.6 V

NP-FG1 (sold separately), 3.6 V

AC-LS5 AC Adaptor (sold separately), 4.2 V

Power consumption (during shooting): 1.1 W

Operating temperature: 0 °C to 40 °C
(32 °F to 104 °F)
Storage temperature: –20 °C to +60 °C
(–4 °F to +140 °F)
Dimensions: 102.9 × 57.7 × 28.9 mm
(4 1/8 × 2 3/8 × 1 3/16 inches)
(W/H/D, excluding protrusions)
Mass (including NP-BG1 battery pack,
Memory card): Approx. 200 g
(7.1 oz.)
Microphone: Stereo
Speaker: Monaural
Exif Print: Compatible
PRINT Image Matching III:
Compatible
PictBridge: Compatible

BC-CSGD/BC-CSGE battery charger


Power requirements: AC 100 V to
240 V, 50/60 Hz, 2 W
Output voltage: DC 4.2 V, 0.25 A
Operating temperature: 0 °C to 40 °C
(32 °F to 104 °F)
Storage temperature: –20 °C to +60 °C
(–4 °F to +140 °F)
Dimensions: Approx. 55 × 24 × 83 mm
(2 1/4 × 3 1/32 × 3 3/8 inches)
(W/H/D)
Mass: Approx. 55 g (1.9 oz.)

Rechargeable battery pack NP-BG1

Used battery: Lithium-ion battery
Maximum voltage: DC 4.2 V
Nominal voltage: DC 3.6 V
Maximum charge current: 1.44 A
Maximum charge voltage: DC 4.2 V
Capacity:
typical: 3.4 Wh (960 mAh)
minimum: 3.3 Wh (910 mAh)

Design and specifications are subject to
change without notice.

Trademarks

- The following marks are trademarks of Sony Corporation.
Cyber-shot, “Cyber-shot,”
“Memory Stick,”  “Memory Stick PRO,” **MEMORY STICK PRO**,
“Memory Stick Duo,”
MEMORY STICK DUO, “Memory Stick PRO Duo,”
MEMORY STICK PRO DUO, “Memory Stick PRO-HG Duo,”
MEMORY STICK PRO-HG DUO, “Memory Stick Micro,” “MagicGate,”
MAGICGATE, “PhotoTV HD,”
“InfoLITHIUM,” “DVDirect,”
TransferJet, TransferJet logos
- “AVCHD” and “AVCHD” logotype are trademarks of Panasonic Corporation and Sony Corporation.
- “Blu-ray Disc” and the logo are trademarks.
- Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- Microsoft, Windows, DirectX and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks or registered trademarks of Apple Inc..
- Intel and Pentium are trademarks or registered trademarks of Intel Corporation.
- SDHC logo is a trademark.



- MultiMediaCard is a trademark of MultiMediaCard Association.

GB

- “PlayStation” is a registered trademark of Sony Computer Entertainment Inc..
- Adobe and Reader are either trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- The OBEX word mark and logo are registered trademarks and are owned by Infrared Data Association (IrDA[®]).
- In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the TM or ® marks are not used in all cases in this manual.

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

<http://www.sony.net/>

Printed on 70% or more recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

Printed in China



SONY®



Table of
contents

Operation
Search

MENU/Settings
Search

Index

Cyber-shot

Cyber-shot Handbook

DSC-HX5/HX5V/HX5C

How to use this handbook

Click on a button at upper right to jump to the corresponding page.
This is convenient when searching for a function you want to view.



- ← Search for information by function.
- ← Search for information by operation.
- ← Search for information in a listing of MENU/Settings items.
- ← Search for information by keyword.

Table of contents

Operation Search

MENU/Settings Search

Index

Marks and notations used in this handbook

Red Eye Reduction

The flash strobes two or more times before shooting to reduce the red-eye phenomenon when using the flash.

1 Set the camera to shooting mode.

2 MENU → (Settings) → (Shooting Settings) → [Red Eye Reduction] → desired mode → on the control button

<input checked="" type="checkbox"/> Auto	When the Face Detection function is activated, the flash strobes automatically to reduce the red-eye phenomenon.
<input type="checkbox"/> On	The flash always strobes to reduce the red-eye phenomenon.
<input type="checkbox"/> Off	Does not use Red Eye Reduction.

Notes

- To avoid blurring of images, hold the camera firmly until the shutter is released. It usually takes a second until the shutter is released, and also be sure not to allow the subject to move during this period.
- Red Eye Reduction may not produce the desired effects. It depends on individual differences and conditions, such as distance to the subject, or if the subject looked away from the pre-strobe.
- If you do not use the Face Detection function, Red Eye Reduction does not work, even when you select [Auto].
- [Red Eye Reduction] is set to [OFF] in the following situations:
 - In Anti Motion Blur mode
 - In Hand-held Twilight mode
 - When Scene Selection is set to (High Sensitivity) mode
 - When the Smile Shutter function is activated

What causes the red-eye phenomenon?

Pupils become dilated in dark environments. Flash light is reflected off the blood vessels at the back of the eye (retina), causing the "red-eye" phenomenon.

Other ways to reduce red-eye

- Select (High Sensitivity) mode in Scene Selection. (The flash is set to [OFF] automatically.)
- When the eyes of the subject turn out red, correct the image with [Retouch] → [Red Eye Correction] on the viewing menu or with the supplied software "PMB".

In this handbook, the sequence of operations is shown by arrows (→). Operate the camera in the order indicated. Marks are shown as they appear in the camera's default setting.

The default setting is indicated by .

Indicates cautions and limitations relevant to the correct operation of the camera.

Indicates information that is useful to know.

Notes on using the camera

Notes on the types of memory card that you can use (sold separately)

The following memory cards are compatible with this camera: “Memory Stick PRO Duo” media, “Memory Stick PRO-HG Duo” media, “Memory Stick Duo” media, SD memory cards and SDHC memory cards. MultiMediaCard is not compatible. Memory cards with a capacity up to 32 GB have been confirmed to operate properly with the camera.

In this manual, “Memory Stick PRO Duo” media, “Memory Stick PRO-HG Duo” media and “Memory Stick Duo” media are collectively referred to as “Memory Stick Duo” media.

On “Memory Stick Duo” media:



For recording movies, it is recommended that you use a “Memory Stick Duo” media of 1 GB or larger marked with:

- MEMORY STICK PRO DUO (“Memory Stick PRO Duo” media)*
- MEMORY STICK PRO-HG DUO (“Memory Stick PRO-HG Duo” media)

* Only “Memory Stick PRO Duo” media marked with Mark2 can be used.

- For details on “Memory Stick Duo” media, see page 150.


When using a “Memory Stick Duo” media with standard sized “Memory Stick” media slot

You can use the “Memory Stick Duo” media by inserting it into the “Memory Stick Duo” media Adaptor (sold separately).



“Memory Stick Duo” media
Adaptor

Functions built into this camera

- This manual describes the functions of GPS-compatible/incompatible devices, TransferJet-compatible/incompatible devices, 1080 60i-compatible devices and 1080 50i-compatible devices.
 - To determine whether your camera supports the GPS function, check the model name of your camera.
GPS-compatible: DSC-HX5V
GPS-incompatible: DSC-HX5/HX5C
 - To check if your camera supports the TransferJet function, and whether it is a 1080 60i-compatible device or 1080 50i-compatible device, check for the following marks on the bottom of the camera.
TransferJet-compatible device:
  (TransferJet)
 1080 60i-compatible device: 60i
 1080 50i-compatible device: 50i
- The DSC-HX5C is not compatible with the TransferJet function.
- In an airplane, make sure to turn off the camera following cabin announcements.

On GPS-compatible devices (DSC-HX5V only)


- Use GPS in accordance with regulations of countries and regions where you use it.
- The direction and location information will be recorded to your camera in the default setting. If you do not record the direction and location information, set [GPS setting] to [Off] (page 104).

Notes on the battery pack

- Charge the battery pack (supplied) before using the camera for the first time.
- You can charge the battery pack even if it is not completely discharged. In addition, even if the battery pack is not fully charged, you can use the partially charged capacity of the battery pack as is.
- If you do not intend to use the battery pack for a long time, use up the existing charge and remove it from the camera, then store it in a cool, dry place. This is to maintain the battery pack functions.
- For details on the usable battery pack, see page 152.

Notes on the LCD screen and lens

- The LCD screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process and do not affect the recording.

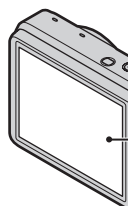

Black, white, red, blue or green dots

- Exposing the LCD screen or the lens to direct sunlight for long periods may cause malfunctions. Be careful when placing the camera near a window or outdoors.
- Do not press against the LCD screen. The screen may be discolored and that may cause a malfunction.
- Images may trail across on the LCD screen in a cold location. This is not a malfunction.
- Be careful not to bump the movable lens, and be careful not to apply force to it.

On moisture condensation

- If the camera is brought directly from a cold to a warm location, moisture may condense inside or outside the camera. This moisture condensation may cause a malfunction of the camera.
- If moisture condensation occurs, turn off the camera and wait about an hour for the moisture to evaporate. Note that if you attempt to shoot with moisture remaining inside the lens, you will be unable to record clear images.

The images used in this Handbook

The images used as examples in this Handbook are reproduced images, and are not actual images shot using this camera.

Note when playing movies on other devices

This camera uses MPEG-4 AVC/H.264 High Profile for AVCHD format recording. Movies recorded in AVCHD format with this camera cannot be played by the following devices.

- Other AVCHD format compatible devices which are not compatible with High Profile
- Devices which are not compatible with the AVCHD format

This camera also uses MPEG-4 AVC/H.264 Main Profile for MP4 format recording.

For this reason, movies recorded in MP4 format with this camera cannot be played on devices other than those that support MPEG-4 AVC/H.264.

Table of contents

Notes on using the camera

How to use this handbook	2
Notes on using the camera	3
Operation Search	8
MENU/Settings Search	11
Identifying parts	15
List of icons displayed on the screen	16
Using the mode dial	18
Using the internal memory	19

Shooting

Intelligent Auto Adjustment	20
Easy Shooting	21
Anti Motion Blur	23
Hand-held Twilight	24
Backlight Correction HDR	25
Scene Selection	26
Movie Mode	28
Intelligent Sweep Panorama	29
Manual Exposure Shooting	31
Program Auto	32
Zoom	33
DISP (Screen Display Settings)	34
Flash	36
Smile Shutter	37
Self-Timer	38
Burst/Bracket button	39

Table of contents
Operation Search
MENU/Settings Search
Index

Viewing

Viewing still images	40
Playback zoom	41
Image Index	42
Delete	43
Viewing movies	45

MENU (Shooting)

MENU items (Shooting)	11
-----------------------------	----

MENU (Viewing)

MENU items (Viewing)	12
----------------------------	----

Settings

Setting items	13
---------------------	----

TV

Viewing an image on a Standard Definition (SD) TV	117
Viewing an image on a High Definition (HD) TV	118

Computer

Using with your computer	122
Using the software	123
Connecting the camera to the computer	125
Uploading images to a media service	127
Creating a movie disc	129

Printing

Printing still images	133
-----------------------------	-----

Troubleshooting

Troubleshooting	135
Warning indicators and messages	144

Others

Using the camera abroad	149
“Memory Stick Duo” media	150
Battery pack	152
Battery charger	153
AVCHD format	154
GPS (DSC-HX5V only)	155
TransferJet standard	156

Index

Index	157
-------------	-----

Table of contents
Operation Search
MENU/Settings Search
Index

Operation Search

Table of
contents

Operation
Search

MENU/Settings
Search

Index

Leaving the settings to the camera	Intelligent Auto Adjustment.....	20
	Scene Selection.....	26
	Scene Recognition.....	63
Shooting movies	Movie Mode.....	28
	Movie format	83
Shooting portraits	Soft Snap	26
	Twilight Portrait	26
	Smile Shutter	37
	Scene Recognition.....	63
	Face Detection	66
	Anti Blink	68
	Red Eye Reduction.....	88
Shooting in manual mode	Manual Exposure Shooting	31
Shooting panoramic images	Intelligent Sweep Panorama	29
Shooting best shots of your pet	Pet.....	26
Shooting moving objects	Advanced Sports Shooting.....	26
	Movie Mode.....	28
	Burst Settings	52

Shooting without blur	Anti Motion Blur.....	23
	Hand-held Twilight	24
	High Sensitivity.....	26
	2-second delay self-timer.....	38
	ISO.....	56
	SteadyShot.....	69
Shooting with backlight	Backlight Correction HDR.....	25
	Forced Flash.....	36
	Scene Recognition.....	63
Shooting in dark places	Anti Motion Blur.....	23
	High Sensitivity.....	26
	Slow Synchro.....	36
	ISO.....	56
Adjusting exposure	EV	55
Changing focus position	Focus	60
	Face Detection	66
Changing image size/ quality	Image Size/Quality.....	48
Deleting images	Delete.....	43, 78
	Format	108
Displaying enlarged images	Playback zoom.....	41
	Trimming (Resize).....	77
Editing images	Retouch	77
Playing back a series of images in order	Slideshow	70

Shooting/Viewing with easy-to-see indicators	Easy Shooting 21
Printing images with the date	Using the “PMB (Picture Motion Browser)” 123
Changing date and time settings	Area Setting 114 Date & Time Setting..... 115
Initializing settings	Initialize..... 95
GPS (DSC-HX5V only)	GPS assist data 93 GPS setting 51, 104 Adjust Compass..... 106 Auto Clock ADJ..... 116
Printing images	Print 133
Viewing on TVs	Viewing an image on a Standard Definition (SD) TV..... 117 Viewing an image on a High Definition (HD) TV 118
Creating an AVCHD format disc	Creating a movie disc..... 129

Index







Mode dial Menu items	i	EASY	((i))	☾	+	SCN		i	M	P
(Settings)	✓	—	✓	✓	✓	✓	✓	✓	✓	✓


Notes

- [Quality] appears on the screen when [Movie format] is set to [AVCHD].
- Only the items that are available for each mode are displayed on the screen.





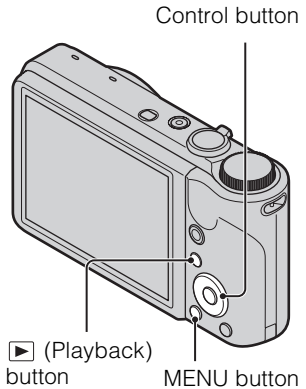


 


 

 


MENU items (Viewing)

You can select the various viewing functions easily from the MENU button.

- 1 Press the  (Playback) button to switch to playback mode.
- 2 Press the MENU button to display the Menu screen.
- 3 Select the desired menu item with /// on the control button.
- 4 Press  on the center of the control button.



In the table below, ✓ indicates settings that can be changed, while - indicates settings that cannot be changed.


View Mode Menu items	Memory card				Internal Memory
	 Date View	 Folder view (Still)	 MP4 Folder view (MP4)	 AVCHD AVCHD view	Folder View
 (Slideshow)	✓	✓	✓	✓	✓
 (Send by TransferJet)	✓	✓	—	—	—
 (View Mode)	✓	✓	✓	✓	—
 (Display Burst Group)	✓	—	—	—	—
 (Retouch)	✓	✓	—	—	✓
 (Delete)	✓	✓	✓	✓	✓
 (Protect)	✓	✓	✓	✓	✓
DPOF	✓	✓	—	—	—
 (Print)	✓	✓	—	—	✓
 (Rotate)	✓	✓	—	—	✓
 (Select Folder)	—	✓	✓	—	—
 (Settings)	✓	✓	✓	✓	✓


Note

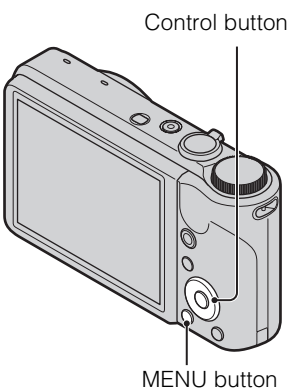
- Only the items that are available for each mode are displayed on the screen.



Table of contents
Operation Search
MENU/Settings Search
Index




Setting items

You can change the settings on the  (Settings) screen.

- 1 Press the MENU button to display the Menu screen.
- 2 Select  (Settings) with ▼ on the control button, then press ● on the center of the control button to display the setup screen.
- 3 Select each item with ▲/▼/◀/▶, then ●.
- 4 Select the desired setting, then press ●.






Categories	Items
 Shooting Settings	Movie format
	AF Illuminator
	Grid Line
	Digital Zoom
	Auto Orientation
	Red Eye Reduction
	Blink Alert
 Main Settings	Beep
	Language Setting
	Function Guide
	GPS assist data (DSC-HX5V only)
	Demo Mode
	Initialize
	HDMI Resolution
	CTRL FOR HDMI
	COMPONENT
	USB Connect
	LUN Settings
	Download Music
	Format Music
	Power Save
	GPS setting (DSC-HX5V only)
	Adjust Compass (DSC-HX5V only)
	TransferJet

Categories	Items
 Memory Card Tool	Format
	Create REC.Folder
	Change REC.Folder
	Delete REC.Folder
	Copy
	File Number
 Internal Memory Tool	Format
	File Number
 Clock Settings	Area Setting
	Date & Time Setting
	Auto Clock ADJ (DSC-HX5V only)

Notes

- [Shooting Settings] appears only when settings have been entered from shooting mode.
- [Memory Card Tool] appears only when a memory card is inserted in the camera, while [Internal Memory Tool] appears only when a memory card is not inserted.


Identifying parts

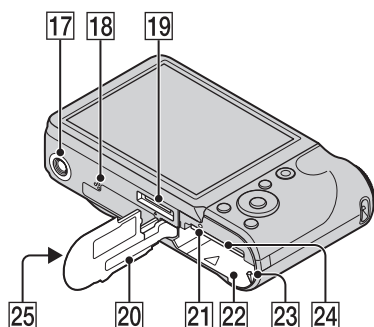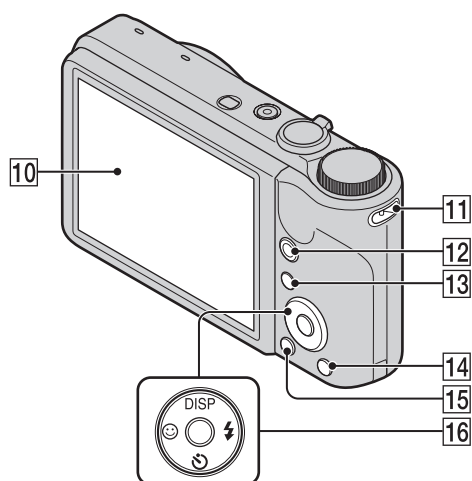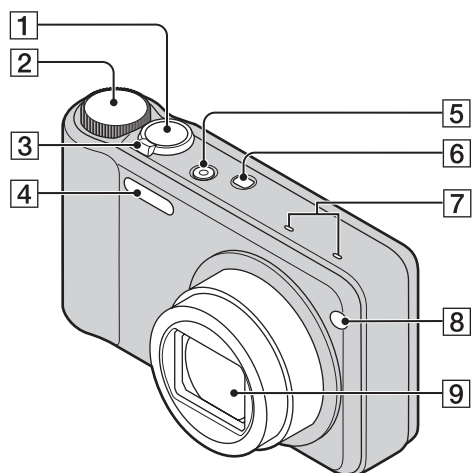

- 1 Shutter button
- 2 Mode dial (18)
- 3 For shooting: W/T (zoom) lever (33)
For viewing: Q (Playback zoom) lever/
[Index] lever (41, 42)
- 4 Flash
- 5 ON/OFF (Power) button
- 6 [Burst/Bracket] button
- 7 Microphone
- 8 Self-timer lamp/Smile Shutter lamp/AF illuminator
- 9 Lens
- 10 LCD screen
- 11 Hook for wrist strap*
- 12 MOVIE (Movie) button
- 13 [Playback] button (40)
- 14 [Delete] button (43)
- 15 MENU button (11)
- 16 Control button
Menu on: ▲/▼/◀/▶/●
Menu off: DISP/☺/☺/⚡
- 17 Tripod receptacle
- 18 Speaker
- 19 Multi connector
- 20 Battery/Memory card cover
- 21 Access lamp
- 22 Battery insertion slot
- 23 Battery eject lever
- 24 Memory card slot
- 25 [TransferJet™] mark (73, 107)

* Using the wrist strap


The wrist strap is already attached to the camera at the factory. Place your hand through the loop to prevent the camera from damage by being dropped.

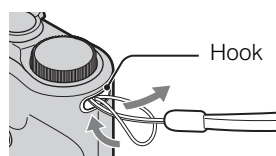

List of icons displayed on the screen


Icons are displayed on the screen to indicate the camera status.
You can change the screen display using DISP (Screen Display Settings) on the control button.

When shooting still images

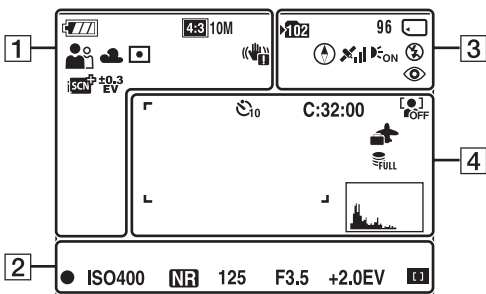


- The icons are limited in Easy Shooting mode.

When shooting movies

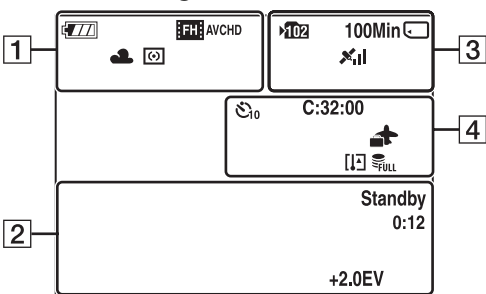

When playing back

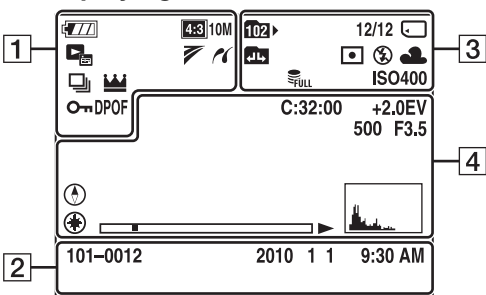

1

Display	Indication
	Battery remaining
	Low battery warning
	Image Size/Quality
	Scene Selection
	Mode dial (Intelligent Auto Adjustment/Anti Motion Blur/Hand-held Twilight/Backlight Correction HDR/Movie Mode/iSweep Panorama/Manual Exposure Shooting/Program Auto)
	Scene Recognition icon
	White Balance
	Metering Mode
	Vibration warning
	Scene Recognition
	Burst Shooting Interval
	Bracket Shooting
	Bracket Settings
	Burst Images
	Main image in the burst group
	Smile Detection Sensitivity indicator

Display	Indication
x1.4 S Q P Q	Zoom scaling
	PictBridge connecting
	Protect
DPOF	Print order (DPOF)
Q x2.0	Playback zoom
MP4 AVCHD	View Mode
	TransferJet settings

2

Display	Indication
●	AE/AF lock
ISO400	ISO number
NR	NR slow shutter
125	Shutter speed
F3.5	Aperture value
+2.0EV	Exposure value
	Focus
REC Standby	Recording a movie/Standby a movie
0:12	Recording time (m:s)
101-0012	Folder-file number
2010 1 1 9:30 AM	Recorded date/time of the playback image

3

Display	Indication
	Recording folder
	Playback folder
96	Number of recordable images
12/12	Image number/Number of images recorded in date range, selected folder
100Min	Recordable time
	Recording/Playback Media (Memory card, internal memory)
	Direction (DSC-HX5V only)
	GPS triangulating status (DSC-HX5V only)
	Changing folder
	AF Illuminator
	Red-eye reduction
	Metering Mode


Display	Indication
	Flash mode
	Flash charging
AWB	White Balance
ISO 400	ISO number
	Database file full/Database file error

4

Display	Indication
	Self-timer
C:32:00	Self-diagnosis display
	Destination
	Overheating warning
	Face Detection
	Database file full/Database file error
	AF range finder frame
+	Spot metering cross hair
+2.0EV	Exposure value
500	Shutter speed
F3.5	Aperture value
	Playback
	Playback bar
00:00:12	Counter
	Direction
	GPS information
35° 37' 32" N 139° 44' 31" E	Latitude and Longitude display
	Histogram • appears when histogram display is disabled.
	Volume

Using the mode dial

Set the mode dial to the desired function.

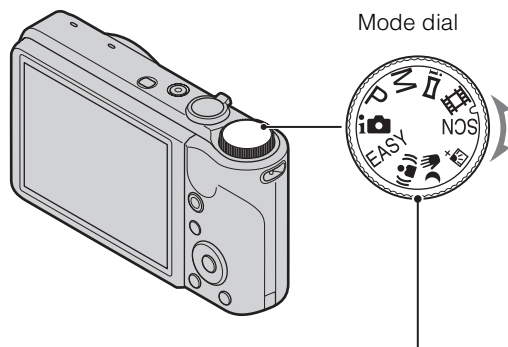

i (Intelligent Auto Adjustment)	Allows you to shoot with the settings adjusted automatically (page 20).
EASY (Easy Shooting)	Allows you to shoot/view still images with easy-to-see indicators (page 21).
((person)) (Anti Motion Blur)	Allows you to shoot with reduced blur without using the flash when composing burst shots taken in high-speed (page 23).
☞ (Hand-held Twilight)	Allows you to shoot with reduced blur in low light scenes without tripod when composing burst shots taken in high-speed (page 24).
☀+ (Backlight Correction HDR)	Allows you to shoot a greater range of gradation by superimposing two images having different exposures (page 25).
SCN (Scene Selection)	Allows you to shoot with preset settings according to the scene (page 26).
🎬 (Movie Mode)	Allows you to record movies (page 28).
i (iSweep Panorama)	Allows you to shoot a panoramic image after composing images (page 29).
M (Manual Exposure Shooting)	Allows you to shoot after adjusting the exposure manually (both the shutter speed and the aperture (F value)) (page 31).
P (Program Auto)	Allows you to shoot with the exposure adjusted automatically (both the shutter speed and the aperture (F value)) (page 32). You can set various functions using the menu.

Table of contents


Operation Search

MENU/Settings Search

Index

Using the internal memory

The camera has approximately 45 MB of internal memory. This memory is not removable. You can record images on the internal memory when there is no memory card inserted in the camera.

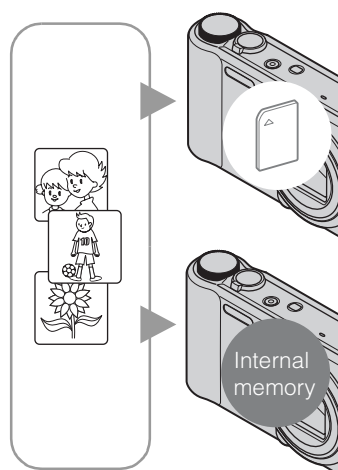

When a memory card is inserted

[Recording]: Images are recorded on the memory card.

[Playback]: Images on the memory card are played back.

[Menu, Settings, etc.]: Various functions can be performed on images on the memory card.

When there is no memory card inserted

[Recording]: Images are recorded using the internal memory.

[Playback]: Images stored in the internal memory are played back.

[Menu, Settings, etc.]: Various functions can be performed on images in the internal memory.

On image data stored in the internal memory

We recommend that you copy (back up) data without error using one of the following methods.

To copy (back up) data on a hard disk of your computer

Perform the procedure on pages 125 without a memory card inserted in the camera.

To copy (back up) data on a memory card

Prepare a memory card with sufficient free capacity, then perform the procedure explained in [Copy] (page 112).

Notes

- You cannot transfer image data on a memory card to the internal memory.
- By making a USB connection between the camera and a computer with a cable for multi-use terminal, you can transfer data stored in the internal memory to a computer. However you cannot transfer data on a computer to the internal memory.

Intelligent Auto Adjustment

Allows you to shoot still images with the setting adjusted automatically.

- 1 Set the mode dial to **i**  (Intelligent Auto Adjustment).
- 2 Shoot with the shutter button.

Note







 

- Flash mode is set to [Auto] or [Off].

On Scene Recognition

Scene Recognition operates in Intelligent Auto Adjustment mode. This function lets the camera automatically recognize the shooting conditions and shoot the image.



Scene Recognition icon and guide

- The camera recognizes  (Twilight),  (Twilight Portrait),  (Twilight using a tripod),  (Backlight),  (Backlight Portrait),  (Landscape),  (Macro) or  (Portrait), and displays the corresponding icon and guide on the LCD screen when the scene is recognized. For details, see page 63.

If you shoot a still image of a subject that is difficult to focus on

- The shortest shooting distance is approximately 5 cm (2 inches) (W)/100 cm (3 ft 3 3/8 inches) (T).
- When the camera cannot focus on the subject automatically, the AE/AF lock indicator changes to slowly flashing and the beep does not sound. Either recompose the shot or change the focus setting (page 60).
- Focusing may be difficult in the following situations:
 - It is dark and the subject is distant.
 - The contrast between the subject and the background is poor.
 - The subject is seen through glass.
 - The subject is moving quickly.
 - There is reflective light or shiny surfaces.
 - The subject is backlit or there is a flashing light.

Easy Shooting

Allows you to shoot still images using the minimum necessary functions.
The text size increases and indicators become easier to see.

- 1 Set the mode dial to **EASY** (Easy Shooting).
- 2 Shoot with the shutter button.

Note

- The battery charge is used up more quickly because the screen brightness increases automatically.

💡 Functions available in Easy Shooting mode

Image Size:	MENU → [Image Size] → ● on the control button → desired mode → ● Select between [Large] or [Small] size.
GPS setting (DSC-HX5V only):	MENU → [GPS setting] → ● on the control button → desired mode → ● Select between [On] or [Off] mode.
Self-Timer:	⌚ on the control button → desired mode Select between [10sec] or [Off] mode.
Flash:	⚡ on the control button → desired mode Select between [Auto] or [Off] mode.
Smile Shutter:	😊 on the control button


💡 On Scene Recognition

Scene Recognition operates in Easy Shooting mode. This function lets the camera automatically recognize the shooting conditions and shoot the image.




- The camera recognizes 🌙 (Twilight), 🧑 (Twilight Portrait), 🌿 (Twilight using a tripod), 🌅 (Backlight), 🧑 (Backlight Portrait), 🏞️ (Landscape), 🌸 (Macro) or 🧑 (Portrait), and displays an icon on the LCD screen when the scene is recognized.
For details, see page 63.

On Easy Viewing mode

When you press the  (Playback) button with the mode dial set to **EASY** (Easy Shooting), the playback screen text becomes larger and easier to see. In addition, only the deletion function becomes available.

Delete:

 (Delete) button → [OK] → ● on the control button

You can delete the currently displayed image.

MENU → [Delete] → ● on the control button → desired mode → ●

Select between [1 image] or [All].

You can delete the currently displayed image with [1 image] and delete all images in the selected date range or internal memory (if selected) with [All].

GPS setting (DSC-HX5V only):


MENU → [GPS setting] → ● on the control button

Select between [On] or [Off].

- [View Mode] is set to [Date View] when using a memory card.

Anti Motion Blur


This is suitable for indoor shots without using the flash to reduce the subject blur.

1 Set the mode dial to  (Anti Motion Blur).

2 Shoot with the shutter button.

A burst of shots are taken, and image processing is applied to reduce subject blur and noise.

Notes

- The shutter sound beeps 6 times and an image is recorded.
- Reducing blur is less effective in the following situations:
 - Image with erratic movement
 - Objects are too close to the camera
 - Image with a repeating pattern such as tiles and image with little contrast such as sky, sandy beach, or lawn
 - Image with constant change such as waves or water falls
- Smile Shutter cannot be used in Anti Motion Blur.
- When using a light source that flickers, such as fluorescent lighting, block noise may occur. In such cases, set Scene Selection to  (High Sensitivity).

Hand-held Twilight


Although night scenes tend to blur by camera shake, this mode allows you to shoot night scenes with less noise and blur without using a tripod.

1 Set the mode dial to  (Hand-held Twilight).

2 Shoot with the shutter button.


A burst of shots are taken, and image processing is applied to reduce subject blur and noise.

Notes

- The shutter sound beeps 6 times and an image is recorded.
- Reducing blur is less effective in the following situations:
 - Image with erratic movement
 - Objects are too close to the camera
 - Image with a repeating pattern such as tiles and image with little contrast such as sky, sandy beach, or lawn
 - Image with constant change such as waves or water falls
- Smile Shutter cannot be used in Hand-held Twilight.
- When using a light source that flickers, such as fluorescent lighting, block noise may occur. In such cases, set Scene Selection to  (High Sensitivity).

Backlight Correction HDR

You can shoot two images having different exposures to record a single image with a greater range of gradation by combining the dark parts of an image taken with a bright exposure setting and the bright parts of an image taken with a dark exposure setting.

1 Set the mode dial to + (Backlight Correction HDR).

2 Shoot with the shutter button.

Notes
















 




- The shutter sound beeps twice and an image is recorded.
- Backlight Correction HDR may not produce the effects in the following situations:
 - When using the flash
 - Image with erratic movement
 - There is too much camera shake
 - Image whose surrounding light condition is extremely bright or dark
 - Image with constant change such as waves or waterfalls
- Smile Shutter function cannot be used in Backlight Correction HDR mode.



Scene Selection

Allows you to shoot with preset settings according to the scene.




- 1 Set the mode dial to **SCN** (Scene Selection).
- 2 Select the desired mode → ● on the control button.

If you want to switch to another scene, press the MENU button.

 (High Sensitivity)	Allows you to shoot images without a flash under low light conditions, reducing blur.		
 (Soft Snap)	Allows you to shoot images with a softer atmosphere for portraits and flowers, etc.		
 (Advanced Sports Shooting)	Allows you to shoot subjects with fast movements such as sports. While the shutter is pressed halfway, the movement of the subject is predicted and the focus will be adjusted.		
 (Landscape)	Allows easy shooting of distant scenes by focusing in the distance. Shoots vivid blue sky and flora colors.		
 (Twilight Portrait)	Allows you to shoot sharp images of people with the night view in the background without compromising the atmosphere.		
 (Twilight)	Allows you to shoot night scenes at far distance without losing the dark atmosphere of the surroundings.		
 (Gourmet)	Shifts to Macro mode, allowing you to shoot food arrangements in delicious and bright color.		
 (Pet)	Allows you to shoot images of your pet with the best settings.		
 (Beach)	Allows you to record the blue of the water clearly when shooting seaside or lakeside scenes.		
 (Snow)	Allows you to record clear images preventing sunken colors in snowy scenes or other places where the whole screen appears white.		





































 (Fireworks)	Allows you to record fireworks in all their splendor.	
---	---	---

Note

- When you shoot images using  (Twilight Portrait),  (Twilight) or  (Fireworks) mode, the shutter speed is slower and the images tend to blur. To prevent blurring, the use of a tripod is recommended.

Functions you can use in Scene Selection

For shooting an image appropriately according to the scene condition, a combination of functions is determined by the camera. ✓ indicates an available function, - indicates an unavailable function. The icons below [Flash] and [Self-Timer] indicate the available modes. Some functions are not available, depending on the Scene Selection mode.

	Flash	Face Detection/ Smile Shutter	Self-Timer	Burst Settings/ Burst Shooting Interval/Bracket Settings	ISO	White Balance	Anti Blink
 ISO		✓	✓	—	—	✓ ^{*1}	—
	✓	✓ ^{*2}	✓	✓ ^{*3}	—	—	✓
		—	—	✓ ^{*3}	✓	—	—
	 	—	 	✓ ^{*3}	—	—	—
	 SL	✓	✓	—	—	—	—
		—	 	—	—	—	—
	 	—	 	—	—	✓	—
	 	—	 	—	—	✓	—
	 	✓	✓	✓ ^{*3}	—	—	—
	 	✓	✓	✓ ^{*3}	—	—	—
		—	 	—	—	—	—


^{*1} [Flash] for [White Balance] cannot be selected.

^{*2} [Off] for [Face Detection] cannot be selected.





^{*3} [White Balance] for [Bracket Settings] cannot be selected.

Movie Mode

Allows you to record movies.

- 1 Set the mode dial to  (Movie Mode).
- 2 Press the shutter button fully down.
- 3 To stop recording, press the shutter button fully down again.


Changing the Movie Format, Image Quality or Image Size

Movie format:	MENU →  (Settings) →  (Shooting Settings) → [Movie format] → [AVCHD] or [MP4] → ● on the control button
Quality (AVCHD):	MENU →  (Quality) → [AVC HD 17M FH] or [AVC HD 9M HQ]
Image Size (MP4):	MENU →  (Image Size) → [MP4 12M], [MP4 6M] or [MP4 3M]


To shoot a movie quickly

With the mode dial is set to other than **EASY** (Easy Shooting), you can start movie recording simply by pressing the **MOVIE** (Movie) button.

MOVIE (Movie) button

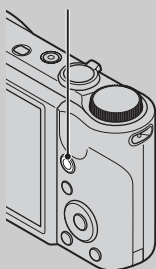

To end movie recording, press the **MOVIE** (Movie) button again.

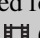The menu and setting items used for recording are those enabled when you set the mode dial to  (Movie Mode).

Intelligent Sweep Panorama

Allows you to create a panoramic image from composed images.
Faces and moving objects are automatically detected.



- 1 Set the mode dial to **i** (iSweep Panorama).
- 2 Point the camera at the edge of the subject, then press the shutter button fully down.



This part will not be taken

- 3 Pan the camera to the end, following the guidance on the LCD screen.



Guidance bar

Notes

- If you cannot pan the camera across the entire subject within the given time, a gray area occurs in the composed image. If this happens, move the camera fast to record a full panoramic image.
- Since several images are stitched together, the stitched part will not be recorded smoothly.
- Under low light conditions, panoramic images may be blurred.
- Under lights that flicker such as fluorescent light, the brightness or color of the combined image is not always the same.
- When the whole angle of panoramic shooting and the angle in which you fixed the focus and exposure with AE/AF lock are extremely different in brightness, color and focus, the shooting will not be successful. If this happens, change the lock angle and shoot again.
- iSweep Panorama is not suitable for the following situations:
 - Objects are too close to the camera
 - Image with a repeating pattern such as tiles and image with little contrast such as sky, sandy beach, or lawn
 - Image with constant change such as waves or water falls
- You cannot create panoramic images in the following situations:
 - You pan the camera too fast or too slow
 - There is too much camera shake


💡 Changing the shooting direction or image size of a panoramic image

Shooting Direction: MENU → [Shooting Direction] → select [Right], [Left], [Up] and [Down] → ●

Image Size: MENU → [Image Size] → select [Standard] or [Wide] → ●

💡 Tips for shooting a panoramic image

Pan the camera in an arc with a constant velocity and in the same direction as the indication on the LCD screen. iSweep Panorama is better suited for still subjects, rather than moving ones.

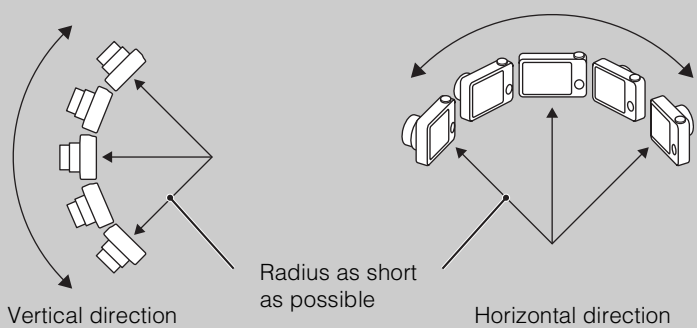

- Determine the scene and press the shutter button halfway, so that you can lock the focus exposure and white balance.
- Adjust the frame composition so that a portion with greatly varied scenery is in the center of the image.

💡 Playing back scrolling panoramic images

You can scroll panoramic images by pressing ● on the control button while panoramic images are being displayed. Turn the W (zoom) lever to display the whole image again.



Shows the displayed area of the whole panoramic image

Operation button/ lever	Description
●	Plays back scrolling images/Stops
◀/▶/▲/▼	Scrolls images
W	Displays the whole image

- Panoramic images are played back with the supplied software “PMB” (page 123).
- Panoramic images shot with other cameras may not be scrolled correctly.

Manual Exposure Shooting

You can shoot at your favorite exposure by manually setting the shutter speed and aperture value.

- 1 Set the mode dial to M (Manual Exposure Shooting).
- 2 Press ● on the control button.
- 3 Select the shutter speed and aperture (F value) using control button.

Control button	Feature
●	Return
▲ ▼	Shutter speed
◀ ▶	Aperture (F value)

- Select a shutter speed from 1/1600 to 30 seconds.
 - When zoom is set fully to W, you can select an aperture of F3.5 or F8 (when used with the Internal ND (Neutral Density) Filter).
When zoom is set fully to T, you can select an aperture of F5.5 or F13 (when used with the Internal ND (Neutral Density) Filter).
- 4 Press the shutter button to shoot the image.

Notes

- If proper exposure is not obtained by your settings, the setting value indicators on the screen will flash when the shutter button is pressed halfway down. You can shoot in this condition, but exposure readjustment is recommended.
- The flash is set to [On] or [Off].
- You cannot select the shutter speed and aperture (F value) when the self-timer is set to [Self-portrait One Person] or [Self-portrait Two People].

💡Setting the shutter speed and aperture (F value)

The difference between the settings and proper exposure judged by the camera appears as an EV value on screen.



Shutter speed/aperture (F value)

Exposure value

0EV is the value judged as the most suitable by the camera.

- When the shutter speed is one second or slower, the shutter speed is indicated by ["], for example, [1"].
- When you set the shutter speed slower, using a tripod is recommended to prevent the effects of vibration.
- When the shutter speed becomes slower than a certain speed, the NR slow shutter function is activated automatically to reduce image noise, and [NR] appears on the screen.
- If you select slow shutter speeds, it takes time to process the data.

Table of contents
Operation Search
MENU/Settings Search
Index

Program Auto

Allows you to shoot with the exposure adjusted automatically (both the shutter speed and the aperture value). Also you can select various settings using the menu.

- 1 Set the mode dial to P (Program Auto).
- 2 Shoot with the shutter button.

Zoom

You can enlarge the image when shooting. The camera's optical zoom function can enlarge images up to 10 \times .

1 Turn the W/T (zoom) lever.

Turn the W/T (zoom) lever to (T) to zoom in, and to (W) to zoom out.

- Turn the W/T (zoom) lever lightly for a slower zoom. Move it further for a faster zoom.
- When the zoom scale exceeds 10 \times , see page 86.

T side



W side











Notes

- Zoom is fixed to the W side when shooting in iSweep Panorama mode.
- The operating sound of the lens is recorded when the zoom function operates while shooting a movie.

DISP (Screen Display Settings)

- 1 Press DISP (Screen Display Settings) on the control button.
- 2 Select the desired mode with the control button.

	 (Bright + Image Only)	Sets screen brighter and displays only images.	
	 (Bright + Exposure Data)	Sets screen brighter and displays the information. Displays a recorded image. A histogram is also displayed.	
	 (Bright)	Sets screen brighter and displays the information.	
✓	 (Normal)	Sets screen to standard brightness and displays the information.	


Note

- If you view images in bright outside light, adjust the screen brightness up. However, the battery power may decrease faster under such condition.

Table of contents
Operation Search
MENU/Settings Search
Index

Histogram

A histogram is a graph showing the brightness of an image. The graph display indicates a bright image when skewed to the right side, and a dark image when skewed to the left side.

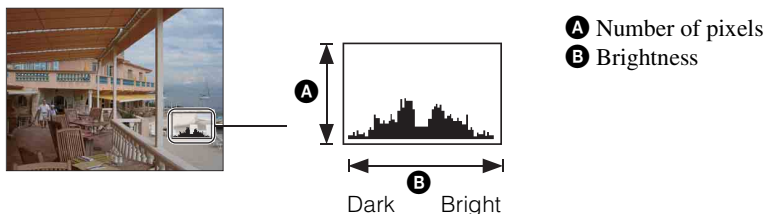

- 1 Press DISP (Screen Display Settings) on the control button, then select [Bright + Exposure Data].

Notes

- The histogram also appears when playing back a single image, but you cannot adjust the exposure.
- The histogram does not appear when:
 - Recording movies
 - Playing back movies
 - Viewing vertical orientation images
 - Rotating still images
 - Shooting with iSweep Panorama
 - Viewing images shot with iSweep Panorama
 - When [Display Burst Group] is set to [Display Main Image Only]
- A large difference in the histogram displayed during shooting and playback may occur when:
 - The flash strobes.
 - The shutter speed is slow or fast.
- The histogram may not appear for images recorded using other cameras.

Flash

- 1 Press ⚡ (Flash) on the control button.
- 2 Select the desired mode with the control button.


✓	⚡ AUTO (Auto)	Flash automatically operates in dark locations or when there is backlight.
	⚡ (On)	Flash always operates.
	⚡ SL (Slow Synchro)	Flash always operates. The shutter speed is slow in a dark place to clearly shoot the background that is out of flash light.
	⚡ (Off)	Flash does not operate.

Notes

- The flash strobes twice. The first flash adjusts the light quantity.
- While charging the flash, 🔋 is displayed.
- You cannot use the flash during burst or bracket.
- In Intelligent Auto Adjustment mode, Easy Shooting mode, you can select only [Auto] or [Off].
- In Backlight Correction HDR mode or Manual Exposure Shooting mode, only [On] or [Slow Synchro] can be selected.
- Flash is set to [Off] in the following modes:
 - In Anti Motion Blur mode
 - In Hand-held Twilight mode
 - In iSweep Panorama mode

💡When the “White circular spots” appears in flash photos

This is caused by particles (dust, pollen, etc.) floating close to the lens. When they are accentuated by the camera’s flash, they appear as white circular spots.

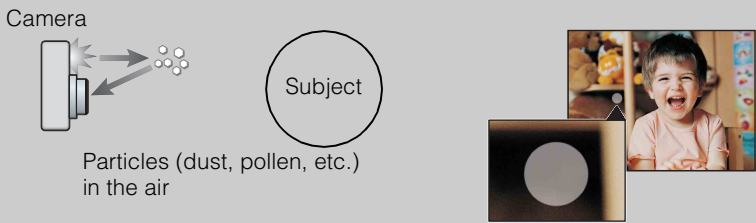

How can the “White circular spots” be reduced?

- Light the room and shoot the subject without a flash.
- Select ISO (High Sensitivity) mode in Scene Selection. ([Off] is automatically selected.)

Table of contents
Operation Search
MENU/Settings Search
Index

Smile Shutter

When the camera detects a smile, the shutter is released automatically.


1 Press ☺ (Smile) on the control button.

2 Wait for a smile to be detected.

When the smile level exceeds the ◀ point on the indicator, the camera records images automatically.

If you press the shutter button during Smile Shutter, the camera shoots the image, then returns to Smile Shutter mode.


3 To stop shooting, press ☺ (Smile) again.

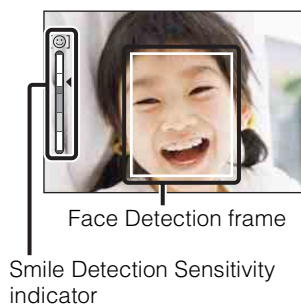

Notes

- Shooting using the Smile Shutter ends automatically when either the memory card or internal memory becomes full.
- Smiles may not be detected correctly depending on the conditions.
- You cannot use the digital zoom function.
- The Smile Shutter function is not available in the following situations:
 - In Anti Motion Blur mode
 - In Hand-held Twilight mode
 - In Backlight Correction HDR mode
 - In Movie Mode
 - In iSweep Panorama mode


💡 Hints for better capturing of smiles

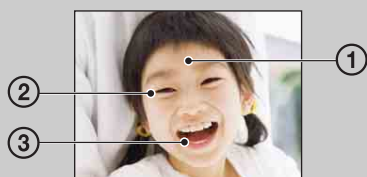







- ① Do not cover the eyes with the bangs.
Do not obscure the face by hat, masks, sunglasses, etc.
- ② Try to orient the face in front of the camera and be as level as possible. Keep the eyes narrowed.
- ③ Give a clear smile with an open mouth. The smile is easier to detect when the teeth are shown.

- The shutter operates when any person whose face is being detected smiles.
- You can select or register the priority subject for face detection with [Face Detection]. To perform smile detection for a different face, change the priority face with ● on the control button (page 66).
- If a smile is not detected, set the [Smile Detection Sensitivity] in setting menu.

Self-Timer

- 1 Press  (Self-Timer) on the control button.
- 2 Select the desired mode with the control button.


✓	 OFF (Off)	Does not use the self-timer.
	 10 (10sec)	Sets the 10-second delay self-timer. When you press the shutter button, the self-timer lamp flashes and a beep sounds until the shutter operates. To cancel, press  again.
	 2 (2sec)	Sets the 2-second delay self-timer.
	 (Self-portrait One Person)	Set the self-timer to Self-portrait timer. When the camera detects the specified number of faces, a beep sounds, and the shutter operates 2 seconds later. Do not move the camera during this while.
	 (Self-portrait Two People)	

Notes

- In Easy Shooting mode, you can select only [10sec] or [Off].
- In Movie Mode, [Self-portrait One Person] or [Self-portrait Two People] cannot be selected.
- The self-timer is not valid when shooting in iSweep Panorama mode.



Automatic shooting with Self- portrait timer


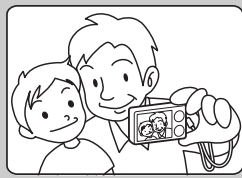
Point the lens at yourself so your face is reflected in the LCD screen. The camera detects the subjects, and then the shutter operates. The camera determines the optimal composition and prevents faces from being cut out of the LCD screen.



- You can also shoot an image by pressing the shutter button during this operation.

Hints for preventing blur

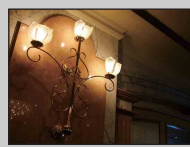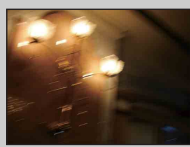

If your hands or body moves while holding the camera and pressing the shutter button, “Camera shake” occurs. Camera shake occurs frequently under low-light or slow shutter speed conditions, such as those encountered in  (Twilight Portrait) or  (Twilight) mode. In such a case, shoot with the below tips in mind.



- Shoot with a 2-second delay self-timer and stabilize the camera by holding your arms firmly at your side after pressing the shutter button.
- Use a tripod or place the camera on a flat surface to hold the camera steady.

Burst/Bracket button

You can select burst shooting, normal (single-image) or bracket shooting mode.
You can select normal (single-image) or burst shooting in [Burst Settings] (page 52).

- 1 Select a desired mode with the  (Burst/Bracket) button.
When you press the  (Burst/Bracket) button, the setting switches.


Burst	Shoots in succession when you press and hold down the shutter button. You can set the burst shooting speed in [Burst Shooting Interval] (page 53).
Single/Bracket	Shoots a single image, or images in bracket mode. You can select the exposure values in [Bracket Settings] (page 54). Single mode is displayed when [Bracket Settings] is set to [Off]. Bracket mode is displayed when [Bracket Settings] is set to other than [Off].

Notes

- The Burst/Bracket button is not available in the following situations:
 - In Easy Shooting mode
 - In Anti Motion Blur mode
 - In Hand-held Twilight mode
 - In Backlight Correction HDR mode
 - In Movie Mode
 - In iSweep Panorama mode
 - When the Smile Shutter function is activated

Table of contents
Operation Search
MENU/Settings Search
Index

Viewing still images

- 1 Press the  (Playback) button to switch to playback mode.
- 2 Select an image with the control button.



Viewing images taken with a different camera

This camera creates a database file in a memory card and registers every shot image to it for later playback. If the camera detects images that have not been registered to the database file in the memory card, the registration screen “Files found which were not recognized Import files” appears.

If you want to view unregistered images, select [OK] to register the images.

- For registration, use a fully charged battery pack. If you attempt to register unregistered files using a battery pack with little remaining charge, the battery pack may run out, causing copying to fail or possibly corrupting the data.

Playback zoom

Plays back the enlarged image.

- 1 Turn the **Q** (Playback zoom) lever to (T) during still image playback.

The image is enlarged to twice the previous size, at the center of the image.

- 2 Adjust the position with the control button.

- 3 Change the zoom scale with the **Q** (Playback zoom) lever.

Turn the **Q** lever to (T) to zoom in, to (W) to zoom out.

Press **●** to cancel playback zoom.



Shows the displayed area of the whole image




To save enlarged images

You can save an enlarged image by using the trimming function.

Press MENU → [Retouch] → [Trimming (Resize)].

Image Index

Displays multiple images at the same time.

- 1 Press the  (Playback) button to switch to playback mode.
- 2 Turn the  (Index) lever to (W) to display the image index screen.
Turn the lever again to display an index screen with more images. Turn the lever yet again to view images with the Calendar while playing back in [Date View].
- 3 To return to the single-image screen, select an image with the control button, then press .



Note

- When the mode dial is set to **EASY** (Easy Shooting), you cannot view images in index mode.




Displaying images of the desired date/folder



 
 



Select the left side bar with the control button, then select the desired date/folder with /.



Viewing images with the Calendar



When [View Mode] is set to [Date View], turn the  (Index) lever to view images with the Calendar, while the index displays more images.



- To select the month you want to display, select / with the control button, then the desired month.
- To view images in selected date in index mode, select the date with the control button and press .
- To exit the Calendar, select  with the control button, then press .

Delete

Allows you to select unwanted images for deletion. You can also delete images from the MENU button (page 78).

- 1 Press the  (Playback) button to switch to playback mode.
- 2  (Delete) button → desired mode → ● on the control button

All in Date Range All in This Folder All AVCHD files	Deletes all images in the selected date range or folder, or all AVCHD movies at once. Press [OK] → ● after step 2.
Multiple Images	Allows you to select and delete multiple images. Do as the following after step 2. ① Select an image then press ●. Repeat the above step until there are no more images to be deleted. Select an image with a ✓ mark again to release the ✓ mark. ② MENU → [OK] → ●
This Image	Deletes the currently displayed image in single-image mode.
All In This Group	Deletes all images in the selected burst group at once. Press [OK] → ● after step 2.
All but this image	Deletes burst group images other than the selected image in Display Burst Group mode. Press [OK] → ● after step 2.
Exit	Cancels the deletion.


Notes

- In Easy Viewing mode, you can delete only the currently displayed image.
- When the internal memory is used to record images, View Mode is set to Folder View and still images and movies are displayed in the same folder.

Table of contents
Operation Search
MENU/Settings Search
Index



 You can switch between index and single-image mode when selecting images







Turn the **Q** lever to (T) of the W/T (zoom) lever in index mode to return to single-image mode, and turn the  (Index) lever to (W) in single-image mode to return to index mode.

- You can also switch between index and single-image mode in [Protect], [DPOF] or [Print].

Viewing movies

- 1 Press the  (Playback) button to switch to playback mode.
 - 2 Select a movie with the control button.
 - 3 Press .
- Movie playback starts.





Control button	Playback feature
	Stop
	Fast forward
	Fast rewind
	Displays the control panel


Note

- You may not be able to play back some images shot using other cameras.

Displaying the control panel

Display the control panel, you can control slow movie playback and adjust the volume.

- 1 Press  on the control button.
The control panel appears.
- 2 Select a desired button with /, and press .

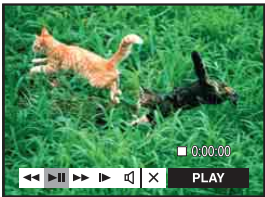







Button	Available functions
	Rewind
	Playback/Stop
	Fast forward
	Play slow
	Volume control
	Close the control panel

Table of contents
Operation Search
MENU/Settings Search
Index

💡 On the movie viewing screen

Select the image you want to display using ◀▶ on the control button, and press ●. The Playback bar appears, you can check a playback position of a movie.



Full HD, Full HD, Full HD, Full HD or Full HD appears on the movie viewing screen.

The icon displayed may vary depending on image size and quality.

Playback bar

Shooting Direction

Sets the direction to pan the camera when you shoot a iSweep Panorama images.

1 MENU →  (Shooting Direction) → desired direction







✓	 (Right)	Pan from left to right.
	 (Left)	Pan from right to left.
	 (Up)	Pan from down to up.
	 (Down)	Pan from up to down.


 











Table of contents
Operation Search
MENU/Settings Search
Index

Image Size/Quality

The image size determines the size of the image file that is recorded when you take an image. The larger the image size, the more detail will be reproduced when the image is printed on large-format paper. The smaller the image size, the more images can be recorded.

1 MENU →  (Image Size) or  (Quality) → desired size

When shooting still images

	Image size	Usage guidelines	No. of images	Printing
✓	 (3648×2736)	For prints up to A3+ size	Less 	Fine 
	 (2592×1944)	For prints up to L/2L/A4 size	↕	↕
	 (640×480)	For e-mail attachments	More 	Rough 
	 (3648×2056)	For viewing on a high-definition TV, and for prints up to A4 size	Less 	Fine 
	 (1920×1080)	For viewing on a high-definition TV	More 	Rough 

Note



- When you print still images recorded with 16:9 aspect ratio, both edges may be cut off.

In Easy Shooting mode

✓	Large	Shoots images in [10M] size.
	Small	Shoots images in [5M] size.



Table of contents
Operation Search
MENU/Settings Search
Index

When shooting Intelligent Sweep Panorama images

✓	 (Standard) (Horizontal: 4912×1080) (Vertical: 3424×1920)	Shoots images using standard size.
	 (Wide) (Horizontal: 7152×1080) (Vertical: 4912×1920)	Shoots images using wide size.



When shooting movies

The larger the image size, the higher the image quality. The higher the amount of data used per second (average bit-rate), the smoother the playback image.

Select a movie recording format by touching MENU →  (Settings) →  (Shooting Settings) → [Movie format] in shooting mode (page 83).




Movie recording format (AVCHD)

Movies shot with this camera are recorded in AVCHD format, approximately 60 fields/sec (1080 60i-compatible devices) or 50 fields/sec (1080 50i-compatible devices), in interlace mode, with Dolby Digital audio, AVCHD format.

	Movie quality	Average bit-rate	Description
	 AVC HD 17M FH	17 Mbps	Shoots at a maximum picture quality of 1920 × 1080 size
✓	 AVC HD 9M HQ	9 Mbps	Shoots at a high picture quality of 1440 × 1080 size

Movie recording format (MP4)

Movies shot with this camera are recorded in MPEG-4 format at approximately 30 frames/sec (1080 60i-compatible devices) or approximately 25 frames/sec (1080 50i-compatible devices), in progressive mode, with AAC audio, mp4 format.

	Movie image size	Average bit-rate	Description
✓	 MP4 12M	12 Mbps	Shoots at 1440 × 1080 size
	 MP4 6M	6 Mbps	Shoots at 1280 × 720 size
	 MP4 3M	3 Mbps	Shoots at VGA size


Note

- A telephoto image results when [MP4 3M] image size is selected.


💡 On “image quality” and “image size”

A digital image is made up of a collection of small dots called pixels. If it contains a large number of pixels, the image becomes large, it takes up more memory, and the image is displayed in fine detail. “Image size” is shown by the number of pixels. Although you cannot see the differences on the screen of the camera, the fine detail and data processing time differ when the image is printed or displayed on a computer screen.

Description of the pixels and the image size

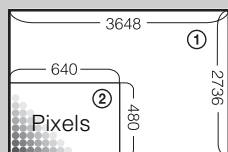

- ① Image size: 10M
 $3648 \text{ pixels} \times 2736 \text{ pixels} = 9,980,928 \text{ pixels}$
- ② Image size: VGA
 $640 \text{ pixels} \times 480 \text{ pixels} = 307,200 \text{ pixels}$

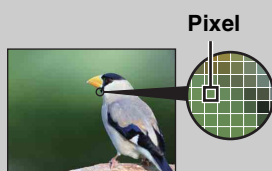

Pixel



Many pixels

(Fine image quality and large file size)



Few pixels

(Rough image quality but small file size)

GPS setting (DSC-HX5V only)

Allows you to set GPS setting from MENU in Easy Shooting mode.
Refer to page 104 for details.

- 1 Set the mode dial to **EASY** (Easy Shooting).
- 2 MENU → [GPS setting] → ● on the control button
- 3 Desired mode → ●

✔	On	GPS direction sensor is activated.
	Off	GPS direction sensor is inactivated. If you do not record the location and direction information, set the GPS setting.

Table of contents
Operation Search
MENU/Settings Search
Index

Burst Settings

You can select the Single (single-image) or Burst as the shooting mode.

1 MENU →  (Burst Settings) → desired mode





✓	 (Single)	Records a single image.
	 (Burst)	<div>Records up to 10 images in succession when you press and hold down the shutter button.</div> <div></div> <div>Notes</div> <div><ul style="list-style-type: none">• Burst shooting is not available during Easy Shooting, Anti Motion Blur, Hand-held Twilight, Backlight Correction HDR, Movie Mode, iSweep Panorama or Smile Shutter.• The flash is set to [Off].• When recording with the self timer, a series of a maximum of five images is recorded.• The recording interval becomes longer, depending on the setting for the image size.• When the battery level is low, or when the internal memory or memory card is full, the Burst stops.• [Focus], [White Balance] and [EV] are adjusted for the first image, and these settings are also used for the other images.</div>

Table of contents
Operation Search
MENU/Settings Search
Index

Burst Shooting Interval

Selects the number of images per second taken for Burst shooting.

1 MENU →  (Burst Shooting Interval) → desired mode




✓	 Hi (High)	Shoots up to 10 images per second in succession.
	 Mid (Mid)	Shoots up to 5 images per second in succession.
	 Lo (Low)	Shoots up to 2 images per second in succession.

Table of contents
Operation Search
MENU/Settings Search
Index

Bracket Settings

You can set the type of the bracket shooting. In the bracket shooting mode, you can record a series of 3 images with the setting changed. You can select the most suitable image afterwards.

1 MENU → **BRK OFF** (Bracket Settings) → desired mode

✓	BRK OFF (Off)	Does not use the bracket shooting.
	±0.3 EV (EXP±0.3)	Records a series of 3 images with the exposure shifted in the following order: bright, standard, and dark. The larger the bracket step value, the larger the shift of the exposure value.
	±0.7 EV (EXP±0.7)	
	±1.0 EV (EXP±1.0)	
	BRK WB (White Balance)	Records a series of 3 images with the white balance shifted in the following order: current color tone, toward blue, and toward red. <ul style="list-style-type: none">When you set [White Balance] to other than [Auto], the color tone is shifted based on the selected white balance.

Notes

- You cannot select [White Balance] when the mode dial is set to **SCN** (Scene Selection).
- You cannot select [Bracket Settings] in the following cases:
 - In Intelligent Auto Adjustment mode
 - In Easy Shooting mode
 - In Anti Motion Blur mode
 - In Hand-held Twilight mode
 - In Backlight Correction HDR mode
 - In Movie Mode
 - In iSweep Panorama mode
 - When [Burst Settings] is set to [Burst]
 - When the Smile Shutter function is activated

Table of contents
Operation Search
MENU/Settings Search
Index

EV

You can adjust the exposure manually in 1/3 EV steps in a range of -2.0 EV to +2.0 EV.

1 MENU → 0_{EV} (EV) → desired EV setting

Notes

- In Easy Shooting mode, Manual Exposure Shooting mode or Backlight Correction HDR mode, the [EV] setting cannot be adjusted.
- If you shoot a subject in extremely bright or dark conditions, or when you use the flash, the exposure adjustment may not be effective.



Adjusting the exposure for better looking images



Overexposure = too much light
Whitish image




Lower EV setting -



Correct exposure




Higher EV setting +

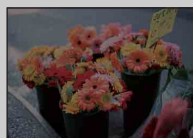

Underexposure = too little light
Darker image


ISO

Adjusts the luminous sensitivity when the camera is set to Program Auto, Manual Exposure Shooting or  (Advanced Sports Shooting) in Scene Selection.

1 MENU →  (ISO) → desired mode

✓	ISO AUTO (Auto)	Sets the ISO sensitivity automatically.
	ISO / ISO / ISO / 125 / 200 / 400 / ISO / ISO / ISO 800 / 1600 / 3200	You can reduce image blurring in dark locations or moving subjects by increasing ISO sensitivity (select a larger number).

Notes

- You cannot select [ISO AUTO] in Manual Exposure Shooting mode.
- You can select only from [ISO AUTO], [ISO 125] to [ISO 800] in Burst/Bracket mode or  (Advanced Sports Shooting) in Scene Selection.

Adjusting ISO Sensitivity (Recommended Exposure Index)

ISO sensitivity is a speed rating for recording media that incorporates an image sensor that receives light. Even when the exposure is the same, images differ depending on the ISO sensitivity.



High ISO sensitivity

Records a bright image even in dark locations while increasing shutter speed to reduce blur.
However, the image tends to become noisy.



Low ISO sensitivity

Records a smoother image.
However, when the exposure is insufficient, the image may become darker.

Table of contents
Operation Search
MENU/Settings Search
Index


💡 Hints for preventing blur

Even though the camera is steady, the subject moves during the exposure and is captured blurred when the shutter button is pressed. Camera shake is reduced automatically, however, the function does not effectively reduce subject blur.

Subject blur occurs frequently under low-light or slow shutter speed conditions.

In such a case, shoot with the below tips in mind.














- Select a higher ISO sensitivity to make the shutter speed faster, and press the shutter button before the subject moves.
- Select  (High Sensitivity) mode in Scene Selection.


White Balance

Adjusts color tones according to the surrounding light conditions. Use this function if image color appears unnatural.

1 MENU →  **AUTO** (White Balance) → desired mode

	 (Auto)	Adjusts the white balance automatically so that the colors appear natural.
	 (Daylight)	Adjusts for outdoors conditions on a fine day, evening views, night scenes, neon signs, fireworks, etc.
	 (Cloudy)	Adjusts for a cloudy sky or a shady location.
	 (Fluorescent White Balance 1)  (Fluorescent White Balance 2)  (Fluorescent White Balance 3)	[Fluorescent White Balance 1]: Adjusts for white fluorescent lighting. [Fluorescent White Balance 2]: Adjusts for natural white fluorescent lighting. [Fluorescent White Balance 3]: Adjusts for day white fluorescent lighting.
	 (Incandescent)	Adjusts for places under incandescent lamp, or under bright lighting, such as in a photo studio.
	 (Flash)	Adjusts for the flash conditions.
	 (One Push)	Adjusts the white balance depending on the light source. The white color memorized in [One Push Set] mode becomes the basic white color. Use this mode when [Auto] or other modes cannot be set the color properly.
	 (One Push Set)	Memorizes the basic white color which will be used in [One Push] mode.

Notes


- [White Balance] cannot be adjusted in Intelligent Auto Adjustment, or Easy Shooting mode.
- You cannot select [White Balance] in Backlight Correction HDR mode, if flash is set to [On].
- [Flash] in [White Balance] cannot be adjusted in the following situations:
 - In Anti Motion Blur mode
 - In Hand-held Twilight mode
 - When Scene Selection is set to  (High Sensitivity) mode.
 - In Movie Mode
 - In iSweep Panorama mode
- Under fluorescent lights that flicker, the white balance function may not work correctly even though you select [Fluorescent White Balance 1], [Fluorescent White Balance 2], or [Fluorescent White Balance 3].
- When shooting with a flash in other than [Flash] mode, [White Balance] is set to [Auto].
- When flash is [On] or [Slow Synchro], the white balance can only be adjusted to [Auto], [Flash], [One Push], or [One Push Set].
- [One Push Set] is unable to be selected while charging the flash.

To capture the basic white color in [One Push Set] mode

- 1 Frame a white object such as a piece of paper filling the screen under the same lighting conditions as you will shoot the subject.
- 2 MENU → ^{WB}AUTO (White Balance) → [One Push Set] → ● on the control button

The screen momentarily turns black, and when the white balance has been adjusted and stored in the memory, the recording screen is displayed again.

Notes

- If the  indicator flashes while shooting, the white balance is either not set or cannot be set. Use automatic white balance.
- Do not shake or strike the camera while [One Push Set] is in progress.
- When flash is set to [On] or [Slow Synchro], the white balance is adjusted to the condition with the flash emitting.

💡 Effects of lighting conditions

The apparent color of the subject is affected by the lighting conditions. The color tones are adjusted automatically, but you can adjust color tones manually using the White Balance function.






Weather/lighting	Daylight	Cloudy	Fluorescent	Incandescent
Characteristics of light	White (standard) 	Bluish 	Green-tinged 	Reddish 








Table of contents
Operation Search
MENU/Settings Search
Index

Focus

You can change the focus method. Use the menu when it is difficult to get the proper focus in auto focus mode.

AF stands for “Auto Focus,” a function that adjusts the focus automatically.

1 MENU →  (Focus) → desired mode


	 (Multi AF)	<p>Focuses on a subject in all ranges of the finder frame automatically.</p> <p>When you press the shutter button halfway down in still image shooting mode, a green frame is displayed around the area that is in focus.</p> <ul style="list-style-type: none">• When the Face Detection function is active, AF operates with priority on faces.	 AF range finder frame
	 (Center AF)	<p>Focuses on a subject in the center of the finder frame automatically. Using the AF lock function together, you can compose the image the way you want.</p>	 AF range finder frame
	 (Spot AF)	<p>Focuses on an extremely small subject or a narrow area automatically. Using the AF lock function together, you can compose the image the way you want. Hold the camera steady so as not to misalign the subject and the AF range finder frame.</p>	 AF range finder frame

Notes

- When you use [Digital Zoom] or [AF Illuminator], the AF range finder frame is disabled and appears in a dotted line. In this case, the camera works to focus on the subjects at the center of the screen.
- When the focus mode is set to other than [Multi AF], you cannot use the Face Detection function.
- The focus mode is fixed to [Multi AF] in the following situations:
 - In Intelligent Auto Adjustment mode
 - In Easy shooting mode
 - In Anti Motion Blur mode
 - In Hand-held Twilight mode
 - In Movie Mode
 - When the Smile Shutter function is activated
 - When the self-timer is set to [Self-portrait One Person] or [Self-portrait Two People]

💡 Focusing on subjects near the edge of the screen


If the subject is out of focus, do as follows:

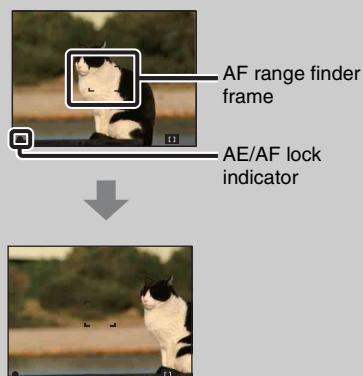





- ① Recompose the shot so that the subject is centered in the AF range finder, and press the shutter button halfway to focus on the subject (AF lock).
 - ② When the AE/AF lock indicator stops flashing and remains on, return to the fully composed shot, and press the shutter button fully down.
- As long as you do not press the shutter button fully down, you can retry the procedure as many times as necessary.

Metering Mode

Selects the metering mode that sets which part of the subject to measure to determine the exposure.

1 MENU →  (Metering Mode) → desired mode


✓	 (Multi)	Divides into multiple regions and measures each region. The camera determines a well-balanced exposure (Multi-pattern metering).
	 (Center)	Measures the center of the image, and determines the exposure based on the brightness of the subject there (Center-weighted metering).
	 (Spot)	Measures only a part of the subject (Spot metering). This function is useful when the subject is backlit or when there is strong contrast between the subject and the background. <div><p>Spot metering cross hairs Positions on the subject</p></div>

Notes

- In Movie Mode, [Spot] cannot be selected.
- If you set Metering Mode to other than [Multi], the Face Detection function cannot be used.
- Metering Mode is fixed to [Multi] in the following situations:
 - In Intelligent Auto Adjustment mode
 - In Easy shooting mode
 - In Backlight Correction HDR mode
 - When the Smile Shutter function is activated
 - When the self-timer is set to [Self-portrait One Person] or [Self-portrait Two People]

Scene Recognition

In Intelligent Auto Adjustment mode, the camera automatically detects shooting conditions, and then takes the shot. When motion is detected, the ISO sensitivity is increased according to the movement to reduce subject blur (Motion Detection).

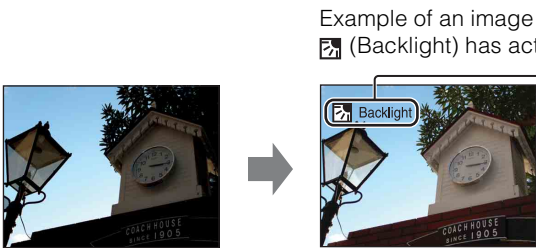

Scene Recognition icon and guide

The camera recognizes the following types of scenes. When the camera determines the optimal scene, it displays the corresponding icon and guide.

☾ (Twilight), 👤 (Twilight Portrait), 🌿 (Twilight using a tripod), [Backlight] (Backlight), [Backlight Portrait] (Backlight Portrait), 🏞️ (Landscape), 🌸 (Macro), 👤 (Portrait)

- 1 Set the mode dial to **i** (Intelligent Auto Adjustment).
- 2 MENU → **iSCN** (Scene Recognition) → desired mode


 
 
 

✓	iSCN (Auto)	When the camera recognizes the scene, it switches to the optimal settings and shoots the image.
	iSCN+ (Advanced)	<p>When the camera recognizes the scene, it switches to the optimal settings. If the camera recognizes ☾ (Twilight), 👤 (Twilight Portrait), 🌿 (Twilight using a tripod), [Backlight] or [Backlight Portrait], it automatically changes the setting and shoots another image.</p> <ul style="list-style-type: none">• When you shoot two images consecutively, the + mark on the iSCN+ icon will turn green.• When two frames are shot, the two images are displayed side by side immediately after shooting.• When [Anti Blink] is displayed, 2 images are taken automatically and the image with eyes are open is selected automatically. For details on the Anti Blink function, see “What is the Anti Blink function?”.






Notes

- Scene Recognition does not function when using digital zoom.
- Scene Recognition is fixed to [Auto] in the following situations:
 - During burst shooting
 - When the Smile Shutter function is activated
 - When the self-timer is set to [Self-portrait One Person] and [Self-portrait Two People]
- The available flash settings are [Auto] and [Off].
- 🌿 (Twilight using a tripod) scenes sometimes cannot be recognized in an environment where vibrations are transferred to the camera even though it is fixed on a tripod.
- Sometimes a slow shutter results when a scene is recognized as a 🌿 (Twilight using a tripod). Keep the camera still during shooting.
- These scenes may not be recognized depending on the situation.

Table of contents
Operation Search
MENU/Settings Search
Index


Shooting twice, choosing the best image later - it's more convenient! ([Advanced])

In [Advanced], when the camera recognizes a difficult-to-shoot scene ( (Twilight),  (Twilight Portrait),  (Twilight using a tripod),  (Backlight) and  (Backlight Portrait)), it changes the settings as follows and shoots two images with different effects, allowing you to select the one you like.

	First Image*	Second Image
	Shoots in Slow Synchro	Shoots with sensitivity increased and shake reduced
	Shoots in Slow Synchro with the face which the flash strobes on as guide	Shoots with sensitivity increased with the face as guide and shake reduced
	Shoots in Slow Synchro	Shoots with even slower shutter speed without increasing sensitivity
	Shoots with the flash	Shoots with the brightness and contrast of the background adjusted
	Shoots with the face which the flash strobes on as guide	Shoots with the brightness and contrast of the face and the background adjusted

* When flash is set to [Auto].

What is the Anti Blink function?

When set to [Advanced], the camera automatically shoots two images consecutively* when it recognizes  (Portrait). The camera will select, display, and record the image which the eyes are not blinked automatically. If the eyes are closed in both images, the message "Blinked eye detected" is displayed.

* except when the flash strobes/when the shutter speed is slow

Smile Detection Sensitivity

Sets the sensitivity of the Smile Shutter function for detecting smiles.

1 MENU → 😊 (Smile Detection Sensitivity) → desired mode

	😊 (Big Smile)	Detects a big smile.
✓	😊 (Normal Smile)	Detects a normal smile.
	😊 (Slight Smile)	Detects even a slight smile.

Notes

- Smiles may not be detected correctly depending on the conditions.
- [Smile Detection Sensitivity] cannot be adjusted in the following situations:
 - In Easy Shooting mode
 - In Anti Motion Blur mode
 - In Hand-held Twilight mode
 - In Backlight Correction HDR mode
 - In Movie Mode
 - In iSweep Panorama mode

Table of contents
Operation Search
MENU/Settings Search
Index

Face Detection

Detects the faces of your subjects and adjusts the focus, flash, exposure, white balance and red-eye reduction settings automatically.







Face Detection frame (Orange)

When the camera detects more than one subject, the camera will judge which is the main subject and set focus by priority. The Face Detection frame for the main subject will turn orange. The frame for which the focus is set will turn green by pressing the shutter button halfway down.

Face Detection frame (White)

1 MENU →  (Face Detection) → desired mode

	 (Off)	Does not use Face Detection function.
✓	 (Auto)	Selects the face the camera is to automatically focus on.
	 (Child Priority)	Detects and shoots with priority on child's face.
	 (Adult Priority)	Detects and shoots with priority on adult's face.

Notes

- [Face Detection] cannot be selected in the following situations:
 - In Easy Shooting mode
 - In Movie Mode
 - In iSweep Panorama mode
- You cannot select [Off] when the self-timer is set to [Self-portrait One Person] or [Self-portrait Two People].
- You can select [Face Detection] only when the focus mode is set to [Multi AF] or the metering mode is set to [Multi].
- The Face Detection function does not work when using the digital zoom.
- Up to 8 faces of your subjects can be detected.
- Adults and children may not be recognized correctly depending on the conditions.
- During Smile Shutter shooting, [Face Detection] is automatically set to [Auto] even if it is set to [Off].

💡 Registering the priority face (Selected-face Memory)


Normally the camera automatically selects the face to focus on according to the [Face Detection] setting, but you can also select and register a face to be given priority.







Face Priority Frame Off

- ① Press ● on the control button during Face Detection. The leftmost face is registered as the priority face, and the frame changes from □ to an orange frame (□).
 - ② Each time you press ●, the priority face moves one face to the right. Press ● repeatedly until the orange frame (□) is on the face you want to register.
 - ③ To cancel the face registration (Off), move the orange frame to the rightmost face, then press ● again.
- When you remove the battery from the camera, the face registration is reset.
 - When the registered face disappears from the LCD screen, the camera returns to the setting selected by [Face Detection]. When the registered face is shown on the LCD screen again, the camera focuses on the registered face.
 - It may not be possible to detect the registered face correctly depending on the surrounding brightness, the subject's hairstyle, etc. In this case, register the face again under the conditions where the image will be shot.
 - When the Smile Shutter function is used with the Face Detection frame registered, Smile Detection is performed only on the registered face.
 - You cannot register the priority face in Easy Shooting mode, Manual Exposure Shooting mode or when the self-timer is set to [Self-portrait One Person] or [Self-portrait Two People].

Anti Blink

When Scene Selection is set to  (Soft Snap) while you are shooting an image, the camera automatically shoots two images consecutively. The camera will select, display and record the image which the eyes are not blinked automatically.

- 1 Set the mode dial to **SCN** (Scene Selection).
- 2 Select  (Soft Snap).
- 3 MENU →  (Anti Blink) → desired mode

✔	 (Auto)	When Face Detection is active, the Anti Blink function operates so that images with the subject's eyes open are recorded.
	 (Off)	Does not use the Anti Blink function.



Notes

- [Anti Blink] does not function in the following situations:
 - When using the flash
 - When Burst/Bracket mode is selected
 - When the Face Detection function does not work
 - When the Smile Shutter function is activated
- Sometimes the Anti Blink function does not work depending on the situation.
- When the Anti Blink function is set to [Auto] but only images with the subject's eyes closed are recorded, the message "Blinked eye detected" is displayed on the LCD screen. Shoot again as necessary.

Table of contents
Operation Search
MENU/Settings Search
Index

SteadyShot

In Movie Mode, you can vary the strength of SteadyShot.

- 1 Set the mode dial to  (Movie Mode).
- 2 MENU →  (SteadyShot) → desired mode







	 (Standard)	Provides the SteadyShot effect under stable recording conditions.
✓	 (Active)	Provides a more powerful SteadyShot effect.

Table of contents
Operation Search
MENU/Settings Search
Index


Slideshow

Images are automatically played back in succession.

- 1 Press the  (Playback) button to switch to playback mode.
- 2 MENU →  (Slideshow) → desired slideshow → ● on the control button

 (Continuous Playback)	Plays back all the images in succession.
 (Slideshow with music)	Plays back images in succession, with added effects and music.


Continuous Playback

- 1 Select the desired image for playing with the control button.
- 2 MENU →  (Slideshow) → [Continuous Playback] → ●

Control button	Playback feature
●	Stop
▲	Sets the display settings.
▼	Displays the volume control screen. <ul style="list-style-type: none">• Adjust the volume with ▲/▼ on the control button, then press ●.
◀	Rewinds image.
▶	Forwards image.

Note


- When [Display Burst Group] is [Display Main Image Only], only the main image is displayed.

 Viewing panoramic images during continuous playback

The whole panoramic image is displayed for 3 seconds.
You can scroll a panoramic image by pressing ●.
Press ● again while scrolling, the screen returns to the whole panoramic image.

Table of contents
Operation Search
MENU/Settings Search
Index

Slideshow with music

1 MENU →  (Slideshow) → [Slideshow with music] → ● on the control button

Displays the setting screen.

2 Select a desired setting.

3 [Start] → ●

4 Press ● to end the slideshow.

Notes

- [Slideshow with music] is not available in the following cases:
 - Panoramic images
 - When [View Mode] is set to [Folder view (MP4)] or [AVCHD view].
- Settings other than [Image] are stored until the next time they are changed.

Image

Selects the group of images to be shown. This setting is fixed to [Folder] when the internal memory is used to record images.

✓	All	Plays a slideshow of all the images in order.
	This Date	Plays a slideshow of images with the currently selected date range when View Mode is [Date View].
	Folder	Plays a slideshow of images in the currently selected folder when View Mode is Folder View.

Effects

Selects the playback speed and mood for slideshows. If the playback time of a movie is long, an image is taken from it and displayed.

✓	Simple	A simple slideshow switching images at a preset interval. The playback interval is adjustable in [Interval] and you can thoroughly enjoy your images.
	Nostalgic	A moody slideshow reproducing the atmosphere of a movie scene.
	Stylish	A stylish slideshow proceeding at a middle tempo.
	Active	A high-tempo slideshow suitable for active scenes.

Note

- When [Display Burst Group] is set to [Display Main Image Only], the grouped burst images are displayed as follows:
 - When [Effects] is set to [Simple], only the main image is displayed.
 - When [Effects] is set to other than [Simple] and there are two or fewer burst images, only the main image is displayed.
 - When [Effects] is set to other than [Simple] and there are three or more burst images, three images including the main image are displayed.

Music

Specifies the music to be played during slideshows. You can select more than one background music track. Press ▼ on the control button to display the volume control screen, then press ▲/▼ to adjust the volume.

✓	Music1	The default setting for a [Simple] slideshow.
	Music2	The default setting for a [Nostalgic] slideshow.
	Music3	The default setting for a [Stylish] slideshow.
	Music4	The default setting for a [Active] slideshow.
	Mute	Does not use BGM.

Note

- The movies are played back without their audio.

Interval

Sets the screen switching interval. The setting is fixed to [Auto] when [Simple] is not selected as the [Effects].

	1 sec	Sets the display interval of images for a [Simple] slideshow.
✓	3 sec	
	5 sec	
	10 sec	
	Auto	The interval is set to suit the selected [Effects] item.

Note

- The interval setting is invalid for movie playback.

Repeat

Turns slideshow repeat on or off.


✓	On	Plays back images in a continuous loop.
	Off	After all the images have been played back, the slideshow ends.




Selecting background music



You can transfer a desired music file from your CDs or MP3 files to the camera to play back during slideshow. To transfer music, install the “Music Transfer” software (supplied) to your computer. For details, see pages 123 and 124.

- You can record up to four pieces of music on the camera (The 4 preset pieces (Music1 – Music4) can be replaced with the ones you transferred).
- The maximum length of each music file for music playback of the camera is about 5 minutes.
- If you cannot play back a music file due to damage or other malfunctions of the file, execute [Format Music] (page 102) and transfer the music again.

Send by TransferJet

TransferJet is a close-up, wireless transfer technology that allows data to be transferred by closely aligning two products that you want to communicate with each other. To find out whether your camera is equipped with the TransferJet function, check for the  (TransferJet) mark on the bottom of the camera. Using Memory Stick with TransferJet (sold separately), you can transfer image data between the camera and TransferJet-compatible devices. For more details on TransferJet, see the operating instructions supplied with Memory Stick with TransferJet.

- 1 Insert Memory Stick with TransferJet into this camera, then press the  (Playback) button.
- 2 MENU →  (Send by TransferJet) → desired mode → ● on the control button
- 3 Send image data by aligning  (TransferJet) marks on the camera and other device.
A beep sounds when the connection is successful.

 (This Image)	Sends the currently displayed image in single-image mode.
 (Multiple Images)	<p>You can select and send multiple images. Do as the following after step 2.</p> <p>① Select an image then press ●. Repeat the above step until there are no more images to be sent. Select an image with a ✓ mark to release the ✓ mark.</p> <p>② MENU → [OK] → ●</p>

Notes






- Only still images can be transferred.
- You can send up to 10 images at a time.
- Set [TransferJet] to [On] in  (Settings) (page 107).
- On an airplane, set [TransferJet] to [Off] in  (Settings) (page 107). In addition, follow the rules of the place where you use.
- The connection is cut if transfer cannot be made within about 30 seconds. In that case, select [Yes] in the resending confirmation screen and aligning  (TransferJet) marks on the camera and other device again.
- In some countries or regions, Memory Stick with TransferJet, or a TransferJet-compatible camera may not be available, depending on local regulations (active and pending).
- Outside the country or region of purchase, set [TransferJet] to [Off]. In some countries or regions, the use of TransferJet may be subject to punishment according to local radio wave regulations.

Table of contents
Operation Search
MENU/Settings Search
Index

Receiving the data by TransferJet


- 1 Press the  (Playback) button to switch to playback mode.
- 2 Receive image data by aligning  (TransferJet) marks on the camera and other device.


A beep sounds when the connection is successful.



Notes

- Some images cannot be played back on this camera.
- If an image database file error occurs during saving images, an image recovery screen appears.
- To play back images that could not be registered to the database file, play back in [Folder view (Still)].

Tips for transferring data

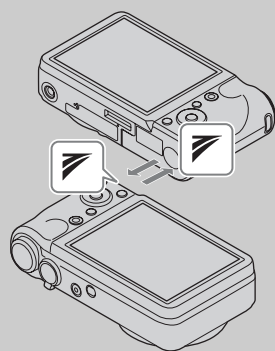Aligning  (TransferJet) marks on the camera and other device.

 




- Transfer speed or range varies depending on the angle at which the  (TransferJet) marks face each other.
- It may be necessary to alter the position/angle of the camera until communication can be obtained.
- For a better transfer, position the cameras parallel to each other so the  (TransferJet) marks are close as illustrated.

Using TransferJet-compatible devices (sold separately)



Using TransferJet-compatible devices (sold separately) allows you to transfer image data to another device, such as a computer.





For details, refer to the operating instructions supplied with the TransferJet-compatible devices.

- When you use TransferJet-compatible devices, be careful of the following:
 - Press the  (Playback) button on the camera to switch to playback mode beforehand.
 - If no image is displayed, set MENU →  (Settings) →  (Main Settings) → [LUN Settings] → [Single].
 - You cannot record or delete data on this camera when the camera is connected to a TransferJet-compatible device.
 - Do not stop connection while importing the images to a computer using “PMB”.

View Mode

Allows you to select the display format for images.




- 1 Press the  (Playback) button to switch to playback mode.
- 2 MENU →  (View Mode) → desired mode → ● on the control button

✓	 (Date View)	Displays images by the date.
	 (Folder view (Still))	Displays still images.
	 MP4 (Folder view (MP4))	Displays movies in MP4 format.
	 AVCHD (AVCHD view)	Displays movies in AVCHD format.

Notes

- When using the internal memory, the view mode is set to Folder View and still images and movies are played from the same folder.
- Event View is not available on this camera.

 Displaying the Calendar

- 1 MENU →  (View Mode) → [Date View] → ● on the control button
- 2 Turn the  (Index) lever repeatedly until the Calendar is displayed.
Use the control button to select , then select the month you want to display. Select the date and press ● to view images of the selected date in index mode.

Viewing images taken with a different camera

This camera creates a database file in a memory card and registers every shot image to it for later playback. If the camera detects images that have not been registered to the database file in the memory card, the registration screen “Files found which were not recognized Import files” appears.




If you want to view unregistered images, select [OK] to register the images.



- For registration, use a fully charged battery pack. If you attempt to register unregistered files using a battery pack with little remaining charge, the battery pack may run out, causing copying to fail or possibly corrupting the data.

Table of contents
Operation Search
MENU/Settings Search
Index

Display Burst Group


You can select to display burst images in groups or display all images during playback.

- 1 Press the  (Playback) button to switch to playback mode.
- 2 MENU →  (View Mode) → [Date View] → ● on the control button
- 3 MENU →  (Display Burst Group) → desired setting → ●

✔	 (Display Main Image Only)	Groups burst images, then plays back the main image only. <ul style="list-style-type: none">• When Face Detection is performed in burst mode, the camera determines and displays the optimum image as the main image. When Face Detection is not performed, the first image in the burst group is displayed as the main image.
	 (Display All)	Plays back all burst images one at a time.

💡Displaying grouped burst images side by side

Only main images are displayed if [Display Main Image Only] has been set. You can display images in the index by following the procedure below.

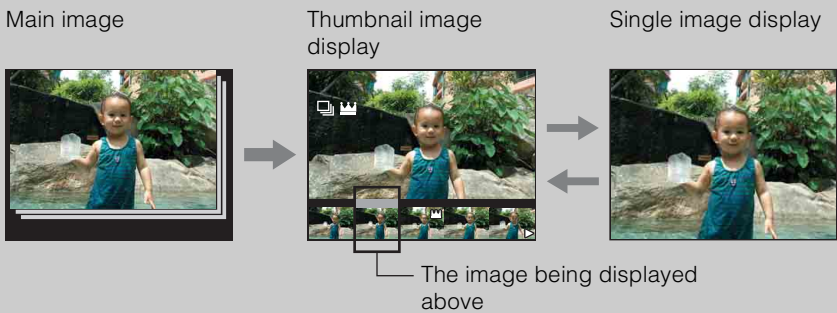




 



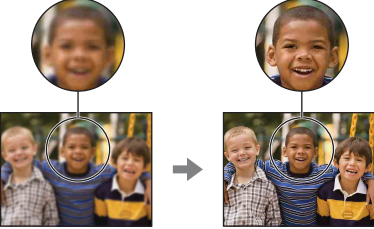
- ① Display the main image of the group in playback mode, then press ● on the control button. The images in the burst group are displayed in the index.
- ② Press ◀/▶ to display the desired images one at a time.
- ③ Press ▼ to switch to single image display or burst images display.
- ④ To cancel the display, press ●.

Table of contents
Operation Search
MENU/Settings Search
Index

Retouch

Retouches a recorded image and saves it as a new file. The original image is retained.

- 1 Press the  (Playback) button to switch to playback mode.
- 2 MENU →  (Retouch) → desired mode → ● on the control button
- 3 Perform retouching according to the operation method in each mode.


 (Trimming (Resize))	<p>Records the zoomed playback image.</p> <ul style="list-style-type: none">① Turn the Q lever to (T) to zoom in and turn to (W) to zoom out.② Set the zoom point with the control button.③ MENU → select an image size to save → ●④ [OK] → ● <ul style="list-style-type: none">• The quality of trimmed images may deteriorate.• The image size that you can trim may vary depending on the image.	
 (Red Eye Correction)	<p>Corrects the red-eye phenomenon caused by flash.</p> <ul style="list-style-type: none">① Select [OK] with the control button → ●. <ul style="list-style-type: none">• You may not be able to correct the red-eye phenomenon depending on the image.	
 (Unsharp masking)	<p>Sharpens the image within a chosen frame.</p> <ul style="list-style-type: none">① Select the area (frame) of the desired image to retouch with the control button → MENU.② [OK] → ● <ul style="list-style-type: none">• Depending on the image, sufficient correction may not be applied and the image quality may deteriorate.	



Note








- You cannot retouch the image using [Retouch] in the following cases:
 - Movie
 - Panoramic images
 - Images selected burst group

Table of contents
Operation Search
MENU/Settings Search
Index

Delete

Allows you to select unwanted images for deletion.
You can also delete images using the  (Delete) button (page 43).

- 1 Press the  (Playback) button to switch to playback mode.
- 2 MENU →  (Delete) → desired mode → ● on the control button
- 3 [OK] → ●


 (All but this image)	Deletes burst group images other than the selected image in Display Burst Group mode. Press [OK] → ● after step 2.
 (All In This Group)	Deletes all images in the selected burst group at once. Press [OK] → ● after step 2.
 (This Image)	Deletes the currently displayed image in single-image mode.
 (Multiple Images)	Allows you to select and delete multiple images. Do as the following after step 2. ① Select an image then press ●. Repeat the above step until there are no more images to be deleted. Select an image with a ✓ mark again to release the ✓ mark. ② MENU → [OK] → ●
 (All in Date Range)  (All in This Folder)  (All AVCHD files)	Deletes all images in the selected date range or folder, or all AVCHD movies at once. Press [OK] → ● after step 2.




Notes




 
 

- In Easy Viewing mode, you can select between [1 image] or [All].
- When the internal memory is used to record images, View Mode is set to Folder View and still images and movies are displayed in the same folder.

Table of contents
Operation Search
MENU/Settings Search
Index

Protect

Protects recorded images against accidental erasure.
The  mark is displayed for registered images.

- 1 Press the  (Playback) button to switch to playback mode.
- 2 MENU →  (Protect) → desired mode →  on the control button

 (This Image)	Protects the currently displayed image in single-image mode.
 (Multiple Images)	<p>You can select and protect multiple images. Do as the following after step 2.</p> <p>① Select an image then press .</p> <p>Repeat the above step until there are no more images to be protected. Select an image with a  mark to release the  mark.</p> <p>② MENU → [OK] → </p>

Note

- When the internal memory is used to record images, View Mode is set to Folder View and still images and movies are displayed in the same folder.

To cancel the protection




Select the image for which you want to cancel protection, and unlock it by pressing  on the control button as the same procedure to protect it.
The  indicator disappears, and the protection is released.



Table of contents	Operation Search	MENU/Settings Search	Index
-------------------	------------------	----------------------	-------

DPOF

DPOF (Digital Print Order Format) is a function that allows you to specify the images of the memory card that you want to print out later.

The **DPOF** (Print order) mark is displayed for registered images.

- 1 Press the  (Playback) button to switch to playback mode.
- 2 MENU → **DPOF** → desired mode → ● on the control button

 (This Image)	Orders printing the currently displayed image in single-image mode.
 (Multiple Images)	<p>You can select and order printing multiple images. Do as the following after step 2.</p> <p>① Select an image then press ●. Repeat the above step until there are no more images to be printed. Select an image with a ✓ mark to release the ✓ mark.</p> <p>② MENU → [OK] → ●</p>

Notes

- The **DPOF** (Print order) mark cannot be added to movies or to images in the internal memory.
- You can add a **DPOF** (Print order) mark to a maximum 999 images.

Clearing the DPOF mark


Select the image to clear the DPOF registration, then press ● on the control button in the same procedure as when making a **DPOF** mark.





The **DPOF** mark disappears and the DPOF registration is cleared.

Table of contents
Operation Search
MENU/Settings Search
Index

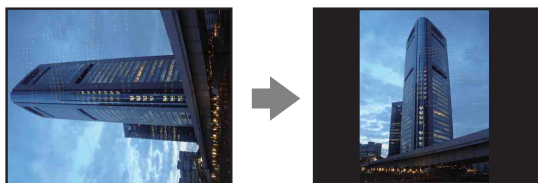Rotate

Rotates a still image. Use this to display a horizontal orientation image in vertical orientation.






- 1 Press the  (Playback) button to switch to playback mode.
- 2 MENU →  (Rotate) → ● on the control button
- 3 Rotate the image with [/] → ◀/▶.
- 4 [OK] → ●

Notes

- You cannot rotate in the following cases:
 - Movie
 - Protected images
 - Images selected burst group
- You may not be able to rotate images shot with other cameras.
- When viewing images on a computer, the image rotation information may not be reflected depending on the software.

Select Folder

When multiple folders are created in a memory card, this selects the folder containing the image you want to play back.

- 1 Press the  (Playback) button to switch to playback mode.
- 2 MENU →  (View Mode) → [Folder view (Still)] or [Folder view (MP4)] → ● on the control button
- 3 MENU →  (Select Folder) → ●
- 4 Select the folder with ◀/▶.
- 5 [OK] → ●




Note

- This item is not displayed when the internal memory is used to record images.





Viewing images across multiple folders

When multiple folders are created, the following indicators appear on the first and last images in the folder.

- : Moves to the previous folder
- : Moves to the next folder
- : Moves to either the previous or next folders

Movie format

You can set the recording method used to record movies.



- 1 Set the camera to shooting mode.
- 2 MENU →  (Settings) →  (Shooting Settings) → [Movie format] → desired mode → ● on the control button

✓	AVCHD	This recording method is suitable for viewing smooth video images on a High Definition (HD) TV. AVCHD movies are recorded.
	MP4	This recording method is suitable for WEB uploads and e-mail attachments. mp4 (AVC) movies are recorded.

Table of contents
Operation Search
MENU/Settings Search
Index

AF Illuminator

The AF illuminator supplies fill light to focus more easily on a subject in dark surroundings. The AF illuminator emits red light allowing the camera to focus easily when the shutter button is pressed halfway, until the focus is locked. The **AF-ON** indicator appears at this time.

- 1 Set the camera to shooting mode.
- 2 MENU →  (Settings) →  (Shooting Settings) → [AF Illuminator] → desired mode → ● on the control button

✓	Auto	Uses the AF illuminator.
	Off	Does not use the AF illuminator.

Notes


 

 
 


- Focus is achieved as long as the AF illuminator light reaches the subject, regardless of whether light fails to reach the center of the subject.
- You cannot use the AF illuminator when:
 - In iSweep Panorama mode
 -  (Advanced Sports Shooting),  (Landscape),  (Twilight),  (Pet) or  (Fireworks) mode is selected in Scene Selection.
 - The self-timer is set to [Self-portrait One Person] or [Self-portrait Two People].
- When you use the AF illuminator, the normal AF range finder frame is disabled and a new AF range finder frame is displayed by a dotted line. AF operates with priority on subjects located near the center of the frame.
- The AF illuminator emits very bright light. Although there is no health hazard, do not look directly into the AF illuminator emitter at close range.

Table of contents
Operation Search
MENU/Settings Search
Index

Grid Line

With reference to the grid lines, you can easily set a subject in a horizontal/vertical position.



- 1 Set the camera to shooting mode.
- 2 MENU →  (Settings) →  (Shooting Settings) → [Grid Line] → desired mode → ● on the control button

	On	Displays the grid lines. The grid lines are not recorded.
✓	Off	Does not display the grid lines.

Table of contents
Operation Search
MENU/Settings Search
Index


Digital Zoom

Selects the digital zoom mode. The camera enlarges the image using optical zoom (up to 10×). When the zoom scale is exceeded, the camera uses either smart or precision digital zoom.

- 1 Set the camera to shooting mode.
- 2 MENU →  (Settings) →  (Shooting Settings) → [Digital Zoom] → desired mode → ● on the control button

✓	Smart (S_Q)	Enlarges the image digitally within the range where the image will not be distorted, according to the image size (Smart zoom).
	Precision (P_Q)	Enlarges all image sizes by the total zoom scale of approximately 20× including the optical zoom 10×. However, note that the image quality deteriorates when the optical zoom scale is exceeded (Precision digital zoom).
	Off	Does not use the digital zoom.

Notes

- The Digital Zoom function does not operate in the following situations:
 - In Backlight Correction HDR mode
 - When the Scene Selection is set to  (Advanced Sports Shooting)
 - In Movie Mode
 - In iSweep Panorama mode
 - When the Smile Shutter function is activated
 - When the self-timer is set to [Self-portrait One Person] or [Self-portrait Two People]
- The smart zoom is not available when the image size is set to [10M], or [16:9(7M)].
- The Face Detection function does not work when using the digital zoom.

Total zoom scale when using Smart zoom (including optical zoom 10×)



The supported zoom ratio differs depending on the image size.

Size	Total zoom scale
5M	Approx. 14×
VGA	Approx. 57×
16:9(2M)	Approx. 19×

Table of contents
Operation Search
MENU/Settings Search
Index

Auto Orientation

When the camera is rotated to shoot a portrait (vertical) image, the camera records its position change and displays the image in the portrait position.

- 1 Set the camera to shooting mode.
- 2 MENU →  (Settings) →  (Shooting Settings) → [Auto Orientation] → desired mode → ● on the control button

✓	On	Records the image with the correct orientation.
	Off	Does not use Auto Orientation.

Notes

- Black is displayed to the left and right of vertical orientation images.
- Depending on the shooting angle of the camera, the orientation of the image may not be recorded correctly.
- You cannot use Auto Orientation in Movie Mode.





Rotating images after recording

If the orientation of an image is incorrect, you can use the [Rotate] on the Menu screen to display the image in portrait position.

Table of contents
Operation Search
MENU/Settings Search
Index

Red Eye Reduction

The flash strobos two or more times before shooting to reduce the red-eye phenomenon when using the flash.

- 1 Set the camera to shooting mode.
- 2 MENU →  (Settings) →  (Shooting Settings) → [Red Eye Reduction] → desired mode → ● on the control button

✓	Auto	When the Face Detection function is activated, the flash strobos automatically to reduce the red-eye phenomenon.
	On	The flash always strobos to reduce the red-eye phenomenon.
	Off	Does not use Red Eye Reduction.

Notes

- To avoid blurring of images, hold the camera firmly until the shutter is released. It usually takes a second until the shutter is released, and also be sure not to allow the subject to move during this period.
- Red Eye Reduction may not produce the desired effects. It depends on individual differences and conditions, such as distance to the subject, or if the subject looked away from the pre-strobe.
- If you do not use the Face Detection function, Red Eye Reduction does not work, even when you select [Auto].
- [Red Eye Reduction] is set to [Off] in the following situations:
 - In Anti Motion Blur mode
 - In Hand-held Twilight mode
 - When Scene Selection is set to **iSo** (High Sensitivity) mode
 - When the Smile Shutter function is activated

💡What causes the red-eye phenomenon?

Pupils become dilated in dark environments. Flash light is reflected off the blood vessels at the back of the eye (retina), causing the “red-eye” phenomenon.





Other ways to reduce red-eye

- Select **iSo** (High Sensitivity) mode in Scene Selection. (The flash is set to [Off] automatically.)
- When the eyes of the subject turn out red, correct the image with [Retouch] → [Red Eye Correction] on the viewing menu or with the supplied software “PMB”.

Table of contents
Operation Search
MENU/Settings Search
Index

Blink Alert

When an image with the subject’s eyes closed is recorded while Face Detection is activated, the message “Blinked eye detected” is displayed.



- 1 Set the camera to shooting mode.
- 2 MENU →  (Settings) →  (Shooting Settings) → [Blink Alert] → desired mode → ● on the control button

✓	Auto	Displays the “Blinked eye detected” message.
	Off	Does not display the message.

Table of contents
Operation Search
MENU/Settings Search
Index

Beep

Selects or turns off the sound produced when you operate the camera.



- 1 MENU →  (Settings) →  (Main Settings) → [Beep] → desired mode → ● on the control button

	Shutter	Turns on the shutter sound when you press the shutter button.
✓	High	Turns on the beep/shutter sound when you press the control/shutter button. If you want to lower the volume, select [Low].
	Low	
	Off	Turns off the beep/shutter sound.

Table of contents
Operation Search
MENU/Settings Search
Index



Language Setting

Selects the language to be used in the menu items, warnings and messages.

- 1 MENU →  (Settings) →  (Main Settings) → [Language Setting] → desired mode → ● on the control button

Function Guide

You can select whether or not the function guide is displayed when you operate the camera.

- 1 MENU →  (Settings) →  (Main Settings) → [Function Guide] → desired mode → ● on the control button



✓	On	Displays the function guide.
	Off	Does not display the function guide.

Table of contents
Operation Search
MENU/Settings Search
Index


GPS assist data (DSC-HX5V only)

The time for the GPS acquiring location information can be shortened by taking in GPS assist data. The state of GPS assist data can be checked on the camera.


If connection is made using the supplied software, “PMB”, the GPS assist data can be updated automatically.

1 MENU →  (Settings) →  (Main Settings) → [GPS assist data] → ● on the control button

Notes



- If [Date & Time Setting] is not set, or set time is shifted greatly, the time for the GPS acquiring location information cannot be shortened.
Set the date and time correctly by MENU →  (Settings) → [Date & Time Setting].
- If the term of validity of assist data has run out, the time until you can record location information cannot be shortened.

Using GPS Support Tool

You can also update the GPS assist data by inserting a memory card into the computer. Start up [GPS Support Tool] from  (PMB Launcher), select the memory card drive from your computer, and then update the GPS assist data.

Demo Mode

You can set whether to use a demonstration of the Smile Shutter and Scene Recognition. When there is no need to view a demonstration, set to [Off].

- 1 MENU →  (Settings) →  (Main Settings) → [Demo Mode] → desired mode → ● on the control button

	Demo Mode1	Demonstrates Scene Recognition mode.
	Demo Mode2	Automatically starts the Smile Shutter demonstration when no operation is performed for 15 seconds.
	Demo Mode3	Automatically starts the AVCHD format movie playback demonstration after the camera has not been operated for a predetermined time while connected to a High Definition (HD) TV using an HDMI cable (sold separately).
✓	Off	Does not perform a demonstration.

Note



- Pressing the shutter button during the Smile Shutter demonstration operates the shutter, but no image is recorded.

Table of contents
Operation Search
MENU/Settings Search
Index

Initialize

Initializes the setting to the default setting.

Even if you execute this function, the images are retained.



- 1 MENU →  (Settings) →  (Main Settings) → [Initialize] → [OK] → ● on the control button

Note

- Be sure not to turn off the camera while initializing.

HDMI Resolution

When you connect the camera to a High Definition (HD) TV with HDMI terminals using an HDMI cable (sold separately), you can select HDMI Resolution to output images to the TV.

1 MENU →  (Settings) →  (Main Settings) → [HDMI Resolution] → desired mode → ● on the control button

✓	Auto	Set the output resolution automatically according to the information of the connected device.
	1080i	Outputs with a high definition image quality (HD) (1080i).
	480p/576p	Outputs with a standard definition image quality (SD) (480p/576p). <ul style="list-style-type: none">• If the camera is 1080 60i-compatible, video signals are output using 480p, whereas if it is 1080 50i-compatible, signals are output using 576p.



Notes

- If you cannot display the screen properly with the [Auto] setting, select [1080i] or [480p/576p] according to the connected TV.
- When shooting movies in the condition with the camera and a TV connected using an HDMI cable (sold separately), the image being shot is not displayed in the TV side.

Table of contents
Operation Search
MENU/Settings Search
Index

CTRL FOR HDMI

This setting allows TV’s remote control of a camera that is connected to a “BRAVIA” Sync TV using an HDMI cable (sold separately). For details on “BRAVIA” Sync, see page 120.

1 MENU →  (Settings) →  (Main Settings) → [CTRL FOR HDMI] → desired mode → ● on the control button

✓	On	Allows remote controlled operation.
	Off	Disallows remote controlled operation.



Note

- You can perform the operation of the camera with the remote controller of your TV by connecting your camera to a “BRAVIA” Sync compatible TV.

Table of contents
Operation Search
MENU/Settings Search
Index

COMPONENT

Selects the video output signal type from SD and HD(1080i) when you connect the camera and TV using an HD Output Adaptor Cable (sold separately), according to the TV connected. Use a Type2c-compliant HD Output Adaptor Cable (sold separately).

1 MENU →  (Settings) →  (Main Settings) → [COMPONENT] → desired mode → ● on the control button

✓	HD(1080i)	Select this item to connect the camera to a 1080i-capable High Definition TV.
	SD	Select this item to connect the camera to a TV that is not compatible with an HD(1080i) signal.



Note

- When shooting movies in the condition with the camera and a TV connected using an HD Output Adaptor Cable (sold separately), the image being shot is not displayed in the TV side.

Table of contents
Operation Search
MENU/Settings Search
Index

USB Connect

Selects the USB mode when connecting the camera to a computer or a PictBridge-compliant printer using the cable for multi-use terminal.

1 MENU →  (Settings) →  (Main Settings) → [USB Connect] → desired mode → ● on the control button



✓	Auto	The camera recognizes automatically and sets up communication with a computer or PictBridge-compliant printer.
	PictBridge	Connects the camera to a PictBridge-compliant printer.
	PTP/MTP	When you connect the camera to a computer, the AutoPlay Wizard appears, and the still images in the recording folder on the camera are imported to the computer. (with Windows 7/Vista/XP, Mac OS X)
	Mass Storage	Establishes a Mass Storage connection between the camera and a computer or other USB device.

Notes

- If you cannot connect the camera to a PictBridge-compliant printer with the [Auto] setting, select [PictBridge].
- If you cannot connect the camera to a computer or a USB device with the [Auto] setting, select [Mass Storage].
- When [USB Connect] is set to [PTP/MTP], you cannot export movies to a computer. To export movies to a computer, set [USB Connect] to [Auto] or [Mass Storage].

LUN Settings

Sets the display method for the recording media displayed on a computer screen or other monitor when the camera is connected with a computer or AV component using a USB connection.

1 MENU →  (Settings) →  (Main Settings) → [LUN Settings] → desired mode → ● on the control button

✓	Multi	The images both on the memory card and in the internal memory are displayed. Select this setting when you connect the camera to a computer.
	Single	When the memory card is inserted into the camera, the images on the memory card are displayed; when it is not inserted, the images in the internal memory are displayed. Select this setting in cases where the images of both the memory card and the internal memory are not displayed when the camera is connected to a device other than a computer.



Note

- You must always select [Multi] in [LUN Settings] when uploading images to a media service using “PMB Portable”.

Table of contents
Operation Search
MENU/Settings Search
Index

Download Music

You can use “Music Transfer” in the CD-ROM (supplied) to change background music tracks.



- 1 MENU →  (Settings) →  (Main Settings) → [Download Music] → ● on the control button

The message “Connect to PC” appears.

- 2 Make a USB connection between the camera and a computer, then start “Music Transfer”.
- 3 Follow the instructions on the screen to change music files.

Format Music

You can delete all the background music files stored in the camera. It can be used in cases such as when the background music files are damaged and cannot be played.

- 1 MENU →  (Settings) →  (Main Settings) → [Format Music] → [OK] → ● on the control button



Restoring the music preset at the factory to the camera

You can use “Music Transfer” in the CD-ROM (supplied) to reset music files to the preset ones.

- ① Execute [Download Music] and make a USB connection between the camera and a computer.
- ② Start “Music Transfer”, then restore the default music.
 - For details on using “Music Transfer”, see the help in “Music Transfer”.

Power Save

Sets the time until the screen darkens, and the camera turns off. If you do not operate the camera running on a battery pack for a certain amount of time, the brightness level on the LCD screen becomes dark, and then the camera automatically turns off to prevent wearing down the battery pack (Auto Power off).

1 MENU →  (Settings) →  (Main Settings) → [Power Save] → desired mode → ● on the control button

	Stamina	The LCD screen darkens after about 30 seconds of no operation. The camera turns off after another 30 seconds of no operation.
✓	Standard	The LCD screen darkens after 1 minute of no operation. The camera turns off after another 1 minute of no operation.
	Off	The LCD screen does not darken and the camera does not turn off automatically.

Table of contents
Operation Search
MENU/Settings Search
Index

GPS setting (DSC-HX5V only)

The built-in GPS and direction sensor of this camera acquire the information on location or the shooting direction, and record it on images.

Using the supplied software “PMB”, you can import photos and movies recorded with location and shooting direction information to a computer and enjoy viewing them with a map which shows their shooting location. See “PMB Help” for details.

1 MENU →  (Settings) →  (Main Settings) → [GPS setting] → desired mode → ● on the control button

✓	On	GPS direction sensor is activated.
	Off	GPS direction sensor is inactivated. If you do not record the location and direction information, set the GPS setting.

Notes

- The shooting direction is not recorded when shooting movies.
- The location and direction information is not recorded when the movie is recorded on the internal memory.
- During take off and landing of an airplane, turn off the camera, as you will be instructed to do by the on-board announcement.
- Use GPS in accordance with the regulations of the place or situation.
- It may take from several tens of seconds to several minutes to acquire the location information when you use the GPS for the first time or use it again after long intervals. Triangulating time can be shortened by taking in GPS assist data (page 93).
- The information on the shooting direction acquired by this camera is based on magnetic north (the direction a compass needle points).
- If the camera is in close proximity to a magnetic source or a metal, an error may arise in the direction sensor. Keep the camera away from a magnetic source or a metal, if at all possible.
- The correct shooting direction may not be recorded or displayed in the following cases:
 - Near a building, a footbridge, an iron bridge, a vehicle, an iron tower
 - Near electric apparatus, such as a television, speaker, refrigerator, mobile phone, headphones
 - Near a steel desk or steel chair, etc.
- Direction information will become unstable if this camera is pointed upwards.
- When an error arises in the direction sensor, perform [Adjust Compass] (page 106).









To receive a GPS signal







- Proper triangulation is not possible indoors or near tall buildings.
Use your camera in an open area outside, and turn on your camera again.
- If no triangulating icon appears, even if you wait for several minutes, you may be in an areas where GPS signal reception is difficult or impossible.
Use your camera in an open area outside, or record images in the situation as is in which case, location information is not recorded.

💡Checking triangulating status

The indicator changes according to the strength of GPS signal reception when GPS is activated.

Triangulating status	GPS indicators	GPS reception status
Off	No indicator	[GPS setting] is set to [Off] or an error occurred.
Difficult		Your camera cannot find a GPS signal, therefore, it cannot acquire the location information. Use your camera in an open area.
Searching	  	Searching for GPS satellites. It may take several minutes to start triangulating.
Impossible		Your camera cannot receive a GPS signal. Previously-triangulated location information is used in the present location instead.
Triangulating	  	Your camera is receiving a GPS signal, and can acquire location information.

💡Checking shooting direction



Shooting direction	Indicators
North	
West	
South	
East	

You can check the shooting direction with the direction icon displayed on the screen.

Adjust Compass (DSC-HX5V only)

This camera always adjusts the direction sensor automatically to minimize error. However, when an error occurs, you can perform [Adjust Compass].

If you have not used the GPS functions for a while, or use the GPS functions for the first time, it is recommended that you perform the Adjust Compass.


- 1 MENU →  (Settings) →  (Main Settings) → [Adjust Compass] → ● on the control button
- 2 Place your hand through the wrist strap and hold the camera steady with one hand.
- 3 Point the camera forwards, and trace out a figure of eight slowly by twisting your wrist.

Note

- [Adjust Compass] may not be performed correctly in close proximity to a magnetic source or a metal.




Tips for adjustment of the compass

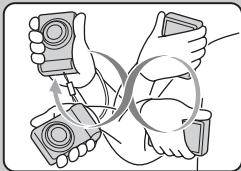

Steady the camera with one hand placed through the wrist strap. Point the camera forwards, and then trace out a figure of eight slowly by twisting your wrist, as illustrated. A beep sounds when the Adjust Compass is successful.



TransferJet

You can select TransferJet communication settings. TransferJet is a close-up, wireless transfer technology that allows data to be transferred by closely aligning two products that you want to communicate with each other.

To find out whether your camera is equipped with the TransferJet function, check for the  (TransferJet) mark on the bottom of the camera.


Using Memory Stick with TransferJet, you can transfer image data between the camera and TransferJet-compatible devices.

For more details on TransferJet, see the operating instructions supplied with Memory Stick with TransferJet.


1 MENU →  (Settings) →  (Main Settings) → [TransferJet] → desired mode → ● on the control button

✓	On	Sends images by TransferJet.
	Off	Does not send images by TransferJet.

Notes

- In Easy Viewing mode, [TransferJet] is fixed to [Off].
- On an airplane, set [TransferJet] to [Off]. In addition, follow the rules of the place where you use.
- The connection is cut if transfer cannot be made within about 30 seconds. In that case, select [Yes] in the resending confirmation screen and aligning  (TransferJet) marks on the camera and other device again.
- In some countries or regions, Memory Stick with TransferJet, or a TransferJet-compatible camera may not be available, depending on local regulations (active and pending).
- Outside the country or region of purchase, set [TransferJet] to [Off]. In some countries or regions, the use of TransferJet may be subject to punishment according to local radio wave regulations.

About TransferJet

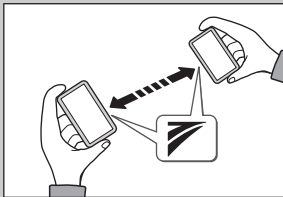





You can transfer image data between TransferJet-compatible devices and share images by inserting Memory Stick with TransferJet into the camera and aligning  (TransferJet) marks together.
For details on sending images by TransferJet, see page 73.

Table of contents
Operation Search
MENU/Settings Search
Index

Format

Formats the memory card or the internal memory. When you use a memory card with this camera for the first time, it is recommended to format the card using the camera for stable performance of the memory card before shooting. Note that formatting permanently erases all data on the memory card, and is unrecoverable. Save precious data on a computer, etc.

1 MENU →  (Settings) →  (Memory Card Tool) or  (Internal Memory Tool) → [Format] → [OK] → ● on the control button



Note

- Note that formatting permanently erases all data including even protected images.

Create REC.Folder

Creates a folder in the memory card for recording images.

Images are recorded in the newly created folder until you create another folder or select another recording folder.

1 MENU →  (Settings) →  (Memory Card Tool) → [Create REC.Folder] → [OK] → ● on the control button

Notes



- This item is not displayed when the internal memory is used to record images.
- When you insert a memory card that was used with other equipment into the camera and shoot images, a new folder may be automatically created.
- Up to 4,000 images can be stored in one folder. When the folder capacity is exceeded, a new folder is automatically created.

On the folders

After a new folder is created, you can change the storage destination folder (page 110) and select the folder for viewing images (page 82).

Change REC.Folder

Changes the folder in the memory card that is currently used for recording images.



- 1 MENU →  (Settings) →  (Memory Card Tool) → [Change REC.Folder]
- 2 Select a folder with ◀/▶ on the control button.
- 3 [OK] → ●

Notes

- This item is not displayed when the internal memory is used to record images.
- The following folder cannot be selected as a recording folder.
 - “100” folder
 - A folder with a number that has only either “□□□MSDCF” or “□□□ANV01”.
- You cannot move recorded images to another folder.

Delete REC.Folder

Deletes a folder for recording images in the memory card.



- 1 MENU →  (Settings) →  (Memory Card Tool) → [Delete REC.Folder]
- 2 Select a folder with ◀/▶ on the control button.
- 3 [OK] → ●

Notes

- This item is not displayed when the internal memory is used to record images.
- If you delete the folder set as the recording folder using [Delete REC.Folder], the folder that has the largest folder number is selected as the next recording folder.
- You can delete only empty folders. If a folder contains images, or files that cannot be played back by the camera, first delete these images and files, and then delete the folder.

Copy

Copies all images in the internal memory to a memory card.




- 1 Insert a memory card with sufficient free capacity into the camera.
- 2 MENU →  (Settings) →  (Memory Card Tool) → [Copy] → [OK] → ● on the control button

Notes

- Use a fully charged battery pack. If you attempt to copy image files using a battery pack with little remaining charge, the battery pack may run out, causing copying to fail or possibly corrupting the data.
- Images cannot be copied individually.
- The original images in the internal memory are retained even after copying. To delete the contents of the internal memory, remove the memory card after copying, then format the internal memory ([Format] in [Internal Memory Tool]).
- A new folder is created on the memory card and all the data will be copied to it. You cannot choose a specific folder and copy images to it.

File Number

Selects the method used to assign file numbers to images.



- 1 MENU →  (Settings) →  (Memory Card Tool) or  (Internal Memory Tool) → [File Number] → desired mode → ● on the control button

✔	Series	Assigns numbers to files in sequence even if the recording folder or the memory card is changed. (When the replaced memory card contains a file with a number higher than the last assigned number, a number one higher than the largest number is assigned.)
	Reset	Starts from 0001 each time the folder is changed. (When the recording folder contains a file, a number one higher than the largest number is assigned.)

Table of contents
Operation Search
MENU/Settings Search
Index

Area Setting

Adjusts the time to the local time of a selected area.

- 1 MENU →  (Settings) →  (Clock Settings) → [Area Setting] → desired setting → ● on the control button

✓	Home	You use the camera in your area. When the currently set area differs from your home area, you must make the Area Setting.
	Destination	You use the camera set to the time at your destination. Set the destination area.

Changing Area Setting

Setting a frequently visited destination lets you easily adjust the time when you visit that destination.





- ① Select the area part for [Destination], then press ● on the control button.
- ② Select an area with ◀/▶ on the control button, and select Daylight Savings time with ▲/▼.

Table of contents
Operation Search
MENU/Settings Search
Index

Date & Time Setting

Sets the date and time again.

- 1 MENU →  (Settings) →  (Clock Settings) → [Date & Time Setting] → desired setting → ● on the control button
- 2 Set the numeric value and desired settings with ▲/▼/◀/▶.
- 3 [OK] → ●

Date & Time Format	You can select the date and time display format.
Daylight Savings	You can select Daylight Savings On/Off.
Date & Time	You can set the date and time.



Note

- The camera does not have a feature for superimposing dates on images. By using “PMB” in the CD-ROM (supplied), you can print or save images with the date.

Table of contents
Operation Search
MENU/Settings Search
Index

Auto Clock ADJ (DSC-HX5V only)

Your camera maintains correct clock time by using GPS to acquire time information during starting up.

1 MENU →  (Settings) →  (Clock Settings) → [Auto Clock ADJ] → desired mode → ● on the control button

✓	On	Adjusts the clock automatically.
	Off	Does not adjust the clock automatically.

Notes


- [Auto Clock ADJ] is invalid if [GPS setting] is set to [Off].
- You must set [Date & Time Setting] on the camera before using it.
- There may be discrepancies of a few seconds.
- Depending on the area, it may not function correctly.


Table of contents
Operation Search
MENU/Settings Search
Index

Viewing an image on a Standard Definition (SD) TV

You can view images on a Standard Definition (SD) TV by connecting the camera to a TV. Refer also to the operating instructions supplied with the TV.

- 1 Turn off both the camera and the TV.
- 2 Connect the camera to the TV with the cable for multi-use terminal (supplied).

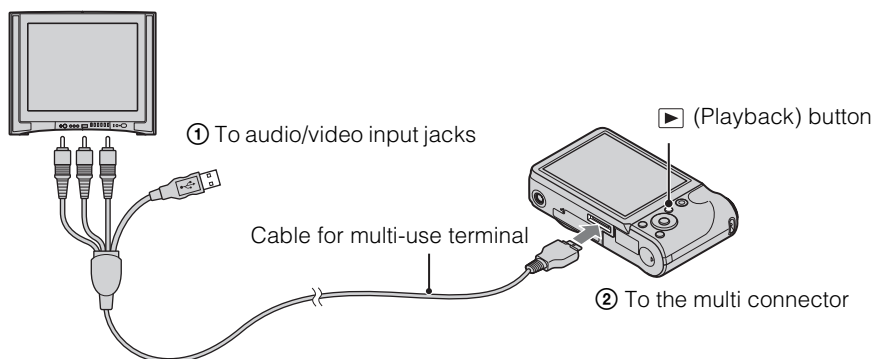

- 3 Turn on the TV and set the input.
- 4 Press  (Playback) button to turn on the camera.

Images shot with the camera appear on the TV. Select the desired image with the control button.

Notes

- The shooting image will not be displayed on the TV when the movie is shot under the condition of the camera and TV connected.
- When output to TV, Easy Viewing mode is invalid.

Viewing an image on a High Definition (HD) TV

You can view high definition images on a High Definition (HD) TV by connecting the camera to a High Definition (HD) TV with an HDMI cable (sold separately) or an HD Output Adaptor Cable (sold separately). Use a Type2c-compliant HD Output Adaptor Cable (sold separately). Refer also to the operating instructions supplied with the TV.

- 1 Turn off the camera and the TV.
- 2 Connect the camera to the TV with an HDMI cable (sold separately) or an HD Output Adaptor Cable (sold separately).

Notes

- Images shot in [VGA] image size cannot be played back in HD format.
- When shooting movies in the condition with the camera and a TV connected using an HDMI cable (sold separately) or an HD Output Adaptor Cable (sold separately), the image being shot is not displayed in the TV side.
- When output to TV, Easy Viewing mode is invalid.

On “PhotoTV HD”

This camera is compatible with the “PhotoTV HD” standard.


By connecting Sony PhotoTV HD-compatible devices using an HDMI cable (sold separately) or an HD Output Adaptor Cable (sold separately), a whole new world of photos can be comfortably enjoyed in breathtaking Full HD quality.


- “PhotoTV HD” allows for a highly-detailed, photo-like expression of subtle textures and colors.
- The settings are also required to be made on the TV. For playing movies, set the display setting of your TV to Video for optimal image quality.
- For details, refer to the operating instruction of the TV.

Viewing an image by connecting the camera to a High Definition (HD) TV with an HDMI cable (sold separately)

Connect the camera to a High Definition (HD) TV which has an HDMI terminal with an HDMI cable (sold separately).

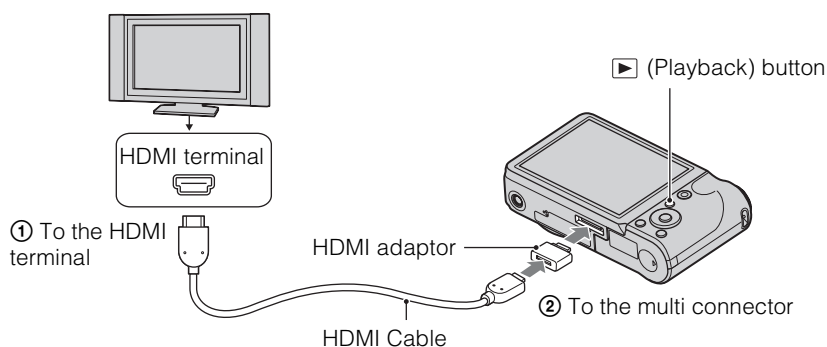

- 1 Attach an HDMI adaptor (supplied) to an HDMI Cable (sold separately).
- 2 Connect the camera to the TV with the HDMI Cable.



- 3 Turn on the TV and set the input.
- 4 Press  (Playback) button to turn on the camera.




The shooting images are displayed on the TV. Select an image with the control button.

Notes

- Set [HDMI Resolution] to [Auto] or [1080i] in MENU →  (Settings) →  (Main Settings).
- [Beep] is fixed to [Shutter].
- Do not connect the device output terminal to the output terminal of other devices. The images and sounds will not be output. Also, this may result in malfunction.
- Some devices may not work properly.
- Use an HDMI cable with the HDMI logo mark.
- Recording may stop automatically after a while to protect the camera when shooting movies with the camera and a TV connected using an HDMI Cable (sold separately).



Viewing images on a “BRAVIA” Sync TV

When connecting the camera to a “BRAVIA” Sync compatible TV with an HDMI cable (sold separately), you can play back images on your camera by the TV’s remote control on the TV.

- 1 Attach an HDMI adaptor (supplied) to an HDMI Cable (sold separately).
- 2 Connect the camera to the TV with the HDMI cable.
- 3 Turn on the TV and set the input.
- 4 Press the  (Playback) button to turn on the camera.
- 5 MENU →  (Settings) →  (Main Settings) → [CTRL FOR HDMI] → [On] → ● on the control button
- 6 Press the SYNC MENU button on the TV’s remote control and select the desired mode.

Operation items	Descriptions
Slideshow with music	Plays back a slideshow of images with music.
Single Image	Displays images one by one.
Image Index	Displays multiple images at the same time.
Delete	Deletes images.
Playback zoom	Plays back the enlarged image.
Rotate	Rotates a still image.
View Mode	Selects the display format for viewing multiple images.


Notes


- When the camera is connected to a TV set using an HDMI Cable, the functions that you can operate are limited.
- You can perform the operation of the camera with the remote controller of your TV by connecting your camera to a “BRAVIA” Sync compatible TV.
- When you connect the camera to other company’s TV, the remote control of the TV may activate the camera incorrectly. Select [Off] in [CTRL FOR HDMI] on MENU →  (Settings) →  (Main Settings).

Viewing an image by connecting the camera to a High Definition (HD) TV with an HD Output Adaptor Cable (sold separately)

You can view an image recorded on the camera by connecting the camera to a High Definition (HD) TV with an HD Output Adaptor Cable (sold separately). Use a Type2c-compliant HD Output Adaptor Cable (sold separately).

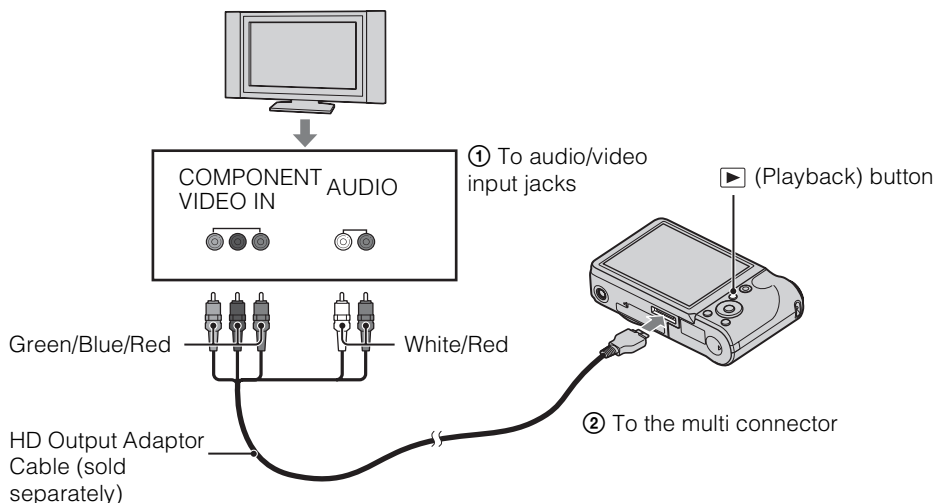

- 1 Connect the camera to the TV with an HD Output Adaptor Cable (sold separately).



- 2 Turn on the TV and set the input.
- 3 Press the  (Playback) button to turn on the camera.

The shooting images are displayed on the TV. Select an image with the control button.

Note

- Before you use this function, MENU →  (Settings) →  (Main Settings) to select [HD(1080i)] for [COMPONENT].

Using with your computer

“PMB” and other applications are contained on the CD-ROM (supplied) to allow more versatile use of images shot with your Cyber-shot camera.

Recommended computer environment (Windows)

The following computer environment is recommended when using the supplied software “PMB”, “Music Transfer” or “PMB Portable” and importing images via a USB connection.

OS (pre-installed)	Microsoft Windows XP* ¹ SP3/Windows Vista* ² SP2/Windows7
Others	CPU: Intel Pentium III 800 MHz or faster (For playing/editing the High Definition movies: Intel Core Duo 1.66 GHz or faster/ Intel Core 2 Duo 1.66 GHz or faster) Memory: 512 MB or more (For playing/ editing the High Definition movies: 1 GB or more) Hard Disk: Disk space required for installation—approximately 500 MB Display: Screen resolution: 1,024 × 768 dots or more

*¹ 64-bit editions and Starter (Edition) are not supported.

Windows Image Mastering API (IMAPI) Ver.2.0 or later is required to use the function for creating discs.

*² Starter (Edition) is not supported.

Recommended computer environment (Macintosh)

The following computer environment is recommended when using the supplied software, “Music Transfer” or “PMB Portable” and importing images via a USB connection.

OS (pre-installed)	USB Connection: Mac OS X (v10.3 to v10.6) Music Transfer/PMB Portable: Mac OS X (v10.4 to v10.6)
---------------------------	---

Notes

- Operation is not assured in an environment based on an upgrade of the operating systems described above or in a multi-boot environment.
- If you connect two or more USB devices to a single computer at the same time, some devices, including the camera, may not operate, depending on the types of USB devices you are using.
- Connecting the camera using a USB interface that is compatible with Hi-Speed USB (USB 2.0 compliant) allows advanced transfer (high speed transfer), as the camera is compatible with Hi-Speed USB (USB 2.0 compliant).
- When your computer resumes activity from suspend or sleep mode, communication between the camera and your computer may not recover at the same time.


Table of contents
Operation Search
MENU/Settings Search
Index

Using the software

Installing “PMB (Picture Motion Browser)” and “Music Transfer” (Windows)

- 1 Turn on your computer, and insert the CD-ROM (supplied) into the CD-ROM drive.

The installation menu screen appears.

- If it does not appear, double-click [Computer] (in Windows XP, [My Computer]) →  (SONYPMB).
- If the AutoPlay screen appears, select “Run Install.exe” and follow the instructions that appear on the screen to proceed with the installation.

- 2 Click [Install].

The “Choose Setup Language” screen appears.

- 3 Select the desired language, then proceed to the following screen.

The “License Agreement” screen appears.





- 4 Carefully read the agreement, click the radio button (○ → ●) to accept the terms of the agreement, and then click [Next].

- 5 Follow the instructions on the screen to complete the installation.

- For the installation, connect the camera to the computer during the procedure (page 125).
- When the restarting confirmation message appears, restart the computer following the instructions on the screen.
- DirectX may be installed depending on the system environment of your computer.

- 6 Remove the CD-ROM after the installation is complete.


- 7 Start up the software.

- To start up “PMB”, click  (PMB) on the desktop.
For the detailed operation method, see “PMB” support page below (English only) or click  (PMB Help).
<http://www.sony.co.jp/pmb-se/>
- To start up “PMB” from the Start menu, select [Start] → [All Programs] →  (PMB).
- If “PMB” is already installed in your computer, by installing “PMB” from the CD-ROM (supplied), you can start up all of the application from “PMB Launcher”.
To start up “PMB Launcher”, double-click  (PMB Launcher) on the desktop.

Notes

- Log on as Administrator.
- When “PMB” is started up for the first time, the confirmation message of the Information tool appears on the screen. Select [Start].


Installing “Music Transfer” (Macintosh)

- 1 Turn on your Macintosh computer, and insert the CD-ROM (supplied) into the CD-ROM drive.
- 2 Double-click  (SONYPMB).
- 3 Double-click the [MusicTransfer.pkg] file in the [Mac] folder.
The installation of the software starts.

Notes

- “PMB” is not compatible with Macintosh computers.
- Shut down all other application software before you install “Music Transfer”.
- For installation, you need to log on as Administrator.

Introduction to “PMB”


- “PMB” allows you to import images shot with the camera to a computer for display. Make a USB connection between the camera and your computer, and click [Import].
- Images on a computer can be exported to a memory card, and displayed on the camera. Make a USB connection between the camera and your computer, click [Export] → [Easy Export (PC Sync)] in the [Manipulate] menu, and click [Export].
- You can save and print images with the date.
- You can display images stored on a computer by shooting date in a calendar display.
- You can correct (Red Eye Reduction, etc.) still images, and change the shooting date and time.
- You can create discs with CD or DVD disc-writing drive.
- You can create Blu-ray discs, AVCHD format discs or DVD discs from AVCHD format movies imported to a computer. (An internet connection environment is required when a Blu-ray disc/DVD disc is created for the first time.)
- You can upload images to media services. (An internet connection environment is required.)
- You can import photos and movies recorded with location and shooting direction information to a computer and enjoy viewing them with a map which shows their shooting location (DSC-HX5V only).
- For other details, see  (PMB Help).

Introduction to “Music Transfer”

“Music Transfer” allows you to replace the Music files provided in the camera at the factory with your favorite tracks, and to delete and add Music files.


You can also restore the tracks stored at the factory to your camera.


The following track types can be imported using “Music Transfer”.

- MP3 files stored on the hard disk of your computer
- Music CD tracks
- Preset-music saved on the camera
- Before starting up “Music Transfer”, perform MENU →  (Settings) → [Main Settings] → [Download Music], and connect the camera to a computer.

For other details, see the help in “Music Transfer”.

Connecting the camera to the computer

- 1 Insert a sufficiently charged battery pack into the camera, or connect the camera to a wall outlet (wall socket) using the AC-LS5 AC Adaptor (sold separately) and the USB/AV/DC IN Cable for multi-use terminal (sold separately).
 - Use a Type2c-compliant USB/AV/DC IN Cable (sold separately).
- 2 Turn on the computer, then press  (Playback) button.
- 3 Connect the camera to your computer.
 - When a USB connection is established for the first time, your computer automatically runs a program to recognize the camera. Wait for a while.

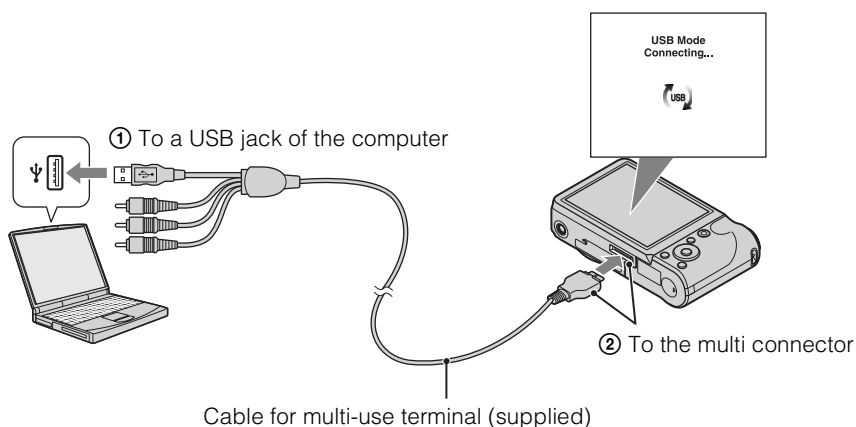

Importing images to a computer (Windows)

“PMB” allows you to easily import images.
For details on “PMB” functions, see the “PMB Help”.

Importing images to a computer without using “PMB”

When the AutoPlay Wizard appears after making a USB connection between the camera and a computer, click [Open folder to view files] → [OK] → [DCIM] or [MP_ROOT] → copy the desired images to the computer.

Notes

- For operations such as importing AVCHD movies to a computer, use “PMB”.
- When the camera is connected to a computer, if you operate AVCHD format movies or folders from the connected computer, images may be damaged or cannot be played.
Do not delete or copy AVCHD format movies of the memory card from the computer. Sony is not held liable for consequences resulting from such operations via the computer.
- Use “PMB” to import the movies with GPS location information to a computer (DSC-HX5V only).


Importing images to a computer (Macintosh)

- 1 Connect the camera to your Macintosh computer first. Double-click the newly recognized icon on the desktop → the folder where the images you want to import are stored.
- 2 Drag and drop the image files to the hard disk icon.
The image files are copied to the hard disk.
- 3 Double-click the hard disk icon → the desired image file in the folder containing the copied files.
The image is displayed.

Deleting the USB connection


Perform the procedures from step 1 to 3 below before:

- Disconnecting the cable for multi-use terminal.
- Removing a memory card.
- Inserting a memory card into the camera after copying images from the internal memory.
- Turning off the camera.

- 1 Double-click the disconnect icon on the tasktray.
- 2 Click  (USB Mass Storage Device) → [Stop].
- 3 Confirm the device on the confirmation window, then click [OK].

Note

- Drag and drop the icon of the memory card or the drive icon to the “Trash” icon beforehand when you use a Macintosh computer, and the camera is disconnected from the computer.

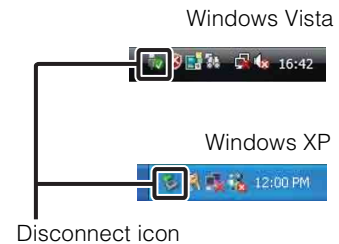

Uploading images to a media service

This camera has a built-in application “PMB Portable”.

You can use this application to do the following:

- You can easily upload images to a blog or other media service.
- You can upload images from a computer connected to the Internet even when you are away from home or the office.
- You can easily register the media services (such as blogs) you use frequently.

For details on “PMB Portable”, see the “PMB Portable” help.

Starting up “PMB Portable” (Windows)

When using “PMB Portable” for the first time, you must select the language. Follow the procedure below to make the selection. Once the language selection has been made, steps 3 to 5 are unnecessary the next time you use “PMB Portable”.

1 Make a USB connection between the camera and a computer.

When you connect the camera and your computer, AutoPlay Wizard appears.

Click [×] to close the AutoPlay Wizard for any unnecessary drives.

- If the desired AutoPlay Wizard does not appear, click [Computer] (in Windows XP, [My Computer]) → [PMBPORTABLE], then double-click “PMBP_Win.exe”.

2 Click “PMB Portable”.

(in Windows XP, click “PMB Portable” → [OK])

- If [PMB Portable] is not displayed within the AutoPlay Wizard, click [Computer] → [PMBPORTABLE], then double-click “PMBP_Win.exe”.

The Language Selection screen appears.

3 Select the desired language, then click [OK].

The Region Selection screen appears.

4 Select the appropriate [Region] and [Country/Area], and then click [OK].

The User Agreement screen appears.

5 Read the agreement carefully. If you accept the terms of the agreement, click [I Agree].

“PMB Portable” starts up.

Starting up “PMB Portable” (Macintosh)

- 1 Make a USB connection between the camera and a Macintosh computer.
When you connect the camera and your computer, [PMB Portable] appears on the desktop.
Click [×] to close any unnecessary drives.
- 2 Click [PMBPORTABLE] folder, then click [PMBP_Mac].
The Region Selection screen appears.
- 3 Select the appropriate [Region] and [Country/Area], and then click [OK].
The User Agreement screen appears.
- 4 Read the agreement carefully. If you accept the terms of the agreement, click [I Agree].
“PMB Portable” starts up.

Notes

- “PMB Portable” is not supported for AVCHD movies.
- Set [LUN Settings] in [Main Settings] to [Multi].
- Always connect to a network when using “PMB Portable”.
- When uploading images over the Internet, the cache may remain in the computer being used depending on the service provider. This is also true when this camera is used for this purpose.
- When a bug occurs in “PMB Portable” or you delete “PMB Portable” by mistake, you can repair “PMB Portable” by downloading the PMB Portable installer from the web site.

Notes on “PMB Portable”

“PMB Portable” makes it possible to download the URLs of a number of websites from the server administered by Sony (the “Sony server”).

In order to use “PMB Portable” to enjoy the benefits of the image uploading service or other services (the “services”) provided by these and other websites, you must consent to the following.




- Some websites require registration procedures and/or fees to use their services. In using such services, you must comply with the terms and conditions established by the websites concerned.
- Services may be terminated or changed in accordance with the convenience of the website operators. Sony will not be held responsible for any trouble occurring between the users and third parties or any inconvenience caused to users relating to the utilization of the services inclusive of the termination of or changes to such services.
- To view a website, you will be redirected to it by the Sony server. There may be times when you cannot access the website because of server maintenance or for other reasons.
- If the operation of the Sony server is to be terminated, you will be notified of the termination ahead of time on Sony’s website, etc.
- The URLs to which you are redirected by the Sony server and other information may be recorded for the purposes of improving Sony’s future products and services. However, no personal data will be recorded on such occasions.

Creating a movie disc

You can create a disc from AVCHD format movies recorded on the camera.

Selecting the method for creating a disc

Select the method that best suits your disc player.
See “PMB Help” for details on creating a disc using “PMB”.
To import movies (page 125).

Player	Choosing a method	Disc type
Blu-ray disc playback devices (Blu-ray disc player, PlayStation®3, etc.)	Create a Blu-ray disc of movies and photos imported to a computer using “PMB”.	
AVCHD format playback devices (Sony Blu-ray disc player, PlayStation®3, etc.)	Create an AVCHD format disc of movies and photos imported to a computer using “PMB”.	
	Creating an AVCHD disc with a DVD writer/recorder other than DVDirect Express.	
Ordinary DVD playback devices (DVD player, DVD playable computer, etc.)	Create a standard definition image quality (STD) disc of movies and photos imported to a computer using “PMB”.	

Notes

- If you use a Sony DVDirect (DVD Writer), you can transfer data by insert a memory card into the memory card slot of the DVD writer, or connecting your camera to the DVD writer with a USB cable.
- When you use Sony DVDirect (DVD writer), make sure that the version of DVD writer's firmware is the latest.
For details, refer to the following URL:
<http://sony.storagesupport.com/>

Table of contents
Operation Search
MENU/Settings Search
Index

💡 Characteristics of each type of disc



Using a Blu-ray disc enables you to record high definition image quality (HD) movies of a longer duration than DVD discs.



High definition image quality (HD) movie can be recorded on DVD media, such as DVD-R discs, and a high definition image quality (HD) disc is created.

- You can play a high definition image quality (HD) disc on AVCHD format playback devices, such as a Sony Blu-ray disc player and a PlayStation®3. You cannot play the disc on ordinary DVD players.



Standard definition image quality (STD) movie converted from high definition image quality (HD) movie can be recorded on DVD media, such as DVD-R discs, and a standard image quality (STD) disc is created.

💡 Discs you can use with “PMB”


You can use 12 cm discs of following type with “PMB”. For Blu-ray disc, see page 131.

Disc type	Features
DVD-R/DVD+R/DVD+R DL	Unrewritable
DVD-RW/DVD+RW	Rewritable

- Always maintain your PlayStation®3 to use the latest version of the PlayStation®3 system software.
- The PlayStation®3 may not be available in some countries/regions.

Creating an AVCHD format disc

You can create a high definition image quality (HD) AVCHD format disc from AVCHD format movies imported to a computer using the supplied software “PMB”.

- 1 Turn on your computer and place an empty disc on the DVD drive.
- 2 Start “PMB”.
- 3 Select the AVCHD format movies you want to write.
- 4 Click  to select [Create AVCHD Format Discs (HD)].
- 5 Follow the instructions on the screen to create a disc.

Notes

- Install “PMB” beforehand (page 123).
- Photos and MP4 movie files cannot be recorded on the AVCHD format disc.
- It may take a long time to create a disc.



Playing AVCHD format disc on a computer

You can play back AVCHD format discs using “Player for AVCHD” that is installed together with “PMB”.

To start the software, click on [Start] → [All Programs] → [PMB] → [PMB Launcher] → [View] → [Player for AVCHD].

For detailed operations, see the Help for “Player for AVCHD”.

- Movies may not be played smoothly depending on the computer environment.

Creating a Blu-ray disc

You can create a Blu-ray disc with AVCHD movies previously imported to a computer. Your computer must support the creation of Blu-ray discs.

BD-R (non-rewritable) and BD-RE (rewritable) media can be used to create Blu-ray discs. You cannot add contents to either type of disc once it has been created.


Click [BD Add-on Software] on the installation screen of “PMB”, and install this plug-in according to the on-screen instructions.

Connect your computer to the Internet when you install [BD Add-on Software].

See “PMB Help” for details.

Creating a standard definition image quality (STD) disc

You can create a standard definition image quality (STD) disc from AVCHD format movies imported to a computer using supplied software “PMB”.

- 1 Turn on your computer and place an empty disc on the DVD drive.
 - Close all software other than “PMB”.
- 2 Start “PMB”.
- 3 Select the movies you want to write.
- 4 Click  to select [Create DVD-Video Format Discs (STD)].
- 5 Follow the instructions on the screen to create the disc.

Notes

- Install “PMB” beforehand (page 123).
- MP4 movie files cannot be recorded on a disc.
- It will take a longer time to create a disc because AVCHD format movies are converted to standard definition image quality (STD) movies.
- An Internet connection environment is required when creating a DVD-Video (STD) for the first time.

Printing still images

You can print still images using the following methods.


- Printing directly using a PictBridge-compliant printer
- Printing directly using a printer which supports your memory card type
For details, see the operating instructions supplied with the printer.
- Printing using a computer
You can import images to a computer using the supplied “PMB” software and print the images. You can insert the date on the image and print it.
For details, see the “PMB Help”.
- Printing at a shop (page 134)

Notes


- When you print still images shot in [16:9] mode, both edges may be cut off.
- You cannot print panoramic images depending on the printer.

Printing images directly using a PictBridge-compliant printer

Even if you do not have a computer, you can print images shot using the camera by connecting the camera directly to a PictBridge-compliant printer.


 **PictBridge** “PictBridge” is based on the CIPA standard. (CIPA: Camera & Imaging Products Association)


- 1 Insert a sufficiently charged battery pack into the camera.
- 2 Connect the camera to the printer.

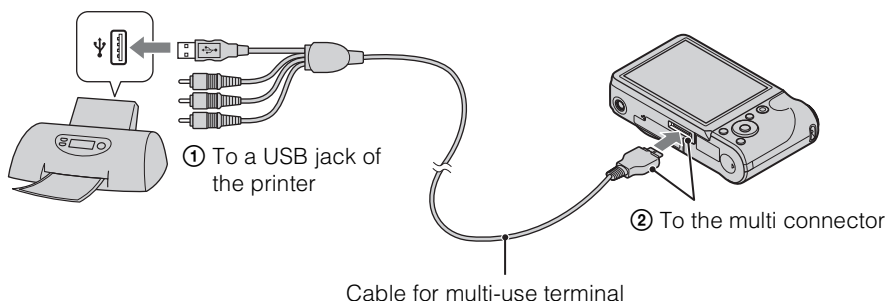

- 3 Turn on the camera and the printer.

After the connection is made, the  indicator appears on the screen.

If the  indicator flashes on the screen of the camera (error notification), check the connected printer.



4 MENU →  (Print) → desired mode → ● on the control button

This Image	Prints the currently displayed image in single-image mode.
Multiple Images	You can select and print multiple images. After step 4, perform the following. ① Select an image then press ●. Repeat the above step until there are no more images to be printed. Select an image with a ✓ mark again to release the ✓ mark. ② MENU → [OK] → ●.
All in Date Range All in This Folder	Prints all images in the selected date range and folder at once. After step 4, touch [OK] → ●.

5 Desired item → [Start] → ●

Quantity	Selects the number of copies of the specified image to be printed. <ul style="list-style-type: none">• The designated number of images may not all fit onto a single sheet depending on the quantity of images.
Layout	Selects the number of images you want to print side by side on a sheet.
Size	Selects the size of the printing sheet.
Date	Selects [Date] or [Day&Time] to insert the date and time on images. <ul style="list-style-type: none">• When you choose [Date], the date will be inserted in the order you have selected using [Date & Time Setting] on the camera. This function may not be available depending on the printer.

 Notes

- Movies cannot be printed.
- If the camera could not be connected to the printer, be sure to set [USB Connect] under  (Main Settings) to [PictBridge].
- Do not disconnect the cable for multi-use terminal while the  (PictBridge Connecting) indicator appears on the screen.

Printing at a shop

You can take a memory card containing images shot with the camera to a photo printing service shop. As long as the shop supports photo printing services conforming to DPOF, you can make a **DPOF** (Print order) mark on images in advance in the playback mode so that you do not have to reselect them when you print them out at the shop.

Notes

- You cannot print images stored in the internal memory at a print shop directly from the camera. Copy the images to a memory card (page 112), then take the memory card to the print shop.
- Consult your photo printing service shop as to what types of memory card they handle.
- A memory card adaptor (sold separately) may be necessary. Consult your photo printing service shop.
- Before you take image data to a shop, always copy (back up) your data to a disk.
- You cannot set the number of prints.
- If you want to superimpose dates on images, consult your photo printing service shop.

Table of contents
Operation Search
MENU/Settings Search
Index

Troubleshooting

If you experience trouble with the camera, try the following solutions.

❶ Check the items on pages 135 to 143.

If a code such as “C/E:□□:□□” appears on the screen, see page 144.

❷ Remove the battery pack, wait for about one minute, re-insert the battery pack, then turn on the power.

❸ Initialize the settings (page 95).

❹ Consult your Sony dealer or local authorized Sony service facility.

Be aware that by sending the camera for repair, you give consent that the contents of the internal memory, music files may be checked.

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.
<http://www.sony.net/>

Battery pack and power

Cannot insert the battery pack.

- Make sure the direction of the battery is correct, and insert it until the battery eject lever is locked.

Cannot turn on the camera.

- After inserting the battery pack into the camera, it may take a few moments for the camera to power up.
- Insert the battery pack correctly.
- The battery pack is discharged. Insert a charged battery pack.
- The terminal section of the battery is dirty. Wipe any dust with a soft cloth lightly to clean the battery.
- Use a recommended battery pack.

The power turns off suddenly.

- Depending on the camera and battery temperature, the power may turn off automatically to protect the camera. In this case, a message is displayed on the LCD screen before the power turns off.
- When [Power Save] is set to [Stamina] or [Standard], if you do not operate the camera for a certain period of time while the power is on, the camera turns off automatically to prevent wearing down the battery pack. Turn on the camera again.

The remaining charge indicator is incorrect.

- This phenomenon occurs when you use the camera in an extremely hot or cold location.
- A discrepancy arose between the remaining charge indicator and the actual remaining battery charge. Fully discharge the battery pack once, then charge it to correct the indication.
- Battery capacity decreases over time and through repeated use. If decreased usage time between charges becomes significant, it is probably time to replace it with a new one.

Cannot charge the battery pack.

- You cannot charge the battery pack using the AC Adaptor (sold separately). Use the battery charger to charge the battery.

The CHARGE lamp flashes while charging the battery.

- Remove and reinsert the battery pack, making sure it is installed correctly.
- The temperature may be inappropriate for charging. Try charging the battery pack again within the proper charging temperature range (10 °C to 30 °C (50 °F to 86 °F)).
- Refer to page 153 for details.

Shooting still images/movies

Cannot record images.

- If images are recorded on the internal memory even when a memory card is inserted into the camera, make sure that the memory card is fully inserted into the camera.
- Check the free capacity of the internal memory or memory card. If it is full, do one of the following:
 - Delete unnecessary images (page 43).
 - Change the memory card.
- You cannot record images while charging the flash.
- For recording movies, it is recommended that you use a memory card of 1 GB or larger.
- Set [Demo Mode] to [Off] (page 94).

Smile Shutter function does not work.

- No image is shot if a smiling face is not detected.
- Set [Demo Mode] to [Off] (page 94).


 
 
 
Anti-blur function does not work.

- The anti-blur function may not work properly when shooting night scenes.
- Shoot after pressing the shutter button halfway down.
- If camera shake is excessive, the anti-blur function may not be effective even when [SteadyShot] is activated.


Recording takes a long time.

- When the shutter speed becomes slower than a certain speed in low light conditions, the NR (Noise Reduction) slow shutter function is activated automatically to reduce the image noise. Under such conditions, recording takes a long time.
- The Anti Blink function is working. Reset [Anti Blink] to [Off] (page 68).

The image is out of focus.

- The subject is too close. When shooting, make sure to position the lens farther away from the subject than the shortest shooting distance (approximately 5 cm (2 inches) (W)/100 cm (3ft 3 3/8 inches) (T) from the lens).
-  (Advanced Sports Shooting),  (Twilight),  (Landscape) or  (Fireworks) mode is selected in the Scene Selection when shooting still images.

 

 
 
 
 
 
 
 
 
Zoom does not work.

- You cannot use the zoom when shooting in iSweep Panorama mode.
- You cannot use the Smart zoom depending on the image size (page 86).
- You cannot use the digital zoom when:
 - In Backlight correction HDR mode
 - When  (Advanced Sports Shooting) mode in the Scene Selection is selected
 - In Movie mode
 - The Smile Shutter is working.

Cannot select the Face Detection function.

- You can select Face Detection only when the focus mode is set to [Multi AF] and the metering mode is set to [Multi].



 

The flash does not work.

- You cannot use the flash when:
 - In Burst/Bracket mode is selected.
 - In Anti Motion Blur mode
 - In Hand-held Twilight mode
 -  (High Sensitivity),  (Advanced Sports Shooting),  (Twilight) or  (Fireworks) mode is selected in Scene Selection.
 - In Movie Mode
 - In iSweep Panorama mode
- Set the flash to  (On) (page 36) when the Scene Selection mode is set to  (Landscape),  (Gourmet),  (Pet),  (Beach) or  (Snow) mode.

Fuzzy white circular spots appear in images shot using the flash.

- Particles (dust, pollen, etc.) in the air reflected the flash light and appeared in the image. This is not a malfunction.

The close-up shoot function (Macro) does not work.

- The camera automatically adjusts the focus. Press and hold the shutter button halfway down. Focus adjustment may take some time when shooting a close subject.
-  (Advanced Sports Shooting),  (Landscape),  (Twilight) or  (Fireworks) mode is selected in the Scene Selection.

The date and time are not displayed on the LCD screen.

- While shooting, the date and time are not displayed. They are displayed only during playback.

Cannot insert dates on images.

- This camera does not have a feature for superimposing dates on images. By using “PMB”, you can print or save images with the date (page 123).

The F value and shutter speed flash when you press and hold the shutter button halfway down.

- The exposure is incorrect. Correct the exposure (page 55).

The image colors are not correct.

- Adjust the White Balance (page 58).

Noise appears in the image when you view the screen in a dark place.

- The camera is attempting to increase the visibility of the screen by temporarily brightening the image under conditions of low illumination. There is no effect on the recorded image.

The eyes of the subject come out red.

- Set [Red Eye Reduction] to [Auto] or [On] (page 88).
- Shoot the subject at a distance closer than the flash range using the flash.
- Light the room and shoot the subject.
- Retouch the image using [Retouch] → [Red Eye Correction] in viewing menu (page 77), or correct using “PMB”.

Dots appear and remain on the screen.

- This is not a malfunction. These dots are not recorded.

Cannot shoot images in succession.

- The internal memory or memory card is full. Delete unnecessary images (page 43).
- The battery level is low. Insert charged battery pack.

The same image is shot several times.

- Set [Burst Settings] to [Single] (page 52).
- Set [Bracket Settings] to [Off] (page 54).
- [Scene Recognition] is set to [Advanced] (page 63).

Viewing images

Cannot play back images.

- Make sure that the memory card is fully inserted into the camera.
- The folder/file name has been changed on your computer.
- No guarantees are made for playing back, on this camera, files containing images which were processed on a computer or images which were shot using other cameras.
- The camera is in USB mode. Delete the USB connection (page 126).
- Use “PMB” to play images stored on a PC with this camera.

The date and time are not displayed.

- The screen display is set to display images only. Press the DISP (Screen Display Settings) button to display information (page 34).

Left and right sides of the screen are shown in black.

- [Auto Orientation] is set to [On] (page 87).

Cannot display images in index mode.

- Cancel the Easy Viewing mode if activated.

Cannot hear music during slideshow.

- Transfer music files to the camera with “Music Transfer” (pages 123, 124).
- Confirm that the volume setting and slideshow setting are correct (page 70).
- Slideshow is played back with [Continuous Playback]. Select [Slideshow with music] and play back.

The image does not appear on the TV.

- The camera and television must use the same color television system (page 149).
- Check whether the connection is correct (page 117).
- If the USB connector of the cable for multi-use terminal is connected to another device, disconnect it (page 126).
- When shooting movies with the camera and a TV connected, the image being shot is not displayed on the TV.

Deleting

Cannot delete an image.

- Cancel the protection (page 79).

GPS (DSC-HX5V only)

The camera is not receiving a GPS signal.

- Set [GPS setting] to [On] (page 104).
- Your camera may not be able to receive radio signals from GPS satellites because of obstructions.
- To triangulate the location information correctly, bring your camera to an open area, and turn on the camera again.

Excessive error in location information.

- The margin of error can be up to several-hundred meters depending on surrounding buildings, weak GPS signals, etc.
- Your camera cannot receive a GPS signal. Previously-triangulated location information may be used in the present location instead.

It takes time to triangulate although [GPS assist data] is taken in.

- [Date & Time Setting] is not set, or set time is shifted greatly. Set the date and time correctly (page 115).
- The term of validity of assist data has expired. Update [GPS assist data] (page 93).
- As the positions of GPS satellites vary constantly, it may take longer to determine the location or the receiver may not be able to determine the location at all, depending on the location and time you use the camera.
- “GPS” is a system for determining geographic location by triangulating radio signals from GPS satellites. Avoid using the camera in places where radio signals are blocked or reflected, such as a shadowy place surrounded by buildings or trees, etc. Use the camera in open sky environments.

The location or direction information has not been recorded.

- The shooting direction is not recorded when shooting movies.
- The location and direction information is not recorded when the movie is recorded on the internal memory.
- Use “PMB” to import the movies with GPS location information to your computer.

Excessive error in compass information

- Perform [Adjust Compass] (page 106).
- Do not place the camera in close proximity to a magnetic source, or a metal.

Computers

“Memory Stick PRO Duo” media is not recognized by a computer with a “Memory Stick” media slot.

- Check that the computer and the “Memory Stick” media Reader/Writer support “Memory Stick PRO Duo” media. Users of computers and “Memory Stick” media Readers/Writers made by manufacturers other than Sony should contact those manufacturers.
- If “Memory Stick PRO Duo” media is not supported, connect the camera to the computer (pages 125, 126). The computer recognizes the “Memory Stick PRO Duo” media.

Your computer does not recognize the camera.

- When the battery level is low, insert the charged battery pack or use the AC adaptor (sold separately).
- Set [USB Connect] to [Auto] or [Mass Storage] (page 99).
- Use the cable for multi-use terminal (supplied).
- Disconnect the cable for multi-use terminal from both the computer and the camera, and connect it again firmly.
- Disconnect all equipment other than the camera, the keyboard and the mouse from the USB connectors of your computer.
- Connect the camera directly to your computer without passing through a USB hub or other device.

Cannot import images.

- Connect the camera and your computer correctly making a USB connection (page 125).
- When you shoot images with a memory card formatted by a computer, you may not be able to import the images to a computer. Shoot using a memory card formatted by the camera (page 108).

After making a USB connection, “PMB” does not start automatically.

- Make the USB connection after the computer is turned on.

After making a USB connection, “PMB Portable” does not start.

- Set [LUN Settings] to [Multi].
- Set [USB Connect] to [Auto] or [Mass Storage].
- Connect the computer to the network.

Cannot play back images on your computer.

- If you are using “PMB”, refer to “PMB Help” (page 123).
- Consult the computer or software manufacturer.

The image and sound are interrupted by noise when you view a movie on a computer.

- You are playing back the movie directly from the internal memory or the memory card. Import the images to your computer using “PMB” and play it back (page 123, 125).

Images once exported to a computer cannot be viewed on the camera.

- Use “PMB” to play images stored on a PC with this camera.
- Register the image to the image database file, then play back in [Date View] (page 75).
- Event View is not available on this camera.

Memory card

Cannot insert a memory card.

- Insert the memory card in the correct direction.

You have formatted a memory card by mistake.

- All the data on the memory card is deleted by formatting. You cannot restore it.

Images are recorded on the internal memory even when a memory card is inserted into the camera.

- Make sure that the memory card is fully inserted into the camera.

Internal memory

Cannot play back or record images using the internal memory.

- There is a memory card inserted in the camera. Remove it.

Cannot copy the data stored in the internal memory to a memory card.

- The memory card is full. Copy to a memory card with sufficient capacity.

Cannot copy the data on the memory card or the computer to the internal memory.

- This feature is not available.

Printing

See “PictBridge-compliant printer” together with the following items.

Cannot print an image.

- Refer to the operation manual of the printer.

Images are printed with both edges cut off.

- Depending on your printer, all the edges of the image may be cut off. Especially when you print an image shot with the image size set to [16:9], the lateral end of the image may be cut off.
- When printing images using your printer, cancel the trimming or borderless settings. Consult the printer manufacturer as to whether the printer provides these functions or not.
- When having images printed at a digital print shop, ask the shop whether they can print the images without cutting off both edges.

Cannot print images with the date.

- Using “PMB”, you can print images with date (page 123).
- The camera does not have a feature for superimposing dates on images. However, because the images shot with the camera include information on the recording date, you can print images with the date superimposed if the printer or the software can recognize Exif information. For compatibility with Exif information, consult the manufacturer of the printer or the software.
- If you use a photo printing service, ask them to superimpose the dates on images.

PictBridge-compliant printer


A connection cannot be established.

- The camera cannot be connected directly to a printer that is not compliant with the PictBridge standard. Consult the printer manufacturer as to whether the printer is compliant with PictBridge or not.
- Check that the printer is turned on and can be connected to the camera.
- Set [USB Connect] to [PictBridge] (page 99).
- Disconnect and connect the cable for multi-use terminal again. If an error message is indicated on the printer, refer to the operating instructions supplied with the printer.

Cannot print images.

- Check that the camera and the printer are properly connected using the cable for multi-use terminal.
- Turn on the printer. For details, refer to the operating instructions supplied with the printer.
- If you select [Exit] during printing, images may not be printed. Disconnect and connect the cable for multi-use terminal again. If you still cannot print your images, disconnect the cable for multi-use terminal, turn the printer off and then on, then connect the cable for multi-use terminal again.
- Movies cannot be printed.
- Images shot using other cameras, or images modified with a computer may not be printed.
- Panoramic images may not be printed depending on the printer or may be printed in cut off panoramic image.

Printing is canceled.

- Confirm you did not disconnect the cable for multi-use terminal while the  (PictBridge Connecting) mark was displayed.

Cannot insert the date or print images in the index mode.

- The printer does not provide these functions. Consult the printer manufacturer as to whether the printer provides these functions or not.
- The date may not be inserted in the index mode depending on the printer. Consult the printer manufacturer.

“---- -- --” is printed on the date-inserted part of the image.

- The image does not have the recording data so the date cannot be inserted. Set [Date] to [Off] and print the image again (page 133).

Cannot print the image at the size selected.

- When you use paper of a different size after connecting the printer to the camera, disconnect and then reconnect the cable for multi-use terminal.
- The print setting of the camera differs from that of the printer. Change the setting of either the camera (page 133) or the printer.
- Consult the printer manufacturer as to whether the printer can provide the desired size.

Cannot operate the camera after cancelling printing.

- Wait for a while as the printer is carrying out the cancellation. It may take some time depending on the printer.

Others

The lens gets fogged.

- Moisture condensation has occurred. Turn off the camera and leave it for about an hour before using it.

The camera turns off with the lens portion extended.

- The battery pack is discharged. Replace it with a charged battery pack, then turn the camera on again.
- Do not attempt to force the lens that has stopped moving.


The camera becomes warm when you use it for a long time.

- This is not a malfunction.

The Clock Set screen appears when you turn on the camera.

- Set the date and time again (page 115).
- The internal rechargeable backup battery has discharged. Insert a charged battery, and set aside for 24 hours or more with the power left off.

The date or time is incorrect.

- The Area Setting is set to a different location than your current location. Change the setting by MENU →  (Settings) → [Clock Settings] → [Area Setting].

Warning indicators and messages

Self-diagnosis display

If a code starting with a letter of the alphabet appears, the self-diagnosis function on the camera is working. The last two digits (indicated by □□) will differ depending on the state of the camera.

If you cannot solve the problem even after trying the following corrective actions a few times, the camera may need repair.

Contact your Sony dealer or local authorized Sony service facility.

C:32:□□

E:95:□□

- There is trouble with the camera's hardware. Turn the power off and on again.

C:13:□□

- The camera cannot read or write data on the memory card. Try turning off and on the camera again, or taking out and inserting the memory card several times.
- The internal memory has experienced a format error, or an unformatted memory card is inserted. Format the internal memory or the memory card (page 108).
- The inserted memory card cannot be used with the camera, or the data is damaged. Insert a new memory card.

E:61:□□

E:62:□□

E:91:□□

- A camera malfunction has occurred. Initialize the camera (page 95), then turn the power on again.

E:94:□□

- A malfunction that you cannot service has occurred. Contact your Sony dealer or local authorized Sony service facility. Inform them of the 5-digit code, which starts from "E".

Messages

If the following messages appear, follow the instructions.



- The battery level is low. Charge the battery pack immediately. Depending on the conditions of use or the type of battery pack, the indicator may flash even though there are still 5 to 10 minutes of remaining battery time left.

For use with compatible battery only

- The battery inserted is not an NP-BG1 (supplied) or NP-FG1 (sold separately) battery pack.

System error

- Turn the power off and then on again.

Camera overheating

Allow it to cool

- The camera temperature has risen. The power may turn off automatically, or you may be unable to record movies. Leave the camera in a cool location until the temperature goes down.

Internal memory error

- Turn the power off and then on again.

Reinsert the memory card

- The inserted memory card cannot be used in the camera (page 3).
- The terminal section of the memory card is dirty.
- The memory card is damaged.

Memory card type error

- The inserted memory card cannot be used in the camera (page 3).

This memory card may not record or play

- The inserted memory card cannot be used in the camera (page 3).

Error formatting internal memory

Error formatting memory card

- Format the media again (page 108).

Memory card locked

- You are using the memory card with the write-protect switch, and the switch is set to the LOCK position. Set the switch to the recording position.

Read only memory card

- The camera cannot record or delete images on this memory card.

Writing to the memory card was not completed correctly

Recover data

- Reinsert the memory card, and follow the instructions on the screen.

No images

- No images that can be played back have been recorded in the internal memory.
- No images that can be played back have been recorded in this folder of the memory card.

No still images

- The selected folder or date does not contain a file that can be played back in a slideshow.

File found which was not recognized

- You tried to delete a folder containing a file that cannot be played on this camera. Delete the file with a computer and then delete the folder.

Folder error

- A folder with the same first three digit number already exists on the memory card (for example: 123MSDCF and 123ABCDE). Select another folder, or create a new folder (pages 109, 110).

Cannot create more folders

- The folder with a name beginning with “999” exists on the memory card. You cannot create any folders if this is the case.

Empty folder contents

- You tried to delete a folder containing one or more files. Delete all of the files and then delete the folder.

Folder protected

- You tried to delete a folder that was made read-only by PC or an other device.

File error

- An error occurred while the image was playing back.
No guarantees are made for playing back, on this camera, files containing images which were processed on a computer or images which were shot using other cameras.

Read only folder

- You have selected a folder that cannot be set as a recording folder on the camera. Select another folder (page 110).

File protected

- Release the protection (page 79).

Image size over limit

- You are playing back an image with size that cannot be played back on the camera.

Unable to detect face for retouch

- You may not be able to retouch the image depending on the image.

(Vibration warning indicator)

- Camera shake may occur due to insufficient light. Use the flash, or mount the camera on a tripod to secure the camera.

MP4 12M is not supported with this memory card

MP4 6M is not supported with this memory card

- For recording movies, it is recommended that you use a memory card of 1 GB or larger.

Recording is unavailable in this movie format

- Set [Movie format] to [MP4] (page 83).

Turn the power off and on again

- The lens malfunction.

Maximum number of images already selected

- Up to 100 files can be selected when using [Multiple Images].
- You can add **DPOF** (Print order) marks to up to 999 files. Cancel the selection.



- The data transmission to the printer may not be completed yet. Do not disconnect the cable for multi-use terminal.

Processing...

- The printer is canceling the current print job. You cannot print until it is finished. This may take time, depending on the printer.

Error Playing Music

- Delete the Music file, or replace it with an uncorrupted Music file.
- Execute [Format Music], then download new Music files.

Error Formatting Music

- Execute [Format Music].

Operation cannot be executed in unsupported files

- Processing and other editing functions of the camera cannot be performed on image files that have been processed using a computer or images that were recorded with other cameras.

Preparing Image Database File

- The camera restores the date information etc. in cases where images have been deleted on a PC, etc.
- The camera creates the necessary database files after the memory card is formatted.



- The number of images exceeds that for which date management in a database file by the camera is possible. To register new image files to the database file, delete unnecessary images from [Date View].

No internal memory space remaining

Delete images?

- The internal memory is full. To record to the internal memory, select [Yes] and delete unwanted images.

Inconsistencies found in Image Database File. Recover data

- You cannot record or play back AVCHD format movies because the Image Database File is damaged. Follow the on-screen instructions to recover data.



- Unable to register to the database file or play back in [Date View]. Import all the images to a computer using "PMB" and recover the memory card or internal memory.

Image Database File error

Cannot recover

- Import all of the images to the computer with “PMB”, and format the memory card or the internal memory (page 108).
When you cannot import all of the images to the computer with “PMB”, import all of the images to the computer without using “PMB” (page 125).
To view the images again with the camera, export the imported images to the camera with “PMB”.

Recording function unavailable due to high internal temperature

- The camera temperature has risen. You cannot record images until the temperature has dropped.

Recording has stopped due to increased camera temperature

- Recording has stopped due to a rise in temperature while recording a movie. Please wait until the temperature goes down.



- When you record movies for a long time, the camera temperature rises. In this case, stop recording movies.

Connection failed

- Make sure the TransferJet sender/receiver face each other and correct connection is made.

Some files were not sent

Some files were not received

- Connection was cut off during file transfer. Connection is interrupted when the memory capacity of the device becomes full. Check the free capacity of the device's memory, then send the data by TransferJet again.
- You may not be able to receive the image depending on the image.

Using the camera abroad

You can use the battery charger (supplied), and the AC-LS5 AC Adaptor (sold separately) in any country or region where the power supply is within 100 V to 240 V AC, 50/60 Hz.

Note

- Do not use an electronic transformer (travel converter), as this may cause a malfunction.

On TV color systems

To view movies shot using this camera on a television, the camera and television must use the same color television system.

NTSC system (1080 60i)

Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

PAL system (1080 50i)

Australia, Austria, Belgium, China, Croatia, Czech Republic, Denmark, Finland, Germany, Holland, Hong Kong, Hungary, Indonesia, Italy, Kuwait, Malaysia, New Zealand, Norway, Poland, Portugal, Rumania, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, Turkey, United Kingdom, Viet Nam, etc.

PAL-M system (1080 50i)

Brazil

PAL-N system (1080 50i)

Argentina, Paraguay, Uruguay

SECAM system (1080 50i)

Bulgaria, France, Greece, Guiana, Iran, Iraq, Monaco, Russia, Ukraine, etc.

“Memory Stick Duo” media

A “Memory Stick Duo” media is a compact, portable IC recording medium. The types of “Memory Stick Duo” media that can be used with the camera are listed in the table below. However, proper operation cannot be guaranteed for all “Memory Stick Duo” media functions.

“Memory Stick” media type	Recording/Playback
Memory Stick Duo (without MagicGate)	○* ¹
Memory Stick Duo (with MagicGate)	○* ²
MagicGate Memory Stick Duo	○* ¹ * ²
Memory Stick PRO Duo	○* ² * ³
Memory Stick PRO-HG Duo	○* ² * ³ * ⁴

- *¹ High-speed data transfer using a parallel interface is not supported.
- *² “Memory Stick Duo” media, “MagicGate Memory Stick Duo” media and “Memory Stick PRO Duo” media are equipped with MagicGate functions. MagicGate is copyright protection technology that uses encryption technology. Data recording/playback that requires MagicGate functions cannot be performed with the camera.
- *³ [AVC HD 17M FH], [AVC HD 9M HQ], [MP4 12M] or [MP4 6M] movies cannot be recorded to internal memory or a “Memory Stick” media other than a “Memory Stick PRO Duo” media, “Memory Stick PRO-HG Duo” media.
- *⁴ This camera does not support 8-bit parallel data transfer. It performs the same 4-bit parallel data transfer as the “Memory Stick PRO Duo” media.

Notes

- This product is compatible with “Memory Stick Micro” media (“M2”). “M2” is an abbreviation for “Memory Stick Micro” media.
- A “Memory Stick Duo” media formatted with a computer is not guaranteed to operate with the camera.
- Data read/write speeds differ depending on the combination of the “Memory Stick Duo” media and the equipment used.
- Do not remove the “Memory Stick Duo” media while reading or writing data.
- Data may be corrupted in the following cases:
 - When the “Memory Stick Duo” media is removed or the camera is turned off during a read or write operation
 - When the “Memory Stick Duo” media is used in locations subject to static electricity or electrical noise
- We recommend backing up important data.
- Do not attach a label on the “Memory Stick Duo” media itself nor on a “Memory Stick Duo” media Adaptor.
- Do not touch the terminal section of the “Memory Stick Duo” media with your hand or a metal object.
- Do not strike, bend or drop the “Memory Stick Duo” media.
- Do not disassemble or modify the “Memory Stick Duo” media.
- Do not expose the “Memory Stick Duo” media to water.
- Do not leave the “Memory Stick Duo” media within the reach of small children. They might accidentally swallow it.
- Do not insert anything other than a “Memory Stick Duo” media into the “Memory Stick Duo” media slot. Doing so will cause a malfunction.
- Do not use or store the “Memory Stick Duo” media under the following conditions:
 - High temperature locations such as the hot interior of a car parked in direct sunlight
 - Locations exposed to direct sunlight
 - Humid locations or locations with corrosive substances present

Notes on using the “Memory Stick Duo” media Adaptor (sold separately)

- To use a “Memory Stick Duo” media with a “Memory Stick” media compliant device, be sure to insert the “Memory Stick Duo” media into a “Memory Stick Duo” media Adaptor. If you insert a “Memory Stick Duo” media into a “Memory Stick” media compliant device without a “Memory Stick Duo” media Adaptor, you might not be able to remove it from the device.
- When inserting a “Memory Stick Duo” media into a “Memory Stick Duo” media Adaptor, make sure the “Memory Stick Duo” media is inserted facing in the correct direction, then insert it all the way in. Incorrect insertion may result in a malfunction.
- When using a “Memory Stick Duo” media inserted into a “Memory Stick Duo” media Adaptor with a “Memory Stick” media compliant device, make sure that the “Memory Stick Duo” media Adaptor is inserted facing the correct direction. Note that improper use may damage the equipment.
- Do not insert a “Memory Stick Duo” media Adaptor into a “Memory Stick” media compliant device without a “Memory Stick Duo” media attached. Doing so may result in malfunction of the unit.

Notes on using “Memory Stick Micro” media (sold separately)

- To use a “Memory Stick Micro” media with the camera, be sure to insert the “Memory Stick Micro” media into an “M2” Adaptor as large as of Duo size. If you insert a “Memory Stick Micro” media into the camera without an “M2” Adaptor as large as of Duo size, you might not be able to remove it from the camera.
- Do not leave the “Memory Stick Micro” media within the reach of small children. They might accidentally swallow it.

Battery pack

On charging the battery pack

- We recommend charging the battery pack in an ambient temperature of between 10 °C to 30 °C (50 °F to 86 °F). The battery pack may not be effectively charged in temperatures outside this range.

Effective use of the battery pack

- Battery performance decreases in low temperature surroundings. So in cold places, the operational time of the battery pack is shorter. We recommend the following to ensure longer battery pack use:
 - Put the battery pack in a pocket close to your body to warm it up, and insert it in the camera immediately before you start shooting.
- The battery pack will run out quickly if you use the flash or zoom frequently.
- We recommend having spare battery packs handy for two or three times the expected shooting time, and making trial shots before taking the actual shots.
- Do not expose the battery pack to water. The battery pack is not water-resistant.
- Do not leave the battery pack in extremely hot places, such as in a car or under direct sunlight.
- You may not be able to turn on the camera or the battery pack may not be effectively charged if the terminal section of the battery is dirty. In this case, wipe any dust with a soft cloth lightly to clean the battery.


How to store the battery pack

- Fully discharge the battery pack before storing and store it in a cool, dry place. To maintain the battery pack's function, fully charge the battery pack and then fully discharge it on the camera at least once a year while storing.
- To use the battery pack up, leave the camera in slideshow playback mode until the power goes off.
- To prevent staining the terminal, short-circuiting, etc., be sure to use a supplied battery case when carrying or storing.

On battery life

- The battery life is limited. Battery capacity decreases over time and through repeated use. If decreased usage time between charges becomes significant, it is probably time to replace it with a new one.
- The battery life varies according to how it is stored and the operating conditions and environment in which each battery pack is used.

Compatible battery pack

- The NP-BG1 (supplied) can be used only in G type compatible Cyber-shot models.
- If you use the NP-FG1 battery pack (sold separately), the minutes also appear after the battery remaining indicator ( 60 Min).

Battery charger

- NP-BG type, NP-FG type battery packs (and no others) can be charged in the battery charger (supplied). Batteries other than the specified kind may leak, overheat, or explode if you attempt to charge them, posing a risk of injury from electrocution and burns.
- Remove the charged battery pack from the battery charger. If you leave the charged battery pack in the charger, battery life may be shortened.
- The CHARGE lamp of the supplied battery charger flashes in either way:
 - Fast flashing: Turns the light on and off repeatedly at the interval of 0.15 seconds.
 - Slow flashing: Turns the light on and off repeatedly at the interval of 1.5 seconds.
- When the CHARGE lamp flashes fast, remove the battery pack being charged, and then insert the same battery pack into the battery charger securely again. When the CHARGE lamp flashes fast again, this may indicate a battery error or that a battery pack other than the specified type has been inserted. Check that the battery pack is the specified type. If the battery pack is the specified type, remove the battery pack, replace it with a new one or another one and check if the battery charger operates correctly. If the battery charger operates correctly, a battery error may have occurred.
- When the CHARGE lamp flashes slowly, it indicates that the battery charger stops charging temporarily on standby. The battery charger stops charging and enters the standby status automatically when the temperature is outside of the recommended operating temperature. When the temperature gets back within the appropriate range, the battery charger resumes charging and the CHARGE lamp lights up again. We recommend charging the battery pack in an ambient temperature of between 10 °C to 30 °C (50 °F to 86 °F).

AVCHD format

The AVCHD format is a high definition digital video camera format used to record a high definition (HD) signal of either the 1080i specification*¹ or the 720p specification*² using efficient data compression coding technology. The MPEG-4 AVC/H.264 format is adopted to compress video data, and the Dolby Digital or Linear PCM system is used to compress audio data.

The MPEG-4 AVC/H.264 format is capable of compressing images at higher efficiency than that of the conventional image compressing format. The MPEG-4 AVC/H.264 format enables a high definition video signal shot on a digital video camera recorder to be recorded on 8 cm DVD discs, hard disk drive, flash memory, memory card, etc.

Recording and playback on your camera

Based on the AVCHD format, your camera records with the high definition image quality (HD) mentioned below.

Video signal*³: **1080 60i-compatible device**

MPEG-4 AVC/H.264 1920 × 1080/60i, 1440 × 1080/60i

1080 50i-compatible device

MPEG-4 AVC/H.264 1920 × 1080/50i, 1440 × 1080/50i

Audio signal: Dolby Digital 2ch

Recording media: Memory card

*¹ 1080i specification

A high definition specification which utilizes 1,080 effective scanning lines and the interlace system.

*² 720p specification

A high definition specification which utilizes 720 effective scanning lines and the progressive system.

*³ Data recorded in AVCHD format other than the above mentioned cannot be played on your camera.

GPS (DSC-HX5V only)

This system allows you to pinpoint your exact location on the earth. The GPS satellites are located in 6 orbits, 20,000 km above the earth. The GPS system consists of 24 or more GPS satellites. A GPS receiver receives radio signals from the satellites, and calculates the current location of the receiver based on the orbital information (almanac data) and travel time of the signals, etc.

Determining a location is called “triangulating”. A GPS receiver can determine the location’s latitude and longitude by receiving signals from 3 or more satellites.

- As the positions of GPS satellites vary constantly, it may take longer to determine the location or the receiver may not be able to determine the location at all, depending on the location and time you use the camera.
- “GPS” is a system for determining geographic location by triangulating radio signals from GPS satellites. Avoid using the camera in places where radio signals are blocked or reflected, such as a shadowy place surrounded by buildings or trees, etc. Use the camera in open sky environments.
- You may not be able to record location information at locations or in situations where radio signals from the GPS satellites do not reach the camera as follows.
 - In tunnels, indoors or under the shade of buildings.
 - Between tall buildings or at narrow streets surrounded by buildings.
 - In underground locations, locations surrounded by dense trees, under an elevated bridge, or in locations where magnetic fields are generated, such as near high voltage cables.
 - Near devices that generate radio signals of the same frequency band as the camera: near 1.5 GHz band mobile telephones, etc.

On triangulating errors

- If you move to another location right after turning on the camera, it may take a longer time for the camera to start triangulating, compared to when you stay in the same place.
- If triangulating fails, previously-triangulated location information may be written onto the image in the camera.
- Error caused by the position of GPS satellites
The camera automatically triangulates your current location when the camera receives radio signals from 3 or more GPS satellites. The triangulating error allowed by the GPS satellites is about 30 m (98 feet). Depending on the environment of the location, the triangulating error can be greater. In this case, your actual location may not match the location on the map based on the GPS information. Meanwhile, the GPS satellites are controlled by the United States Department of Defense, and the degree of accuracy may be changed intentionally.
- Error during the triangulating process
The camera acquires location information every about 15 seconds during triangulating. There is a slight time difference between when the location information is acquired and when the location information is recorded on an image, therefore, the actual recording location may not match exactly the location on the map based on the GPS information.

On the restriction of use of GPS on an airplane

- During take off and landing of an airplane, turn off the camera, as you will be instructed to do by the on-board announcement.

On the other restriction

- Use GPS in accordance with the regulations of the place or situation.

On the geographic coordinate system

- The “WGS-84” geographic coordinate system is used.

TransferJet standard

TransferJet is complying with the standard as follows:

TransferJet standard: PCL Spec. Rev1.0 compliant

Protocol Class Name (Communication type): SCSI Block Device Target
OBEX Push Server
OBEX Push Client

- To communicate with TransferJet-compatible communicating devices (sold separately), the “SCSI” communication protocol is applied.
For communicating with cameras, a communication protocol, “OBEX” is applied.

Table of contents
Operation Search
MENU/Settings Search
Index

Index

A

Adjust Compass	106
Advanced Sports Shooting	26
AF Illuminator	84
AF range finder frame	60
Anti Motion Blur	23
Area Setting	114
Auto Clock ADJ	116
Auto Orientation	87
AVCHD	154

B

Backlight Correction HDR	25
Battery charger	153
Battery pack	152
Beach	26
Beep	90
Blink Alert	89
Bracket	39
Bracket Settings	54
“BRAVIA” Sync	120
Burst Settings	52
Burst Shooting Interval	53
Burst/Bracket button	39

C

Calendar	75
Center AF	60
Center-weighted metering	62
Change REC.Folder	110
Clock Settings	115
COMPONENT	98
Computer	122
Importing images	125, 126
Connecting	
Computer	125
Printer	133
TV	117
Continuous Playback	70
Control button	15
Copy	112
Create REC.Folder	109
CTRL FOR HDMI	97

D

Date & Time Setting	115
Delete	43, 78
Delete REC.Folder	111
Demo Mode	94
Digital Zoom	86
DISP	34
Display Burst Group	76
Download Music	101
DPOF	80

E

Easy Shooting	21
Easy Viewing	22
EV	55
Exposure	55

F

Face Detection	66
File Number	113
Fireworks	27
Flash	36
Focus	60
Folder	
Changing	110
Creating	109
Deleting	111
Selecting	82
Format	108
Format Music	102
Function Guide	92

G

Gourmet	26
GPS assist data	93
GPS setting	51, 104
Grid Line	85

H

Hand-held Twilight	24
HD(1080i)	98
HDMI Resolution	96
High Sensitivity	26

I

Identifying parts	15
Image Index	42
Image Size/Quality	48
Initialize	95
Install	123
Intelligent Auto Adjustment	20
Intelligent Sweep Panorama	29
Internal memory	19
ISO	56

L

Landscape	26
Language Setting	91
LUN Settings	100

M

Macintosh computer	122
Manual Exposure Shooting	31
Mass Storage	99
Memory card	3
“Memory Stick Duo” media	150
MENU	11
Metering Mode	62
Mode dial	18
Movie format	83
Movie Mode	28
MTP	99
Multi AF	60
Multi connector	117, 125, 133
Multi-pattern metering	62
Music Transfer	123, 124

N

NTSC	149
------------	-----

O

Optical zoom	33, 86
OS	122

P

PAL	149
PC	122
Pet	26
PictBridge	99, 133
Pixel	50

Playback	40
Playback zoom	41
PMB	123
PMB Portable	127
Power Save	103
Precision digital zoom	86
Print	80, 133
Print order mark	80, 134
Program Auto	32
Protect	79
PTP	99

R

Red Eye Correction	77
Red Eye Reduction	88
Retouch	77
Rotate	81

S

Scene Recognition	63
Scene Selection	26
Screen	34
SD	98
Select Folder	82
Selected-face Memory	67
Self-diagnosis display	144
Self-Portrait	38
Self-Timer	38
Send by TransferJet	73
Settings	13
Shooting	
Movie	28
Still Image	20
Shooting Direction	47
Slideshow	70
Slideshow with music	71
Slow Synchro	36
Smart zoom	86
Smile Detection Sensitivity	65
Smile Shutter	37
Snow	26
Soft Snap	26
Software	123
Spot AF	60
Spot metering	62
SteadyShot	69

T

TransferJet	107
Trimming (Resize)	77
Troubleshooting	135
TV	117, 118
Twilight	26
Twilight Portrait	26

U

Unsharp masking	77
USB Connect	99
Using the camera abroad	149

V

VGA	48
View Mode	75

W

Warning indicators and messages	144
White Balance	58
Windows computer	122

Z

Zoom	33
------------	----

Notes on the License

“C Library”, “Expat”, “zlib”, “dtoa”, “pcre” and “libjpeg” software are provided in the camera. We provide this software based on license agreements with their owners of copyright. Based on requests by the owners of copyright of these software applications, we have an obligation to inform you of the following. Please read the following sections.

Read “license1.pdf” in the “License” folder on the CD-ROM. You will find licenses (in English) of “C Library”, “Expat”, “zlib”, “dtoa”, “pcre” and “libjpeg” software.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO

(i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD (“AVC VIDEO”) AND/OR

(ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND

NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO.

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE.

ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C.

SEE

<[HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)>

On GNU GPL/LGPL applied software

The software that is eligible for the following GNU General Public License (hereinafter referred to as “GPL”) or GNU Lesser General Public License (hereinafter referred to as “LGPL”) are included in the camera.

This informs you that you have a right to have access to, modify, and redistribute source code for these software programs under the conditions of the supplied GPL/LGPL.

Source code is provided on the web. Use the following URL to download it.

<http://www.sony.net/Products/Linux/>

We would prefer you do not contact us about the contents of source code.

Read “license2.pdf” in the “License” folder on the CD-ROM. You will find licenses (in English) of “GPL”, and “LGPL” software.

To view the PDF, Adobe Reader is needed. If it is not installed on your computer, you can download it from the Adobe Systems web page:

<http://www.adobe.com/>

Regarding the license for “Music Transfer” included on the CD-ROM (supplied)

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

Cyber-shot

DSC-HX5/HX5V/HX5C

SONY®

2 MB (Picture Motion Browser)
Ver. 5.0 (for / pour Windows)

Cyber-shot Handbook
2010 pratique de Cyber-shot
サイバーショットハンドブック

Product Registration
enregistrement
製品カスタマー登録

for / pour Windows 7, Vista, XP, Mac OS X 10.5.8, 10.6.8, 10.7.4** 3P2, Windows 7

*64-bit edition not supported.

*Les éditions 64 bits (64-bit edition) ne sont pas prises en charge.

*64bit版は除きます。 **Starter(Edition) is not supported.

**Starter(Edition) ne sont pas prises en charge.



4 1 7 2 6 6 6 0 1 0

COMPACT
disc

ソフトウェア対応言語

Supported languages for software / Langues prises en charge par le logiciel

日本語 / English / Deutsch / Français / Italiano / Português /

Español / Svenska / Русский / Nederlands /

繁體中文 / 簡體中文 / 한국어

©2010 Sony Corporation All rights reserved. Sony Corporation Tous droits réservés. 4-172-666-01 Made in China / Fabriqué en Chine

Share your images with just a touch.

タッチでかんたん画像転送！

 **TransferJet**

What is TransferJet™ ?

Sony's new Close Proximity
Wireless Transfer Technology

- TransferJet™ enabled devices allow quick sharing
- No complicated settings
- High-speed data transfer

TransferJet™ とは？

ソニーが開発した
新たな近接無線転送技術

- TransferJet™対応機器同士を近づけるだけ！
- 面倒な設定なく使用できる！
- 高速データ転送！



Align the two TransferJet™ logos  to begin the data transfer.

ターゲットポイントロゴ  同士を近づけるだけで、かんたんにデータ転送できる！



Select images
you wish to share
送りたい画像を選んで

Align TransferJet™
logos
ロゴ同士を接触させるだけで

And the images are
transferred
かんたんデータ転送

TransferJet

Enjoying TransferJet™

When equipped with Memory Stick™ media with TransferJet™, your Cyber-shot® DSC-HX5V, can easily share images with other TransferJet™ enabled devices.

TransferJet™がある生活

TransferJet™搭載メモリスティック™があれば、Cyber-shot® DSC-HX5VがTransferJet™通信可能に！楽しさと便利さがより広がります。

All screen images simulated.
イラストのハメコミ画像はイメージです。



Share

Easily share photos with your friends anywhere, just by bringing your TransferJet™ enabled cameras together.

Easy to transfer

外出先でたくさんの記念撮影。写真を欲しがらる友達と、その場でTransferJet™対応カメラ同士を近づけるだけ。「かんたんデータ転送」



View

When you get home and want to enjoy your photos in your living room, just place the TransferJet™ enabled camera on the TransferJet™ Station (TJS-1) connected to your TV via USB.

Easy image viewing

帰宅したらリビングで写真の鑑賞会。テレビにUSB接続したTransferJet™ステーションにTransferJet™対応カメラを載せるだけ。「かんたんデータ閲覧」



Store

To save your images on your PC, just bring your camera close to your TransferJet™ equipped PC's* target point.

Easy image storage

部屋で写真を保存。PC*に内蔵のターゲットポイントにカメラを近づけるだけ。「かんたんデータ保存」

How to use TransferJet™ enabled devices.

Transferring images to other TransferJet™ enabled devices.

TransferJet™ 搭載機器と通信が可能。



TransferJet™ 対応製品の使い方

Simply by using TransferJet™ Station (TJS-1), images can be displayed on other USB equipped devices.

TransferJet™ ステーション TJS-1 を使用すれば、USB端子付静止画再生対応機器と通信が可能。



* TransferJet™ enabled VAIO PC models not available in all markets. Use TransferJet™ Station for PCs that are not equipped with TransferJet™ capabilities.

* TransferJet™搭載VAIOは、一部地域では取扱いがございません。非搭載のPCでご利用の場合はTransferJet™ステーションが必要です。



- * TransferJet™ equipped Memory Stick™ must be used with TransferJet™ enabled Cyber-shot® camera in order to use TransferJet™ function.
 - * Only still image files can be transferred between TransferJet™ enabled Cyber-shot® cameras.(as of February 2010)
 - * The maximum number of files that can be transferred between TransferJet™ enabled Cyber-shot® cameras at a time is 10.
 - * Transferring data from PC or other device to TransferJet™ enabled Cyber-shot® camera is not possible.
 - * TransferJet™ enabled VAIO PC models not available in all markets. Use TransferJet™ Station for PCs that are not equipped with TransferJet™ capabilities.
 - * TransferJet™ equipped device may only be used in the country of purchase. The use of TransferJet™ may be a violation of law in some countries that have restrictions on wireless devices.
 - * TransferJet™ transmission is not guaranteed. Sony is not responsible for data loss/corruption resulting from problems with transmission.
 - * Product availability varies by region.
 - * Features and specifications in this leaflet are subject to change without notice.
 - * "Sony", "Cyber-shot", "TransferJet", "MemoryStick", "Vaio" are registered trade marks of Sony Corporation, Japan. All trade marks, logos, product or model names or derivations that describe Sony are trade marks and/or the property of Sony.
 - * Images of photos on Cyber-shot® camera display are simulated.
-
- * TransferJet™対応Cyber-shot®でTransferJet™機能を使用するには、TransferJet™搭載メモリースティック™を使用することが必要です。
 - * TransferJet™対応Cyber-shot®同士での通信の場合は、静止画ファイルのみ転送可能です(2010年2月時点)。
 - * TransferJet™対応Cyber-shot®同士での通信の場合、一度に転送できる画像は最大10枚までです。
 - * 対応Cyber-shot®へのTransferJet™機能を使用したデータ転送はすることができません。
 - * TransferJet™搭載VAIOは、一部地域では取扱いがございません。非搭載のPCでご使用の場合はTransferJet™ステーション "TJS-1" が必要です。
 - * お買い上げの国や地域以外では、TransferJet™機能を使用しないで下さい。国や地域によっては電波制限があるため、TransferJet™を使用した場合罰せられることがあります。
 - * 当社は通信不良によるデータの損失および障害が発生した場合も含め、いかなる場合も一切お客様のデータの責任を負いかねます旨ご了承ください。
 - * 商品の取り扱い状況は地域によって異なります。
 - * 商品の仕様および外観は、改良のため予告なく変更することがあります。
 - * 「Cyber-shot」「Cyber-shot」ロゴは、ソニー株式会社の商標です。TransferJet および TransferJet ロゴは、ソニー株式会社の商標です。その他、記載されているロゴ、製品名は、登録商標あるいは商標です。
 - * 効果写真ほか一部画像はスチル写真によるイメージです。



Receive **15% off** your next purchase of select accessories.

Thank you for purchasing a Digital Imaging Product from Sony. Register your Sony® Digital Imaging Product within 30 days of purchase. Receive an electronic coupon good for a 15% discount on the purchase of select Sony® accessories at the online Sony Style® store*. Our automatic registration process below makes it easy to register your Sony Digital Imaging Product.

METHOD 1: Automatic USB Registration

For Windows® PC:

- 1) Turn on your PC.
- 2) Place the CD-ROM supplied with your product into your PC's CD drive.
- 3) When the installation menu appears, click 'Product Registration'.
- 4) Confirm the region and country/area information. Click 'Continue'.
- 5) Follow the instructions to connect your product to your PC and register.

For Mac®:

- 1) Turn on your Mac.
- 2) Place the CD-ROM supplied with your product into your Mac's CD drive.
- 3) Double-click on 'SONYPICTUTIL'.
- 4) Select the Mac folder and double-click 'Registration'.
- 5) Confirm the region and country/area information. Click 'Continue'.
- 6) Follow the instructions to connect your product to your Mac and register.

Or METHOD 2: Register online at <https://productregistration.sony.com>

Just visit this registration site and fill out the form to get your discount e-coupon.

*Offer valid until December 31, 2011.

For the full terms and conditions, visit <https://productregistration.sony.com>. Features, specifications and price are subject to change without notice. Offer subject to availability. Customer Support: If you have any questions or comments related to this product, please visit our Customer Support website at sony.com/support (if you do not have Internet access, please call 1-800-222-7669 or 1-800-222-SONY).

© 2010 Sony Electronics Inc.
All rights reserved.

Sony and the Sony logo, "make.believe" and Sony Style are trademarks of Sony. Windows is a trademark of Microsoft Corporation, Inc. Mac is a trademark of Apple Computers, Inc.


Printed in China




4-176-975-11

English

Comfortable use for GPS

 To receive a GPS signal

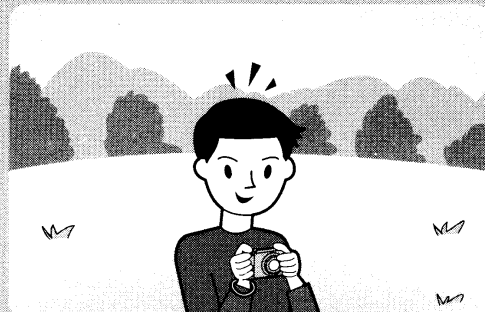


- Proper triangulation is not possible indoors or near tall buildings.
Use your camera in an open area outside, and turn on your camera again.
- If no triangulating icon appears, even if you wait for several minutes, you may be in an areas where GPS signal reception is difficult or impossible.
Use your camera in an open area outside, or record images in the situation as is in which case, location information is not recorded.


The time for the GPS acquiring location information can be shortened by taking in GPS assist data.


If your camera is connected via USB to a computer with the supplied "PMB" software installed, GPS assist data will be updated automatically.

Your computer must be connected to the Internet.

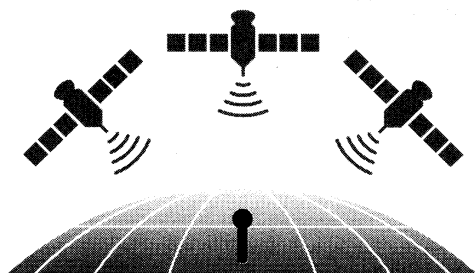

Notes

 - If [Date & Time Setting] is not set, or set time is shifted greatly, the time for the GPS acquiring location information cannot be shortened.
Set the date and time correctly by MENU →  (Settings) → [Date & Time Setting].
- If the term of validity of assist data has run out, the time until you can record location information cannot be shortened. Regular updating is recommended. Assist data is valid for about 30 days.
- Due to various reasons, services for GPS assist data may be terminated.



SONY
make.believe



15% Off Eligible Accessories

See inside and go to

<https://productregistration.sony.com/>

for more details on the 15% savings.

DSC-H55/HX5V



Register your new Cyber-shot® camera online today and save 15% on eligible accessories

Thank you for purchasing a Digital Imaging Product from Sony. Register your Sony® Digital Imaging Product within **30 days of purchase**. Receive an electronic coupon good for a 15% discount on the purchase of select Sony® accessories at the online Sony Style® store*. Our automatic registration process below makes it easy to register your Sony Digital Imaging Product.

METHOD 1: Automatic USB Registration

For Windows® PC:

- 1) Turn on your PC.
- 2) Place the CD-ROM supplied with your product into your PC's CD drive.
- 3) When the installation menu appears, click 'Product Registration'.
- 4) Confirm the region and country/area information. Click 'Continue'.
- 5) Follow the instructions to connect your product to your PC and register.

For Mac®:

- 1) Turn on your Mac.
- 2) Place the CD-ROM supplied with your product into your Mac's CD drive.
- 3) Double-click on 'SONYPICTUTIL'.
- 4) Select the Mac folder and double-click 'Registration'.
- 5) Confirm the region and country/area information. Click 'Continue'.
- 6) Follow the instructions to connect your product to your Mac and register.

Or METHOD 2: Register online at <https://productregistration.sony.com>

Just visit this registration site and fill out the form to get your discount e-coupon.

ORDER BY TELEPHONE AND STILL RECEIVE A 15% DISCOUNT ON ELIGIBLE ACCESSORIES

If you're unable to access the Sony Style web site, you can call our sales representatives anytime at 1-877-865-7669. You can place your order 24 hours a day, 7 days a week by phone or on the web using most major credit cards.

Save 15% off eligible accessories with this special e-coupon offer!

EXAMPLE of SAVINGS:

With 15% discount, the more you buy, the more you save!

LCS-HF + MS-MT8G + GPS-CS3KA

15%
15% Discount

OVER \$35 IN SAVINGS!

Contents:

Power	04 - 05
Kit/Cable/GPS Unit	06 - 07
Cases	08 - 09
Tripods/Memory Stick® Media	10 - 11

* See USB registration flyer in this box for details.

** Sales tax and shipping apply. For the full terms and conditions, visit <https://productregistration.sony.com/>.

To order by phone with 15% off e-coupon: 1-877-865-7669



RECOMMENDED

Rechargeable Battery Pack

NP-FG1 \$49.99

- Sony® InfoLITHIUM® G Type rechargeable battery
- Typ. 3.6V/3.4 Wh (960 mAh)
- InfoLITHIUM batteries reliably show you exactly how many minutes of power you have left
- Backwards compatible with NP-BG1 compatible cameras



RECOMMENDED

Compact Battery Charger

BC-TRN \$59.99

- Approx. twice as fast as supplied charger
- Battery charger for N type battery
- Also compatible with G, D, T, and R type batteries
- Great for travel with retracting AC plug
- Universal voltage: AC 100-240 (50/60 Hz)



To order by phone with 15% off e-coupon: 1-877-865-7669



Spare AC Power Adaptor

AC-LS5* \$39.99

- Supplies power when viewing images on your compatible TV or transferring images to your PC
- AC 100-240V (50/60 Hz)
- No charging function

*Requires VMC-MD2 cable (sold separately).



Multi-use Terminal Cable

VMC-MD2** \$39.99

- Connects your Cyber-shot® camera to compatible electronics
- Includes video, audio and USB out, plus power-supply connector
- Approx. 4.9ft (1.5m) length

**Requires AC-LS5 (sold separately).



HD Output Adaptor Cable

VMC-MHC3 \$59.99

- Connects your Cyber-shot® camera to compatible HD televisions
- View your photos in high definition
- Gold-plated terminals
- Approx. 4.9ft (1.5m) length

Register online now at <https://productregistration.sony.com/> to save 15% on these eligible items at SonyStyle.com



Kit/GPS Unit



Shooting Kit

ACC-SHA \$29.99

- Comes with compact travel tripod, durable camera case and cleaning cloth
- Case includes storage space for a Memory Stick® media and extra battery
- Tripod lets you position your Cyber-shot® camera at virtually any angle

To order by phone with 15% off e-coupon: 1-877-865-7669



RECOMMENDED

GPS Unit

GPS-CS3KA \$149.99

- Automatically record the location of every shot you take
- Display your pictures as pop-ups on Google Maps™ mapping service*
- Built-in Memory Stick Duo™ and SD card slot offers easy data-matching process (Photo data and GPS log data)
- High sensitivity (-159dBm or less)
- Runs on one AA battery (sold separately) for approx. 15hrs
- LCD display shows position info, battery info, date & time, and more

*By using Picture Motion Browser software, a PC and a broadband Internet connection, your photos and videos can be shown on an online map service. The online map service is currently provided courtesy of Google, and is subject to change or termination without notice. Map detail is limited in some areas.



Maps and satellite images powered by Google Maps



Register online now at <https://productregistration.sony.com/> to save 15% on these eligible items at SonyStyle.com

To order by phone with 15% off e-coupon: 1-877-865-7669



RECOMMENDED

Soft Carrying Case

LCS-CSU/B, /L, /R, /S \$19.99

- Three compartments for extra storage
- Four carrying options, belt loop, hip bag, shoulder strap, and wrap on a strap
- Pockets for Memory Stick® media and extra battery (sold separately)
- Available in four colors



LCS-CSW/B (black) LCS-CSW/R (red) LCS-CSW/L (blue) LCS-CSW/S (silver)

Soft Carrying Case

LCS-CSW/B, /R, /L, /S \$14.99

- Sleek style
- Compact with inner pockets for memory cards, cash, ID, etc.
- Detachable belt hook
- Available in four colors

To order by phone with 15% off e-coupon: 1-877-865-7669



Soft Carrying Case

LCS-CSJ \$19.99

- Casual and sporty carrying case
- Inner pocket can hold Memory Stick® media and extra battery (sold separately)
- Shoulder strap and belt loop included



RECOMMENDED

Soft Carrying Case

LCS-HF \$39.99

- Stylish carrying case
- Convenient pocket to hold Memory Stick® media (sold separately)
- Made of genuine leather
- Belt loop included



Register online now at <https://productregistration.sony.com/> to save 15% on these eligible items at SonyStyle.com

Tripods

To order by phone with 15% off e-coupon: 1-877-865-7669



Travel Kit

VCT-MTK \$19.99

- Compact design for easy portability
- Extendable legs allow for a maximum height of 7 1/8"
- Comes with its own carrying pouch and cleaning cloth



Travel Tripod

VCT-R100 \$34.99

- Lightweight-yet-sturdy travel tripod
- Extends up to a generous 39 3/8"
- Folds down to a compact 14"



Lightweight Tripod

VCT-1500L \$129.99

- High-performance, compact aluminum tripod
- Legs collapse to allow for close-to-ground macro shooting
- Shoot from as low as 7 1/8" above the ground



Memory Stick® Media

To order by phone with 15% off e-coupon: 1-877-865-7669



Memory Stick PRO Duo™ Media

32 GB* (30.0 GB avail.)

Memory Stick PRO Duo MS-MT32G \$249.99

16 GB* (14.9 GB avail.)

Memory Stick PRO Duo MS-MT16G \$89.99

8 GB* (7.35 GB avail.)

Memory Stick PRO Duo MS-MT8G \$49.99

- Ideal for storing and sharing your images, video and music quickly and easily at an affordable price
- Ideal for HD recording



Memory Stick PRO-HG Duo™ "HX" Media

32 GB* (30.0 GB avail.)

Memory Stick PRO-HG Duo "HX"

MS-HX32G \$199.99

16 GB* (14.9 GB avail.)

Memory Stick PRO-HG Duo "HX"

MS-HX16G \$109.99

8 GB* (7.35 GB avail.)

Memory Stick PRO-HG Duo "HX"

MS-HX8G \$59.99

- 20MB/second read speed for high-speed transfers**
- Ideal for HD recording
- USB reader/writer adaptor supplied for ease of transfer

* Available storage capacity may vary and a portion of the memory is used for data management functions.

** Memory Stick PRO Duo™ media compatibility, capacity, transfer speeds, and other features vary by and are dependent upon the design of host hardware devices. See hardware specifications or www.sony.net/memorystick/support/e/ for compatibility information.

Register online now at <https://productregistration.sony.com/> to save 15% on these eligible items at SonyStyle.com

To order: call 1.877.865.SONY (7669)

Sony Electronics Inc.
16530 Via Esprillo
San Diego, CA 92127

©2010 Sony Electronics Inc. All rights reserved.

Reproduction in whole or in part is prohibited. Sony, Cyber-shot, Backstage 101, InfoLITHIUM, Memory Stick, Memory Stick Duo, Memory Stick PRO Duo, Memory Stick PRO-HG Duo, "make.believe", Sony Style and the Sony logo are trademarks of Sony. All other trademarks are the property of their respective owners.

Non-metric weights and measures are approximate and may vary. Features and specifications are subject to change without notice. All sample photos and screen representations are simulated. Offer is subject to availability and Sony may modify or terminate this offer at any time and for any reason.

4-181-720-01 • Printed in China



SONY
make.believe

LIMITED WARRANTY (US Only)

Sony Electronics Inc. ("Sony") warrants this product against defects in material or workmanship for the time periods and as set forth below. Pursuant to this Limited Warranty, Sony will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications. **In the event of a defect, these are your exclusive remedies.**

Term: For a period of one (1) year from the original date of purchase of the product, Sony will, at its option, repair or replace with new or refurbished product or parts, any product or parts determined to be defective.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

Instructions: To obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the Sony authorized service facility specified. **It is your responsibility to backup any data, software or other materials you may have stored or preserved on your unit. It is likely that such data, software, or other materials will be lost or reformatted during service and Sony will not be responsible for any such damage or loss.** A dated purchase receipt is required. For specific instructions on how to obtain warranty service for your product,

Visit Sony's Web Site:
www.sony.com/support

Or call the Sony Customer Information Service Center
1-800-222-SONY (7669)

For an accessory or part not available from your authorized dealer, call:

1-800-488-SONY (7669)

Repair / Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of Sony.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary use; it does not cover product issues caused by any other reason, including but not limited to product issues due to acts of God, misuse, limitations of technology, or modification of or to any part of the Sony product. This Limited Warranty does not cover Sony products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only in the United States.

LIMITATION ON DAMAGES: SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.

