

Sony Handycam - User Guide

Any Questions? LRCe-help@ohlone.edu

Step 1: Check Contents (10 Items)

- 1-Camera
- 1-Battery
- 1-AC Adapter
- 1-Power Cord
- 1-AV Connecting Cable
- 1-USB Cable
- 1-Operating Guide
- 1-PMB Guide for your camcorder with computer connected
- 1-Sony Handycam Motion Picture Software CD-ROM (DO NOT Register Software)
- 1-Let's Enjoy Video DVD (Tutorial Video)



Step 2: Buy a disc for recording or memory stick (advanced)

Types of discs you can use in the camcorder:

- 8cm DVD-RW
- 8cm DVD+RW
- 8cm DVD-R
- 8cm DVD+R DL
- Memory Stick Pro Duo
- Optional internal memory use available (see manual)

Step 3: Charge the battery (use power cable)



Step 3: continued



Step 4: Insert the disc

Open Access button is automatic for inserting and removing disc, DO NOT force door open.



Step 5: Easy Mode Operation makes settings automatic



Step 6: Open Lens Cover



Step 7: Use the buttons on the LCD screen or camera to film, and start and stop.




Step 8: Load Software CD-ROM to transfer video, view imported images, create a DVD or Copy a disc. (DO NOT register software)

Step 9: To play your new recorded DVD in other devices you must Finalize your DVD, see instructions in the operating manual on pg. 67.

Step 10: Enjoy your new DVD that you just created!

Extras: Notice Memory Stick Slot, USB Slot, and Playback Button

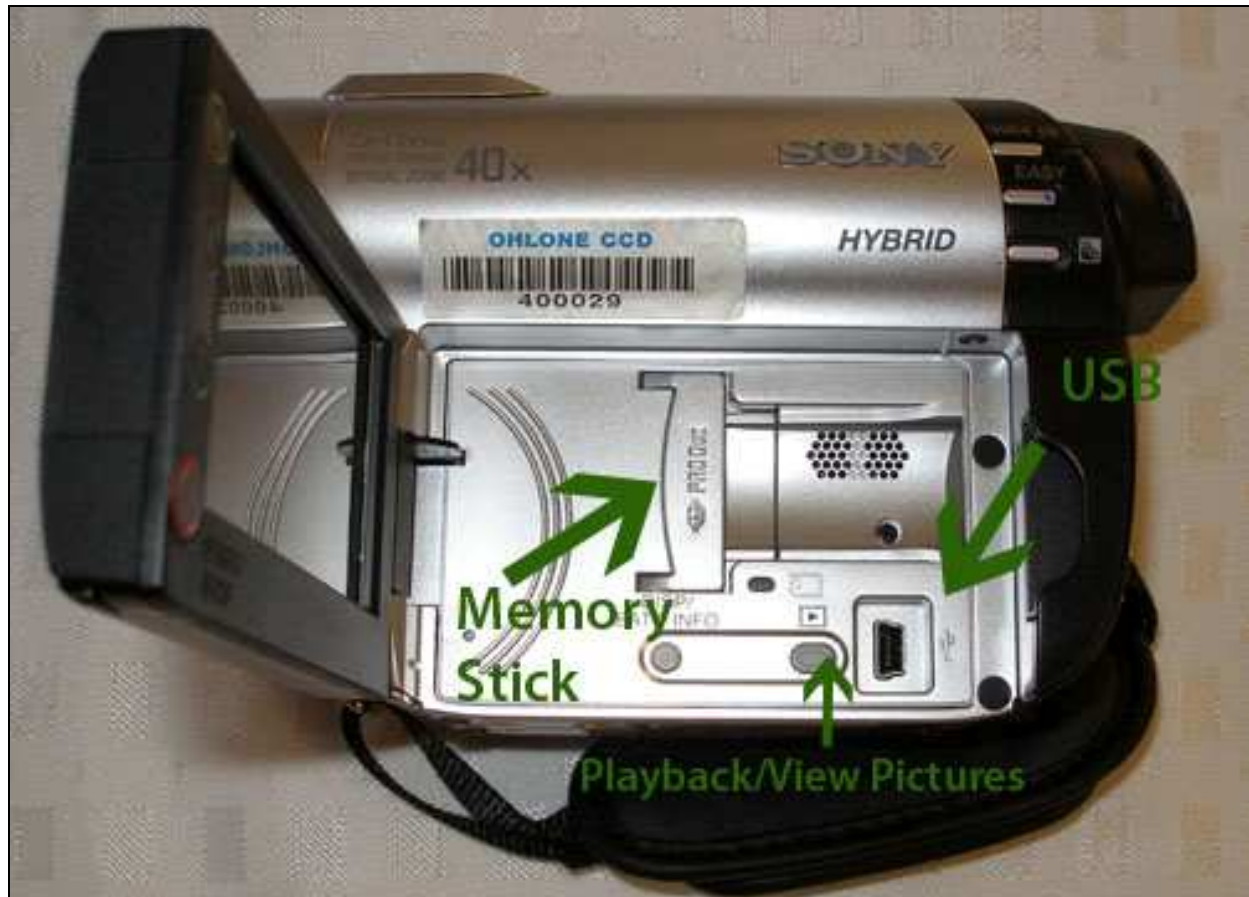

For additional information, please refer to the print HandyCam Operating Guide or CD included with the camera.