

Sony Re-tuning Guide

Guide 23

This guide can be used in conjunction with your remote control to help you retune any of the following Sony Products.

Models covered:

KDL32EX403U	KDL40EX403U	KDL40NX713U	KDL46HX803U	KDL55EX503U
KDL32EX503U	KDL40EX43BU	KDL40HX803U	KDL46NX703U	KDL60EX703U
KDL32EX43BU	KDL40EX503U	KDL40NX503U	KDL46NX713U	KDL60LX903U
KDL32NX503U	KDL40EX603U	KDL40LX903U	KDL46HX903U	
KDL32EX603U	KDL40NX503U	KDL46EX403U	KDL52EX703U	
KDL32EX703U	KDL40EX703U	KDL46EX503U	KDL52NX803U	
KDL37EX403U	KDL40HX703U	KDL46EX703U	KDL52NX813U	
KDL37EX503U	KDL40NX703U	KDL46HX703U	KDL52HX903U	

Sony Website: www.sony.co.uk


Sony Helpline: 0845 6000124

Digital UK Website: www.digitaluk.co.uk

Digital UK: 0845 6505050



SONY

1.

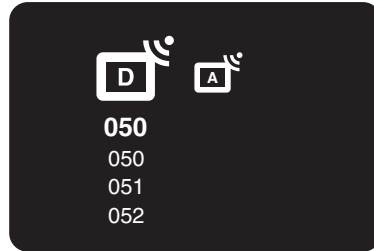



Press “HOME” on the remote.

2.

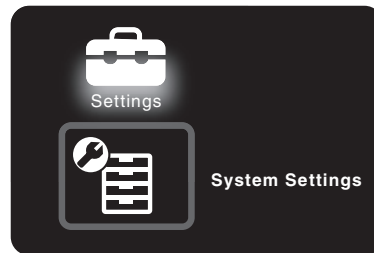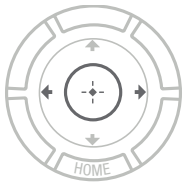



Using the \leftarrow/\rightarrow to select “Settings”.

3.

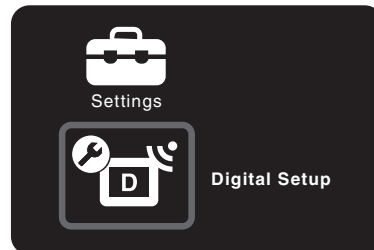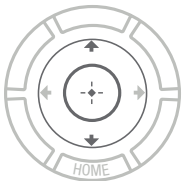



Press \uparrow/\downarrow to highlight “Digital Set-Up”, then confirm by \oplus .

4.

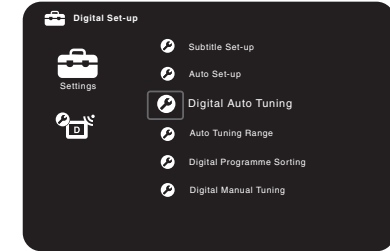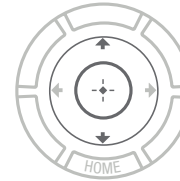


Press \uparrow/\downarrow to highlight “Digital Auto Tuning”, then confirm by \oplus .

5.

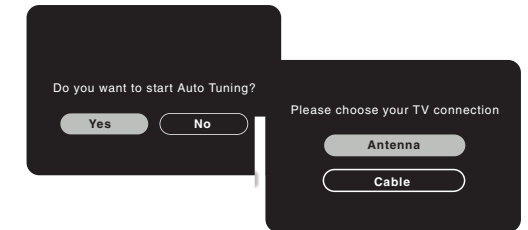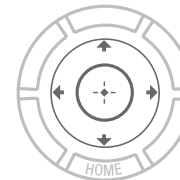


Press \leftarrow/\rightarrow to highlight “Yes”, then confirm by \oplus .
Press \uparrow/\downarrow to highlight “Antenna”, then confirm by \oplus .

6.

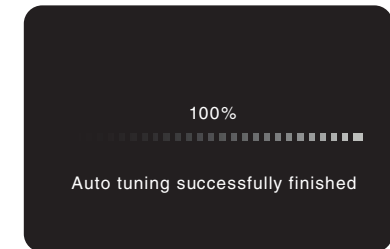

The TV will automatically start tuning and confirm when finished.

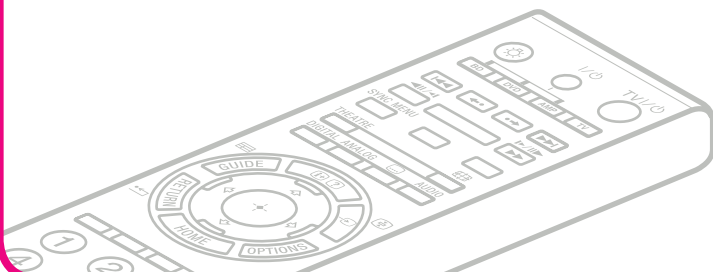

Please note some TV models the remote control layout may differ to the one illustrated.