

TL-WN512AG/TL-WN552AG/TL-WN553AG 54M Dualband(2.4GHz/5GHz) Wireless Adapter



- 2x to 3x eXtended Range[™]
- 2.4GHz 802.11g/b
- 5GHz 802.11a

REV: 1.1.3 1910010002

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice. **TP-LINK**[®] is a registered trademark of TP-LINK TECHNOLOGIES CO., LTD. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-LINK TECHNOLOGIES CO., LTD. Copyright © 2008 TP-LINK TECHNOLOGIES CO., LTD. All rights reserved.

http://www.tp-link.com

FCC STATEMENT

FC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Caution:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment; such modifications could void the user's authority to operate the equipment.

- 1) The devices are restricted to operations within the 5.25 to 5.825GHz range.
- 2) For this device to operate in the 5.15 to 5.25GHz range, the devices must use integral antennas.

FCC RF Radiation Exposure Statement: (TL-WN552AG/TL-WN553AG)

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

FCC Radiation Exposure Statement: (TL-WN512AG)

This device has been tested for compliance with FCC RF Exposure limits in the typical laptop computer configuration and this device can be used in desktop or laptop computers with side mounted PCMCIA slots. This device cannot be used with handheld PDAs (personal digital assistants). This device and its antenna must not be co-located or operated in conjunction with any other antenna or transmitter.

CE Mark Warning

This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

National Restrictions

5150-5250 MHz

Country	Restriction	Reason/remark
Bulgaria	Not implemented	Planned
Croatia	License required	
		General authorization required if used outside own
Italy		premises
Luxombourg	None	General authorization required for network and
Luxembourg	None	service supply (not for spectrum)
Russian Federation	No info	

5250-5350 MHz

Country	Restriction	Reason/remark
Bulgaria	Not implemented	Planned
Croatia	License required	
Italy		General authorization required if used outside own
Italy		premises
Luxembourg	None	General authorization required for network and
Luxembourg	None	service supply (not for spectrum)
Russian	No info	
Federation		

5470-5725 MHz

Country	Restriction	Reason/remark	
Bulgaria	Not implemented	Planned	
		Relevant+ provisions for the implementation of DFS	
France		mechanism described in ETSI standard EN 301 893	
		V1.3.1 and subsequent versions	
Italy		General authorization required if used outside own	
Italy		premises	
Luxombourg	None	General authorization required for network and	
Luxembourg None		service supply (not for spectrum)	
Russian	No info		
Federation			
Turkey	Not implemented	Defence systems	

Note: It not used outdoors in France.

i donago i	Contents	1
Chapter 1	Introduction	2
1.1 Ov	erview of the product	2
1.2 Fe	atures	2
1.3 LE	D Status	
1.3.1	TL-WN512AG LED Indications	
1.3.2	TL-WN552AG/TL-WN553AG LED Indications	
Chapter 2	Installation Guide	4
2.1 Ha	rdware Installation	4
2.1.1	TL-WN552AG/TL-WN553AG Hardware Installation	4
2.1.2	TL-WN512AG Hardware Installation	
2.2 So	ftware Installation	4
2.2.1	Overview	4
2.2.2	Software Installation for Windows 2000	4
2.2.3	Installation for Windows Vista	9
Chapter 3	Configuration	12
3.1 Cu	rrent Status	13
	rrent Status	
		14
3.2 Pro	ofile Management	
3.2 Pro 3.2.1	ofile Management Add or Modify a Configuration Profile	14 14 18
3.2 Pro 3.2.1 3.2.2	ofile Management Add or Modify a Configuration Profile Remove a profile	
3.2 Pro 3.2.1 3.2.2 3.2.3	ofile Management Add or Modify a Configuration Profile Remove a profile Switch another Profile	
3.2 Pro 3.2.1 3.2.2 3.2.3 3.2.3 3.2.4	ofile Management Add or Modify a Configuration Profile Remove a profile Switch another Profile Import a Profile	
3.2 Pro 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5	ofile Management Add or Modify a Configuration Profile Remove a profile Switch another Profile Import a Profile Export a Profile	
3.2 Pro 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6 3.2.7	ofile Management Add or Modify a Configuration Profile Remove a profile Switch another Profile Import a Profile Export a Profile Scan Available Networks	
3.2 Pro 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6 3.2.7	ofile Management Add or Modify a Configuration Profile Remove a profile Switch another Profile Import a Profile Export a Profile Scan Available Networks Auto Profile Selection Management	
3.2 Pro 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6 3.2.7 3.3 Dia	ofile Management Add or Modify a Configuration Profile Remove a profile Switch another Profile Import a Profile Export a Profile Scan Available Networks Auto Profile Selection Management	
 3.2 Pro 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6 3.2.7 3.3 Dia 3.3.1 	ofile Management Add or Modify a Configuration Profile Remove a profile Switch another Profile Import a Profile Export a Profile Scan Available Networks Auto Profile Selection Management Ingnostics Check Driver Information Check Receive and Transmit Statistical Information	
3.2 Pro 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6 3.2.7 3.3 Dia 3.3.1 3.3.2 Chapter 4	ofile Management Add or Modify a Configuration Profile Remove a profile Switch another Profile Import a Profile Export a Profile Scan Available Networks Auto Profile Selection Management Ingnostics Check Driver Information Check Receive and Transmit Statistical Information	

CONTENTS

Package Contents

The following items should be found in your package:

- > One TL-WN512AG/TL-WN552AG/TL-WN553AG Wireless Adapter
- > Quick Installation Guide
- > One Resource CD for TL-WN512AG/TL-WN552AG/TL-WN553AG, including:
 - TP-LINK Wireless Client Utility (TWCU) and Drivers
 - User Guide
 - Other Helpful Information

P Note:

Make sure that the package contains the above items. If any of the listed items are damaged or missing, please contact with your distributor.

Chapter 1. Introduction

Thank you for choosing TP-LINK 54M Wireless Adapter TL-WN512AG/TL-WN552AG/TL-WN553AG.

1.1 Overview of the product

The TP-LINK 54M Wireless Adapter TL-WN512AG/TL-WN552AG/TL-WN553AG can provide high performance of wireless connectivity, without the restrictions of phone lines or Ethernet cables. With the IEEE 802.11a, 802.11b and 802.11g standards, the TL-WN512AG/TL-WN552AG/TL-WN553AG can connect with existing 802.11b, 802.11g- or 802.11a- compliant routers, access points and cards. That means you can still communicate with colleagues and friends while you have the ability to link to even more wireless networks.

The adapter's auto-sensing capability allows high packet transfer rate of up to 54Mbps for maximum throughput, or dynamic range shifting to lower speeds due to distance or operating limitations in an environment with a lot of electromagnetic interference. Your wireless communications are protected by up to 152-bit WEP and WPA encryption for high security.

It adopts **2x to 3x eXtended Range[™] WLAN transmission technology** so that transmission distance is 2-3 times of traditional wireless adapter, up to a distance of 830m tested in China. Transmission range is extended to 4-9 times.

1.2 Features

- > Complies with IEEE802.11a, IEEE802.11g and IEEE802.11b standards
- > Adopts **2x to 3x eXtended Range[™]** wireless LAN transmission technology
- Supports WPA/WPA2 data security, IEEE802.1x authentication, TKIP/AES encryption, 64/128/152-bit WEP encryption
- > Supports 54/48/36/24/18/12/9/6Mbps or 11/5.5/3/2/1Mbps wireless LAN data transfer rates
- Provides 32-bit PCI interface (TL-WN552AG/ TL-WN553AG) or 32-bit CardBus interface (TL-WN512AG)
- > Supports Ad-Hoc and Infrastructure modes
- > Supports roaming between access points when configured in Infrastructure mode
- > Ease to configure and provides monitoring information
- > Supports Windows 98SE/Me/2000/XP/Vista
- > Internal Antenna (TL-WN512AG)-
- > Detachable reverse SMA connector antenna (TL-WN553AG)

1.3 LED Status

1.3.1 TL-WN512AG LED Indications

Name	Status	Indication	
Status Green	Intermittently	The adapter is in an electricity solving status	
Activity	Not lit	The adapter is in an electricity saving status.	
Status	Lit		
Activity	Not lit	The adapter is on wake up status.	
Status	Flashing		
Activity	Alternately	The adapter is trying to scan a networking connection.	
	Flashing		
	Alternately		
Status	Intermittently	The adapter is already connected but is not transmitting	
Activity	Intermittently	or receiving data.	
Status	Flashing	The adapter is transmitting or reasilying data	
Activity	Flashing	 The adapter is transmitting or receiving data. 	

1.3.2 TL-WN552AG/TL-WN553AG LED Indications

Name	Status	Indication
		The adapter is in an electricity saving status or the
Status	Intermittently	adapter is already connected but is not transmitting or
		receiving data.
Status	Lit	The adapter is on wake up status.
Status	Flashing	The adapter is transmitting and receiving data.

Chapter 2. Installation Guide

2.1 Hardware Installation

2.1.1 TL-WN552AG/TL-WN553AG Hardware Installation

To install the adapter, follow these steps listed below:

- 1. Turn off your desktop PC and disconnect the power.
- 2. Remove your PC case and locate an available PCI slot on the motherboard. Remove the metal slot cover on the back of the PC. Check with your computer manufacturer for instructions if needed.
- 3. Slide the PCI Adapter into the PCI slot. Make sure that all of its pins are touching the slot's contacts. Once the adapter is firmly in place, secure its fastening tab to your PC's chassis with a mounting screw. Then, replace your PC case.
- 4. Reconnect your PC's power and turn on your desktop PC.

2.1.2 TL-WN512AG Hardware Installation

To install the adapter, follow these steps listed below:

- 1. Locate an available CardBus slot on your laptop.
- 2. With the connector pin end facing the CardBus slot and the label facing up, slide the Adapter into the CardBus slot until it locks in place.
- 3. The promoted Found New Hardware Wizard screen will pop up when the adapter is installed correctly.

2.2 Software Installation

2.2.1 Overview

The Adapter's Setup Wizard will guide you through the Installation procedure for Windows 98SE, Me, 2000, XP, Vista. The Setup Wizard will install the TP-LINK Wireless Client Utility (TWCU) and drivers.

When you install the hardware before installing the software, the system will prompt "Found New Hardware Wizard", click **Cancel**, and run the Setup Wizard program on the CD-ROM.

The Setup steps for Windows 98SE, Me, 2000 and XP are very similar. The following setup steps are for Windows 2000, and Windows Vista.

2.2.2 Software Installation for Windows 2000

 Insert the Resource CD into your CD-ROM drive, and open the folder named TL-WN512AG_552AG_553AG. To continue, choose the proper folder according to your operating system and double-click **Setup.exe** to load the following screen.

TP-LINK Driver and Client Applications - InstallShield Wizard	
Preparing Setup Please wait while the InstallShield Wizard prepares the setup.	2
TP-LINK Driver and Client Applications Setup is preparing the InstallShield Wizard, which guide you through the rest of the setup process. Please wait.	will
InstallShield Ca	incel

Figure 2-1 TP-LINK Wireless Client Utility – Install Shield Wizard

 You can click Cancel to end the installation on the Preparing Setup screen of Figure 2-1. Otherwise, the Setup Wizard will display a screen similar to that shown in Figure 2-2 after a moment. To continue, click Next on the screen as Figure 2-2. Click Cancel to end the Installation.

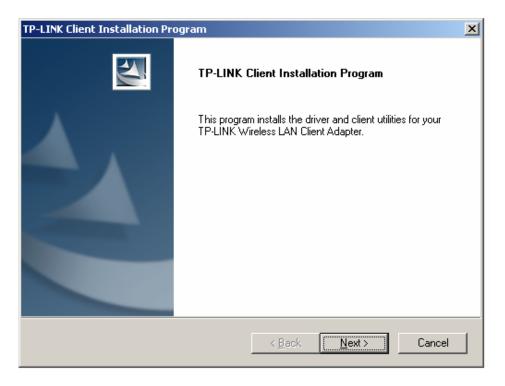


Figure 2-2 TP-LINK Wireless Client Utility Installation Program

3. The Setup Wizard will ask you to choose a Setup type in Figure 2-3. It is recommended that you select Install Client Utilities and Driver. Select Install Driver Only to install driver only, select Make Driver Installation Diskette(s) to make the diskette(s) as the installation driver. Select Install Client Utilities and Driver and click Next to continue the Installation. Click Back to return to the previous page, or click Cancel to end the Installation.

TP-LINK Client Installation Program	X
Setup Type Select the setup type that best suits your needs.	
Click the type of setup you prefer.	
Install Client Utilities and Driver Install Driver Only Make Driver Installation Diskette(s)	Description Choose this option to install the driver and client utilities. This is the recommended option.
InstallShield	
< <u>B</u> ac	k <u>N</u> ext > Cancel

Figure 2-3 Select the Setup type.

4. Figure 2-4 should appear. Click **Yes** to continue the Installation, or click **No** to end the Installation.



Figure 2-4 Question

5. Click **Browse** to change the destination location for the software in Figure 2-5. Click **Next** to continue the Installation. Click **Back** to return to the previous page, or click **Cancel** to end the Installation.

TP-LINK Client Installation Program
Choose Destination Location Select the folder where the installation program will install the files.
The installation program will install the client utilities in the following location:
Destination Folder D:\Program Files\TP-LINK\TWCU Browse
InstallShield < <u>B</u> ack <u>Next</u> > Cancel

Figure 2-5 Choose Destination Location

 The Setup Wizard will ask you to create a new folder name or select one from the Existing Folders list shown in Figure 2-6. It is recommended that you keep the default value. Click Next to continue the Installation. Click Back to return to the previous page, or click Cancel to end the Installation.

TP-LINK Client Installation Program	×
Select Program Folder Select a program folder.	
The installation program will add program icons to the Program Folder listed below. You may enter a new folder name or select one from the Existing Folders list.	
Program Folder:	
TP-LINK\TWCU 4.1.2.94	
Existing Folders:	
Administrative Tools	
IDEUtil SoundMAX	
Startup	
InstallShield	-
< <u>B</u> ack <u>N</u> ext > Cancel	

Figure 2-6 Select a Program Folder

7. The Setup Wizard will notify you of how to proceed with the installation, shown in Figure 2-7. Click **OK** to continue the Installation.



Figure 2-7 Information Prompt

8. While files are copying, you will see a warning box, shown in Figure 2-8. Please select **YES** to continue installation. Our drivers have been tested thoroughly, and *are* able to work with the operating system.

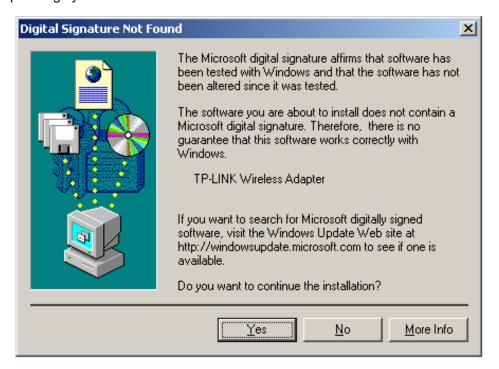


Figure 2-8 Widows 2000 Warning Box

9. After the files have been successfully copied, the screen in Figure 2-9 will appear. Click **OK** to reboot the system.


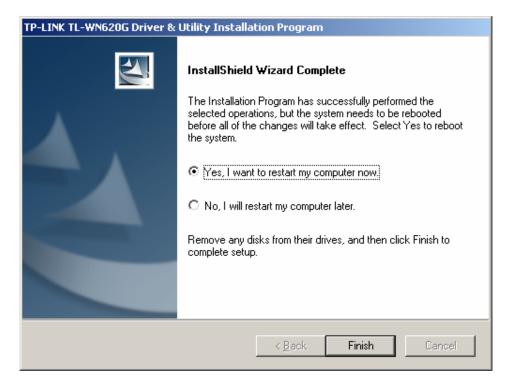


Figure 2-9 Finish

2.2.3 Installation for Windows Vista

 Insert the Resource CD into your CD-ROM drive, open the relative operating system folder in the CD, and double click **Setup.exe** to install the driver, then Figure 2-10 will appear; Click **Cancel** to end the installation in the screen. Otherwise, the installation will continue.

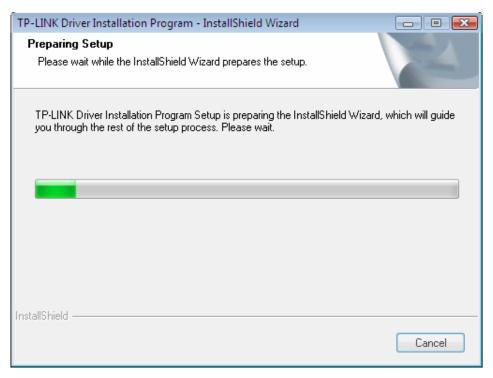

2. Click **Next** in the screen below (shown in Figure 2-12) to continue, you can click **Cancel** to end the installation.

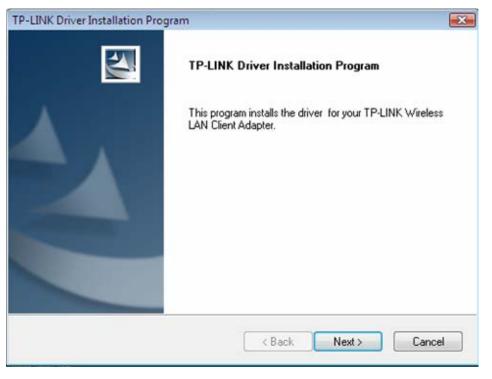


Figure 2-11

3. After that, the files will be copied as the next screen shown (shown in Figure 2-13). To end the Installation, click **Cancel**.

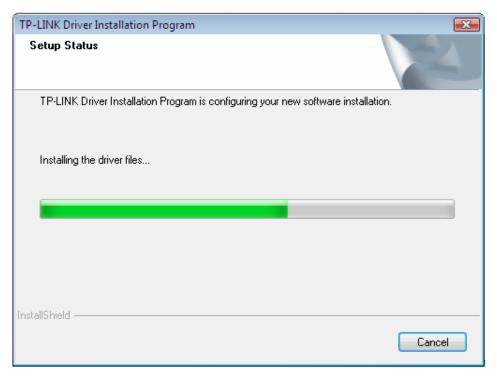


Figure 2-12

Note:

During the installation, the system will warn about Windows Security testing, please click "**Install this driver software anyway**" to continue the installation.



Figure 2-13

4. Click the **Finish** button to complete.

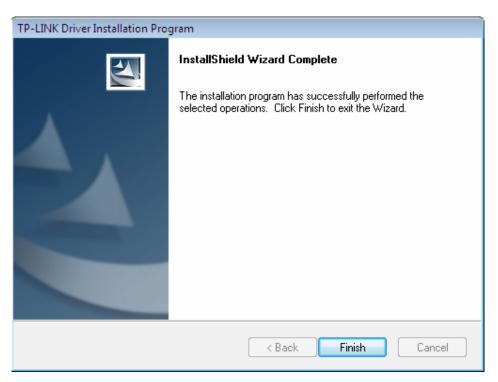


Figure 2-14

Chapter 3. Configuration

TP-LINK Wireless Adapter TL-WN512AG/TL-WN552AG/TL-WN553AG can be configured by TP-LINK Wireless Client Utility (TWCU). This chapter describes how to configure your TP-LINK Wireless Adapter for wireless connectivity on your Wireless Local Area Network (WLAN) and use the data security encryption features.

After Installing the Adapter, for the first time a region selector box appears, as shown in Figure 3-1.Select your region and click **OK**.

Region Selector	<u>? ×</u>
NOTE: Please select your region, inc of applicable law.	orrect region may result in a violation
Select your region:	United States
	OK Cancel
Select your region:	

Figure 3-1 Region Selector

The Adapter's tray icon will appear in your system tray. It appears at the bottom of the screen, and shows the signal strength using color and the received signal strength indication (RSSI).



If the icon is gray, there is no connection.



If the icon is red, there is poor signal strength and the RSSI is less than 5dB.



If the icon is yellow, there is poor signal strength and the RSSI is between 5dB and 10dB.



If the icon is green, there is good signal strength and the RSSI is between 10dB and 20dB.

If the icon is green, there is excellent signal strength and the RSSI is more than 20dB.

Double-click the icon and the **TWCU utility** will run. You can also run the utility by clicking the Start>Program>TP-LINK>TWCU 4.1.2.94>TP-LINK Wireless Client Utility. The TWCU utility provides a complete set of easy managed tools to:

- > Display current status information
- > Edit and add configuration profiles
- > Display current diagnostics information

The section below introduces these above capabilities.

3.1 Current Status

The Current Status tab contains general information about the program and its operations. The Current Status tab does not require any configurations.

些 TP-LINK Wireless (lient Utility - Cu	rrent Profile: TP-LINK	? ×		
<u>Action</u> <u>Options</u> <u>H</u> elp					
Current Status Profile	Current Status Profile Management Diagnostics				
	Profile Name:	TP-LINK			
	Link Status:	Associated			
	Wireless Mode:	2.4 GHz 54 Mbps			
	Network Type:	Infrastructure			
	IP Address:	192.168.1.102			
	Current Channel:	6			
	Data Encryption:	None			
Server Bas	ed Authentication:	None			
	Signal Strength:		Excellent		
			Advanced		

Figure 3-2 Current Status

The following table describes the items found on the Current Status screen.

- Profile Name The name of current selected configuration profile. Set up the configuration name on the General tab of Profile Management.
- > Link Status Shows whether the station is associated to the wireless network.
- Wireless Mode Displays the wireless mode. Configure the wireless mode on the Advanced tab of Profile Management.
- Network Type The type of network and the station currently connected. The options include:
 - Infrastructure (access point)
 - Ad Hoc

Configure the network type on the Advanced tab of Profile Management.


- > IP Address Displays the computer's IP address.
- > Current Channel Shows the currently connected channel.
- Data Encryption Displays the encryption type the driver is using. Configure the encryption type on the Security tab of Profile Management.
- > Server Based Authentication Shows whether server based authentication is used.
- **Signal Strength -** Shows the strength of the signal.

PNote:

In the TWCU utility, access the **General** tab, **Security** tab and **Advanced** tab by clicking **New** or **Modify** on the **Profile Management** tab.

Click **Advanced** to see advanced information about the program and its operations. For more information, please refer to the help file of the utility.

vanced Status			?
Network Name (SSID):	TP-LINK	Current Signal Strength:	-54 dBm
Server Based Authentication:	None	Current Noise Level:	-94 dBm
Data Encryption:	None	Up Time:	00:09:34
Authentication Type:		802.11b Preamble:	Short & Long
lessage Integrity Check:	None	Current Receive Rate:	54.0 Mbps
QoS:	None	Current Transmit Rate:	48.0 Mbps
Associated AP Name:	Unavailable	Channel:	6
ssociated AP IP Address:	Unavailable	Frequency:	2.437 GHz
ssociated AP MAC Address:	00-14-78-BA-DD-7A		
Power Save Mode:	Normal		
ürrent Power Level:	79 mW		
vailable Power Levels (802.11a):			
vailable Power Levels (802.11b/g):			·····
			(OK

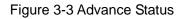

3.2 Profile Management

Click the Profile Management tab of the TWCU Utility and the Profile Management screen will appear, Figure 3-4. The Profile Management screen provides tools to:

- > Add a profile
- > Edit a profile
- > Remove a profile
- > Switch to another Profile
- > Import a Profile
- > Export a Profile
- Scan Available Networks
- Order profiles

🐇 TP-LINK Wireless Client Utility - Current Profile: TP-LINK	? ×
<u>Action</u> <u>Options</u> <u>H</u> elp	
Current Status Profile Management Diagnostics	
TP-LINK	<u>N</u> ew
	Modify
	Remo <u>v</u> e
	Activate
Details	
Network Type: Infrastructure	Import
Security Mode: Disabled	
Network Name 1 (SSID1): TP-LINK	<u>E</u> xport
Network Name 2 (SSID2): <empty></empty>	S <u>c</u> an
Network Name 3 (SSID3): <empty></empty>	
Auto Select Profiles	Order <u>P</u> rofiles

Figure 3-4 Profile Management tab

3.2.1 Add or Modify a Configuration Profile

To add a new configuration profile, click New on the Profile Management tab. To modify a

configuration profile, select the configuration from the Profile list and click **Modify**.

The Profile Management dialog box will display a screen similar to that shown in Figure 3-5.

- 1. Edit the General tab
- Profile Name Identifies the configuration profile. This name must be unique. Profile names are not case-sensitive.
- > Client Name Identifies the client machine.
- Network Names (SSIDs) The IEEE 802.11 wireless network name. This field has a maximum limit of 32 characters.

Profile Management		<u>? ×</u>
General Security Advance	be	
Profile Settings		
Profile Name:	Q	
Client Name:	TP-w2FS98IR0YHL	
 → Network Names		
SSID1:	TP-LINK	
SSID2:		
SSID3:		
	ОК	Cancel

Figure 3-5 General Tab of Profile Management

2. Edit the Security tab

Edit the fields in the Security tab of Profile Management to configure the profile. To define the security mode, select the radio button of the desired security mode.

Profile Management	<u>?</u> ×
General Security Advanced	
Set Security Options • WPA/WPA2 • B02.1x • B02.1x • Pre-Shared Key (Static WEP) • None	
Configure Configure Group Policy Delay: 60 sec	
ОКС	Cancel

Figure 3-6 Security tab of Profile Management

- > WPA/WPA2: Wi-Fi Protected Access
- > WPA/WPA2 Passphrase: Wi-Fi Protected Access Passphrase
- **802.1x:** Enables 802.1x security.
- Shared Key (Static WEP): Enables the use of shared keys that are defined on both the access point and the station. To define shared encryption keys, choose the Shared Key radio button and click Configure to fill in the Define Shared Keys window.
- > **None:** No security (not recommended).

	WE	P Key S	ize:
	64	128	152
 	•	0	0
 	•	0	0
	•	0	0
 	•	0	0
	ж	C.	ancel
		6 6 6	

Figure 3-7 Define Shared Keys

PNote:

If the access point, which is associating to the wireless adapter, has WEP set to Optional and the client has WEP enabled, make sure that Allow Association to Mixed Cells is checked on the Security Tab to allow association. To complete WEP encryption configuration, you must select the

802.11 Authentication Mode as appropriate on the **Advanced** tab of this **Profile Management** dialog.

- 3. Edit the Advanced tab
- > Power Save Mode -
 - **Maximum** Selects maximum mode to let the access point buffer incoming messages for the wireless adapter. The adapter will detect the access point if any messages are waiting periodically.
 - **Normal** In Normal mode, the adapter will be switched to maximum mode automatically when no large packets are retrieved.
 - **Off** turns power saving off, thus powering up the wireless adapter continuously for a short message response time.
- > **Network Type:** Select Infrastructure or Ad Hoc.
- 802.11b Preamble: Specifies the preamble setting in 802.11b. The default setting is Short & Long (access point mode), which allows both short and long headers in the 802.11b frames. The adapter can only use short radio headers if the access point supports and uses them. Set to Long Only to override allowing short frames.
- Wireless Mode: Specifies 5 GHz 54 Mbps or 2.4 GHz 54 Mbps or 2.4 GHz 11 Mbps operation in an access point network. The wireless adapter must match the wireless mode of the access point with which it associates.
- Wireless Mode when Starting an Ad Hoc Network: Specifies 5G/2.4 GHz 54/11 Mbps to start an Ad Hoc network if no matching network name is found after scanning all available modes. This mode also allows the selection of the channel the wireless adapter uses. The channels available depend on the regulatory domain. If the adapter finds no other ad hoc adapters, the channel that the adapter starts the ad hoc network with will be selected automatically.
- 802.11 Authentication Mode: Select which mode the wireless adapter uses to authenticate to an access point:
 - Automatic causes the adapter to attempt authentication using shared, but switches it to open authentication if shared fails.
 - **Open System** enables an adapter to attempt authentication regardless of its WEP settings. It will only associate with the access point if the W EP keys on both the adapter and the access point match.
 - **Shared-key** only allows the adapter to associate with access points that have the same WEP key.

For infrastructure (access point) networks, click **Preferred APs** to specify up to four access points to the client adapter that attempts to be associated to the access points.

Profile Management	<u>?</u> ×
General Security Advanced	
Power Save Mode: Normal	
Network Type: Infrastructure	_
802.11b Preamble: 📀 Short & Long	C Long Only
Wireless Mode	- Wireless Mode When Starting Ad Hoc Network
 2.4 GHz 54 Mbps 2.4 GHz 11 Mbps 	C 5 GHz 54 Mbps
🔽 eXtended Range (XR) TM	C 2.4 GHz 11 Mbps C 2.4 GHz 54 Mbps Channel: Auto
QoS	802.11 Authentication Mode C Automatic © Open System C Shared Key
	Preferred APs
	OK Cancel

Figure 3-8 Advanced tab of Profile Management

3.2.2 Remove a profile

- 1. Go to the Profile Management tab.
- 2. Select the profile name to remove in the Profiles List.
- 3. Click Remove.

3.2.3 Switch another Profile

- 1. Go to the Profile Management tab.
- 2. Click on the profile name in the Profiles List.
- 3. Click Activate.

3.2.4 Import a Profile

- 1. From the Profile Management tab, click **Import...** The Import Profile will then appear.
- 2. Browse to the directory where the profile is located.
- 3. Highlight the profile name.
- 4. Click **Open**, the imported profile will then appear in the Profiles List.

Import Profile	? ×
Look in: 🔄 TWCU 💌 🖛 🗈 📸 🗉	<u>.</u>
C Manual TL-WN512AG	
File <u>n</u> ame:	<u>D</u> pen
Files of type: Config files (*.prf)	Cancel

Figure 3-9 Import Profile Dialog

3.2.5 Export a Profile

- 1. From the Profile Management tab, highlight the profile to export.
- 2. Click **Export**, the Export Profile window will then appear.
- 3. Browse the directory to export the profile to.
- 4. Click **Save**. The profile should then be exported to the specified location.

Export Profile	? ×
Save in: 🔁 TWCU 💽 🖛 🗈 📸 🎟	
🗀 Manual	
TL-WN512AG	
File <u>n</u> ame: TP-LINK Sav	'e
Save as type: Config files (*.prf)	

Figure 3-10 Export Profile Dialog

3.2.6 Scan Available Networks

- 1. Click **Scan** on the Profile Management, the Available Infrastructure and Ad Hoc Networks window will appear.
- 2. Click **Refresh** to refresh the list at any time.
- 3. Highlight a network name and click Activate to connect an available network. If no

configuration profile exists for that network, the Profile Management window will open the **General** tab. Fill in the Profile name and click **OK** to create the configuration profile for that network.

Network Name (SSID)	¢)	Super	XR	Sig	gnal Strength	Channel	Wireless M
i.				ոլ	42 dB	6	2.4 GHz 54
🗼 Atheros_XSpan				ոլ	29 dB	6	2.4 GHz 54
👗 FASTCOMsdsdsds				ոլ	43 dB	6	2.4 GHz 54
🗢 GuestAccess				ոլ	47 dB	11	2.4 GHz 54
🗼 tanrifei_test 🛛 🦻	z 3			ոլ	16 dB	6	2.4 GHz 54
😵 TP-LINK			0	ոլ	52 dB	6	2.4 GHz 54
👗 TP-LINK			0	ոլ	6 dB	6	2.4 GHz 54
🗼 zhanglianpeng			۵	ող	12 dB	11	2.4 GHz 54
•							•

Figure 3-11 Scan Available Networks Dialog

3.2.7 Auto Profile Selection Management

The auto selection feature allows the wireless adapter to automatically select a profile from the list of profiles and use it to connect to the network. To add a new profile into the Auto Selected Profiles list, please follow these steps.

- 1. On the Profile Management tab, click Order Profiles.
- 2. The Auto Profiles Selection management window will appear, with a list of all created profiles in the Available Profiles box.
- 3. Highlight the profiles to add to auto profile selection, and click **Add**. The profile will appear in the Auto Selected Profiles box.
- 4. Highlight a profile in the Auto Selected Profiles box.
- 5. Click **Move Up** or **Move Down** as appropriate. Note: The first profile in the Auto Selected Profiles box has highest priority, and the last profile has lowest priority.
- 6. Click OK.
- 7. Check the Auto Select Profiles checkbox on the Profile Management tab.

P Note:

When auto profile selection is enabled by checking **Auto Select Profiles** on the **Profile Management** tab, the client adapter will scan for an available network. The profile with the highest priority and the same SSID as one of the found networks will be used to connect to the network. If the connection fails, the client adapter will try the next highest priority profile that matches the SSID until an available network is found.

<u>? ×</u>
Add
Move up
Move down
Remove
. Cancel

Figure 3-12 Auto Profile Selection Management Dialog

3.3 Diagnostics

The **Diagnostics** tab of the TP-LINK Wireless Client Utility (TWCU) provides buttons used to retrieve receiving and transmitting statistics. The Diagnostics tab does not require any configuration.

The Diagnostics tab lists the following receive and transmit diagnostics for frames received or transmitted by the wireless network adapter:

- > Multicast frames transmitted and received
- > Broadcast frames transmitted and received
- > Unicast frames transmitted and received
- > Total bytes transmitted and received

📹 TP-LINK Wireless Client	Utility - Current Profile: TP-LINK	? ×
<u>A</u> ction <u>O</u> ptions <u>H</u> elp		
Current Status Profile Mana	gement Diagnostics	
Transmit Multicast Packets: Broadcast Packets: Unicast Packets: Total Bytes:	0 3644 3573 275779	Adapter Information
Receive Multicast Packets: Broadcast Packets: Unicast Packets: Total Bytes:	0 2343 14 245258	

Figure 3-13 Diagnostics tab

3.3.1 Check Driver Information

The Adapter Information contains general information about the wireless network adapter and the Network Driver Interface Specification (NDIS) driver. Access the adapter information from the Diagnostics tab.

3.3.2 Check Receive and Transmit Statistical Information

The **Advanced Statistics** show receiving and transmitting statistical information for the following receive and transmit diagnostics for frames received by or transmitted to the wireless network adapter.

Transmit			
Frames Transmitted OK:	7639	RTS Frames:	1189
Frames Retried:	309	CTS Frames:	37
Frames Dropped:	35	No CTS Frames:	1152
No ACK Frames:	1757	Retried RTS Frames:	1152
ACK Frames:	7639	Retried Data Frames:	309
Receive			
Beacons Received:	12087	Authentication Time-Out:	0
Frames Received OK:	2551	Authentication Rejects:	0
Frames Received with Errors:	8684	Association Time-Out:	0
CRC Errors:	15046	Association Rejects:	0
Encryption Errors:	0	Standard MIC OK:	0
Duplicate Frames:	35	Standard MIC Errors:	0
AP Mismatches:	0	CKIP MIC OK:	0
Data Rate Mismatches:	0	CKIP MIC Errors:	0
			ПК

Figure 3-14 Advanced Statistics

Chapter 4. Configuration for windows Vista

After the Adapter's driver has been installed, Windows Vista will display a wireless Network Connection message like this one.

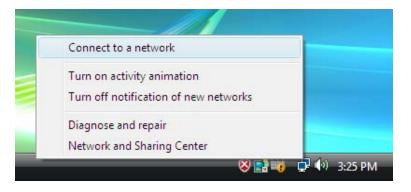


Figure 4-1

Icon III means the connection has been established. Icon III means there is no connection.

If the icon does not appear, please follow the steps below. If the icon still does not appear, the driver may be installed incorrectly or the adapter is unplugged, please try again.

1. Right-click the icon in your system tray, then click **Connect to a network**.





2. The screen that appears will show you many available wireless networks. Highlight the network that you want, and then click **Connect**.

🕞 🖞 Connect to a network		
Select a network to connect to		
Show Wireless 🔻	- 4	
TP-LINK Security-enabled network Connect	_ lltee	
TP-LINK Diagnose ork	litee	
huangqian Security-enabled network	lite.	
	- T	
Set up a connection or network Open Network and Sharing Center		
	Connect Cancel	

Figure 4-3

3. To continue, click **Connect Anyway**. Click the **Cancel** button to end the Installation.

🕞 😰 Connect to a network	- • 💌
TP-LINK is an unsecured network	
Connect Anyway Information sent over this network might be visible to others.	
Connect to a different network	
	Cancel

Figure 4-4

4. After that, the installation will proceed as shown below, click **Close**.

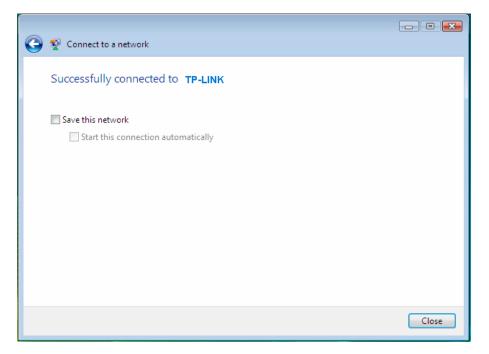


Figure 4-5

5. The screen below will appear if the connection is successful.



Figure 4-6

Appendix A: Specifications

Normal	
Interface	TL-WN512AG: 32-bit CardBus
	TL-WN552AG/TL-WN553AG: 32-bit PCI
Standards	IEEE802.11a; IEEE802.11b; IEEE802.11g
Operating System	Windows 98SE, Me, 2000, XP, Vista
Transmission Distance	Indoor up to 100m, outdoor up to 300m (Standard transmission
	distance, it is limited to the environment).
	Indoor up to 200m, outdoor up to 830m (Adopt 2x to 3x
	eXtended Range TM WLAN transmission technology, it is limited
	to the environment)
Radio Data Rate	54/48/36/24/18/12/9/6Mbps or 11/5.5/3/2/1Mbps
	(Auto Rate Sensing)
Modulation	1M DBPSK; 2M DQPSK; 5.5M, 11M CCK; 6M, 9M, 12M, 18M,
	24M, 36M, 48M, 54M OFDM;
Media Access Protocol	CSMA/CA with ACK
Transmit Power	15dBm (Typical)
Data Security	WPA/WPA2; 64/128/152-bit WEP; TKIP/AES
Frequency	2.4 ~ 2.4835GHz
	5.150 ~ 5.850GHz
Spread Spectrum	Direct Sequence Spread Spectrum (DSSS)
Power Consumption	Typically 685mA in full Transmit (TX), 515mA in full Receive
	(RX)
Safety & Emissions	FCC, CE

Environmental and Physical		
Operating Temp.	0°C~40°C (32°F~104°F)	
Storage Temp.	-40°C− 70°C (-40°F ~158°F)	
Humidity	10% - 95% RH, Non-condensing	

Appendix B: Glossary

- > 2x to 3x eXtended Range[™] WLAN Transmission Technology The WLAN device with 2x to 3x eXtended Range[™] WLAN transmission technology make its sensitivity up to 105 dBm, which gives users the ability to have robust, longer-range wireless connections. With this range-enhancing technology, a 2x to 3x eXtended Range[™] based client and access point can maintain a connection at as much as three times the transmission distance of traditional 802.11b and 802.11g products, for a coverage area that is up to nine times greater. A traditional 802.11b and 802.11g product transmission distance is about 300m, A TP-LINK 2x to 3x eXtended Range[™] based client and access point can maintain a connection transmission distance may be up to 830m.
- 802.11b The 802.11b standard specifies a wireless product networking at 11 Mbps using direct-sequence spread-spectrum (DSSS) technology and operating in the unlicensed radio spectrum at 2.4GHz, and WEP encryption for security. 802.11b networks are also referred to as Wi-Fi networks.
- 802.11g specification for wireless networking at 54 Mbps using direct-sequence spread-spectrum (DSSS) technology, using OFDM modulation and operating in the unlicensed radio spectrum at 2.4GHz, and backward compatibility with IEEE 802.11b devices, and WEP encryption for security.
- 802.11a specification for wireless networking at 54 Mbps using OFDM modulation and operating in radio band at 5GHz.
- Ad-hoc Network An ad-hoc network is a group of computers, each with a wireless adapter, connected as an independent 802.11 wireless LAN. Ad-hoc wireless computers operate on a peer-to-peer basis, communicating directly with each other without the use of an access point. Ad-hoc mode is also referred to as an Independent Basic Service Set (IBSS) or as peer-to-peer mode, and is useful at a departmental scale or SOHO operation.
- DSSS (Direct-Sequence Spread Spectrum) DSSS generates a redundant bit pattern for all data transmitted. This bit pattern is called a chip (or chipping code). Even if one or more bits in the chip are damaged during transmission, statistical techniques embedded in the receiver can recover the original data without the need for retransmission. To an unintended receiver, DSSS appears as low power wideband noise and is rejected (ignored) by most narrowband receivers. However, to an intended receiver (i.e. another wireless LAN endpoint), the DSSS signal is recognized as the only valid signal, and interference is inherently rejected (ignored).
- FHSS (Frequency Hopping Spread Spectrum) FHSS continuously changes (hops) the carrier frequency of a conventional carrier several times per second according to a pseudo-random set of channels. Because a fixed frequency is not used, and only the transmitter and receiver know the hop patterns, interception of FHSS is extremely difficult.
- Infrastructure Network An infrastructure network is a group of computers or other devices, each with a wireless adapter, connected as an 802.11 wireless LAN. In infrastructure mode, the wireless devices communicate with each other and to a wired network by first going

through an access point. An infrastructure wireless network connected to a wired network is referred to as a Basic Service Set (BSS). A set of two or more BSS in a single network is referred to as an Extended Service Set (ESS). Infrastructure mode is useful at a corporation scale, or when it is necessary to connect the wired and wireless networks.

- Spread Spectrum Spread Spectrum technology is a wideband radio frequency technique developed by the military for use in reliable, secure, mission-critical communications systems. It is designed to trade off bandwidth efficiency for reliability, integrity, and security. In other words, more bandwidth is consumed than in the case of narrowband transmission, but the trade off produces a signal that is, in effect, louder and thus easier to detect, provided that the receiver knows the parameters of the spread-spectrum signal being broadcast. If a receiver is not tuned to the right frequency, a spread-spectrum signal looks like background noise. There are two main alternatives, Direct Sequence Spread Spectrum (DSSS) and Frequency Hopping Spread Spectrum (FHSS).
- SSID A Service Set Identification is a thirty-two character (maximum) alphanumeric key identifying a wireless local area network. For the wireless devices in a network to communicate with each other, all devices must be configured with the same SSID. This is typically the configuration parameter for a wireless PC card. It corresponds to the ESSID in the wireless Access Point and to the wireless network name. See also Wireless Network Name and ESSID.
- WEP (Wired Equivalent Privacy) A data privacy mechanism based on a 64-bit or 128-bit or 152-bit shared key algorithm, as described in the IEEE 802.11 standard.
- Wi-Fi A trade name for the 802.11b wireless networking standard, given by the Wireless Ethernet Compatibility Alliance (WECA, see http://www.wi-fi.net), an industry standards group promoting interoperability among 802.11b devices.
- WLAN (Wireless Local Area Network) A group of computers and associated devices communicate with each other wirelessly, which network serving users are limited in a local area.
- > WPA (Wi-Fi Protected Access) A wireless security protocol use TKIP (Temporal Key Integrity Protocol) encryption, which can be used in conjunction with a RADIUS server.