

# TL-WN851N Wireless N PCI Adapter



2.4GHz Draft 11n/g/b

Rev: 1.0.1 1910010039

# **COPYRIGHT & TRADEMARKS**

Specifications are subject to change without notice. **TP-LINK**<sup>®</sup> is a registered trademark of TP-LINK TECHNOLOGIES CO., LTD. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-LINK TECHNOLOGIES CO., LTD. Copyright © 2008 TP-LINK TECHNOLOGIES CO., LTD. All rights reserved.

http://www.tp-link.com

# FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to pro-vide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not in-stalled and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

# **CE Mark Warning**

# **C€1588**①

This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

# **National Restrictions**

#### 2400.0-2483.5 MHz

Country	Restriction	Reason/remark
Pulgorio		General authorization required for outdoor use and
Bulgaria		public service
	Outdoor use limited to 10 mW	Military Radiolocation use. Refarming of the 2.4 GHz
France	e.i.r.p. within the band	band has been ongoing in recent years to allow current
	2454-2483.5 MHz	relaxed regulation. Full implementation planned 2012
lt-h.		If used outside of own premises, general authorization
Italy		is required
Luxombourg	None	General authorization required for network and service
Luxembourg	None	supply(not for spectrum)
		This subsection does not apply for the geographical
Norway	Implemented	area within a radius of 20 km from the centre of
		Ny-Ålesund
Russian Federation		Only for indoor applications

**Note:** It not used outdoors in France.

Package Contents1		
Chapter 1 Introduction	2	
1.1 Overview of the Product	2	
1.2 Features	2	
1.3 LED Status		
Chapter 2 Installation Guide	4	
2.1 Hardware Installation	4	
2.2 Software Installation	4	
2.2.1 Overview	4	
2.2.2 Software Installation for Windows XP	4	
Chapter 3 Configuration	11	
3.1 Current Status	11	
3.2 Profile Management	13	
3.2.1 Add or Modify a Configuration Profile	13	
3.2.2 Remove a profile		
3.2.3 Switch another Profile		
3.2.4 Export a Profile	19	
3.2.5 Import a Profile		
3.2.6 Scan Available Networks	20	
3.2.7 Auto Profile Selection Management	20	
3.3 Diagnostics	21	
3.3.1 Check Driver Information	22	
3.3.2 Check Receive and Transmit Statistical Information	22	
3.4 Configuration for Windows Vista	23	
Appendix A: Specifications		
Appendix B: Glossary		

# CONTENTS

# **Package Contents**

The following items should be found in your package:

- > One TL-WN851N Wireless N PCI Adapter
- > Quick Installation Guide
- > One resource CD for TL-WN851N, including:
  - TP-LINK Wireless N Client Utility (11NWCU) and Drivers
  - User Guide
  - Other Helpful Information

#### P Note:

Make sure that the package contains the above items. If any of the listed items are damaged or missing, please contact with your distributor.

#### **Conventions:**

The 'Adapter' mentioned in this user guide stands for TL-WN851N Wireless N PCI Adapter without any explanations.

# **Chapter 1 Introduction**

Thank you for choosing the TL-WN851N Wireless N PCI Adapter!

#### 1.1 Overview of the Product

The adapter is a draft 802.11n client device; it is designed to provide a high-speed and unrivaled wireless performance for your notebook. With a faster wireless connection, you can get a better Internet experience, such as downloading, gaming, video streaming and so on.

With the 802.11n technology, higher throughput improvements using MIMO (multiple input, multiple output antennas), the TL-WN851N's auto-sensing capability allows high packet transfer rate of up to 300Mbps for maximum throughput. It has good capability on anti-jamming, and it can also interoperate with other wireless (802.11b) products. The adapter supports WEP, WPA and WPA2 encryption to prevent outside intrusion and protect your personal information from being exposed.

The adapter is easy to install and manage. The Quick Setup Wizard guides you step-by-step through the installation process; the TP-LINK Wireless N Client Utility helps you create a wireless connection immediately.

With unmatched wireless performance, reception, and security protection, the TL-WN851N is the best choice for easily adding or upgrading wireless connectivity to your notebook computer.

#### 1.2 Features

- Complies with IEEE802.11n (draft), IEEE802.11g, IEEE802.11b standards
- Supports WPA/WPA2 data security, IEEE802.1x authentication, TKIP/AES encryption, 64/128/152-bit WEP encryption
- Supports high rate of up to 300Mbps for maximum throughput, supports automatically adjust to lower speeds due to distance or other operating limitations
- Provides 32-bit PCI interface
- > Supports Ad-Hoc and Infrastructure modes
- Good capability on anti-jamming
- > Supports roaming between access points when configured in Infrastructure mode
- > Ease to configure and provides monitoring information
- Supports Windows 2000, XP, Vista
- Built-in two internal antennas which are listed in a format of 2x2 for two receivers and two transmitters.

### 1.3 LED Status

LED Indications	Status	Working Status
Status Green	Flashing Alternately	The adapter is trying to scan a networking
Activity Green		connection.
Status Green	Intermittently	The adapter is already connected but is not
Activity Green		transmitting or receiving data.
Status Green	Flashing	The adapter is transmitting or receiving data
Activity Green		The adapter is transmitting or receiving data.

# **Chapter 2 Installation Guide**

### 2.1 Hardware Installation

To install the adapter, follow these steps listed below:

- 1. Turn off your desktop PC and disconnect the power.
- 2. Remove your PC case and locate an available PCI slot on the mianboard. Remove the metal slot cover on the back of the PC. Check with your computer manufacturer for instructions if needed.
- 3. Slide the PCI Adapter into the PCI slot. Make sure that all of its pins are touching the slot's contacts. Once the adapter is firmly in place, secure its fastening tab to your PC's chassis with a mounting screw. Then, close your PC case.
- 4. Reconnect your PC's power and turn on your desktop PC.

### 2.2 Software Installation

#### 2.2.1 Overview

The Adapter's Setup Wizard will guide you through the Installation procedure for Windows 2000, XP and Vista. The Setup Wizard will install the TP-LINK Wireless N Client Utility (11NWCU) and drivers.

When you install the hardware prior to before installing the software, the system will prompt "Found New Hardware Wizard", click **Cancel**, and run the Setup Wizard program on the CD-ROM.

The Setup steps for Windows 2000, XP and Vista are very similar. The following setup steps are for Windows XP.

#### 2.2.2 Software Installation for Windows XP

 Insert the Resource CD into your CD-ROM drive, and open the folder with the same name as your product. Then double-click Setup.exe in the proper folder according to your operating system to start the installation. After that, Figure 2-1 will appear. You can click Cancel to end the installation in the screen above.

TP-LINK Wireless N Client Utility - InstallShield 🔳 🗖 🔀
Preparing Setup Please wait while the InstallShield Wizard prepares the setup.
TP-LINK Wireless N Client Utility Setup is preparing the InstallShield Wizard, which will guide you through the rest of the setup process. Please wait.
InstallShieldCancel

Figure 2-1

2. Soon, Figure 2-2 will display after a moment. Click **Next** to continue.

TP-LINK Wireless N Cl	lient Utility	×
	TP-LINK Wireless N Client Utility	
	This program installs the driver and client utilities for your TP-LINK Wireless N Adapter.	
< <u>B</u> ack <u>Next</u> > Cancel		

#### Figure 2-2

 After that, you should choose a Setup type. It is recommended that you select Install Client Utilities and Driver. Select Install Driver Only to install driver only, select Make Driver Installation Diskette(s) to make the diskette(s) as the installation driver (shown in Figure 2-3). Click Next to continue.

TP-LINK Wireless N Client Utility	×
Setup Type Select the setup type that best suits your needs.	
Click the type of setup you prefer.	
Install Client Utilities and Driver Install Driver Only Make Driver Installation Diskette(s)	Description Choose this option to install the driver and client utilities. This is the recommended option.
InstallShield	k <u>N</u> ext > Cancel

Figure 2-3

4. Click **Browse** to change the destination location for the software, then click **Next** in the screen below (shown in Figure 2-4).

TP-LINK Wireless N Client Utility	
Choose Destination Location Select the folder where the installation program will install the files.	
The installation program will install the client utilities in the following location:	
C:\\TP-LINK\TP-LINK Wireless N Client Utility	B <u>r</u> owse
Instalionielo	Cancel



 After that, select the program folder, you should create a new folder name or select one from the Existing Folders list. It is recommended that you keep the default setting. Click Next to continue the installation.

TP-LINK Wireless N Client Utility	×	
Select Program Folder Select a program folder.	1	
The installation program will add program icons to the Program Folder listed below. You may enter a new folder name or select one from the Existing Folders list.		
Program Folder:		
TP-LINK\TP-LINK Wireless N Client Utility		
Existing Folders:		
CoreIDRAW Graphics Suite 12 EONE! Microsoft Office		
Nero Snaglt 7		
SolidConvertPDF		
Symantec Client Security TP-LINK		
InstallShield		
< <u>B</u> ack <u>N</u> ext > Cancel		

Figure 2-5

6. Choose configuration tool, if you are not sure, please leave it default. Then click **Next** to continue.

TP-LINK Vireless N Client Utility	
Choose Configuration Tool	P.C.
Which tool will you use to configure your client adapter?	
<ul> <li>TP-LINK Wireless N Client Utility and Supplicant.</li> <li>Third-Party Supplicant</li> </ul>	
InstallShield <u>Rext &gt;</u>	Cancel

Figure 2-6

7. Click **OK** to continue the Installation on the screen below.

TP-	TP-LINK Wireless N Client Utility			
4	The installation program installs the driver automatically when the client adapter is inserted. Insert the adapter now if it is not yet inserted, cancel the Found New Mardware Wizard if it appears, and proceed with the installation. Click OK to continue.	£		
	OK			
	Figure 2-7			
8.	Wait a while for the setup as shown in Figure 2-8.			

TP-LINK Wireless W Client Utility	×
Setup Status	
TP-LINK Wireless N Client Utility is configuring your new software installation.	
Installing the driver files	
C:\temp\devcon.exe	
InstallShield	
Cancel	

Figure 2-8

P Note:

 For Windows XP, the Setup Wizard will notify you of how to proceed with the installation during these steps (shown in Figure 2-9). Our drivers have been tested thoroughly, and are able to work with the operating system. Click **Continue Anyway** to continue the Installation.





2) In Windows 2000, the warning screen is shown below (Figure 2-10), and please select **Yes** to continue installation.

Digital Signature Not Found		
	The Microsoft digital signature affirms that software has been tested with Windows and that the software has not been altered since it was tested. The software you are about to install does not contain a Microsoft digital signature. Therefore, there is no guarantee that this software works correctly with Windows. TP-LINK Wireless N Adapter If you want to search for Microsoft digitally signed software, visit the Windows Update Web site at http://windowsupdate.microsoft.com to see if one is available. Do you want to continue the installation?	
	Yes <u>N</u> o <u>M</u> ore Info	

Figure 2-10

9. After all the steps above, you will see the screen below, click **Finish** to complete the installation.

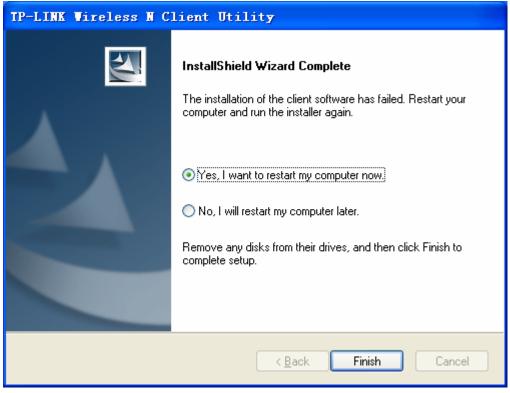


Figure 2-11

# **Chapter 3 Configuration**

TP-LINK TL-WN851N can be configured by TP-LINK Wireless N Client Utility (11NWCU). This chapter describes how to configure your Adapter for wireless connectivity on your Wireless Local Area Network (WLAN) and use the data security encryption features.

After Installing the Adapter, the Adapter's tray icon **u** will appear in your system tray. It appears at the bottom of the screen, and shows the signal strength using color and the received signal strength indication (RSSI).

- Ill If the icon is gray, there is no connection.
- $\mathbf{III}$  If the icon is red, there is poor signal strength and the RSSI is less than 5dB.
- If the icon is yellow, there is poor signal strength and the RSSI is between 5dB and 10dB.
- If the icon is green, there is good signal strength and the RSSI is between 10dB and 20dB.
- If the icon is green, there is excellent signal strength and the RSSI is more than 20dB.

Double-click the icon and the **11NWCU** will run. You can also run the utility by clicking the **Start** →**Program**→**TP-LINK**→ **TP-LINK** Wireless N Client Utility→**TP-LINK** Wireless N Client Utility. The 11NWCU provides some integrated and easy tools to:

- Display current status information
- Edit and add configuration profiles
- Display current diagnostics information

The section below introduces these above capabilities.

#### 3.1 Current Status

The Current Status tab contains general information about the program and its operations. The Current Status tab needn't any configurations.

🐨 TP-LINK Wireless N C	lient Utility -	Current Profile: Default	?×
<u>A</u> ction <u>O</u> ptions <u>H</u> elp			
Current Status Profile Management	Diagnostics		
WIRELESS Profile Name:	Default	ATHEROS	
Link Status:	Associated	Network Type: Infrastructure	
Wireless Mode:	2.4 GHz 54 Mbps	Control Channel: 6 Extension Channel:	
Server Based Authentication:	None	Data Encryption: None	
IP Address:	192.168.1.101		
Signal Strength:		Excellent	
		Advanced	

Figure 3-1

The following table describes the items found on the Current Status screen.

- Profile Name This shows the name of current selected configuration profile. The configuration of Profile name will be described on the General tab of Profile Management.
- > Link Status This shows whether the station is associated to the wireless network.
- > Wireless Mode Here displays the wireless mode.
- Network Type The type of network and the station currently connected are shown here. The options include:
  - Infrastructure (access point)
  - Ad Hoc

P Note:

You can configure the network type and wireless mode on the **Advanced** tab of **Profile Management**.

- > IP Address This displays the computer's IP address.
- > **Control Channel -** This shows the currently connected channel.
- Data Encryption Here displays the encryption type the driver is using. You can configure it on the Security tab of Profile Management.
- Server Based Authentication This shows whether the server based authentication is used.
- > Signal Strength This shows the strength of the signal.

Click **Advanced** on the screen above, you can see advanced information about the program and its operations.

#### 3.2 Profile Management

Click the Profile Management tab of the **11NWCU** and the next screen will appear (shown in Figure 3-2). The Profile Management screen provides tools to:

- > Add a new profile
- Modify a profile
- Remove a profile
- Activate a Profile
- Import a Profile
- Export a Profile
- Scan Available Networks
- Order profiles

🥶 TP-LINK Wireless N Client Utility - Current Profile: Def	ault 🛛 🛛 🔀
<u>A</u> ction <u>O</u> ptions <u>H</u> elp	
Current Status Profile Management Diagnostics	
Cefault	<u>N</u> ew
	Modify
	Remo <u>v</u> e
	Activate
Details	
Network Type: Infrastructure	Import
Security Mode: Disabled	
Network Name 1 (SSID1): <empty></empty>	Export
Network Name 2 (SSID2): <empty></empty>	Scan
Network Name 3 (SSID3): <empty></empty>	
Auto Select Profiles	Order Profiles
Disable WLAN if LAN is Connected	

Figure 3-2

#### 3.2.1 Add or Modify a Configuration Profile

To add a new configuration profile, click **New** on the Profile Management tab. To modify a configuration profile, select the configuration profile from the Profile list and click **Modify**. Then you will see the Management dialog box (shown in Figure 3-3).

#### 1. Edit the General tab

- Profile Name Please enter the Profile name which identifies the configuration profile. This name must be unique. Note that the profile names are not case-sensitive.
- > Client Name Please enter the Profile name which identifies the client machine.
- Network Names (SSIDs) Please enter the IEEE 802.11 wireless network name. This field has a maximum limit of 32 characters.

TL-WN851N

Profile Management	? 🔀
General Security Advance	ed
Profile Settings	
Profile Name:	NewProfile
Client Name:	NewClient
Network Names	
SSID1:	test
SSID2:	
SSID3:	
	OK Cancel

Figure 3-3

#### 2. Edit the Security tab

Select the Security tab in the screen above, and then you can edit the fields to configure the profile. To define the security mode, select the radio button of the desired security mode as follows.

Profile Management		?×
General Security Advanced		
Set Security Options		
O WPA/WPA2	WPA/WPA2 EAP Type: LEAP	
🔿 WPA/WPA2 Passphrase		
◯ 802.1×	802.1x EAP Type: LEAP	
Pre-Shared Key (Static WEP)		
◯ None		
Configure	Allow Association to Mixed Cells Profile Locked	
	Limit Time for Finding Domain Controller To: 0	
Group Policy Delay:	0 🔷 sec	
	ОК С	ancel

Figure 3-4

- > WPA/WPA2: Wi-Fi Protected Access.
- > WPA/WPA2 Passphrase: Wi-Fi Protected Access Passphrase.
- **802.1x:** Enables 802.1x security.
- Pre-Shared Key (Static WEP): Enables the use of shared keys that are defined on both the access point and the station. To define shared encryption keys, choose the Shared Key radio button and click Configure to fill in the Define Shared Keys window (shown in Figure 3-5).

#### Note:

The **WEP** security mode is not available for 802.11n.

> **None:** No security (not recommended).

#### P Note:

If the access point which the Adapter is associated has WEP set and the client has WEP enabled, make sure that **Allow Association to Mixed Cells** is checked on the Security tab to allow association. To complete WEP encryption configuration, you must select the 802.11 Authentication Mode as appropriate on the **Advanced** tab of this **Profile Management** dialog.

To configure the Encryption Keys under the Pre-Shared keys (Static WEP) Security mode:

Configure Pre-Shared Key Entry O Hexadecimal (0-9, A		◯ ASCII Text (all keyboard ch	naracter	s)	?×
Encryption Keys				P Key S	
Transmit K	(ey		64	128	152
WEP Key 1: 🧿	0123456789		۲	0	0
WEP Key 2: 🔘			۲	0	0
WEP Key 3: 🔘			۲	0	0
WEP Key 4: 🔘			۲	0	0
		ОК		C.	ancel

Figure 3-5

#### Solution Note:

Select different **Security Options**, the configurations are different; you can select the appropriate security option and configure the exact key as your need.

#### 3. Edit the Advanced tab

This screen below allows you to make advanced configuration for the profile.

Profile Management	? 🔀
General Security Advanced	
Power Save Mode: Normal Network Type: Infrastructure	
Wireless Mode	Wireless Mode When Starting Ad Hoc Network
2.4 GHz 300 Mbps	
🗹 2.4 GHz 54 Mbps	O 2.4 GHz 11 Mbps
☑ 2.4 GHz 11 Mbps	○ 2.4 GHz 54 Mbps Channel: Auto
	802.11 Authentication Mode
	O Auto O pen System O Shared Key
Roaming: Default 💌	Preferred APs
	OK Cancel

#### Figure 3-6

- > **Power Save Mode -** Please select the power save mode in the drop-down list.
  - Maximum Selects maximum mode to let the access point buffer incoming messages for the Adapter. The Adapter will detect the access point if any messages are waiting periodically.
  - **Normal** Normal mode uses maximum when retrieving a large number of packets, then switches back to power save mode after retrieving the packets.
  - Off Turns power saving off, thus powering up the Wireless PCI Adapter continuously for a short message response time.
- > **Network Type:** There are basically two modes of networking:
  - Infrastructure All wireless clients will connect to an access point or wireless router.
  - Ad-Hoc Directly connecting to another computer, for peer-to-peer communication, using wireless network adapters on each computer, such as two or more TL-WN851N wireless adapters.

#### Note:

- 1) An Infrastructure network contains an Access Point or wireless router. All the wireless devices or clients will connect to the wireless router or access point.
- 2) An Ad-Hoc network contains only clients, such as laptops with wireless desktop adapters. All the adapters must be in Ad-Hoc mode to communicate.
- Wireless Mode: Specifies 2.4 GHz 300 Mbps, 2.4 GHz 54 Mbps or 2.4 GHz 11 Mbps operation in an access point network. The Wireless adapter must match the wireless mode of the access point with which it associates.

- Wireless Mode when Starting an Ad Hoc Network: Specifies 2.4 GHz 300/54/11 Mbps to start an Ad Hoc network if no matching network name is found after scanning all available modes. This mode also allows the selection of the channel that the Wireless Adapter uses. The channels available depend on the regulatory domain. If the adapter finds no other ad hoc adapters, the channel that the adapter starts the ad hoc network with will be selected automatically. The Adapter must match the wireless mode and channel of the clients it associates.
- 802.11 Authentication Mode: Select which mode the Adapter uses to authenticate to an access point:
  - **Automatic** causes the adapter to attempt authentication using shared, but switches it to open authentication if shared fails.
  - **Open System** enables an adapter to attempt authentication regardless of its WEP settings. It will only associate with the access point if the WEP keys on both the adapter and the access point match.
  - **Shared-key** only allows the adapter to associate with access points that have the same WEP key.

For infrastructure (access point) networks, click **Preferred APs...** to specify four access points at most to the client adapter that attempts to be associated to the access points. The four access points have different priorities; the frontal has the higher priority.

Preferred Access Points	? 🔀
Specified Access Point MAC Addresse	8
Access Point 1:	
Access Point 2:	
Access Point 3:	
Access Point 4:	
	OK Cancel

Figure 3-7

#### 3.2.2 Remove a profile

- 1. Go to the Profile Management tab (shown in Figure 3-2).
- 2. Select the profile name in the Profiles List.
- 3. Click Remove.

#### P Note:

The profile being used can't be removed.

#### 3.2.3 Switch another Profile

1. Go to the Profile Management screen (shown in Figure 3-2).

- 2. Select the profile name required in the Profiles List.
- 3. Click Activate.

#### 3.2.4 Export a Profile

- 1. From the Profile Management screen (shown in Figure 3-2), highlight the profile to export.
- 2. Click **Export...**, the Export Profile window will then appear below.
- 3. Browse the directory to export the profile to.
- 4. Click Save. The profile should then be exported to the specified location.

Export Profi	le		? 🗙
Save in: ն	TP-LINK Wireless N Client Utility	🔽 🔾 🦻	۶ 🖽
i Manual			
File <u>n</u> ame:	Default		<u>S</u> ave
Save as <u>t</u> ype:	Config files (*.prf)	~	Cancel

Figure 3-8

#### 3.2.5 Import a Profile

- 1. From the Profile Management screen (shown in Figure 3-2), click **Import...**. Then the Import Profile will appear below.
- 2. Browse to the directory where the profile is located.
- 3. Highlight the profile name.
- 4. Click **Open**, the imported profile will then appear in the Profiles List.

Import Profi	le		? 🔀
Look jn: ն	TP-LINK Wireless N Client Utility	🗸 🔾 💆	📂 🎹 •
C Manual C Default NewProfile			
File <u>n</u> ame:	Default		<u>O</u> pen
Files of <u>t</u> ype:	Config files (*.prf)	*	Cancel

Figure 3-9

#### 3.2.6 Scan Available Networks

- 1. Click **Scan** on the Profile Management screen (shown in Figure 3-2), the Available Infrastructure and Ad Hoc Networks window will appear below.
- 2. Click **Refresh** to refresh the list at any time.
- Highlight a network name and click Activate to connect to an available network. If no configuration profile exists for that network, the Profile Management window will open the General tab screen. Fill in the Profile name and click OK to create the configuration profile for that network.

Available Infrastructure and	Ad Hoc Networks	? 🛛
Network Name (SSID) 🔞 👔 test 👗 TP-LINK	11n     Super     XR     Signal Strength       Image: Strength	Channel         W           6         2.           6         2.
<		>
	Activate Refresh	ОК

Figure 3-10

#### 3.2.7 Auto Profile Selection Management

The auto selection feature allows the adapter to automatically select a profile from the list of profiles and use it to connect to the network. To add a new profile into the Auto Selected Profiles list, please follow these steps.

- 1. On the Profile Management screen (shown in Figure 3-2), click Order Profiles....
- 2. The Auto Profiles Selection management window will appear (shown in Figure 3-11) with a list of all created profiles in the Available Profiles.

Auto Profile Selection Management	? 🛛
Available Profiles:	Add
Auto Selected Profiles:	
Default	Move up
	Move down
	Remove
OK	Cancel

#### Figure 3-11

- 3. Highlight the profiles to add to auto profile selection, and click **Add**. The profile will appear in the Auto Selected Profiles box.
- 4. Highlight a profile in the Auto Selected Profiles box.
- 5. Click **Move Up** or **Move Down** as appropriate.

#### P Note:

The first profile in the Auto Selected Profiles box has highest priority, while the last profile has the lowest priority.

- 6. Click OK.
- 7. Check the **Auto Select Profiles** checkbox on the **Profile Management** tab (shown in Figure 3-2).

#### P Note:

When auto profile selection is enabled by checking **Auto Select Profiles** on the **Profile Management** tab, the client adapter will scan for an available network. The profile with the highest priority and the same SSID as one of the found networks will be used to connect to the network. If the connection fails, the client adapter will try the next highest priority profile that matches the SSID until an available network is found.

#### 3.3 Diagnostics

The **Diagnostics** tab of the TP-LINK Wireless N Client Utility (11NWCU) provides buttons used to retrieve receiving and transmitting statistics. The Diagnostics tab does not require any configuration.

The Diagnostics tab lists the following receiving and transmitting diagnostics for frames received or transmitted by the wireless network adapter:

- Multicast frames transmitted and received
- Broadcast frames transmitted and received

- Unicast frames transmitted and received
- Total bytes transmitted and received

🐨 TP-LINK Vireless	N Client	Utility	- Current Profile:	Default	?×
<u>Action</u> Options <u>H</u> elp					
Current Status Profile Mana	gement Diagr	nostics			
_ Transmit					
Multicast Packets:	0			Adapter Information	
Broadcast Packets:	0			Advanced Statistic	5
Unicast Packets:	2				
Total Bytes:	133				
Receive					
Multicast Packets:	0				
Broadcast Packets:	1				
Unicast Packets:	1				
Total Bytes:	89				
			)		

Figure 3-12

#### 3.3.1 Check Driver Information

Click the **Adapter Information** button in the screen above, you will see the adapter information, including general information about the wireless network adapter and the Network Driver Interface Specification (NDIS) driver. Access the adapter information from the Diagnostics tab.

- > Card Name The name of the wireless network adapter.
- > MAC Address The MAC address of the wireless network adapter.
- > Driver The driver name and path of the wireless network adapter driver.
- > Driver Version The version of the wireless network adapter driver.
- > Driver Date The creation date of the wireless network adapter driver.
- > Client Name The name of the client computer.

#### 3.3.2 Check Receive and Transmit Statistical Information

The **Advanced Statistics** show receiving and transmitting statistical information about the following receiving and transmitting diagnostics for frames received by or transmitted to the wireless network adapter.

**TL-WN851N** 

vanced Statistics			ſ
Transmit			
Frames Transmitted OK:	17	RTS Frames:	0
Frames Retried:	20	CTS Frames:	0
Frames Dropped:	0	No CTS Frames:	0
No ACK Frames:	76	Retried RTS Frames:	0
ACK Frames:	17	Retried Data Frames:	20
Receive			
Beacons Received:	1241	Authentication Time-Out:	0
Frames Received OK:	2	Authentication Rejects:	0
Frames Received with Errors:	1139	Association Time-Out:	0
CRC Errors:	5551	Association Rejects:	0
Encryption Errors:	0	Standard MIC OK:	0
Duplicate Frames:	3	Standard MIC Errors:	0
AP Mismatches:	0	CKIP MIC OK:	0
Data Rate Mismatches:	0	CKIP MIC Errors:	0
			ОК

Figure 3-13

#### 3.4 **Configuration for Windows Vista**

After the Adapter's driver has been installed, Windows Vista will display a wireless Network Connection message like this one.


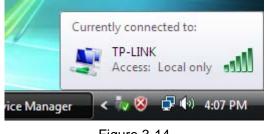


Figure 3-14

Icon 🔟 ıll means the connection has been established. Icon means there is no connection.

To establish a connection, please follow the steps below.

Right-click the icon in your system tray, then click **Connect to a network**. 1.

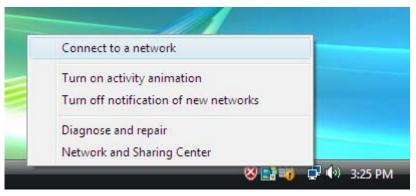




2. The following screen will show you available wireless networks. Highlight the one you want to join, and then click **Connect**.

🌀 👰 Connect to a network	:	
Select a network to	connect to	
Show Wireless	•	<b>4</b> 7
TP-LINK	Security-enabled network	· Illee
TP-LINK	Diagnose ork	lite.
💐 huangqian	Security-enabled network	lite.
<u>Set up a connection or network</u> Open Network and Sharing Center		
		Connect Cancel

Figure 3-16

3. To continue, click **Connect Anyway**. Click the **Cancel** button to end the connection.

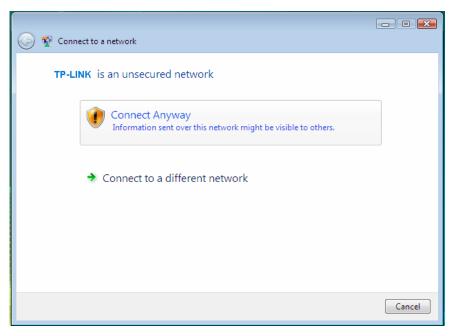

#### Figure 3-17

TL-WN851N

4. If the connection is successful established, the following screen will appear, click **close** to finish the connection.

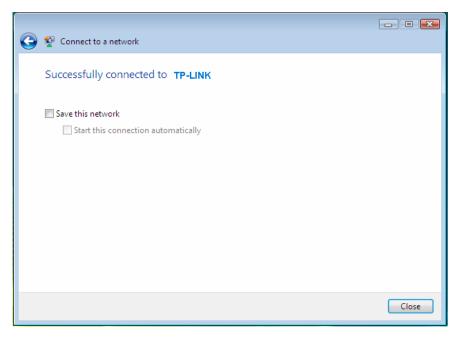


Figure 3-18

# **Appendix A: Specifications**

Normal	
Interface	32 bit PCI Interface
Standards	IEEE802.11n (draft); IEEE802.11g; IEEE802.11b;
Operating System	Windows 2000, XP, Vista
Throughput	300Mbps (Maximal)
Radio Data Rate	27/54/81/108/162/216/243/270Mbps
	13.5/27/40.5/54/81/108/121.5/135Mbps
	13/26/39/52/78/104/117/130Mbps
	6.5/13/19.5/26/39/52/58.5/65Mbps
	1/2/5.5/11Mbps
	(Auto Rate Sensing)
Modulation	11b:CCK,QPSK,BPSK;
	11g:OFDM;
	11n: QPSK,BPSK,16-QAM,64-QAM
Media Access Protocol	CSMA/CA with ACK
Transmit Power	19dBm (Maximal)
Data Security	WPA/WPA2; 64/128/152-bit WEP; TKIP/AES
Frequency	2.4 ~ 2.4835GHz
Spread Spectrum	Direct Sequence Spread Spectrum (DSSS)
Safety & Emissions	FCC, CE

Environmental and Physical		
Operating Temp.	0°C~40°C (32°F~104°F)	
Storage Temp.	-40℃~ 70℃ (-40°F~158°F)	
Humidity	10% ~ 95% RH, Non-condensing	

- 802.11b The 802.11b standard specifies a wireless product networking at 11 Mbps using direct-sequence spread-spectrum (DSSS) technology and operating in the unlicensed radio spectrum at 2.4GHz, and WEP encryption for security. 802.11b networks are also referred to as Wi-Fi networks.
- 802.11g specification for wireless networking at 54 Mbps using direct-sequence spread-spectrum (DSSS) technology, using OFDM modulation and operating in the unlicensed radio spectrum at 2.4GHz, and backward compatibility with IEEE 802.11b devices, and WEP encryption for security.
- 802.11n 802.11n builds upon previous 802.11 standards by adding MIMO (multiple-input multiple-output). MIMO uses multiple transmitter and receiver antennas to allow for increased data throughput via spatial multiplexing and increased range by exploiting the spatial diversity, perhaps through coding schemes like Alamouti coding. The Enhanced Wireless Consortium (EWC)<sup>[3]</sup> was formed to help accelerate the IEEE 802.11n development process and promote a technology specification for interoperability of next-generation wireless local area networking (WLAN) products.
- Ad-hoc Network An ad-hoc network is a group of computers, each with a Wireless Adapter, connected as an independent 802.11 wireless LAN. Ad-hoc wireless computers operate on a peer-to-peer basis, communicating directly with each other without the use of an access point. Ad-hoc mode is also referred to as an Independent Basic Service Set (IBSS) or as peer-to-peer mode, and is useful at a departmental scale or SOHO operation.
- DSSS (Direct-Sequence Spread Spectrum) DSSS generates a redundant bit pattern for all data transmitted. This bit pattern is called a chip (or chipping code). Even if one or more bits in the chip are damaged during transmission, statistical techniques embedded in the receiver can recover the original data without the need of retransmission. To an unintended receiver, DSSS appears as low power wideband noise and is rejected (ignored) by most narrowband receivers. However, to an intended receiver (i.e. another wireless LAN endpoint), the DSSS signal is recognized as the only valid signal, and interference is inherently rejected (ignored).
- FHSS (Frequency Hopping Spread Spectrum) FHSS continuously changes (hops) the carrier frequency of a conventional carrier several times per second according to a pseudo-random set of channels. Because a fixed frequency is not used, and only the transmitter and receiver know the hop patterns, interception of FHSS is extremely difficult.
- Infrastructure Network An infrastructure network is a group of computers or other devices, each with a Wireless Adapter, connected as an 802.11 wireless LAN. In infrastructure mode, the wireless devices communicate with each other and to a wired network by first going through an access point. An infrastructure wireless network connected to a wired network is referred to as a Basic Service Set (BSS). A set of two or more BSS in a single network is referred to as an Extended Service Set (ESS). Infrastructure mode is useful at a corporation scale, or when it is necessary to connect the wired and wireless networks.
- > Spread Spectrum Spread Spectrum technology is a wideband radio frequency technique

developed by the military for use in reliable, secure, mission-critical communications systems. It is designed to trade off bandwidth efficiency for reliability, integrity, and security. In other words, more bandwidth is consumed than in the case of narrowband transmission, but the trade off produces a signal that is, in effect, louder and thus easier to detect, provided that the receiver knows the parameters of the spread-spectrum signal being broadcast. If a receiver is not tuned to the right frequency, a spread-spectrum signal looks like background noise. There are two main alternatives, Direct Sequence Spread Spectrum (DSSS) and Frequency Hopping Spread Spectrum (FHSS).

- SSID A Service Set Identification is a thirty-two character (maximum) alphanumeric key identifying a wireless local area network. For the wireless devices in a network to communicate with each other, all devices must be configured with the same SSID. This is typically the configuration parameter for a wireless PC card. It corresponds to the ESSID in the wireless Access Point and to the wireless network name. See also Wireless Network Name and ESSID.
- WEP (Wired Equivalent Privacy) A data privacy mechanism based on a 64-bit or 128-bit or 152-bit shared key algorithm, as described in the IEEE 802.11 standard. To gain access to a WEP network, you must know the key. The key is a string of characters that you create. When using WEP, you must determine the level of encryption. The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember. The ASCII string is converted to HEX for use over the network. Four keys can be defined so that you can change keys easily.
- Wi-Fi A trade name for the 802.11b wireless networking standard, given by the Wireless Ethernet Compatibility Alliance (WECA, see http://www.wi-fi.net), an industry standards group promoting interoperability among 802.11b devices.
- WLAN (Wireless Local Area Network) A group of computers and associated devices communicate with each other wirelessly, which network serving users are limited in a local area.
- WPA (Wi-Fi Protected Access) A wireless security protocol uses TKIP (Temporal Key Integrity Protocol) encryption, which can be used in conjunction with a RADIUS server.