



WD TV[®] Live Hub[™]

Media Center

User Manual



Table of Contents

1	Important User Information	1
	Important Safety Instructions	1
	WD® Service and Support	2
	Recording Your WD Product Information	3
	Registering Your WD Product	3
	Accessories	3
2	Product Overview	4
3	Features and Functions	6
	Features	6
	Connections	7
	Power Button and LED Indicator	8
	Remote Control	9
4	Getting Started	10
	Package Contents	10
	Installation Requirements	10
	Operating System Compatibility	10
	Installation Procedure	11
5	Operating the Media Center	23
	Using the Remote Control	23
	Using a USB Keyboard	24
	Using the Media Center Menu	26
	Media Library Compilation	29
	Locating Your Contents on the Drive	31
6	Watching Video	36
	Video Playback	36
	Videos Menu Options	38
	Video Playback Controls	42
	Video Playback Options	43
	DVD Navigation	47

7	Playing Music	49
	Music Playback	49
	Music Menu Options	51
	Music Playback Controls	53
	Music Playback Options	54
	Playing Music From Your iPod®	56
8	Viewing Photos	57
	Photo Display	57
	Digital Camera Support	59
	Photos Menu Options	60
	Photo Display Options	62
	Displaying Photo Thumbnails	63
	Displaying Photo Information	64
	Photo Slideshow	64
9	Files	66
	Files Options	67
10	Network Setup	68
	Ethernet Network (Wired) Setup	68
	Wireless Network Setup	71
	Checking the Network Connection	72
11	Network Services	74
	Accessing Media Content from the Network	74
	Share a Folder on Your Computer	78
	Using the Web UI	86
12	Internet Services	91
	Adding a Service to Favorites	94
	AccuWeather.com	95
	BLOCKBUSTER On Demand®	98
	CinemaNow	99
	Comedy Time	100
	Dailymotion	100
	Deezer	101
	Facebook	106
	Flickr	111

Flingo	118
Flixster	119
Hulu Plus (US only).	120
Live365	121
Netflix	128
Pandora (US only)	129
Picasa	135
SEC Digital Network.	141
SHOUTcast Radio	142
SnagFilms®	146
Spotify	147
TuneIn	153
Vimeo®	157
Vudu™	158
WatchMojo	159
XOS College Sports	159
Yota Music.	159
YouTube	160
YouTube Leanback	170

13 Games 171

Games Display.	171
------------------------	-----

14 RSS. 172

Reading RSS Feeds.	172
Adding RSS Feeds.	172

15 Setup and Advanced Features. 173

Setup Navigation Buttons	174
Audio/Video Output	174
Appearance	179
Video Settings	182
Music Settings	184
Photo Settings	185
Network.	187
Operation.	188
System	190
Mobile Access/WD Photos	197
About	200
Media Library	201

16 System Maintenance203

System Firmware Upgrade.....	203
Troubleshooting	205
Common Error Messages	208
FAQs	209

17 Appendix210

Multiformat Content Playback	210
Supported Formats	211
Regulatory Compliance	215
Warranty Information (All Regions Except Australia/New Zealand)	217
Warranty Information (Australia/New Zealand only).....	218
GNU General Public License ("GPL")	219
Spotify Third-Party Licenses.....	219

1

Important User Information

Important Safety Instructions

This device is designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated into this unit will protect you if you observe the following procedures for installation, use, and servicing.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Carefully read and follow the Quick Install Guide and User Manual.
- Do not operate this device outside the temperature range of 5°C–35°C (41°F–95°F).
- Do not drop or shake the device.
- Do not move the device when it is powered on.
- Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon them or against them.
- Do not overload wall outlets.

For additional safety information, refer to www.wdc.com.

WD® Service and Support

Should you encounter any problem, please give us an opportunity to address it before returning this product. Most technical support questions can be answered through our knowledge base or e-mail support service at <http://support.wdc.com>. If the answer is not available or, if you prefer, please contact WD at the best telephone number shown below.

Your product includes 30 days of free telephone support during the warranty period. This 30-day period starts on the date of your first telephone contact with WD technical support. E-mail support is free for the entire warranty period and our extensive knowledge base is available 24/7. To help us keep you informed of new features and services, remember to register your product online at <http://register.wdc.com>.

Accessing Online Support

Visit our product support website at <http://support.wdc.com> and choose from these topics:

- **Downloads** - Download drivers, software, and updates for your WD product.
- **Registration** - Register your WD product to get the latest updates and special offers.
- **Warranty & RMA Services** - Get Warranty, Product Replacement (RMA), RMA Status, and Data Recovery Information.
- **Knowledge Base** - Search by keyword, phrase, or answer ID.
- **Installation** - Get online installation help for your WD product or software.
- **WD Community** – Share your thoughts and connect with other users.

Contacting WD Technical Support

When contacting WD for support, have your WD product serial number, system hardware, and system software versions available.

North America		Europe (toll free)*	
English	800.ASK.4WDC (800.275.4932)		00800 ASK4 WDEU (00800 27549338)
Spanish	800.832.4778	Europe	+31 880062100
		Middle East	+31 880062100
Mexico	001 8002754932	Africa	+31 880062100
South America		Asia Pacific	
Chile	1230 020 5871	Australia	1 800 42 9861
Venezuela	0800 100 2855	China	800 820 6682/+65 62430496
Peru	0800-54003	Hong Kong	+800 6008 6008
Uruguay	000 413 598 3787	India	1 800 200 5789
Argentina	0800 4440839	Indonesia	+803 852 9439
Brazil	0800 7704932	Japan	0120 994 120 / 00531 65 0442
		Korea	02 703 6550
		Malaysia	+800 6008 6008/1 800 88 1908/ +65 62430496
		Philippines	1 800 1441 0159
		Singapore	+800 6008 6008/+800 608 6008/ +65 62430496
		Taiwan	+800 6008 6008/+65 62430496

* Toll free number available in the following countries: Austria, Belgium, Denmark, France, Germany, Ireland, Italy, Netherlands, Norway, Spain, Sweden, Switzerland, United Kingdom.

Recording Your WD Product Information

In the following table, write the serial and model numbers of your new WD product. You can find this information on the label on the bottom of the device. You should also note the date of purchase. This information may be required when requesting technical support.

Serial Number:
MAC Address:
Model Number:
Purchase Date:
System and Software Notes:

Registering Your WD Product

Your WD product includes 30 days of free technical support during the applicable warranty period for your product. The 30-day period commences on the date of your first telephone contact with WD technical support. Register your WD product online at <http://register.wdc.com>.

If your media center has an active network connection, you can register directly from the device using the supplied remote control (see “Using the Remote Control” on page 23) or a USB keyboard (see “Using a USB Keyboard” on page 24). Go to “Device Registration” on page 194 for instructions.

Accessories

For information on optional accessories for this product, visit:

US	www.shopwd.com or www.wdstore.com
Canada	www.shopwd.ca or www.wdstore.ca
Europe	www.shopwd.eu or www.wdstore.eu
All others	Contact WD Technical Support in your region. For a list of Technical Support contacts, visit http://support.wdc.com and see Knowledge Base Answer ID 1048.

2

Product Overview

Thank you for purchasing a WD TV Live Hub Media Center. This user manual provides step-by-step instructions for installing and using your new media center. For the latest WD product information and news, visit our website at www.westerndigital.com.

The best of the Internet on your HDTV – Stream hit movies, catch up on TV shows, watch the latest videos, and stay connected to your social network. Don't settle for online entertainment on your small computer screen. With the WD TV Live streaming media player, you can enjoy it all on your HDTV. See "Internet Services" on page 91 for more details.

Play all your personal media the easy way – Load up the high-capacity drive with all your media to create your own media jukebox. In a few clicks, you can play your home movies, share vacation slideshows, and play your music on the big screen and sound system in your living room.

Full-HD 1080p video playback; the perfect partner for your HDTV – This is the real thing; Full-HD 1080p playback. Sit back and enjoy the spectacular picture quality of brilliant high definition video and the crystal clear sound of digital audio. Use the included programmable remote control to make your entertainment choices using our crisp, animated navigation menus.

Play almost any type of media file – WD TV Live Hub supports a wide variety of the most popular file formats including HD camcorder video formats.

Your entertainment at your fingertips – Control your WD TV experience with the tap of a soft key or the swipe of a finger using the WD Remote™ app. Get one-touch access to your favorite online services, easy text input and a gesture pad for faster navigation to your favorite content. Download this free app from the Apple® App Store or the Android™ Market.

Shoot it on your mobile device. Share it on your HDTV – Download WD Photos™, a free photo and video app for your iPad®, iPhone®, iPod touch®, or Android smartphone. Take a photo or video clip with your mobile device and upload it directly to the built-in hard drive on your WD TV Live Hub media center. You can also access all the photos stored on your media center and show them off with your smartphone or tablet.

Centralize your media collection – You can store all your media in one place on the high-capacity drive in this system. The WD TV Live Hub media center finds and categorizes all the media on the built-in drive and any connected USB drives and displays it in one easy-to-view menu system. It's a breeze to access and enjoy your media when it's all in one place.

Access media anywhere on your home network – The Ethernet port lets you connect this media player to your home network so you can access and stream video, view photos, and play music from any Mac, PC, and network drive in your house.

Transfer files easily – Copy, move or delete files stored on a USB drive, a network drive, your camcorder, or a camera to the Live Hub built-in drive using the on-screen menus.

It's a multi-room media server streaming to any TV in your house – You can stream any file on the WD TV Live Hub media center to a WD TV Live Plus or WD TV Live media player or any DLNA/UPnP compatible TV, Blu-ray Disc™ player, or game console. The system is powerful enough to handle multiple streams so you can stream a movie to your Blu-ray Disc™ player, while viewing photos on your TV upstairs.

Bring the arcade to your HDTV – WD TV Live Hub brings casual games to your big screen TV. Test your skills with classic games such as Rockswap Adventures, Cosmox, Sudoku, and Memory.

Advanced navigation options

- Thumbnail, list, and preview modes – Browse your content by file name or by thumbnails of photos, album covers, video preview, and movie cover art.
- Media Library – This unique feature lets you view all your media by media type in one menu regardless of its location in folders or drives. You can view your content by categories such as genre, album, artist and date.
- Search – Search by genre, title, artist, filename and partial filename.

Photo viewing

- View photos as a slideshow with a variety of transitions and background music
- Zoom and pan
- Search by filename, partial filename, most recently viewed and date

Movie viewing

- Fast forward, reverse, pause, zoom, and pan
- View subtitles
- Search by filename, partial filename, most recently viewed and date

Music playback

- Fast forward, reverse, pause, shuffle, repeat
- Search by filename, partial filename, most recently viewed and date.

File Management

- Copy files between USB drives and transfer files between a USB drive connected to the media center and your computer.

S/PDIF digital output – The optical audio output sends digital signals to your AV receiver for the best surround sound experience.

Ultra-compact design - Fits easily into your entertainment center.

3

Features and Functions

Features

Menus

Your media is organized, categorized and ready to play – The WD TV Live Hub media center finds and categorizes all the media on the built-in drive and any connected USB drives and displays it in one easy-to-view menu system. If you have one of our My Book® Live™ network drives connected to your network, it will find the media on that, too.

Customize your media experience – Customizable screens, themes and favorites let you personalize the media experience for you and everyone and your home. The interface also remembers your last selection so you can easily continue the fun.

Choose from a variety of list viewing options – Select thumbnail view, list view and even see a little preview of your movies in your movie menu. You can add metatags to your media for better identification.

Play photo slideshows with the music you choose

Tag your favorites for instant playback

Supports DVD Navigation – View all the content included on your ripped DVDs, including complete menu navigation, chapter listings, special features, and subtitles.

Family-ready – Share your family photos, videos, music, and files on your home network and stream to any screen in the house.

Automatic play – Set the player to play a selected media file automatically when the unit is turned on. Perfect for living art on your HDTV or for digital signage.

On the computer...

Sync new media – The player automatically synchronizes with watched folders so new content from any PC, Mac, or USB storage will be added to the WD TV Live Hub.

Play your media from your computer – This media center is Windows® 7 compatible, so you can use the “Play To” feature to easily stream your Windows 7 computer’s files to your TV through your media center.*

*For more information on Play To, go to:
<http://windows.microsoft.com>.

Audio/Video Interface

- HDMI interface for digital audio and high-definition video.
- Component video interface (YPbPr, green/blue/red) for analog video connection.
- Composite interface (RCA, yellow/white/red) for analog AV connection.
- S/PDIF (optical) audio for high-fidelity digital audio.
- Auto source function enables the HD media center to detect and switch to a new interface connection. For example, the media center automatically switches to HD mode when it is connected through an HDMI cable.

- Video output resolution includes 480i, 576i, 480p, 576p, 720i, 720p, 1080i, 1080p.
- Stereo or multi-channel digital surround audio output (digital surround sound is only available when using the HDMI or S/PDIF interfaces).
- Wired or wireless Internet connection for access to online media content.

Plug-and-Play USB 2.0 Support*


- USB storage device with a USB connector
- Portable media centers with USB connector
- Digital cameras/camcorders with USB connector

*For a list of tested, compatible USB devices, see Article #5688 in our knowledge base at <http://support.wdc.com>.

USB Storage File System Support

- NTFS
- FAT/FAT32
- HFS+

Connections

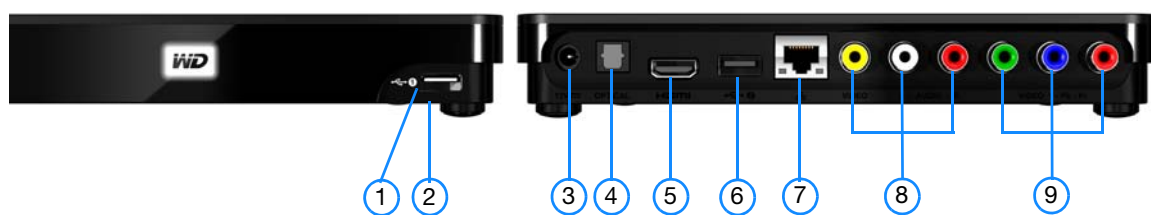


Item	Component	Description
1	USB port 1	Supports connection of compatible removable storage devices, portable media centers, digital cameras with USB connectors, and USB wireless adapters.
2	Reset button (bottom of device)	Press for one second to reset to factory defaults (see “Device Reset” on page 195). Press and hold 10 seconds to toggle between NTSC and PAL. Use a fine-tipped stylus or the unfolded end of a paperclip to press the reset switch.
3	Power jack	Connects the power cable.
4	S/PDIF (optical) audio port	Connects to your AV receiver (S/PDIF cable sold separately).
5	HDMI port	Connects to your TV’s HDMI port (HDMI cable sold separately).
6	USB port 2	The same function as USB port 1.
7	Ethernet port	Supports LAN connection for wired Internet access.
8	Composite jacks	Connect to your TV’s analog video and audio jacks.
9	Component jacks	Connect to your TV’s component (YPbPr) terminals.



Note: This device does not support USB hubs.

Power Button and LED Indicator

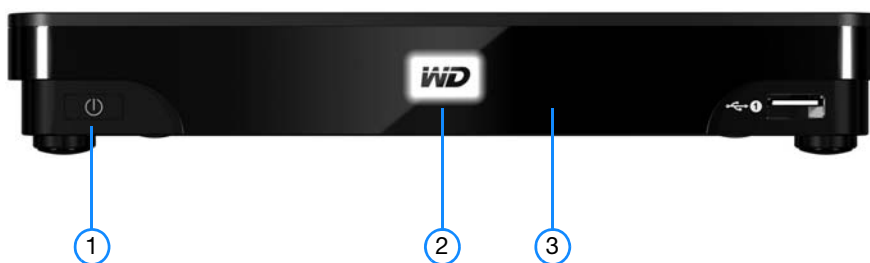

Item	Component	Description
1	Power button	<ul style="list-style-type: none"> When power LED is on: <ul style="list-style-type: none"> Press the power button to power down the media center. The internal drive is put in sleep mode and other devices can still access it. Press and hold for five seconds to completely shut down the device and make the internal drive inaccessible. When power LED is off—Press the power button to power on the media center and wake the internal drive.
2	Power LED (WD logo)	<ul style="list-style-type: none"> On—The power cable is connected and the power is on. Off—The media center is in standby mode, turned off, or the power cable is disconnected. Steady flashing— A USB device has been discovered and the unit is being mounted in the system. If the Media Library is set to On in the Setup options (see “Media Library Compilation” on page 29), the LED flashes at the same steady constant rate. Three short flashes followed by three long flashes followed by three short flashes—A system diagnostic failure has occurred. See “Troubleshooting” on page 205.
3	Infrared receiver	<ul style="list-style-type: none"> Receives signals from the remote control. Point the tip of the remote control to the infrared receiver and ensure that the path between the two is unobstructed.

Remote Control



CAUTION: Do not expose the batteries or the remote control with batteries installed to excessive heat (direct sunlight, fire, etc.).

1. Infrared transmitter
2. POWER
3. Subtitle
4. PREV (track), STOP, NEXT (track)
5. Back (last screen)
6. Navigation buttons, OK
7. Previous Page
8. MUTE
9. Alpha-numeric keys
10. SEARCH
11. HOME
12. Audio
13. REV, PAUSE/PLAY, FF
14. Options
15. Next Page
16. Setup
17. Shortcut/function keys
18. EJECT (safe removal of attached storage)



Note: For additional information, see "Using the Remote Control" on page 23.

WD Remote

Control your WD TV experience with the tap of a soft key or the swipe of a finger using the WD Remote app. Get one-touch access to your favorite online services, easy text input and a gesture pad for faster navigation to your favorite content. Download this free app from the Apple App Store or the Android Market.

4

Getting Started

Package Contents



WD TV Live Hub Media Center



Remote control and
Two AAA batteries



AC power adapter



Quick Install Guide

Installation Requirements

- Standard or HDTV with a composite (standard A/V), component (YPbPr), or HDMI input
- An available network connection for online content and services

Optional: TV, stereo, or AV receiver with an optical digital (S/PDIF) or stereo audio input jack (audio playback only)

Operating System Compatibility

The media center is compatible with the following operating systems:

Windows®

- Windows XP
- Windows Vista®
- Windows 7

Mac® OS X®

- Leopard®
- Snow Leopard®



.....
Note: Compatibility may vary depending on user's hardware configuration and operating system.



.....
Important: For highest performance and reliability, it is recommended that you install the latest updates and service pack (SP). For Windows, go to the **Start** menu and select **Windows Update**. For Mac, go to the **Apple** menu and select **Software Update**.

Installation Procedure


The media center installation procedure is outlined below:

1. Connect the power cable.
2. Establish a network connection.
3. Transfer content from your computer to the media center.
4. Connect the media center to your TV or entertainment unit through the desired interface option.
5. Connect a USB device containing your media content (optional).

Step 1 - Connecting the Power Cable

1. If applicable, connect the power clip to the power cable plug.

The AC power adapter will vary, depending on your location. Some locations do not require a power plug clip. Units sold in those locations will have a fixed power plug. Refer to the illustration below.

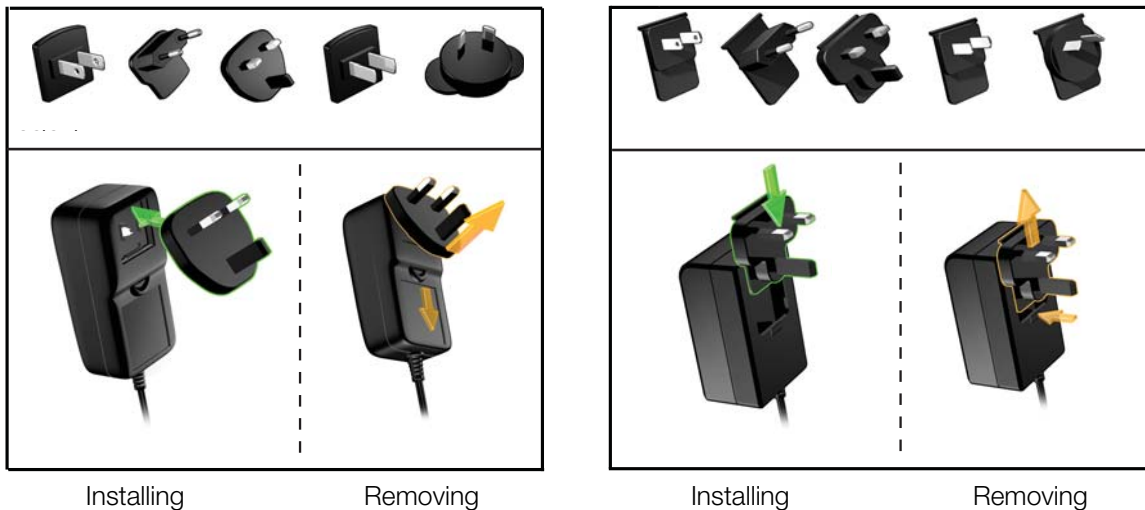

2. Connect the power cable to the media center's DC connector, and then plug the opposite end into an AC power outlet. The media center powers up automatically.



Step 2 - Connecting the Media Center

The following figures illustrate the cable connections supported by the media center. The standard connection uses the included composite-to-mini AV cables.



.....
Note: HDMI and S/PDIF (optical) cables are sold separately.



.....
Important: Configure the media center's Audio/Video settings depending on the type of connection you choose. See "Audio/Video Output" on page 174 for more information on these settings.

Choosing the Best Connection


The quality of the picture produced by your TV depends on the quality of your TV and its connection to the media center.

Connection	Quality	Connectors
HDMI	Best (up to 1080p)	Specialized, high-definition connector
Component	Better (up to 1080i)	<ul style="list-style-type: none"> • Green = Y • Blue = Pb • Red = Pr
Composite	Good (480i/576i)	<ul style="list-style-type: none"> • Yellow = video • Red = right audio • White = left audio

HDMI (High Definition)



Component (High Definition)

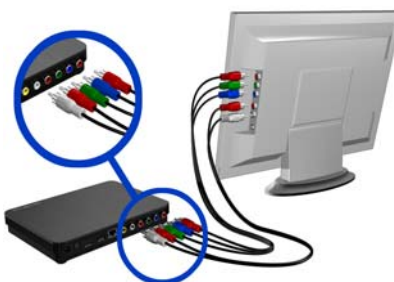

Composite (Standard Definition)




.....
Note: HDMI, component, and composite cables are not included.

HDMI Video and Audio (High-Definition)

HDMI combines high-definition video, multi-channel audio, and inter-component control in a single digital cable. This interface provides video quality resolution of up to 1080p.

To connect your media center using an HDMI cable:

1. Plug an HDMI cable into the HDMI connector on the media center.
2. Plug the opposite end into the HDMI port on your TV or audio/video system (if available).

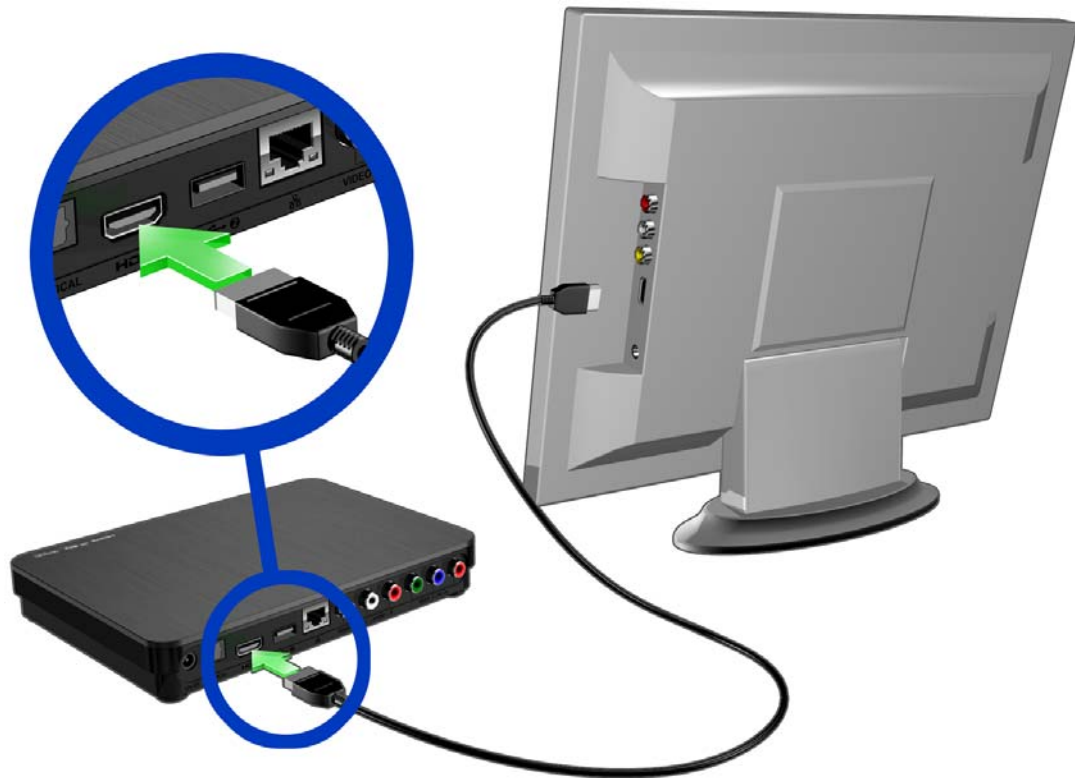

Wait a few seconds for your TV to detect the media center. If it is not detected, you may need to change the input source on your TV to HDMI. Check the user documentation of your TV for more information.

Once the media center is detected, the splash screen displays to indicate system bootup, then the home screen of the user interface opens.




.....
Note: HDMI cables are sold separately.

Component Video and Audio (High Definition)

The component connection only provides video signals. You will also need to connect the composite audio cables to provide sound. This interface provides video quality resolution of up to 1080i.

To connect your media center using component and audio cables:

1. Plug component cable connectors into the component jacks on the media center.
2. Plug the opposite ends into the component ports on your TV or audio/video system (if available), red to red, green to green, and blue to blue as shown below.

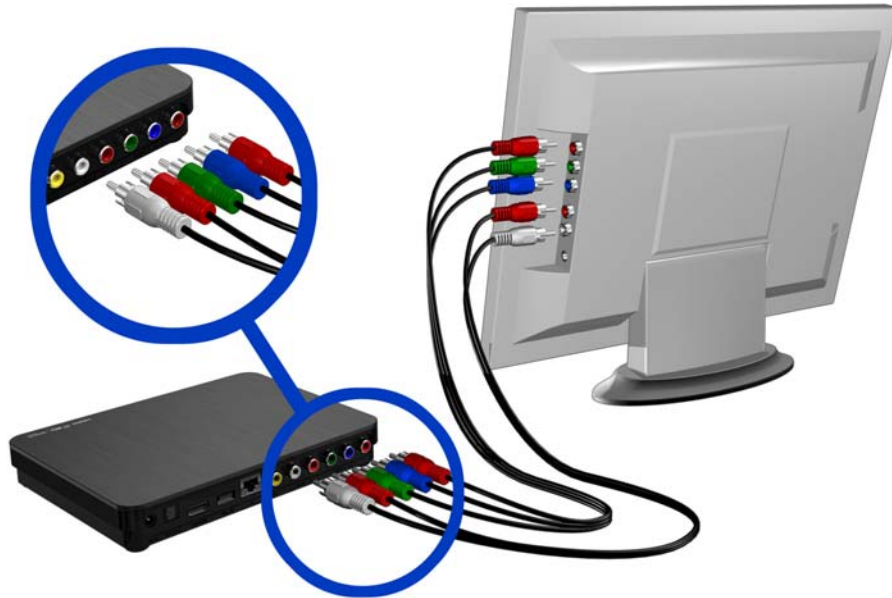

3. For audio, plug audio cable connectors into the audio jacks on the media center.
4. Plug the audio connectors on the opposite end of the cable into the audio input jacks on your TV, red to red and white to white.

Wait a few seconds for your TV to detect the media center. If the media center is not detected, you may need to change the input source on your TV to component. Check the user documentation of your TV for more information.

Once the media center is detected, the splash screen displays to indicate system bootup, then the home screen of the user interface opens.



.....
Note: Component and audio cables are sold separately.

Composite AV Connection (Standard Definition)

To use a composite connection:

1. Plug the composite connectors into the composite jacks on the media center.
2. Plug the opposite ends into the composite input ports on your TV, yellow to yellow, red to red, and white to white.
3. Select the appropriate TV input source.



Wait a few seconds for your TV to detect the media center. If the media center is not detected, you may need to change the input source on your TV to composite. Check the user documentation of your TV for more information.

Once the media center is detected, the splash screen displays to indicate system bootup, then the home screen of the user interface opens.



.....
Note: Composite cables are sold separately.

Home Theater (High-Definition)

To connect a home theater system using HDMI:

1. Plug an HDMI cable into the HDMI connector on the media center.
2. Plug the opposite end into the HDMI In port on your A/V receiver.
3. Plug an HDMI cable into the HDMI Out port on your A/V receiver.
4. Plug the opposite end into the HDMI port on your TV (if available).
5. Select the appropriate TV input source.
6. Set the appropriate audio output option on the media center. See “Audio Output” on page 175.



To connect a home theater system using S/PDIF:

1. Plug a S/PDIF cable into the S/PDIF connector on the media center.
2. Plug the opposite end into the S/PDIF In port on your A/V receiver.
3. Plug HDMI, component, or composite connectors to the appropriate Out ports on the media center.
4. Plug the opposite end(s) into the appropriate port(s) on your TV.
5. Select the appropriate TV input source.
6. Set the appropriate audio output option on the media center. See “Audio Output” on page 175.



.....
Note: HDMI, S/PDIF, component, and composite cables sold separately.

Step 3 - Connecting to Your Network

The media center can be connected to your home network so you can transfer files back and forth from your networked computer to the media center, and access the Internet and network storage using a wired or wireless network connection. A network connection provides access to locally stored and online media content.

Wired Network Connection



.....
Note: Ethernet cables are sold separately.

To connect to a home network using an Ethernet cable:

1. Plug an Ethernet cable (sold separately) into the Ethernet connector on the media center.
2. Plug the opposite end of the Ethernet cable directly into a LAN port on a router or network switch (if using a switch, it must be connected to the router).



For detailed instructions on wireless and wired network connections and configuration, see “Network Setup” on page 68.



.....
Note: Streaming over wi-fi may be unstable due to various reasons such as a weak network connection, signal strength, variable speeds, or other environmental factors. You can create instant high-speed, wired network connections and gain fast, reliable access to the Internet without running wires all over your house using WD Livewire™ Powerline AV Network kit (sold separately). For more information, visit <http://products.wdc.com/WDLivewire>.

Transferring Media Content From Your Computer

See “Step 3 - Loading Content On Your Media Center” on page 18.

Accessing Media Content From the Network

See “Network Services” on page 74.

Accessing Online Media Content

See “Internet Services” on page 91.

Step 3 - Loading Content On Your Media Center


Transfer your favorite content from your computer to your media center. You can also transfer files from your media center to your computer.




1. Turn on your computer.
2. Connect the drive's power cable (see "Step 1 - Connecting the Power Cable" on page 11).
3. Use Ethernet cables to connect the media center (see "Step 3 - Connecting to Your Network" on page 17) and a computer to your router as shown above.

Windows


Using WD Link™

1. Download the WD Link tool from <http://products.wdc.com/WDTVLiveHub>.
2. Double-click on the downloaded installer file and follow the on-screen prompts to install WD Discovery.
3. Click  or **Start**, then click **Programs > WD Link > WD Link**.
4. Click **WDTVLiveHub** in the Network Storage Found list.
5. The media player displays in the Drive Mapping list. Click **WDTVLiveHub** under Drive Mapping.
6. Select an available drive letter from the Available Drive Letters list.

7. Click **Map Drive**.

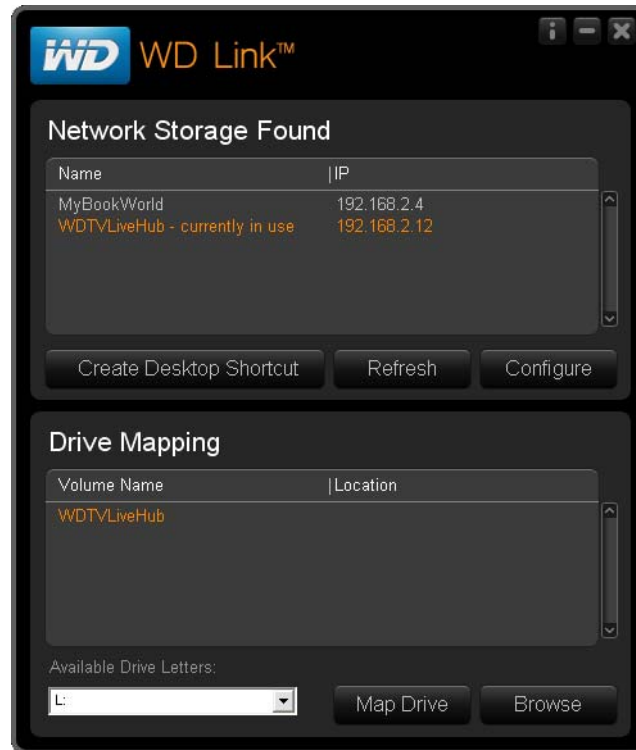

8. Click **OK**.

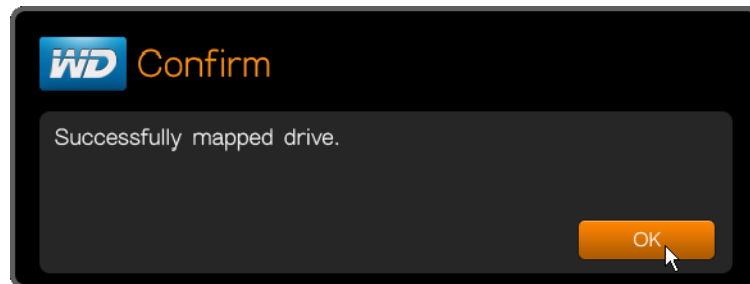

9. Close the WD Link Tool.
10. Click  or **Start** and then **(My) Computer**. The media center root displays. You can now drag and drop files and folders into the media center's internal hard drive using **(My) Computer** or Windows Explorer.

Using Windows

As an alternative to using WD Link, access the media center as follows:

Windows 7/Vista:

- Click  > **Computer** > **Network** and locate the media center.

Windows XP/Vista/7:

- In Windows Explorer or in a Web browser, enter \\wdtlivehub as the address.

Macintosh

1. Turn on your computer and wait for the operating system to load.
2. Open Finder.

3. *Mac OS X Leopard/Snow Leopard:* Click the WDTVLiveHub icon under SHARED.
4. Drag and drop your media files from your computer to the media center or from the media center to your computer.

Step 5 - Connecting a USB Device (Optional)

The media center has two USB ports that support playback from WD USB external drives.*


* For a list of supported WD external drives, see article #5688 in our knowledge base at <http://support.wdc.com>.

To connect the USB device:

1. Connect the USB device to either of the media center's USB ports.



2. Wait for a few moments while the media center scans the USB device for media files. (Scanning is enabled by default. If you want to turn off automatic scanning, go to “Media Library Compilation” on page 29.)
3. The Sync and Transfer screen appears. Pressing **OK** copies all the media files from the USB device into the media center's internal drive. The files will all be synced to a designated folder (“USB_Sync”) in the media center's internal drive. For each new USB device, a designated folder is created based on the USB volume name. The media center only syncs and copies files that are new (by date modified) or different than what's already stored rather than moving the entire contents of the external USB device each time.

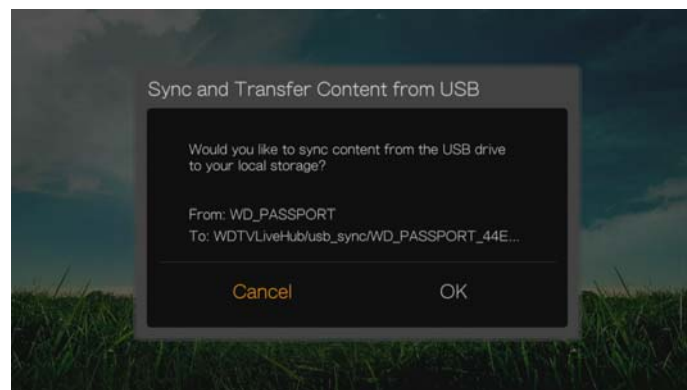

.....

Note: You can turn off or adjust the Sync and Transfer function in the Setup > Operation menu. See “Sync From USB Storage” on page 190.

To unlock a locked WD USB device:

A USB device must be unlocked for the media center to access its contents.

1. Navigate to the Home screen, and select the menu for the media content you wish to access. It can be Music, Videos, or Photo.
2. In the Unlock your WD Drive screen, press ◀/▶ to select **OK**, then press **OK**.
3. Use the navigation buttons ▲▼◀▶ to type in the USB drive access password in the on-screen keyboard. Select **Submit**, then press **OK**.

If a wrong password is entered, press ◀/▶ to select **OK**, press **OK**, then type in the correct password. If you enter the wrong password five consecutive times, the USB drive is placed in a hold state. Press **OK** to close the error message. Disconnect the USB drive. Power cycle and reconnect the USB drive and type in the correct access password.

4. Once the USB drive has been unlocked, the menu bar for the selected media type will appear. Press ▲/▼ to choose a filter option for displaying supported media contents, then press **OK**.

Supported content for the selected media type will be displayed.


5. Use the navigation buttons ▲▼◀▶ to select the content you wish to access, then press **OK** to start media playback.

Removing a USB Device

To prevent data loss, it is highly recommended that you first press the **EJECT** button on the remote control before removing a USB device.

To remove a USB device:

1. Press the **HOME** button .
2. Press the **EJECT** button .
3. Press ▲/▼ to select the USB device.
4. Press **OK**. With the  selected, press **OK** again.

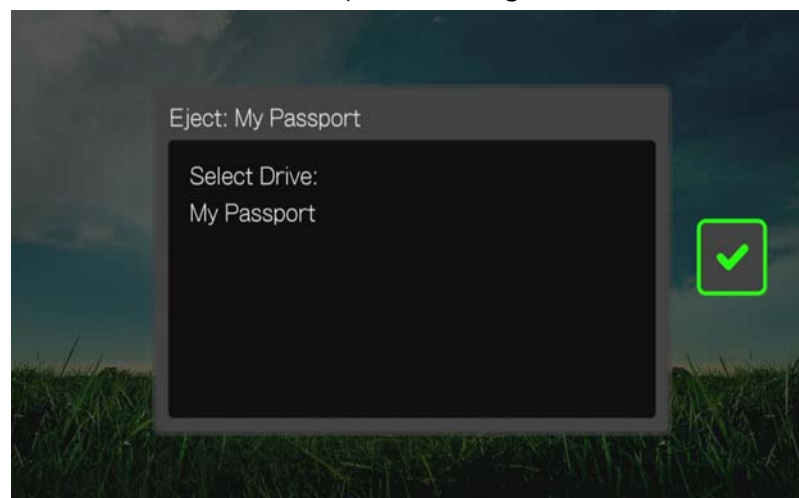

5. Disconnect the USB device from the media center.

5

Operating the Media Center


 



 


Using the Remote Control

The media center's ergonomic remote control lets you navigate the Home screen, browse for media files, enable playback options, and customize the system settings. The infrared sensor detects signals from the remote.



Important: Make sure there are no obstructions between the remote control and the infrared sensor on the media center.





Button	Function
HOME	Displays the main menu and the various options for playback of files and device setup.
POWER	Suspends the device into sleep mode and turns off video output. Press and hold the power button for five seconds to completely shut down the media center.
Navigation buttons	Navigate through Home options, menu screens, media libraries, on-screen keyboards, and toolbars.
OK	<ul style="list-style-type: none"> Displays the media directories and Settings screens. Turns information bar ON or OFF. Begins playback of the selected media file. Enables the currently selected setting in a Settings option screen.
STOP	Discontinues playback.
Back	Goes back to the previous screen.
REV (reverse)	Scans backward during audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.
PREV	<ul style="list-style-type: none"> Press once to jump to the start of the audio/video file. Press twice to jump to the previous audio/video/image file. Press to page up. During Video REV mode, press to skip back 10 minutes.
SEARCH	Locates a media file in the current folder. This function is only available when the Media Library setting is enabled. Does not search subfolder.
Options	During playback, displays additional playback options. From an online media content screen, press to display more service options.
PAUSE/PLAY	Toggles between pause and playback.
FF (fast forward)	Scans forward through the audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.
NEXT	<ul style="list-style-type: none"> Skips to the next audio, video, or image file. Press to page down. During Video FF mode, press to skip forward 10 minutes.

Button	Function
EJECT	Switches to safe mode so you can safely remove a USB device.
MUTE	Turns off the volume output
Subtitle	Switches a video's subtitles (if applicable)
Audio	Switches a video's audio stream (if applicable)
Setup	Brings up the Setup menu
Alpha-numeric keys	<ul style="list-style-type: none"> Pressing any of these keys once inputs the corresponding number. Pressing keys 2-9 multiple times inputs the corresponding alpha characters. While listening to a song or music playlist, press and hold any of the 0-9 buttons to create a preset.
A, B, C, D	<p>User assignable shortcut/function keys. See "Remote Settings" on page 189. Default settings are as follows (only valid when inside the Videos, Music, or Photos menus):</p> <p>Pressing  activates the  sort and filter menu.</p> <p>Pressing  activates the  select content source menu.</p> <p>Pressing  activates the  change view menu.</p> <p>Pressing  activates the  dashboard menu.</p>

Using a USB Keyboard


As an alternative to using the remote control, you can plug a USB keyboard into either of the two USB ports on the media center.

Key or key sequence	Function
HOME	Displays the main menu and the various options for playback of files and device setup.
CTRL + P (Power)	Suspends the device into sleep mode and turns off video output.
UP, DOWN, LEFT, & RIGHT ARROWS	Navigate through Home options, menu screens, media libraries, on-screen keyboards, and toolbars.
ENTER	<ul style="list-style-type: none"> Displays the media directories and Settings screens. Turns information bar ON or OFF. Begins playback of the selected media file. Enables the currently selected setting in a Settings option screen.
S (Stop)	Discontinues playback.
ESC (Back)	Goes back to the previous screen.
- (Reverse)	Scans backward during audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.

Key or key sequence	Function
P (Previous)	<ul style="list-style-type: none"> Press once to jump to the start of the audio/video file. Press twice to jump to the previous audio/video/image file. Press to page up. During Video REV mode, press to skip back 10 minutes.
CTRL + F (Search)	Locates a media file in the current folder. This function is only available when the Media Library setting is enabled. Does not search subfolder.
CTRL + O (Options)	During playback, displays additional playback options. From an online media content screen, press to display more service options.
SPACE BAR (Play/Pause)	Toggles between pause and playback.
+ (FF)	Scans forward through the audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.
N (Next)	<ul style="list-style-type: none"> Skips to the next audio, video, or image file. Press to page down. During Video FF mode, press to skip forward 10 minutes.
CTRL + E (Eject)	Switches to safe mode so you can safely remove a USB device.
M (Mute)	Turns off the volume output
V (Subtitle)	Switches a video's subtitles (if applicable)
B (Audio)	Switches a video's audio stream (if applicable)
DELETE	Clears the data entry field.
Z (Zoom)	Zooms in on the currently playing video file or photo.
R (Shuffle)	Enables the shuffle function for Videos and Music files.
L (Repeat)	Repeats the current video or music file.
BACKSPACE	Deletes the currently selected file.
CTRL + S (Setup)	Brings up the Setup menu
Alpha-numeric keys	<ul style="list-style-type: none"> Pressing the any of these keys once inputs the corresponding letter or number. While listening to a song or music playlist, press and hold any of the 0-9 buttons to create a preset.
CTRL + A CTRL + B CTRL + C CTRL + D	<p>User assignable shortcut/function keys. See "Remote Settings" on page 189. Default settings are as follows (only valid when inside the Videos, Music, or Photos menus):</p> <p>Pressing CTRL + A activates the  sort and filter menu.</p> <p>Pressing CTRL + B activates the  select content source menu.</p> <p>Pressing CTRL + C activates the  change view menu.</p> <p>Pressing CTRL + D activates the  dashboard menu.</p>

Using the Media Center Menu

The Home screen displays when turn on your media center or press **HOME** on the remote control. The menu options in this screen let you browse your media library and configure the media center's settings.

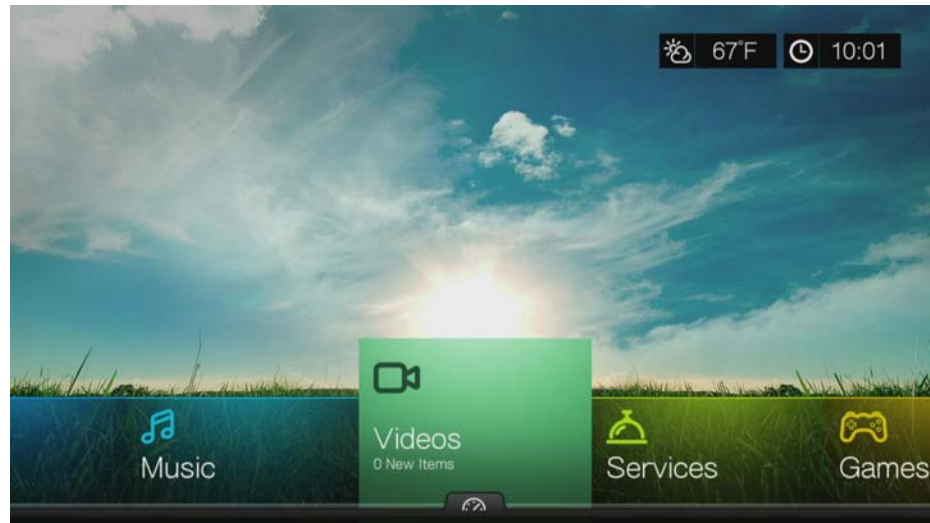

Home Screen Options

The main Home options are:

- Videos
- Music
- Photos
- Files
- Setup
- Services
- Games
- RSS
- New Firmware (automatically detects new firmware and only appears when new firmware is available)

The Music, Videos, and Photos options represent folders for the different media types. Media contents will be displayed either as file/file folders in the media center, network attached storage, or a USB drive directory or as a media library compilation list based on metadata information. For example, music files can be categorized based on their genre or the artist's name.

Setup lets you customize the way you use the media center and set preferences for media playback. For more information, see “Setup and Advanced Features” on page 173.

Setting Time and Weather


- To set the time in the media center screen display, see “Set Time & Country” on page 190.
- To set the temperature in the media center screen display, see “AccuWeather.com” on page 95.


Home Screen Navigation


Use the following keys to navigate through the menu screens.


Button	Function
◀▶ Left/Right arrows	Move from one option to the next
▼ Down arrow	View the dashboard
OK	Launches your selection

Media Center Dashboard

Press ▼ at the home screen or navigate to  then press **OK** in the in the Videos, Music, or Photos menus to launch the dashboard. Press ▼ or **Back** to exit the dashboard. Your Favorites are shown by default.

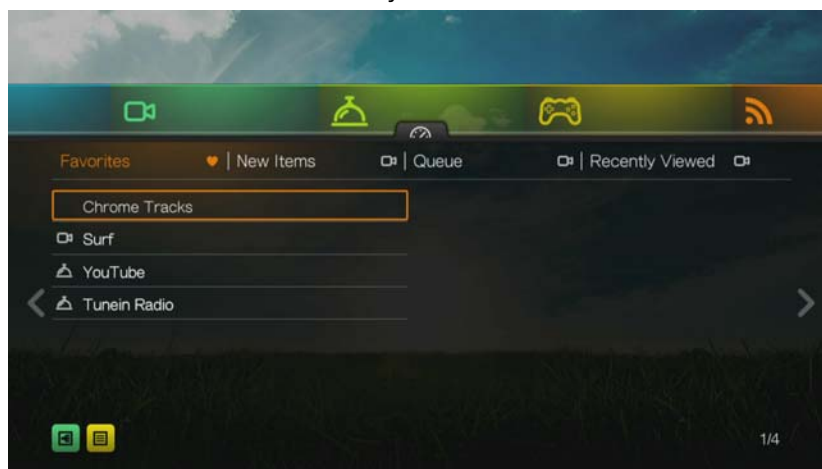

Navigate to  to filter the media files and internet service links shown on the main dashboard page by category and media type. For example, to find photos you have added recently, select **New Items** and press **OK**, **Photos** and press **OK**, then press **OK** again.

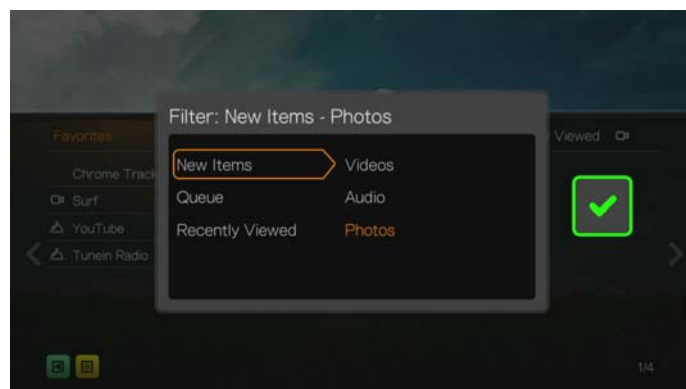

Navigate to  and press **OK** to toggle between list and thumbnail views.


Press **▲**, Use the **◀/▶** navigation buttons, then press **OK** in the dashboard to display your media files by the following categories:

- **Favorites** (see “Favorite” on page 39)
- **New Items** (displays media files you have added within a certain date range. See “Show New Items” on page 181 for details and instructions for adjusting the date range)
- **Queue** (Use the **◀/▶** navigation buttons then select the Videos, Music, or Photos icon, then press **OK** - see “Add to Queue” on page 39)
- **Recently Viewed** (displays media files you have viewed in the last xx days)

After selecting a category, filter the results by media type (Videos, Audio, or Photo). Then, use the navigation buttons to select a file then press **OK** to begin playback.

Dashboard Options


With a file selected in any of the dashboard categories, press **Options**.

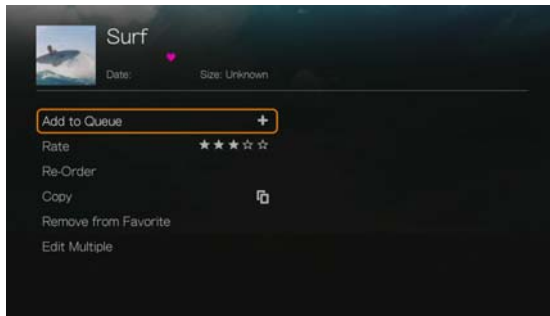

Dashboard Options - Favorites



Dashboard Options - Last 30 Days or Recently Viewed

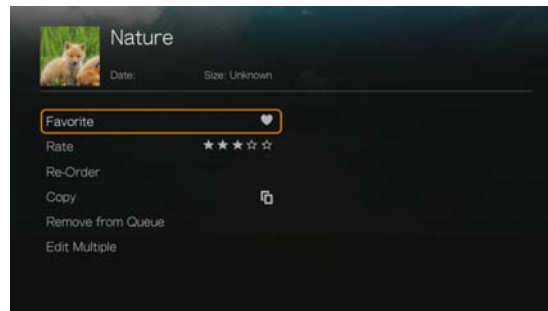

Dashboard Options - Queue

Use the ▲/▼ navigation buttons to select from the following options, then press **OK**.

- **Add to Queue** (when a file in Favorites, Last 30 Days, or Recently Viewed is selected - see “Add to Queue” on page 39).
- **Rate** (see “Rate” on page 39).
- **Re-Order** - use this option to move items up or down in viewing sequence in both Favorites and Queue categories. Using the navigation buttons, place the cursor where you want the selected file located.
- **Favorite** (when a file in Queue, Last 30 Days, or Recently Viewed is selected - see “Favorite” on page 39).
- **Copy** (see “Move & Copy” on page 40).
- **Remove from Favorite/Remove from Queue** - removes the selected file from the Favorites or Queue categories.
- **Delete** (see “Delete” on page 40).
- **Select Multiple** (see “Select Multiple” on page 41).

Media Library Compilation

Media Library Compilation refers to the process of scanning and consolidating the media contents of the media center, network attached storage, or an attached USB device into one comprehensive database so that you can easily browse and locate media files based on certain metadata information (e.g., video files are categorized based on title or release date).


Media Library Compilation Exemptions

The following conditions will prevent the media library compilation process.

- The USB device has read-only protection.
- There is not enough storage space on the media center, network attached storage, or USB device.
- A drive is locked.

To turn off Media Library Compilation (default is On):

1. Navigate to Home | Setup | System.
2. Select **Media Library**, and then press **OK**.

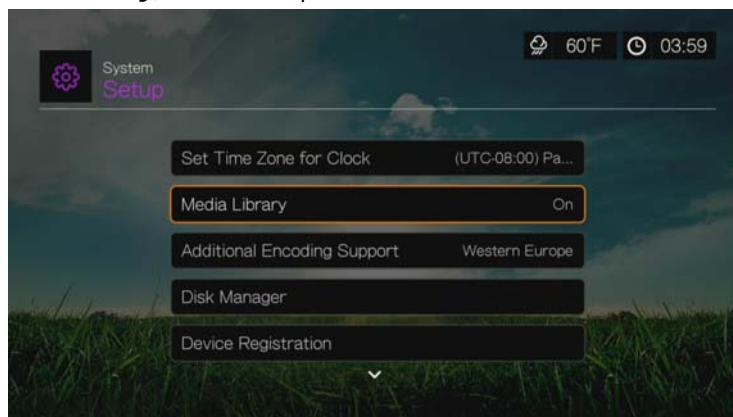

3. Select **OFF**, then press **OK**.



.....
Note: **Clear Media Library** clears then rebuilds the media library.

Supported Categories for Media Library Compilation

Once the media library compilation process is completed, all available media files are organized under their respective media type directory. By default, media contents are displayed as thumbnails (music album/movie poster art, image thumbnail). The content categories are listed in the following table.

Media Type	Category	Description
Music	All Tracks	Displays a list of all audio files arranged in alphabetical order.
	Artist	Content is categorized based on the artist name.
	Genre	Content is categorized based on genre.
	Album	Content is categorized based on album names.
	Date	Content is organized by date modified.
	Folders	Contents are displayed in audio file folders.
	Recent	Displays a list of audio folders/files that have been accessed recently.
	Playlist	Displays a list of music playlists.



Media Type	Category	Description
Video	All Video	Displays a list of all video files arranged in alphabetical order.
	Date	Content is organized by date modified.
	Folders	Contents are displayed in video file folders.
	Recent	Displays a list of video folders/files that have been played recently.
	Playlist	Displays a list of video playlists.
Photo	All Pictures	Displays a list of all image files arranged in alphabetical order.
	Date	Content is organized by date modified.
	Folders	Contents are displayed in image file folders.
	Recent	Displays a list of image folders/files that have been accessed recently.

Locating Your Contents on the Drive

There are two ways of locating a particular media file depending on whether or not the media library compilation function is enabled.

Manual Search

You can manually search for a media file by navigating to the specific media section and browsing through the available file folders. This method is recommended if there are only a limited number of files to search through. Otherwise, it is better to enable the media library compilation and use the built-in Search function.

Button	Function
 Up/Down arrows	Select a media type (photos, video, or music) or settings Select one of the option icons in an Internet service's submenu bar
 Left/Right arrows	Move within a category
OK	Launches your selection

Use the navigation buttons to move around a particular folder; press **Back** to move between folders.

Thumbnail Support for Media Files

Your media center supports thumbnails in two ways - embedded or external (some file formats do not support embedded thumbnails).

Embedded thumbnails are images that are part of the media file itself. File formats that support embedded thumbnails:

Music - MP3 and WMA

Photo - JPEG

Video - MP4

To add an external thumbnail:

With an individual file or music album selected, press **Options**, then select **Get Content Info** (see “Get Content Info” on page 38). As an alternative, or if the database did not find any info:

1. Select a JPEG, GIF, or PNG image file that you want to display as a thumbnail of the music or video file.
2. Save the file in the same location as the file it will represent, according to the following guidelines:

Folder Thumbnail Guidelines

Music:

- Display folder.jpg (the image file must be named “folder.jpg” or thumbnail will not function)
- If no folder.jpg file is found, display the first embedded album art image found in the folder
- If no album art is available, display the first .JPG in the folder

Photo:

- Display thumbnail

Video:

- Display embedded cover art
- If no embedded cover art is available, display image file associated with the video file to be played (for example video.mkv will be associated with video.JPG)

File Thumbnail View Functions (Defaults)

Music:

- Display album art (.MP3 file with embedded .JPG)
- If no album art is available, display the image file with the same name as the audio file to be played. (for example, song.wav will be associated with song.jpg)

Photo:

- Display thumbnail


Video:

- Display .MP4 with embedded .JPG
- Display image file associated with the video file to be played (for example video.mkv will be associated with video.JPG)


Search Function

You must first enable the Media Library Compilation feature before using the Search function. Go to “Media Library Compilation” on page 29 for instructions.


To perform a media search:

1. Go to the main browser screen of the type of media you want to search for (**Videos**, **Music**, or **Photos**).
2. Press  on the remote control.


3. Select **Title**, **Director**, or **Actor** (Videos); **Title**, **File Name**, **Album** or **Artist** (Music); or **Title** (Photos). Press **OK**, then ► to select the ✓. Press **OK**.

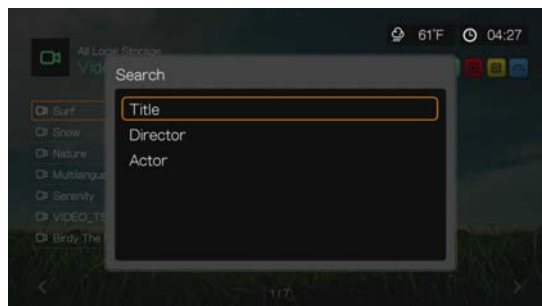

Search Options - Videos

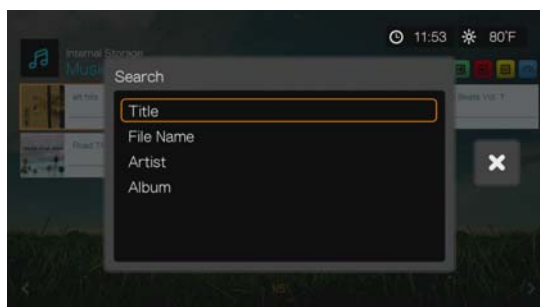


Search Options - Music

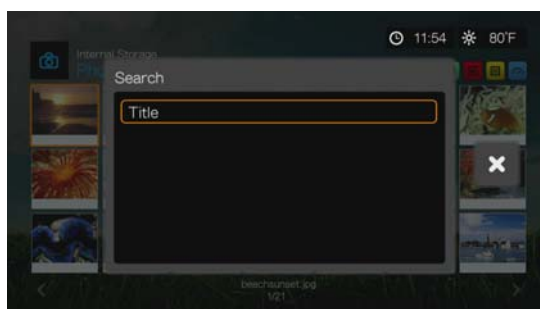


Search Options - Photos

4. Select **Contains** or **Starts with**, then press **OK** twice.

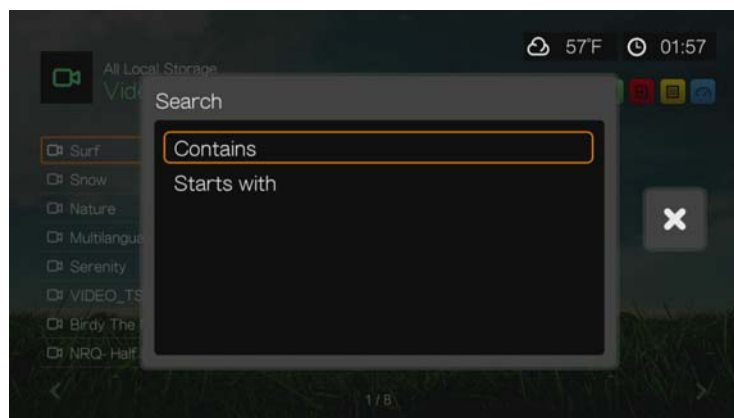

5. Using the on-screen keyboard:

- Use the navigation buttons to select a character, then press **OK** to input it in the search bar. Alternatives to this method are as follows:
 - Use the alpha-numeric keys on the remote control to enter search terms.
For example, press the **2** button a number of times to enter a, b, or c; press the **3** button a number of times to enter d, e, or f, etc.
 - Plug a USB keyboard into the media center as an alternative to the methods above. See “Using a USB Keyboard” on page 24.
- Select **ABC** or **abc**, then press **OK** to input characters in a different case.
- Select **@#&**, then press **OK** to display the symbol keyboard for inputting special keyboard characters.
- Select **.com**, then press **OK** to display the symbols for special characters such as *.com*, *www.*, *.net*, *.org*, etc.
- Press **Options** for multi-lingual/multi-character input (applicable to certain letters on the keyboard).
- If you want to erase the last character entered, navigate to **Del** then press **OK**.
- Navigate to **←** and press **OK** to move the cursor backward and **→** to move the cursor forward in the **Search** field (you can also press **⏮** to move the cursor backward and **Next Page** to move the cursor forward in the Search field).

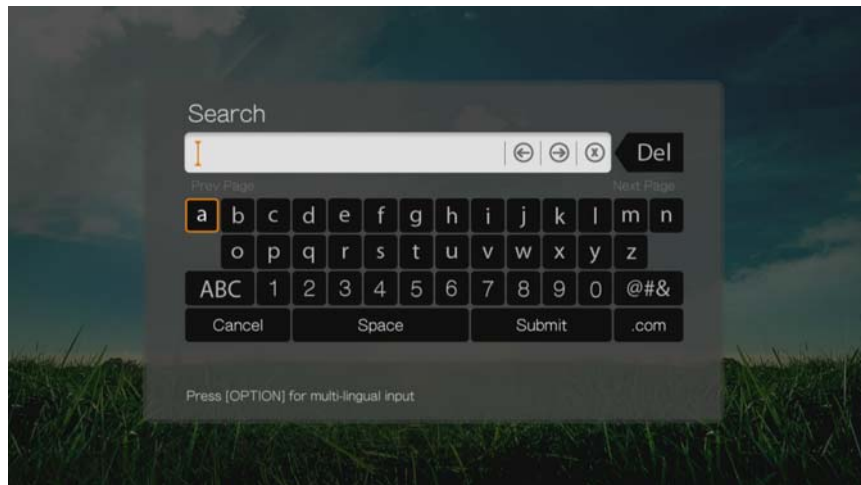


6. Once you define the search parameters, select **Submit** on the bottom of the on-screen keyboard, then press **OK**.

All files with filenames that begin with the characters entered in the search field will be included in the search results. For example, inputting 'glo' will result to a search results like this:

- Global party.mpeg
- Glow of the Field.jpg
- Gloss.mp3

7. If there are no media files matching the search parameters, press **OK** to display the on-screen keyboard again and redefine the search parameters.

If media files matching the search parameters you set are found, they will be listed as shown below (the result of entering 'bea' in Photos).

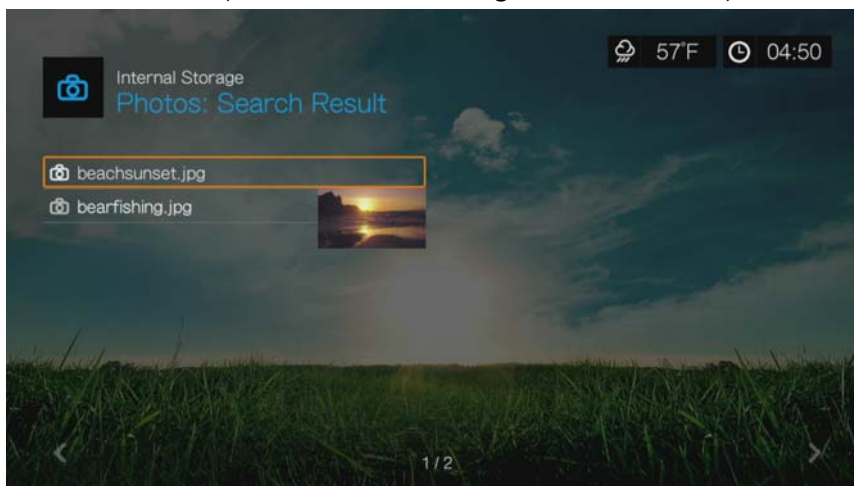

Use the navigation buttons to select the media file you are looking for, and then press **OK** or **II ►** to initiate playback.

6

Watching Video

You can watch videos on your TV using the media center.

Supported Video Formats


The following video file formats are supported.

- AVI (Xvid, AVC, MPEG1/2/4)
- MPG/MPEG
- VOB/ISO
- MKV (h.264, x.264, AVC, MPEG1/2/4)
- TS/TP/M2T (MPEG1/2/4, AVC, VC-1)
- MP4/MOV (MPEG4, h.264)
- M2TS
- WMV9 (VC-1)


Video Playback

To play back video:

1. Navigate to the Home | Videos menu, then press **OK**.

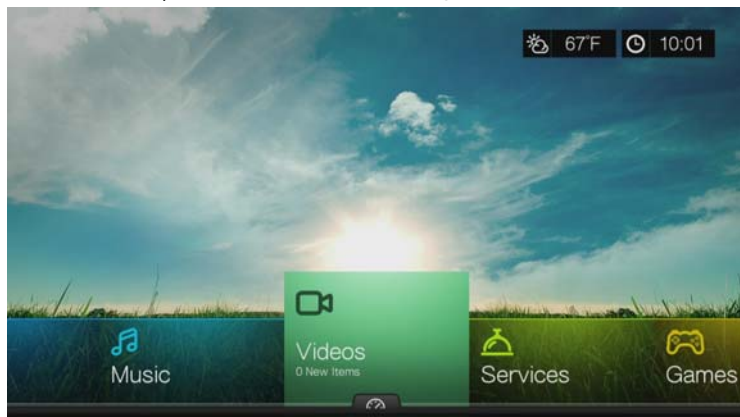

2. The screen displays available video files and video folders in the media center's local drive by default. The display will either be in preview view (default), grid view, list view, or gallery view, depending on your Browser Display setting (see "Video Settings" on page 182 for more information on Browser Display settings). Preview mode displays file size, and file type and genre (if available) for the selected video.

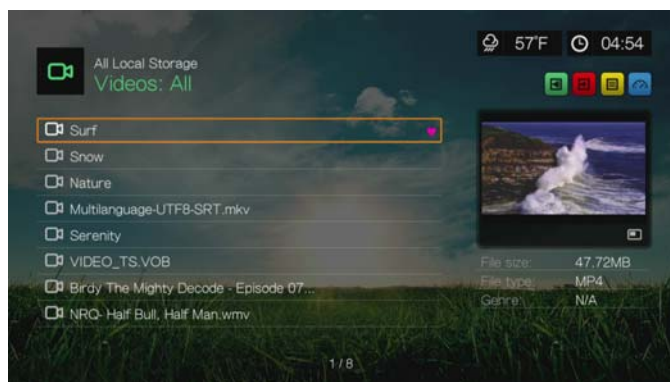

If Media Library is enabled, you can choose to navigate using sorting (Alphabetical, Date, Ratings, Recently Viewed) and filter options (All Video, Genre, Playlists, Folder, Favorites) See “Supported Categories for Media Library Compilation” on page 30 for details.


3. Locate the video file you want to play.
 - To begin playback of a single video file, highlight the file, and then press **OK**.
 - To begin playback of a video playlist, highlight the playlist name, then press **PAUSE/PLAY**.
 - To begin playback of all video files in a folder, highlight a video in that folder, then press **PAUSE/PLAY**.
 - To find a video on a network share or media center, follow the instructions in “Accessing Media Content from the Network” on page 74.

If you try to open a video file that has been partially played before, you are prompted to choose whether to play the file from the beginning or resume playback from the last playback position. Select **Resume** to resume playback or **Restart** to start playback from the beginning.

Sort & Filter Videos


You can sort and filter the videos shown in the video menu based on your preferences using the sorting & filter option.

Filter

1. Press **A** or navigate to the sort and filter content icon , and press **OK**.
2. Press **►**, then **▲/▼** to select Filter by All, Folders, Genre, Playlist, and Favorites. Press **OK** to display videos by the criteria selected.




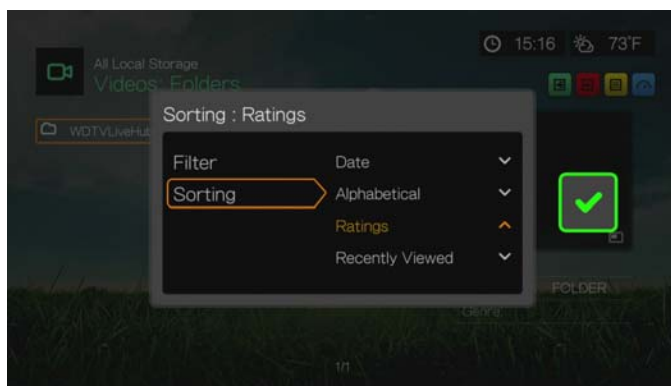
.....
Note: If you have your media files organized by folder, it may be easier and quicker to find your files by using the Filter option to only show folders.

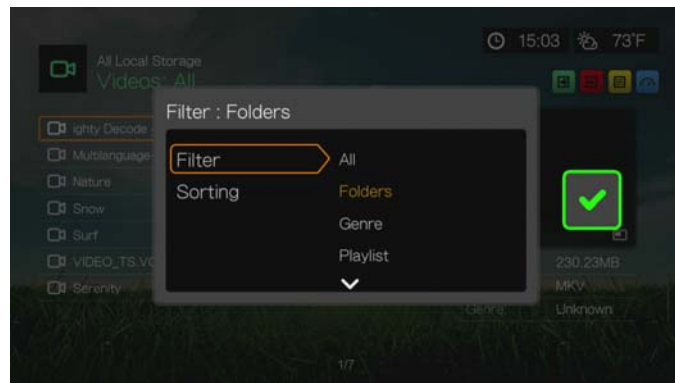


3. With the green check mark  selected, press **OK** again.

Sorting


1. Press **A** or navigate to the sort and filter content icon , and press **OK**.
2. Press **►**, then **▲**/**▼** to select Sorting by Date, Alphabetically, by Ratings, or by Recently Viewed. Press **OK** to display videos by the criteria selected in either ascending (arrow up) or descending (arrow down) order.



3. Press **►**. With the green check mark  selected, press **OK** again.

Videos Menu Options

In the main Videos screen, press **Options**. The Videos menu options display. Press **Back** when finished to return to the main menu.

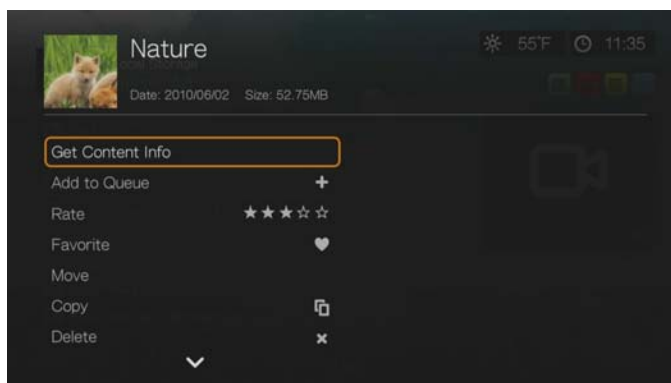

Get Content Info

Press **▲**/**▼** and select **Get Content Info** from the list of options prompts the media center to connect to an online media database to gather information about the file. For example, Get Info returns the MPAA rating, duration of the movie, genre, studio photos, and movie trailers based on the movie's title.

If a No Content Info Found message displays, navigate to the keyboard icon then press **OK**.



Enter the whole title or a portion of the title using the on-screen keyboard, select **Submit**, then press **OK** to associate info with the content. Select a title from the list, then press **OK**.

Rescan Info

Press **▲/▼** and select **Rescan Info** from the list of options after you have associated content info with a file. The rescan info option updates content info or allows you to correct content info that was associated with the file in error.

View Info

Press **▲/▼** and select **View Info** from the list of options after you have associated content info with a file. A synopsis/description of the title info displays.

Add to Queue

Adding videos to the queue provides quick access to these files via the dashboard (see “Media Center Dashboard” on page 27).

Rate

Rate your videos and other media files so you can sort and filter them by ratings and access them quickly in the dashboard.

1. Press **▲/▼** and select **Rate Video** from the list of options.
2. Press **◀/▶** to highlight the number of stars corresponding to your preferred rating. Five is the highest rating, and one is the lowest.
3. Press **OK** to confirm your rating.


Favorite


Favorite your videos other media files so you can sort and filter them by favorite and access them quickly in the dashboard.


1. Press **▲/▼** and select **Favorite** from the list of options.
2. Press **OK**.

Move & Copy

1. Press **▲/▼** and select **Move** or **Copy** from the list of options, then press **OK**.
2. Select a storage destination for the file you want to move or copy, then press **OK**.

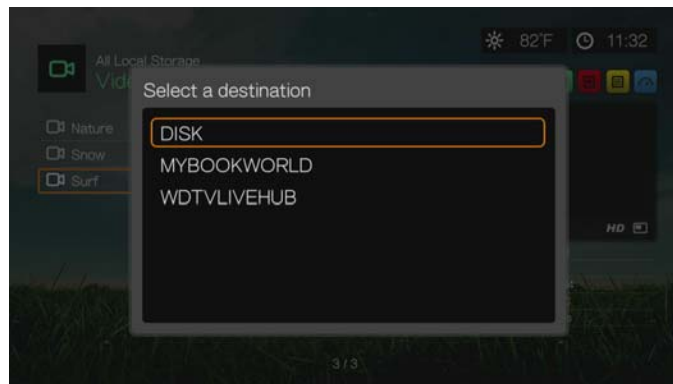

3. Use the navigation buttons to select the location where you want to move or copy the file. When you have selected the location, press **OK** to place the file there (if selecting a network or media server location, see “Accessing Media Content from the Network” on page 74).
4. Press **►** to select the green check mark , then press **OK**.

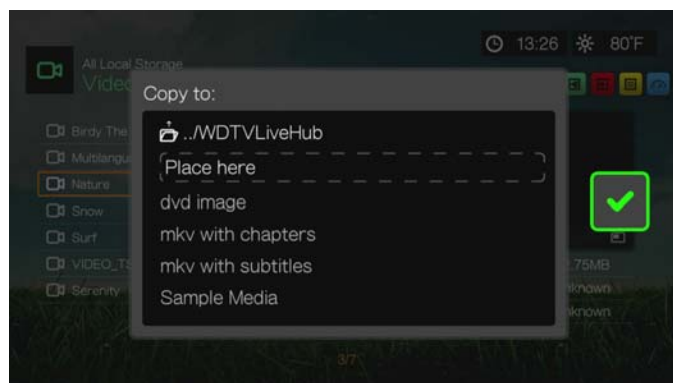


Delete


1. Press **▲/▼** and select **Delete** from the list of options.
2. Select **Yes**, then press **OK** to confirm deletion.

Upload to Facebook

You can upload a video to Facebook by selecting this option.

1. Press **▲/▼** and select **Upload to Facebook** from the list of options.
2. Select the account you want to post the file to then press **OK**, or select **Add Account** to add a Facebook account (see “Facebook” on page 106 for details).


3. The screen below displays. Press **OK** to select “Don’t ask me again!” if you do not want this screen to appear again, then press **►** to select the green check mark . Press **OK**.

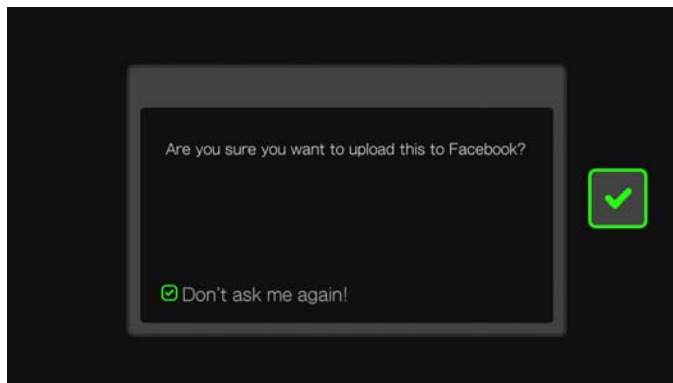


Select Multiple

Select multiple files then press **Options** to apply changes to more than file.

1. Press **▲/▼** and select **Select Multiple** from the list of options.
2. The edit multiple screen displays. Use the navigation buttons to **Select All**, **Select Page**, or **Clear All** files shown, or **Continue** to the next group of files, then press **OK**.

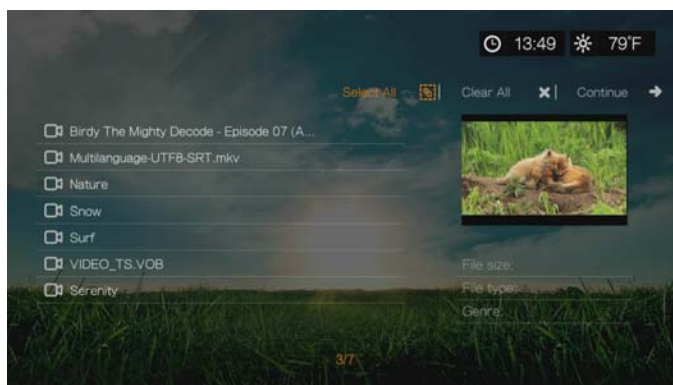



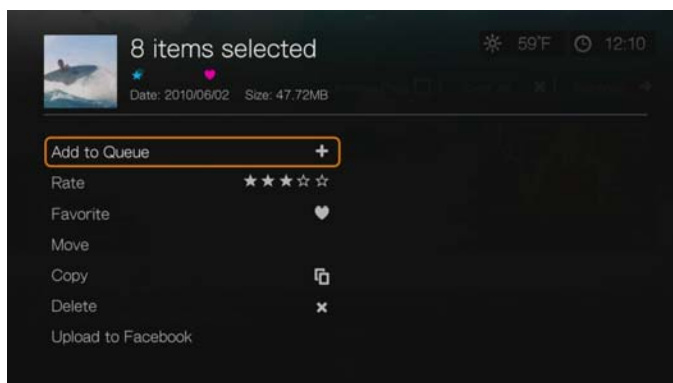

3. With multiple files selected, press **Options** to apply changes to more than one file.



Video Playback Controls

Use these buttons on the remote control to control video playback:

Button	Function
STOP	Discontinues video playback
PAUSE/PLAY	Pauses or resumes video playback
<ol style="list-style-type: none"> 1. Press FF (fast forward) or REV (reverse) to scan video (press repeatedly to select the scan speed) 2. Press PAUSE/PLAY to resume playback on the selected position 	<p>Scans the video playback forward or backward</p> <p>The media center supports the following scan speeds: 2x, 4x, 8x, 16x</p>
NEXT	<ul style="list-style-type: none"> • Plays the next video file in the video folder/playlist • Press during Fast Forward to skip forward 10 minutes. • Press NEXT to skip to the next chapter (if the video file supports chapters).
PREV	<ul style="list-style-type: none"> • Plays the previous video file in the video folder/playlist • Press during Fast Reverse to skip back 10 minutes. • Press PREV to skip to the previous chapter (if the video file supports chapters).
 Up arrow	<ul style="list-style-type: none"> • Move subtitles up on the screen.
 Down arrow	<ul style="list-style-type: none"> • Move subtitles down on the screen.
 Left arrow	<ul style="list-style-type: none"> • Reduce subtitle display speed.
 Right arrow	<ul style="list-style-type: none"> • Increase subtitle display speed.
Subtitle	<ul style="list-style-type: none"> •
Audio	<ul style="list-style-type: none"> •

Video Playback Options

- To display the video playback options while playing a video, press **Options**.
- To return to the video, press **Back**.



Get Content Info

See “Get Content Info” on page 38.

View Chapter

If you are viewing a multichapter video file, you can select which chapter to play.

To select the video chapter:

1. Press **Options**.
2. Highlight **View Chapter**, then press **OK**.



3. Press **▲/▼** to highlight your chapter selection, then press **OK** twice.

Subtitle


Use this option to view subtitles during video playback. Make sure the subtitle files are located in the same folder as the current video, and that it has the same filename as the video file.



.....

Note: Subtitle files (specific types that are supported) need to have the exact same file name as the media they are playing (the extensions will be different) and need to be located in the same folder as the video file.

To view subtitles:


1. During video playback, press **Subtitle** repeatedly until your desired subtitles display or “Subtitle Off” appears. Or, press **Options**, highlight **Subtitles**, then press **OK** and follow the steps below.
2. Select your preferred language or **Off** (to disable subtitles), then press **OK**.
3. With the green check mark  selected, press **OK** again.



Adjust Subtitles

After selecting subtitles, use this option to adjust subtitles during video playback.

1. During video playback, press **Options**.
2. Highlight **Adjust Subtitles**, then press .

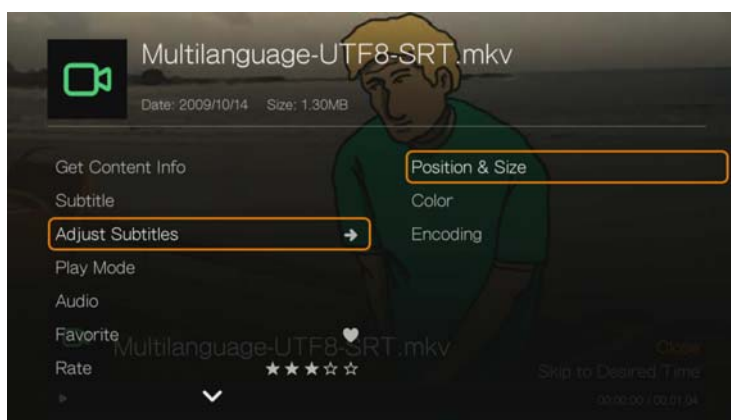



Adjust Subtitles submenu options include:

- **Position & Size** - use navigation buttons to adjust position and speed, press **OK** repeatedly to adjust size).
- **Color (of subtitle text)** - select fill and border color from the Subtitle Color menu.
- **Encoding** - see “Additional Encoding Support” on page 193.

Play Mode

Use the play mode option to set video repeat options. Press **OK** repeatedly until the repeat icon you want is displayed. Options include:

- **Repeat All**  – All the video files in the current video folder are played in sequence and repeatedly until you press **STOP** or **Back**.
- **Repeat One**  – The current video file is played repeatedly until you press **STOP** or **Back**.

Audio Channel Selection

Use this option to select the audio language used in the video playback. This option is only available if the current video has more than one audio track. Make sure the audio tracks are located in the same folder as the current video.

To select the audio channel:

1. During video playback, press **Audio** (or press **Options**, highlight **Audio**, then press **OK**).
2. Repeat the step above until your desired language or track plays.

Favorite

See “Favorite” on page 39.

Rate

See “Rate” on page 39.

Add to Queue

See “Add to Queue” on page 39.

Selecting Video Zoom and Pan Options

Use this option to change the viewing scale of the video playback screen and to pan the video display.


1. During video playback, press **Options**.
2. Select **Zoom & Pan**, then press **OK**.
3. Press **OK** repeatedly to cycle through the available zoom options. Use the navigation buttons to pan the display.

Delete

See “Delete” on page 40.

Displaying the Video Playback Panel

Use this option to display the Video Playback Panel on the bottom of the screen. This panel shows the following information about the current video:

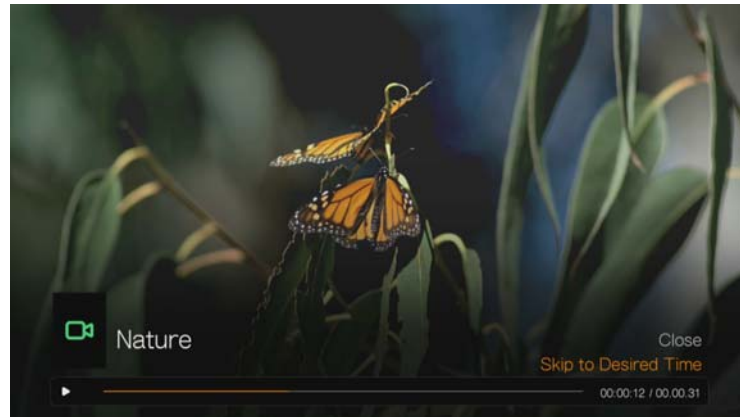


Video playback progress bar

Elapsed and total
playback times

To view the Video Playback Panel:

1. During video playback, press **OK**. The video playback panel appears on the bottom of the screen, showing a progress bar along with the elapsed and total playback times.
2. Some videos allow you to advance to a specific time. Select **Skip to Desired Time**, then click **OK**. A keyboard displays:

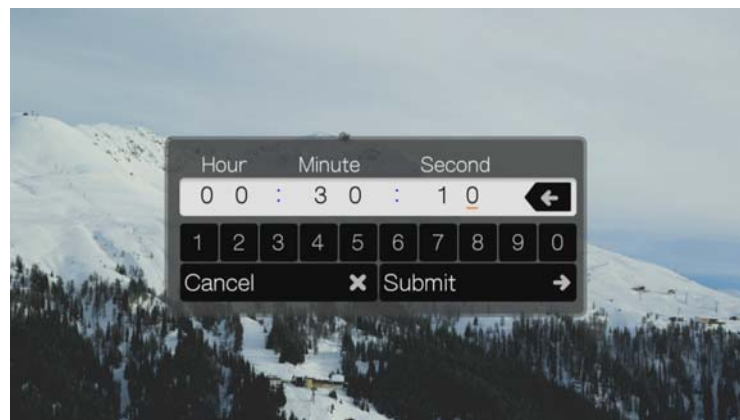

3. Use the navigation buttons to position the cursor under each number in the Hour, Minute, and Second fields, then select a number from the keyboard. Select Submit then press **OK** when finished to advance to the specific time.
Press **OK** to hide the Video Playback Panel when finished.

DVD Navigation

In most cases, when the contents of an entire DVD have been successfully saved and stored in the media center's internal drive or on an attached USB hard drive or a networked hard drive connected to the media center, you will experience the same DVD menu navigation functionality using the buttons on the media center remote as you would using a DVD remote for a DVD player connected to a television.



Important: For DVD navigation to work, the VOB files must be placed in a folder named VIDEO_TS.



Note: Video files such as AVI, MP4, MKV, and MT2S are "single track" video files that do not provide DVD navigation features.

DVD Navigation Controls


Use these buttons on the remote control to control DVD navigation video playback:

Button	Function
STOP	Discontinues video playback
PAUSE/PLAY	Pauses or resumes video playback
<ol style="list-style-type: none"> Press FF (fast forward) or REV (reverse) to scan video (press repeatedly to select the scan speed) Press PAUSE/PLAY to resume playback on the selected position 	<p>Scans the video playback forward or backward</p> <p>The media center supports the following scan speeds: 2x, 4x, 8x, 16x</p>
NEXT	<ul style="list-style-type: none"> Press during Fast Forward to skip forward 10 minutes. Press NEXT to skip to the next chapter.
PREV	<ul style="list-style-type: none"> Press during Fast Reverse to skip back 10 minutes. Press PREV to skip to the previous chapter.
Up arrow	<ul style="list-style-type: none"> At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc. Move subtitles up on the screen during video playback.
Down arrow	<ul style="list-style-type: none"> At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc. Move subtitles down on the screen during video playback.

Button	Function
◀ Left arrow	<ul style="list-style-type: none"> At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc. Reduce subtitle display speed during video playback.
▶ Right arrow	<ul style="list-style-type: none"> At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc. Increase subtitle display speed during video playback.

DVD Navigation Playback Options

- To display the video playback options, press **Options**.
- To hide the options, press **Back** or **Options** again.

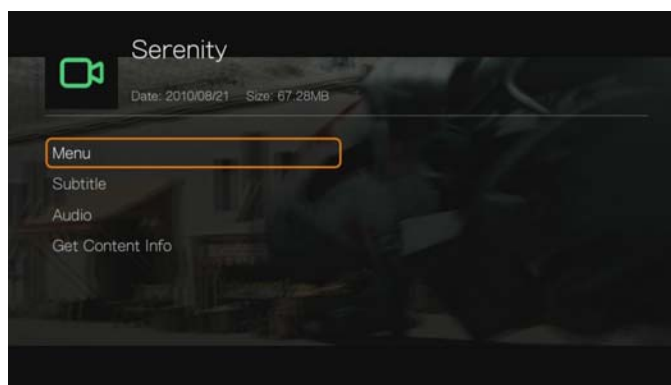

Main Menu Selection

To show the main menu in DVD navigation mode:

- Press **Options**.
- Highlight **Menu**, then press **OK**. The main menu displays.

Selecting Subtitles

See “Subtitle” on page 43.

Audio Channel Selection

See “Audio Channel Selection” on page 45.

Get Content Info

See “Get Content Info” on page 38.

7

Playing Music


You can listen to audio files on your TV/audio system using the media center.

Supported Audio Formats


- MP3
- WAV/PCM/LPCM
- WMA
- AAC
- FLAC
- MKA
- AIF/AIFF
- OGG
- Dolby Digital Plus
- DTS

Music Playback

1. Navigate to the Home | Music menu, then press **OK**.

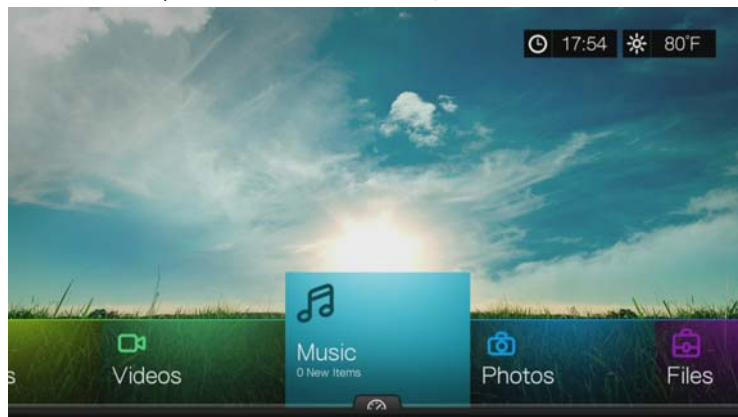

2. The screen displays available music files and folders in the media center's local drive by default. The display will either be in grid view (default) or list view, depending on your Browser Display setting (see "Music Settings" on page 184 for more information on Browser Display settings).

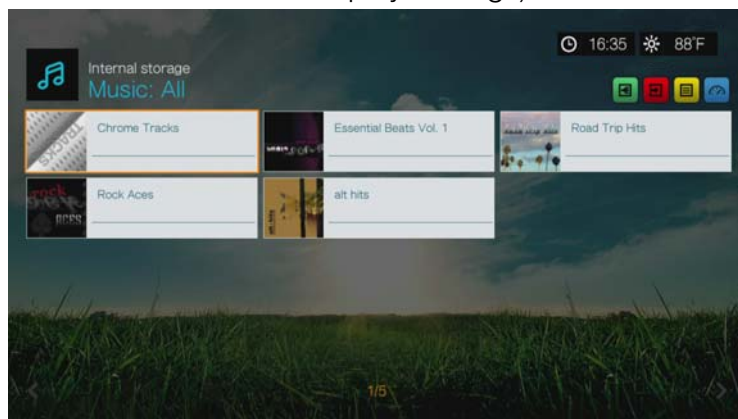

If Media Library is enabled, you can choose to navigate using sorting (Alphabetical, Date, Ratings, Recently Viewed) and filter options (All, All Tracks,


Genre, Artist, Album, Playlists, Favorites) See “Supported Categories for Media Library Compilation” on page 30 for details.

3. Locate the audio file you want to play.
 - To begin playback of a single audio file, highlight the file, then press **OK**.
 - To begin playback of an album, highlight the album, then press **OK**. Press **OK** again to play the album.
 - To begin playback of a music playlist, highlight the playlist name, and then press **PAUSE/PLAY**.
 - To begin playback of all audio files in a folder, highlight an audio file in that folder, and then press **PAUSE/PLAY**.
 - To find audio files on a network share or media center, follow the instructions in “Accessing Media Content from the Network” on page 74.

Sort & Filter Music

You can sort and filter music based on your preferences using the sort & filter option.


Filter

1. Press **A** or navigate to the sort and filter content icon , and press **OK**.
2. Press **►**, then **▲/▼** to select Filter by All Albums, All Tracks, Genre, Artist, Folders, Playlist, and Favorites. Press **OK** to display music by the criteria selected.




.....


Note: If you have your media files organized by folder, it may be easier and quicker to find your files by using the Filter option to only show folders.

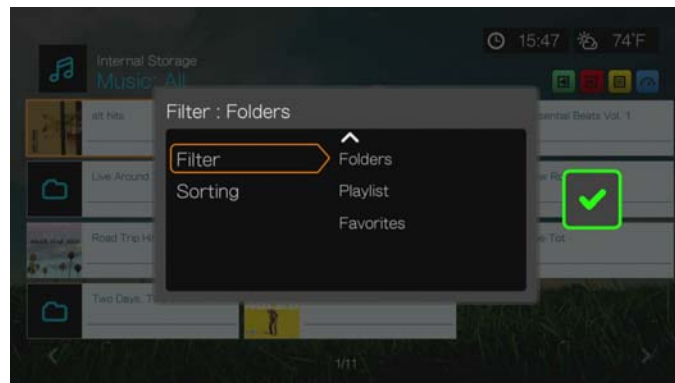


3. With the green check mark  selected, press **OK** again.

Sorting


1. Press **A** or navigate to the sort and filter content icon , and press **OK**.
2. Press **►**, then **▲**/**▼** to select Sorting by Date, Alphabetically, Ratings, or by Recently Viewed. Press **OK** to display music by the criteria selected in either ascending (arrow up) or descending (arrow down) order.

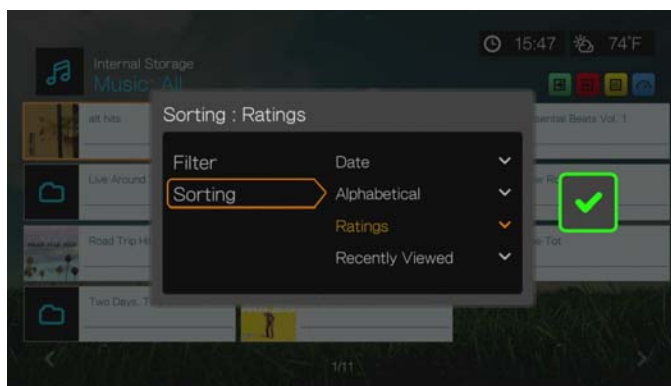

3. Press **►**. With the green check mark  selected, press **OK** again.

Music Menu Options

In the main video screen, press **Options**. The Music menu options display. Press **Back** when complete to return to the main menu.

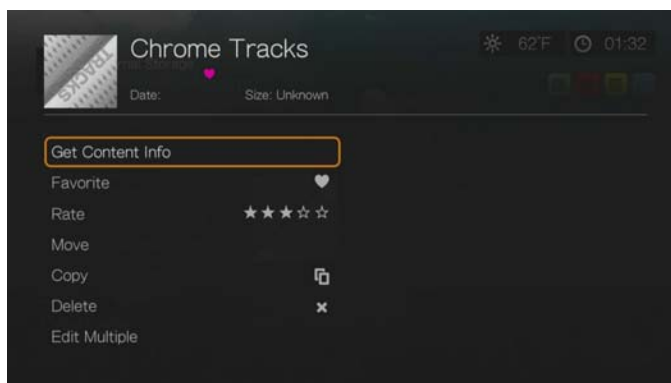

Get Content Info

The Music get content info function is the same as the Videos get content info function. See “Get Content Info” on page 38.

Rescan Info

The Music rescan info function is the same as the Videos rescan info function. See “Rescan Info” on page 39.

View Info

The Music view info function is the same as the Videos view info function. See “Video Playback Controls” on page 42.

Favorite

The Music favorite function is the same as the Videos favorite function. See “Favorite” on page 39.

Rate

The Music rate function is the same as the Videos rate function. See “Rate” on page 39.

Move & Copy

The Music move and copy functions are the same as the Videos move and copy functions. See “Move & Copy” on page 40.

Delete

The Music delete function is the same as the Videos delete function. See “Delete” on page 40.


Edit Multiple

The Music edit multiple function is the same as the Videos edit multiple function. See “Select Multiple” on page 41.

Preset Music

The Preset Music function allows you to assign a numbered button on the remote to a song for quick playback.

1. Press ▲/▼ to select **Preset Music**. Press ►.

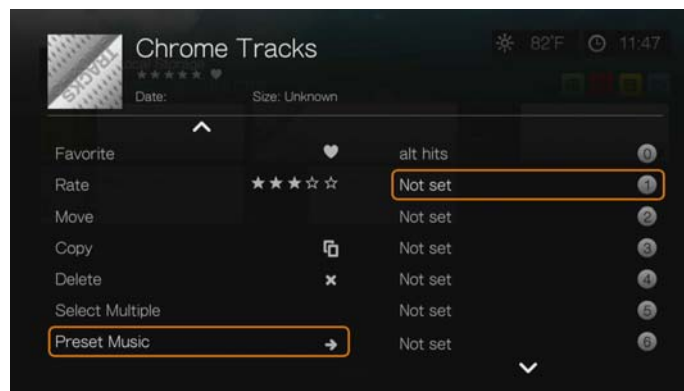

2. Press ▲/▼ to select a numbered remote button, then press **OK**.

Music Playback Controls

Use these buttons on the remote control to control music playback when in the music playback screen:

Button	Function
STOP	Stop audio playback
PAUSE/PLAY	Pause or resume audio playback
1. Press FF (fast forward) or REV (reverse) to scan the audio file (press repeatedly to select the scan speed). 2. Press PLAY to resume playback on the selected position.	Scan the audio playback forward or backward The media center supports the following scan speeds: 2x, 4x, 8x, 16x
Press PREV (previous track) once.	Start playback from the beginning
Press NEXT	Play the next audio track in the music folder/playlist
Press PREV (previous track) twice.	Play the previous audio track in the music folder/playlist
0-9	While listening to a song or music playlist, press and hold any of the 0-9 buttons to create a preset.




.....

Note: If you leave the music playback screen, the only playback controls that work are the **STOP** button (to stop music playback) and **Options** (during photo playback - to jump to the previous or next track).

Music Playback Screen

The music playback screen displays the following information about the currently playing album and/or audio file:

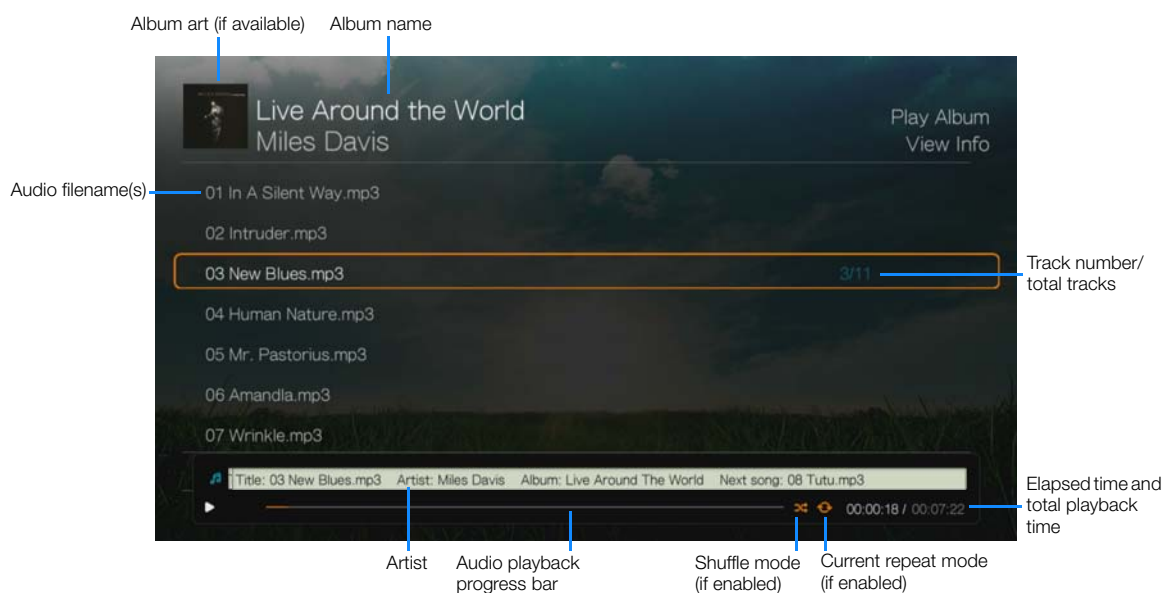

Music Playback Options

- To display the music playback options, press **Options**.
- To hide the options, press **Back** or **Options** again.



Get Content Info

The Music get content info function is the same as the Videos get content info function. See “Get Content Info” on page 38.

Rescan Info

The Music rescan info function is the same as the Videos rescan info function. See “Rescan Info” on page 39.

View Info

The Music view info function is the same as the Videos view info function. See “Video Playback Controls” on page 42.

Add to Queue

The Music add to queue function is the same as the Video add to queue function. See “Add to Queue” on page 39.

Favorite

The Music favorite function is the same as the Video favorite function. See “Favorite” on page 39.

Rate




The Music rate function is the same as the Video rate function. See “Rate” on page 39.

Play Mode

Use the music play mode to set repeat and shuffle options.

Repeat

To set the music repeat mode:



1. During music playback, press **Options**.
2. Select **Play Mode**, then press **OK** repeatedly until the repeat icon you want is displayed. Options include:
 - **Repeat All**  – All the audio files in the current music folder/playlist are played in sequence and repeatedly until you press **STOP** or **Back**.
 - **Repeat One**  – The current audio track is played repeatedly until you press **STOP** or **Back**.
 - **Repeat All and Shuffle**  – All the audio files in the current music folder/playlist are played repeatedly in sequence and shuffled until you press **STOP** or **Back**.

The icon for the enabled repeat mode will appear below the playback progress bar.

Shuffle

Use this option to set the audio tracks in the current music folder/playlist to play in random order.

To enable music shuffle mode:

1. During music playback, press **Options**.
2. Select **Play Mode**, then press **OK** repeatedly until the repeat icon you want is displayed. Options include:
 - **Shuffle**  – All the audio files in the current music folder/playlist are shuffled repeatedly until you press **STOP** or **Back**.
 - **Repeat All and Shuffle**  – All the audio files in the current music folder/playlist are played repeatedly in sequence and shuffled until you press **STOP** or **Back**.

Delete

The Music delete function is the same as the Videos delete function. See “Delete” on page 40.

Preset Music

See “Preset Music” on page 52.

Playing Music From Your iPod®

Apple® uses a proprietary naming scheme and because of this the media center is unable to display the original names for the folders and files as they are in your iPod. The media center instead reassigns new names for the folders and files, but only while in use with the media center. The original file information is preserved in your iPod. You can view the original file information when you play a file where the screen will display the metadata.



.....
Note: The media center does not support playback of protected premium content such as movies or music from the iTunes® Store, Cinema Now, Movielink®, Amazon Unbox™, and Vongo®.

To use your iPod with the media center, simply plug your iPod in to the USB port and navigate through the interface menu.



.....
Note: The media center only supports USB mass storage mode. iPod Touch is not a USB mass storage device and is therefore not supported.

8

Viewing Photos


You can view your digital photos both individually and in slideshow mode on your TV using the media center.

Supported Image File Formats


- **GIF** (Animated GIFs are not supported)
- **BMP** (non-compressed)
- **JPEG** (grayscale, RGB, YCbCr) (does not support CMYK or YCCK)
- **TIF/TIFF** (RGB) (does not support CMYK, YMC, YMCK, or KCMY)
- **PNG** (Non-alpha channel only)

Photo Display

1. Navigate to the Home | Photos menu, then press **OK**.

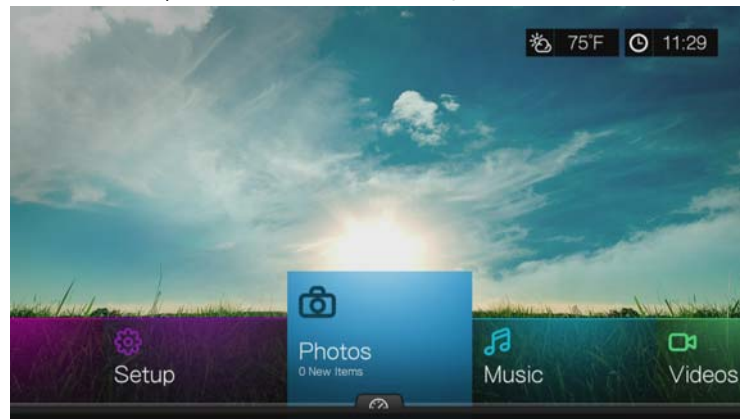

2. The screen displays available music files and folders in the media center's local drive by default. The display will either be in grid view (default) or list view, depending on your Browser Display setting (see "Photo Settings" on page 185 for more information on Browser Display settings).

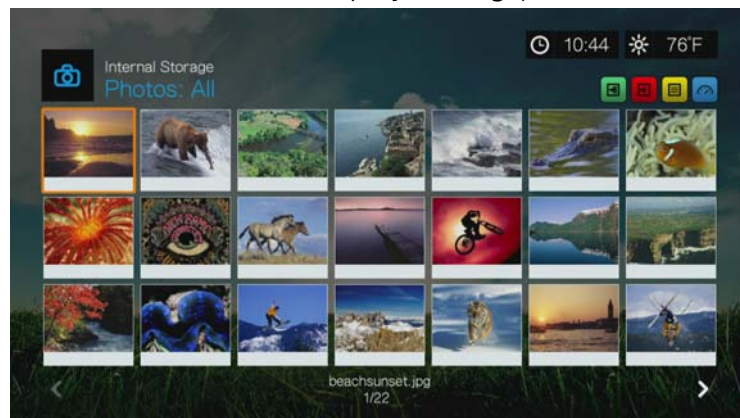

3. If Media Library is enabled, you can choose to navigate using sorting (Alphabetical, Date, Ratings, Recently Viewed) and filter options (All Pictures,

Date, Folders, Recent). See “Supported Categories for Media Library Compilation” on page 30 for details.


4. Locate the picture file you want to view.
 - To open a single picture file for viewing, select the file, and then press **OK**.
 - To view the next picture file in the photo folder, press **⏮** (next).
 - To view the previous picture file in the photo folder, press **⏭** (previous).
 - To find picture files on a network share or media center, follow the instructions in “Accessing Media Content from the Network” on page 74.

You can also view a slideshow using all picture files in a photo folder. See “Photo Slideshow” on page 64 for instructions.

Sort & Filter Photos

You can sort and filter photos based on your preferences using the sort & filter option.


Filter

1. Press **A** or navigate to the sort and filter content icon , and press **OK**.
2. Press **▶**, then **▲**/**▼** to select Filter by All, Date, Folders, and Favorites. Press **OK** to display music by the criteria selected.




.....


Note: If you have your media files organized by folder, it may be easier and quicker to find your files by using the Filter option to only show folders.

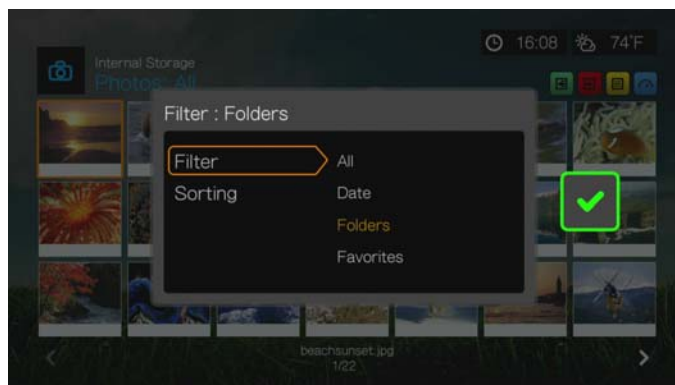

3. With the green check mark  selected, press **OK** again.

Sorting

1. Press **A** or navigate to the sort and filter content icon , and press **OK**.
2. Press **►**, then **▲**/**▼** to select Sorting by Date, Alphabetically, Ratings, or by Recently Viewed. Press **OK** to display photos by the criteria selected in either ascending (arrow up) or descending (arrow down) order.

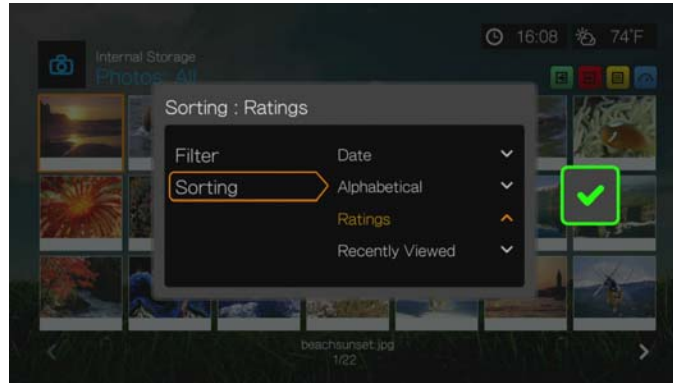

3. Press **►**. With the green check mark  selected, press **OK** again.

Digital Camera Support

You can attach your digital camera to the media center via a USB port and view the supported image files stored in the camera's memory card.


To view images from a digital camera:

1. Attach your digital camera to the media center via the USB port.
2. Press **OK** to close the message (the media center sees the camera's memory card as a read-only device).
3. Navigate to the Home | Photos menu.
4. The digital camera is considered a USB device. Use the navigation buttons to select, then press **OK**.

The screen displays thumbnails of available picture files and photo folders. Only image files supported by the media center are displayed.

Photos Menu Options

In the main photo screen, press **Options**. The Photos menu options display. Press **Back** when complete to return to the main menu.

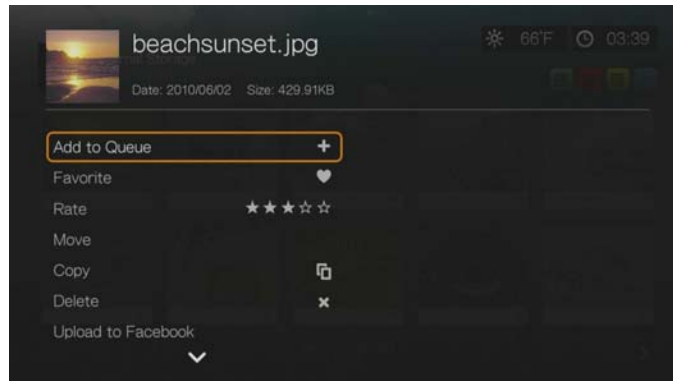

Add to Queue

The Photos add to queue function is the same as the Videos add to queue function. See “Add to Queue” on page 39.

Favorite

The Photos favorite function is the same as the Videos favorite function. See “Favorite” on page 39.

Rate

The Photos rate function is the same as the Videos rate function. See “Rate” on page 39.

Move & Copy

The Photos move and copy functions are the same as the Videos move and copy functions. See “Move & Copy” on page 40.

Delete

The Photos delete function is the same as the Videos delete function. See “Delete” on page 40.

Upload to Facebook


The Photos upload to Facebook function is the same as the Videos upload to Facebook function. See “Upload to Facebook” on page 40.

Upload to Picasa

You can upload a photo to Picasa by selecting this option.

1. Press **▲/▼** and select **Upload to Picasa** from the list of options.
2. If prompted to sign in, select **Yes**, then press **OK**, and enter your Picasa username and password using the on-screen keyboard.


3. The screen below displays. Press **OK**.

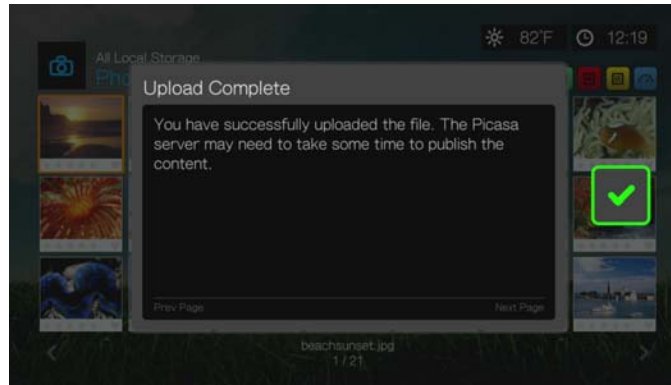

Set as Background

You can set any photo as the system background to replace the default grass field and sunny sky photo or other photo you have previously selected.

1. Find and select the photo you want to use for the background in the Photos menu, then press **OK**.
2. Press **Options**.
3. Select **Set as Background**, then press **►**.
4. Select one of the photo scaling options (**Keep as Original**, **Fit to Screen**, or **Distort to Screen**), then press **OK**.

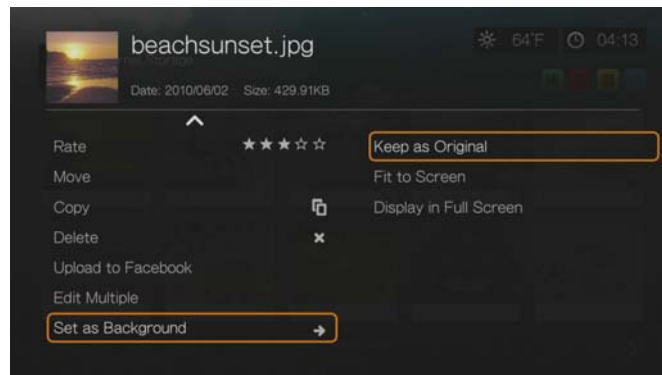


Select Multiple

The Photos edit multiple function is the same as the Videos select multiple function. See “Select Multiple” on page 41.

Photo Display Options

- To display the photo options while viewing a photo, press **Options**.
- To return to the photo you were viewing, press **Back** or **Options** again.

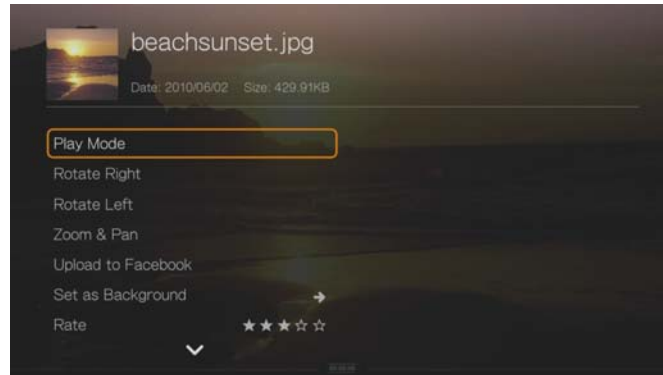

Play Mode

Use the play mode option to set repeat and shuffle options.

1. During photo playback, press **Options**.
2. Select **Play Mode**, then press **OK** repeatedly until the repeat icon you want is displayed. Options include:
 - **Repeat All** – All the photo files in the current photo folder are played in sequence and repeatedly until you press **STOP** or **Back**.
 - **Shuffle** – All the photo files in the current photo folder are shuffled repeatedly until you press **STOP** or **Back**.
 - **Repeat All and Shuffle** – All the photo files in the current photo folder are played repeatedly in sequence and shuffled until you press **STOP** or **Back**.

Rotate Left & Right

1. During photo viewing, press **Options**.
2. Select **Rotate Left** or **Rotate Right**, then press **OK**.
3. Press **Options** and select **Rotate Left** or **Rotate Right** again as needed until the rotation you want is set for the photo.

Selecting Photo Zoom and Pan Options

See “Selecting Video Zoom and Pan Options” on page 45.

Upload to Facebook

See “Upload to Facebook” on page 40.

Upload to Picasa

See “Upload to Picasa” on page 60.

Set As Background

See “Set as Background” on page 61.

Rate

See “Rate” on page 39.

Favorite

See “Favorite” on page 39.

Add to Queue


See “Add to Queue” on page 39.

Delete

See “Delete” on page 40.

Displaying Photo Thumbnails

While viewing a photo or slideshow, press ▼ to display thumbnails of all your photos. Use the ◀ ▶ navigation buttons to select another photo to view, then press **OK**.

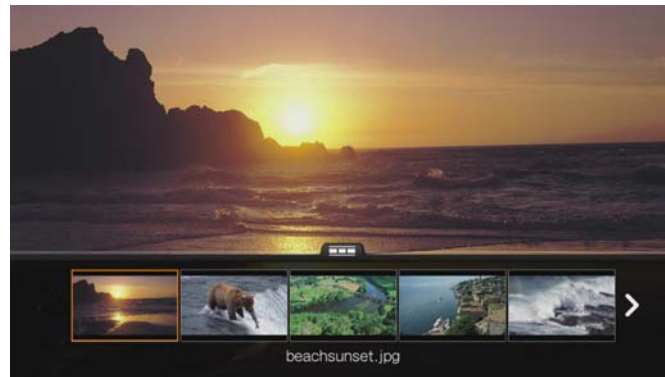

Displaying Photo Information

Use this option to display the Picture Information Panel on the bottom of the screen. This panel shows the following information about the current picture:

- Image filename
- Source
- Image file size and resolution
- Image's sequence number and the total number of image files in the current photo folder

To view the photo information panel:

- During photo viewing, press **OK**. Press **Back** to hide photo information.

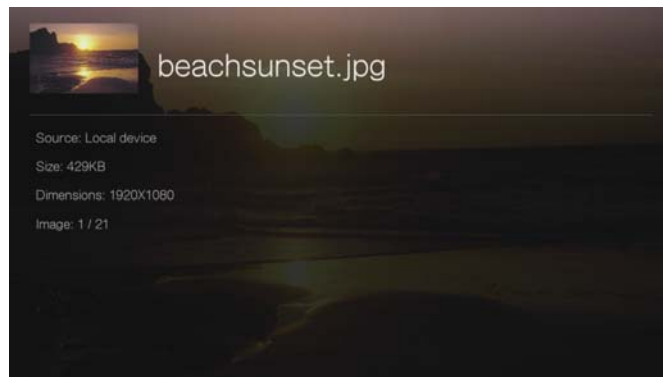


Photo Slideshow

The media center allows you to create a slideshow using the contents of a photo folder.

To start a slideshow:

1. Locate the photo folder containing the image files you want in the slideshow. (See "Photo Display" on page 57.)
2. Select the photo folder, then press **PAUSE/PLAY** to start the slideshow.

To listen to background music with a slideshow:

1. Navigate to the music folder containing the audio file/playlist you want to accompany the slideshow. (See "Music Playback" on page 49.)
2. Select the audio file/playlist, and then press **PLAY**.
 - If you selected a single audio file, you may want to enable it to play repeatedly so it doesn't stop before the slideshow is done.
 - If you selected a music playlist, you can choose to enable the repeat or shuffle mode.
3. Press **HOME**, and then start the slideshow (as described above).

Slideshow Playback Controls

Use these buttons on the remote control to control slideshow playback:

Button	Function
STOP	Discontinue the slideshow
PAUSE/PLAY	Pause or resume the slideshow
NEXT	Display the next picture file in the slideshow
PREV	Play the previous picture file in the slideshow

Repeating and/or Shuffling a Slideshow

Access Setup > Photo settings to repeat and/or shuffle a slideshow. See “Slideshow Sequence” on page 185.


9

Files


You can view and manage all of your media files in one place using the Files menu.

Files Display

1. Navigate to the Home | Files menu, then press **OK**.

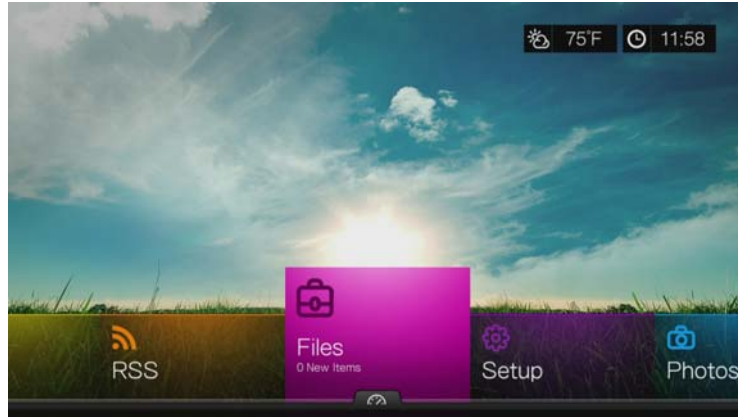


2. The screen displays all available media files and folders in the media center's local drive by default. The display is in list view.

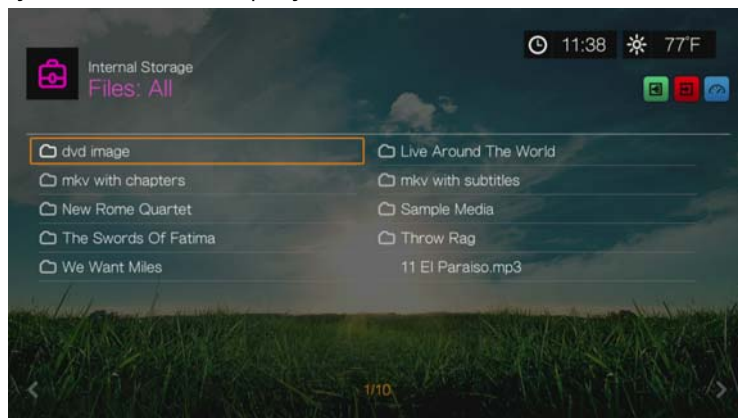

3. Locate a file you want to play.
 - To play a single file, select the file from the list or by navigating through the folder structure, then press **OK**.
 - Follow the instructions under “Watching Video” on page 36, “Playing Music” on page 49, or “Viewing Photos” on page 57.
 - To find files on a network share or media server, follow the instructions in “Accessing Media Content from the Network” on page 74.

Sorting Files

The Files sorting function  is the same as the Videos sorting function. See “Sorting” on page 38.

Files Options

To manage files (move, copy, delete, rename, and select multiple), do the following:

With an individual file or folder selected, press **Options**.



Move & Copy

The Files move and copy functions are the same as the Videos move and copy functions. See “Move & Copy” on page 40.

Delete

The Files delete function is the same as the Videos delete function. See “Delete” on page 40.

Rename

To rename a folder or file, select **Rename** then enter in the new name using the on-screen keyboard.

Select Multiple

The Files edit multiple function is the same as the Videos select multiple function. See “Select Multiple” on page 41.

10

Network Setup


The media center can be connected to the local area network using a wired or wireless network connection for access to streaming video and online and offline media content.

Ethernet Network (Wired) Setup


1. Plug an Ethernet cable into the Ethernet connector on the media center.
2. Plug the opposite end of the Ethernet cable directly into a LAN port on a router or network switch.



3. Navigate to the Home | Setup menu bar.
4. Press ▲/▼ to select **Network Settings**, then press **OK**.

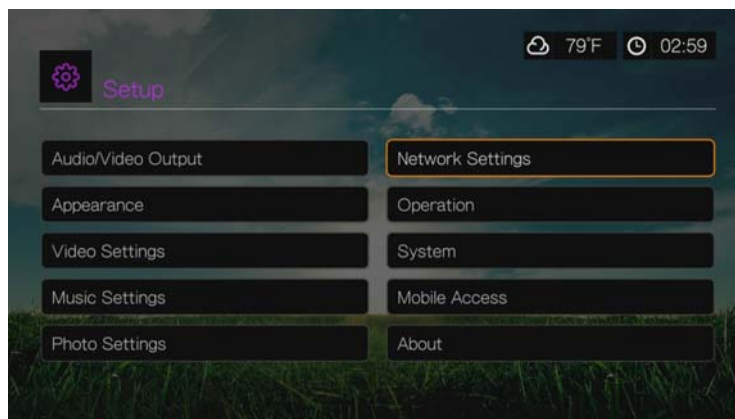


5. Press ▲/▼ to select **Network setup**, then press **OK**.

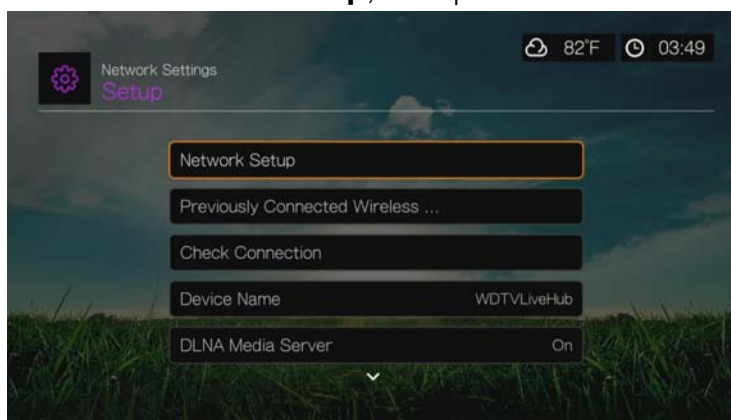


6. Select a setup configuration option, then press **OK**.

Select **Automatic** to have the device attempt to detect your network connection automatically, then go to step 11.

Select **Manual** to manually set your network connection, then proceed to step 7.

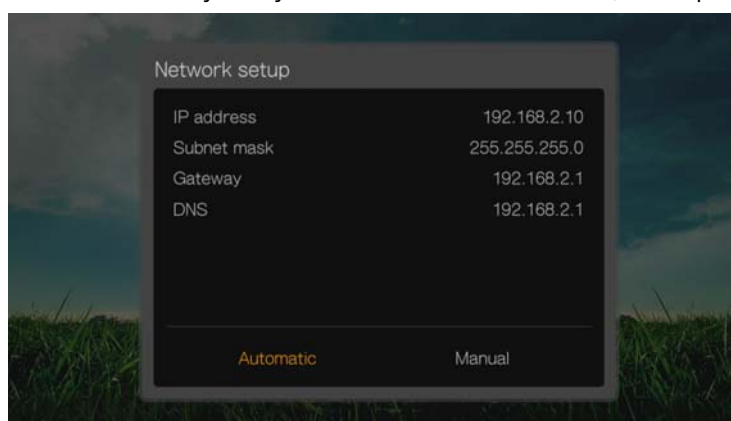


7. Once the network is detected, the following screen appears. Press ▲/▼ to select IP address, then press **OK**.

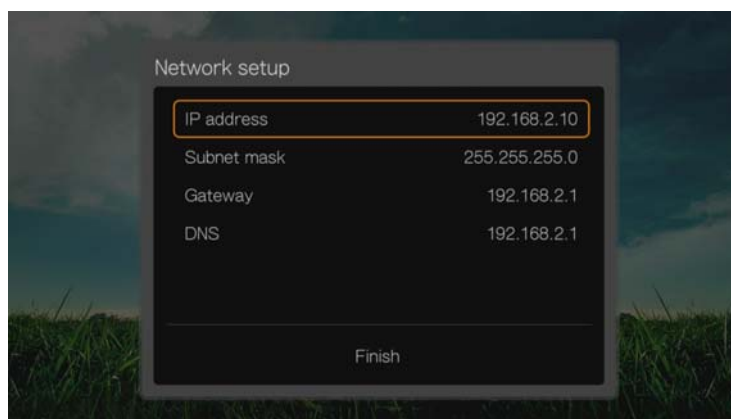

8. Press ◀▶ to key in your IP address using the on-screen keyboard. Select **Submit**, then press **OK**.



9. Repeat the step above to key in values for the subnet mask, gateway, and DNS settings.
10. After entering all the configuration settings, select **Finish**, then press **OK**.
11. Once the network is detected, the following screen appears. Press **OK** to display the Home screen.

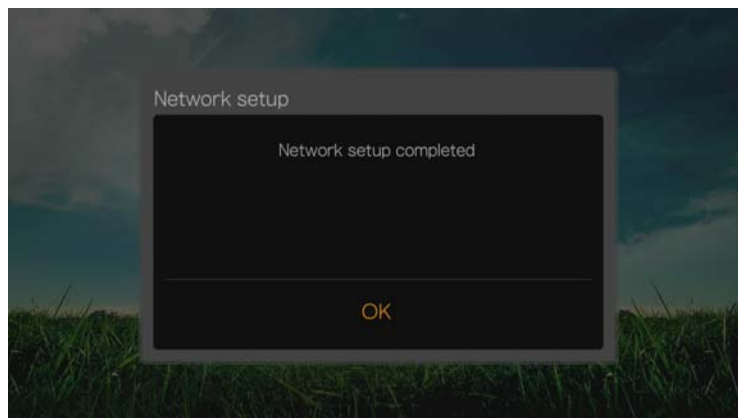

After establishing a network connection, you can:

- Use the different Internet services integrated into your media center to access streaming media. Go to the next chapter for more information on these services.
- Transfer files between the media center and your computer (PC or Mac). Procedures for copying and moving files between the media center and your computer are described in “Step 3 - Loading Content On Your Media Center” on page 18.

Wireless Network Setup



Important: Streaming over wi-fi may be unstable due to various reasons such as a weak network connection, signal strength, variable speeds, or other environmental factors. You can create instant high-speed, wired network connections and gain fast, reliable access to the Internet without running wires all over your house using WD Livewire Powerline AV Network kit (sold separately). For more information, visit <http://products.wdc.com/WDLivewire>.


1. Connect a USB wireless adapter (sold separately) to the USB port on your media center.



Note: For a list of tested, compatible wireless USB adapters, see Article #5688 in our knowledge base at <http://support.wdc.com>.




2. Press **OK**.
3. Press **▲/▼** to select a wireless network setup option, then press **OK**.

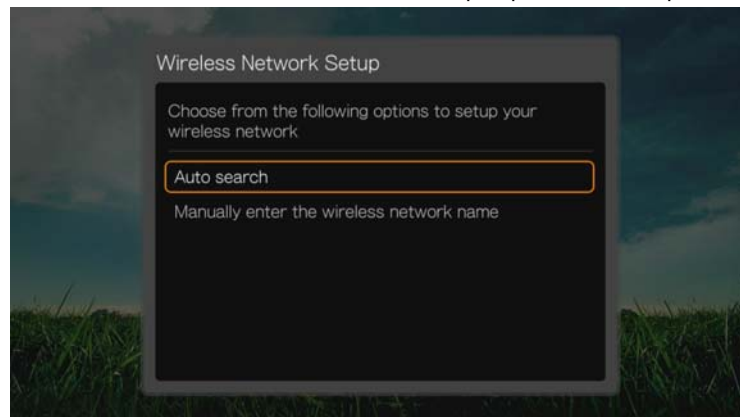

If you choose **Auto search**, the unit will search for available access points in your area. Proceed to step 4.

Choose **Manually enter the wireless network name** to input the network name manually, then proceed to step 5.

4. Press **▲/▼** to select the access point you want to connect to, then press **OK**. Proceed to step 6 to continue Auto search.
5. Use the navigation buttons **▲▼◀▶** to type in the network name for the access point you want to connect to, select **Submit**, then press **OK**.
6. Use the navigation buttons **▲▼◀▶** to key in the passcode for the access point, select **Submit**, then press **OK**.

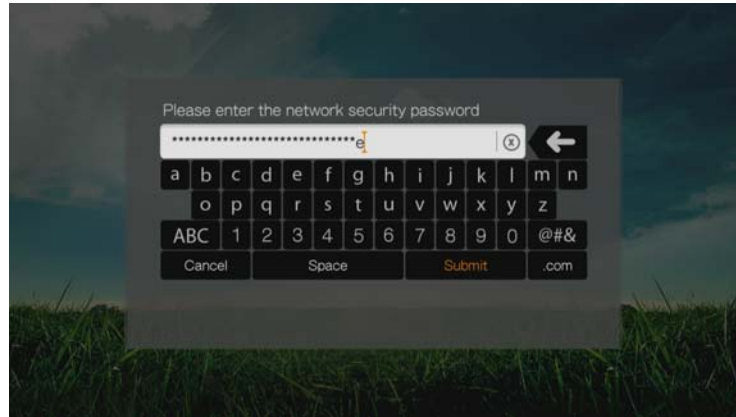

7. Use the navigation buttons **◀▶** to select **Automatic** (obtains IP address automatically from the router) or **Manual** (input static IP address manually), then press **OK**. If you selected **Manual**, follow steps 7-10 under “Ethernet Network (Wired) Setup” on page 68. When finished, proceed to step 12 below.
8. Once the network is successfully set up, press **OK** to display the Home screen. After establishing a network connection, you can:
 - Use the Internet services integrated into your media center to access streaming media. Go to the next chapter for more information on these services.
 - Transfer files between the media center and your computer (PC or Mac). Procedures for copying and moving files between the media center and your computer is described in “Step 3 - Loading Content On Your Media Center” on page 18.


Checking the Network Connection

If you experience network problems, check the network connection to determine the cause of the problem.


To check the network connection:

1. Press **Setup** or navigate to the Home | Setup menu bar.
2. Press **▲/▼** to select Network Settings, then press **OK**.

3. Press ▲/▼ to select **Check connection**, then press **OK**.

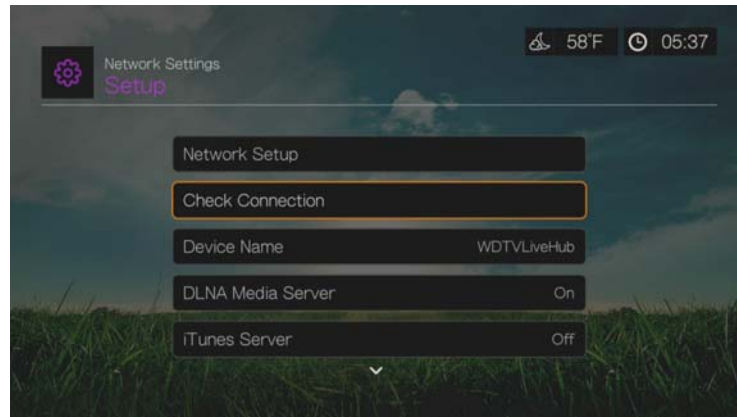

The unit will automatically check the network connection. Once the check is completed, the results display. A green check mark on these items indicate that there is no problem with your network settings. If a problem is indicated, check your router settings and manual for a solution.

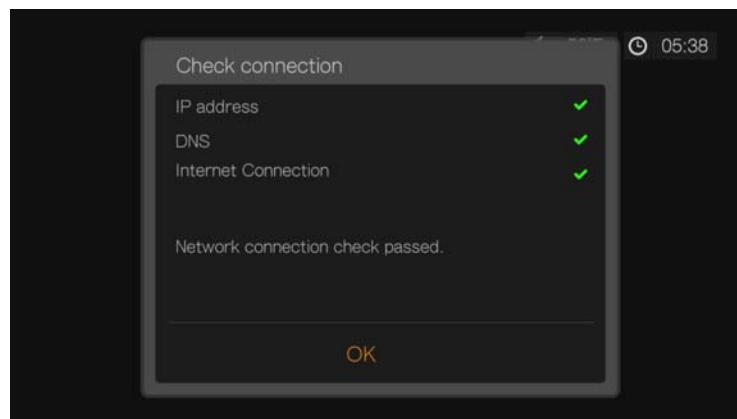

A red cross mark indicates a problem with the network settings. It can either be the IP address or the DNS server address. If the problem persists, check with your Internet service provider.


11


Network Services

Accessing Media Content from the Network

Once the media player has an active network connection, you can access media content from a Network Attached Storage (NAS) device or shared computer located on the same network as your media player. You can also access content from USB storage connected to the media player. The benefits and applications of each content source type are described below.

To access media content from a network share, media server, USB storage, or online account:

1. Navigate to the Home screen, and select the menu for media content you wish to access. It can be Music, Videos, or Photos. Press **OK**.
2. Press **OK** to select a new content source or press **B** or **▲/▶** to select Select Content Source , then press **OK**.
3. Press **▲/▼** to select the network resource where the media content you want to access is located, then press **OK**.

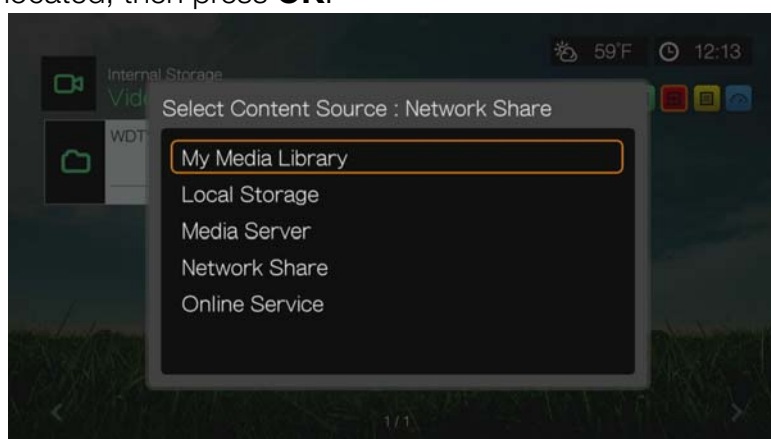

Note: My Media Library does not appear if the media library is turned off (see “Media Library” on page 190).


Content Source	Best for accessing...
My Media Library	Internal storage, all available network shares, and attached USB storage (slow scan—depending on the number of files and connection speed, the scanning time required to compile the media library may be increased).
Local Storage	Internal storage and storage devices attached to USB ports 1 and/or 2.
Media Server	Network-attached media server devices for ease of use (optimal for DLNA certified server devices such as WD's My Book® Live™).
Network Share	
Windows Shares	Windows network shares, most network attached storage drives, legacy Mac OS before Lion, and other devices that uses SMB/CIFS protocol.
Linux Shares	Linux (NFS) network shares (recommended for advanced power users).
Online Service	Photos and videos posted in your Facebook and Picasa online accounts.

My Media Library

The benefit of selecting this option is that it shows all the aggregated content on your network attached and USB storage together in one view. However, it does take longer to scan all the storage content compared to selecting a more specific option for content retrieval.

Internal storage is automatically included in the Media Library. To add additional source content to My Media Library, please do one of the following:

- Attach USB storage to one of the USB ports on the media center and it is automatically added to media library.
- Connect to a Windows or Linux Share (see “Network Share” on page 76). While browsing the content inside, press **Option** to add a share folder to the Media Library.

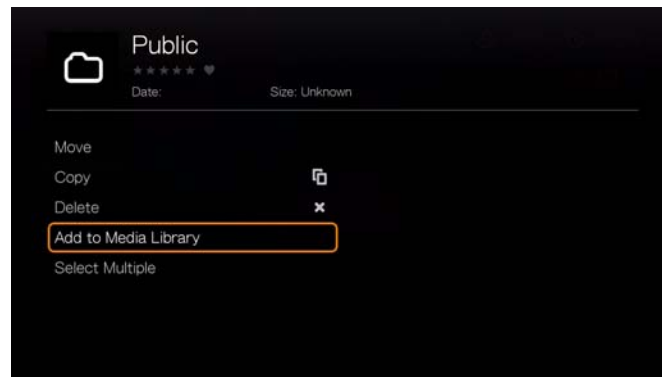


- Use the Media Library Manager for Network Share (see “Media Library Manager for Network Share” on page 191), and select **Add network share to media library** to manually add individual share folders to the media library. A maximum of 10 shares can be added.

Local Storage

Select **Local Storage**, then **Internal Storage** to access media content on the media center’s internal hard drive.


Select **Local Storage**, then **USB1** or **USB2** to access media content on one or more USB storage devices connected to the media center’s USB 1 or USB 2 ports.

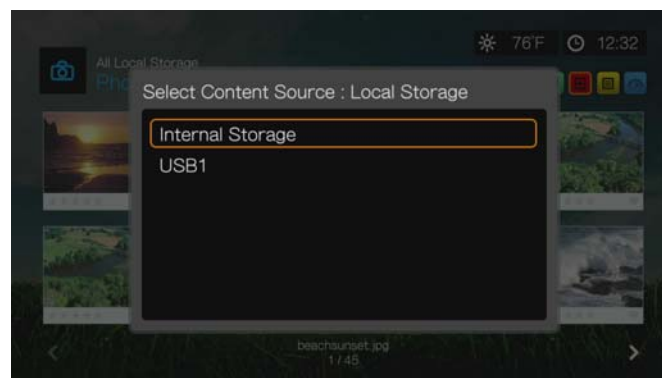

After selecting USB 1 or USB 2, the media player scans the drive to build the media library by default (if enabled).

Media Server

This menu displays network attached UPnP media servers connected to your network and usage is optimized with DLNA compliant devices such as WD My Book Live personal cloud storage and other WD TV Live Hub media centers.

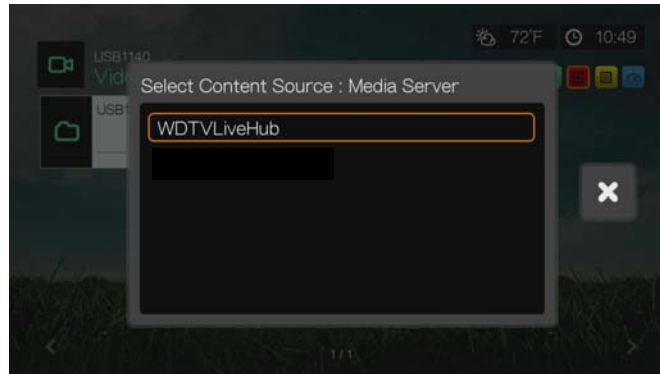


The benefit of using a media server is that it aggregates the content together from the device that is hosting it. The media server hosts a list of supported file formats with metadata information that allows a client device like the media player to easily browse and play back the content.

However, using a media server can restrict supported file types and you may not be able to see all the files stored in the media server. When using a Network Share, every file is presented to the media player and it does the content filtering based on what it can support.

Follow the steps below under “Accessing a Shared Folder,” selecting the name of your media server and referencing your media server documentation for password setup and administration if necessary.

Network Share


The media player supports Windows (SMB/CIFS), and Linux (NFS) network shares.

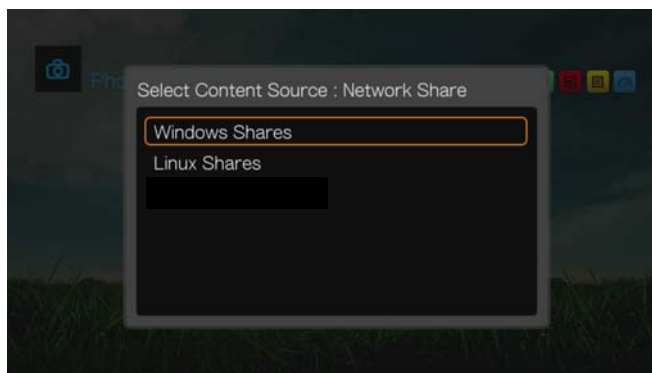

Windows Shares

Windows Shares uses Samba (also known as SMB/CIFS), a more common protocol among devices such as PC, NAS, and Mac (before Lion). If you want to simply discover and/or share a folder on the network to be accessed by the media player, Samba is a common method, especially for Windows.

Windows Shares display shared computers and network attached storage devices (such as WD's My Book Live personal cloud storage NAS drive) connected to your network via the Samba protocol.

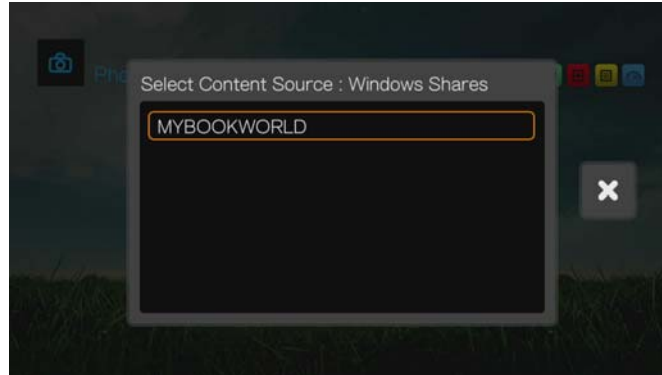

Linux Shares

Linux Shares uses NFS, which is popular with power users and Linux users because of the increased speed and performance it can provide. NFS is better suited to Linux since using NFS with Windows requires installation of third party applications.


Follow the steps below under “Accessing a Shared Folder,” selecting the name of your NAS device or computer and referencing your NAS device or operating system documentation for password setup and administration if necessary.

Accessing a Shared Folder

To create a shared folder, follow the instructions under “Share a Folder on Your Computer” on page 78.

To access a shared folder under Network Share:

1. Select the name of your computer and press **OK** twice.

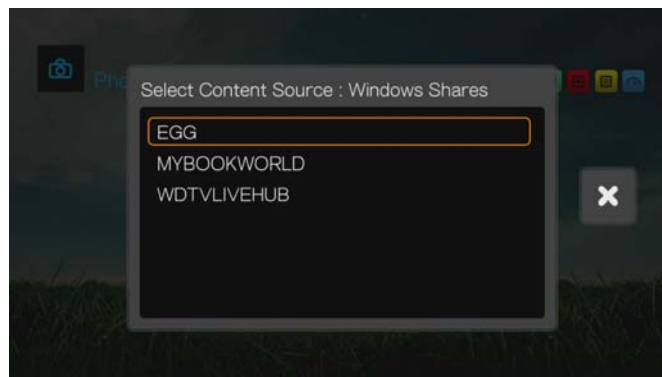


2. If necessary, enter your user name and password to access your computer, or accept the default login. For further information regarding password setup and administration, refer to your operating system documentation.
3. Press ► to select **OK**, then press **OK**. Supported content for the selected media type displays.
4. Select the content you wish to access, then press **OK** to start media playback.

Accessing Network Attached Storage


Follow the steps above under “Accessing a Shared Folder,” selecting the name of your NAS device and referencing your NAS device documentation for password setup and administration.


Online Service

This menu allows you to connect to media content stored in your Facebook and Picasa online accounts. Select **Facebook** or **Picasa** and enter your user name and password to access your media content.

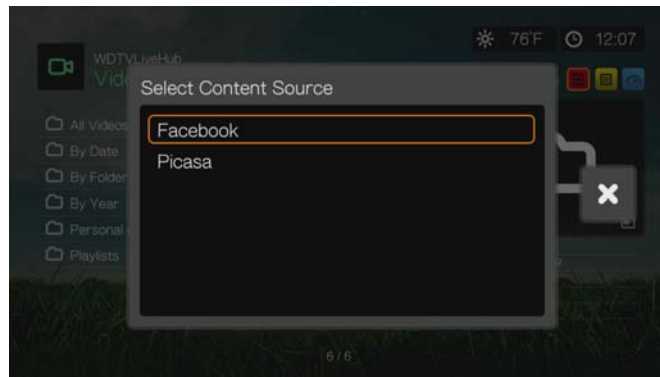

Logging in to a Network Resource or Online Account

When accessing a network resource, you need to enter in the user name and password for the device or account using the on-screen keyboard. In some cases, a default anonymous login displays if no password is set for the device. When this happens, accept the default login, select , then press **OK**.

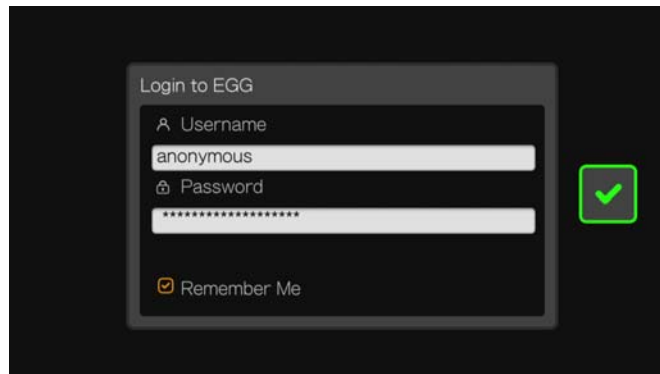

Select **Remember Me** and press **OK** to have the media player remember the user name and password for the resource.

Share a Folder on Your Computer

You can view and play back digital media content stored on your computer by sharing one or more folders containing the media.

Make sure the media player and your computer are both attached to the network, then follow the instructions below for your operating system (Windows 7/Vista/XP or Mac).



Important: Be sure to update your operating system to the latest update or service pack. Depending on your network's configuration you may need to disable or adjust your Firewall settings to view your shared folder on your network. Contact your Firewall manufacturer for assistance.


When finished following the instructions for your operating system, go to "Accessing a Shared Folder" on page 77.

Windows 7


Change Settings to Allow Folder Sharing

The first thing you need to do to allow folders to be shared with the WD TV Live is to determine how your network is configured. Follow the instructions below to determine what kind of network you have.

1. From the Control Panel, click **Network and Internet**.
2. Click **Network and Sharing Center**.
3. Look under View your active networks to determine if your network is Home, Work, Public, or Domain.

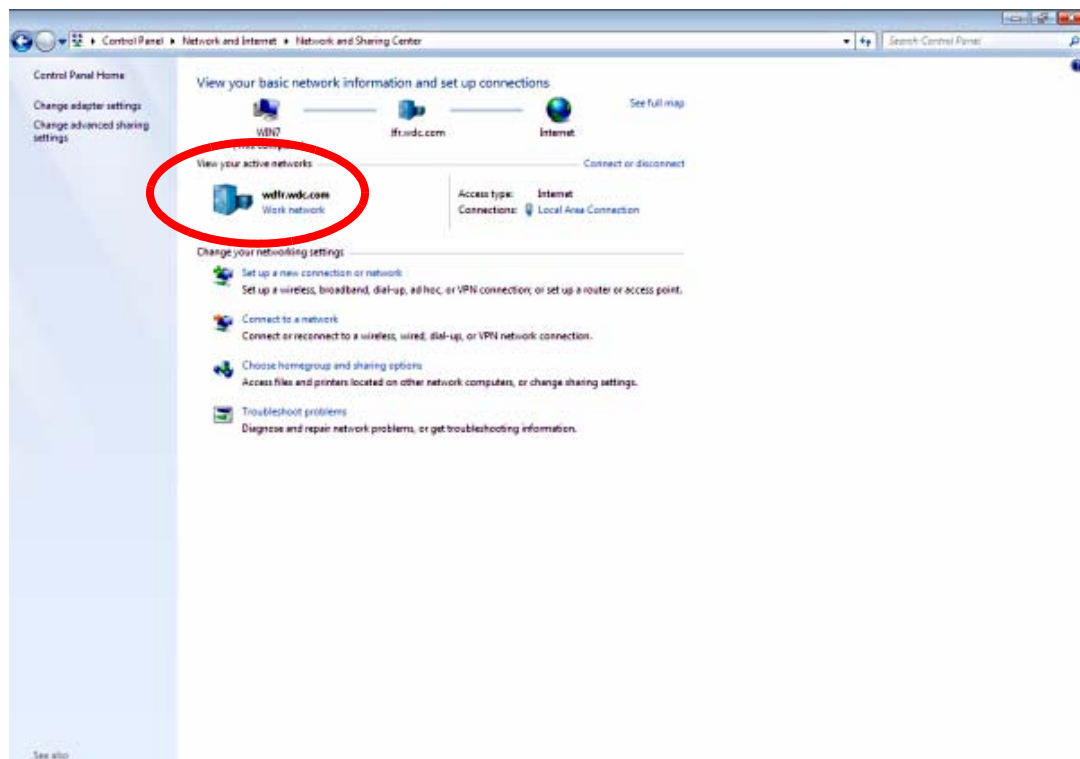

4. If you have a Work network, proceed to step 6. If you have a Public network, click the **Public network** link.

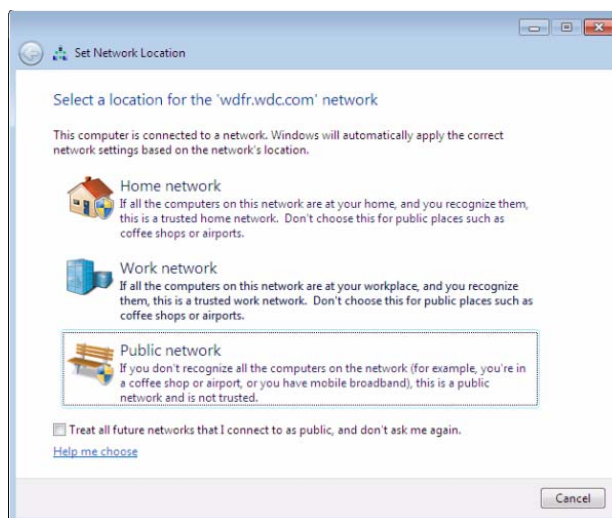5. Click **Work network**.

6. Click the **Choose homegroup and sharing options** link.
7. Click the **Change advanced sharing settings...** link.
8. Ensure that the following options are selected: **Turn on network discovery**, **Turn on file and printer sharing**, **Media streaming is off**, and **Allow Windows to manage homegroup connections (recommended)**.




.....

Note: WD does not support streaming from a domain server, or a computer attached to a domain, to the WD TV Live. Please contact your domain administrator or Microsoft® Support for assistance.

Share a Folder


Follow the instructions below to share a folder in Windows 7.

1. Navigate to the folder you want to share. Once found, right-click on the folder and select **Properties**.
2. Click the **Sharing** tab.
3. Click the **Advanced Sharing** button.

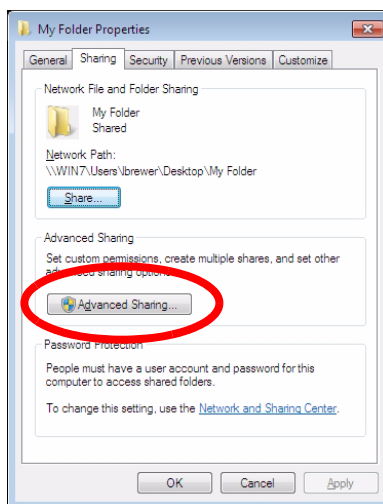


4. Click the **Share This Folder** box.

5. Enter the name you would like this folder to appear on the network as in the **Share name** box.
6. Click the **Permissions** box.

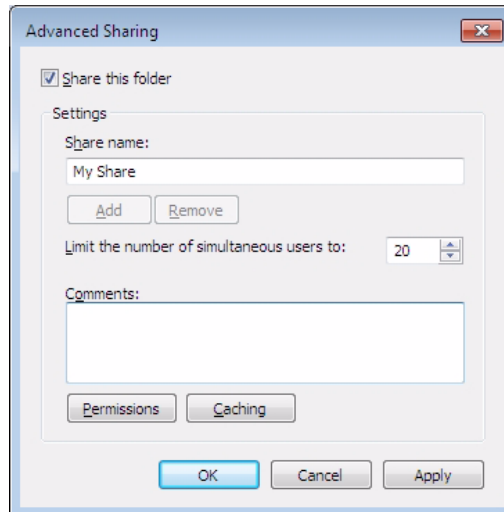

7. Select the users you would like to give access to and the permissions you would like to assign to that user, then click **OK**.

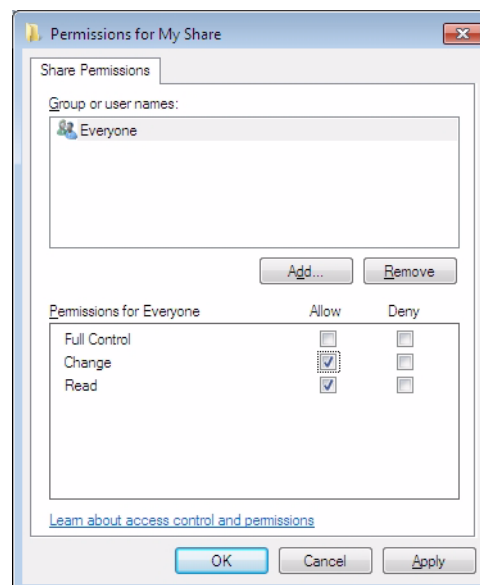

8. Click **OK** to close the Advanced Sharing window.
9. Finally, click on **OK** one more time to close the folder properties window and save your changes.

Windows Vista


Change Settings to Allow Folder Sharing

Follow the instructions below to configure your computer for folder sharing in Windows Vista.

1. Open the Network And Sharing Center from the Control Panel.



2. Next to the name of the network look to see if it is a Private or Public network.
3. If your network is Private skip to step 5 below. Otherwise, click the **Customize** link.
4. Click **Private**, then click **OK**.
5. If it is set to **Off** expand the **File Sharing** field and change it to **On**.
6. If you want to share the pre-designated Public folders in Windows, expand the **Public folder sharing** field under Sharing and Discovery.

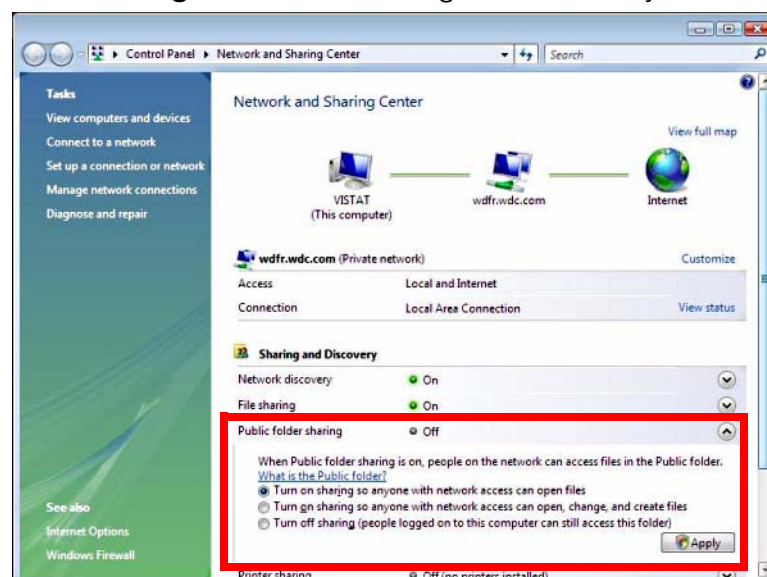


7. Select your choice of the two "Turn on sharing..." options.
8. Click **Apply**.


Share a Folder

Follow the instructions below to share a folder in Windows Vista.

1. Navigate to the folder you want to share. Once found, right-click on the folder and click **Share**.
2. If your system requires a login to access a shared folder, select a User account to assign to the share, then click **Share**. Otherwise, simply click the Share button.

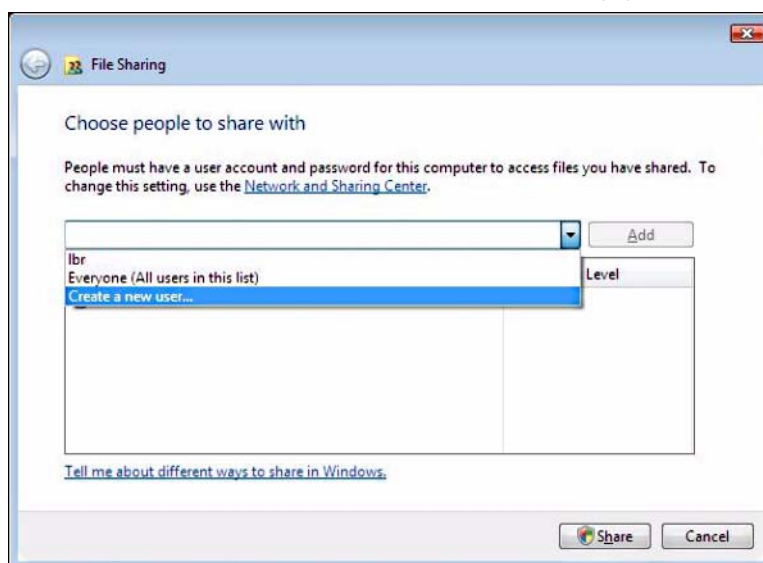

3. Under Sharing and Discovery expand the **Public folder sharing** field.

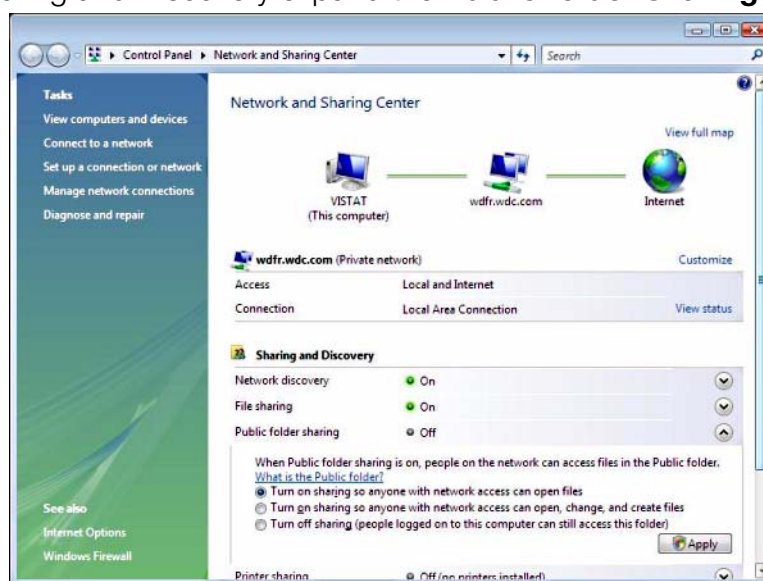


4. Depending on your system speed you may or may not see a progress bar while the permissions on the folder are updated. Click **Done**.

Windows XP

Follow the instructions below to share a folder in Windows XP.

1. Right-click on the folder you want to share and select **Sharing and Security**.
2. Click **Share this folder**.
3. Choose a name you want the folder to appear as on your network and enter it in the **Share Name** field.

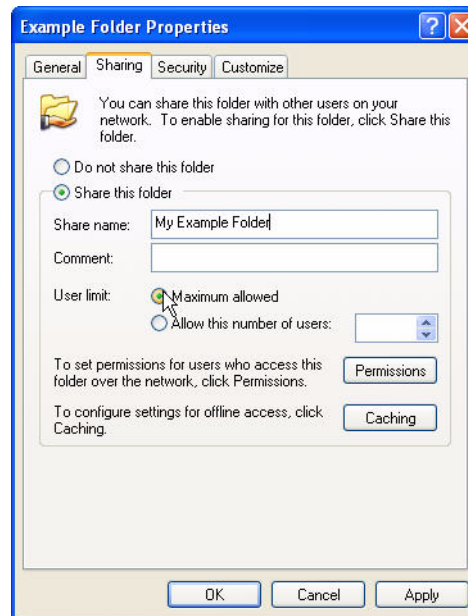

Note: You can also set a maximum number of users able to access your drive at one time. To do this, click "Allow this number of users: " and set the number in the field to the right.

4. Click **OK**.


Mac

Follow the instructions below to share a folder within Mac OS 10.5 or 10.6.


1. Open the Apple menu from the upper left corner of your screen and click **System Preferences**.
2. Click the **Sharing** button under the Internet & Wireless group.



3. Choose a name for your computer on the network and type it in the **Computer Name** field.
4. Click the box next to **File Sharing** to turn on the file sharing service. Then click on the **+** sign button below the **Shared Folders** box.

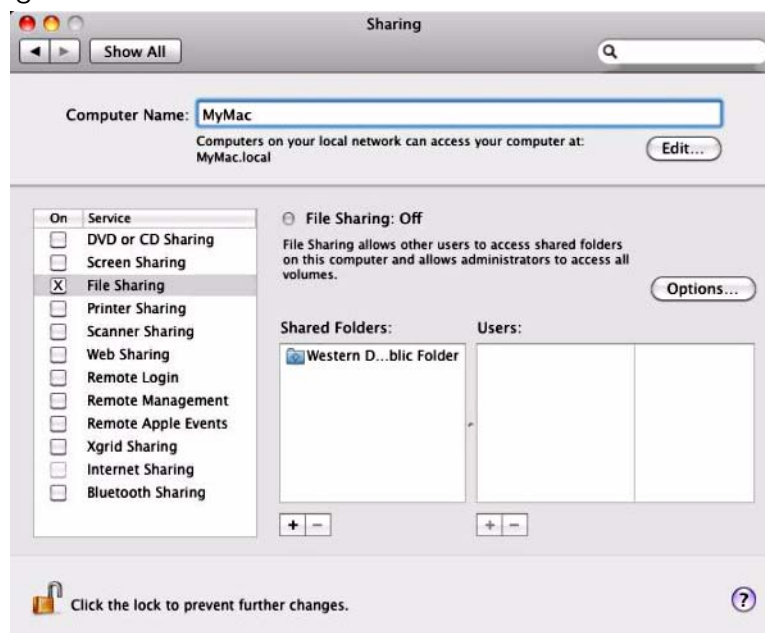

5. To share additional folders beyond the default Public folder, select the folder you would like to share and click the **Add** button.

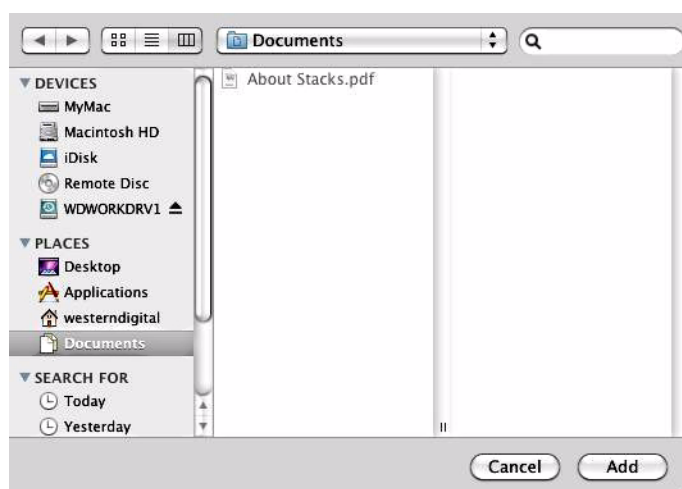

6. Click on the red **x** in the upper left corner to close the window.

Using the Web UI

The media center provides a Web-based user interface (UI) that can be used to control certain functions. You must use a network-connected computer or smart phone to use the Web UI.



Important: Your media center must be set up on the network (see “Network Setup” on page 68 for further information) to use the Web UI.


Launching the Web UI

1. Open a Web browser and type in your media center's IP address in the address field. Press **ENTER** on your computer keyboard.




Note: To find your media center's IP address, press **Setup** on the remote controller and navigate to **Network Settings**. Select **Network Setup** to see the media center's IP address.

2. The Web UI launch page displays. Enter the default password (“admin”) in the **Password** field.
3. Select your preferred language from the **Language** list.
4. Click **I accept END USER LICENSE AGREEMENT**. You can also click **Keep me signed in** (optional). Click **Login**.

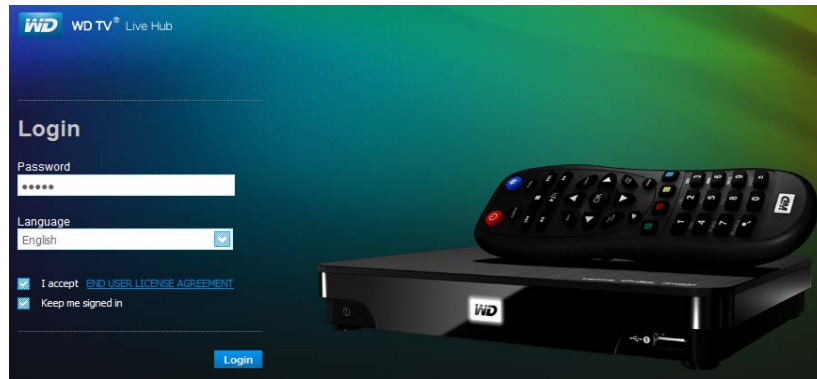


5. The Web UI menu options display.

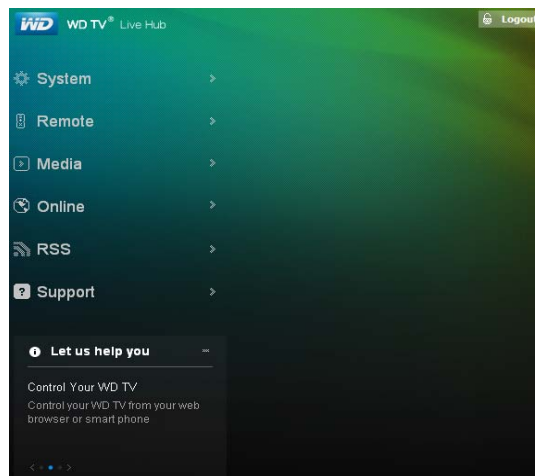


System

Click **System** in the Web UI home page to manage the system status of your media center and view general network information. You can change the password, set system preferences, and choose date and time settings using these options.

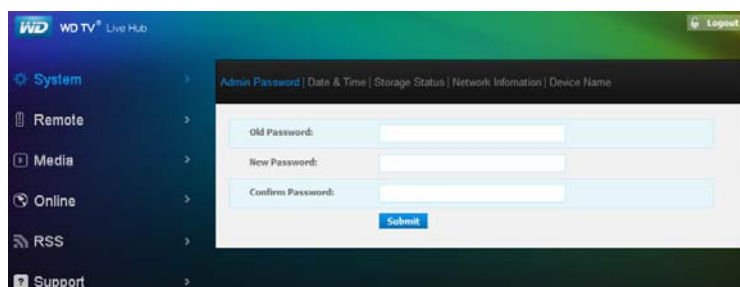

Remote

Click **Remote** in the Web UI home page to control the media center using your computer. Click the buttons on the virtual remote controller to control your media center (see “Using the Remote Control” on page 23 for further information).

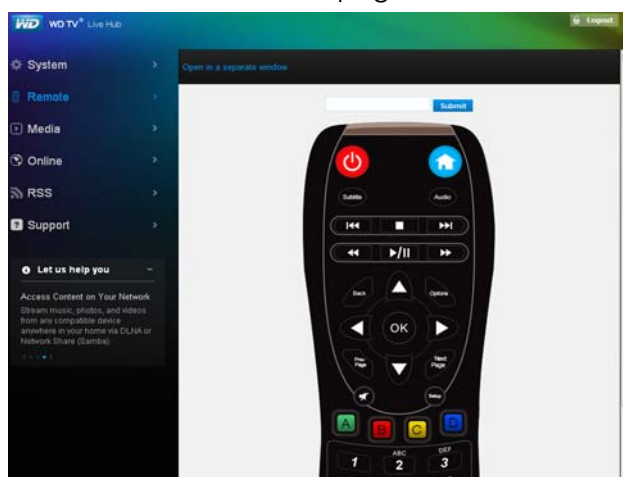


Click the **Open in separate window** link to open the virtual remote controller in a new browser screen. You can copy the URL from this browser screen and enter it in a browser on your smartphone. Then, you can use your smartphone as a virtual remote controller by touching the buttons on the screen.

Enter on-screen keyboard commands in the **Submit** field using your computer or smartphone keyboard, then click or press **Submit** when finished.



Media

Click **Media** to enable the Twonky service, launch the Twonky media browser, and enable the iTunes server to access media on iTunes.

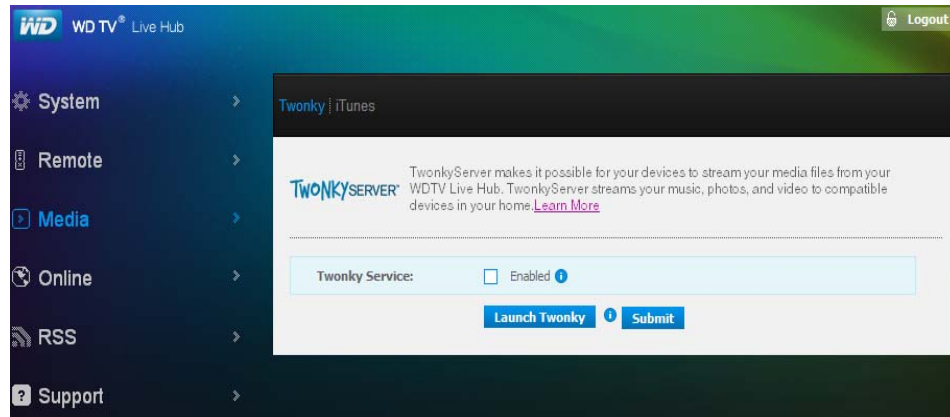




TwonkyMedia™


Click **Enabled**, then **Launch Twonky** to launch the TwonkyMedia server media browser in a separate browser window. The TwonkyMedia home screen displays.




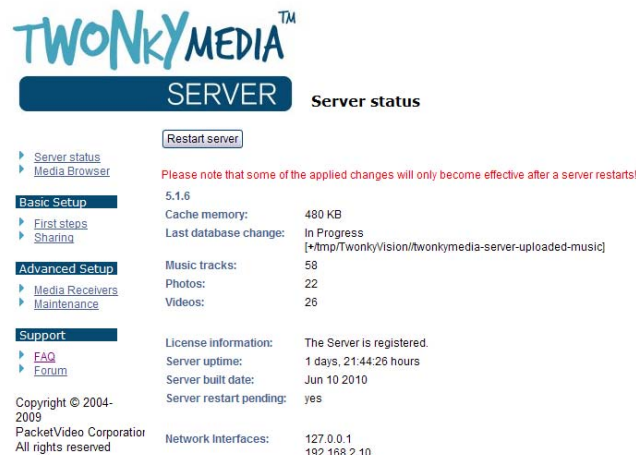
Navigate through the Music, Photos, and Videos subcategories to find a file to play back on your computer. Launching a music or video file plays the file back on your computer's default media player. Clicking on a photo thumbnail enlarges the photo on your screen.

During navigation, click  to return to the home page shown above, and  to go back to the previous screen.

Click  to upload a file from your computer to the media center. Click **Browse** to locate a file, then **send** to upload it to the media center.

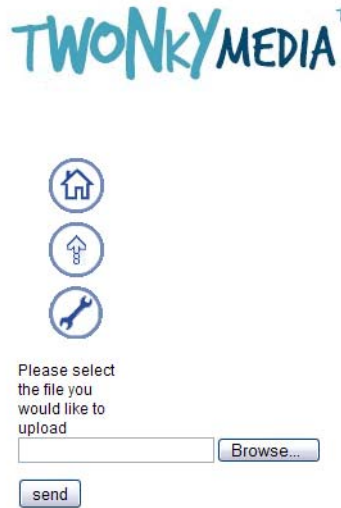


Click  to open the TwonkyMedia server status screen. Here, you can restart the server, view server status, perform basic and advanced setup, and access support resources.




Online

Click **Online** to access sign-up links and information for the listed Internet services supported by the media center (supported services vary by region and country).

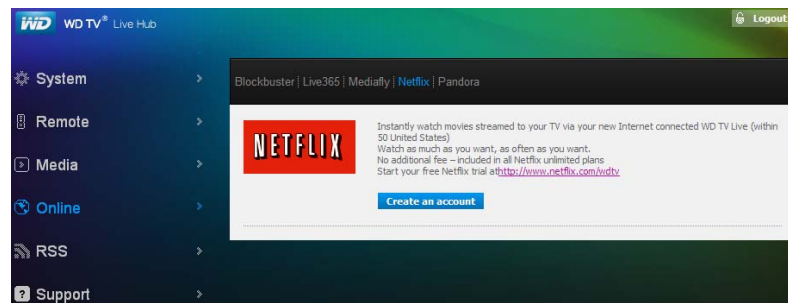


RSS

Click **RSS** to view your RSS subscriptions and category folders. Here, you can add a new subscription or a new folder to categorize your subscriptions.

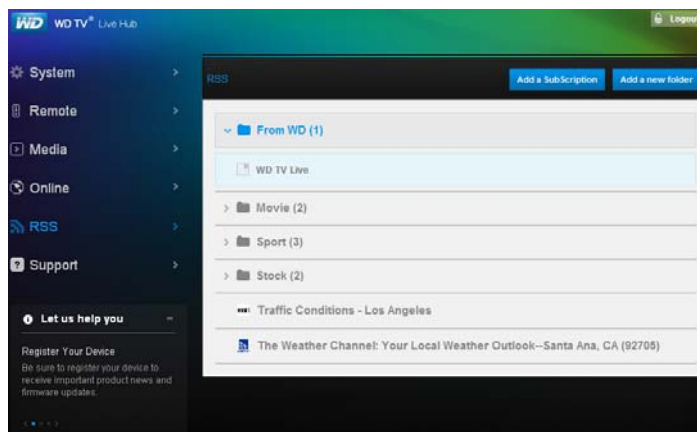


Support

Click **Support** to access Express Customer Support (includes diagnostic test) and Support Documentation including product documentation, FAQ's, and a WD TV user forum.

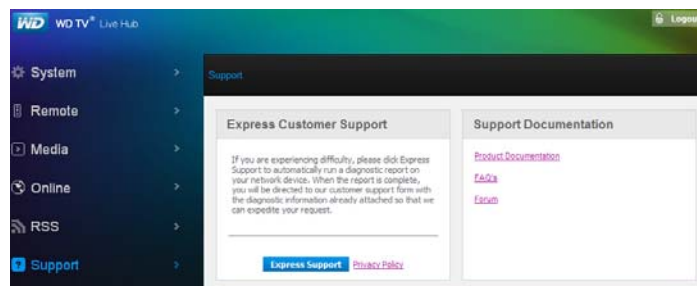

Status Bar

 The status bar at the bottom of the Web UI displays media center status, hard drive capacity usage, and a graphical representation of the percentage of music, photos, and video stored on the media center.



Logout

Click the **Logout** button in the main menu to log out of the Web UI.

12

Internet Services



.....

Important: A broadband Internet connection (e.g., DSL or cable) is required to use Internet services. Availability varies by country. These services may be changed, terminated, or interrupted at any time.

After connecting to a network, you can use the media center to access media content from the following Internet services:

- **AccuWeather.com®** – Get local and international forecasts, climate trends, and the latest news from the world's weather authority.
- **CinemaNow™** – With over 11,000 titles to choose from, CinemaNow gives you instant access to new release movies the same day they come out on DVD and brings you TV episodes for many popular shows the day after they air.*



.....

*CinemaNow.com account required. US only.

- **Comedy Time®** – The Comedy Time Network launched as the comedy channel for Sprint TV and MobiTV in July, 2004 and has since expanded on to all major carrier decks as well as cable/satellite/IP television, broadband video and traditional media. It is a market leader in the production and distribution of short-form comedy programming.
- **Dailymotion** – With over 115 million monthly unique visitors, Dailymotion powers video sharing and discovery, presenting the hottest videos in news, music, film, television, sports, gaming and more from across the Web.
- **Deezer™** – A personalized on-demand music service to listen to seven million tracks anytime, anywhere and one of the most popular Internet and mobile music offerings in Europe.
- **Facebook®** – Share your status, photos, videos, and your favorite links on Facebook. Find out the latest news from your social network or the world and so much more. Access it all on your big screen TV.
- **Flickr™** – Connect to Flickr using the on-screen menus. View the photos on your Flickr account and enjoy them on your TV.
- **Flingo®** – Flingo offers consumers free Internet Television from leading studios, TV networks, and video websites.
- **Flixster™** – Watch the latest theatrical movie trailers and get critic reviews from Rotten Tomatoes. Preview movies that are opening this week and see what's hot at the box office. See what's new on DVD and Blu-ray and the top rentals.
- **Hulu Plus™** –Hulu Plus offers current hit TV shows and award-winning movies anytime in HD . Watch any current season episode of top shows like *Modern Family*, *Glee*, *30 Rock* and many others, enjoy classic series, or explore acclaimed movies from The Criterion Collection and Miramax.*



.....

*Hulu Plus membership required. US only.

- **Live365®** – Listen to thousands of commercial-free Internet radio stations. Easily browse through popular genres or discover treasures in some of the less-traveled styles.

- **Netflix®** – Enjoy popular movies, classics, and TV episodes instantly. Access your Netflix unlimited membership and instantly watch TV episodes and movies on your big screen.*



.....
*Netflix is available in certain countries. Unlimited membership required. More information at www.netflix.com.

- **Pandora®** – Free, personalized Internet radio playing only the music you love. Enter your favorite songs or artists, and enjoy stations created just for you. Rate songs as they play, because Pandora caters to your tastes and adapts stations to your feedback on the spot.*



.....
*Pandora available in US only.

- **Picasa** – View, share and enjoy your photographs right from your television.
- **SEC Digital Network** – The SEC Digital Network offers college sports fans access to the largest library of multi-sport full games and original programming from the most dominant and exciting collegiate sports conference. Watch FREE daily programming including SEC Today, Countdown to Kickoff, Game Day Central, and weekly coaches teleconferences, and select full games. Additional content can be ordered at www.SECOnDemand.com.
- **SHOUTcast Radio** – The ultimate directory of online radio stations featuring over 45,000 music, talk, sports, and community radio stations from around the world.
- **SnagFilms®** – SnagFilms offers a broad collection of great independent movies you can watch right now, on demand, for free – films that entertain and inform, engage and inspire, and satisfy every taste. These are movies worth watching – documentaries, comedies, dramas and thrillers, award winners and rare finds – all free for you to enjoy.
- **Spotify** – Enjoy on-demand access to over 15 million tracks and albums. Any artist, any album, any genre - available instantly on your media player. Spotify is available in: USA, UK, Sweden, Finland, Norway, France, The Netherlands, Spain, Austria, Belgium, Switzerland and Denmark.*



.....
*Spotify Premium account required.

- **Tuneln** – The world's largest Internet radio guide with access to over 30,000 free radio stations searchable by location, genre, or format.
- **Vimeo®** – Take your video experience to the next level with Vimeo. Get a video experience with absolutely no pre-roll ads, unlimited video length, unlimited HD playback and embedding, superior privacy settings and more! Vimeo is the next step in your creative film and video experience.
- **VUDU™** – VUDU delivers a cinema-like experience at home with the hottest new releases and the largest HD library. There are no subscription fees or late fees, simply pay for what you watch. Choose to rent or own from thousands of titles available in vibrant 1080p with rich Dolby Digital 5.1 Surround Sound. Activate your VUDU account on your media center today and receive a free* movie credit.



.....
*New VUDU account required. Terms and conditions apply. For more information visit www.vudu.com.

- **WatchMojo** – WatchMojo produces original video programming on the people, places and things that people are passionate about, covering the Automotive, Business, Education, Fashion, Film, Food, Health, Music, Parenting, Politics &


Economy, Space, Sports, Science, Technology, Travel and Video Game categories.

- **XOS College Sports** – XOS College Sports offers college sports fans multi-sport, multi-conference access to full games and historic documentaries including many of the nation's top schools and teams. Free access to a large collection of rare content, championship season highlights and select full games past and present. Additional content can be ordered at www.XOSSports.com.
- **YouTube** – Stream YouTube and watch your favorite videos from the world's #1 video sharing website on your television.

The above services are fully integrated with their web-based counterparts when accessed via the media center. If you are a registered user of any of these services, everything you create, rate, or bookmark when using the media center shows up on your account the next time you sign in to that service from your computer or mobile computing device.



To access Internet Media:

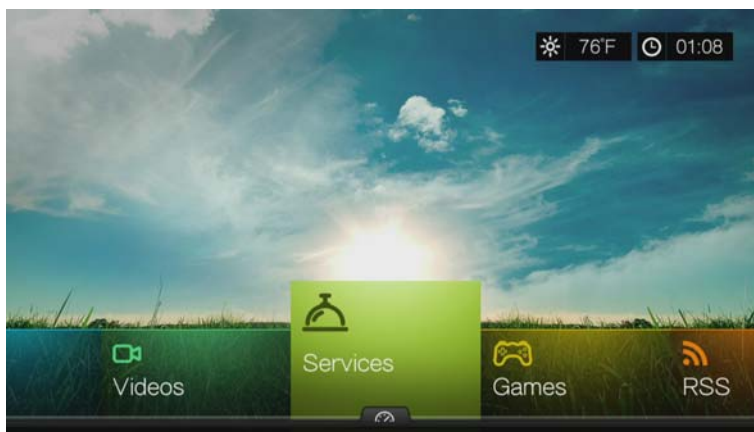1. Navigate to the Home | Services menu bar and press **OK**.




2. The list of Internet services display in alphabetical order. Press ◀/▶ and/or **Next Page** to make a selection, then press **OK**.

Adding a Service to Favorites

You can add a Service to your Favorites so that it's quickly available via the dashboard when you are in the Home screen or other screens (when you press  or navigate to  in certain screens then press **OK**).


1. In the Services screen, press ◀/▶ to select a service you want to favorite, then press **Options**.
2. Press **OK** to list the service in the dashboard under Favorites.

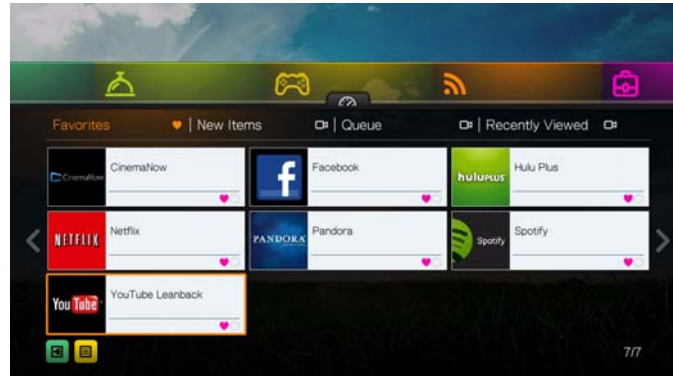

AccuWeather.com

The Weather service provided by AccuWeather.com provides local forecasts for everywhere in the United States and over two million locations worldwide. Upon your first use of AccuWeather.com, you are prompted to enter your location (city of residence or nearest city) to set the temperature/weather indicator on your media center.

To set temperature/weather indicator:


1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select AccuWeather.com .
3. Select **OK** in the End User License Agreement screen, then press **OK** to display the AccuWeather.com home screen.
4. Use the navigation buttons ▲▼◀▶ to type a search using the on-screen keyboard. You can also press 🔍 on the remote control to toggle to the results list after entering several characters in the search field. Select **Submit**, then press **OK**.



.....

Note: The complete city name needs to be entered for locations outside of the U.S. For example, you must type "Sydney" to find Sydney, Australia; typing "Sydn" results in Sydney, FL as the location.


5. If necessary, Press ▲/▼ to scroll through search results to select your city, then press **OK**.
6. Press **OK** to complete setting your location.

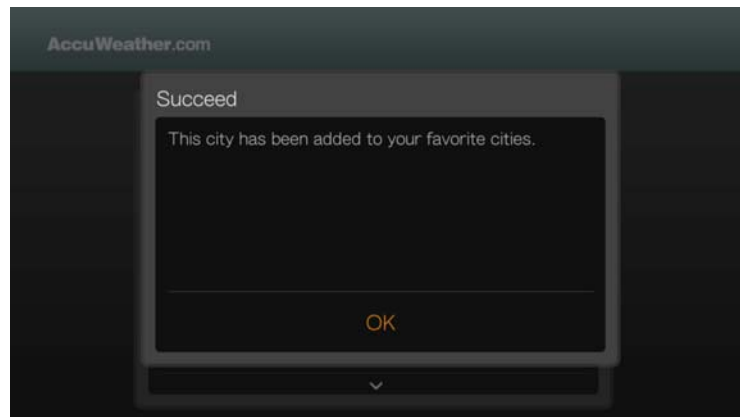

7. The AccuWeather.com home screen displays current temperature, conditions, and other weather details at your location.

Options include:

- Settings
- Maps (press **Options**, then **OK** to zoom & pan the weather map in your area using the navigation buttons)
- Lifestyle (provides forecasts from Poor to Excellent for various health and sporting conditions)
- Forecast (select **7-Day Forecast** or **Weekend Forecast** to view upcoming weather)
- Weather Video (select and watch popular AccuWeather.com videos)
- Exit

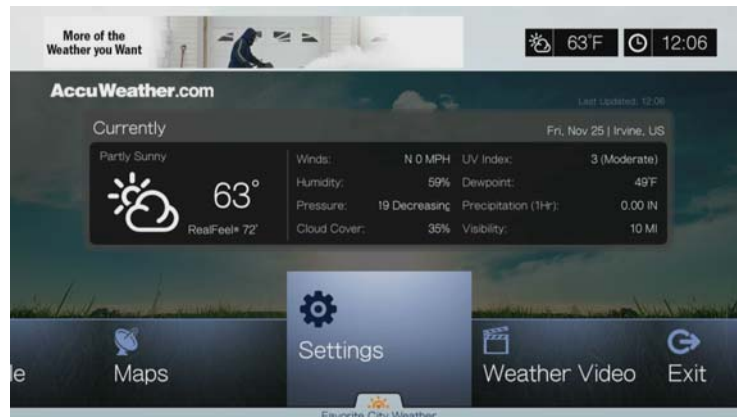


Settings

Change Temperature Display

To change the temperature display from Celsius to Fahrenheit or vice-versa, do the following:

1. Press ◀/▶ to select **Settings** in the AccuWeather.com home screen.
2. Select °F /°C. Press **OK**.

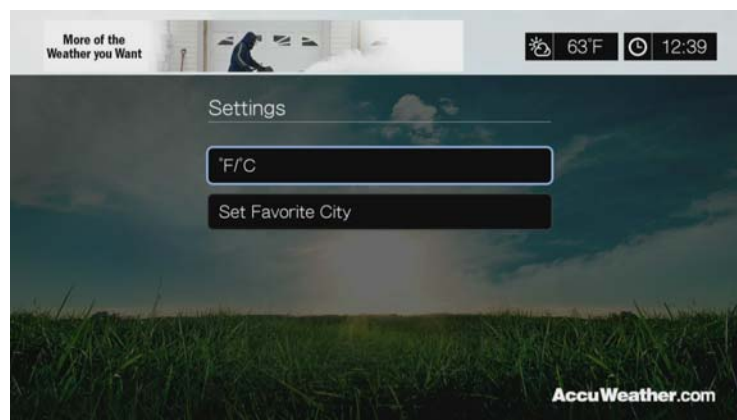

Set/Add Favorite City

To add one or more cities so that you can view weather information for more than one location, do the following:


1. Press ◀/▶ to select **Settings** in the AccuWeather.com home screen.
2. Select **Set Favorite City** and press **OK**.
3. Select **Add Favorite City** and press **OK**.
4. Use the navigation buttons ▲▼◀▶ to type a search using the on-screen keyboard. You can also press 🔍 on the remote control to toggle to the results list after entering several characters in the search field. Select **Submit**, then press **OK**.




.....

Note: The complete city name needs to be entered for locations outside of the U.S. For example, you must type "Sydney" to find Sydney, Australia; typing "Sydn" results in Sydney, FL as the location.

5. Your new favorite city appears in the Set Favorite Cities screen. Press ▲/▼ to set a new favorite city as your default location. To delete a favorite city, select it and press ▶, then **OK**.

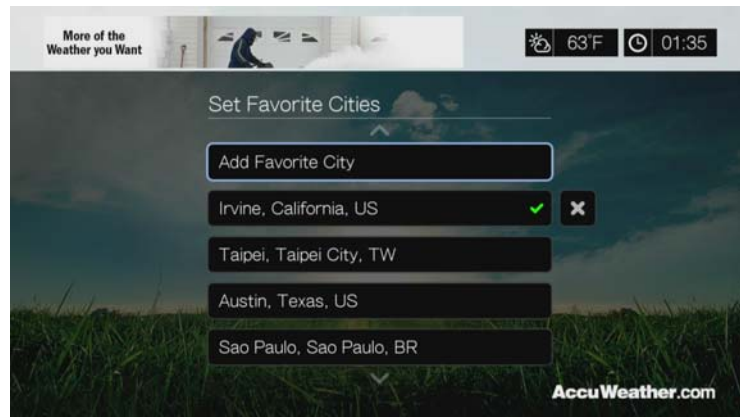

6. You can also press ▼ in the AccuWeather.com home screen to set your favorite city and to see the current temperature, conditions, and other weather details at your location in all your favorite cities.

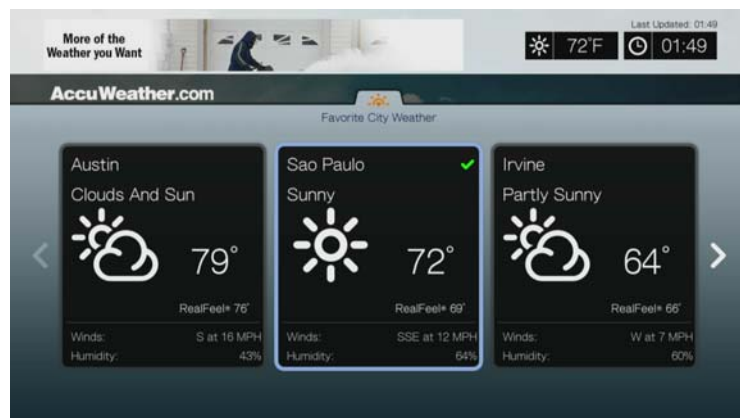

BLOCKBUSTER On Demand®

The BLOCKBUSTER On Demand service lets you order and instantly watch movies from BLOCKBUSTER® right on your TV!*


- Rent or buy the newest releases from your couch
- No monthly fees
- New releases available the same day as DVD/Blu-ray
- Choose from thousands of the movies you love



.....

Note: *BLOCKBUSTER On Demand free online account required. US only.

To Get Started:

1. Go to <http://www.blockbuster.com/wd> and select the Activate Now button. Log into your account. If you don't have an account, you can create one for free by filling in the requested information.
2. Follow the on-screen instructions to activate. At the end, you'll receive a PIN code.
3. On the media center, navigate to the Home | Services menu bar and press **OK**.
4. The list of Services display in alphabetical order. Press ◀/▶ to select BLOCKBUSTER On Demand , then press **OK**.
5. Select **Get Started** from the bottom menu within the Blockbuster service and enter the PIN code.

Now you're ready to watch movies instantly!

How do I download and watch a movie?

Once you rent or purchase a movie, it will appear in My Library. Select **Start Download** to begin. You'll be able to track download progress in the Download Manager on the Home screen.

You can begin watching the movie before the download completes by pressing **Play Now** when it becomes available. After the movie has downloaded, you can watch it from My Library. **Watch purchased movies whenever you want, as much as you want. Rentals must be watched within 24 hours once you start playback.**



.....

Note: To deactivate the media player from your Blockbuster On Demand account, log in to your BLOCKBUSTER account at <http://www.blockbuster.com>.

CinemaNow

With over 11,000 titles to choose from, CinemaNow gives you instant access to new release movies the same day they come out on DVD and brings you TV episodes for many popular shows the day after they air.* No subscription required and no need to drive to a kiosk or wait for movies in the mail!


- New release movies available the same day as Blu-ray/DVD
- Popular TV shows available the day after they air
- No monthly subscription, pay for only what you watch
- More choice – with more than 10,000 movies and TV shows
- Rent or purchase with Dolby Digital Plus 5.1 surround sound



.....

Note: *CinemaNow account required. US only.

To Get Started:

1. Go to <http://www.cinemanow.com/bbactivate>. Sign in or create a free CinemaNow account. No subscription required!
2. Follow the on-screen instructions to begin activation and receive your PIN code.
3. On the media player, navigate to the Home | Internet media menu bar and press **OK**.
4. The list of Services display in alphabetical order. Press ◀/▶ to select CinemaNow , then press **OK**.
5. Select **Settings** from the bottom menu within the CinemaNow service, then press **OK**. Press **OK** again to activate the device and enter the CinemaNow PIN code.

You now have instant access to new release movies & next day TV!

How Do I Download and Watch a Movie?

Once you rent or purchase a movie, it will appear in your My Videos tab. With progressive download, you can begin watching within minutes by selecting **Play Now** as soon as it becomes available.

Your selection will continue to download while you watch. Track your download progress in the Download Manager on the Home screen. **Watch purchased movies whenever you want, as much as you want. Rentals must be watched within 24 hours once you start playback.**

To learn more:

To learn more about CinemaNow, go to <http://www.cinemanow.com>.




.....

Note: To deactivate the media player from your CinemaNow account, log in to your account at <http://www.cinemanow.com>.

Comedy Time

The Comedy Time Network launched as the comedy channel for Sprint TV and MobiTV in July, 2004 and has since expanded on to all major carrier decks as well as cable/satellite/IP television, broadband video and traditional media. It is a market leader in the production and distribution of short-form comedy programming.



To access Comedy Time:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Comedy Time , then press **OK** to display the Comedy Time home screen.
3. Use the navigation buttons ▲▼◀▶ to browse, select, and search for videos and the playback buttons to stop and start videos.

Dailymotion

Dailymotion is a video sharing service website.


To access Dailymotion:


1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Dailymotion , then press **OK**.
3. The Dailymotion main screen displays top videos. Press ▼ to choose another category (Channels, Favorite Members, Top Members, Search, Help, and Info) from the Dailymotion interface. Press **OK**.
4. Use the navigation buttons ▲▼◀▶ to select a video. Press ||▶ or **OK** to begin playback.
5. Press the Home button  to exit Dailymotion.

Deezer

Deezer is a personalized on-demand music service to listen to seven million tracks anytime, anywhere and one of the most popular Internet and mobile music offerings in Europe.

To access Deezer:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Deezer , then press **OK**. The Deezer main screen displays.

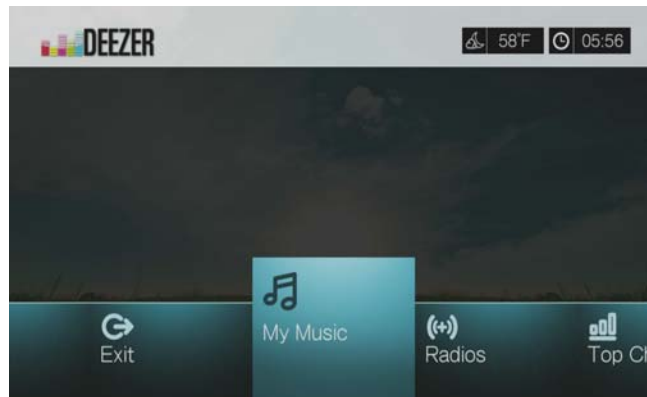

3. Press ◀/▶ to choose an option, then press **OK**.

Options include:

- My Music
- Radios
- Top Charts
- Search
- Sign in
- Exit


Signing in to Your Deezer Account

Sign in to your Deezer account to access My Music (your playlists and favorites) and Top Charts.



.....
Note: If you do not have a Deezer account and want to create one, go to <http://www.deezer.com>.

1. Navigate to the Home | Services menu bar.
2. Press ◀/▶ to select Deezer, then press **OK**.
3. In the Deezer main screen, press ◀/▶ to select **Sign In**, then press **OK**.
4. Select **Sign in**, then press **OK**.

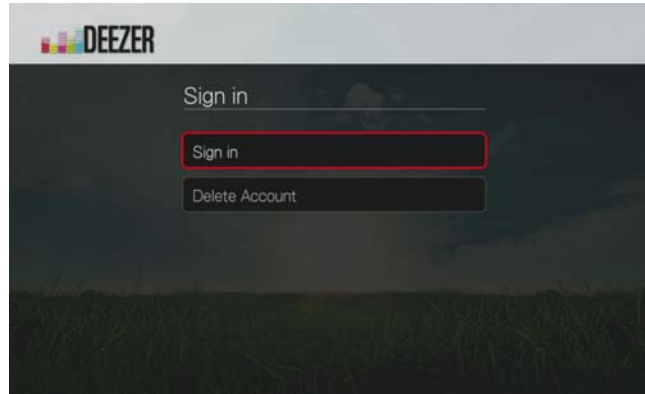


5. Use the navigation buttons ▲▼◀▶ to type your registered Deezer email address using the on-screen keyboard. Select **Submit**, then press **OK**.
6. Use the navigation buttons ▲▼◀▶ to type your Deezer account password in the on-screen keyboard. Select **Submit**, then press **OK**.
7. Press ▲/▼ to select a save option.
Options include:
 - **No** – Your account details will not be saved. You need to repeat the initial sign-in process every time you access this service using the media player.
 - **Save username only** – Your user name is saved, but you will be prompted to type in your password every time you access this service using the media player.
 - **Yes** – Both your user name and password are saved. You are automatically logged in to your account every time you access this service.
8. Press **OK** to complete the sign-in process. The My Music screen displays.

Radios

You can choose from a variety of radios by music genre and subgenre.

1. In the Deezer main screen, press ◀/▶ to select **Radios**, then press **OK**.
2. Press **OK** to select a radio.

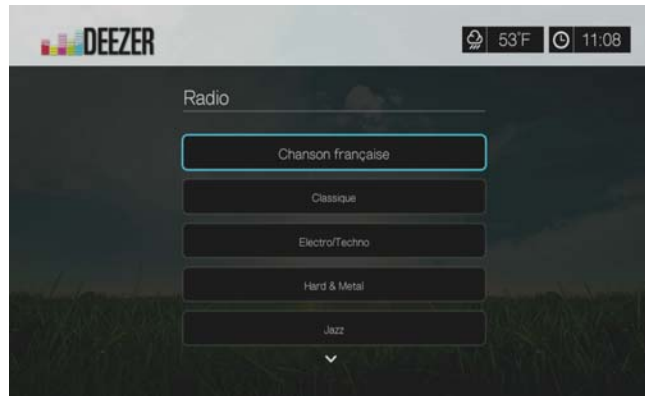

3. Press ▲/▼ to select a radio by music genre, then press **OK**.
4. Press ▲/▼ to select a radio by music subgenre, then press **OK**.
5. With a radio you want to listen to selected, press **Options** to select **Become a Fan**. This adds the radio to **Favorite Radios** for quick access in the future.
6. Press **II ▶** or **OK** to begin listening to the radio station.

Deezer Player

The Deezer player is similar to the regular music playback screen. It displays the playback status bar, album, artist, and the elapsed and total playback times.

- Press **PLAY/PAUSE** to pause and resume playback.
- Press **FF/REV** to fast forward or rewind in 10 second increments.
- Press **NEXT/PREV** to select the next/previous song in the station or playlist.

My Music


After signing in to Deezer, select **My Music**, then press **OK** to display playlists and favorite radio stations.

Playlists

Adding a playlist to My Music:

1. In the Deezer main screen, press ◀/▶ to select **My Music**, then press **OK**.
2. Sign in to your Deezer account if not already logged in.

3. Select **Playlists**, then press **OK**.

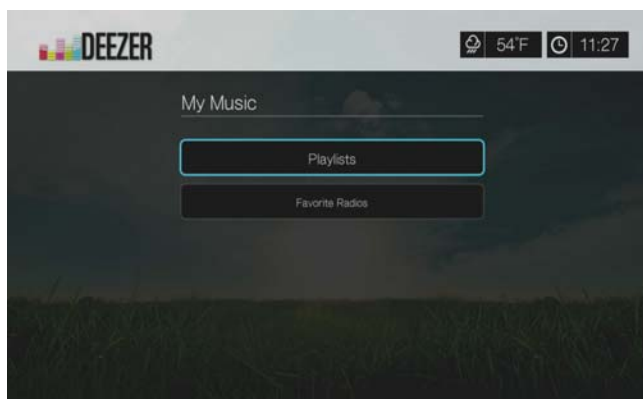

4. Press **Options**, then select **Create Your Playlist**. Press **OK**.
5. Type in the name of your playlist using the on-screen keyboard, select **Submit**, then press **OK**.

Favorite Radios

Accessing a favorite radio station in My Music:

1. In the Deezer main screen, press ◀/▶ to select **My Music**, then press **OK**.
2. Sign in to your Deezer account if not already logged in.
3. Select **Favorite Radios**, then press **OK**.



.....
Note: If you have not added any stations, the screen displays "no favorite available."

4. Press the navigation buttons to select a station from the list, then press **II ▶** or **OK** to begin listening to the radio station.

Add to Playlist

You can add songs to a playlist using the **Options** button on the remote.

1. With a song selected in a Radio or Top Charts screen, press **Options** to display **Add to Playlist**. Press **OK**.
2. Press ▲/▼ to select a playlist you have created in **My Music**, then press **OK** to add the song the selected playlist.

Delete a Playlist

You can delete a playlist using the **Options** button on the remote.

1. With a playlist selected in **My Music > Playlists** screen, press **Options**.
2. Press ▲/▼ to select **Delete**, then press **OK**.
3. Select **OK**, then press **OK**.

Delete a Radio Station


You can delete a radio station using the **Options** button on the remote.

1. With a radio station selected in **My Music > Favorite Radios** screen, press **Options**.

2. Press ◀/▶ to select **Delete from Favorite**, then press **OK**.
3. Select **OK**, then press **OK**.


Top Charts

These are songs deemed most popular by Deezer users by country.

1. In the Deezer main screen, press ◀/▶ to select **Top Charts**, then press **OK**.
2. With the filter button selected , press **OK**.
3. Press ▲/▼ to filter channel results (choose from **FR**, **BE**, **UK**, **US**), then press **OK** twice.
4. Press ▲/▼ to select a song from the display then press ||▶ or **OK** to start listening to the selected song.


Search

1. In the Deezer main screen, press ◀/▶ to select **Search**, then press **OK**.
2. Press ▲/▼ to filter results (**All**, **Title**, **Artist**, or **Album**), then press **OK**.

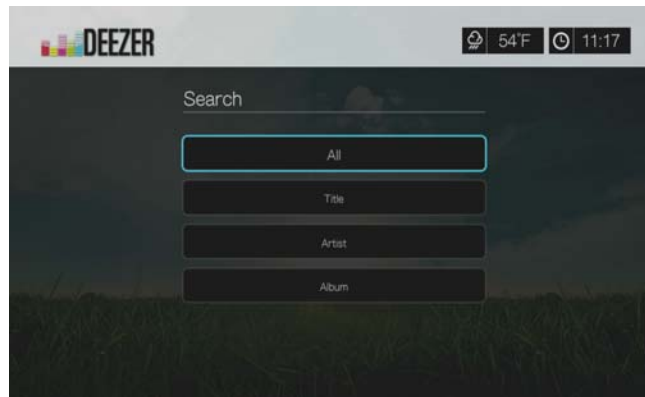

3. Use the navigation buttons ▲▼◀▶ to type a search using the on-screen keyboard. Select **Submit**, then press **OK**.



.....
Note: You can also press  on the remote control to toggle to the results list after entering several characters in the search field.

4. Press ▲/▼ to select a song from the display, then press ||▶ or **OK** to start listening.

Deleting a Deezer Account

1. On the Deezer main screen, press ▲/▼ to select **Sign in**, then press **OK**.
2. Press ▲/▼ to select **Delete Account**, then press **OK**.
3. Press ▲/▼ to select the account you want to delete, then press **OK**.
4. Press ◀/▶ to select **OK** on the confirmation prompt, then press **OK**.

Exit Deezer



To return to the Services home screen, press ◀/▶ to select **Exit** in the Deezer home screen, then press **OK**.


Facebook

Share your status, photos, videos, and your favorite links on Facebook. Find out the latest news from your social network or the world and so much more. Access it all on your big screen TV.

You must have have a valid Facebook account to use this service. You can create a Facebook account at www.facebook.com.

Signing in to Facebook for the First Time

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Facebook , then press **OK**.
3. Press **OK**, then use the navigation buttons ▲▼◀▶ to type in your Facebook user name using the on-screen keyboard. Select **Submit**, then press **OK**.
4. Press **OK**, then use the navigation buttons ▲▼◀▶ to type in your Facebook password using the on-screen keyboard. Select **Submit**, then press **OK**.
5. Press ▼, then **OK** to **Remember Me** if you want your Facebook account stored in the media center for quick access.
6. Press ▶/▼, then **OK** with the green check mark  selected.

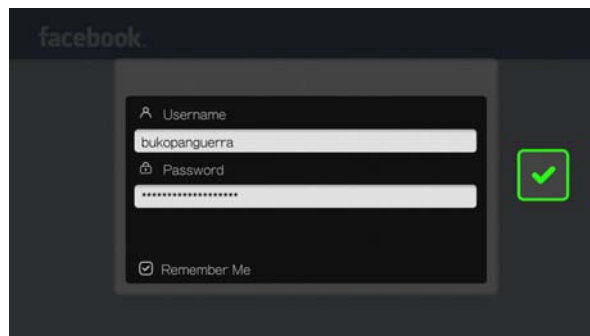

7. Press **OK** to complete the sign-in process. The Facebook home screen displays.



Notifications

Notifications let you know when people take actions on Facebook related to you, so you can quickly check out a photo you've been tagged in or read a new posting on your Wall.

In the Facebook main menu, press ▼ to select **Notifications**. Press ▲/▼ to select a notification then press **OK**.

Photos

You can view the photos or photo albums you and others users have posted to Facebook either individually or as a slideshow.


1. In the Facebook main menu, select **Photos** then press **OK**.
2. Navigate to a photo album, then press **OK**.
3. Navigate to a photo then press **OK**, or press **⏸▶ (PAUSE/PLAY)** to start a photo slideshow (see “Slideshow Playback Controls” on page 65).

Photos Options

With an individual photo selected or a slideshow running, press **Options**.



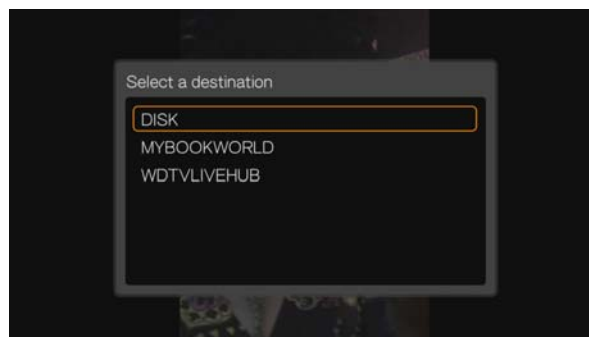

- **Rotate Left & Right** - See “Rotate Left & Right” on page 62.
- **Zoom** - To change the display’s viewing scale, press **OK** repeatedly until the preferred viewing scale is achieved. Press **Options** or **Back** to revert to the default viewing scale.
- **Pan** - To pan the display, press the navigation buttons **▲▼◀▶** repeatedly until the preferred panned view displays. Press **Options** or **Back** to revert to the default viewing scale.
- **Set as Background** - see “Set as Background” on page 61.
- **Download Photo** - Select this option then press **OK** to download the photo to one of your local drives. Select the location you want to download your photo to (network share or attached storage) then press **OK**.



Newsfeed

The Facebook news feed displays all of your friends' comments and allows you to "Like" or comment. The number of people who like or have commented on each entry displays inside the corresponding icons to the right of the news feed entry.

1. In the Facebook main menu, press ◀/▶ to select **Newsfeed**, then press **OK**.
2. Press ▲/▼ to view your friends' comments and posts.
3. With an entry selected, press ▶ once to select "Like," if you like the entry , then press **OK**. Press ▶ twice to comment on a news feed entry , press **OK**, then enter your comment using the on-screen keyboard.



.....
Note: Navigating to **What's on your mind?** and pressing **OK** allows you to add a comment to your wall in the newsfeed screen.



Friends

You can access your friends' pages to view their photos, videos, and Wall posts.

1. In the Facebook main menu, press ◀/▶ to select **Friends**, then press **OK**.
2. The page of the friend you have selected displays. The photos section of the page displays by default. You can view photos or navigate to Videos or Wall, then press **OK** to view your friend's videos and wall comments.

Wall

The Facebook Wall displays all of your entries and your friends comments and allows you to "Like" or comment. The number of people who like or have commented on each entry displays inside the corresponding icons to the right of the Wall entry.

1. In the Facebook main menu, press ◀/▶ to select **Wall**, then press **OK**.
2. Press ▲/▼ to view your friends' comments and posts.
3. With an entry selected, press ▶ once to select "Like," if you like the entry , then press **OK**. Press ▶ twice to comment on a news feed entry , press **OK**, then enter your comment using the on-screen keyboard.



.....
Note: Navigating to **What's on your mind?** and pressing **OK** allows you to add a comment to your wall.

Videos

You can view the videos you and others users have posted to Facebook.

1. In the Facebook main menu, select **Videos** then press **OK**.
2. Navigate to a video, then press **OK**.

Videos Player

With a video playing, press **OK** to bring up the videos player info panel. You can choose to **Like** or **Comment** on a video in the info panel, then press **OK**.



Videos Options

With a video playing, press **Options**.





- **Zoom** - To change the display's viewing scale, press **OK** repeatedly until the preferred viewing scale is achieved. Press **Options** or **Back** to revert to the default viewing scale.
- **Pan** - To pan the display, press the navigation buttons **▲▼◀▶** repeatedly until the preferred panned view displays. Press **Options** or **Back** to revert to the default viewing scale.
- **Browse description** - Select this option then press **OK** to view the description of the video.
- **Download video** - Select this option then press **OK** to download the video to one of your local drives. Select the location you want to download your video to (network share or attached storage) then press **OK**.

Event

Event displays all events you've been invited to, and allows you to view more information about or comment on events, and view your friends' comments and "Like" or comment on them. The number of people who like or have commented on each entry displays inside the corresponding icons to the right of the Event entry.

1. In the Facebook main menu, press **◀/▶** to select **Events**, then press **OK**.

2. Select an event you've been invited to, then press **OK**.
3. Select **Write a Comment...** or **View More Info** to write a comment about or view more info for the event.
4. Press ▲/▼ to view your friends' comments and posts.
5. With an entry selected, press ► once to select "Like," if you like the entry , then press **OK**. Press ► twice to comment on an event entry , press **OK**, then enter your comment using the on-screen keyboard.

Sign Out

In the Facebook main menu, select **Sign Out** then press **OK** to log out of Facebook and return to the Services home screen. All previously saved login data for the Facebook account is erased.

Flickr

Flickr is an online image and video management and sharing website. Flickr content is organized based on tags—a keyword or category label that describes content. Tags help users to search for contents that have something in common. Each content file can have as many as 75 tags associated with it.

To learn more about Flickr services, and the options and limitations related to them, go to <http://www.flickr.com/tour/>.

To access Flickr:

1. Navigate to the Home | Search menu bar and and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Flickr **flickr**, then press **OK**. The Flickr home screen displays.

Options include:


- Interesting (last seven days)
- Recent Upload
- Search
- My Contacts
- Hot Tags
- My Tags
- Exit

Exploring Contents

You can explore photostreams (Flickr's term for content selection) available in Flickr's public domain.

To explore for random “interesting” media content from the past seven days:


Press ◀/▶ to select **Interesting** in the Flickr home screen, then press **OK**.

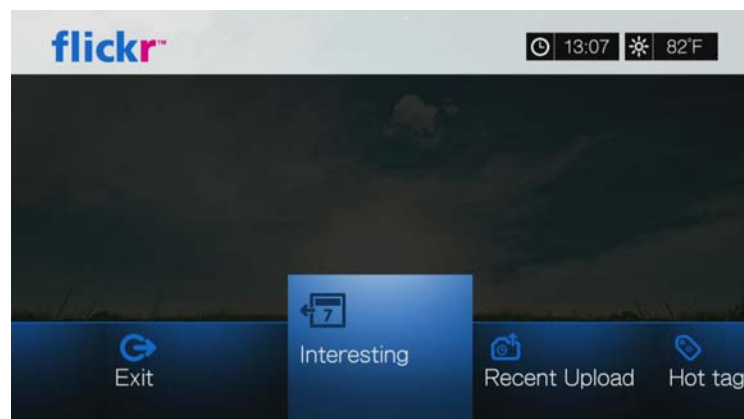

A photostream showing random contents rated as interesting in the past seven days by Flickr users displays. Go to page 116 for instructions on how to navigate a photostream.

To explore based on the upload date:


Press ◀/▶ to select **Recent Upload** in the Flickr home screen, then press **OK**.

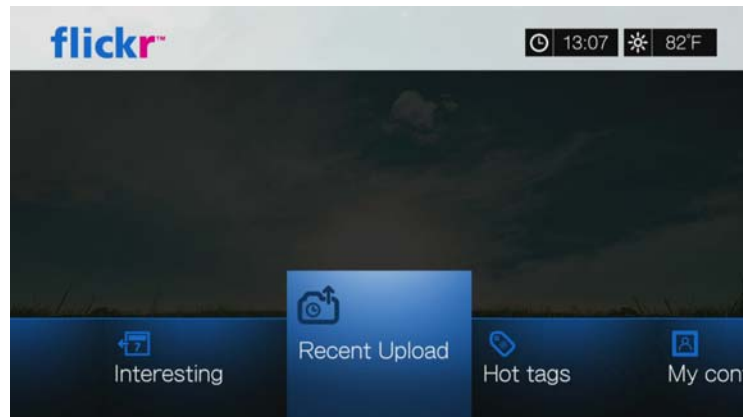

A photostream showing the most recently uploaded content displays. Go to “Flickr Photostream” on page 116 for instructions on how to navigate a photostream.

To explore based on popular tags:

1. Press ◀/▶ to select **Hot tags** in the Flickr home screen, then press **OK**.

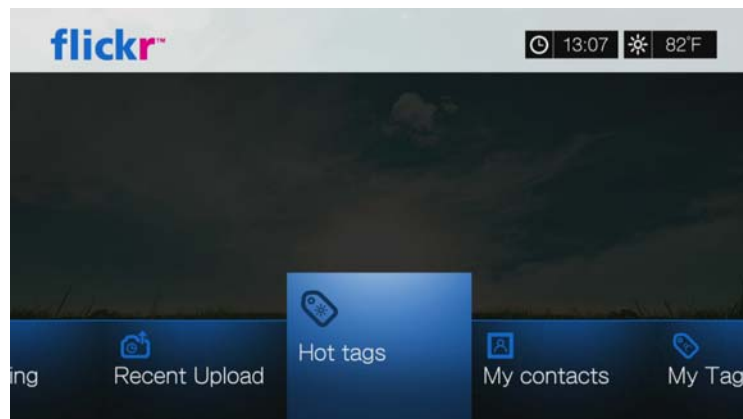

2. Press the navigation buttons to select a tag from the list, then press **OK**.


A photostream showing contents associated with the selected tag is displayed.
Go to “Flickr Photostream” on page 116 for instructions on how to navigate a photostream.

Searching for Contents


To search for content based on a specific keyword:

Keywords are words or phrases associated with the type of content you’re looking for. Keyword searches are based on information indicated on a member’s profile page.

1. Press ◀/▶ to select **Search** in the Flickr home screen, then press **OK**.

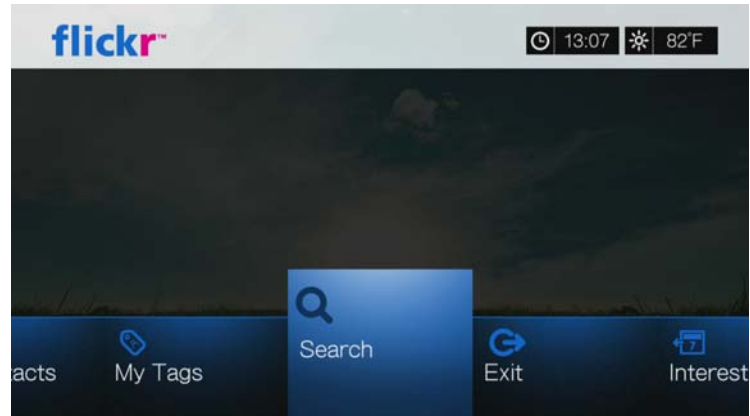

2. Press ▲/▼ to select **Keywords**, then press **OK**.

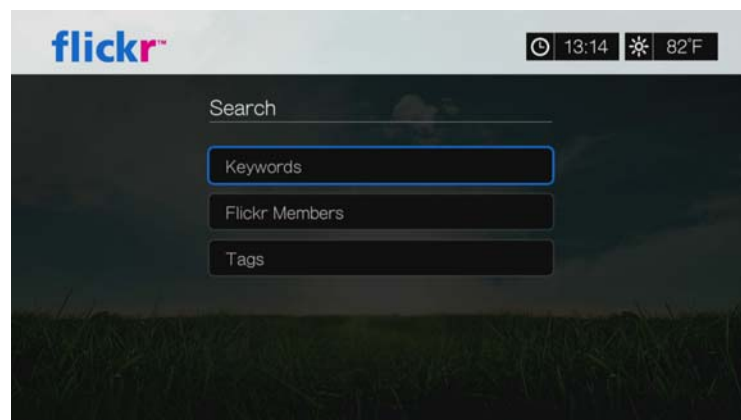

3. Use the navigation buttons ▲▼◀▶ to type a search word using the on-screen keyboard. Select **Submit**, then press **OK**.

A photostream showing contents associated with the specified keyword displays. Go to page 116 for instructions on how to navigate a photostream.

To search for content based on tags:

Perform this type of search to find content based on information indicated in a member's tags list.


1. Press ◀/▶ to select **Search** in the Flickr dashboard, then press **OK**.
2. Press ▲/▼ to select **Tags**, then press **OK**.
3. Use the navigation buttons ▲▼◀▶ to type a search word using the on-screen keyboard. Select **Submit**, then press **OK**.

A photostream showing contents associated with the specified word is displayed. Go to "Flickr Photostream" on page 116 for instructions on how to navigate a photostream.

Searching for a Flickr Member

To search for a Flickr member:

1. Press ▲/▼ to select **Search** in the **Explore** screen, then press **OK**.
2. Press ▲/▼ to select **Flickr member**, then press **OK**.

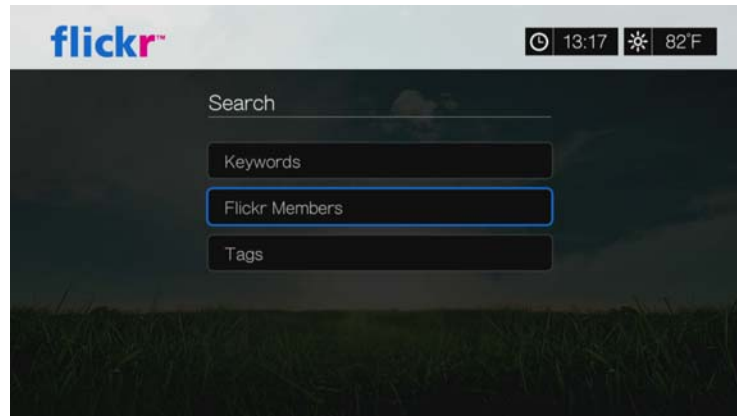

3. Use the navigation buttons ▲▼◀▶ to type a member's user name, email address, or interest using the on-screen keyboard. Select **Submit**, then press **OK**.

A browser screen listing Flickr member links matching your search criteria displays.


4. Press ▲/▼ to select a link, then press **OK** to view that member's profile page. If the selected member has public photostreams, you can explore them. Use the navigation buttons ▲▼◀▶ to select a content selection, then press **OK** to explore it. Go to the next section for instructions on how to navigate a photostream.

My Contacts

My Contacts shows a list of Flickr members you have searched for.


To view My Contents:

1. Press ◀/▶ to select **My Contents** in the Flickr home screen, then press **OK**.

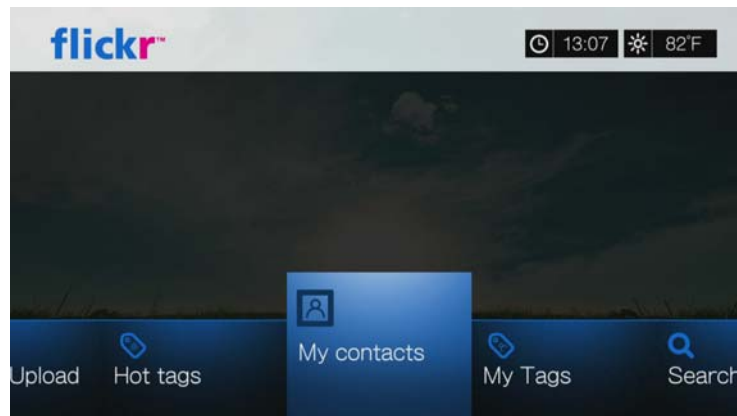

2. Press ▲/▼ to select a Flickr member you've searched for previously, then press **OK** to view their photos.

3. To remove a contact from the list, select the contact name and press **Options**. Select **Delete** or **Delete All Items**, then press **OK**.

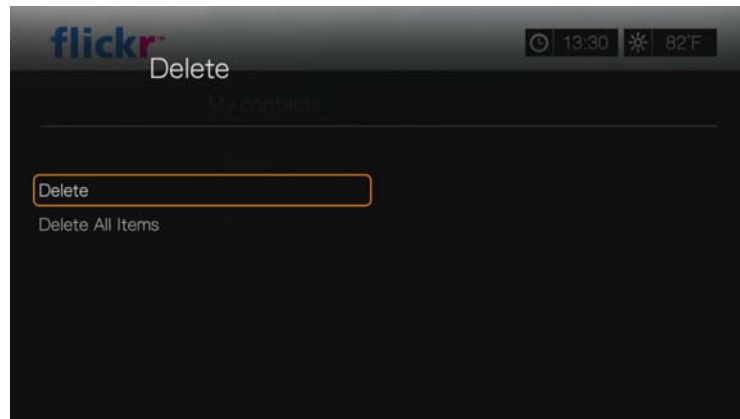


My Tags

My Tags shows a list of Flickr tags you have searched for.

To view My Tags:


1. Press ◀/▶ to select **My Tags** in the Flickr home screen, then press **OK**.

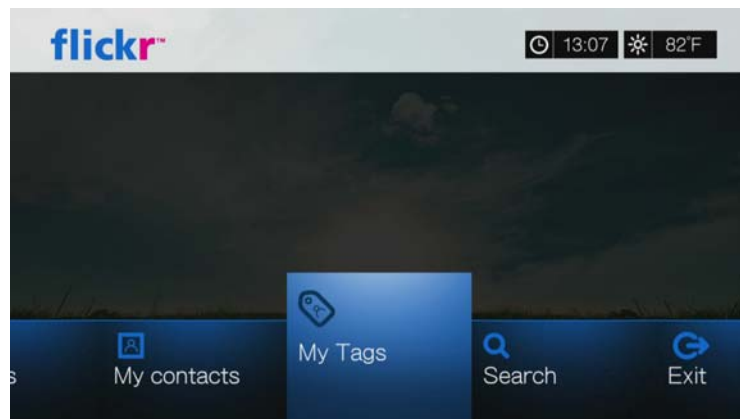


2. Press ▲/▼ to select a tag you've searched for previously, then press **OK** to view the photos associated with the tag.
3. To remove a tag from the list, select the tag and press **Options**. Select **Delete** or **Delete All Items**, then press **OK**.

Flickr Photostream

The Flickr photostream layout is the same as that of a Photos directory in thumbnail mode.

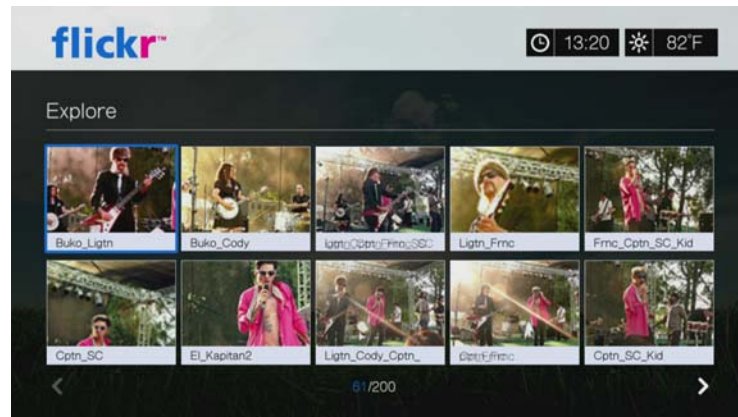

- You can use the navigation buttons ▲▼◀▶ to select content.
- To view content in fullscreen mode, select the file and press **OK**.
- To view a slideshow using all the current photostream's content, press **II▶** or **OK**. Contents display in the Flickr Player screen. Go to next section for information.
- To return to the photostream from fullscreen mode, press **Back**.
- To return to the photostream from Player mode, press **■**.
- To view all photos in full screen, go to Photo Settings and select Fit to screen (see "Photo Scaling" on page 186).
- While in the photostream layout, press Options to jump back to the Flickr home page or choose any of the Flickr home page menu options.

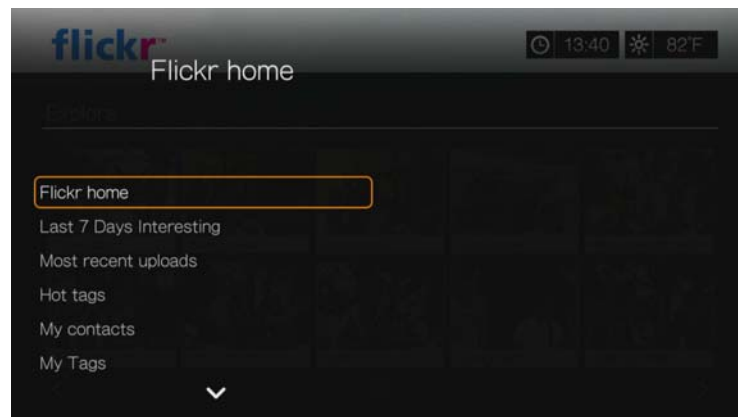


Flickr Player

The Flickr Player layout is the same as that of a photo slideshow.

- Press **▶▶** to view the next image in the photostream.
- Press **◀◀** to view the previous image in the photostream.
- To return to the photostream, press **■**.

Player Options

As with a regular photo slideshow, you can customize the way content is displayed in the Flickr Player. To do this, press **Options**.

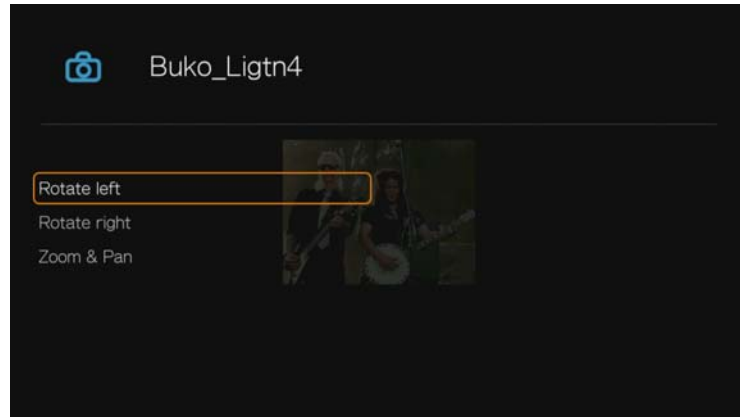

.....
Note: To view photos enlarged in fit to screen or full screen mode, access the Setup menu and follow the instructions under “Photo Scaling” on page 186.

- To rotate the image display, press ▲/▼ and select **Rotate left** or **Rotate right**, then press **OK** repeatedly until the preferred display angle is achieved. The display is rotated clockwise or counter-clockwise in 90° increments. Press **Options** or **Back** to revert to the default display angle.
- To change the display’s viewing scale, press ▲/▼ and select **Zoom & Pan**, then press **OK**. Press **OK** repeatedly until the preferred viewing scale is achieved. Press **Options** or **Back** to revert to the default viewing scale.
- To pan the display, press ▲/▼ and select **Zoom & Pan**, then press **OK**. Press the navigation buttons ▲▼◀▶ repeatedly until the preferred panned view displays. Press **Options** or **Back** to revert to the default viewing scale.


Exit Flickr


To return to the Services home screen, press ◀/▶ to select **Exit** in the Flickr dashboard, then press **OK**.

Flingo

Flingo offers free Internet Television from leading studios, TV networks, and video websites. It also allows you to turn the Web into your remote control. You can simply "fling" your favorite videos to the Queue in the Flingo application on your media player. For more information go to www.flingo.tv.

To access Flingo:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Flingo , then press **OK**.
3. Press ▲, then press ◀/▶ to choose a category (Channels, Popular, Favorites, Queue, and Search) from the Flingo interface. Press **OK**.
4. Use the navigation buttons ▲▼◀▶ to select a channel, then a video within the channel. Press ⏮▶ or **OK** to begin playing the video.

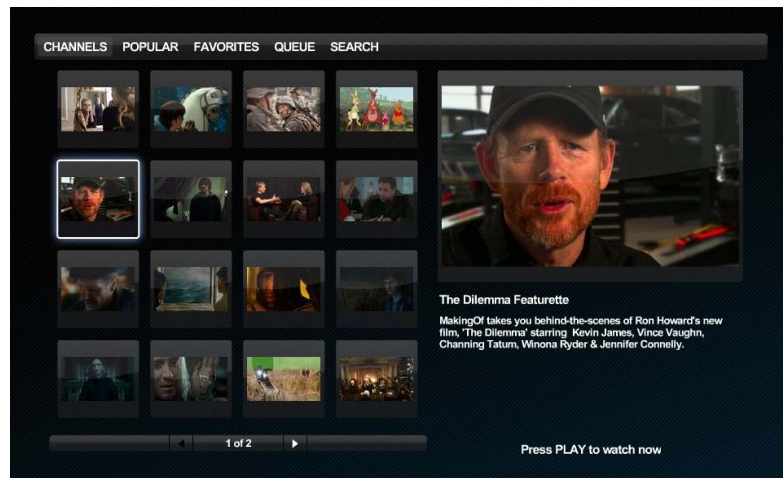


5. Press the Home button  to exit Flingo.

Flixster

Watch the latest theatrical movie trailers and get critic reviews from Rotten Tomatoes. Preview movies that are opening this week and see what's hot at the box office. See what's new on DVD and Blu-ray and the top rentals. Search a catalog of over 40,000 films. Watch high quality trailers for over 10,000 blockbusters and indie flicks.

To access Flixster:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Flixster , then press **OK**. The Flixster main screen displays.



3. Press ◀/▶ to choose an option, then press **OK**.
Options include:
 - Box Office (stay up to date with trailers and reviews for movies this week and last week's top box office)
 - DVD (browse trailers and reviews for recently released DVDs)
 - Upcoming (view trailers and reviews for upcoming movies)
 - Search (search for trailers and reviews using the on-screen keyboard)
 - Exit
4. Use the navigation buttons ▲▼◀▶ to select a movie or DVD, then press **OK**.
5. Press ◀/▶ to select **Watch Trailer**, **Cast**, **Critic Reviews**, **Share to Facebook**, or **Details**, then press **OK**.



6. While watching trailers, press **OK** to see the video progress/playback bar. Press **Option** to select **Zoom & Pan** (see "Selecting Video Zoom and Pan Options" on page 45).

Hulu Plus (US only)

Hulu Plus offers current hit TV shows and award-winning movies anytime in HD . Watch any current season episode of top shows like *Modern Family*, *Glee*, *30 Rock* and many others, enjoy classic series, or explore acclaimed movies from The Criterion Collection and Miramax. Visit www.hulu.com/plus for details.*



* Hulu Plus membership required. US only.

The following conditions must be satisfied before you can use the Hulu Plus service.


- You must have a Hulu Plus subscription. Go to www.hulu.com/plus to create your account.
- At present, Hulu Plus is only available for users located in the United States. You must have a US-based network connection.

To access Hulu Plus:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Hulu Plus **huluPLUS**, then press **OK**.
3. If you are a Hulu Plus subscriber, choose **Yes**, then press **OK**. Proceed to step 4. If you are not a Hulu Plus subscriber, choose **No**, then press **OK**. Write down the referral code, which you will enter when you go to www.hulu.com/plus to create your account.




Note: If you select **No**, you can still choose **View sample videos** and **Learn more about Hulu Plus**.

4. Write down the activation code and follow the onscreen instructions (go to www.hulu.com/activate and enter your user name, password, and activation code). Or, select **Log in to Hulu Plus** to log in to your Hulu Plus account using the onscreen keyboard (you will need to do this each time you log out and log back in to your Hulu Plus account).
5. The Hulu Plus Home screen displays. Press ▼, then press ◀/▶ to choose another category (Search, Browse Movies, Browse TV, Recently Added, Most Popular, Queue/Profile, Recommended, and Help) from the Hulu Plus interface. Press **OK**.
6. Press the Home button  to exit Hulu Plus.

Live365

Use Live365 to create your own online radio station or listen to other Live365 broadcasters' online stations. Music selections are compiled based on user ratings. Some small AM and FM stations also utilize Live365 to stream audio over the Internet.

To access Live365:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Live365 , then press **OK**.

Options include:


- Stations
- Last Played
- My Presets
- About
- Exit

Signing in to Live365 (Optional)


You can start listening to free Live365 stations as an unregistered user, but to enjoy more features like access to recommended stations, saving stations to favorites, securing track information, setting station preferences, and many others, you need to sign up for a Live365 account.

To sign in to Live365:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Live365, then press **OK**.
1. On the Live365 main screen, press ◀/▶ to select **My Presets**, then press **OK**.

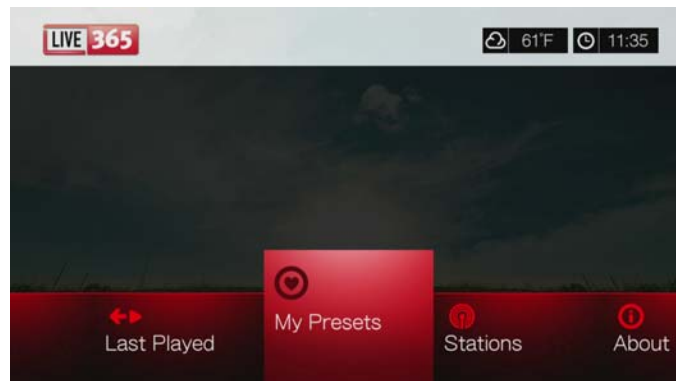

2. Press ▲/▼ to select **Sign In** or **Don't have an account?**, then press **OK**. If you don't have an account, follow the on-screen instructions to create your Live365 account online.

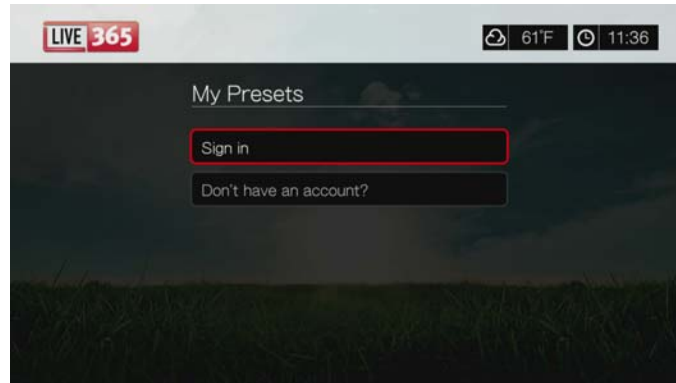

3. Use the navigation buttons ▲▼◀▶ to key in your Live365 user name on the on-screen keyboard. Select **Submit**, then press **OK**.
4. Use the navigation buttons ▲▼◀▶ to key in your Live365 account password on the on-screen keyboard. Select **Submit**, then press **OK**.
5. Press ▲/▼ to select a save option.

Options include:

- **No** – Your account details are not saved. You need to repeat the initial sign-in process every time you use the media player to access the Live365 service.
 - **Save username only** – Your user name is saved, but you will be prompted to type in your password every time you use the media player to access the Live365 service.
 - **Yes** – Both your user name and password are saved. You are automatically logged in to your account every time you select Live365 from the Services menu bar.
6. Press **OK** to complete the sign-in process. Once you have successfully signed in, the Live365 Home screen appears.

From this screen you can browse for new stations, access previous stations you've listened to, and define profile preferences for your Live365 account.

To sign up for a Live365 account, go to <http://www.live365.com/wdtk>.


For more information on the features, options, and limitations of using Live365, go to <http://www.live365.com/index.live>.

Listening to a Live365 Station


- New Live365 users can browse for a radio station.
- You can access the last station you've listened to if you've already accessed Live365 from the media player.
- Registered Live365 users can access My Preset List and listen to favorite stations.
- Live365 VIP members can listen to premium radio stations.

To browse for a radio station:

1. On the Live365 main screen, press ◀/▶ to select **Stations**, then press **OK**.

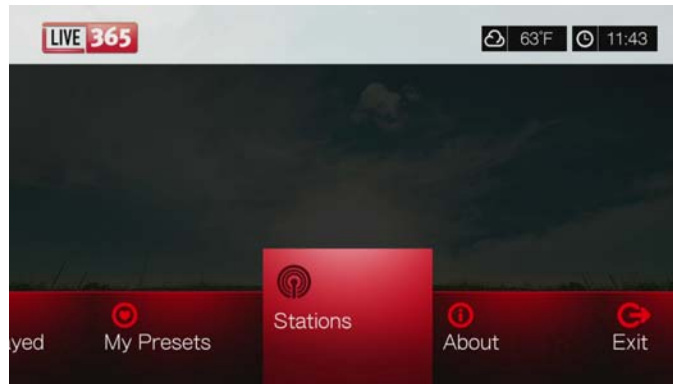

2. Press ▲/▼ to select a station category, then press **OK**.

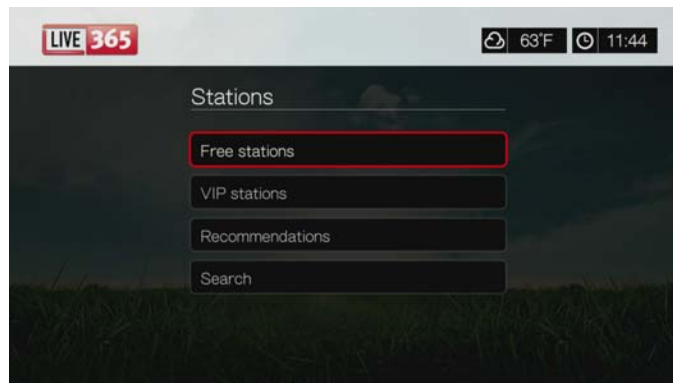




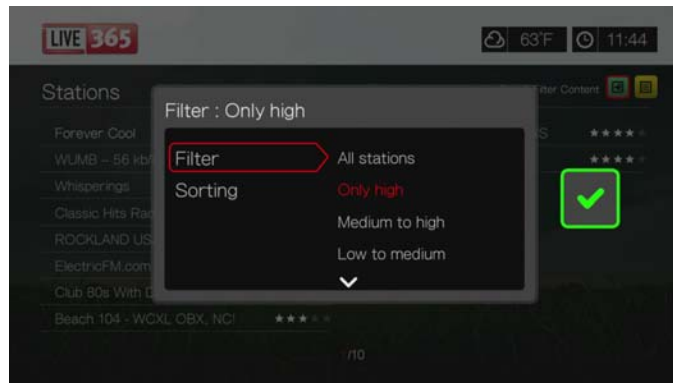
Selections include:

- **Free Stations** – Free Internet radio.
 - **VIP Stations** – Premium, uninterrupted Internet radio for registered and paying Live365 users. You must sign in to your Live365 account and be a valid VIP member before you can access this category. Go to page 125 for more information.
 - **Recommendations** - Free Internet radio recommended by your other Live365 users. You must be signed in to access these stations.
 - **Search** – Search for a Live365 station. Go to page 125 for more information.
3. Press the navigation buttons to select the station you want to listen to. Press **OK**.
 4. Press ▲ if you want to add the station to My Presets if you have a Live365 account. Press **OK**.
 5. Press ||▶ or **OK** to start listening to the selected radio station.

The Live365 Station screen:

The Live365 station screen provides view and sorting and audio quality filtering options.


1. Press **▲**, select the view icon , and press **OK** to switch between Grid and List views.
2. Press **▲/▶** to select the sorting and filter icon , and press **OK**.
3. Press **▶**, then **▲/▼** to select Filter by audio quality. Options include All Stations, Only high (audio quality), Medium to high (audio quality), Low to medium (audio quality), and Only low (audio quality). Press **OK**.
4. Press **▶**, then **OK** to select the green check mark , then press **OK** again.



5. Select Sorting and repeat the steps above to sort stations either Alphabetically or By Popularity.

To access the last station listened to:

1. On the Live365 main screen, press **◀/▶** to select **Last played**.

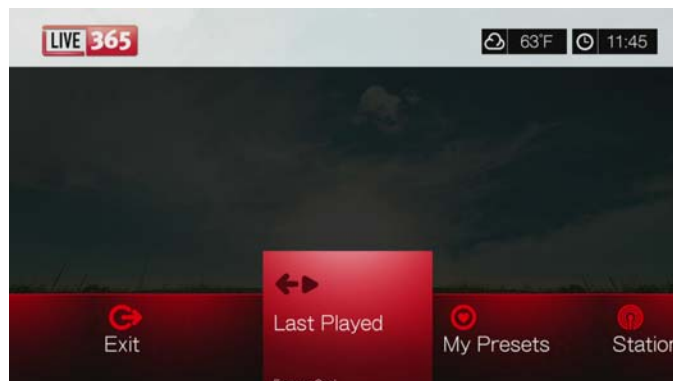


2. Press **||▶** or **OK** to start listening to the selected radio station.

To listen to a favorite station:

1. On the Live365 main screen, press ◀/▶ to select **My Presets**, then press **OK**. Press ◀/▶ to select a station from your preset list.
2. Press **||▶** or **OK** to start listening to the selected radio station.

To listen to a VIP station:

1. On the Live365 main screen, press ▲/▼ to select **Stations**, then press **OK**.
2. Press ▲/▼ to select **VIP Stations**, then press **OK**.
3. Press ▲/▼ to select a music genre, then press **OK**.

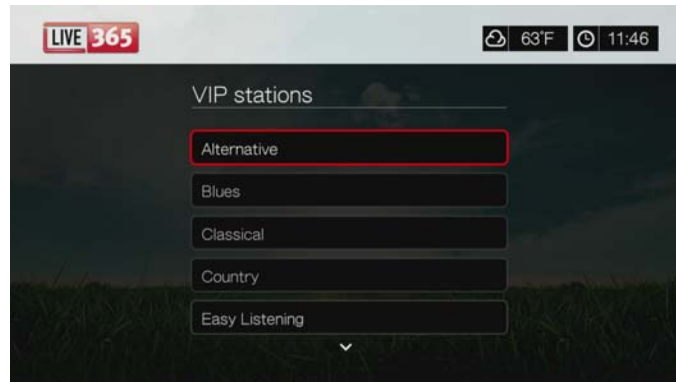

4. Press ▲/▼ to select a music sub-genre, then press **OK**.
5. Press ◀/▶ to select the station you want to listen to.
6. Press **||▶** or **OK** to start listening to the selected radio station.

Searching for a Live365 station

Perform a station search based on the following criteria:


- Artist name
- Track or CD title
- Station information
- Music genre
- Station location
- Audio quality.

You can limit your search based on whether a station has been rated by Live365 editors or if it is a professional, independent, or official station.

To search for a Live 365 station:

1. On the Live365 home screen, select **My Presets**, **Stations**, or **Last Played**, then press **Options**.

2. Press **▲/▼** to select **Search**, then press **OK**.

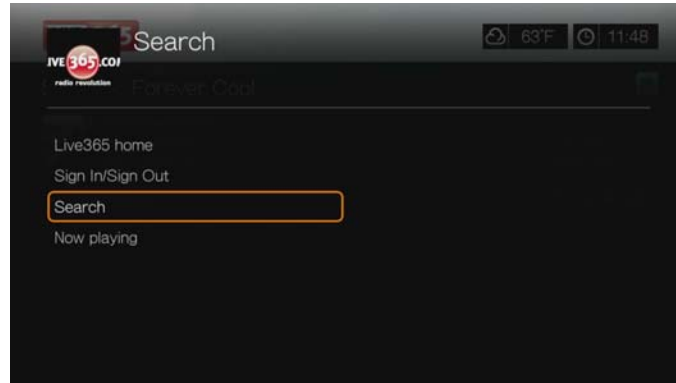

3. On the on-screen keyboard, use the navigation buttons **▲▼◀▶** to key in a search keyword, then press **OK**.
4. Press **◀/▶** to select a station from the search result.
5. Press **⏮▶** or **OK** to start listening to the selected radio station.

Displaying the Currently Playing Station

1. On the Live365 home screen, select **My Presets**, **Stations**, or **Last Played**, then press **Options**.
2. Press **▲/▼** to select **Now Playing**, then press **OK**. The station currently playing displays.

Adding a Station to Your Preset List

If you like a particular station, you can add it to your preset list for easier access in the future.

To add a station to your preset list from the Now Playing screen list:

1. Go to the station list showing the station you want to add.
2. Press **◀/▶** to select the station you want to add.
3. Press **▶** several times to enable the **+** Add to My Preset function, then press **OK**.
4. A confirmation screen appears. Press **OK** to confirm the new preset station and return to the Now Playing screen.

Removing a Station from Your Preset List

You can remove stations you no longer want from your preset list.

To remove a station from your preset list:

1. Sign in to your Live365 account. Go to "To sign in to Live365:" on page 121 for instructions.
2. From the Live365 home screen, press **◀/▶** to select **My Presets**, then press **OK**.
3. Press **◀/▶** to select the station you want to remove.
4. Press **▲** to enable the Remove Station function, then press **OK**.
5. A confirmation prompt appears. Press **OK** to go back the Now Playing screen.

Providing Song Feedback

Music selections in Live365 are compiled based on their user ratings. You can participate in the selection process by giving a song the “thumbs up” 👍 or “thumbs down” 👎 vote.

To provide song feedback:

1. While the song is playing, press ◀/▶ to select a feedback icon: 👍 for positive feedback, 👎 for negative feedback. Press **OK**.
2. A feedback confirmation screen appears. Press **OK** to go back the the Now Playing screen.

Getting Track Information

You can send the track information of the currently playing song to your email account for later reference.

To secure track information:

1. While the song is playing, press ◀/▶ to select ✉, then press **OK**.
2. A confirmation screen appears. Press **OK** to return to the Now Playing screen.
The track information will be sent to the email address you used to sign up for your Live365 account.

Signing out from Live365

Sign out of Live365 after a listening session to ensure that nobody can make changes to your Live365 settings and stations without your permission.

To sign out from Live365:

1. In a Stations or the Now Playing screen, press **Options**, then ▲/▼ to select **Sign In/Sign Out**, then press **OK**.
2. Press ◀/▶ to select **OK** on the confirmation prompt, then press **OK**.

Exit Live365

To return to the Services home screen, press ◀/▶ to select **Exit** in the Live365 home screen, then press **OK**.

Netflix

Enjoy new releases, classics, and TV episodes instantly on your WD TV Live Hub Media Center. Don't wait for the mailman to deliver your movies and don't settle for streaming to your small computer screen. Access your Netflix unlimited membership and instantly watch TV episodes and movies on your big screen.*



*Netflix is available in certain countries. Unlimited membership required. More information at www.netflix.com.

To access Netflix:



Important: Be sure to update your firmware to the latest version before following the instructions below. See "System Firmware Upgrade" on page 203 for further details.

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Netflix **NETFLIX**, then press **OK**.

Existing Netflix Members

Follow the on-screen instructions to enter your user name (in most cases, your registered email address) and password to log in to your account using the remote control. Go to www.netflix.com/signinhelp if you encounter any problems.

New to Netflix

Go to www.netflix.com/wdtv to sign up and start a one month free trial.

Netflix Navigation

Once you have accessed your Netflix account, navigate using the remote control to choose from a variety of categories of movies and TV shows.



Note: To deactivate Netflix on the media player, reset the device to factory defaults. See "Device Reset" on page 195. To deactivate the media player from your Netflix account, log in to your Netflix account. Navigate to "Your Account & Help." Under "Manage Netflix ready devices and computers" locate the WD TV device and select "Deactivate."

Pandora (US only)

Pandora is an automated music recommendation and Internet radio service. With Pandora, you can input a song title or artist name and the service responds by playing selections that are musically similar. You can provide feedback (approved/not approved) on individual songs, which Pandora takes into account for future selections.


Conditions for Using Pandora

The following conditions must be satisfied before you can use the Pandora service.


- You must have a Pandora account. Go to www.pandora.com/wd to create your account. Once you have registered, note your activation code. You will need this code to sign in to Pandora from your media player.
- At present, Pandora is only available for users located in the United States. You must have a US-based network connection.


To set the system language to English:

1. Navigate to Home | Setup menu bar.
2. Press ◀/▶ to select **Appearance**, then press **OK**.
3. Press ▲/▼ to select **Language**, then press **OK**.
4. Press ▲/▼ to select **English**, then press **OK**.

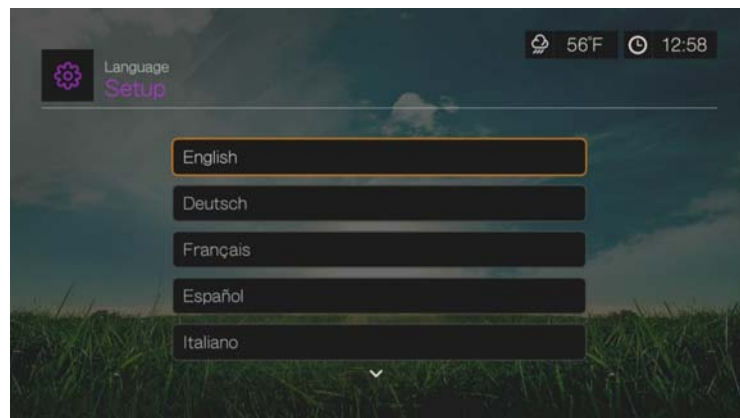

Signing in to Pandora for the First Time

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Pandora , then press **OK**.
3. Press **OK** to bring up the Add Account screen.
4. If you already have a Pandora account, choose **I have a Pandora account**, then press **OK** to create your new Pandora account. Proceed to step 6.

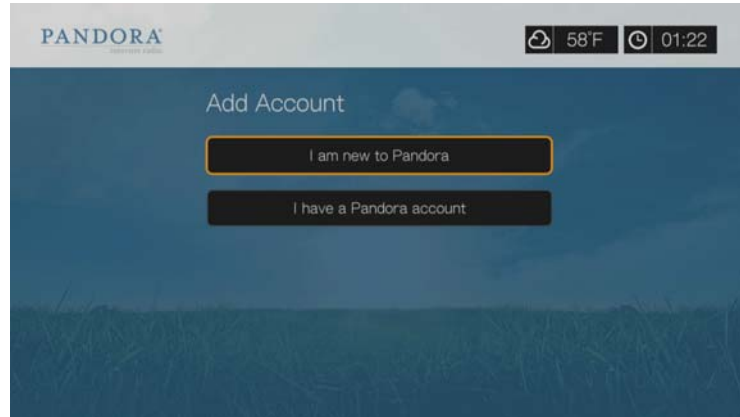

5. If you do not have a Pandora account, select **I am new to Pandora**, then press **OK**.
6. Write down the activation code and follow the onscreen instructions (go to www.pandora.com/wd to create your new account). When finished, choose **Continue**, then press **OK**.
7. Use the navigation buttons ▲▼◀▶ to type in your Pandora user name using the on-screen keyboard, then press **OK**.
8. Use the navigation buttons ▲▼◀▶ to type in your Pandora account password using the on-screen keyboard, then press **OK**.
9. Press ◀/▶ to select a save option.
Options include:
 - **No** – Your account details will not be saved. You need to repeat the initial sign-in process every time you access the Pandora service using the media player.
 - **Save username only** – Your user name is saved, but you will be prompted to type in your password every time you access the Pandora service using the media player.
 - **Yes** – Both your user name and password are saved. You are automatically logged in to your account every time you access the Pandora service using the media player.
10. Press **OK** to complete the sign-in process.

Once you have successfully signed in to Pandora, the Stations screen appears.



From this screen you can create new stations, start listening to previously created stations and Quickmix playlist, and define profile preferences for your account.

For more information on the features, options, and limitations of using Pandora, go to <http://www.pandora.com>.

Pandora Stations

A Pandora station is a personalized stream of music, based on one or more artist names or song titles of your choice. Once you've signed in to Pandora from your media player, you can easily access your stations from the Music menu bar.

Pandora stations reminders

- You can have up to 100 stations at any one time, plus one QuickMix. Once you reach this maximum number of stations you have to delete a station before you can add another one.
- Pandora does not allow immediate or "on demand" playback of a specific song.
- A Pandora station cannot play more than four songs by an artist in a three-hour period.
- After eight hours of play, Pandora prompts you to see if you're still listening. Streaming stops until you respond.
- The music selection streamed into your Pandora station contains a mix of songs or artists that were compiled based on:
 - the initial station "seed" used in creating that station. Go to the next section for instructions on how to create a new Pandora station.
 - the track feedback (thumbs up / thumbs down) you provide. Go to page 133 for more information.
 - the number of skips assigned to a track. Go to page 133 for more information.
- You cannot reverse or immediately replay the songs played on your Pandora station.

To create a Pandora station:

1. Navigate to **Create Station** or press **Options** to select **Create station**. Press **OK**.
2. Use the navigation buttons **▲▼◀▶** to type the name of an artist or song title using the on-screen keyboard. Select **Submit**, then press **OK**.
3. Press **▲/▼** to select a listing from the search results, then press **OK**.
The listing you selected will serve as the station 'seed' for Pandora to compile and stream music similar to your station.

To listen to a Pandora station:


1. On the **Stations** screen, use the navigation buttons to select the name of the station you want to listen to.
2. Press **II ▶** or **OK** to start listening to the selected Pandora station. Press **NEXT** **⏮** to go to the next song.

To tune in to another station:

1. While listening to a station, press **STOP** **■**. You are returned to the Stations screen.
2. Use the navigation buttons to select the name of the station you want to switch to.
3. Press **II ▶** or **OK** to start listening to the selected station.

To rename a Pandora station:

1. Tune in to the station you want to rename.
2. Navigate to **Rename Station** or press **Options** then **▲/▼** to select **Rename this station**. Press **OK**.

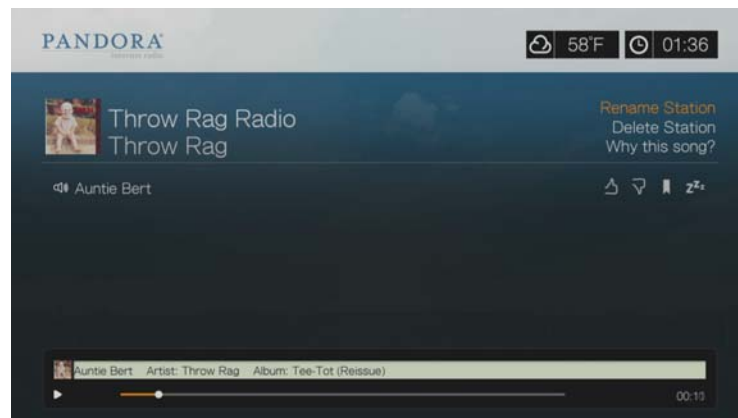

3. Use the navigation buttons **▲▼◀▶** to key in a new station name using the on-screen keyboard. Select **Submit**, then press **OK**.

To delete a Pandora station:

1. Tune in to the station you want to delete.
2. Navigate to **Delete Station** or press **Options** then **▲/▼** to select **Remove this station**. Press **OK**.
3. Press **◀/▶** to select **OK** on the confirmation prompt, then press **OK**.

QuickMix

QuickMix is a feature that allows you to listen to more than one of your stations at once. QuickMix will play only one song based on particular musical characteristics at a time (unlike regular Pandora stations, which play four related songs in a row), so the mood changes more often.

Providing Song Feedback

You can influence the music selection that is streamed into your Pandora station by providing track feedback for the song currently playing. You can give a song a “thumbs up” or a “thumbs down” vote.

Thumbs up

If you like the currently playing song, give it a thumbs up vote. This positive feedback means:

- The very next set of songs for this station will be generated using the song you’ve given a “thumbs up” vote to as a musical starting point.
- Future sets of songs are likely to have similar musical traits. Multiple “thumbs up” votes on this station for other similar songs will have a cumulative effect.
- This song will play somewhat more often than other songs on this station's potential playlist, and will play about as often as other songs that have received a “thumbs up” on this station.

Thumbs down

If you don't want to hear a song on a particular station, give it a thumbs down vote. This negative feedback means:

- The song will stop playing, if there are any of the remaining “six skips per hour” available on that particular station (this limit is per station, on a rolling per-hour basis).
- The song will be permanently removed from that particular station's playlist.
- A new set of songs with a different musical emphasis will begin to play.
- If you’ve given at least two “thumbs down” vote to a specific artist on that particular station, songs from that artist will no longer be included in that station’s playlist.

To provide song feedback:

- While a song is playing, press ◀/▶ to select 👍 or 👎, then press **OK**.
A prompt to confirm your vote appears.

Putting a Song to Sleep

When you want to stop listening to song, but not permanently remove it from a station’s playlist, you put it to “sleep.” This prevents the song from playing on any of your stations for 30 days.


To put a song to sleep:

- While a song is playing, press ◀/▶ to select , then press **OK**.
A prompt to confirm the “sleep” action appears.

Bookmarking a Song or Artist

You have the option to bookmark a song or an artist for later reference. You can later refer to this bookmark if you want buy the track when you've sign in to Pandora from your computer or mobile computing device, or if you want to share your musical preferences with other Pandora users.

To bookmark a song or artist:


1. While a song is playing, press ◀/▶ to select , then press **OK**.
2. Press ▲/▼ to select whether to bookmark the song title or the song artist, then press **OK**.

The new bookmark is added to your listener profile page. Sign in to Pandora from your computer or mobile computing device to view this profile page.

Why a Song is in my Station's Playlist

You can see why Pandora included a particular song in your station's playlist. While a song is playing, select **Why this song?**, then press **OK**. The song analysis displays.

Deleting a Pandora Account


1. Select Pandora from the Services menu then press **OK**.
2. Press ▲/▼ to select the Pandora account you want to delete, then press ▶ to select the  and press **OK**.

Picasa

View, share and enjoy your photographs right from your television.

To learn more about Picasa services, and the options and limitations related to them, go to <http://www.picasa.google.com>.

To access Picasa:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select  , then press **OK** to display the Picasa home screen.

Options include:


- Account
- Search
- My Photos
- People I'm Following
- Featured
- Recent

Signing In To Your Picasa Account




.....
Note: If you do not have a Picasa account and want to create one, go to <http://www.picasa.google.com>.

1. Press ◀/▶ to select **Account** in the Picasa home screen, then press **OK**.

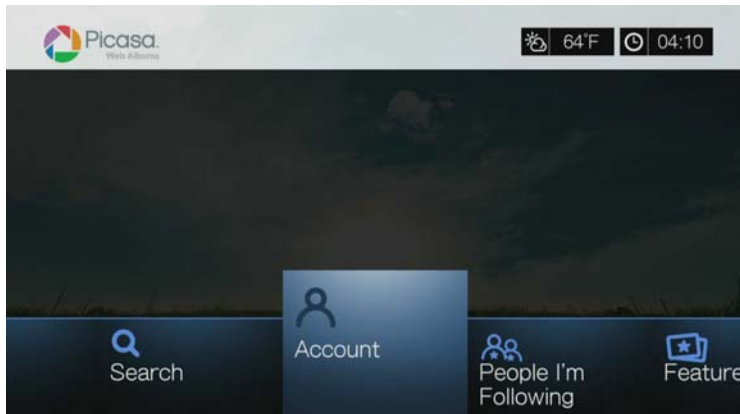

2. Select **Add Account**, then press **OK**.

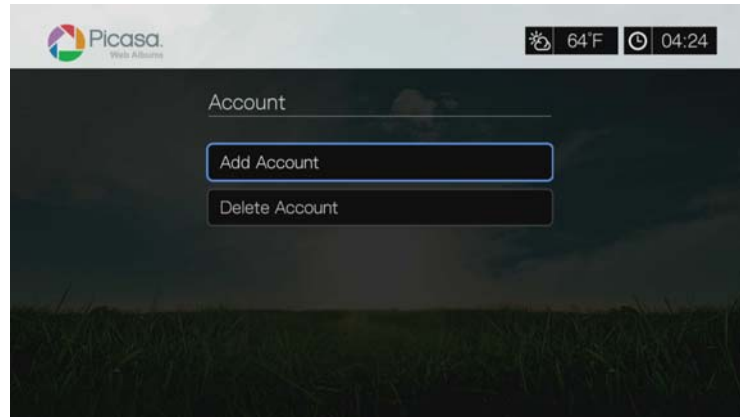


3. Use the navigation buttons ▲▼◀▶ to type your Picasa user name in the on-screen keyboard. Select **Submit**, then press **OK**.
4. Use the navigation buttons ▲▼◀▶ to type your Picasa account password in the on-screen keyboard. Select **Submit**, then press **OK**.
5. Press ▲/▼ to select a save option. Press **OK** when finished.

Options include:

- **No** – Your account details are not saved. You need to repeat the initial sign-in process every time you access Picasa using the media player.
 - **Save username only** – Your username is saved, but you will be prompted to input your password every time you access Picasa using the media player.
 - **Yes** – Both your user name and password are saved. You can later sign in to your account from the Picasa Account screen.
6. The **My Photos** page appears. Go to the next section for more information on this page.


Account

By default, the **My Photos** page displays first when you sign in to your account. This page contains the photos and videos you have uploaded to Picasa.

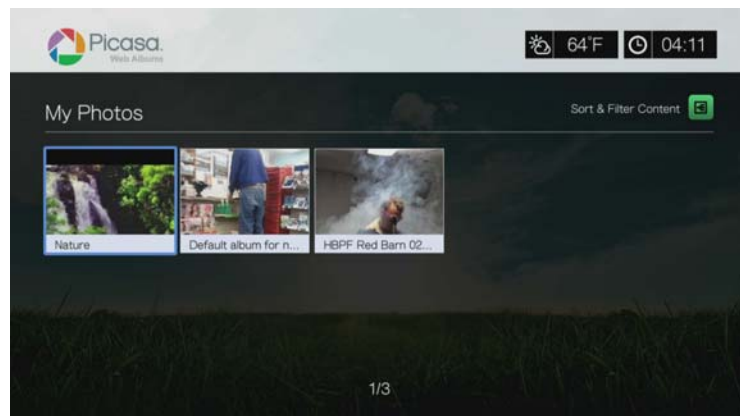

.....
Note: If you have not uploaded any photos or videos, the screen displays "there is no media in the current folder."

You can sort and filter content on this page by showing all content (**All**) or your **Unlisted Gallery** or **Public Gallery**. Press **A** or navigate to , and press **OK**, then press **▲/▼** and **OK** twice to switch that selection.

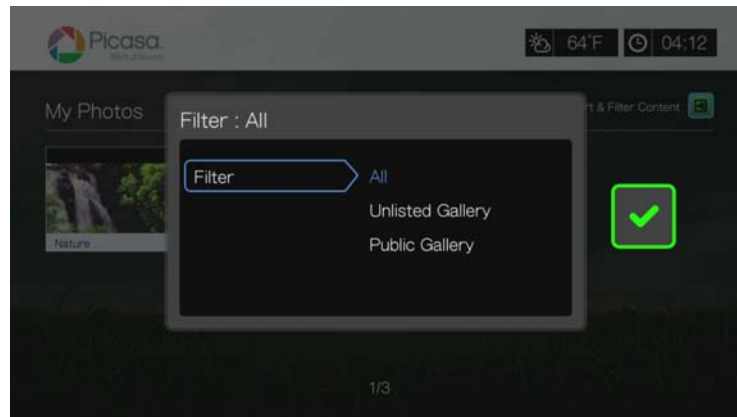

Searching for Content

You can search Picasa for photos and videos of particular interest to you. The search results are based on the following:

- Filenames
- Captions
- Tags
- Folder or album names
- Camera maker
- Date (i.e., 'November' or '2011')


The media player saves your searches so you can quickly recall them.



.....
Note: Content with visibility set to “private” by users do not appear in search results.


To search for content:

1. Press **◀/▶** to select **Search** in the Picasa home screen, then press **OK**.

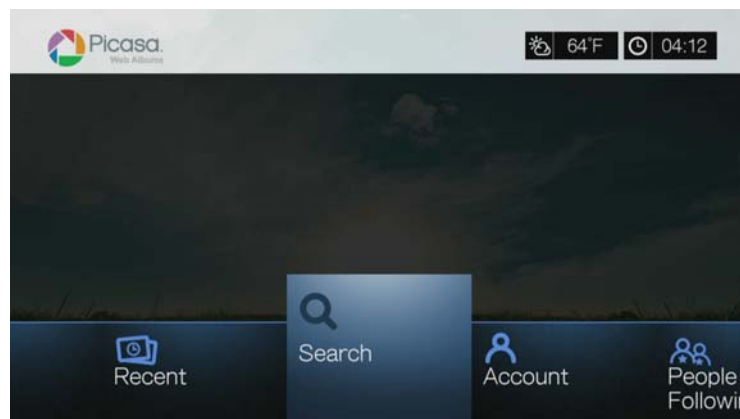

2. Use the navigation buttons **▲▼◀▶** to type a keyword related to the subject matter of the content you're looking for using the on-screen keyboard. Select **Submit**, then press **OK**.


The content search begins (this may take a few seconds). Content matching your search word appears in a Search result screen.

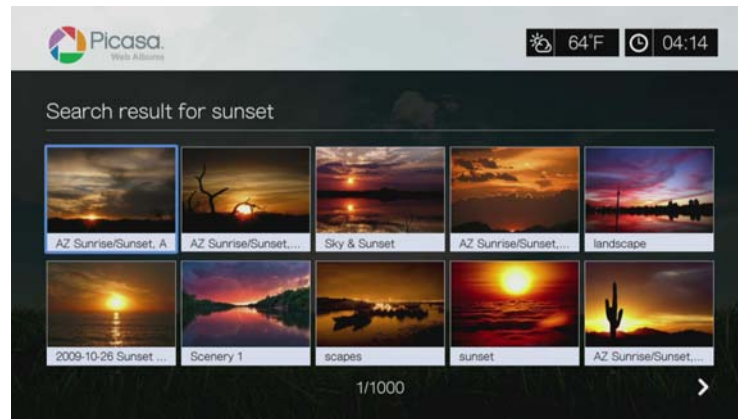

3. Use the navigation buttons to select a photo or video from the display.
4. Press **II ►** or **OK** to view the selected photo or start watching the selected video.
Go to page 166 for more information on using the YouTube Player.

To use search history:

1. Press the **SEARCH** button on the remote control. This toggles you to the Search History list.

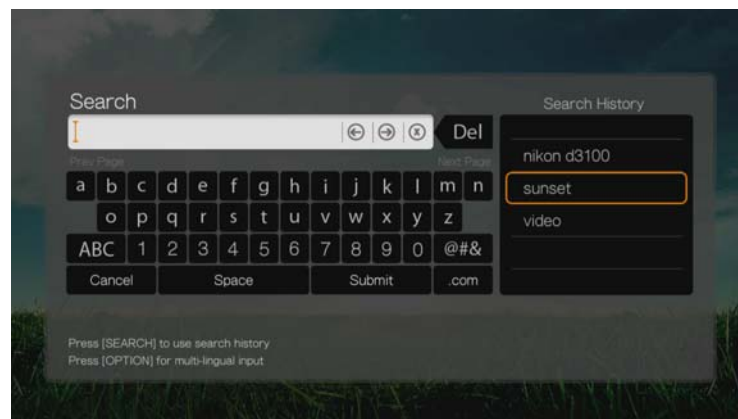


2. Press **▲/▼** to select a search from the display.
3. Press **OK** to perform the saved search.

My Photos

My Photos contains all images and videos in your Picasa Web Albums. To view images or videos, use the navigation buttons to select a web album, then press **OK**. Select an individual file and press **OK** to view, or press **II ►** to view a slideshow of all the photos in an album.

Photo Menu Options

With a photo thumbnail in a web album selected, press **Options**. The My Photos menu options display. Press **Back** when complete to return to the web album menu.

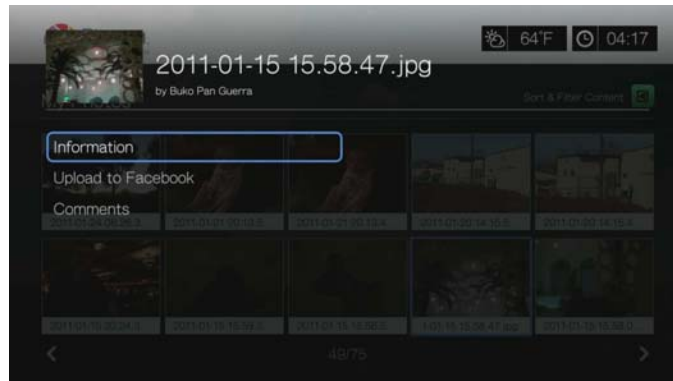

Information

Use this option to display the following information about the current picture:

- Date
- Camera make and model
- ISO, exposure, and aperture settings
- Focal length
- Flash info



Upload to Facebook


The Picasa upload to Facebook function is the same as the Videos upload to Facebook function. See “Upload to Facebook” on page 40.

Comments

Use this option to make or view comments on the selected photo. Use the navigation buttons to select **Hide Comments** or **Write a Comment...** using the onscreen keyboard, then press **OK**.

Photo Display Options

- To display the photo options while viewing a photo, press **Options**.
- To return to the photo you were viewing, press **Back** or **Options** again.

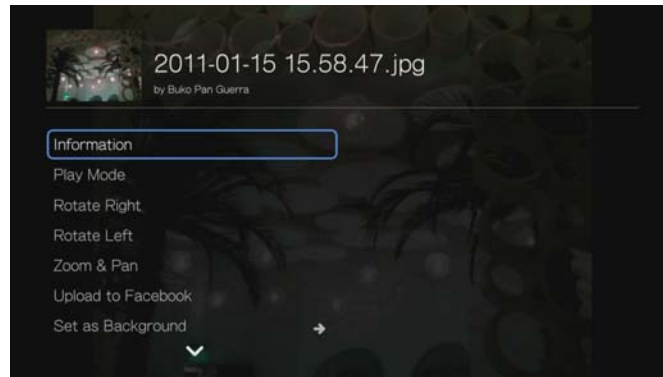

Information

See “Information” on page 139.

Play Mode

See “Play Mode” on page 62.

Rotate Left & Right

See “Rotate Left & Right” on page 62.

Selecting Photo Zoom and Pan Options

See “Selecting Video Zoom and Pan Options” on page 45.

Upload to Facebook

See “Upload to Facebook” on page 40.

Set As Background

See “Set as Background” on page 61.

Comments

See “Comments” on page 139.

Download Photo

Use this menu to download a photo to the media center’s internal drive or to another network attached device.

Displaying Photo Thumbnails

See “Displaying Photo Thumbnails” on page 63.

Photo Slideshow

See “Photo Slideshow” on page 64.

Video Player

The Picasa video layer layout is similar to the regular video playback screen. It displays the playback status bar and the elapsed and total playback times. Press **II ►** to pause and resume playback.

People I'm Following

People I'm Following contains thumbnails showing icons for the people you are following on Picasa. Select an icon to view each person's Public Gallery Albums. Use the navigation buttons to select individual photos or press **II ►** inside an album to begin a photo slideshow.

Featured

This screen contains select Picasa user photos. Use the navigation buttons to select individual photos or press **II ►** to begin a photo slideshow. When viewing a photo, press **Options** then select **More Photos From This Owner** to view all of the owner's Public Gallery Albums.

Recent

This screen contains recent Picasa user photos, and works the same as way as Featured above.


Deleting a Picasa Account

1. On the Picasa main screen, press **◀/▶** to select **Account**, then press **OK**.
2. Press **▲/▼** to select **Delete Account**, then press **OK**.
3. Press **▲/▼** to select the account you want to delete, then press **OK**.
4. Press **◀/▶** to select **OK** on the confirmation prompt, then press **OK**.

SEC Digital Network

The SEC Digital Network offers college sports fans access to the largest library of multi-sport full games and original programming from the most dominant and exciting collegiate sports conference. Watch FREE daily programming including SEC Today, Countdown to Kickoff, Game Day Central, and weekly coaches teleconferences, and select full games. Additional content can be ordered at www.SECOnDemand.com.


To access SEC Digital Network:

1. Navigate to the Home | Services menu bar and and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select SEC Digital Network , then press **OK** to display the SEC Digital Network home screen.
3. Use the navigation buttons **▲▼◀▶** to browse, select, and search for videos and the playback buttons to stop and start videos.

SHOUTcast Radio

SHOUTcast Radio is the ultimate directory of online radio stations featuring over 45,000 music, talk, sports, and community radio stations from around the world.

To access SHOUTcast:

1. Navigate to the Home | Services menu and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select SHOUTcast Radio , then press **OK**.


Options include:

- Search
- Radio Genres
- Favorites
- Top Radios
- About
- Exit


Listening to a SHOUTcast Radio Station

To browse for a radio station:

1. On the SHOUTcast Radio main screen, press ◀/▶ to select **Radio Genres**, then press **OK**.

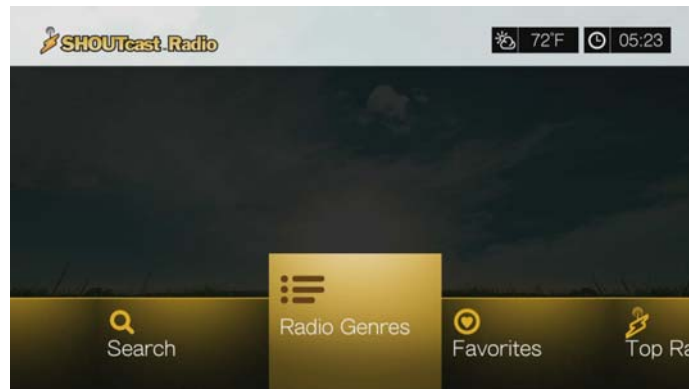


2. Press ▲/▼ to select from a variety of genres, then press **OK**.

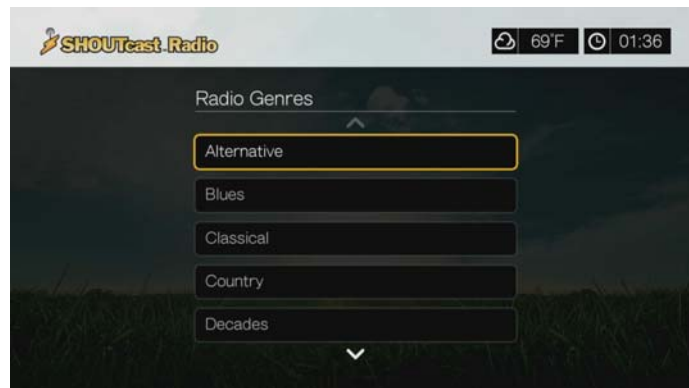

3. Press ▲/▼ to select from a variety of subgenres (if necessary), then press **OK**.

- Press ▲/▼ to select a radio station.

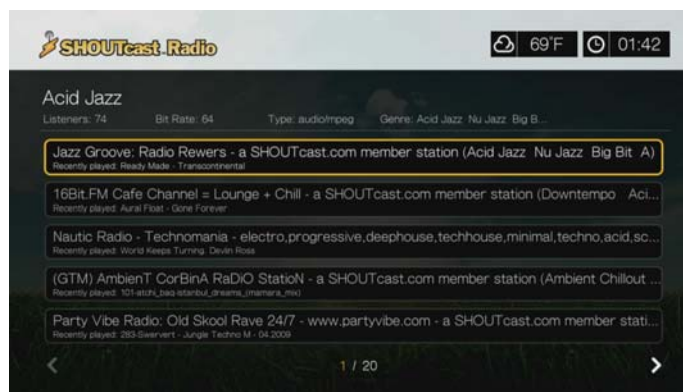


- Press **Options**, then press ▲/▼ to select **Add to Favorite** if you want to add the station to Favorites. Press **OK**.
- Press **II ►** or **OK** to start listening to the selected radio station. You can view information about the currently playing station and song such as title, artist, genre, number of listeners, etc. at the top of the screen.

Searching for a SHOUTcast Radio Station


To search for a SHOUTcast Radio station:

- On the SHOUTcast Radio main screen, press ◀/▶ to select **Search**, then press **OK**.
- Filter your results by selecting **All**, **Artist**, or **Genre**, then press **OK**.

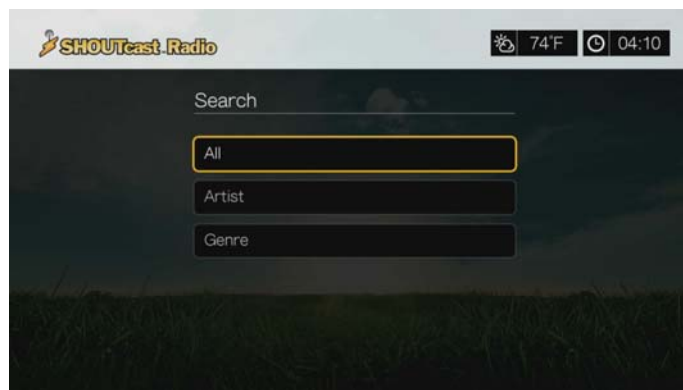

- On the on-screen keyboard, use the navigation buttons ▲▼◀▶ to key in a search keyword, then press **OK**.



.....
Note: You can also press  on the remote control to toggle to the results list after entering several characters in the search field.

- Press ▲/▼ to select a station from the search result.
- Press **II ►** or **OK** to start listening to the selected radio station.

Adding a Station to Your Favorites List

If you like a particular station, you can add it to Favorites for easier access in the future.

To add to a station, program, or podcast to your favorites:

1. Go to the station list showing the station you want to add.
2. Press **▲/▼** to select the station you want to add or begin playing a station.
3. Press **Options**, then press **▲/▼** to select **Add to Favorites** if you want to add the station to Favorites, then press **OK**.



4. Press **OK** again to confirm.

Listening to a Station in Your Favorites List

To listen to a favorite station:


1. On the SHOUTcast Radio main screen, press **◀/▶** to select **Favorites**, then press **OK**.
2. Press **▲/▼** to select a station from the list.
3. Press **⏮▶** or **OK** to start listening to the selected radio station.

Assigning a Preset Button to a Station

You can assign a numbered button on the remote control to a SHOUTcast Radio station for quick access.

To assign a preset button to a station:

1. Go to the station list showing the station you want to add.
2. Press **▲/▼** to select the station you want to add or begin playing a station.
3. Press **Options**, then press **▲/▼** to select **Preset Music**. Press **▶**.

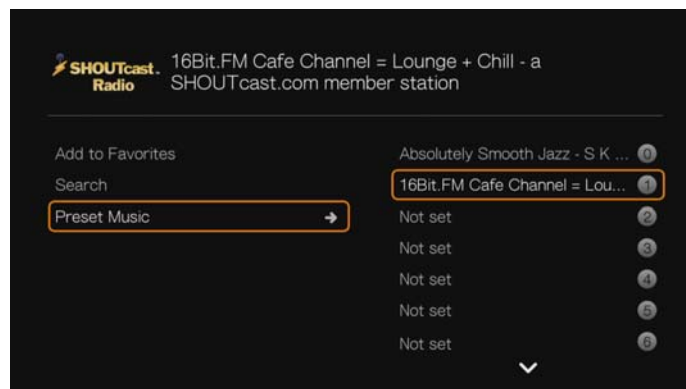


4. Press **▲/▼** to select a numbered remote button, then press **OK**.

Removing a Station from Your Preset List

You can remove stations you no longer want from your preset list.

To remove a station from your preset list:

1. On the SHOUTcast Radio main screen, press ◀/▶ to select **Favorites**, then press **OK**.
2. Press ▲/▼ to select the station you want to remove.
3. Press **Options**, then press ▲/▼ to select **Remove from Favorites**, then press **OK**.

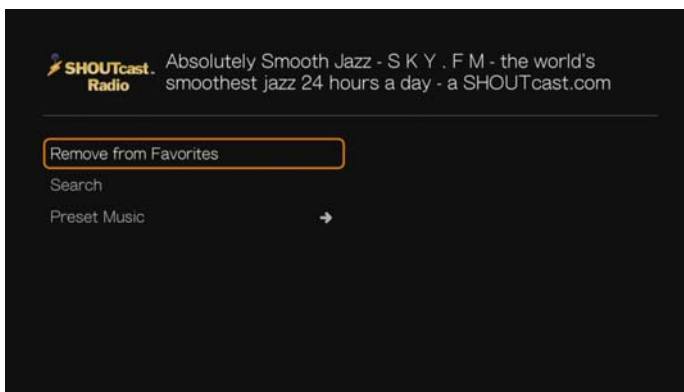

4. A confirmation prompt appears. Select **OK**, then press **OK**.

Top Radios

To choose from among the most popular SHOUTcast Radio stations, press ◀/▶ to select **Top Radios** in the SHOUTcast Radio main screen, then press **OK**.

About

For more information about the SHOUTcast Radio service such as terms of service, press ◀/▶ to select **About** in the SHOUTcast Radio main screen, then press **OK**.



Exit

To simply exit out of SHOUTcast Radio, press ◀/▶ to select **Exit** in the SHOUTcast Radio main screen, then press **OK**.

SnagFilms®

SnagFilms offers a broad collection of great independent movies you can watch right now, on demand, for free – films that entertain and inform, engage and inspire, and satisfy every taste. These are movies worth watching – documentaries, comedies, dramas and thrillers, award winners and rare finds – all free for you to enjoy.

To access SnagFilms:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select SnagFilms  , then press **OK**.
3. The SnagFilms main screen displays featured movie. Press ▼ to choose from a variety of other categories shown in the SnagFilms interface, or select Search and use the on-screen keyboard to find a movie. Press **OK**.
4. Use the navigation buttons ▲▼◀▶ to select a video. Press ||▶ or **OK** to begin playback.
5. Press the Home button  to exit SnagFilms.


Spotify


Enjoy on-demand access to over 15 million tracks and albums. Any artist, any album, any genre - available instantly on your media player.* Spotify is available in: USA, UK, Sweden, Finland, Norway, France, The Netherlands, Spain, Austria, Belgium, Switzerland and Denmark. To use the service, create a Spotify account at www.spotify.com.



*Spotify Premium account required.

To access Spotify:

1. Navigate to the Home | Services menu and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Spotify , then press **OK**.
3. The terms and conditions disclaimer displays. Select **Accept** then press **OK**.
4. Press **OK** to sign in to Spotify

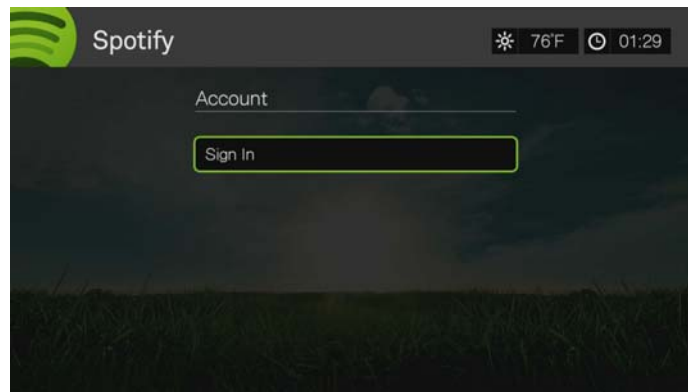


5. Use the navigation buttons ▲▼◀▶ to type in your Spotify user name using the on-screen keyboard, then press **OK**.
6. Use the navigation buttons ▲▼◀▶ to type in your Spotify account password using the on-screen keyboard, then press **OK**.
7. Press **OK** to complete the sign-in process.
8. The Spotify main screen displays. Options include:
 - What's New
 - Top Lists
 - Radios
 - Playlists
 - Starred
 - Inbox
 - Play Queue
 - People
 - Search
 - Account


Searching for a Spotify Artist, Album, or Track

To search for a Spotify artist, album, or track:

1. On the Spotify main screen, press ◀/▶ to select **Search**, then press **OK**.
2. On the on-screen keyboard, use the navigation buttons ▲▼◀▶ to key in a search keyword, then press **OK**.
3. Press ▲/▼ to select a track from the search result.
4. Press ||▶ or **OK** to start listening to the selected track.

Filtering Search Results

1. Press **A** or navigate to the sort and filter content icon , and press **OK**.
2. Press ▶, then ▲/▼ to select Filter by All, Tracks, Albums, and Artists. Press **OK** to display results by the criteria selected.

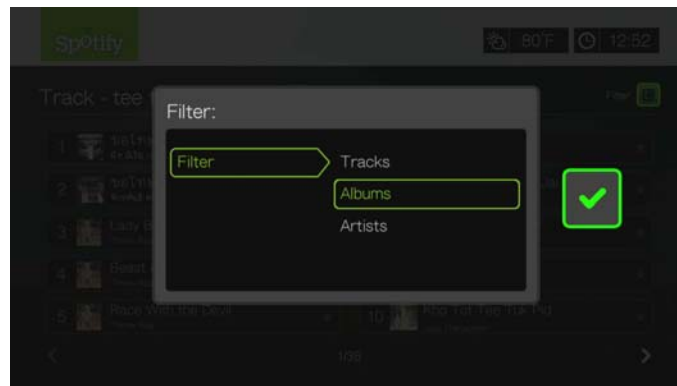


3. With the green check mark  selected, press **OK** again.

Browse Album Artist

You can view available albums from an artist whose track you've selected.

To browse an artist's albums:

1. With an artist's track selected, press **Options**.
2. Press ▲/▼ to select **Browse Artist Album**, then press **OK**.

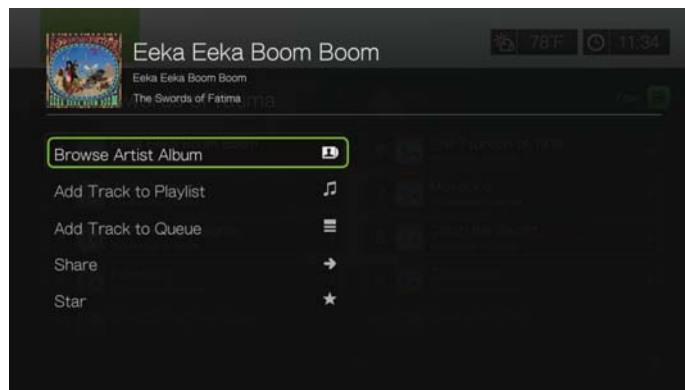

3. A list of the artist's albums available on Spotify display.

Adding a Track to a Playlist


If you like a particular track, you can add it to a playlist for easier access in the future.

To add a track to a playlist:

1. Go to the track list showing the track you want to add.
2. Press ▲/▼ to select the track you want to add or begin playing a track.
3. Press **Options**, then press ▲/▼ to select **Add to Track to Playlist**, then press **OK**.



4. If you want to create a new playlist for the track, select **Create New Playlist**, then press **OK**.
5. On the on-screen keyboard, use the navigation buttons ▲▼◀▶ to key in a new playlist name, then press **OK**.
6. Press ▲/▼ to select a playlist name.

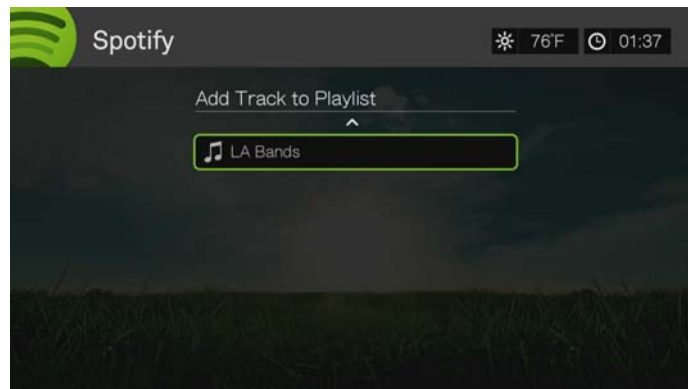

7. Press **OK**. You can delete the playlist by pressing **Options** with the playlist selected, then select **Delete**.


Collaborate on a Playlist

You can set a playlist you've created to **Collaborate** so that your friends can add tracks to it.

To set a playlist to Collaborate:

1. In the Spotify main screen, press ◀/▶ to select **Playlists**, then press **OK**.
2. With a playlist selected, press **Options**.

3. Select **Collaborate**, then press **OK**.

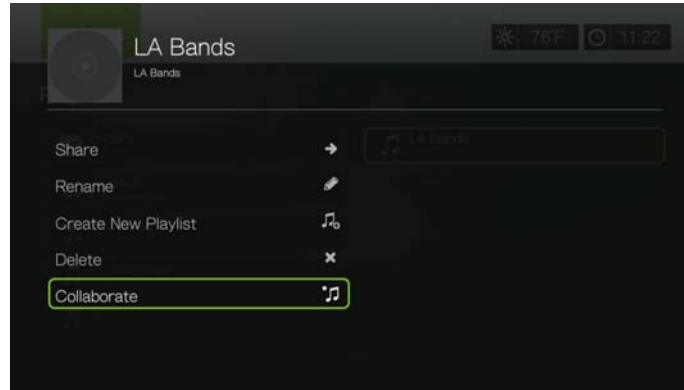

4. The playlist is now set to Collaborate, and the playlist appears with a dot next to it. You can reverse this setting by pressing **Options** with the playlist selected, then select **Uncollaborate**.

Adding a Track to the Play Queue

If you like a particular track, you can add it to the Play Queue and listen to it in sequence with other tracks you have added.


To add a track to the Play Queue:

1. Go to the track list showing the track you want to add.
2. Press **▲/▼** to select the track you want to add or begin playing a track.
3. Press **Options**, then press **▲/▼** to select **Add to Track to Queue**, then press **OK**.
4. To listen to your Play Queue, press **◀/▶** in the Spotify main screen to select **Play Queue**, then press **OK**.
5. Press **II ▶** or **OK** to start listening to the Play Queue.

Share

You can share a track or playlist with the friends you have added to your Spotify account, or to Facebook.

1. With the track or playlist you want to share selected, press **Options**, then press **▲/▼** to select **Share**, then press **OK**.
2. Press **▲/▼** to select **Share to Friend** or **Share to Facebook**, then press **OK**.

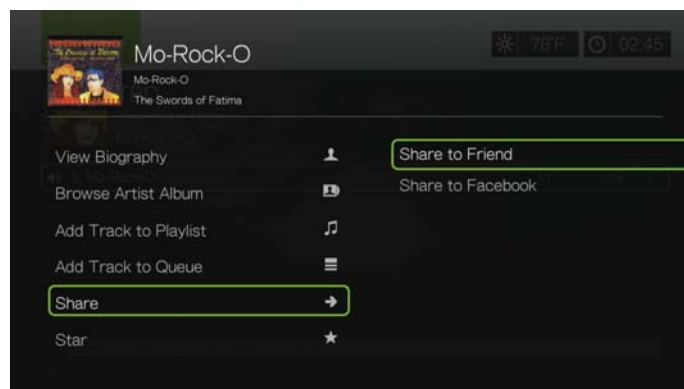

3. Select a friend from your list then press **OK**, or log in to Facebook (if necessary).

Star

You can “star” a track for quick access in the future via the Starred menu on the Spotify home screen.

1. With the track you want to star selected, press **Options**, then press **▲/▼** to select **Star**, then press **OK**.
2. In the Spotify home screen, press **◀/▶** to select **Starred**, then press **OK**. Your starred tracks display.



People

On the Spotify main screen, press **◀/▶** to select **People**, then press **OK** to see a list of the friends you’ve added to your Spotify account. Select a friend then press **OK** to view and play their published playlists.

Inbox

On the Spotify main screen, press **◀/▶** to select **Inbox**, then press **OK** to see a list of songs your friends have sent to your Spotify account. Each friend’s name appears next to the song. If a message icon appears next to a friend’s name, select the song and press **Options**. Press **▲/▼** to select **View Message From Your Friend**, then press **OK**.



What’s New, Top Lists, and Radios

To listen to artist albums and radio stations:

1. On the Spotify main screen, press **◀/▶** to select **What’s New, Top Lists**, or **Radios**, then press **OK**.

2. Press ▲/▼ to select a new or most listened to artist album, or artist radio station.
3. Press ||▶ or **OK** to start listening to the selected album or radio station. In the Radios screen, you can select **Create New Station** to add an artist radio station using the on-screen keyboard.

Delete Spotify Account


To delete a Spotify account:

1. On the Spotify main screen, press ◀/▶ to select **Account**, and press **OK**.
2. Select the Spotify account you wish to delete, then press ▶ to select the **x** and press **OK**.

TuneIn

The world's largest Internet radio guide with access to over 30,000 free radio stations searchable by location, genre, or format.

To access TuneIn:

1. Navigate to the Home | Services menu and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select TuneIn , then press **OK**.

Options include:


- Station
- Search
- Preset
- Sign in
- Exit

Signing in to TuneIn (Optional)


You can start listening to TuneIn stations as an unregistered user, but you need to sign up for a TuneIn account at <http://radiotime.com> to customize your radio experience by adding stations to your presets for faster access.

To sign in to TuneIn:

1. Press ◀/▶ to select **Sign in**, then press **OK**.

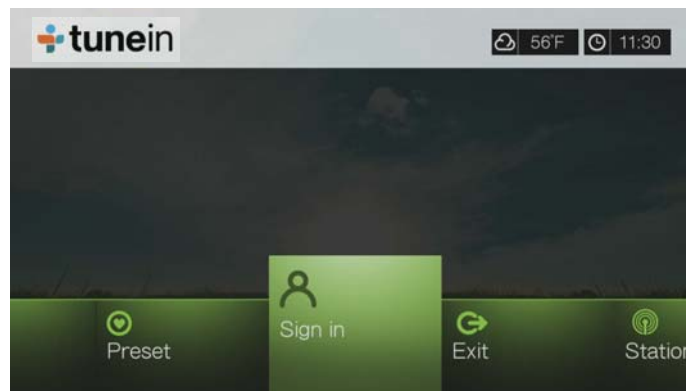

2. Select **Activate Device**, then press **OK**.

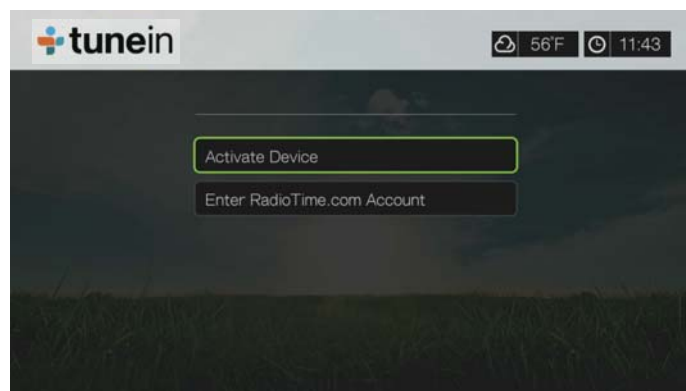

3. Write down the activation code and follow the onscreen instructions (go to <http://radiotime.com/mydevice> to associate the media player with your account). When finished, choose **Continue**, then press **OK**.
4. Select **Enter RadioTime.com account**, then press **OK**.
5. Use the navigation buttons ▲▼◀▶ to type in your TuneIn user name using the on-screen keyboard, then press **OK**.
6. Use the navigation buttons ▲▼◀▶ to type in your TuneIn account password using the on-screen keyboard, then press **OK**.
7. Press **OK** to complete the sign-in process.

Listening to a TuneIn Station, Program, or Podcast

- New TuneIn users can browse for a radio station, program, or podcast.
- Registered TuneIn users can access presets and listen to favorite stations.

To browse for a radio station, program, or podcast:

1. On the TuneIn main screen, press ◀/▶ to select **Station**, then press **OK**.



Options include:

- **Local Radio** – Listen to your local stations which display in numerical order.
 - **Music** – Categorizes your local music radio stations by genre.
 - **Talk** – Categorizes your local talk radio stations by type.
 - **Sports** – Categorizes local and national sports broadcasts and programs by type.
 - **By Location** – Find radio stations throughout the world from the lists of regions and countries.
 - **By Language** – Find radio stations throughout the world from the list of languages.
 - **Podcasts** – Find radio program podcasts categorized by music genre and type.
2. Press ▲/▼ to select the station, program, or podcast you want to listen to.
 3. Press **Options**, then press ▲/▼ to select **Add to Preset** if you want to add the station to Presets (TuneIn account required). Press **OK**.
 4. Press ||▶ or **OK** to start listening to the selected radio station.

Searching for a TuneIn Station


To search for a TuneIn station, program, or podcast:

1. On the TuneIn main screen, press ◀/▶ to select **Search**, then press **OK**.

2. On the on-screen keyboard, use the navigation buttons ▲▼◀▶ to key in a search keyword, then press **OK**.



.....

Note: You can also press  on the remote control to toggle to the results list after entering several characters in the search field.

3. Press ▲/▼ to select a station from the search result.
4. Press **II ▶** or **OK** to start listening to the selected radio station.

Adding a Station to Your Preset List

If you like a particular station, you can add it to your preset list for easier access in the future.

To add to a station, program, or podcast to your presets:

1. Go to the station list showing the station you want to add.
2. Press ▲/▼ to select the station you want to add or begin playing a station.
3. Press **Options**, then press ▲/▼ to select **Add to Preset** if you want to add the station to Preset (TuneIn account required), then press **OK**.



4. Press **OK** again to confirm.

Listening to a Station in Your Preset List

To listen to a preset station, program, or podcast:

1. On the TuneIn main screen, press ◀/▶ to select **Preset**, then press **OK**.
2. Press ▲/▼ to select a station from your preset list.
3. Press **II ▶** or **OK** to start listening to the selected radio station.


Removing a Station from Your Preset List

You can remove stations you no longer want from your preset list.

To remove a station from your preset list:

1. On the TuneIn main screen, press ◀/▶ to select **Preset**, then press **OK**.
2. Press ▲/▼ to select the station you want to remove.

3. Press **Options**, then press **▲/▼** to select **Remove Preset**, then press **OK**.

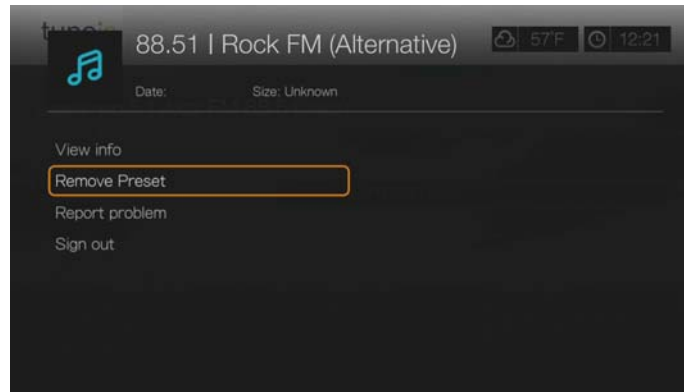

4. A confirmation prompt appears. Select **OK**, then press **OK**.

Getting Station Information

You can view information about the currently playing station and song.

1. While the station is playing or selected, press **Options**, then **▲/▼** to select **View info**. Press **OK**.
2. The information screen appears, displaying info such as genre, language, currently playing song, next song, and time. Press **OK** to return to the previous screen.

Reporting Problems

You can report a problem with the currently playing station or audio or contact the station/show using the reporting problems option.

1. While the station is playing or selected, press **Options**, then **▲/▼** to select **Report problem**. Press **OK**.
2. The reporting problems screen appears, displaying options for reporting problems such as audio, wrong information, errors, etc. After making your selection press **OK** to return to the previous screen.



Signing Out from TuneIn

Sign out of TuneIn after a listening session to ensure that nobody can make changes to your TuneIn settings and stations without your permission.

To sign out from TuneIn:

1. On the TuneIn main screen, press **Options** to show the toolbar, press ▲/▼ to select **Sign out**, then press **OK**.
2. Select **OK** on the confirmation prompt, then press **OK**.


Exit

To simply exit out of TuneIn and stay signed in, press ◀/▶ to select **Exit** in the TuneIn main screen, then press **OK**.

Vimeo®

Take your video experience to the next level with Vimeo. Get a video experience with absolutely no pre-roll ads, unlimited video length, unlimited HD playback and embedding, superior privacy settings and more! Vimeo is the next step in your creative film and video experience.

To access Vimeo:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Vimeo , then press **OK**.
3. The Vimeo Home screen displays the Vimeo menu options. Press ◀/▶ and press **OK**, or press shortcut keys on the remote control (shortcut functions are shown on the bottom of the screen) to choose a menu option.
4. Use the navigation buttons ▲▼◀▶ to select a video within a menu screen. Press **II ▶** or **OK** to begin playing a video.
5. Press the **Back** button to return to the previous screen or to exit Vimeo from the home screen.

Existing Vimeo Users

Follow the on-screen instructions to enter your user name and password using the remote control to log in to your Vimeo account when prompted.

New to Vimeo

Vimeo Plus allows users additional features such additional weekly uploading (up to 5 GB per file), unlimited HD videos, unlimited creation of channels, groups and albums, HD embedding, 2-pass video re-encoding that results in higher quality, priority encoding, no ads, and much more.

Go to <http://vimeo.com/api/connect/wd> to sign up for Vimeo Plus.

Vudu™


VUDU delivers a cinema-like experience at home with the hottest new releases and the largest HD library. There are no subscription fees or late fees, simply pay for what you watch. Choose to rent or own from thousands of titles available in vibrant 1080p with rich Dolby Digital 5.1 Surround Sound. Activate your VUDU account on your media center/player today and receive a free* movie credit.



.....

Note: *New VUDU account required. Terms and conditions apply. For more information visit www.vudu.com. US only.

To Get Started:

1. Go to <https://my.vudu.com>. Sign in or create a free Vudu account. No subscription required!
2. Follow the on-screen instructions to begin activation and receive your PIN code.
3. On the media player, navigate to the Home | Internet media menu bar and press **OK**.
4. The list of Services display in alphabetical order. Press ◀/▶ to select Vudu , then press **OK**.
5. Select **Settings** from the bottom menu within the Vudu service, then press **OK**. Press **OK** again to activate the device and enter the Vudu PIN code.

You now have instant access to new release movies & next day TV!

How Do I Download and Watch a Movie?

Once you rent or purchase a movie, it will appear in your My Videos tab. With progressive download, you can begin watching within minutes by selecting **Play Now** as soon as it becomes available.

Your selection will continue to download while you watch. Track your download progress in the Download Manager on the Home screen. **Watch purchased movies whenever you want, as much as you want. Rentals must be watched within 24 hours once you start playback.**

To learn more:

To learn more about Vudu, go to <http://www.vudu.com>.



 
.....

Note: To deactivate the media player from your Vudu account, log in to your account at <http://www.vudu.com>.

WatchMojo

WatchMojo produces original video programming on the people, places and things that people are passionate about, covering the Automotive, Business, Education, Fashion, Film, Food, Health, Music, Parenting, Politics & Economy, Space, Sports, Science, Technology, Travel and Video Game categories.


To access WatchMojo:

1. Navigate to the Home | Services menu bar and and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select WatchMojo , then press **OK** to display the WatchMojo home screen.
3. Use the navigation buttons ▲▼◀▶ to browse, select, and search for videos and the playback buttons to stop and start videos.

XOS College Sports

XOS College Sports offers college sports fans multi-sport, multi-conference access to full games and historic documentaries including many of the nation's top schools and teams. Free access to a large collection of rare content, championship season highlights and select full games past and present. Additional content can be ordered at www.XOSSports.com.

To access XOS College Sports:

1. Navigate to the Home | Services menu bar and and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select XOS College Sports , then press **OK** to display the XOS College Sports home screen.
3. Use the navigation buttons ▲▼◀▶ to browse, select, and search for videos and the playback buttons to stop and start videos.


Yota Music

Yota Music provides access to more than 800,000 licensed music tracks in its online catalog. With Yota Music, you can listen to and customize personalized channels, save tracks to Favorites, and listen to theme-based collections put together by Yota Music editors. The charts show 100 songs most popular with the Yota Music audience.



Note: The Yota Music service user interface is primarily in the Russian language.


To access Yota Music:

1. Navigate to the Home | Services menu bar and and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Yota Music , then press **OK** to display the Yota Music home screen.
3. Use the navigation buttons ▲▼◀▶ to browse, select, and search for songs and the playback buttons to stop and start songs.

YouTube

YouTube is a video hosting website where you can upload and share videos.

To access YouTube:

1. Navigate to the Home | Services menu bar and and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select YouTube , then press **OK** to display the YouTube home screen.

Options include:


- User
- Search
- Top Favorites
- Featured
- Most Popular
- Most Viewed
- Top Rated
- Preferences

Signing In To Your YouTube Account




.....
Note: If you do not have a YouTube account and want to create one, go to www.youtube.com.

1. Press ◀/▶ to select **User** in the YouTube home screen, then press **OK**.

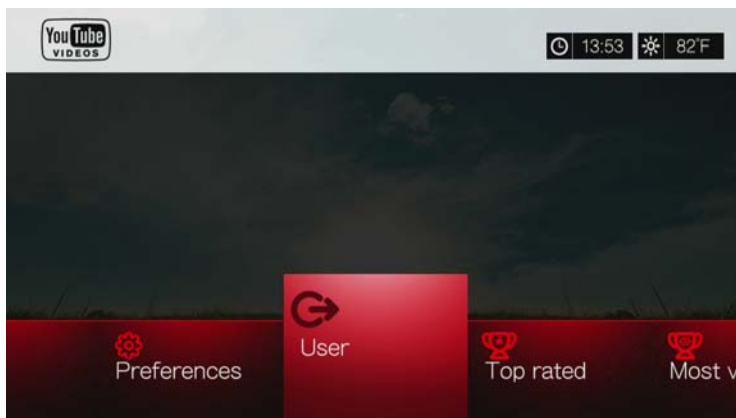


2. Select **Sign in**, then press **OK**.

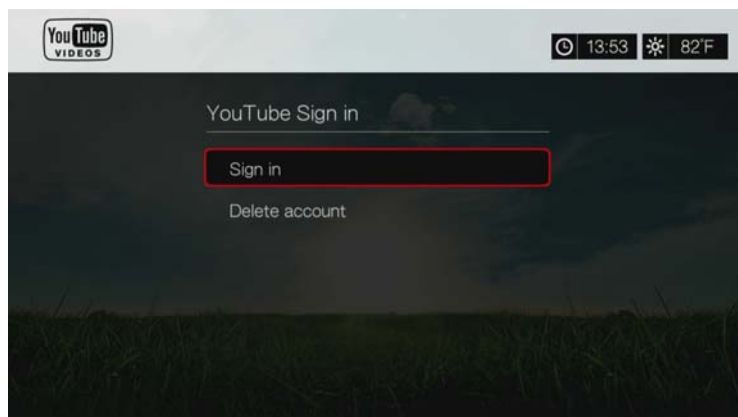


3. Use the navigation buttons ▲▼◀▶ to type your YouTube user name in the on-screen keyboard. Select **Submit**, then press **OK**.
4. Use the navigation buttons ▲▼◀▶ to type your YouTube account password in the on-screen keyboard. Select **Submit**, then press **OK**.
5. Press ▲/▼ to select a save option. Press **OK** when finished.
Options include:
 - **No** – Your account details are not saved. You need to repeat the initial sign-in process every time you access YouTube using the media player.
 - **Save username only** – Your username is saved, but you will be prompted to input your password every time you access YouTube using the media player.
 - **Yes** – Both your user name and password are saved. You can later sign in to your account from the YouTube Login screen.
6. The **My favorites** page appears. Go to the next section for more information on this page.


Account

By default, the **My favorites** page displays first when you sign in to your account. These are the videos you have saved as favorites in YouTube.

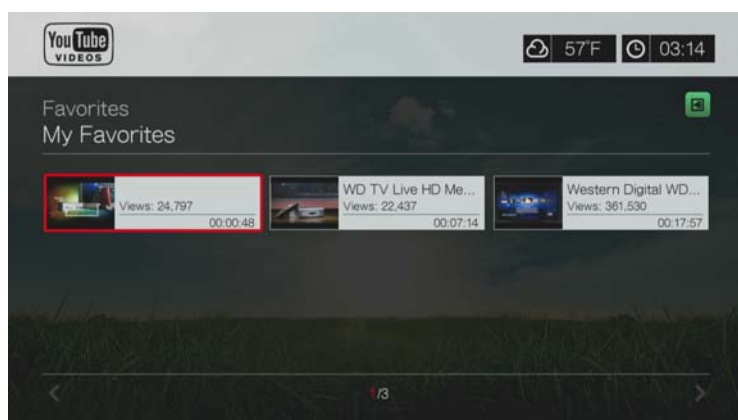

.....
Note: If you have not favorited any videos, the screen displays "no content found."

This page also contains links to your uploaded videos (Videos) and video playlists (Playlists). Press **A** or navigate to , and press **OK**, then press **▲**/**▼** and **OK** twice to switch that selection.

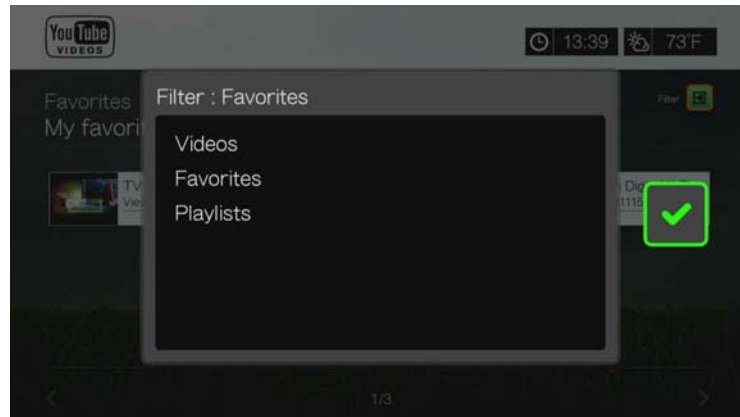

Searching for Videos


You can search YouTube for videos of particular interest to you. The search results are based on the tags associated with uploaded videos. The media player saves your searches so you can quickly recall them.



.....
Note: Videos that are tagged “private” by users do not appear in search results.


To search for videos:

1. Press **◀/▶** to select **Search** in the YouTube home screen, then press **OK**.

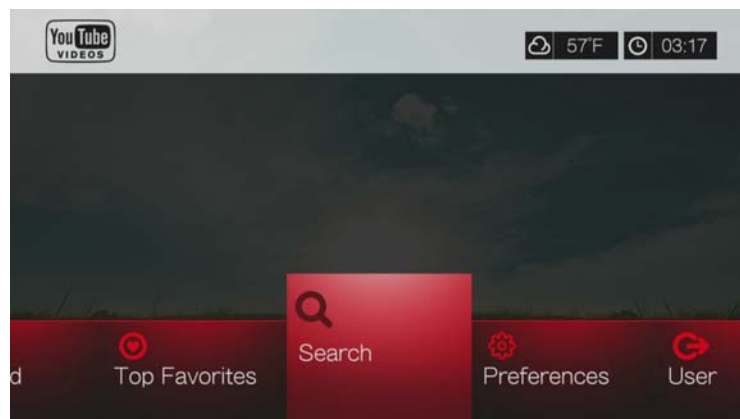


2. Use the navigation buttons **▲▼◀▶** to type a keyword related to the subject matter of the video you're looking for using the on-screen keyboard. Select **Submit**, then press **OK**.


The video search begins (this may take a few seconds). Videos matching your search word appear in a Search result screen.

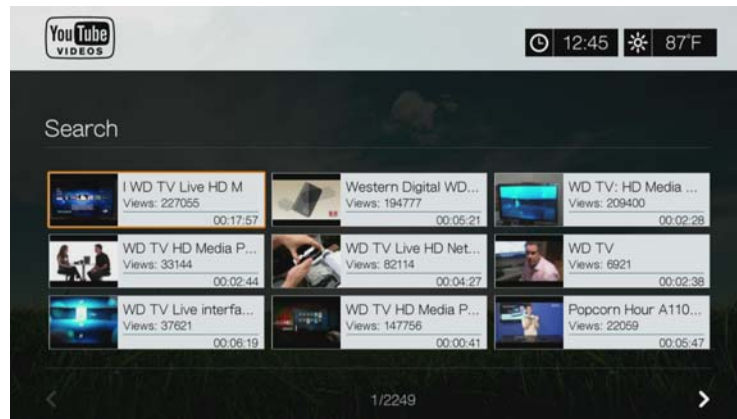

3. Use the navigation buttons to select a video from the display.
 4. Press **II ►** or **OK** to start watching the selected video.
- Go to page 166 for more information on using the YouTube Player.

To use search history:

1. Press the **SEARCH**  button on the remote control. This toggles you to the Search History list.

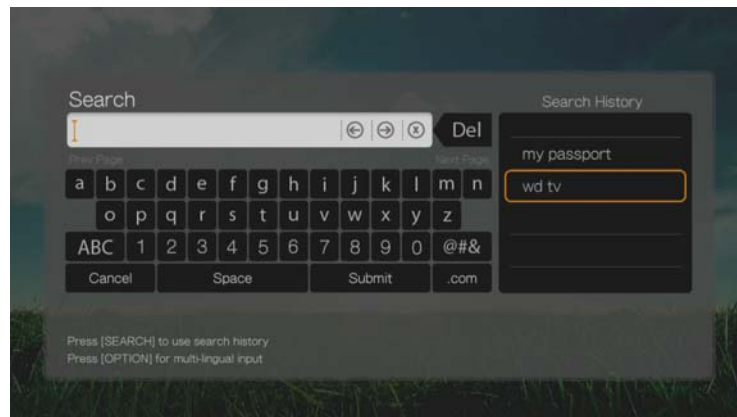


2. Press **▲/▼** to select a search from the display.
3. Press **OK** to perform the saved search.

Top Favorites

These are videos tagged as favorites by the majority of YouTube users.

To access Top Favorites:

1. Press **◀/▶** to select **Top Favorites** in the YouTube home screen, then press **OK**.
2. The list of top favorite videos display. To refine this list, press **▲/▶** to select , and press **OK**.
3. Press **▲/▼** to choose from **Today**, **This week**, or **This month**, then press **OK**.
4. Press the navigation buttons to select a video from the display, then press **II ►** or **OK** to start watching the selected video.

Go to page 166 for more information on using the YouTube Player.

Featured Videos

This video category is primarily populated with videos from YouTube's commercial partners, but might also include select user videos that are currently popular or have been previously showcased in YouTube's Spotlight Videos section.

To access Featured Videos:


1. Press ◀/▶ to select **Featured** in the YouTube home screen, then press **OK**.
2. Press the navigation buttons to select a video from the displayed selection.
3. Press **||▶** or **OK** to start watching the selected video.

Go to page 166 for more information on using the YouTube Player.

Most Popular

These are videos deemed most popular by YouTube users.

To access Most Popular:


1. Press ◀/▶ to select **Most Popular** in the YouTube home screen, then press **OK**.
2. The list of most popular videos display. To refine this list, press ▲/▶ to select , and press **OK**.
3. Press ▲/▼ to choose from **Today**, **This week**, or **This month**, then press **OK**.
4. Press the navigation buttons to select a video from the display, then press **II ▶** or **OK** to start watching the selected video.

Go to page 166 for more information on using the YouTube Player.

Most Viewed

These are videos most viewed by YouTube users.

To access Most Viewed:


1. Press ◀/▶ to select **Most Viewed** in the YouTube home screen, then press **OK**.
2. The list of most viewed videos display. To refine this list, press ▲/▶ to select , and press **OK**.
3. Press ▲/▼ to choose from **Today**, **This week**, or **This month**, then press **OK**.
4. Press the navigation buttons to select a video from the display, then press **II ▶** or **OK** to start watching the selected video.

Go to page 166 for more information on using the YouTube Player.

Top Rated

These are videos with the highest ratings from YouTube users.


To access Top Rated:

1. Press ◀/▶ to select **Top Rated** in the YouTube home screen, then press **OK**.
2. The list of most viewed videos display. To refine this list, press ▲/▶ to select , and press **OK**.
3. Press ▲/▼ to choose from **Today**, **This week**, or **This month**, then press **OK**.
4. Press the navigation buttons to select a video from the display, then press **II ▶** or **OK** to start watching the selected video.

Go to page 166 for more information on using the YouTube Player.

YouTube Options

When you select a video in any of the YouTube submenu screens described above (i.e., User > My Favorites, Search, Top Favorites, Featured Videos, Most Popular, Most Viewed, and Top Rated), pressing **Options** brings up the following screen:

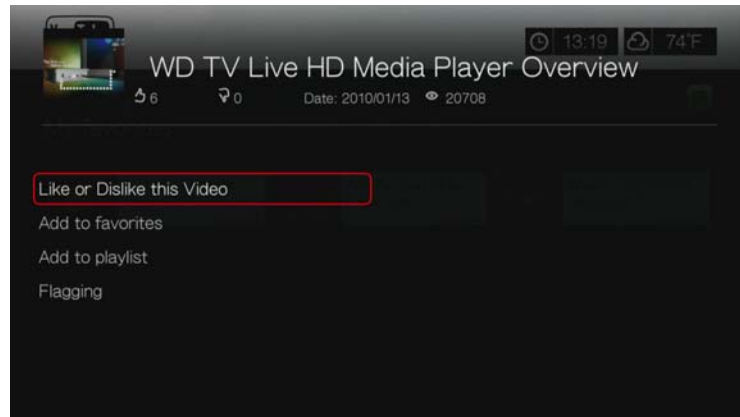


- **Like or Dislike this Video** - see “Like or Dislike Videos” on page 168.
- **Add to favorites** - see “Adding Videos to Favorites” on page 168.
- **Add to playlist** - see “Adding Videos to a Playlist” on page 169.
- **Flagging** - use this option to flag a video for inappropriate content.

Preferences

Preferences allows you to choose which country's content (videos and channels) you would like to view without changing the language of the site.

To access Preferences:

1. Press ◀/▶ to select **Preferences** in the YouTube home screen, then press **OK**.
2. **Current location** is highlighted. Press **OK**.
3. Press ▲/▼ to select a country from the list, then press **OK**.

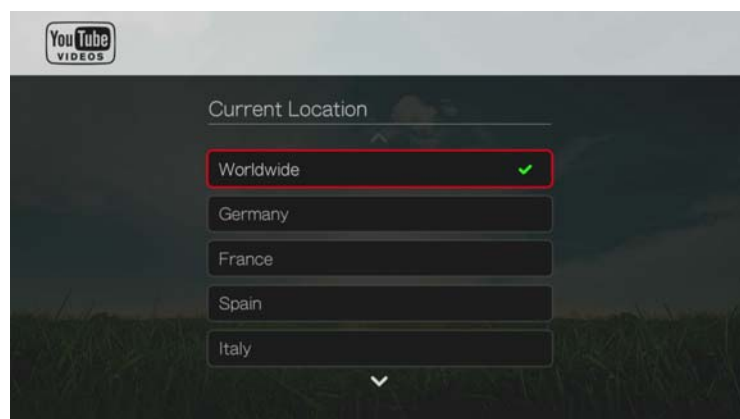

YouTube Player

The YouTube Player layout is similar to the regular video playback screen. It displays the playback status bar and the elapsed and total playback times. Press ||▶ to pause and resume playback. Press ▶▶ or ◀◀ to fast forward or reverse in 10 second increments.

YouTube Player Options

As with a regular video playback screen, you can the customize the way content displays in the YouTube Player. To do this, press **Options**.



- **Like or Dislike this Video** - see “Like or Dislike Videos” on page 168.
- **Add to favorites** - see “Adding Videos to Favorites” on page 168.
- **Add to playlist** - see “Adding Videos to a Playlist” on page 169.
- **Flagging** - use this option to flag a video for inappropriate content.
- **Zoom** - To change the display’s viewing scale, press ▲/▼ and select **Zoom & Pan**, then press **OK**. Press **OK** repeatedly until the preferred viewing scale is achieved. Press **Options** or **Back** to revert to the default viewing scale.
- **Pan** - To pan the display, press ▲/▼ and select **Zoom & Pan**, then press **OK**. Press the navigation buttons ▲▼◀▶ repeatedly until the preferred panned view displays. Press **Options** or **Back** to revert to the default viewing scale.
- **Show info** - use this option to view detailed information about the video if present.

Related Videos

After video playback, the Related Videos screen appears. At the top of the screen, the video rating (number of highlighted “stars”), upload date, and the number of times it has been viewed display.



This screen lists videos which might be related to recently played video by subject matter, making it easier to search for videos based on the same or similar subject.

Press the navigation buttons to select a video from the list, then press **II ►** or **OK** to start watching the selected video.

The other options on this screen allow you to:

- Replay the recently played video – Play Again
- Add the video to your My Favorites list – Add to Favorites
- Flag the video as having inappropriate content - Flagging
- Provide video feedback – Like or Dislike this Video
- Add the video to your My Playlists list – Add to Playlist
- Return to the last video selection page – Back to Videos

Press the navigation buttons to select an option, then press **OK**.


Like or Dislike Videos

You can rate videos on a basis of “Like” or “Dislike” during or after video playback.



.....
Note: You must signed in to your YouTube account to like or dislike videos. See “Signing In To Your YouTube Account” on page 160 for sign-in instructions.

1. During playback, press **Options**, select **Like or Dislike this Video**, then press **OK**, or select **Like or Dislike this Video** in the Related Videos screen.
2. Press **◀/▶** to select **Like** or **Dislike**, then press **OK**.

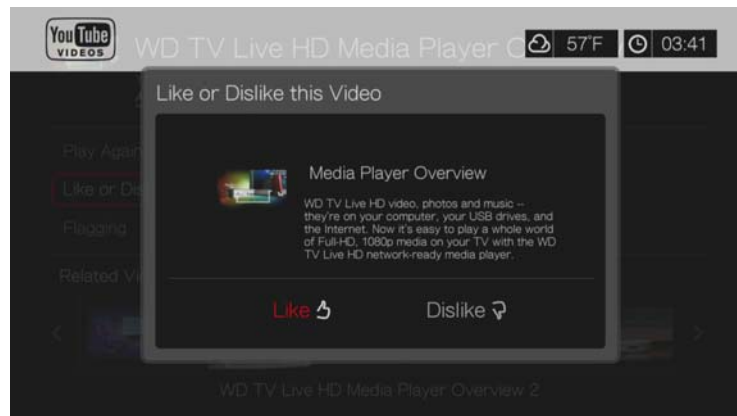

3. Your video rating is confirmed. Press **OK** to go back to the Player screen.

Adding Videos to Favorites

If you enjoyed a particular video or simply want to refer to it later, you can tag it as a “favorite” to add it to your My Favorites list. Once added, you can keep track of this video.

To add a video to My Favorites from the Related Videos screen:

1. On the Related Videos screen of the video you want to add as a favorite, press **▲/▼** to select **Add to Playlist**, then press **OK**.
2. Press **OK** at the confirmation prompt.




.....
Note: You can also press **Options** when playing a video and select **Add to favorites**.

Adding Videos to a Playlist

Use this option if you enjoyed a particular video and want to add it to one of your playlists.

To add a video to My Favorites from the Related Videos screen:

1. On the Related Videos screen of the video you want to add as a favorite, press **▲/▼** to select **Add to Favorites**, then press **OK**.
2. Press **▲/▼** to select **Create your playlist** (to create a new playlist) or **Choose your current playlist**.

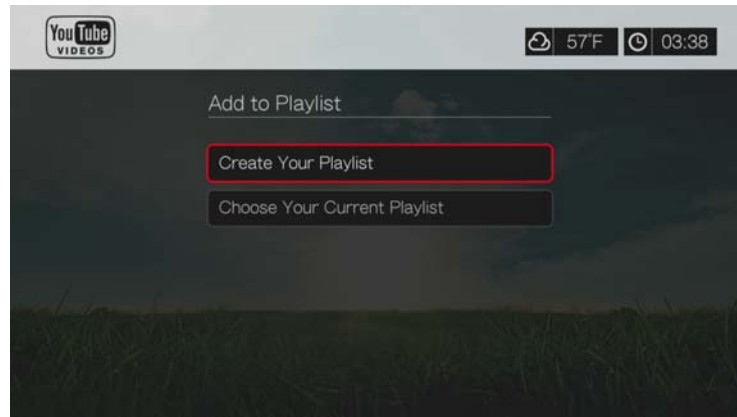

3. If you choose **Create your playlist**, enter the name of your new playlist using the on-screen keyboard. Select **Submit**, then press **OK**. If you choose **Choose your current playlist**, press **OK**.



.....
Note: You can also press **Options** when playing a video and select **Add video to favorites**.

Deleting a YouTube Account

To delete a YouTube account from the media center:

1. Press **◀/▶** to select **Users** in the YouTube home screen, then press **OK**.
2. Press **▲/▼** to select **Delete account**, then press **OK**.
3. Press **▲/▼** to select the account you want to delete, then press **OK**.
4. Press **◀/▶** to select **OK** on the confirmation prompt, then press **OK**.

Restricted Video Content


Some videos on YouTube are restricted by the content owner from playback via TV-connected devices. If you attempt to play one of these videos, press **OK** to return to the previous screen.

Encoding Support for YouTube Worldwide

Many YouTube videos are encoded in a language other than the one you set as your media player's system language. In some cases, this results in garbled characters in the video ID or even playback failure. If this is the case, you need to enable the encoding support for the language that is causing the error.

To set the media player's additional encoding setting:

1. Navigate to Home | Setup menu bar.
2. Press ▲/▼ to select **System**, then press **OK**.
3. Press ▲/▼ to select **Additional Encoding Support**, then press **OK**.
4. Press ▲/▼ to select the encoding support you require, then press **OK**.

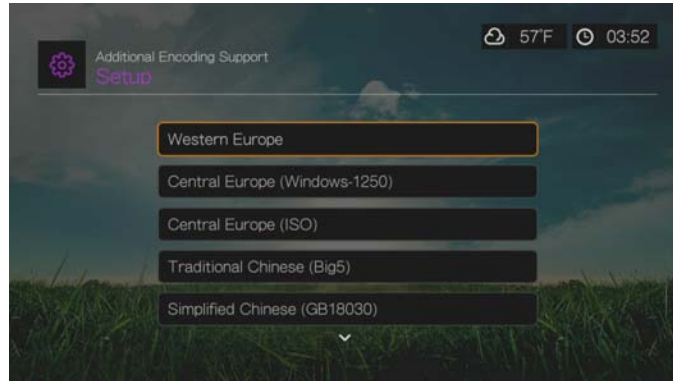

YouTube Leanback

YouTube is a video hosting website where you can upload and share videos. Access YouTube Leanback online at www.youtube.com/leanback.

To access YouTube:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select YouTube **You Tube**, then press **OK** to display the YouTube home screen.
3. A default video plays. Use the navigation buttons to search (using an on-screen keyboard) or browse for videos. Use the **PAUSE/PLAY**, **REW**, **FF**, **NEXT**, and **PREV** buttons for video playback.


13

Games


You can access games and use the remote control to play them using the Games menu.

Games Display

1. Navigate to the Home | Games menu, then press **OK**.

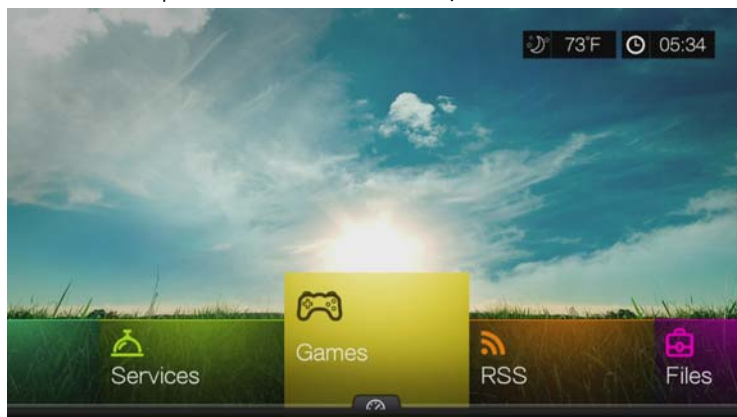

2. The screen displays all available game services. The display is in grid view.

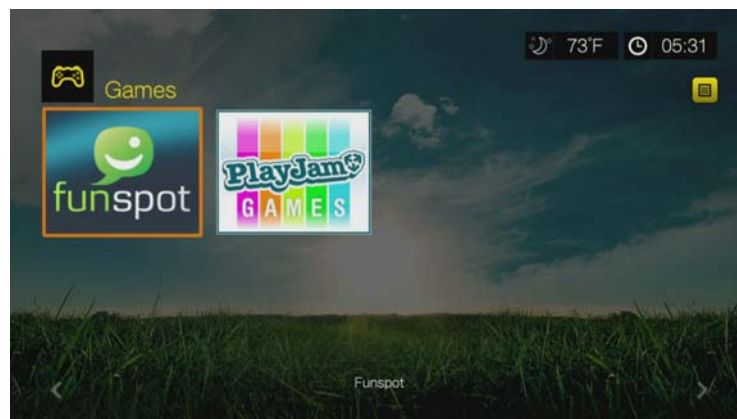

- **Funspot**—Swap gems with Rockswap, try your luck with Texas Hold’Em, or test your math skills with Sudoku – Check out Funspot on for your favorite games.
 - **PlayJam**—PlayJam is your first choice for the best games on TV. From action and adventure to puzzle and word games, PlayJam has something for everyone. Play to win prizes, play against a friend or just play to climb the leaderboard - PlayJam has a global community of players already...join them!
3. Use the navigation buttons to select a game service, then press **OK**. Select **Rules** or **Help**, then press **OK** for further information, or select **New Game** or **Start** to begin.
 4. Use the navigation buttons on the remote the play the game. Select **Exit** when finished.


14

RSS


RSS (Really Simple Syndication) provides you with a list of current news items in a brief format so you can scan headlines and choose the items that interest you most without visiting websites.

Reading RSS Feeds

1. Navigate to the Home | RSS menu, then press **OK**.

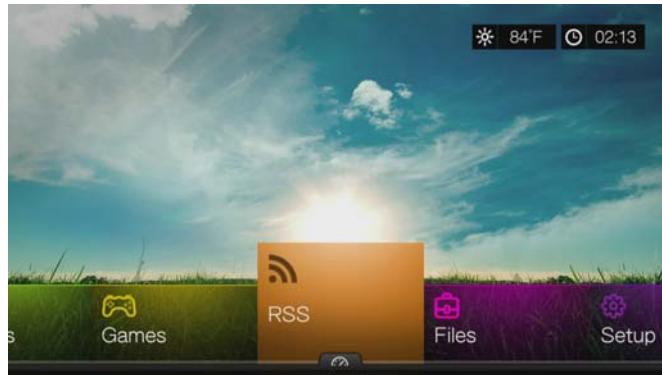

2. The screen displays all available RSS feeds. The display is in grid view. Use the navigation buttons to select a headline of a RSS feed that you want to read, then press **OK**.

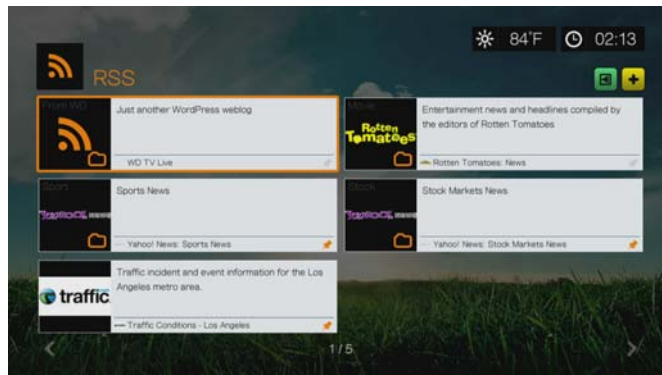

Note: You can display your RSS feeds in a streaming ticker display on the home page. See “RSS Ticker” on page 182.

Adding RSS Feeds

To add an RSS feed to the media player:

1. In the RSS main screen, navigate to the **+** button then press **OK**.
2. Enter the URL of the RSS feed using the on-screen keyboard (see the website of the RSS feed provider for details), select Submit, then press **OK**.
3. Press **OK** again to add the RSS feed.



Note: You can also add RSS feeds using the Web UI. See “RSS” on page 90.


15

Setup and Advanced Features

The Setup menu lets you customize the way you use the media center and set preferences for media playback.

To select a Setup category:

1. Press **Setup**, or navigate to the Home | Setup menu and press **OK**.

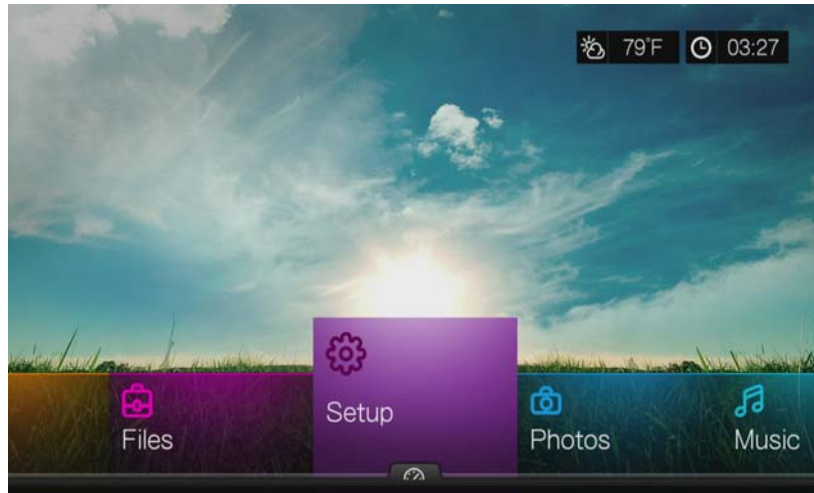

2. Use the ▲▼ Up/Down arrows to select a Setup category, then press **OK**.



There are 10 Setup categories, including:

- Audio/Video Output
- Appearance
- Video settings
- Music Settings
- Photo settings
- Network settings
- Operation
- System
- Mobile Access
- About


Setup Navigation Buttons

Use these buttons on the remote control to navigate within and between the Settings screens.

Button	Function
▲▼ Up/Down arrows	<ul style="list-style-type: none"> Select a menu Select a menu setting in an option screen
OK	Displays the option screen for the selected menu
<ol style="list-style-type: none"> Press OK. A confirmation prompt appears. Select OK, then press OK. If you fail to select OK within 15 seconds, the new setting will not be applied. If your entertainment unit cannot support the selected setting, no change is made and the original setting is retained. 	Applies the selected menu setting
Back	Displays the previous menu screen

Audio/Video Output

Use the menus in this category to configure playback for audio and video files.

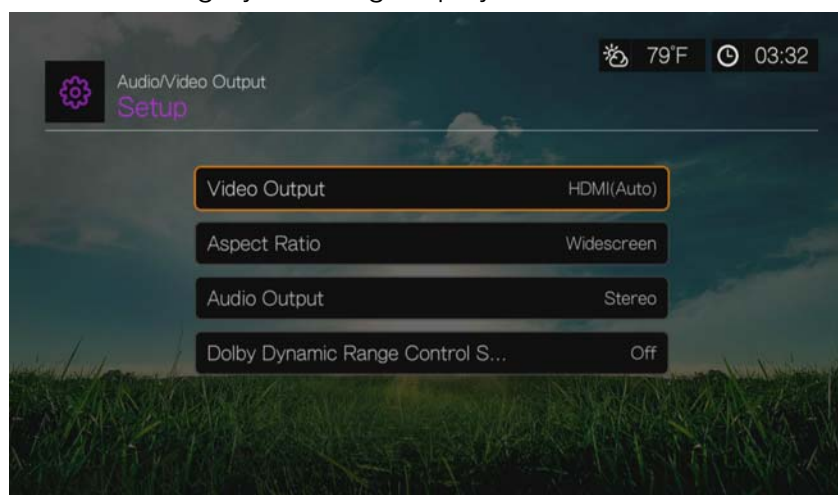

Video Output

Use this menu to select a video signal. After you finish making your selections, select **OK** at the “Are you sure you want to change the video resolution?” prompt, then press **OK**.

Composite

When using the standard RCA A/V cable (yellow, red, and white connectors) to connect the media center, select **Composite** in the Video output screen.

You will be prompted to select the TV standard applicable to your device. This setting depends on your regional location.

Options include:

- **NTSC** – United States, Canada, Japan, Mexico, the Philippines, South Korea, and Taiwan.
- **PAL** – Europe, Greenland, parts of Africa and South America, the Mideast, China, India, Australia, and Indonesia

Select a regional TV standard then press **OK**.

Component

When using the YPbPr cable (green, blue, and yellow connectors) to connect the media center, select **Component** in the Video output screen.

You will be prompted to select the video display resolution (from 480p to 1080i). Select display resolution then press **OK**.

Note: The further down the list the setting, the higher the resolution and clearer the picture.

HDMI

When using an HDMI cable (if your TV supports HDMI resolution), select **HDMI** in the Video output screen.

You will be prompted to select the applicable HDMI video resolution (set to Auto, or from 480p to 1080p). Select display resolution then press **OK**.



.....
Note: The further down the list the setting, the higher the resolution and clearer the picture.

After setting resolution, you are prompted to select color space (set to Auto, or RGB High, RGB Low, or YCbCr). Select color space then press **OK**.

Aspect Ratio

Use this menu to select the way videos are displayed. Options include:

- **Normal** (4:3)
- **Widescreen** (16:9)

The media center's default setting is **Widescreen**. Make sure your TV can support widescreen resolution, or this default setting can result in a distorted video display.

Audio Output

Use this menu to select the audio output mode.



Options include:

Stereo (Analog, S/PDIF, HDMI)

This is the default setting that decodes all audio streams into 2-channel output via analog (RCA connectors), S/PDIF (optical connector), or HDMI. Recommended if you are using a 2- or 4-speaker entertainment unit.

Digital Pass Through via Optical Only (S/PDIF)

Select this option if you are using HDMI for video and a S/PDIF (optical) connection to output multichannel surround sound to a receiver and do not want audio output from HDMI. After selecting **Digital Pass Through via Optical Only**, select one or more of the following options that describe your receiver, then press **OK** after each selection. Press **►** then, with the ☒ selected, press **OK** again.


- AAC capable receiver
- Dolby Digital capable receiver
- DTS capable receiver
- WMA Pro capable receiver



Digital Pass Through via HDMI Only (HDMI)


Select this option if you are only using an HDMI connection to output multichannel surround sound to a receiver. After selecting **Digital Pass Through via HDMI Only**,

select **Auto Detect** to have the media player detect receiver settings automatically. Or, select **Manual Setup**.

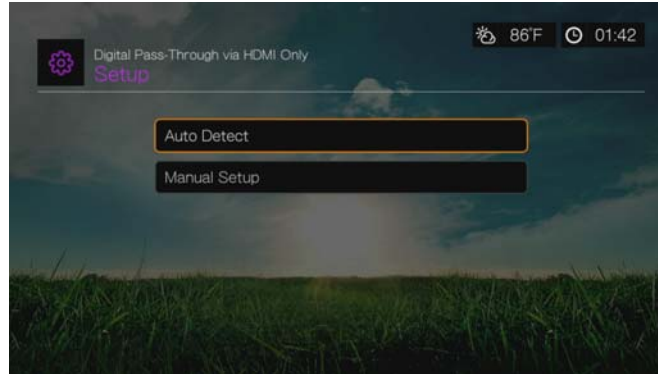


Auto Detect

If you select Auto Detect a summary of your auto detect settings display.

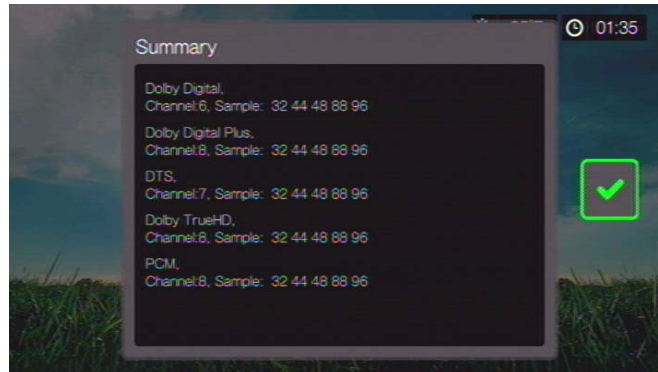


Press ► then, with the  selected, press **OK** again.

Manual Setup

If you select **Manual Setup**, select one or more of the following options that describe your receiver, then press **OK** after each selection. Press ► then, with the  selected, press **OK** again.

- AAC capable receiver
- Dolby Digital capable receiver
- Dolby Digital Plus capable receiver
- DTS capable receiver
- Dolby TrueHD capable receiver


- WMA Pro capable receiver

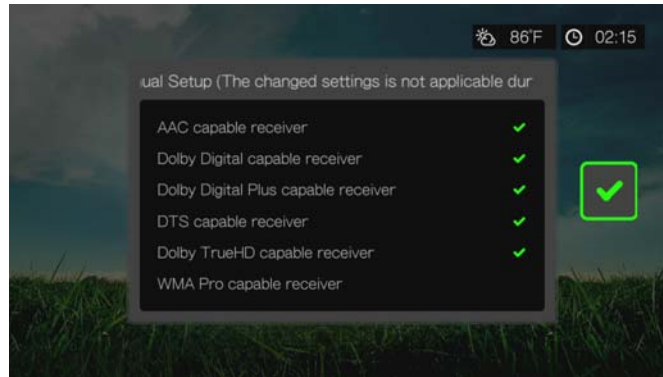

.....
Note: Changed settings are not applicable during DVD video playback.


Dolby Dynamic Range Control (DRC) Setting

Use this menu to set the dynamic range control, which reduces or increases sound levels. This setting can be useful when, for example, you want to watch a movie without hearing wide volume swings between loud and quiet sounds. DRC thus enables reduced peak volume levels without loss of overall sound quality. Default setting is **On**. Options are **Off**, **Auto**, and **Max**.

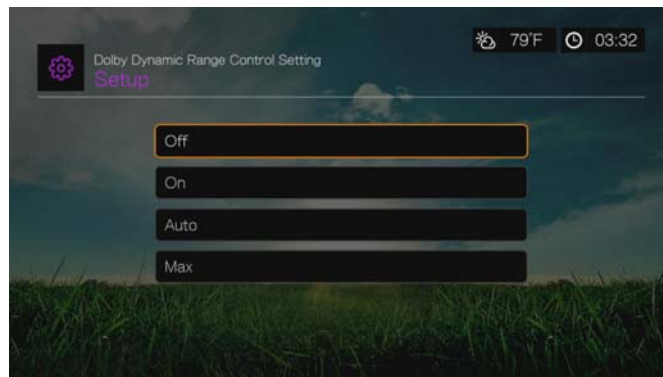

Appearance

Use the menus in the Appearance screen to set user interface display options for the media center.

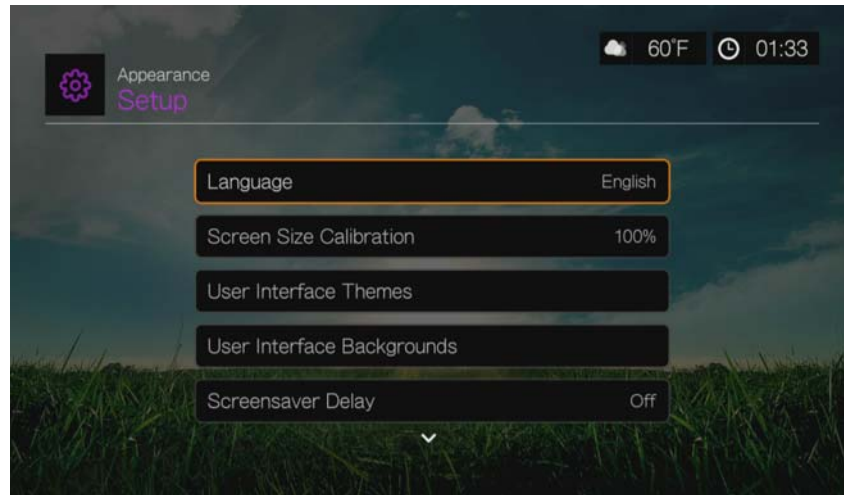

Language

Press ▲/▼ to select the display language, then press **OK**.

Video Calibration


Use this menu to correct any issues with overscan (the display is cropped in the TV screen). To correct any overscan problems, calibrate the display by reducing the display size by up to 30%. The calibration settings are in 5% increments.

User Interface Themes

The media center supports interchangeable user interfaces called themes. Themes alter the player's visual appearance, but not its functionality. There are several themes available in the User Interface Themes page and available for download at <http://www.wdtvlive.com/theme>.

User Interface Backgrounds

You can use this menu to set a different photo as the system background to replace the default grass field and sunny sky photo. You can choose from the WD Creative Masters backgrounds or your own backgrounds.

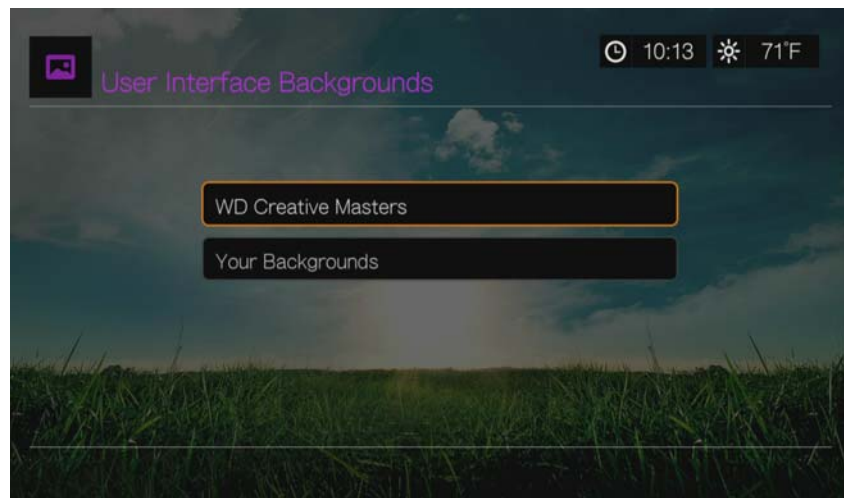

WD Creative Masters


WD Creative Masters includes themed albums of photos from leading photographers that you can use for your media center user interface background.

Select a WD Creative Masters album, then navigate to a photo and press **OK**. Press **OK** again to preview the background. You can choose to **Set as Background** or **View Bio** of the photographer, then press **OK**.



Your Backgrounds

Your Backgrounds shows the default background as well as other photos you have set as the background (see “Set as Background” on page 61). Navigate to a background photo and press **OK**, then press **OK** again to **Set as Background**.

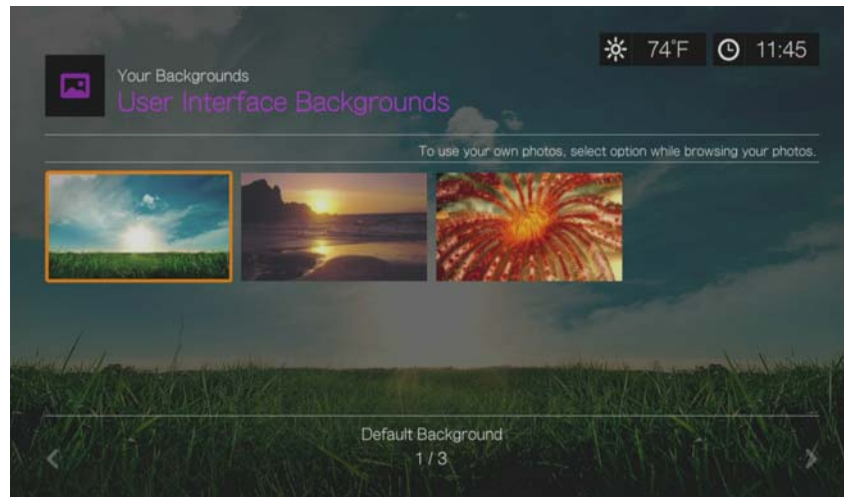

Screensaver Delay


Use this menu to set the time of system inactivity before the screensaver display is enabled. The default setting is **5 minutes**.

Screensaver Style

Use this menu to choose your screensaver display style. The **WD Logo** screensaver is the default style, but you can also choose a **Random Photo Slideshow** of photos stored in the media center’s internal drive or a **Folder Photo Slideshow** of photos from a single folder as your screensaver.

Show New Items

Use this menu to select a date range for the media files added to your content source(s) to be marked as “new.” The number of new items displays when you select **Video**, **Music**, **Photo**, or **Files** on the home screen, or **New Items** in the dashboard.

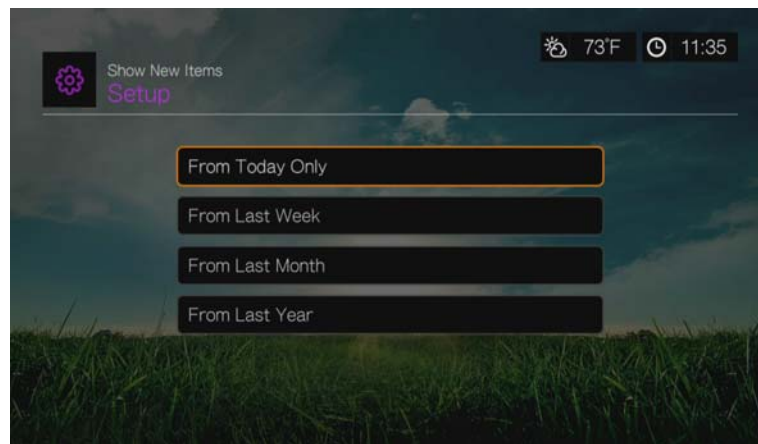


RSS Ticker

Set RSS Ticker to **Show** to stream your RSS feeds on the home page. Default setting is **Hide**.



Video Settings

Use the menus in the Video Settings screen to configure the display and sequence option for video files.

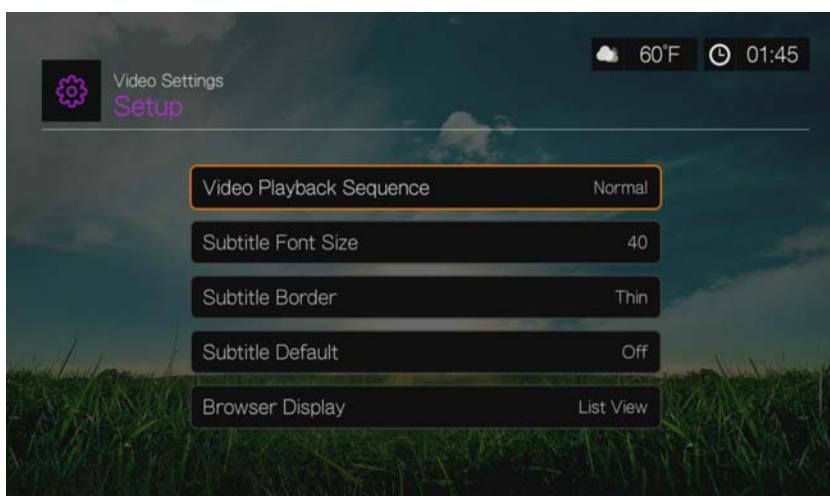

Video Playback Sequence

Use this menu to select the video playback mode. The default setting is **Normal**. Go to “Play Mode” on page 44 for a description of these video playback modes.

Subtitle Font Size

Use this menu to set the default font size (24 to 68 points, 40 points is default) for displaying video subtitles. Use the ▲▼ buttons to select a font size. “Subtitle font size” at the bottom of the screen reflects the font size option currently selected. Press **OK** to select a subtitle font size.

Subtitle Border


Use this menu to set the default appearance of the subtitle frame (**Thin** or **Thick**).

Subtitle Default


Use this menu to set the default appearance of the subtitles (**On** or **Off**).

Browser Display


Use this menu to select the default display mode for the video browser screen. The default setting is **Preview View**. Examples of grid, list, and preview views are shown below.

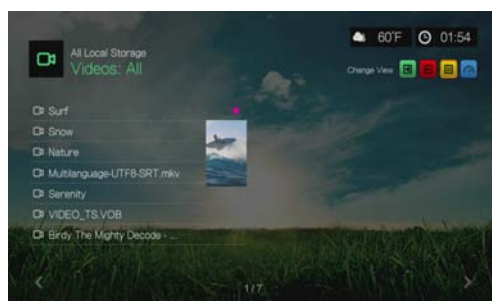


List View

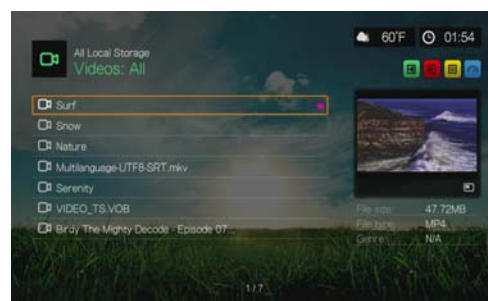


Preview View

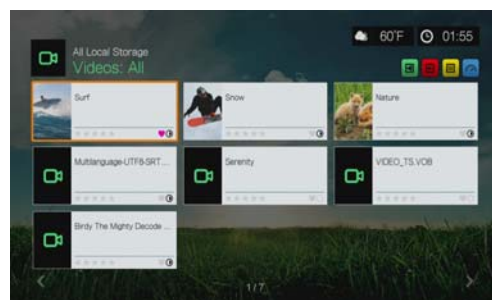

Large Grid View

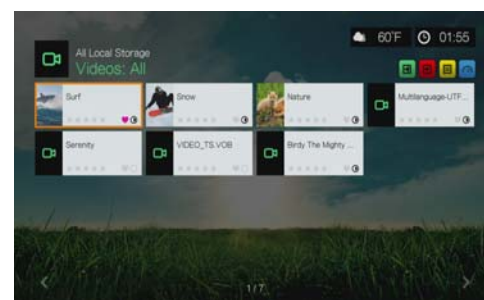


Small Grid View

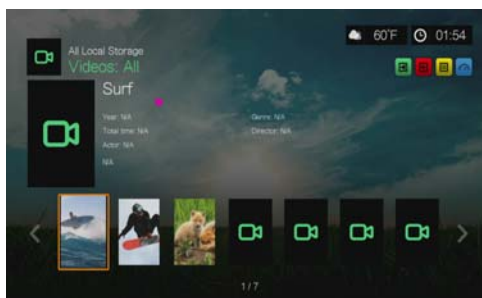

Gallery View

Music Settings

Use the menus in the Music settings screen to configure the display and sequence option for audio files.

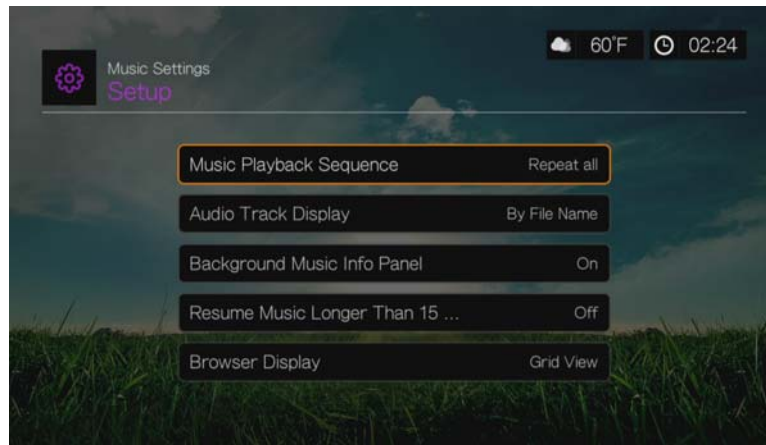

Music Playback Sequence

Use this menu to select the audio playback mode. The default setting is **Normal**. Go to “To set the music repeat mode:” on page 55 for a description of the audio playback modes.

Audio Track Display

Use this menu to select which file information to display in the audio browser screen. The default setting is **File name**.

Background Music Info Panel

When turned **On**, a music info menu bar appears at the top of the screen when music is playing in the background.




Resume Music Longer Than 15 Min

When turned **On**, will prompt you to resume or restart a music file that is 15 minutes or longer.

Browser Display

Use this menu to select the default display mode for the audio browser screen. The default setting is **Grid View**. Examples of both grid and list views are shown below.

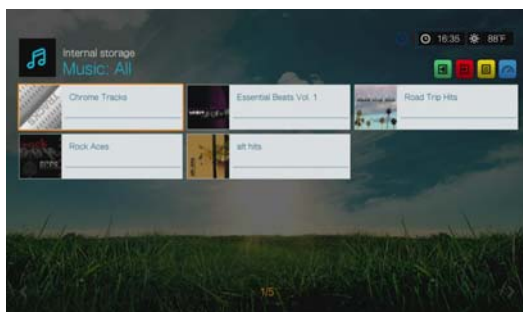


Grid View



List View

Photo Settings

Use the menus on this category to configure the display size and slideshow settings when viewing your image files.

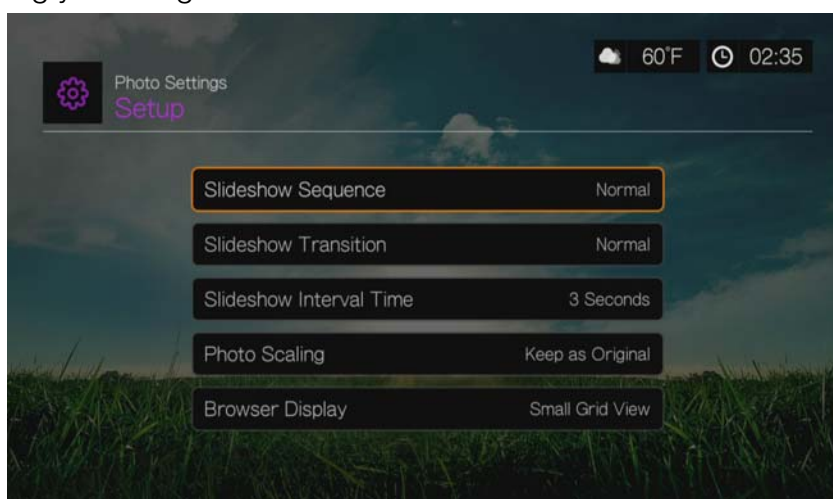

Slideshow Sequence

Use this menu to set the slideshow sequence mode. The default setting is **Normal**.

- **Normal** – The slideshow is played once. When the last image is displayed, the previous browser screen is displayed.
- **Shuffle** – The slideshow is played in random order until you press **Stop**.
- **Repeat All** – The slideshow is played repeatedly until you press **Stop** or **Back**.
- **Repeat All and Shuffle** – The slideshow is played continuously in random order.

Slideshow Transition

Use this menu to select the method used to display the next slide in a slideshow. The default setting is **Normal**.

Slideshow Interval Time

Use this menu to set the time interval between pictures in the slideshow. You can select from 3 seconds (default) to 5 minutes.


Photo Scaling

Use this menu to define how pictures are scaled when you view them. This also applies when pictures are viewed in a slideshow. Options include:


- **Keep as original** – Maintains the original resolution of the image (default).
- **Fit to screen** – Fills as much of the display area as possible while maintaining correct image proportions.
- **Display in full screen**– Fills the display area with the image (this can lead to image distortion).

Browser Display

Use this menu to select how media files are displayed in their respective folders. The default setting is **Small Grid View**. Examples of both grid and list views are shown below.

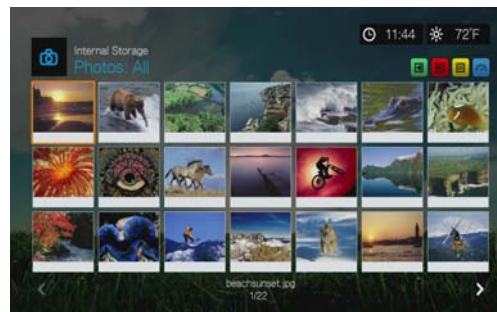

Small Grid View

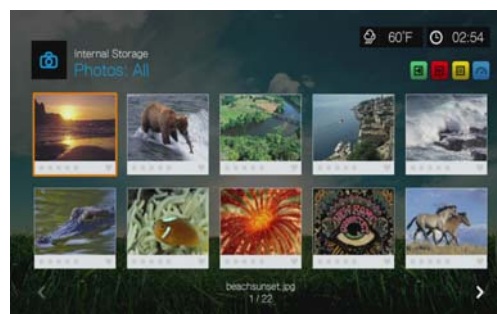

Large Grid View



List View

Network

Use the menus in this category to configure and view the media center's network settings. Press ▲/▼ to make a selection from the list of options, then press **OK**.



Network Setup

See “Network Setup” on page 68 for information and instructions.

Previously Connected Wireless Network

This menu displays a record of your wireless network settings. After performing a wireless network setup, the media player keeps a record of the LAN access point. Use this menu to reconnect to the local network without having to rekey the password.

Check Connection

See “Checking the Network Connection” on page 72 for information and instructions.

Device Name

The name shown in the device name field helps you identify the media center on the network. Use this menu option to change the device name using the onscreen keyboard.

DLNA Media Server

This option is **On** by default so that other DLNA media devices on the network can see the media center. If set to **Off**, other DLNA media devices on the same network will not be able to see the media center on the network.

See specific DLNA media device user manuals for instructions on connecting a DLNA device to your local area network. Go to <http://www.dlna.org> for a list of DLNA-certified devices and for further information.

iTunes Server

The iTunes server is set to **Off** by default. Turning it **On** allows you share audio files to iTunes on the same network.

Network Share Server

Must be set to **On** to use network services. See “Network Services” on page 74 for information and instructions.

Workgroup

Allows you to join a specific workgroup on your network. Windows-based computers and devices in the same workgroup may allow each other access to their files, printers, or Internet connection. Members of different workgroups on the same local area network and TCP/IP network can only access resources in workgroups to which they are joined.

To create a new workgroup, select the existing Workgroup Name then press **OK**. Enter a new workgroup name.

Proxy

Proxy is used by corporations to view and filter online transactions. All requests in the corporate environment go through a proxy server to perform such actions as recording the IP address of a web site, checking the IP address that is being opened to make sure it's not on a blocked list, and checking outgoing attachments for spam or viruses.


If you plan to use the media server in a corporate environment, select **On**, then enter the Proxy address and port using the on-screen keyboard to access online services.

Clear Login Info for Network Share

Use this menu to clear login information (preset password) for the network share.


Operation

Use the menus in the Operation screen to set preferences for the media center.

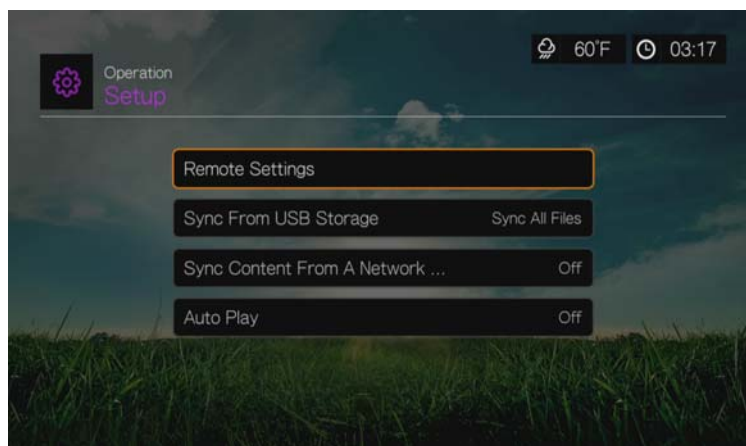


Remote Settings

Select a function for the **A**, **B**, **C**, and **D** function buttons on the remote controller. The remote settings menu displays the functions currently assigned to each button.

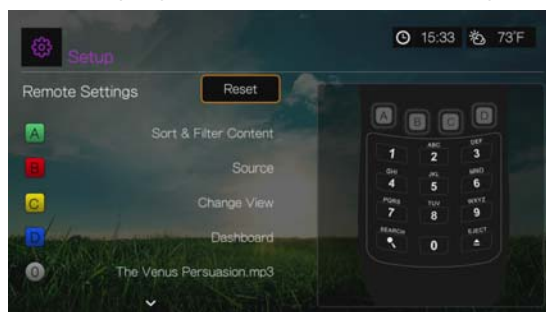


To change functions, press **▲/▼** to select a function button, then press **OK**. Press **▲/▼** to select functions such as display mode, filter menu, Music, Video, Services, Setup, Capture Snapshot (saves screen snapshots to internal storage), etc., then press **OK**.

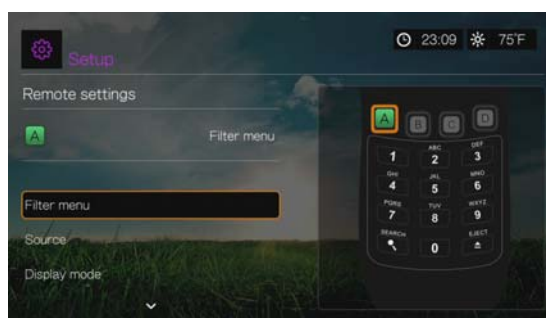

To reset the function buttons to default settings, select **Reset**, then press **OK**.

Delete Music Preset (Buttons 0-9)

To clear a music file or playlist preset from one of the **0-9** buttons, press **▲/▼** to select a numbered button. Press **►** to select the **✖**, then press **OK**.

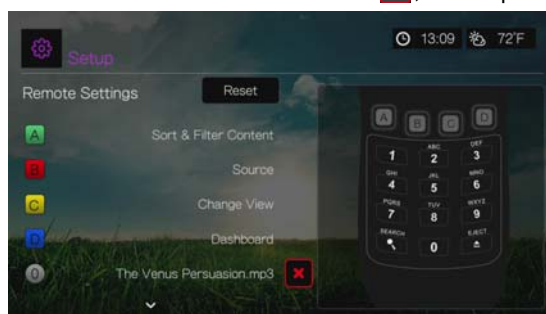

Sync From USB Storage

This option allows you to turn the USB sync feature **Off**, **Sync All Files**, or **Sync Supported Media Files Only**. See “Step 5 - Connecting a USB Device (Optional)” on page 21.

Sync Content From A Network Shared Folder

Allows you to setup a sync process to a shared folder on your network. Any new content added to the new folder automatically syncs to the media center's internal drive.

Auto Play


Select the type of media (music or video) that plays automatically when a USB device is connected to USB port 1 on the front of the media center. The media files must be located in the USB device's root directory for Auto Play to function.



.....
Note: The auto play function will only work if the USB device is plugged into USB port 1 on the front of the media center.

System

Use the menus in this category to configure the media center's general functions. Press ▲/▼ to make a selection from the list of options, then press **OK**.

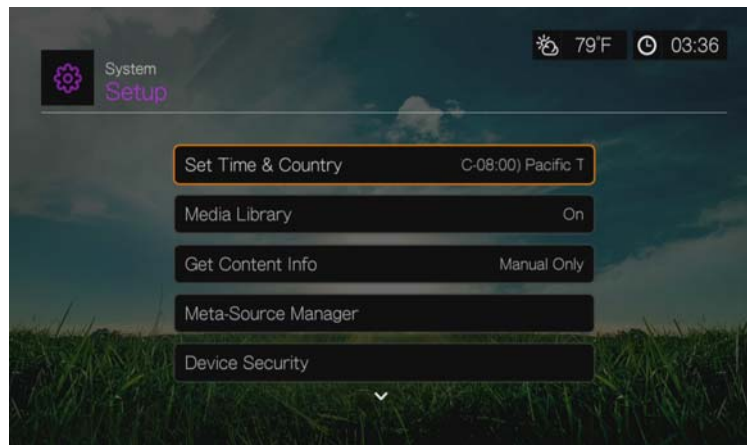


Set Time & Country

Use this menu to select your local time zone and turn Daylight Savings Time **Off** or **On** so that the media center displays the current time.

Media Library


Use this menu to enable, disable, or clear the media library (turn **Off**, **On**, or **Clear Media Library**). The media library consolidates the media contents of an internal hard drive, USB drive, or network drives into one database so you can locate media

files based on metadata information. See “Media Library” on page 201 for more information.

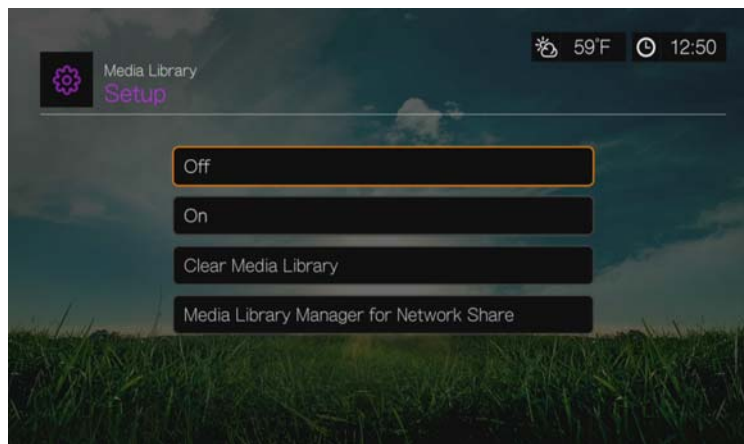

Media Library Manager for Network Share

Use this option to manually add individual share folders to the media library. Select **Add network share to media library** to connect to a Windows or Linux Share (see “Network Share” on page 76 for more info). While browsing the content inside, press **Option** to add a share folder to the Media Library. A maximum of 10 shares can be added. You can also set automatic file scanning on network shares. Choose from **During Standby Only**, **Once An Hour**, **Once A Day**, **Once A Week**, or **Once A Month**.

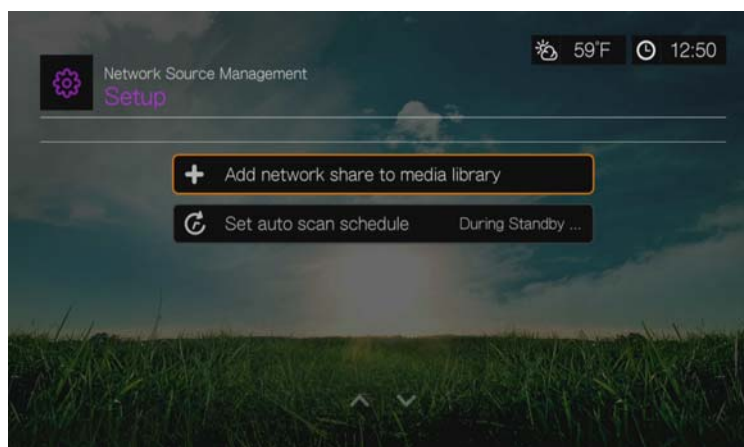


Get Content Info

Use this menu to set options for how you want to attach metadata (such as artwork and additional information) to your music and video files. **Manual Only** is the default setting, and you can also set this menu to **Auto**.

Meta-Source Manager


Use this menu to select a meta-source that provides metadata information and artwork for your media files. Select **Movie**, **Music**, or **TV Show** to display and select available meta-sources for the media type.

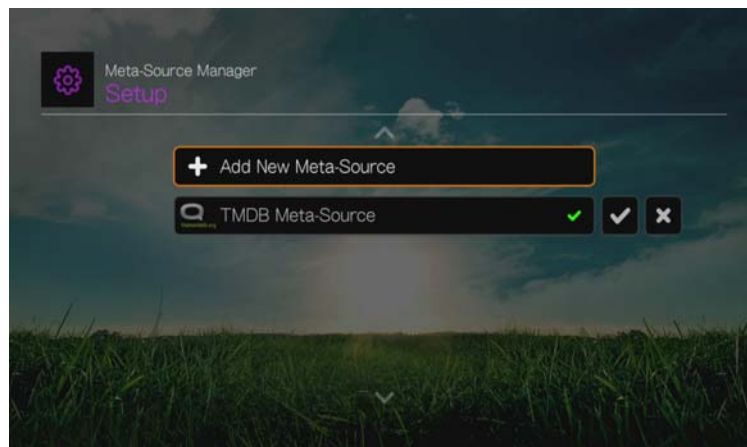

Select **Add New Meta-Source** and select the meta-source XML file from the network or attached USB storage. You can also create your own meta-source. Go to www.wdctlive.com to download a sample meta-source, and for more information about meta-sources.

Device Security

Use this menu to set a security password to access and control folder locking and parental control features. Select **Device Security** and use the navigation buttons **▲▼◀▶** to type in your password (you will need to enter it twice before initial use) to enable the features. The following screen displays:

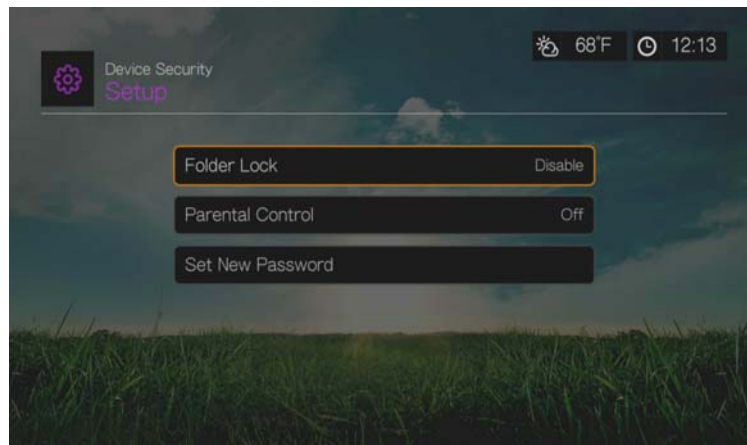


From here, enter the **Folder Lock** or **Parental Control** menus or **Set New Password**.

Folder Lock

Select **Set Default Lock Folder** to select a folder containing files you want to prevent access to. Once selected, the folder displays on the screen. Select **Lock** to


prevent access to the folder, **Unlock** to provide access to the folder, or **Disable** to disable the feature.

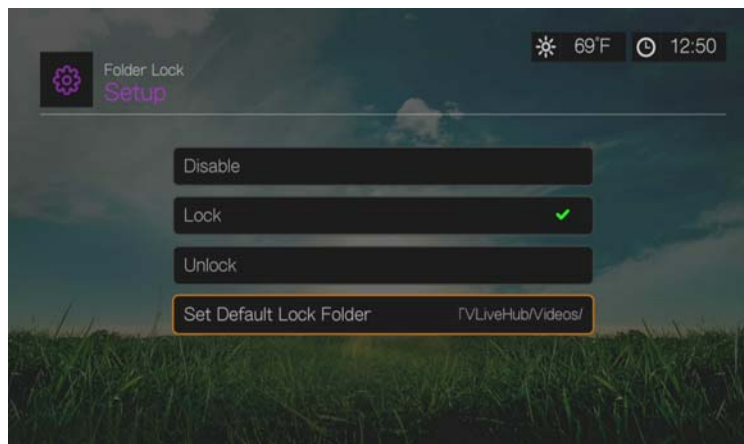

Parental Control

Parental control allows you to password protect an Internet service so the user can access it only if the correct password is entered. There are two options:

1. **Show** – default option. The service is not password protected.
2. **Ask** – the password must be entered to access the service.

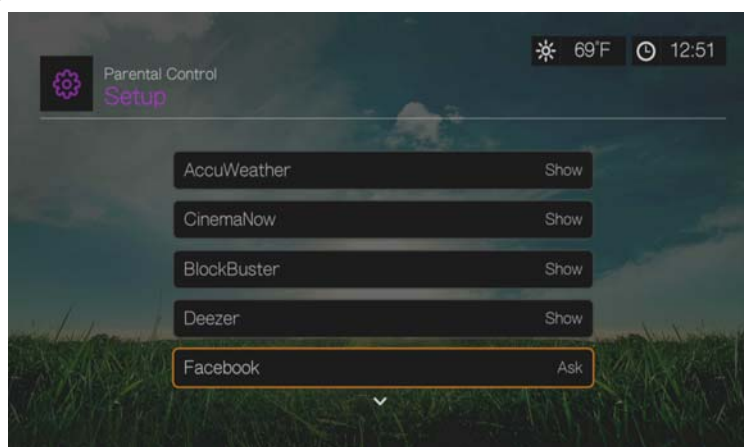


Additional Encoding Support

Press ▲/▼ to select an encoding support for a secondary language, then press **OK**. This prevents garbled characters in file names and subtitles defined in the selected language.


Disk Manager

This option displays information about the media center and attached drives when you select the drive then press **OK**, including:

- Storage Type
- Free Space
- Total Size
- File System

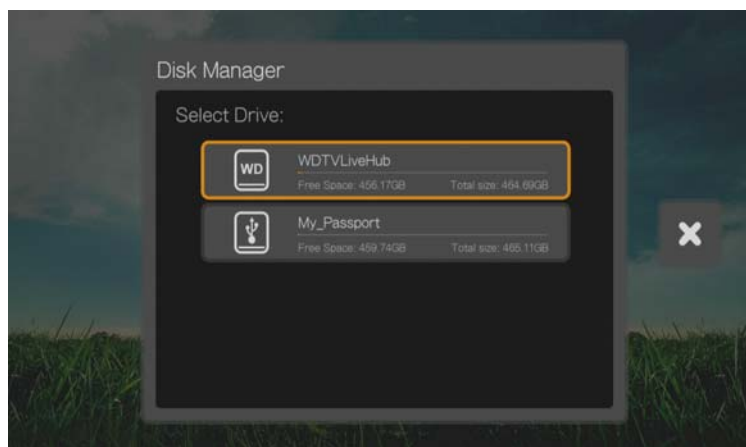

Disk Manager also allows you to format the internal drive. Select WDTVLiveHub, then press **OK**. Select **Format**, then press **OK**.

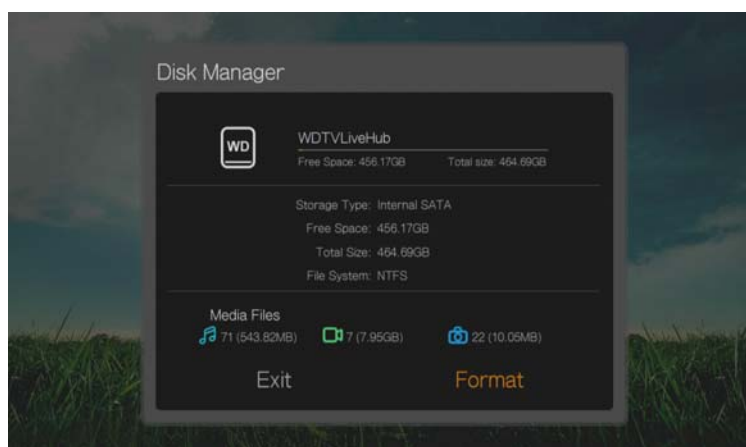


Important: Reformatting the internal drive erases all its contents. If you have already saved files on the internal drive, be sure to back them up before reformatting it.

Device Registration

To register your WD product using the Setup menu:

1. Make sure your media center has an active network connection.
Go to “Network Setup” on page 68 for instructions on how to set up a network connection.
2. Press **Setup** or navigate to the Home | Setup menu, then press **OK**.

3. Press ▲/▼ to select **System**, then press **OK**.
4. Press ▲/▼ to select **Device Registration**, then press **OK**.

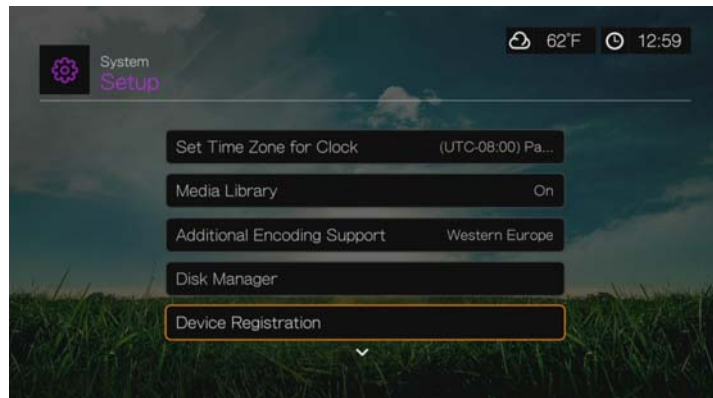


5. On the Register Product screen, press ▲/▼ to select **First Name**, then press **OK**.
6. Use the navigation buttons ▲▼◀▶ to type in your first name using the on-screen keyboard. Select **Submit**, then press **OK**.
7. Press ▲/▼ to select **Last Name**, then press **OK**.
8. Use the navigation buttons ▲▼◀▶ to type in your last name using the on-screen keyboard. Select **Submit**, then press **OK**.
9. Press ▲/▼ to select **Email**, then press **OK**.
10. Use the navigation buttons ▲▼◀▶ to type in your email address using the on-screen keyboard. Select **Submit**, then press **OK**.
11. On the Register Product screen, press ◀▶ to select **OK**, and then press **OK**.

WD LED Light Control

Use this menu to turn off the WD LED light (**Always Off**). If turned off, the WD LED will only appear during start up then disappear after the device has booted up. The default setting is **Normal**.

Device Reset

Use this menu to perform device reset options:

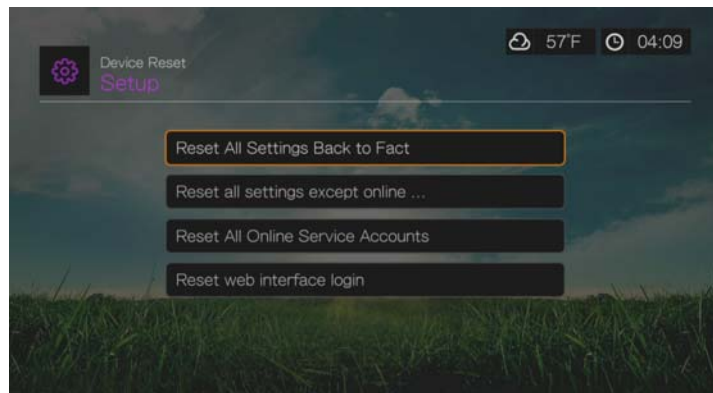

Reset All Settings Back to Factory Default – restores all media center system preferences and playback settings to their default factory values. This may correct problems caused by a failed firmware upgrade or faulty configuration settings.

Reset All Settings Except Online Service Accounts – restores all media center system preferences and playback settings to their default factory values with the exception of your internet Services personal account information.

Reset All Online Service Accounts – clears all account information and logins you have entered for Services.

Reset Web Interface Login – clears the user-created Web UI password and resets it to the default password. See “Using the Web UI” on page 86 for details.



.....
Important: If you specified a static IP address (or any other non-standard configuration), the media center will no longer appear on the network after the reset. Also, be sure to reset the media center to factory defaults and reset all online service accounts before returning or otherwise transferring the device to purge your internet services personal account information, network shares passwords, and wireless network passwords.

Device Reset only clears user settings from the device. To clear all the data and content from the media center's internal drive, you need to reformat the drive. See “Disk Manager” on page 194.

To perform a device reset:

1. Press **▲/▼** to select **Device Reset**, then press **OK**.
2. Press **▲/▼** to select a device reset option, then press **OK**.
3. Select **OK** in the confirmation screen, then press **OK**.

Device Restart

Press **OK** to restart the media center.

Check Latest Firmware


This menu displays the current firmware version. Press **OK** to check for new firmware.

Auto Detect New Firmware

Use this menu to turn the automatic detection of new firmware **On** or **Off**. See “System Firmware Upgrade” on page 203 for further details.

Mobile Access/WD Photos

Use this menu to share files on the media center with mobile devices that have the WD Photos app loaded. You can provide access for up to four mobile devices. For further information on WD Photos, go to <http://wdphotos.wdc.com>.

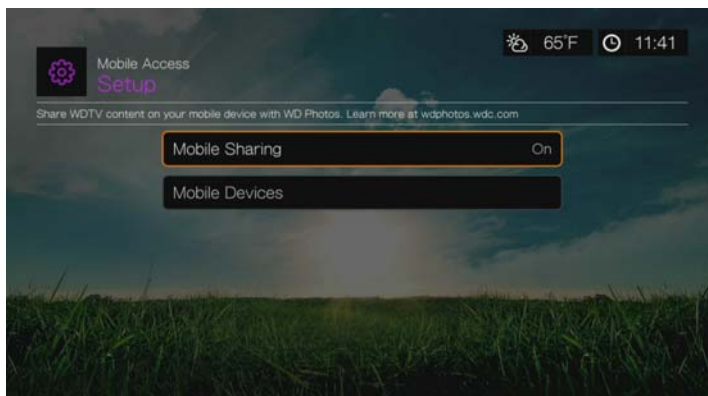

Mobile Sharing

Mobile Sharing is turned **On** by default, allowing access for mobile devices. Selecting **Off** disables access for mobile devices.

Mobile Devices

To add mobile devices:

1. Select **Mobile Devices** and press **OK** to begin adding devices.
2. Press **OK** to **Add Mobile Device**.



3. Install WD Photos on your mobile device either from the App Store or the Android Marketplace.



.....
Note: Be sure to use WD Photos version 1.2 or later.


4. Launch WD Photos and tap **Connect Now**.




5. Tap **WD TV Live Hub**.



6. Select **Get Code** on the media center screen. Press **OK**.
7. Enter the activation code shown on the media center's screen on your mobile device (code expires after 24 hours) then tap **Activate**.
8. Press **OK** on the media center's remote. The device is now listed in the Mobile Devices screen. Repeat the steps above to add additional mobile devices. You can now use WD Photos on the mobile devices you've added.

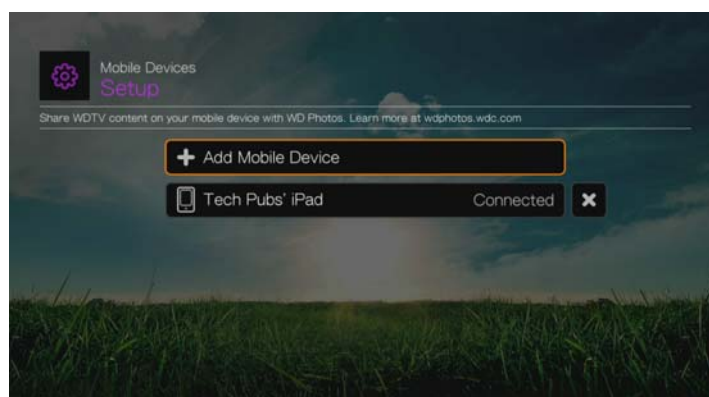


Removing a Mobile Device


1. Navigate to a device in the Mobile Devices screen, then press ► to select . Press **OK**.
2. Select **OK**, then press **OK**.

Upload Content to the Media Center

You can take a photo or video clip with your mobile device and upload it directly to the built-in hard drive on your media center.

To upload content:

1. Open WD Photos on your mobile device.
2. Tap the folder icon  next to media center's device icon.

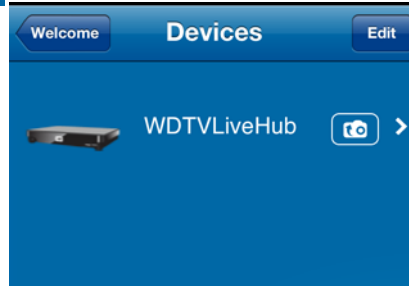

3. Tap on an album containing the photo or video you want to upload.
4. Tap on each thumbnail of a photo or video you want to upload or tap **Select All**, then tap **Upload**.



The content you upload appears in a folder on the media center's internal drive under Photos or Videos. The name of the folder corresponds to the name of the mobile device. For further information about WD Photos, refer to WD Photos Help or go to <http://wdphotos.wdc.com>.

About

Select this option to display the network info, firmware version currently installed, part number, and serial number of the device as well as online service info.



- Select **Network Info** then press **OK** to view info such as the device's MAC and IP addresses, mobile access type, etc.
- Select **Device Info** then press **OK** to view the firmware version currently installed, part number, and serial number of the device.
- Select **Online Service Info** to view online service account info such as your Netflix ESN.

Media Library

Media Library scans and consolidates the media contents of the internal hard drive, USB drive, and network drives into a database through which you can easily locate media files. This feature is set to on by default.

The following conditions will prevent the Media Library from processing your media.

- The USB device has read-only protection.
- There is not enough hard drive space on the USB device. Your media center needs some space to cache information, so that searches and scans are faster.

A note about metadata

Metadata is information about the data in a file that describes how, when, and by whom a particular set of data (video, music, photographic, or any other type of data) was collected, and how the data is formatted.

Not all files have metadata loaded. To add and edit metadata so that Media Library can aggregate the files properly, you can use one of several tools including:

- Adobe® Bridge (part of the Adobe Creative Suite)
- abcAVI Tag Editor (freeware)
- XnView 1.93.2 (freeware)
- iTunes
- Windows Media Player

Editing Metadata

Editing metadata with iTunes:

1. Open iTunes and click the song you want to edit.
2. Open the File menu, then click **Get Info**.

A window opens, showing all of the information you can edit for the song that you selected. You can edit the song's:

- Name
 - Artist
 - Year released
 - Album name
 - Composer
 - Track number
 - Genre
3. When you are done, click **OK**. To edit the next song listed in your iTunes library, click **Next**.

Editing metadata with Windows media center:

1. Open Windows media center.
2. Click the **Library** tab.
3. Right-click the title or other item to edit.
4. When the menu opens, click **Edit**.

Converting The Content Into A Usable Format

There are several fast, easy-to-use applications available online that can convert photos, videos, and music files into formats optimized for use on your media center. The software also allows simultaneous conversion of multiple files in batches regardless of their original formats.

Examining Your Files

MediaInfo (free software) can provide technical and tag information about your video or audio files.

MediaInfo provides the following kinds of information:

- General—title, author, director, album, track number, date, and duration
- Video—codec, aspect, fps, and bitrate
- Audio—codec, sample rate, channels, language, and bitrate
- Text—language of the subtitles
- Chapters—number and a list of chapters

MediaInfo supports the following formats:

- Video—MKV, OGM, AVI, DivX, WMV, QuickTime, Real, MPEG-1, MPEG-2, MPEG-4, DVD (VOB) (Codecs: DivX, XviD, MSMPEG4, ASP, H.264, AVC)
- Audio—OGG, MP3, WAV, RA, Dolby Digital Plus, AAC, M4A, AU, AIFF
- Subtitles—SRT, SSA, ASS, and SAMI

With MediaInfo, you can:

- Read many video and audio file formats
- Use several methods of viewing information, such as text, sheet, tree, and HTML
- Customise views
- Export information as text, such as CSV and HTML

To examine your files:

1. Use your browser and go to <http://mediainfo.sourceforge.net>.
2. Download the software and install it on your computer.
3. Follow the instructions as prompted.

16

System Maintenance

The system software of your media center can be upgraded to the latest release, which can improve support for media file playback and includes bug fixes and product enhancements. To ensure that you receive the latest update, we recommend registering your product at <http://register.wdc.com>.

This chapter describes how to upgrade the system firmware and perform simple troubleshooting. If you encounter an error message, refer to the “Common Error Messages” on page 208 for possible corrective action.

Solutions to more serious problems may require contacting your dealer or an authorized service center for assistance. For more information, refer to “WD® Service and Support” on page 2.

System Firmware Upgrade

Firmware is an important set of instructions that tells your media center how to operate, what the interactive screens look like, and how to do what you tell it to do. Upgrading the firmware is important because WD is always developing newer, faster, and more efficient ways of doing things that your media center needs to know.




.....
Important: Make sure the media center's AC power adapter remains connected during the firmware update. A power disruption during the update process can corrupt the system firmware. Also, make sure that you do not unplug the USB storage device if doing a manual update.

Automatic

The New Firmware menu appears in the media center's Home screen when updated firmware becomes available, providing the option to automatically upgrade the firmware.




.....
Note: You must have Auto Detect New Firmware set to **On** to automatically upgrade firmware. See “Auto Detect New Firmware” on page 196.

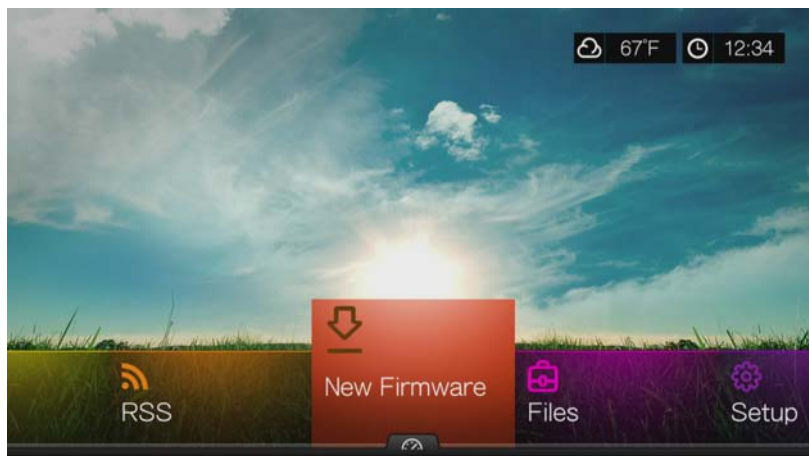

To update the firmware automatically:

1. Press **HOME**, then select New Firmware. Press **OK**.
2. Select **Update device** on the firmware update prompt, and then press **OK**. This restarts the system. You can also select **What's New in This Update?** to see the changes.

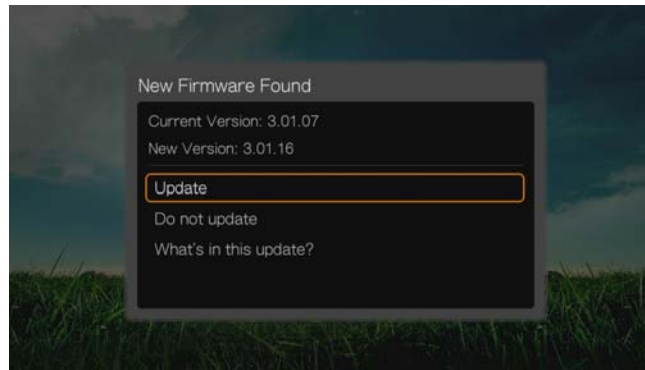

3. After restarting, the system automatically enters firmware upgrade mode.



4. Once the update process finishes, the media center restarts. When the media center restarts, the new firmware loads automatically.

Manual

To update the firmware manually:

1. Go to <http://support.wdc.com> and download the latest firmware update file for the media center.
2. Click "Downloads," then the product name (or photo). Download the WD TV Live Hub Media Center firmware zip file to your computer.
3. Using an unzip utility, extract the zip file contents to the root directory of a USB device connected to your computer.
4. Safely remove the USB device from the computer and attach it to the media center.
5. Connect the USB device to the media center's USB port. If the Sync and Transfer screen appears, select **Cancel**, then press **OK**.
6. Follow steps 1-4 under "To update the firmware automatically:" on page 204.
7. If the Sync and Transfer screen appears, select **Cancel** or **OK** if you want to access video, music, or photo files on the attached USB device.

Troubleshooting

Problem	Solution
DISPLAY	
The TV screen is blank and the media center power LED remains off.	<ul style="list-style-type: none"> Make sure the TV is turned on. Make sure that the power adapter and power outlet are okay. Make sure that the interface cable is properly attached to the correct terminals on both the TV and the media center.
The TV screen is blank and the media center power LED is blinking.	<ul style="list-style-type: none"> Check your TV input source selection. Power cycle (turn off/on) your TV. Power cycle (turn off/on) your media player. If the same thing happens, contact WD Technical Support for assistance (see “WD® Service and Support” on page 2).
The TV screen is blank and the media center power LED is on.	<ul style="list-style-type: none"> Make sure the TV is turned on. Make sure that the interface cable is properly attached to the correct terminals on both the TV and the media center. Press the reset switch for one second to reset to factory defaults (see “Device Reset” on page 195). Press and hold 10 seconds to toggle between NTSC and PAL. Use a fine-tipped stylus or the unfolded end of a paperclip to press the reset switch.
The TV screen is blinking and fuzzy.	<ul style="list-style-type: none"> Make sure that the interface cable is properly attached to the correct terminal(s) on both the TV and the media center. Make sure the media center power LED is on. If you are using a CRT TV, navigate to the Home Settings System screen and: <ul style="list-style-type: none"> Make sure that the Composite option is selected as the video output. Make sure the TV system setting matches the system used in your region. If you are using an LCD TV, navigate to the Home Settings System screen and: <ul style="list-style-type: none"> Make sure that the HDMI option is selected as the video output. Make sure that the video resolution option is set as Auto.
The video display is cut off or appears in a sidebar.	Navigate to the Home Settings Audio/Video screen and make sure that aspect ratio is set as Normal .

Problem	Solution
The slideshow pictures are distorted.	Navigate to the Home Settings Photo screen and select Keep as original or Fit to screen in the Photo Scaling field.
FILES	
File does not play.	<ul style="list-style-type: none"> • Verify compatibility. Refer to "Supported Formats" on page 211. • Use a media converter program to convert the file to a usable format.
AUDIO	
There is no sound.	<ul style="list-style-type: none"> • Make sure the volume on the entertainment unit is not muted. • Navigate to the Home Settings System screen and make sure the correct audio output setting is enabled. <ul style="list-style-type: none"> - If you are using the composite audio cable, the Stereo setting should be enabled. - If you are using an S/PDIF (optical) or HDMI connection, the Digital setting should be enabled. • If you are watching a video that supports multiple audio channels, make sure that the Audio Off option is disabled. Press Options <icon>, and then press OK repeatedly until the intended audio channel is displayed.
NETWORK	
The media center is not visible on the network.	<ul style="list-style-type: none"> • Make sure the Setup > Network Settings > Network Share Server option is set to On.
USB DEVICE	
The Media Library process failed.	<p>Make sure that:</p> <ul style="list-style-type: none"> • the USB device has no read-only protection. • the USB device is not using the HFS+ file system with Journaling enabled. • there is enough storage space on the USB device.
The attached USB device is not visible on the Home screen.	<ul style="list-style-type: none"> • The media center only supports mass USB storage mode. Make sure that the USB device is configured as a "mass storage device." • Make sure the USB device's file system is supported (NTFS, FAT/FAT32, or HFS+).
REMOTE CONTROL	

Problem	Solution
The media center remote control does not work.	<ul style="list-style-type: none">• Press only one button at a time.• Make sure the batteries are properly inserted.• The batteries may already be drained out. Replace batteries with new ones.• Make sure that the path between the remote control and the media center is not blocked.

FIRMWARE UPGRADE

The firmware upgrade recovery splash screen is shown after you turned on the media center or the media center keeps rebooting to the splash screen.	<p>The previous or current firmware upgrade process failed.</p> <ul style="list-style-type: none">• Repeat the firmware upgrade process. Go to page 204 for instructions.• If you are still unable to update the system firmware, perform a system reset. Go to page 195 for instructions.
---	---

Common Error Messages

If this message appears	Perform this action
HOME	
Hard drive cannot aggregate.	There are different conditions under which this error message may appear. The message will specify the issue. For example, not enough space is used on the storage or a journaled file system.
No storage present.	Attach the USB device that contains your media files.
Media Library requires more storage space: [XXXMB]	<ol style="list-style-type: none"> 1. Eject and disconnect the USB device from the media center. 2. Connect the USB device to your computer and delete unnecessary files to meet the required storage space. 3. Attach the USB device to the media center again.
Please turn off journaling on the attached storage's file system for the media center to compile the media library.	<ol style="list-style-type: none"> 1. Eject and disconnect the USB device from the media center. 2. Connect the USB device to your Apple computer and disable the journaling function. Refer to the Apple Help for information. 3. Attach the USB device to the media center again.
Unable to compile media library on read-only storage.	<ol style="list-style-type: none"> 1. Eject and disconnect the USB device from the media center. 2. Connect the USB device to your computer and make sure the read-only protection is disabled. 3. Attach the USB device to the media center again.
Unable to compile media library. Please check your storage setting.	<p>There are two different conditions under which this error message may appear:</p> <ol style="list-style-type: none"> 1. Insufficient storage space on the drive(s). 2. Drive is configured as "read-only." <p>Free up drive storage space or adjust the drive settings to resolve this error.</p>
Unrecognized storage.	The USB device model is not supported. Use another USB device.
Question XX: WD USB HDD Trouble Shooting	This indicates a system diagnostic failure. Contact WD Technical Support for assistance.
CONTENT PLAYBACK	
There is no media in the current folder.	There are no supported media files in the selected folder. Select another folder that contains media files of the correct format.

If this message appears	Perform this action
Unable to play the selected file. Please see the User Manual for a list of supported file formats.	<ol style="list-style-type: none"> 1. Eject and disconnect the USB device from the media center or map a drive to the media center while the file is located. 2. Connect the USB device to your computer or check the file on the media center's internal drive and make sure the file format is correct/supported (see "Supported Formats" on page 211). 3. Attach the USB device to the media center again if necessary.

FAQs

How do I find media files and create playlists?

Several media center applications are currently available, such as Winamp and iTunes, that let you play, arrange, and edit media files. These media centers also let you create playlists and edit the metadata information for media files. You can search the Internet with your browser to locate where these applications are available for download.

How do I copy the files from my music CD to my computer?

Digital audio extraction, or *Ripping*, is the process of copying audio (or video) content to a hard drive, typically from removable media, such as CDs or DVDs, or from media streams.

To rip music from CDs to a computer:

1. Insert the CD into the optical drive of your computer.
2. Open the program that you use to rip the music to your computer, such as iTunes or Windows Media Player.
3. Press the **Import** button (using iTunes),
- OR -
Press the **Rip** button (using Windows media center).
4. Click the music you want to copy (Windows media center) and note where the music files are saved after they are copied. iTunes imports the entire CD into your iTunes music library.
5. Click the **Start Rip** button (Windows Media Player).
6. When ripping is complete, remove the CD. The music is now on your computer.



.....
Note: Some music may be covered by copyright laws which prevent its copying or distribution.

Can I use a universal remote control with the media center?

You can use most popular universal remote control devices such as the Logitech Harmony models.

17

Appendix

Multiformat Content Playback

Multiformat is a file type that groups other files of the same digital content but may be encoded in different digital formats. For example, a single video file may actually include a few components such as video, audio, and photo grouped together. The media center is capable of playing several different types of multiformat files. For a detailed list of supported formats, refer to “Supported Formats” on page 211.

Audio codec	Audio container	Video codec	Video container	Photo	Subtitle*	Playlist
MP3	AIFF	MPEG 1	AVI	GIF	SRT	PLS
MP2	MKA	MPEG 2	VOB/ISO	BMP	SUB	WPL
WAV/PCM/ LPCM	OGG	MPEG 4 (ASP, AVC HD/H.264)	WMV9	JPEG	SMI	M3U
Dolby Digital Plus**		VC-1	DVR-MS	TIF/TIFF***	SSA	
FLAC		Xvid	MKV	PNG	ASS	
WMA/ WMA Pro			MOV			
AAC			DAT (VCD/ SVCD)			
DTS****			tp, ts, m2t/ m2ts			
OGG Vorbis			FLV			

*To convert subtitle files encoded in a different format, open the file with Notepad and do a Save As with the following parameters: File Type—All Files and Encoding—UTF-8.

**2-channel only. 2+channel signal is sent via digital pass through to a receiver. Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

***Single layer only.

****Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark & the DTS logos and Symbol are trademarks of DTS, Inc.

Supported Formats

Filename extension	Codec	Format/container
VIDEO		
.AVI	Video: Xvid AVC MPEG1/2/4 WMV9 VC-1 Audio: MPEG Audio PCM Dolby Digital DTS	AVI
.MPG/.MPEG	Video: MPEG1/2 Audio: MPEG Audio Dolby Digital DTS PCM	mpeg ps
.MKV	Video: h.264 x.264 AVC MPEG1/2/4 WMV9 VC-1 Audio: MPEG Audio PCM Dolby Digital/Dolby Digital Plus DTS AAC	MKV
.TS/.TP/.M2T	Video: MPEG1/2/4 AVC VC-1 Audio: MPEG Audio Dolby Digital/Dolby Digital Plus DTS	TS

Filename extension	Codec	Format/container
.MP4/.MOV	Video: MPEG4 AVC Audio: AAC MPEG Audio Dolby Digital/Dolby Digital Plus	Quicktime
.ASF/.DVR-MS/.WMV	Video: MPEG2 WMV9 VC-1 Audio: WMA/WMA Pro Dolby Digital	ASF
.VOB/.ISO	Video: MPEG1/2 Audio: MPEG Audio Dolby Digital DTS PCM	VOB/ISO
.M2TS	Video: MPEG1/2/4 AVC VC-1 Audio: MPEG Audio Dolby Digital/Dolby Digital Plus DTS	M2TS
.WMV9	VC-1	WMV9
.FLV	H.264	FLV

An audio receiver is required for multi-channel surround sound digital output.

Video notes:

1. MPEG-2 MP@HL up to 1920x1080p24, 1920x1080i30, or 1280x720p60 resolution.
2. MPEG4.2 ASP@L5 Rectangular shape video decoding up to 1280x720p30 resolution, support for B Pictures, data partitioning and error resiliency. No support for global motion compensation (GMC).
3. WMV9/VC-1 MP@HL up to 1280x720p60 (<90% of the P-picture macroblocks have 4 motion vectors) or 1920x1080p24 resolution. Up to 1280x720p30 or 1920x1080i25 resolution if unconstrained 4MV bitstream.
4. VC-1 AP@L3 up to 1920x1080i30 (<60% of the B-picture macroblocks have 4 motion vectors), 1920x1080p24, or 1280x720p60 resolution. Up to 1920x1080i25, 1920x1080p24, or 1280x720p60 resolution if unconstrained 4MV bitstream.
5. MPEG-4.10 (H.264) BP@L3 up to 720x480p30 or 720x576p25 resolution, including FMO and ASO.
6. MPEG-4.10 (H.264) MP@L4.1 and HP@L4.1 up to 1920x1080p24, 1920x1080i30, or 1280x720p60 resolution (constrained to match BD and HD-DVD specifications), 180 Mbin/s maximum for CABAC streams.

File	Codec	Format/container
AUDIO		
MP1/2/3/a	MPEG audio	None
AAC	MPEG 2/4 AAC LC/HE	1. ADTS 2. ADIF
M4A/MP4A	MPEG 2/4 AAC LC/HE	Quicktime
FLAC	FLAC	FLAC
WAV	PCM (Microsoft®)	WAVE
LPCM/PCM	PCM	None
OGG	OGG VORBIS	OGG
WMA	WMA	ASF
AIF/AIFF	PCM	AIFF
MKA	1. MPEG audio 2. MPEG 2/4 AAC LC/HE 3. PCM (Microsoft)	MATROSKA
Dolby Digital/Dolby Digital Plus	Dolby Digital/Dolby Digital Plus	None
DTS	DTS	None

An audio receiver is required for multi-channel surround sound digital output.

Type	File name	Codec	Resolution	Other limitation
PHOTOS				
BMP	bmp	Uncompressed (most common)	2048x2048	Not available
TIFF	tif/tiff	Uncompressed 24-bit RGB (most common)	2048x2048	Multi-page not supported, only shows 1st page
		LZW (loss less)	2048x2048	Not available
PNG	png	DEFLATE (loss less)	2048x2048	Not available
GIF	gif	LZW (loss less)	2048x2048	For animation, only supports 1st page
JPEG	jpeg/jpg	JPEG (lossy) (most common)	4096x4096	CMYK not supported
		Progressive	1280x720	Not available

Type	File name	Codec	Resolution	Other limitation
PHOTOS				

Compressed RGB JPEG formats only and progressive JPEG up to 2048. Single layer TIFF files only. Uncompressed BMP only. Not available indicates that no other limitations are known at this time.

Thumbnail	Support	Limitation
MUSIC		

Filename extension	Only supports ID3 and EXIF format have thumbnail	
mp3	Yes	Thumbnail in the id3 tag ("APIC" or "PIC" tag)
wma	Yes	Thumbnail in the asf format ("WM/Picture" in the extended info)
m4a	Yes	Thumbnail in the quicktime format ("moov/udta/meta/ilst/covr")
mp4a	Yes	Thumbnail in the quicktime format ("moov/udta/meta/ilst/covr")
flac	Yes	Thumbnail in the flac format
asf	Yes	Thumbnail in the asf format ("WM/Picture" in the extended info)
wmv	Yes	Thumbnail in the asf format ("WM/Picture" in the extended info)
mp4	Yes	Thumbnail in the quicktime format ("moov/udta/meta/ilst/covr")
jpg	Yes	Thumbnail in the exif
jpe	Yes	Thumbnail in the exif
tiff	Yes	Thumbnail in the exif
tif	Yes	Thumbnail in the exif
jpeg	Yes	Thumbnail in the exif

Regulatory Compliance

FCC Class B Information

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the retailer or an experienced radio/television technician for help.

ICES-003/NMB-003 Statement

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device complies with Canadian ICES-003 Class B.

Safety Compliance

Approved for US and Canada. CAN/CSA-C22.2 No. 60065:03, UL-60065, 7th Ed: Audio, Video and Similar Electronic Apparatus - Safety Requirements.

Approuvé pour les Etats-Unis et le Canada. CAN/CSA-C22.2 No. 60065:03, UL-60065 7th Ed. Appareils audio, vidéo et appareils électroniques analogues - Exigences de sécurité.

This device is only for use with the compatible UL Listed AC adapter.

Cet appareil n'est destiné qu'à des adaptateurs compatibles marqués "UL Listed."

CE Compliance for Europe

Marking by the CE symbol indicates compliance of this system to the applicable Council Directives of the European Union, including the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC). A "Declaration of Conformity" in accordance with the applicable directives has been made and is on file at Western Digital Europe.

Die Markierung mit dem CE-Symbol zeigt an, dass dieses Gerät mit den anwendbaren Richtlinien der Europäischen Union übereinstimmt. Hierzu zählen auch die EMV-Richtlinie (2004/108/EG) sowie die Niederspannungsrichtlinie (2006/95/EG). Eine "Konformitätserklärung" in Übereinstimmung mit den anwendbaren Richtlinien ist erstellt worden und kann bei Western Digital Europe eingesehen werden.

Le symbole CE indique que ce système est conforme aux directives du Conseil de l'Union Européenne, notamment à la Directive CEM (2004/108/CE) et la Directive Basse tension (2006/95/CE). Une "déclaration de conformité" aux directives applicables a été déposée auprès de Western Digital Europe.

I marchi con il simbolo CE denotano la conformità di questo sistema alle direttive del Consiglio dell'Unione europea, ivi compresa la Direttiva EMC (2004/108/CE) e la Direttiva Bassa Tensione (2006/95/CE). In adempimento con le vigenti direttive è stata rilasciata una "Dichiarazione di conformità", depositata presso Western Digital Europe.

La marca con el símbolo CE indica el cumplimiento de este sistema con las correspondientes directivas del Consejo de la Unión Europea, que incluye la Directiva CEM (2004/108/CE) y la Directiva de bajo voltaje (2006/95/CE). Se ha realizado una "Declaración de conformidad" de acuerdo con las directivas correspondientes y se encuentra documentada en las instalaciones de Western Digital en Europa.

Märkning av CE-symbolen anger att detta systemet uppfyller kraven enligt det Europeiska Parlamentet och Rådets direktiv, inklusive EMC-direktivet (2004/108/EC) och Direktivet om Lågspänning (2006/95/EC). En "Försäkran om Överensstämmelse" har gjorts enligt de gällande direktiven och har registrerats hos Western Digital Europa.

Merking med CE-symbolet indikerer dette systemets overholdelse av gjeldende direktiver for EU, inkludert EMC-direktivet (2004/108/EC) og lavspenningsdirektivet (2006/95/EC). En "samsvarserklæring" i henhold til gjeldende direktiver har blitt skrevet og finnes arkivert hos Western Digital Europe.

CE-merkintä osoittaa tämän järjestelmän yhdenmukaisuuden sovellettavissa olevien Euroopan unionin neuvoston direktiivien kanssa, mukaan lukien EMC-direktiivi (2004/108/EC), sekä alijännitedirektiivi (2006/95/EC). "Yhdenmukaisuusvakuutus" sovellettavien direktiivien kanssa on tehty ja se on arkistoituna Western Digital Europe:ssa.

Маркировка символом CE свидетельствует о соответствии настоящей системы положениям применимых директив Совета Европейского Союза, в том числе Директивы об электромагнитной совместимости (2004/108/EC) и Директивы о низковольтном оборудовании (2006/95/EC). Заявление о соответствии положениям применимых директив, сделанное компанией Western Digital, находится в архиве её европейского подразделения

يشير التميز بوضع الرمز CE إلى توافق هذا النظام مع توجيهات المجلس القابلة للتطبيق والخاصة بالاتحاد الأوروبي، بما في ذلك توجيهات التوافقية الكهرومغناطيسية (EMC) (2004/108/EC) وتوجيهات الجهد الكهربائي المنخفض (2006/95/EC) وتم وضع "إعلان المطابقة" وفقاً للتوجيهات القابلة للتطبيق وهو موجود في ملف على Western Digital Europe.

KC Notice (Republic of Korea only)

기종별	사용자 안내문
B 급기기 (가정용방송통신기자재)	이 기기는 가정용 (B 급) 전자파적합기기로서 주가 정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사 용할 수 있습니다

Environmental Compliance (China)

部件名称 Part Name	有毒有害物质或元素 Toxic or Hazardous Substances or Elements					
	铅 Pb	汞 Hg	镉 Cd	六价铬 Cr (VI)	多溴联苯 PBBs	多溴二苯醚 PBDEs
机壳/机箱 Chassis/Housing	X	O	O	O	O	O
电路板组合 / 板卡 PCBA	X	O	O	O	O	O
存储设备 (硬盘驱动器, 光盘驱动器, 软盘驱动器, 记忆模块...) Storage Device (HDD, ODD, FDD, DIMM,...)	X	O	O	O	O	O
电源变压器 / 电源供应器 Adapter / Power Supply	X	O	O	O	O	O
风扇 Fan	X	O	O	O	O	O
机械-电机零件 Mechanical-Electrical parts	X	O	O	O	O	O
电池 Battery	X	O	O	O	O	O
遥控器 Remote controller	X	O	O	O	O	O
<p>O: 代表此种部件的所有均质材料中所含的该种有毒有害物质均低于中华人民共和国信息产业部所颁布的《电子信息产品中有毒有害物质的限量要求》(SJ/T 11363-2006) 规定的限量。</p> <p>X: 代表此种部件所用的均质材料中, 至少有一类材料其所含的有毒有害物质高于中华人民共和国信息产业部所颁布的《电子信息产品中有毒有害物质的限量要求》(SJ/T 11363-2006) 规定的限量</p> <p>除非产品上另有标记, 所有内附产品及其部件的‘环保使用期限’均由此显示的符号表示。 示。此环保使用期限只适用于产品手册中所规定的使用条件。 (在此表中, 企业可能需要根据实际情况对标记“X”的项目进行进一步的技术性解释。)</p>						

**Warranty Information (All Regions Except Australia/New Zealand)****Obtaining Service**

WD values your business and always attempts to provide you the very best of service. If this Product requires maintenance, either contact the dealer from whom you originally purchased the Product or visit our product support Web site at <http://support.wdc.com> for information on how to obtain service or a Return Material Authorization (RMA). If it is determined that the Product may be defective, you will be given an RMA number and instructions for Product return. An unauthorized return (i.e., one for which an RMA number has not been issued) will be returned to you at your expense. Authorized returns must be shipped in an approved shipping container, prepaid and insured, to the address provided on your return paperwork. Your original box and packaging materials should be kept for storing or shipping your WD product. To conclusively establish the period of warranty, check the warranty expiration (serial number required) via <http://support.wdc.com>. WD shall have no liability for lost data regardless of the cause, recovery of lost data, or data contained in any Product placed in its possession.

Limited Warranty

WD warrants that the Product, in the course of its normal use, will for the term defined below, be free from defects in material and workmanship and will conform to WD's specification therefor. The term of your limited warranty depends on the country in which your Product was purchased. The term of your limited warranty is for 2 years in the North, South and Central America region, 2 years in the Europe, the Middle East and Africa region, and 3 years in the Asia Pacific region, unless otherwise required by law. The term of your limited warranty period shall commence on the purchase date appearing on your purchase receipt. WD may at its discretion make extended warranties available for purchase. WD shall have no liability for any Product returned if WD determines that the Product was stolen from WD or that the asserted defect a) is not present, b) cannot reasonably be rectified because of damage occurring before WD receives the Product, or c) is attributable to misuse, improper installation, alteration (including removing or obliterating labels and opening or removing external enclosures, unless the product is on the list of limited user-serviceable products and the specific alteration is within the scope of the applicable instructions, as found at <http://support.wdc.com>), accident or mishandling while in the possession of someone other than WD. Subject to the limitations specified above, your sole and exclusive warranty shall be, during the period of warranty specified above and at WD's option, the repair or replacement of the Product with an equivalent or better Product. The foregoing warranty of WD shall extend to repaired or replaced Products for the balance of the applicable period of the original warranty or ninety (90) days from the date of shipment of a repaired or replaced Product, whichever is longer.

The foregoing limited warranty is WD's sole warranty and is applicable only to products sold as new. The remedies provided herein are in lieu of a) any and all other remedies and warranties, whether expressed, implied

or statutory, including but not limited to, any implied warranty of merchantability or fitness for a particular purpose, and b) any and all obligations and liabilities of WD for damages including, but not limited to accidental, consequential, or special damages, or any financial loss, lost profits or expenses, or lost data arising out of or in connection with the purchase, use, or performance of the Product, even if WD has been advised of the possibility of such damages. In the United States, some states do not allow exclusion or limitations of incidental or consequential damages, so the limitations above may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Warranty Information (Australia/New Zealand only)

For consumers purchasing products in Australia and New Zealand, please refer to this warranty information.

Nothing in this warranty modifies or excludes your legal rights under the Australian Competition and Consumer Act or the New Zealand Consumer Guarantees Act. This warranty identifies WD's preferred approach to resolving warranty claims which is likely to be quick and simple for all parties.

No other warranties either express or implied by law, including but not limited to those contained in the Sale of Goods Act, are made with respect to the Product. If you purchased your Product in New Zealand for the purposes of a business, you acknowledge and agree that the New Zealand Consumer Guarantees Act does not apply.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure. What constitutes a major failure is set out in the Australian Consumer Law.

Warranty

WD warrants that the Product, in the course of its normal use, will for the term defined below, be free from defects in material and workmanship and will conform to WD's specifications. The term of your warranty is 3 years in Australia and New Zealand, unless otherwise required by law. The term of your warranty period shall commence on the purchase date appearing on your purchase receipt from an authorized distributor or authorized reseller. Proof of purchase shall be required to be eligible for this warranty and to establish the commencement date of this warranty. Warranty service will not be provided unless the Product is returned to an authorized distributor, authorized reseller or regional WD return center where the Product was first shipped by WD. WD may at its discretion make extended warranties available for purchase. WD shall have no liability for any Product returned if WD determines that the Product was (i) not purchased from an authorized distributor or authorized reseller, (ii) not used in accordance with WD specifications and instructions, (iii) not used for its intended function, or (iv) stolen from WD, or that the asserted defect a) is not present, b) cannot reasonably be rectified because of damage occurring before WD receives the Product, or c) is attributable to misuse, improper installation, alteration (including removing or obliterating labels and opening or removing external enclosures, including the mounting frame, unless the product is on the list of limited user-serviceable products and the specific alteration is within the scope of the applicable instructions, as found at <http://support.wdc.com>), accident or mishandling while in the possession of someone other than WD.

PRODUCTS ARE COMPLEX AND FRAGILE ITEMS THAT MAY OCCASSIONALLY FAIL DUE TO (A) EXTERNAL CAUSES, INCLUDING WITHOUT LIMITATION, MISHANDLING, EXPOSURE TO HEAT, COLD, AND HUMIDITY, AND POWER FAILURES, OR (B) INTERNAL FAULTS. SUCH FAILURES CAN RESULT IN THE LOSS, CORRUPTION, DELETION OR ALTERATION OF DATA. NOTE THAT YOU SHALL BE RESPONSIBLE FOR THE LOSS, CORRUPTION, DELETION OR ALTERATION OF DATA HOWSOEVER CAUSED, AND FOR BACKING UP AND PROTECTING DATA AGAINST LOSS, CORRUPTION, DELETION OR ALTERATION. YOU AGREE TO CONTINUALLY BACK UP ALL DATA ON THE PRODUCT, AND TO COMPLETE A BACKUP PRIOR TO SEEKING ANY GENERAL SERVICE AND TECHNICAL SUPPORT FROM WD.

In Australia, if the Product is not of a kind ordinarily acquired for personal, domestic or household use or consumption, provided it is fair and reasonable to do so, WD limits its liability to replacement of the Product or supply of equivalent or better Product.

This warranty shall extend to repaired or replaced Products for the balance of the applicable period of the original warranty or ninety (90) days from the date of shipment of a repaired or replaced Product, whichever is longer. This warranty is WD's sole manufacturer's warranty and is applicable only to Products sold as new.

Obtaining Service

WD values your business and always attempts to provide you the very best of service. Should you encounter any problem, please give us an opportunity to address it before returning this Product. Most technical support questions can be answered through our knowledge base or e-mail support service at <http://support.wdc.com>. If the answer is not available or, if you prefer, please contact WD at the applicable telephone number shown in the front of this document.

If you wish to make a claim, you should initially contact the dealer from whom you originally purchased the Product. If you are unable to contact the dealer from whom you originally purchased the Product, please visit our product support Web site at <http://support.wdc.com> for information on how to obtain service or a Return

Material Authorization (RMA). If it is determined that the Product may be defective, you will be given an RMA number and instructions for Product return. An unauthorized return (i.e., one for which an RMA number has not been issued) will be returned to you at your expense. Authorized returns must be shipped in an approved shipping container, prepaid and insured, to the address provided with your RMA number. If following receipt of a qualifying claim under this warranty, WD or the dealer from whom you originally purchased the Product determines that your claim is valid, WD or such dealer shall, at its discretion, either repair or replace the Product with an equivalent or better Product or refund the cost of the Product to you. You are responsible for any expenses associated with a claim under this warranty. The benefits provided to you under this warranty are in addition to other rights and remedies available to you under the Australian Competition and Consumer Act or the New Zealand Consumer Guarantees Act.

Your original box and packaging materials should be kept for storing or shipping your WD product. To conclusively establish the period of warranty, check the warranty expiration (serial number required) via <http://support.wdc.com>.

Western Digital Technologies, Inc.
3355 Michelson Drive, Suite 100
Irvine, California 92612
Phone: 949-672-7000
E-mail: support@wdc.com

GNU General Public License (“GPL”)

Firmware incorporated into this product may include third party copyrighted software licensed under the GPL or Lesser General Public License (“LGPL”) (collectively, “GPL Software”) and not Western Digital’s End User License Agreement. In accordance with the GPL, if applicable: 1) the source code for the GPL Software may be downloaded at no charge from <http://support.wdc.com/download/gpl> or obtained on CD for a nominal charge from <http://support.wdc.com/download/gpl> or by calling Customer Support within three years of the date of purchase; 2) you may re-use, re-distribute, and modify the GPL Software; 3) with respect solely to the GPL Software, no warranty is provided, to the extent permitted by applicable law; and 4) a copy of the GPL is included herewith, may be obtained at <http://www.gnu.org>, and may also be found at <http://support.wdc.com/download/gpl>.

Modification of or tampering with the Software, including but not limited to any Open Source Software, is solely at your own risk. Western Digital is not responsible for any such modification or tampering. Western Digital will not support any product in which you have or have attempted to modify the Software supplied by Western Digital.

Spotify Third-Party Licenses

Several fantastic pieces of free and open-source software have really helped get Spotify to where it is today. A few require that we include their license agreements within our product. Consider it done. As we enjoy giving credit where it's due, we included the entire list below. This means you can not only see which software we've been using, but the terms of the licenses too. A big thanks from all of us at Spotify to the smart people behind the fantastic programs listed. Rock on!

- Boost
- Expat
- FastDelegate
- libogg
- libvorbis
- Mersenne Twister
- zlib

Boost

<http://www.boost.org/>

Boost Software License - Version 1.0 - August 17th, 2003

Permission is hereby granted, free of charge, to any person or organization obtaining a copy of the software and accompanying documentation covered by this license (the “Software”) to use, reproduce, display, distribute, execute, and transmit the Software, and to prepare derivative works of the Software, and to permit third-parties to whom the Software is furnished to do so, all subject to the following:

The copyright notices in the Software and this entire statement, including the above license grant, this restriction and the following disclaimer, must be included in all copies of the Software, in whole or in part, and all derivative works of the Software, unless such copies or derivative works are solely in the form of machine-executable object code generated by a source language processor.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR ANYONE DISTRIBUTING THE SOFTWARE BE LIABLE FOR ANY DAMAGES OR OTHER LIABILITY, WHETHER IN

CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Expat

<http://www.jclark.com/xml/expat.html>

Expat License. Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

FastDelegate

<http://www.codeproject.com/KB/cpp/FastDelegate.aspx>

THE WORK (AS DEFINED BELOW) IS PROVIDED UNDER THE TERMS OF THIS CODE PROJECT OPEN LICENSE ("LICENSE"). THE WORK IS PROTECTED BY COPYRIGHT AND/OR OTHER APPLICABLE LAW. ANY USE OF THE WORK OTHER THAN AS AUTHORIZED UNDER THIS LICENSE OR COPYRIGHT LAW IS PROHIBITED.

BY EXERCISING ANY RIGHTS TO THE WORK PROVIDED HEREIN, YOU ACCEPT AND AGREE TO BE BOUND BY THE TERMS OF THIS LICENSE. THE AUTHOR GRANTS YOU THE RIGHTS CONTAINED HEREIN IN CONSIDERATION OF YOUR ACCEPTANCE OF SUCH TERMS AND CONDITIONS. IF YOU DO NOT AGREE TO ACCEPT AND BE BOUND BY THE TERMS OF THIS LICENSE, YOU CANNOT MAKE ANY USE OF THE WORK.

1. Definitions.
 - a. "Articles" means, collectively, all articles written by Author which describes how the Source Code and Executable Files for the Work may be used by a user.
 - b. "Author" means the individual or entity that offers the Work under the terms of this License.
 - c. "Derivative Work" means a work based upon the Work or upon the Work and other pre-existing works.
 - d. "Executable Files" refer to the executables, binary files, configuration and any required data files included in the Work.
 - e. "Publisher" means the provider of the website, magazine, CD-ROM, DVD or other medium from or by which the Work is obtained by You.
 - f. "Source Code" refers to the collection of source code and configuration files used to create the Executable Files.
 - g. "Standard Version" refers to such a Work if it has not been modified, or has been modified in accordance with the consent of the Author, such consent being in the full discretion of the Author.
 - h. "Work" refers to the collection of files distributed by the Publisher, including the Source Code, Executable Files, binaries, data files, documentation, whitepapers and the Articles.
 - i. "You" is you, an individual or entity wishing to use the Work and exercise your rights under this License.
2. Fair Use/Fair Use Rights. Nothing in this License is intended to reduce, limit, or restrict any rights arising from fair use, fair dealing, first sale or other limitations on the exclusive rights of the copyright owner under copyright law or other applicable laws.
3. License Grant. Subject to the terms and conditions of this License, the Author hereby grants You a worldwide, royalty-free, non-exclusive, perpetual (for the duration of the applicable copyright) license to exercise the rights in the Work as stated below:
 - a. You may use the standard version of the Source Code or Executable Files in Your own applications.
 - b. You may apply bug fixes, portability fixes and other modifications obtained from the Public Domain or from the Author. A Work modified in such a way shall still be considered the standard version and will be subject to this License.
 - c. You may otherwise modify Your copy of this Work (excluding the Articles) in any way to create a Derivative Work, provided that You insert a prominent notice in each changed file stating how, when and where You changed that file.
 - d. You may distribute the standard version of the Executable Files and Source Code or Derivative Work in aggregate with other (possibly commercial) programs as part of a larger (possibly commercial) software distribution.
 - e. The Articles discussing the Work published in any form by the author may not be distributed or republished without the Author's consent. The author retains copyright to any such Articles. You may use the Executable Files and Source Code pursuant to this License but you may not repost or republish or otherwise distribute or make available the Articles, without the prior written consent of the Author.

Any subroutines or modules supplied by You and linked into the Source Code or Executable Files this Work shall not be considered part of this Work and will not be subject to the terms of this License.

4. Patent License. Subject to the terms and conditions of this License, each Author hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, import, and otherwise transfer the Work.
5. Restrictions. The license granted in Section 3 above is expressly made subject to and limited by the following restrictions:
 - a. You agree not to remove any of the original copyright, patent, trademark, and attribution notices and associated disclaimers that may appear in the Source Code or Executable Files.
 - b. You agree not to advertise or in any way imply that this Work is a product of Your own.
 - c. The name of the Author may not be used to endorse or promote products derived from the Work without the prior written consent of the Author.
 - d. You agree not to sell, lease, or rent any part of the Work. This does not restrict you from including the Work or any part of the Work inside a larger software distribution that itself is being sold. The Work by itself, though, cannot be sold, leased or rented.
 - e. You may distribute the Executable Files and Source Code only under the terms of this License, and You must include a copy of, or the Uniform Resource Identifier for, this License with every copy of the Executable Files or Source Code You distribute and ensure that anyone receiving such Executable Files and Source Code agrees that the terms of this License apply to such Executable Files and/or Source Code. You may not offer or impose any terms on the Work that alter or restrict the terms of this License or the recipients' exercise of the rights granted hereunder. You may not sublicense the Work. You must keep intact all notices that refer to this License and to the disclaimer of warranties. You may not distribute the Executable Files or Source Code with any technological measures that control access or use of the Work in a manner inconsistent with the terms of this License.
 - f. You agree not to use the Work for illegal, immoral or improper purposes, or on pages containing illegal, immoral or improper material. The Work is subject to applicable export laws. You agree to comply with all such laws and regulations that may apply to the Work after Your receipt of the Work.
6. Representations, Warranties and Disclaimer. THIS WORK IS PROVIDED "AS IS", "WHERE IS" AND "AS AVAILABLE", WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS OR GUARANTEES. YOU, THE USER, ASSUME ALL RISK IN ITS USE, INCLUDING COPYRIGHT INFRINGEMENT, PATENT INFRINGEMENT, SUITABILITY, ETC. AUTHOR EXPRESSLY DISCLAIMS ALL EXPRESS, IMPLIED OR STATUTORY WARRANTIES OR CONDITIONS, INCLUDING WITHOUT LIMITATION, WARRANTIES OR CONDITIONS OF MERCHANTABILITY, MERCHANTABLE QUALITY OR FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTY OF TITLE OR NON-INFRINGEMENT, OR THAT THE WORK (OR ANY PORTION THEREOF) IS CORRECT, USEFUL, BUG-FREE OR FREE OF VIRUSES. YOU MUST PASS THIS DISCLAIMER ON WHENEVER YOU DISTRIBUTE THE WORK OR DERIVATIVE WORKS.
7. Indemnity. You agree to defend, indemnify and hold harmless the Author and the Publisher from and against any claims, suits, losses, damages, liabilities, costs, and expenses (including reasonable legal or attorneys' fees) resulting from or relating to any use of the Work by You.
8. Limitation on Liability. EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW, IN NO EVENT WILL THE AUTHOR OR THE PUBLISHER BE LIABLE TO YOU ON ANY LEGAL THEORY FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES ARISING OUT OF THIS LICENSE OR THE USE OF THE WORK OR OTHERWISE, EVEN IF THE AUTHOR OR THE PUBLISHER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
9. Termination.
 - a. This License and the rights granted hereunder will terminate automatically upon any breach by You of any term of this License. Individuals or entities who have received Derivative Works from You under this License, however, will not have their licenses terminated provided such individuals or entities remain in full compliance with those licenses. Sections 1, 2, 6, 7, 8, 9, 10 and 11 will survive any termination of this License.
 - b. If You bring a copyright, trademark, patent or any other infringement claim against any contributor over infringements You claim are made by the Work, your License from such contributor to the Work ends automatically.
 - c. Subject to the above terms and conditions, this License is perpetual (for the duration of the applicable copyright in the Work). Notwithstanding the above, the Author reserves the right to release the Work under different license terms or to stop distributing the Work at any time; provided, however that any such election will not serve to withdraw this License (or any other license that has been, or is required to be, granted under the terms of this License), and this License will continue in full force and effect unless terminated as stated above.
10. Publisher. The parties hereby confirm that the Publisher shall not, under any circumstances, be responsible for and shall not have any liability in respect of the subject matter of this License. The Publisher makes no warranty whatsoever in connection with the Work and shall not be liable to You or any party on any legal theory for any damages whatsoever, including without limitation any general, special, incidental or consequential damages arising in connection to this license. The Publisher reserves the right to cease making the Work available to You at any time without notice
11. Miscellaneous
 - a. This License shall be governed by the laws of the location of the head office of the Author or if the Author is an individual, the laws of location of the principal place of residence of the Author.
 - b. If any provision of this License is invalid or unenforceable under applicable law, it shall not affect the validity or enforceability of the remainder of the terms of this License, and without further action by the parties to this License, such provision shall be reformed to the minimum extent necessary to make such provision valid and enforceable.
 - c. No term or provision of this License shall be deemed waived and no breach consented to unless such waiver or consent shall be in writing and signed by the party to be charged with such waiver or consent.
 - d. This License constitutes the entire agreement between the parties with respect to the Work licensed herein. There are no understandings, agreements or representations with respect to the Work not specified herein. The Author shall not be bound by any additional provisions that may appear in any

communication from You. This License may not be modified without the mutual written agreement of the Author and You

libogg

<http://www.xiph.org/ogg/>

Copyright (c) 2002, Xiph.org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

libvorbis

<http://www.xiph.org/vorbis/>

Copyright (c) 2002-2004 Xiph.org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Mersenne Twister

<http://www.math.sci.hiroshima-u.ac.jp/~m-mat/MT/MT2002/CODES/mt19937ar.c>

Copyright (C) 1997 - 2002, Makoto Matsumoto and Takuji Nishimura,

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The names of its contributors may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

zlib

<http://www.zlib.net/>

zlib.h -- interface of the 'zlib' general purpose compression library version 1.2.3, July 18th, 2005

Copyright (C) 1995-2004 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution.

Jean-loup Gailly jloup@gzip.org, Mark Adler madler@alumni.caltech.edu



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Confidential unpublished work. © 1995-2005 Dolby Laboratories. All rights reserved.

© 2006-2007 Dolby Laboratories. All rights reserved.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Rovi™

Do not connect the unit through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the television.

Microsoft

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Content owners use Microsoft PlayReady content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content.

Revocation should not affect unprotected content or content protected by other content access technologies.

Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Adobe®

This product features Adobe® Flash® technology. For further information, visit
<http://www.adobe.com/software/flash/about/>.

The wall mount system located at the bottom of the unit is not designed for general usage by the end user.

WD respects the rights of copyright owners to control the uses of their intellectual property.

Information furnished by WD is believed to be accurate and reliable; however, no responsibility is assumed by WD for its use nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of WD. WD reserves the right to change specifications at any time without notice.

Western Digital, WD, the WD logo, WD TV, My Book, and My Passport are registered trademarks in the U.S. and other countries: and WD TV Live Hub, WD Livewire, WD Remote, and WD Photos are trademarks of Western Digital Technologies, Inc. Other marks may be mentioned herein that belong to other companies.

© 2012 Western Digital Technologies, Inc. All rights reserved.

Western Digital
3355 Michelson Drive, Suite 100
Irvine, California 92612 U.S.A.

4779-705046-A05 Jan 2012

Index

A

- Accessories 3
- AccuWeather.com 95
- advanced features 173
- aspect ratio
 - normal 175
 - troubleshooting 205
 - widescreen 175
- audio channel 45
- audio output 175
- audio/video
 - autosource function 6
 - supported interfaces 6
- Audio/Video menus
 - aspect ratio 175
 - audio output 175
 - video output 174
- auto play function 190
- autosource function 6

B

- background 180
- Blockbuster 98

C

- chapter selection 43
- CinemaNow 99, 158
- clear media library 30
- Comedy Time 100
- compatibility 10
 - operating systems 10
- composite AV
 - connection 15
 - connectors 7
- connectors 7

D

- Daily Motion 100
- dashboard 27
 - options 29
- Deezer 101
 - add to playlist 104
 - deleting an account 105
 - exit 105
 - favorite radios 104
 - my music 103
 - player 103
 - playlists 103

- radios 103
- search 105
- signing in 102
- top charts 105
- digital camera support 59
- disk manager 194
- display troubleshooting 205
- DLNA media server 187
- Dolby
 - dynamic range control setting 178
- DRC 178
- dynamic range control setting 178

E

- Eject function
 - button 24, 25
 - procedure 22
- encoding support 193
- environmental compliance (China) 217
- error messages 208

F

- Facebook
 - friends 108
 - newsfeed 108
 - notifications 106
 - photos 107
 - photos options 107
 - sign out 110
 - signing in 106
 - videos 108
 - videos options 109
 - videos player 109
 - wall 108
- features 6
 - AV interfaces 6
 - menus 6
 - supported file formats 210
 - supported file systems 7
 - USB support 7
- file formats
 - image 57
 - playlist 210
 - subtitle 210
 - troubleshooting 209
- file system
 - supported 7
 - troubleshooting 208

Files

- options 67
- sorting 66
- view 66

firmware

- auto detect new 196
- check latest 196

firmware upgrade

- procedure 203
- troubleshooting 207

Flickr 111

- exit 117
- exploring for contents 111
- my contacts 114
- my tags 115
- photostream 116
- player 116
- searching for a member 114
- searching for contents 112

Flingo 118

Flixster 119

folder lock 192

folder sharing 78

- Mac 84
- Windows 7 79
- Windows Vista 82
- Windows XP 84

folder view

- music 50
- photos 58
- videos 37

G

Games 171

GNU general public license 219

GPL software 219

H

HD media player

- error messages 208

HDMI

- connection 13
- connectors 7

Home

- button 23, 24
- error messages 208
- Music 49
- overview 26
- Photos 57
- screen navigation 27
- Setup 173

Videos 36

Home Theater

- connection 16

Hulu Plus 120

I

I/O connectors

- composite AV 7
- HDMI 7
- Toslink 7
- USB ports 7

information panel

- music 54
- photo 64
- videos 46

installation

- composite AV connection 15
- HDMI connection 13, 16
- power connection 11, 13, 14, 15
- procedures 11
- requirements 10
- USB connection 21

iTunes server 187

K

keyboard 34

L

language setup 179

LED indicators 8

- power 8

LED light control 195

Linux 77

Live365 121

- adding a station to your preset list 126
- exit 127
- getting track information 127
- listening 123
- providing song feedback 127
- removing a station from your preset list 126
- searching 125
- sign in 121
- signing out 127

local storage 75

locating media content

- manual search 31
- Search function 32

M

maintenance

- system 203
- media library
 - clear 30
 - exemptions 201
- media library compilation
 - categories 30
 - enable 30
 - error messages 208
 - exemptions 30
 - overview 29, 201
- media server 76, 78
- menus overview 6
- metadata 192
- meta-source manager 192
- Music
 - audio track display 184
 - auto play 190
 - background music info panel 184
 - browser display 185
 - folder view 50
 - media library compilation categories 30
 - menu options 51
 - playback controls 53
 - playback options 54
 - playback procedures 49
 - playback screen 54
 - playback sequence setting 184
 - settings 184
 - shuffle mode 56
 - sort & filter 50
 - supported formats 210
 - use in slideshow 64
- my media library 75

N

- navigation buttons 23, 24
- Netflix 128
 - existing membership 128
 - navigation 128
 - new membership 128
- network services
 - folder sharing 78
 - Web UI 86
- Network settings
 - check connection 187
 - clear login info for network share 188
 - device name 187
 - DLNA media server 187
 - iTunes server 187
 - network setup 187
 - network share server 188

- previously connected wireless
 - network 187
- proxy 188
- workgroup 188
- Network setup
 - Ethernet 68
 - wireless 71
- network share 76
- network share (Linux) 77
- network share (NFS) 77
- NFS 77
- NTSC 175

O

- on-screen keyboard 34
- operating precautions 1
- operating system requirements 10
- Operation
 - auto play 190
 - sync from network folder 190
 - synchronize from USB storage 190

P

- package contents 10
- PAL 175
- Pandora 129
 - bookmarking a song or artist 134
 - providing song feedback 133
- QuickMix 133
- signing in 130
- stations 131
- why a song is in my station's
 - playlist 134
- parental control 193
- Photo settings
 - photo scaling 186
 - slideshow interval time 186
 - slideshow sequence 185
 - slideshow transition 185
- Photos
 - browser display 186
 - large grid view 186
 - list mode 185
 - list view 186
 - small grid view 186
 - thumbnail mode 185
 - digital camera support 59
 - display options 62
 - folder view 58
 - information panel 64
 - media library compilation categories 31

- menu options 60
 - pan options 62
 - rotate 62
 - set as background 61
 - sort & filter 58
 - supported formats 210
 - view 57
 - zoom options 62
- Picasa 135
 - deleting an account 141
 - display options 140
 - featured 141
 - menu options 139
 - My Photos 138
 - people I'm following 141
 - recent 141
 - searching for content 137
 - video player 141
- Play To 6
- playlist
 - supported formats 210
 - videos, playback 37, 50
- power
 - AC connector 7
 - cable connection 11
 - global AC adapter configurations 11
 - LED indicator 8
 - power button 23, 24
 - turn on 13, 14, 15
- power button 8
- product
 - accessories 3
 - obtaining service 217
 - overview 4
 - recording information 3
 - registration 3
 - regulatory compliance 215
 - safety information 1
 - warranty 217, 218
- R**
 - register your media center 194
 - regulatory compliance 215
 - environmental compliance (China) 217
 - remote control 9
 - remote controller 9
 - buttons and functions 23
 - delete music preset 189
 - layout 9
 - settings 189
 - troubleshooting 206
 - virtual 87
 - Web UI 87
 - repeat mode
 - music 55
 - reset switch 7
 - reset to factory defaults 195
 - restart device 196
 - RoHS 217
 - RSS
 - adding feeds 172
 - reading feeds 172
 - Web UI 90
 - RSS ticker 182
- S**
 - Samba 76
 - screensaver
 - delay 181
 - style 181
 - Search function
 - button 23, 25
 - procedure 32
 - SEC Digital Network 141, 159
 - security 192
 - folder lock 192
 - parental control 193
 - select content source
 - local storage 75
 - login 78
 - media server 76, 78
 - my media library 75
 - network share 76
 - network share (Linux) 77
 - network share (NFS) 77
 - Services
 - add to Favorites 94
 - settings
 - apply new values 174
 - Audio/Video menu 174
 - network 187
 - System menu 187
 - Setup 173
 - About 200
 - additional encoding support 193
 - appearance 179
 - audio/video output 174
 - auto detect new firmware 196
 - background 180
 - check latest firmware 196
 - device registration 194
 - device restart 196

- device security 192
 - disk manager 194
 - get content info 191
 - language 179
 - LED light control 195
 - media library 190
 - meta-source manager 192
 - mobile access 197
 - music settings 184
 - navigation buttons 174
 - photo settings 185
 - remote controller settings 189
 - reset to factory defaults 195
 - RSS ticker 182
 - screensaver delay 181
 - screensaver style 181
 - select time zone 190
 - setup menu bar 173
 - setup screen navigation 174
 - theme 179
 - video calibration 179
 - video settings 182
 - setup 173
 - shared folder 77
 - shares
 - Windows 76
 - Shoutcast Radio 142
 - about 145
 - adding a station to your favorites list 143
 - assigning a preset button to a station 144
 - listening 142
 - listening to a station in your favorites list 144
 - removing a station from your preset list 145
 - searching 143
 - top radios 145
 - slideshow
 - interval time 186
 - music background 64
 - playback controls 65
 - sequence setting 185
 - shuffle and repeat 185
 - transition 185
 - troubleshooting 206
 - view 64
 - SnagFilms 146
 - Software, GPL 219
 - Spotify 147
 - adding a track to a playlist 148
 - adding a track to the play queue 150
 - browse album artist 148
 - collaborate on a playlist 149
 - delete account 152
 - inbox 151
 - people 151
 - radios 151
 - searching 148
 - share 150
 - third party licenses 219
 - top lists 151
 - what's new 151
 - subtitle
 - adjust 44
 - border setting 183
 - default setting 183
 - enable 43
 - font size setting 183
 - supported formats 210
 - sync
 - from network folder 190
 - from USB storage 190
 - system compatibility 10
 - system reset
 - service accounts 195
 - system 195
- ## T
- temperature display 96
 - theme 179
 - thumbnail support for media files 31
 - time
 - setting 190
 - Toslink
 - connectors 7
 - troubleshooting 205
 - audio 206
 - content playback 208
 - display 205
 - error messages 208
 - firmware upgrade 207
 - media library compilation 208
 - remote control 206
 - USB device 206
 - TuneIn 153
 - adding a station to your preset list 155
 - getting station information 156
 - listening 154
 - listening to a station in your preset list 155

- removing a station from your preset list 155
- reporting problems 156
- searching 154
- sign in 153
- signing out 157
- TwonkyMedia 88

U

- USB device
 - connection 21
 - disconnection 22
 - Eject button 24, 25
 - error messages 208
 - media library 201
 - media library compilation 29
 - removal 22
 - supported devices 7
 - troubleshooting 206
 - USB ports 7

V

- Video
 - menu options 38
- video output
 - component 175
 - composite 174
- Video settings
 - browser display 183
 - subtitle border 183
 - subtitle default 183
 - subtitle font size 183
 - video sequence 183

- Videos
 - aspect ratio 175
 - audio channel 45
 - auto play 190
 - browser display
 - gallery view 183
 - large grid view 183
 - list view 183
 - preview view 183
 - small grid view 183
 - DVD navigation 47
 - folder view 37
 - information panel 46
 - media library compilation categories 31
 - pan options 45
 - playback controls 42
 - playback options 43
 - playback procedures 36

- settings 182
- sort & filter 37
- subtitles 43
- supported formats 210
- video calibration 179
- video output setting 174
- view chapter 43
- zoom options 45

- videos
 - supported resolutions 7
- Vimeo 157

W

- warranty information 217
 - Australia/New Zealand 218
- WatchMojo 159
- WD Link 18
- WD Photos 197
 - upload content 199
- weather 95
 - change temperature display 96
- Web UI 86
 - launching 86
 - logout 90
 - RSS 90
 - status bar 90
 - support 90
 - system 87
 - TwonkyMedia 88
- widescreen setup 175
- Windows
 - shares 76
- Windows 7
 - Play To 6
- wireless network profiles 187
- wireless network setup 71

Y

- Yota Music 159
- YouTube 160, 170
 - adding videos to a playlist 169
 - adding videos to favorites 168
 - deleting an account from the media player 169
 - encoding support 169
 - featured videos 164
 - like or dislike videos 168
 - most popular 165
 - most viewed 165
 - my account 136, 161
 - options 166

player 166
preferences 166
related videos 167
restricted video content 169
search history 138, 163
searching for videos 162
signing in 135, 160
top favorites 163
top rated 165

Z

zoom options
 photos 62
 videos 45