 


使用說明書

M16

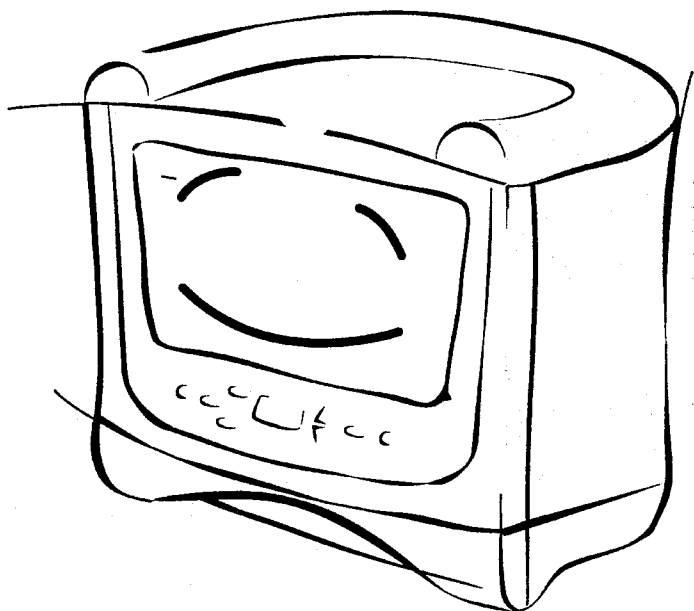

 
www.whirlpool.com.cn

安裝指引

接駁電線之前

請檢查額定電壓銘牌上的電壓是否與您家中的電壓相配合。

請將微波爐放置在平坦及穩固的地方，該處必須足以承托爐具與食物器皿的重量。放置時請務必小心。



請將微波爐放置在遠離熱源的地方。微波爐附近的溫度必須低於 35℃。為了確保通風良好，微波爐頂部必須留有 8 厘米的空間。確保微波爐四周與底部空氣流通。本微波爐可以在 +5℃ 至 +35℃ 的室溫中使用。

必須確定微波爐並無損壞。可檢查爐門關上時是否緊貼門框，以及內門的封邊是否完整無缺。將爐具內配件取出，然後用柔軟的濕布清潔爐腔內部。

電線、插頭如有損壞，或爐具不能正常操作，或受到損壞或翻倒，則切勿使用微波爐。切勿將電線或插頭浸入水中，並避免接觸灼熱的表面，否則會引致觸電、火警或其他意外。

接駁之後

微波爐只有在爐門緊閉之後才能操作。

如將微波爐放置在電視機、收音機或天線附近，可能會影響接收或引起干擾。



本產品必須接駁地線。用戶如果不遵守這項規定，而導致任何人身、動物傷亡與財物損失，製造商概不負責。

重要安全注意事項

請仔細閱讀本說明書並留做日後參考。

切勿在微波爐內或其附近加熱或使用易燃物品。此等物品所釋出的氣體，可能會引起火警或爆炸。

本爐具專為加熱食物或烹煮食物而設計。切勿用作處理腐蝕性化學品或氣體，因此本微波爐並不適合工業或實驗用途。

微波爐不宜用來烘干衣物、紙張、香料、草藥、木制品、花朵、水果或其他易燃物品，以免發生火警。

如物品在微波爐內/外起火或冒煙，必須保持爐門關閉，然後將電源插頭拔去，也可以關掉電源總開關或其它可以切斷電源的設備。

在使用前，用戶應檢查器皿是否適用於微波爐。

切勿將食物煮得過熱，以免發生火警。

請務必經常留意爐內狀況，尤其當使用紙制物品、塑膠或其他易燃材料所制造的器皿時。烹煮食物時，紙張可能會起火燃燒或燒焦，塑膠甚至可能會被熔解。

警告

孩童只有在完全掌握正確使用方法的情況下，才能在沒有成人的監督下使用本微波爐。使用前必須確保他們能夠安全地使用本產品，並明白不適當使用微波爐帶來的嚴重后果。

 
爐門打開時，切勿倚著爐門或讓孩童搖動爐門，以免發生意外。



重要的安全注意事項

警告

請不要使用微波爐來加熱密封容器內的食物或液體，因為在開啟容器時，上升的氣壓可能會導致容器損壞或引起爆炸。

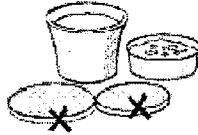

警告

請定期檢查爐門的密封件及其附近位置，確保他們沒有損壞。如果已出現損壞，切勿使用本微波爐，直至專業的維修人員維修妥當為止。

雞蛋

切勿使用微波爐烹煮或加熱連殼或不連殼的原只雞蛋，因為雞蛋可能會爆開。



注意事項

一般注意事項

本產品僅供一般家居使用！

爐內沒有食物時，切勿使用微波爐，否則可能會對爐具造成損壞。

爐頂的排氣孔必須保持暢通。若爐具抽氣或排氣受阻的話，均會對爐具造成損壞，以及影響烹調效果。

 
假如您要學習使用的技巧，可把一杯清水放置在爐內，讓清水將微波能量吸收，以免損壞爐具。

切勿在室外放置或使用微波爐。爐具不應存放在廚房水槽、泳池附近以及潮濕的地窖等地方。

切勿使用爐腔存放物件。

切勿移除爐腔內壁上的微波出口防護檔板。它們可以防止油脂或食物微粒進入微波孔中。

食物在放入微波爐前，應先除去紙袋或膠袋口的金屬封口線。

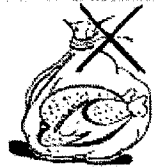

如燒烤功能並不常用，食物殘粒及脂肪也許會在燒烤元件之間積存，並有引致火警的危險。要減少此等危險的發生，請每個月使用一次燒烤功能，每次使用 10 分鐘，以清潔燒烤元件。

油炸

切勿使用微波爐來油炸食物，因為油的溫度無法控制。

烹調之後，觸碰容器、爐具部件及烤盤前，請務必使用隔熱墊或隔熱手套，



以免燙傷。

注意事項

流質食物

用微波爐加熱的飲品或清水，即使煮得過熱，甚至超過沸點，也未必會出現沸騰的汽泡，但是液體卻可能會突然溢出造成燙傷。



為了避免發生上述情況，請遵守下列幾點：

1. 請避免使用窄頸的直身容器。
2. 將流質食物放入爐內之前，請先加以攪拌，並將調羹留在容器內。
3. 流質食物加熱之後，請讓它在爐內停留片刻，攪拌后再將容器小心拿出。

小心

請經常參考微波爐烹飪食譜的指引，尤其是在烹煮或加熱含有酒精的食物時。

配件

一般資料

市面上出售的配件種類繁多，請在購買之前先確定是否適合本微波爐使用。

將食物及配件放進微波爐時，請確保它們沒有直接觸及爐壁或爐頂。

在使用金屬配件或帶有金屬材質的配件時，尤須加倍小心。

在微波爐運作時，如果配件的金屬部分誤觸微波爐的內壁或頂部的話，可能會產生火花并導致微波爐損壞。

在使用微波爐之前，請確保轉盤可自由轉動。

煮食前，請確保使用的器皿適用於微波爐，并可讓微波通過。

轉盤托架

請將轉盤托架放置在玻璃轉盤下。

切勿在轉盤托架上放置其他器皿。

 
* 把轉盤托架裝入微波爐中。



玻璃轉盤

可使用玻璃轉盤配合各種烹調方法。它可以避免食物碎屑及肉汁沾污微波爐內腔。

* 請將玻璃轉盤置放在轉盤托架上。



奶樽托架

若盛裝嬰兒食品的奶樽過高，無法直立放進微波爐內時，請使用隨爐專配奶樽托架。關於翻熱嬰兒食品的詳細資料，請參閱“

翻熱嬰兒奶及奶樽消毒”一節。



燒烤架

在使用燒烤功能時，請將食物放置在燒烤架上，這可以讓微波爐將食物的表面迅速烤成金黃色。

燒烤架只適用於燒烤或微波燒烤功能。



啟動保護/孩童安全鎖

此自動安全鎖功能會在微波爐回復“備用”模式后的 1 分鐘后啟動。即當時鐘顯示 24 小時時，顯示窗便會顯示 door（爐門）的字樣。如果沒有放入食物便開始操作微波爐，顯示窗便會顯示 door（爐門）的字樣。

安全鎖必須在爐門開啟及關閉后（例如將食物放入爐中）才會解開。

如何暫停或終止烹調程序

暫停烹煮程序：

如果您想查看食物的烹調情況、攪拌或翻轉食物，只要打開爐門，烹煮程序便會暫時停止。原先的設定值會維持五分鐘。



如果您不想繼續烹調過程：

請取出食物，關上爐門，然後按下“Stop”（停止）掣。



重新啟動烹煮程序：

請關上爐門並按下“極速啟動”掣一次，烹煮程序便會從暫停的階段繼續運作。若是按下“Jet Start”（極速啟動）兩次，烹煮時間便會增加 30 秒。



烹調過程結束後，微波爐會於 5

分鐘內，每分鐘發出一個‘啞’

聲訊號。請按下“Stop 停止”

 
掣，或開啟爐門，取消啞聲訊號。



注意：在完成烹調程序后，將爐門開啟，然後關上，那麼原先的設定值只會維持 30 秒。



時鐘



1. 按 " Stop (停止) " 掣。
2. 按住 " Clock (時鐘) " 掣 3 秒。
3. 按 +/- () 掣設定小時時數。
4. 再按 " Clock (時鐘) " 掣。
5. 按 +/- () 掣設定分鐘數。
6. 再按 " Clock (時鐘) " 掣。

 
時鐘便已設定完成并在運作中。

如果您想在設定好時間之后，將設定好的時鐘從顯示窗中移除的話，您只要再按住 Clock 掣 3 秒鐘，然後按下 Stop (停止) 掣即可。

如要恢復時鐘功能，請重復上述程序。



計時器




若您需要廚房計時器，來計算不同的烹調時間，例如煮雞蛋、意大利面條或在烤焗前讓生面團發酵等等，便可使用此計時器功能。

1. 按 " Clock (時鐘) " 掣。
2. 按 +/- () 掣來設定所需的時間。
3. 按 " Jet Start (極速啟動) " 掣。

當計時器完成倒數計時之后，您便會听到聲響訊號。



 使用微波烹調及加熱



一般烹調及加熱食物便可使用此功能，例如烹煮及加熱蔬菜、魚類、薯仔及肉類。

1. 按 +/- () 來設定烹調時間。
2. 重復按 " 火力 (power) " 掣來設定火力。
3. 按 " Jet Start (極速啟動) " 掣。

在烹調過程開始之后：

 
您可以按下 " Jet Start (極速啟動) " 掣來延長烹調時間。每按一次此掣，烹調時間便會延長 30 秒。或者您也可以按下 +/- 掣來增加或減少烹調時間。

此外，您也可以按下 " 火力 (power) " 掣來更改烹調火力。按第一下會顯示目前使用的火力，重復按 " 火力 (power) " 掣便可更改火力等級。





極速解凍



此功能只適用於將肉類、魚肉與家禽解凍。極速解凍只適用於淨重量介於 100-1500 克之間的食物。

1. 請按 " Jet Defrost (極速解凍) " 掣。
2. 按 +/ - 掣來設定食物重量。
3. 按 " Jet Start (極速啟動) " 掣。



在解凍過程中，本爐具會停止并提示您 "翻轉" 食物。

turn
Food

- 打開爐門
- 翻轉食物
- 關閉爐門并按下 "極速啟動" 掣重新啟動。

如果食物的重量少於或多於建議的重量的話：請依照 '如何使用微波烹調及加熱' 一節的指示，然後選擇 160W 的火力來解凍。

注意：如果沒有翻轉食物，微波爐會在 2 分鐘后繼續運作，但解凍時間會比較長。

如果食物溫度比急凍溫度 (-18°C) 高的話，請選擇較輕的食物重量。

如果食物溫度比急凍溫度 (-18°C) 低的話，請選擇較重的食物重量。

極速啟動



 
此功能適用於快速翻熱含水量高的食物，例如清湯、咖啡或茶。

按此掣可自動啟動微波爐，并以最高的微波火力及 30 秒的設定時間烹調食物。每再按一次便可增加烹調時間半分鐘。

在設定功能后，此掣可用作普通啟動的掣。




如何使用燒烤功能



此功能可以快速地將食物表面烤成金黃色。

1. 按 " Grill (燒烤) " 掣。

2. 按 +/- () 掣來設定時間。

3. 按 " Jet Start (極速啟動) " 掣。

在使用燒烤功能時，請不要讓微波爐的爐門長時間開啟，因為這會導致燒烤的溫度降低。

注意：

在烹煮食物的時候按下 Grill (燒烤) 掣可以開啟及關閉燒烤功能。在燒烤功能關閉時，計時器會繼續倒數計時。

 
注意！

使用燒烤功能前，請先確定您所使用的是耐熱且可在微波爐中安全使用的器皿。

切勿使用塑膠器皿來燒烤食物。這會導致塑膠器皿熔化。也不可以使用木質或紙質的器皿。




如何使用燒烤与微波功能



可使用此功能來烹調脆皮食物、寬面條、家禽及烤薯仔等食物。

1. 按 " Grill (燒烤) " 掣。

2. 按 " Power (火力) " 掣來設定微波火力。

3. 按 +/- () 掣來設定時間。

4. 按 " Jet Start (極速啟動) " 掣。

 
此功能運作時，您可以按 Grill (燒烤) 掣來開啟或關閉燒烤功能。在使用燒烤功能時，可供使用的最大微波火力已被原厂的預設數值所限制。

將微波火力降至 0 瓦，可以關掉微波功能。當調校到 0 瓦時，微波爐將切換至燒烤模式。





記憶

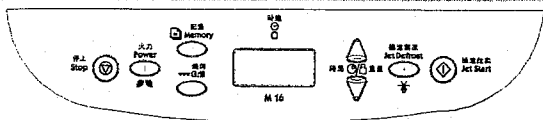

記憶功能提供了一個便捷的方法快速記下自己喜歡的設置。

記憶功能可以隨時儲存目前顯示的設置。



- 1 按下記憶掣。
- 2 按下極速啟動掣。。

當微波爐插上電源或停電后，記憶功能將返回 1 分鐘 / 750 瓦的默認設置。

儲存設置：

- 1 設定時間及火力。
- 2 按住記憶掣不放，3 秒后听到信號音，熨屏上顯示“END”。這時設置已被儲存。可以任意重新編排記憶。

維護保養及清潔

微波爐只要勤加清潔，便是最佳的維護方式。但在清潔時，必須關掉電源。

切勿使用金屬刷清潔爐具內壁，否則可能會刮花內壁表面。



應定期取出轉盤與轉盤托架，然後清潔爐腔底部，尤其是在翻倒食物之後，更應盡快清潔。

本爐具經過精心設計，當轉盤安置妥當之後才能操作。

在取出轉盤清潔時，切勿使用微波爐。

請使用溫和的清潔劑、水與軟布，來擦拭爐腔內壁、爐門的前後及開口位置。

爐門必須保持清潔，不要讓油漬及食物的殘渣堆積在爐門周圍。

如要清除頑固的污漬，可以將一杯清水放進微波爐內，然後加熱 2 至 3 分鐘，水蒸汽便能夠將污漬溶解。

如要消除爐具內的難聞氣味，可以把一杯混有檸檬汁的清水放入爐內，然後煮沸數分鐘即可。

切勿使用砂粉、金屬刷墊、砂布等來清洗爐具，否則可能會使控制板、爐具內外四壁受損，只需用海綿沾上性質溫和的洗潔精，或者噴上玻璃清潔劑的廚房用紙巾，便可以清潔爐具。

切勿將玻璃清潔劑直接噴在爐具上。

燒烤元件並不需要清洗，因為燒烤時的熱力會將污垢燒去，但是燒烤元件下方的爐腔頂部則需要定期清潔。請使用溫水、清潔劑與海綿進行清潔。

如果燒烤功能並不常用，每月都必須將此功能運作 10 分鐘，以燒掉污垢，從而減少發生火警的風險。

可放在洗碗機內清洗的配件：

轉盤托架



玻璃轉盤



奶樽托架



燒烤架



問題解決指南

如果微波爐失靈，請檢查下列各項之后再致電 注意：

維修中心：

- * 轉盤與轉盤托架是否固定就位
- * 插頭是否完全插入插座
- * 爐門是否完全關閉
- * 檢查保險絲，並確定已接上電源
- * 等待 10 分鐘之后再嘗試操作
- * 再度嘗試操作之前，請先開啟爐門，然后再將其關上

如果微波爐仍然無法運作，請致電維修服務中心。任何不必要的維修工作，本公司可能會向用戶收取費用。

在您致電維修服務中心時，請說明微波爐的機身編號與型號（請參閱維修服務的標籤）。相關的詳細資料，請參閱保用証。

如需更換電線，請務必使用原產品，并由原厂的維修技師負責更換。有關的電源線可聯絡我們的維修中心。

警告

維修工作應交由制造厂專門訓練過的維修人員來執行。其他任何人拆修微波爐都可能造成危險。任何維修工作，需要移除防止微波爐能源外泄的蓋子，均會造成危險。

切勿移走任何蓋子。



環保建議

包裝



如循環標志所示，包裝盒可完全循環再用。請按照本港廢物處理條例，將具有潛在危險性的包裝材料（膠袋、聚苯乙烯等）小心存放，遠離孩童。

爐具

本爐具是由可循環再用的材料制成。如您想棄置爐具，必須按照本港廢物處理條例，才可丟棄。在棄置前，請切斷爐具的電源線，確保爐具不能接上電源。

選擇火力水平

火力

750 瓦

使用於

加熱飲品、水、清湯、咖啡、茶或其他高水分的食物。如食物含有雞蛋或忌廉，請選擇較低火力。

500 瓦

烹調蔬菜、魚、肉等。

需要小心烹調，例如高蛋白質醬汁、芝士和用雞蛋做的菜肴，以及完成烹調煲仔菜。

350 瓦

慢火煨熟。

160 瓦



解凍。軟化牛油、芝士與雪糕。

0 瓦

只限於使用計時器的時候。

技術資料

型號	M 16
供應電壓	230 V/50 Hz
額定輸入功率	1750 W
保險絲	10 A
微波輸出功率	750 W
燒烤輸入功率	650 W
	高 x 寬 x 深 (毫米)
機身尺寸	356 x 392 x 350
爐室腔	149 x 290 x 290

符合 IEC 705


國際電工委員會 SC. 59H，為不同類型的微波爐加熱性能測試比較，制定測試標準。

測試	重量	大約時間	火力水平	容器
12.3.1	750 克	9.5 分鐘	750 瓦	Pyrex 3.220
12.3.2	475 克	5 分鐘	750 瓦	Pyrex 3.827
12.3.3	900 克	15 分鐘	750 瓦	Pyrex 3.838
13.3.0	500 克	2.5 分鐘	極速解凍	

4619-652-64281

Instructions for use

 MAX 16

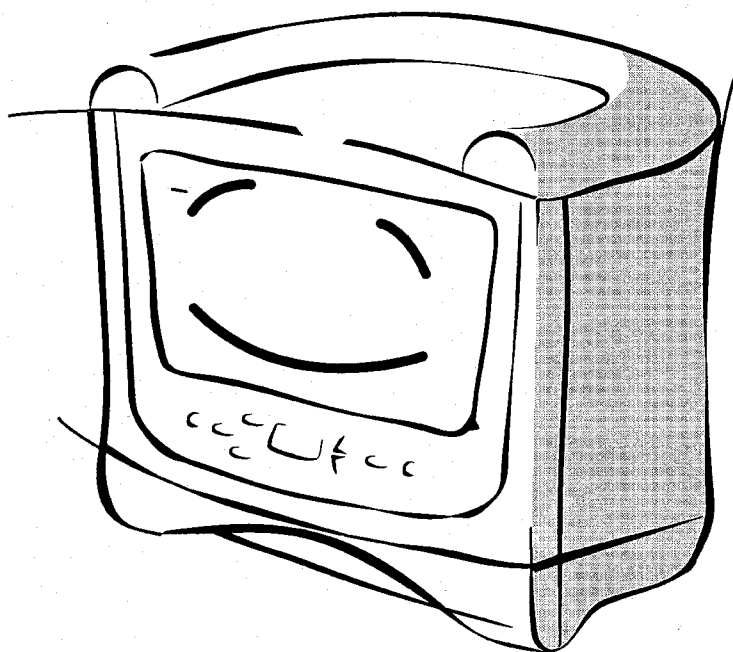


www.whirlpool.com

INSTALLATION

PRIOR TO CONNECTING

Check that the voltage on the rating plate corresponds to the voltage in your home.

 Place the oven on a stable, even surface that is strong enough to hold the oven and the food utensils you put in it. Use care when handling.

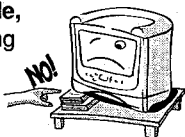

Position the oven at a distance from other heating sources. The cooling air, which is taken in by the oven, must not exceed 35°C temperature. For sufficient ventilation there must be a space of at least 8-cm above the oven. Ensure that the space underneath, above and around the oven is empty to allow for proper airflow. The oven can operate in an ambient temperature ranging from +5°C to +35°C.

 
Ensure that the appliance is not damaged. Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth.

Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

AFTER CONNECTING

The oven can be operated only if the oven door is firmly closed.

Poor television reception and radio interference may result if the oven is located close to a TV, radio or aerial.

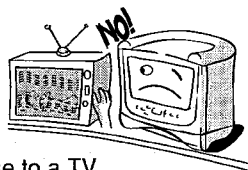

The earthing of this appliance is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Do not heat, or use flammable materials in or near the oven. Fumes can create a fire hazard or explosion.

Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.

If material inside / outside the oven should ignite, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.

 
Do not over-cook food. Fire could result.

Do not leave the oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

WARNING!

Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Never lean on the door or allow a child to swing on it. Injury could result.

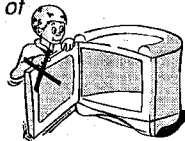

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING!

Do not use your microwave oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.



⚠ WARNING!

The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.

EGGS

Do not use your microwave oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.



PRECAUTIONS

GENERAL

This appliance is designed for domestic use only!

The appliance should not be operated without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.

The ventilation openings on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.

If you practice operating the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

Do not store or use this appliance outdoors. Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

Do not use the cavity for any storage purposes.

Do not remove the microwave inlet protection plates located on the side of the oven cavity wall. They prevent grease & food particles from entering the microwave inlet channels.

Remove wire twist-ties from paper or plastic bags before placing bag in the oven.



If the Grill function is not used regularly, there is a risk of fire, due to the possible buildup of foodparticles and fat, beneath the grillelement. To reduce this risk, the Grill only function should be run for 10 minutes once a month to clean the elements.

DEEP-FRYING

Do not use your microwave oven for deep-frying, because the oil temperature cannot be controlled.

Use hot pads or oven mitts to prevent burns, when touching containers, oven parts, and pan after cooking.



PRECAUTIONS

LIQUIDS

E.g. beverages or water in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.



To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.

CAREFUL

Always refer to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.



After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.

Ensure the Lid and the Teat is removed before heating!

ACCESSORIES

GENERAL

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

When you put food and accessories in the microwave oven, ensure that they do not come in contact with the interior of the oven. This is especially important with accessories made of metal or metal parts.

 
If accessories containing metal comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

Always ensure that the turntable is able to turn freely before starting the oven.

Ensure that the utensils you use are oven proof and allow microwaves to pass through them before cooking.

TURNTABLE SUPPORT


Use the turntable support under the Glass turntable. Never put any other utensils on the turntable support.



* Fit the turntable support in the oven.

GLASS TURNTABLE

 Use the Glass turntable with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.



* Place the Glass turntable on the turntable support.

 
BABY BOTTLE HOLDER

Use the Baby bottle Holder when heating baby food in bottles that are too tall to stand-alone in the oven. Please see also, the chapter "Precautions", for more information about heating baby food. (Not available in the UK and Ireland).



WIRE RACK

Use the wire rack to put food on when using the Grill function. This will quickly give a pleasant brown surface to the food.



START PROTECTION / CHILD LOCK

This automatic safety function is activated one minute after the oven has returned to "stand by mode".

 
The door must be opened and closed e.g. putting food into it, before the safety lock is released.

If you attempt to operate the oven without putting food into it, the display will show "door".

HOW TO PAUSE OR STOP COOKING

To pause cooking:

The cooking can be paused to check, turn or stir the food by opening the door. The setting will be maintained for 5 minutes.

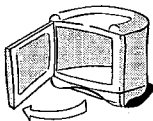

To continue cooking:

Close the door and press the Start button ONCE. The cooking is resumed from where it was paused. Pressing the Start button TWICE will increase the time by 30 seconds.



If you don't want to continue cooking:

Remove the food, close the door and press the STOP button



 
Ü: **A beep will signal** once a minute for 5 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.



Note: The oven will only hold the settings for 30 seconds if the door is opened and then closed after the cooking is finished.



CLOCK

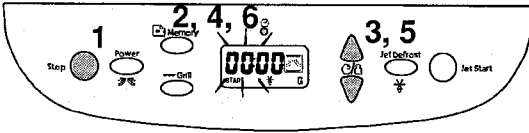

1. Press the Stop button.
2. Press the Clock button for 3 seconds.
3. Press the +/- buttons () to set the hours.
4. Press the Clock button again.
5. Press the +/- buttons () to set the minutes.
6. Press the Clock button again.

 
The clock is set and in operation.

If you wish to remove the Clock from the display once it has been set, simply press the Clock button again for 3 seconds and then press the Stop button.

To reinstate the Clock, follow the above procedure.



TIMER

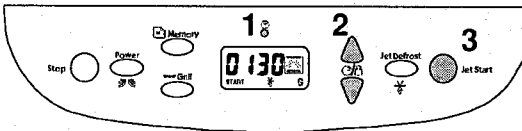


Use this function when you need a kitchen timer to measure exact time for various purposes such as cooking eggs, pasta or letting the dough rise before baking etc.

1. Press the clock button.
2. Press the +/- buttons () to set the desired length of the timer.
3. Press the Start button.

An acoustic signal will be heard when the timer has finished to count down.




 COOK & REHEAT WITH MICROWAVES

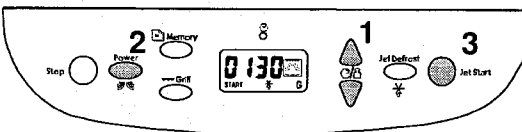

Use this function for normal cooking and reheating, such as vegetables, fish, potatoes and meat.

 1. Press the +/- buttons () to set the time.
2. Press the power button repeatedly to set the power.
3. Press the Start button.




Once the cooking process has been started:


The time can easily be increased in 30-second steps by pressing the Start button. Each press increases the time with 30 seconds. You may also alter the time by pressing the +/- buttons () to increase or decrease the time.

Pressing the power button may also change the power level. The first press will show you the current powerlevel. Press the power button repeatedly to change power level.

 JET DEFROST

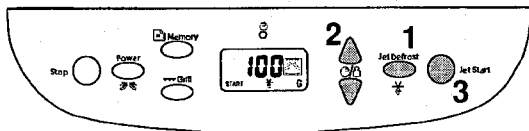

Use this function for defrosting Meat, Fish & Poultry **ONLY**. Jet Defrost should only be used if the netweight is between 100 - 1500g.

1. Press the Jet Defrost button.
2. Press the +/- buttons () to set the weight of the food.
3. Press the Start button.



Midway through the defrosting process the oven stops and prompts you to "turn food".

Turn
Food

- Open the door.
- Turn the food.
- Close the door and restart by pressing the Jet Start button.

Note: the oven continues automatically after 2 min if the food hasn't been turned. The defrosting time will be longer in this case.

If the weight is lesser or greater than recommended weight:

Follow the procedure for "How to cook and reheat with microwaves" and choose 160 W when defrosting.


If the food is warmer than deep-freeze temperature (-18°C), choose lower weight of the food.

 
If the food is colder than deep-freeze temperature (-18°C), choose higher weight of the food.

JET START




This function is used for quick reheating of foods with a high water content such as; clear soups, coffe or tea.

Press to automatically start with full microwave power level and the cooking time set to 30 seconds. Each additional press increases the time with 30 seconds. You may also alter the time by pressing the +/- buttons () to increase or decrease the time after the function has started.



GRILL

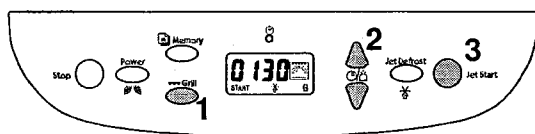 

Use this function to quickly give a pleasant brown surface to the food.



1. Press the Grill button.
2. Press the +/- buttons (0.5) to set the time.
3. Press the Start button.

Do not leave the oven door open for long periods when the Grill is in operation, as this will cause a drop in temperature.

 
Note:

Pressing the Grill button during cooking switches the Grill element on and off. The timer will continue to count down when the Grill element is turned off.

IMPORTANT!

Ensure that the utensils used are heat resistant and ovenproof before grilling with them. **Do not** use plastic utensils when grilling. They will melt. Items of wood or paper are not suitable either.

GRILL & MICROWAVES

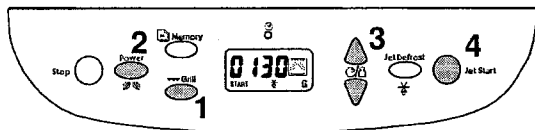

Use this function to cook such foods as Gratin's, Lasagne, Poultry and Baked potatoes.

 


1. Press the Grill button.
2. Press the Power button to set the microwave power.
3. Press the +/- buttons (0.5) to set the time.
4. Press the Start button.

During operation you can switch the Grill element on/off by pressing the Grill button. The Max. possible microwave power level when using the Grill is limited to a factory-preset level.

It is possible to switch the microwaves off by reducing the microwave power level to 0 W. When 0 W is reached, the oven switches to Grill only mode.


MEMORY

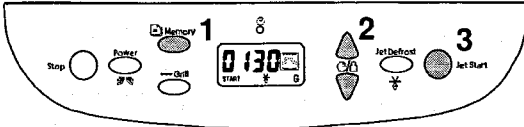

1. Press the Memo button.
2. Press the Start button.

The Memory function provides you with an easy way to quickly recall a preferred setting.

 The principle of the Memory function is to store whatever setting that is currently displayed.



When the appliance is plugged in or after a power failure, your Memo function will have stored - 1 minute and 750 W as default setting.

 
-To store a setting:

1. Set time and power.
2. Keep the Memo button pressed for 3 seconds until an acoustic signal is heard and the word "End" is displayed. The setting is now stored. You may reprogram the memories as many times as you wish.

MAINTENANCE & CLEANING

Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected.

Do not use metal scouring pads on the inside of the oven cavity. They will scratch the surface.

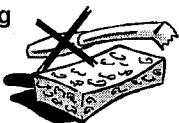

At regular intervals, especially if spillovers have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.

This oven is designed to operate with the turntable in place.

Do not operate the microwave oven when the turntable has been removed for cleaning.

Use a mild detergent, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

Do not allow grease or food particles to build up around the door.

For stubborn stains, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

Adding some lemon juice to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.

Abrasive cleansers, steel-wool pads, gritty wash cloths, etc. can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.

Do not spray directly on the oven.

The Grill element does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with warm water, detergent and a sponge.

If the Grill is not used regularly, it should be run for 10 minutes a month to burn off any splashes, in order to reduce the risk of fire.

DISHWASHER SAFE:

Turntable support.



Glass turntable.



Baby Bottle Holder

(Not available in the UK and Ireland).



Wire Rack



TROUBLE SHOOTING GUIDE

If the oven does not work, do not make a service call until you have made the following checks:

- * The Turntable and turntable support is in place.
- * The Plug is properly inserted in the wall socket.
- * The Door is properly closed.
- * Check your Fuses and ensure that there is power available.
- * Wait for ten minutes and then try to operate the oven once more.
- * Open and then close the door before you try again.

This is to avoid unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.

Important:

If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organization. The mains cord may only be replaced by a trained service technician.

ur:WARNING!

Service only to be carried out by a trained service technician.


It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.

Do not remove any cover.



ENVIRONMENTAL HINTS

Packing

 The packing box may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.

Appliance

The appliance is built from reusable materials. If you decide to scrap the appliance, it must be disposed of in compliance with local waste disposal regulations. Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.

CHOOSING POWER LEVEL

Level	To be used for:
750 W	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power. Cooking of vegetables, fish, meat etc.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	Simmering stews.
160 W	✳ Defrosting. Softening butter, cheeses and ice cream.
0 W	When using the Timer only.

TECHNICAL DATA

Model	MAX 16
Supply voltage	230 V/50 Hz
Rated Power Input	1750 W
Fuse	10 A (UK 13 A)
MW output power	750 W
Grill	650 W
	H x W x D
Outer dimensions:	356 x 392 x 350
Oven compartment:	149 x 290 x 290

In accordance with IEC 705.

The International Electrotechnical Commission, SC. 59H, has developed a standard for comparative testing of heating

Test	Amount	Approx. time	Power level	Container
12.3.1	750 g	9 ½ min	750 W	Pyrex 3.220
12.3.2	475 g	5 min	750 W	Pyrex 3.827
12.3.3	900 g	15 min	750 W	Pyrex 3.838
13.3.0	500 g	2 ½ min	Jet defrost	



4619 694 38561

