

**MAX 28**

**Gebrauchsanweisung**  
Instructions for use  
**Mode d'emploi**  
Gebruiksaanwijzing  
**Istruzioni per l'uso**



**Brugsanvisning**  
Bruksanvisning  
**Käyttöohje**  
Manual de utilização  
**Instrucciones para el uso**



**Οδηγίες χρήσης**  
Instrukcje użytkowania  
**Használati utasítás**  
Инструкция за използване  
**הוראות שימוש**



**Návod k použití**  
Návod na použitie  
**Instrucțiuni de utilizare**  
Инструкции по эксплуатации  
**تعليمات وكيفية الاستعمال**

[www.whirlpool.com](http://www.whirlpool.com)



 
## 安裝

### 接駁電線之前

請檢查額定電壓銘牌上的**電壓**是否與您家中的電壓相符。

請勿撕下微波爐內壁側面的**進氣孔保護膜**。這些保護膜可以防止油脂及食物殘渣進入微波爐的進氣通道中。

請將微波爐放置在平坦及穩固的地方，該處必須足以承托爐具與食物器皿的重量。放置時請務必小心。

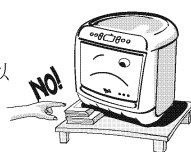

請將微波爐放置在遠離熱源的地方。微波爐附近的溫度必須低於 35°C。為確保通風良好，微波爐上方必須保留至少 8 公分的空間。確保微波爐的四周及底部空氣流通。本微波爐可以在 +5°C 至 +35°C 的室溫中使用。

### 必須確定微波爐沒有損壞。

 
請檢查爐門關上時是否緊貼門框，並確定內門的封邊是否完好無缺。將微波爐內的配件取出，然後用柔軟的濕布清潔微波爐內部。

微波爐主電線或插頭如有損壞，或微波爐無法正常運作，或受到損壞或翻倒，則**切勿使用**。切勿浸濕電源線或插頭。電源線應遠離較熱的表面，否則可能會引致觸電、火災或其他意外。

### 連接之後

微波爐**只有在爐門緊閉之後才能操作**。

如將微波爐放置在電視機、收音機或天線附近，可能會使**電視收訊變弱**或對收音機收訊造成干擾。

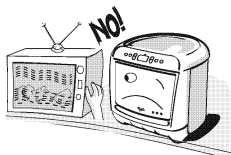

### 本產品必須接駁地線。

使用者如果不遵守這項規定而導致任何人命、動物傷亡與財物損失，生產商概不負責。

對於使用者不依上述指示而造成的問題，  
生產商概不負責。

## 重要安全指示

請仔細閱讀本說明書，並妥善保存以備日后參考。

**請勿在微波爐內或附近加熱或使用易燃物品。**此等物品所釋出的氣體，可能會引起火災或爆炸。

本微波爐專為加熱或烹調食物而設，不適用於工業或實驗室用途。因此，**切勿**用本爐具處理腐蝕性化學品或氣體。

**微波爐不宜用來烘乾衣物、紙張、香料、草藥、木製品、花朵、水果或其他易燃物品，**以免發生火警。

**如物品在微波爐內／外起火或冒煙，**請關掉微波爐，並緊閉爐門。然後拔下電源插頭或中斷保險絲或斷路器的電源。

**請勿過度烹調食物，**以免發生火警。

**請務必經常留意爐內狀況，**尤其是烹煮過程中使用紙類、塑膠或其他易燃容器時。加熱食物時如使用這些材料，紙張可能會起火或燒焦，而塑膠材料則可能會被溶解。

 


### 警告！

除非已充分向兒童說明，並確定他們能以正確的方式使用微波爐，且瞭解錯誤使用微波爐時可能造成的危險後，**才能允許兒童**在沒有大人的監督下使用微波爐。

本爐具不適合兒童或體弱者在無人監督的情況下使用。兒童應該在大人的監督指導下使用微波爐，以確保他們不會將爐具當成玩具。

如果您的微波爐具有產生高溫的組合模式，則兒童應僅能在大人監督指導下才能使用。

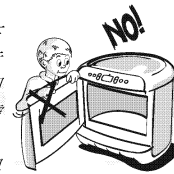

### 警告！

**請勿用您的微波爐加熱密封容器內的食物或液體，**否則會使容器內的氣壓上昇，開啓容器時發生損壞或爆炸。



### 警告！

**請務必定期檢查微波爐門的密封膠圈及門的密封區域是否受損。**如果這些部分損壞，必須先由專業的技術人員維修後，才能繼續使用微波爐。

雞蛋

**請勿用微波爐烹調或加熱有殼或無殼的原隻雞蛋。**因為即使微波爐停止加熱，它們也有可能會爆炸。



## 注意事項

### 一般注意事項

#### 本產品僅供家居使用！

爐內沒有食物時，切勿使用本微波爐，否則可能會對爐具造成損壞。

爐頂的**排氣孔**必須保持暢通。若爐具抽氣或排氣受阻，不但會損壞爐具，還會影響烹調效果。



如果您要試用微波爐，可將一杯水放入爐內。放入的水可吸收微波能量，如此便不會對微波爐造成損壞。

請勿將微波爐放置在室外或於室外使用。請勿在廚房水槽、潮濕的地窖、泳池附近或其他類似地點使用本爐具。

請勿將爐腔作存放物品之用。

食物在放入微波爐之前，請先**除去紙袋和膠袋的金屬封口線**。

如果不常使用**燒烤功能**，燒烤架下的食物殘渣與油脂可能會因堆積過多而起火燃燒。為減少發生火災的危險，請每月使用一次燒烤功能，每次10分鐘，以清潔燒烤架。



### 油炸

由於食用油的溫度無法控制，因此**切勿使用微波爐油炸食物**。為免燙傷，烹調後，要碰觸容器、微波爐部件與烤盤時，請使用**隔熱墊或隔熱手套**。



### 流質食物

用微波爐加熱的**飲品或清水**，即使煮得過熱，甚至超過沸點，也未必會出現沸騰的氣泡，但是液體卻可能會突然溢出，造成燙傷。為免發生上述情況，請遵照下列幾點：



1. 請避免使用窄頸的直身容器。
2. 將流質食物放入微波爐前，請先加以攪拌，並把匙羹留在容器內。
3. 加熱後請稍等一會，然後再次攪拌，才再小心從微波爐中取出容器。

### 小心

請務必參考微波爐烹飪食譜來使用本爐具，尤其是烹調或加熱含酒精的食物時。

將**奶樽或嬰兒食物器皿**內的嬰兒食品加熱後，必須先攪拌食品及檢查溫度，才能餵哺嬰兒。這樣可確保熱量平均分佈，以防燙傷或灼傷嬰兒。



加熱前，請確保已取出樽蓋及奶嘴！



## 配件

### 一般資料

市面上出售的配件種類繁多，因此在購買前，請確定它們是否適合微波爐使用。

烹調前，**確保器皿適用於微波**，且微波可穿透這些器皿進行烹調。

**當您將食物及配件放入微波爐後**，確保它們不會與爐體內部接觸。**在使用金屬配件或帶有金屬材質的配件時**，尤需加倍小心。

**若配件的金屬部分**與正在操作的微波爐的內部接觸，會產生火花，而微波爐也可能因而損壞。

啟動微波爐之前，**請確保轉盤可以自由轉動**。

### 轉盤托架

**請將轉盤托架**置於玻璃轉盤下。切勿將其他器皿放在轉盤托架上。

\* 請將轉盤托架安裝在微波爐內。

 


### 玻璃轉盤

任何烹調方法都需要

**使用玻璃轉盤**。它可收集液滴與食物殘渣，若不使用玻璃轉盤，將會弄髒微波爐內部。

\* 請將玻璃轉盤放在轉盤托架上。



### 奶樽托架

若要加熱奶樽內的嬰兒食物，但因奶樽太高而無法立在微波爐中時，**請使用奶樽托架**。

 
請參閱「注意事項」一章，以瞭解有關加熱嬰兒食物的更多資訊。(在英國與愛爾蘭不適用)。



### 燒烤架


使用燒烤功能時，**請使用**

**燒烤架**擺放食物。利用此架，可使食物表面迅速變成誘人的金黃色。



### 脆焗盤專用手柄

 **請用隨附的特製脆焗把手**將熱燙的脆焗盤從微波爐中取出。




### 脆焗盤

**請將食物直接放在脆焗盤上**。

使用脆焗盤時，請以玻璃轉盤作為托架。

由於脆焗盤會迅速變熱，**切勿將任何器皿**放於盤上，否則可能會使器皿損壞。

 使用脆焗盤前 (最多 3 分鐘)，可先預熱**脆焗盤**。預熱時，請務必使用脆焗功能。

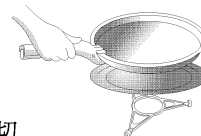

door

## 啟動保護／兒童安全鎖

 
此自動安全鎖功能會在微波爐恢復為「備用模式」後一分鐘內啟動（即當時鐘顯示24小時時間或時鐘未有設定而顯示屏內容為空白時，微波爐便處於「備用」狀態。）

安全鎖必須在爐門開啓及關閉之後（例如將食物放入爐中）才會解開。如果您沒有放入食物便開始操作微波爐的話，顯示屏便會顯示door（爐門）的字樣。

## 暫停或停止烹調程序

### 暫停烹調程序：

您可以打開爐門暫停烹調，以便檢查、翻轉或攪動食物。原先的設定會維持5分鐘。

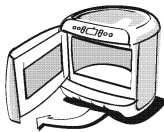

### 繼續烹調程序：

請關閉爐門並按「開始」(Start) 按鈕一次。微波爐會從之前暫停之處繼續烹調。按「開始」(Start) 按鈕兩次，烹調時間會增加30秒。



### 如果您不想繼續烹調：

請取出食物，然後關閉爐門並按「停止」(STOP) 按鈕。



烹調結束後，微波爐會於 5

 
分鐘內，每隔一分鐘發出一

次「嗶」聲訊號。按「停止」


(STOP) 按鈕或打開爐門，可

取消訊號提示。

注意：若烹調結束後將爐門打開再關上，原先的設定會維持60秒。



## 如何使用時鐘功能

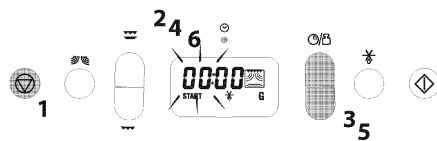 

1. 按「停止」(Stop) 按鈕。
2. 按住「時鐘」(Clock) 按鈕 3 秒，直至左側數字 (小時) 開始閃爍為止。
3. 按 +/- 按鈕 (0/9) 設定小時。
4. 再按「時鐘」(Clock) 按鈕至右側的兩個數字 (分鐘) 開始閃爍。
5. 按 +/- 按鈕 (0/9) 設定分鐘。
6. 再按「時鐘」(Clock) 按鈕。

時鐘設定已完成，並可開始運作。

當微波爐首次接駁至電源或停電後，所顯示內容將為空白。如果沒有設定時鐘，在設定烹調時間前的顯示內容會一直保持空白。

設定之後，如果您想從顯示內容中移除時鐘，只需再按「時鐘」(Clock) 按鈕 3 秒鐘，然後按「停止」(Stop) 按鈕即可。

若要恢復時鐘，請依上述步驟操作。

## 如何使用計時器功能



1. 按「時鐘」(Clock) 按鈕。
2. 按 +/- 按鈕 (0/8) 設定所需時間。
3. 按「開始」(Start) 按鈕。

若您需要廚房計時器來計算不同的烹調時間，例如煮雞蛋、意大利麵條、或在烤焗前讓生麵團發酵等等，便可使用此計時器功能。

 
當計時器倒數計時結束，您會聽到**聲音訊號**。

## 如何使用微波功能



1. 按 +/- 按鈕 (0/8) 設定時間。
2. 重複按「火力」(Power) 按鈕以設定火力。
3. 按「開始」(Start) 按鈕。

使用此功能可進行一般的食物烹調及加熱，例如蔬菜、魚、馬鈴薯以及肉類。



使用此功能時，切勿使用以上配件。

**當烹調已經開始：**


按「開始」(Start) 按鈕可延長烹調時間。每按一下，便會延長 30 秒。您也可以按 +/- (0/8) 按鈕以增加或減少烹調時間。

按「火力」(Power) 按鈕也可變更火力級別。按一下會顯示目前使用的火力，重複按「火力」(Power) 按鈕可以更改火力級別。



## 選擇火力級別

僅適用於微波功能

火力	建議使用情況：
JET	加熱飲料、水、清湯、咖啡、茶或其他含水量高的食品。如果食品中有雞蛋或奶油，請選擇較低的火力。
750 W	烹調蔬菜、魚、肉等。
500 W	需要加倍小心烹調的食品：例如含豐富蛋白質的醬汁、奶酪及雞蛋類菜餚，以及小心完成沙鍋菜的烹調。
350 W	燉煮食物、熔化奶油。
160 W 	解凍鬆軟奶油、奶酪以及冰淇淋。
0 W	設定停放時間。

### 微波與烘烤

160 W	大塊的肉
160–350W	魚
350–500W	禽類與焗蔬菜



## 如何使用極速解凍功能

 


1. 按「極速解凍」(Jet Defrost) 按鈕。
2. 按 +/- 按鈕 (0/8) 設定食物重量。
3. 按下「開始」(Start) 按鈕。

解凍期間，微波爐將會於中途停止，並提示您「翻轉」(TURN) 食物。

- 打開爐門。
- 翻轉食物。
- 關閉爐門，並按「極速啟動」(Jet Start) 按鈕繼續解凍。

此功能只適用於解凍肉類、魚及禽類。另外，此功能只適用於淨重量介乎 100 至 1500 公克之間的食物。



使用此功能時，切勿使用以上配件。

注意：如果您未翻轉食物，微波爐會於 2 分鐘後自動繼續解凍。這樣，解凍將會花費較長時間。

Turn  
Food

微波爐需要知道食物的淨重。

如果食物重量輕於或重於建議的重量：  
請依照「如何使用微波功能」的程序操作，並於解凍時選擇 160 W。

如果食品的溫度高於急速冷凍溫度(-18℃)，請選擇較輕的食物重量。

如果食品的溫度低於急速冷凍的溫度(-18℃)，請選擇較重的食物重量。



建議重量		
	肉類 (100g - 1500g)	肉餡、肉片、牛排、烤肉。
	魚類 (100 - 1500g)	整條魚、魚排或魚片。
	禽類 (100g - 1500g)	整隻雞、雞塊或雞片。



## 如何使用手動解凍功能

手動解凍時，請**依照**「如何使用微波功能」的程序操作，並選擇 **160 W** 的火力級別。

**經常檢視食物。**

烹調經驗將會告訴您解凍各種份量食物所需的時間。

 
一般提示：

只要包裝上沒有金屬部件(例如金屬紮綫)，**塑膠袋**、塑膠膜或硬紙包裝內的**冷凍食品**均可直接放入微波爐中。

包裝的形狀可能會影響解凍時間。薄的包裝會比厚的包裝解凍得更快。

請在開始解凍時將食物**分開成幾部分**。分開的部分會更容易解凍。

如果**食品較嫩部分**開始升溫(例如雞腿與雞翼)，請以錫紙遮蓋。

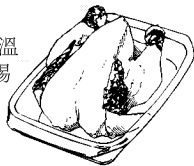


解凍期間，要**翻轉大塊食品**。

若在解凍期間攪拌一下**煮熟、燉好的食物及肉醬**，解凍效果會更好。

**解凍時**，最好是稍微進行解凍，讓解凍程序在停放時間中完成。

 
**解凍後的停放時間**可以提高烹調效果，因為溫度會平均分散到食物中。

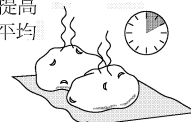

## 如何使用極速啟動功能



 此功能可以用來快速加熱清湯、咖啡或茶等含水量高的食品。



按下「**極速啟動**」(Jet Start) 按鈕，可自動開始以微波爐的最高火力級別與 30 秒的設定時間烹調食物。每按一下此按鈕便會增加 30 秒的烹調時間。您也可在啟動功能之後按 +/- (0/3) 按鈕以增加或減少烹調時間。

使用此功能時，切勿使用以上配件。

## 如何使用燒烤功能



 
1. 按「燒烤」(Grill) 按鈕。
2. 按 +/- 按鈕 (Grill) 設定時間。
3. 按「開始」(Start) 按鈕。

燒烤功能正在運作時，請勿長期打開爐門，否則會導致微波爐內溫度下降。

### 注意：

烹調期間按「燒烤」(Grill) 按鈕將會開啓或關閉燒烤功能。關閉燒烤功能時，計時器仍會繼續倒數計時。

使用此功能可使食物表面快速變成金黃色。



使用此功能時，切勿使用以上配件。

### 重要！

燒烤前，請**確定**您所用的器皿是耐熱及適用於微波爐。

燒烤時**請勿**使用塑膠器皿，因為它們會熔化。木製或紙製物品亦不適宜使用。

## 如何使用燒烤與微波功能



1. 按「燒烤」(Grill) 按鈕。
2. 按「火力」(Power) 按鈕設定微波爐火力。
3. 按 +/- 按鈕 (Grill) 設定時間。
4. 按「開始」(Start) 按鈕。

操作期間，您可以按「燒烤」(Grill) 按鈕以開／關燒烤功能。使用燒烤功能時，最大的火力級別受原廠的設定等級限制。

使用此功能可烹調奶油類、義大利麵條、禽類以及烤馬鈴薯等美味食品。



使用此功能時，切勿使用以上配件。

將火力級別降至 0 W 可以關閉微波功能。當火力級別只有 0 W 時，微波爐將會切換到燒烤模式。

## 如何使用脆焗功能

 


1. 按「脆焗」(Crisp) 按鈕。
2. 按 +/- 按鈕 (Crisp) 設定時間。
3. 按「開始」(Start) 按鈕。

微波爐會自動以微波及燒烤功能運作，把脆焗盤加熱。脆焗盤會迅速達到所需溫度並開始烹調食物。

使用脆焗功能時，**不能**改變火力級別或開關燒烤功能。

使用此功能可加熱及烹調比薩與其他以麵糰製作的食物。香煎煙肉、雞蛋、香腸及漢堡等食物的效果也非常好。



使用此功能時，切勿使用以上配件。

### 重要！

**請確保**將脆焗盤正確置於玻璃轉盤中央。

使用此功能時，**微波爐與脆焗盤**會變得非常熱。

**請勿**將熱燙的脆焗盤放在任何易導熱物體的表面。

**請小心**不要觸碰到爐腔頂板處的燒烤元件。

在拿取脆焗盤時，**請使用隔熱手套或隨爐配送的脆焗手柄**。



## 維護保養及清潔

微波爐只要勤加清潔，便是最佳的維護方法。但在清潔時，必須關掉電源。

**微波爐必須保持清潔**，否則可能導致爐身受到腐蝕，縮短微波爐的使用壽命，造成發生危險的可能。

**請勿使用金屬百潔布、具有腐蝕性的清潔劑、鋼絲刷、砂紙等清潔爐具**，因為它們可能會損壞控制面板、微波爐內部及外部表面。

請使用沾有溫和清潔劑的海綿或沾有噴霧式玻璃清潔劑的紙巾進行清潔。

請將噴霧式玻璃清潔劑噴於紙巾上再進行清潔。

**切勿**把清潔劑直接噴在微波爐上。

請定期取出轉盤與轉盤托架，清潔爐腔底部(尤其在翻倒食物後)。本微波爐經過精心設計，只有轉盤安置妥當後才能操作。

當轉盤已取出來清潔時，**切勿**使用微波爐。

請使用溫和的清潔劑、水及軟布清潔爐腔內壁、爐門前後以及開門位置。

**請不要讓油脂**或食物殘渣堆積在爐門周圍。

要清除頑固污漬，可以將一杯清水放在微波爐內，然後加熱約 2 至 3 分鐘。水蒸氣便能將污漬溶解。

 
在一杯水中加入少許檸檬汁，然後放在爐內煮數分鐘，即可去除微波爐中的異味。

**燒烤架**無需清潔，因為燒烤食物時的高溫會將任何污漬燒毀，但是在燒烤架下方的內壁則需要定期清潔。清潔時，應使用溫水、清潔劑與海綿。

如果不經常使用燒烤架，請每月將燒烤架放入爐內烤 10 分鐘來將污漬燒毀，以減低使用時發生火災的風險。

可放在洗碗機內清洗的配件：

轉盤托架

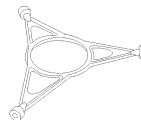


玻璃轉盤




奶樽托架

 (在英國與愛爾蘭銷售的微波爐無此配件)



金屬燒烤架

 

脆烤盤手柄



小心清潔：

請使用溫和的清潔劑清潔**脆烤盤**。

沾有頑固污漬的地方可使用海綿及溫和的清潔劑清洗。

清潔前，**請務必等脆烤盤冷卻**。

**請勿在脆烤盤熱燙時**，將其浸入水中或用水沖洗。快速冷卻可能會使脆烤盤損壞。

**請勿使用鋼絲刷**，否則可能會刮花表面。



### 警告！

請定期檢查爐門的封條及其附近位置有否損壞。如果這些地方損壞，必須由受過專業訓練的維修人員維修後，才可繼續使用微波爐。

## 疑難排解指南

如果微波爐失靈，請檢查下列各項事項後，再致電維修中心：

- \* 轉盤及轉盤托架位置是否正確。
- \* 插頭是否已經正確地插入牆上的插座。
- \* 爐門是否完全關閉。
- \* 檢查保險絲是否有電源供應。
- \* 請檢查微波爐是否通風良好。
- \* 10 分鐘後再嘗試操作。
- \* 重新操作前，請先打開爐門，然後再關上。

這樣可避免因撥打不必要的電話而產生的費用。致電維修服務中心時，請說明微波爐的機身編號及型號（參閱維修服務的標籤）。如需進一步資料，請參閱您的保用卡。

### 重要：

如需更換電線，請務必使用原廠出品的電線，此線可透過維修中心購買。電線必須由受過專業訓練的維修技術人員更換。



### 警告！

**維修工作僅能由受過訓練的維修技術人員執行。**

因為維修工作可能需要移除防止微波能源外洩的機殼，所以，除了受過專業訓練的人員以外，其他人執行任何維修操作都有危險。

**請勿拆卸任何機殼。**



## 環保建議

 
如循環標誌所示，**包裝盒**可完全循環再用。請按照當地廢物處理條例，把具有潛在危險性的包裝物料(膠袋、聚苯乙烯等)小心存放，遠離兒童。



**廢物的處理**必須遵照當地和環境保護相關的廢物處置條例。關於處理、回收及循環利用本爐具的詳細資訊，請與當地有關主管機關、家居廢物服務中心或購得本爐具的商店聯絡。棄置前，請切斷電源線，確保爐具不能接上電源。

本爐具的標示根據歐盟指令 2002/96/EC 廢棄電器與電子設備 (WEEE) 之規定。正確棄置本爐具，有助防止因不當廢棄處理本產品對環境及人體健康構成潛在的負面影響。

在爐具或隨附的說明文件上的**這個符號**指明本爐具不可當作家居廢物處理。如閣下想棄置爐具，請將爐具送至正確的電子廢物處理收集商。

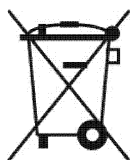

## 技術資料

本產品符合IEC 60705標準。

國際電工委員會SC. 59H，為不同類型的微波爐加熱性能測試比較，制訂一套標準。  
建議本微波爐應以下列數據為標準：

測試	重量	大約時間	火力級別	容器
12.3.1	750克	9. 5分鐘	750瓦	Pyrex 3.220
12.3.2	475克	5分鐘	750瓦	Pyrex 3.827
12.3.3	900克	15分鐘	750瓦	W Pyrex 3.838
13.3	500克	2. 5分鐘	極速解凍	

型號	MAX28
供應電壓	230 V/50 Hz
額定輸入功率	1750 W
保險絲	10 A (UK 13 A)
微波輸出功率	750 W
燒烤	650 W
	高x寬x深
機身尺寸：	374x392x370
爐腔尺寸：	149x290x290



## INSTALLATION



### PRIOR TO CONNECTING

**Check that the voltage** on the rating plate corresponds to the voltage **in your home**.

**Do not remove the microwave inlet protection plates** located on the side of the oven cavity wall. They prevent grease & food particles from entering the microwave inlet channels.

**Place the oven on a stable, even surface** that is strong enough to hold the oven and the food utensils you put in it. Use care when handling.



**Position the oven at a distance** from other heating sources. The cooling air, which is taken in by the oven, must not exceed 35°C temperature. For sufficient ventilation there must be a space of at least 8-cm above the oven. Ensure that the space underneath, above and around the oven is empty to allow for proper airflow. The oven can operate in an ambient temperature ranging from +5°C to +35°C.

### **Ensure that the appliance is not damaged.**

 
Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth.

**Do not operate this appliance** if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

### AFTER CONNECTING

**The oven can be operated only** if the oven door is firmly closed.

**Poor television reception** and radio interference may result if the oven is located close to a TV, radio or aerial.

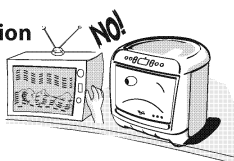

**The earthing of this appliance** is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

**The manufacturers are not liable for any problems caused by the user's failure to observe these instructions.**



## IMPORTANT SAFETY INSTRUCTIONS



READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

**Do not heat, or use flammable materials**

in or near the oven. Fumes can create a fire hazard or explosion.

**Do not use** corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

**Do not use your microwave** oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.

**If material inside / outside the oven should ignite or smoke is observed**, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.

**Do not over-cook food.** Fire could result.

**Do not leave the oven unattended**, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

 


**WARNING!**

**Only allow children** to use the oven without adult supervision after adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.


*The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.*

*If your oven has a combination mode, children should only use the oven under adult supervision due to the high temperatures generated.*

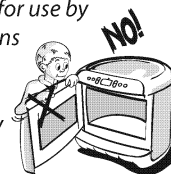

**WARNING!**

 **Do not use your microwave** oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.



**WARNING!**

**The door seals and the door seal areas** must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.

EGGS

**Do not use your microwave** oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.





## PRECAUTIONS



### GENERAL

***This appliance is designed for domestic use only!***

***The appliance should not be operated without food in the oven when using microwaves.*** Operation in this manner is likely to damage the appliance.

***The ventilation openings***

*on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.*



**If you practice operating** the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

**Do not store or use** this appliance outdoors. Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

**Do not use the cavity** for any storage purposes.

**Remove wire twist-ties** from paper or plastic bags before placing bag in the oven.



**If the Grill function is not used regularly,** there is a risk of fire, due to the possible buildup of food particles and fat, beneath the grill element. To reduce this risk, the Grill only function should be run for 10 minutes once a month to clean the elements.

### DEEP-FRYING

**Do not use your microwave** oven for deep-frying, because the oil temperature cannot be controlled.



**Use hot pads or oven mitts** to prevent burns, when touching containers, oven parts, and pan after cooking.

### LIQUIDS

**E.g. beverages or water.** Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.



To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.

### CAREFUL

**Always refer** to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.

**After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature**



**before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.**

**Ensure the Lid and the Teat is removed before heating!**



## ACCESSORIES



### GENERAL

**There are** a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

**Ensure that the utensils you use** are oven proof and allow microwaves to pass through them before cooking.

**When you put food and accessories** in the microwave oven, ensure that they do not come in contact with the interior of the oven. **This is especially important with accessories made of metal or metal parts.**

**If accessories containing metal** comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

**Always ensure** that the turntable is able to turn freely before starting the oven.

### TURNTABLE SUPPORT

**Use the turntable support** under the Glass turntable. Never put any other utensils on the turntable support.

\* Fit the turntable support in the oven.



### GLASS TURNTABLE

**Use the Glass turntable** with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.

\* Place the Glass turntable on the turntable support.



 
### BABY BOTTLE HOLDER

**Use the Baby bottle Holder** when heating baby food in bottles that are too tall to stand-alone in the oven. Please see also, the chapter "Precautions", for more information about heating baby food. (Not available in the UK and Ireland).



### WIRE RACK

**Use the wire rack** to put food on when using the Grill function. This will quickly give a pleasant brown surface to the food.



### CRISP HANDLE

**Use the supplied special Crisp handle** to remove the hot Crisp plate from the oven.



### CRISP-PLATE

**Place the food directly on the Crisp-plate.**

Always use the Glass turntable as support when using the Crisp-plate.

**Do not place any utensils** on the Crisp-plate since it will quickly become very hot and is likely to cause damage to the utensil.

**The Crisp-plate** may be preheated before use (max. 3 min). Always use the Crisp function when preheating the crisp-plate.







## START PROTECTION / CHILD LOCK

 
**This automatic safety function is activated one minute after** the oven has returned to "stand by mode". (The oven is in "stand by" when the 24-hour clock is displayed or if the clock has not been set, when the display is blank).

**The door must be opened and closed** e.g. putting food into it, before the safety lock is released. Else the display will show "door".

## TO PAUSE OR STOP COOKING

### To pause cooking:

The cooking can be paused to check, turn or stir the food by opening the door. The setting will be maintained for 5 minutes.

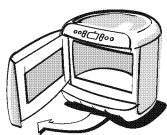

### To continue cooking:

Close the door and press the Start button *ONCE*. The cooking is resumed from where it was paused. Pressing the Start button *TWICE* will increase the time by 30 seconds.

 


### If you don't want to continue cooking:

Remove the food, close the door and press the STOP button



**A beep will signal** once a minute for 5 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.



**Note:** The oven will only hold the settings for 60 seconds if the door is opened and then closed after the cooking is finished.



## HOW TO USE THE CLOCK



**When the appliance is first plugged in** or after a power failure, the display is blank. If the clock is not set, the display will remain blank until the cooking time is set.

1. Press the Stop button.
2. Press the Clock button (3 seconds) until the left-hand digit (hours) flicker.
3. Press the +/- buttons (C/B) to set the hours.
4. Press the Clock button again. (The two right hand digits (minutes) flicker).
5. Press the +/- buttons (C/B) to set the minutes.
6. Press the Clock button again.  
The clock is set and in operation.

**If you wish to remove the Clock** from the display once it has been set, simply press the Clock button again for 3 seconds and then press the Stop button.

**To reinstate the Clock**, follow the above procedure.

## HOW TO USE THE TIMER



1. Press the Clock button.
2. Press the +/- buttons (+/-) to set the desired length of the timer.
3. Press the Start button.

**Use this function** when you need a kitchen timer to measure exact time for various purposes such as cooking eggs, pasta or letting the dough rise before baking etc.

 
**An acoustic signal** will be heard when the timer has finished to count down.

## HOW TO USE THE MICROWAVES



1. Press the +/- buttons (+/-) to set the time.
2. Press the power button repeatedly to set the power.
3. Press the Start button.

**Use this function** for normal cooking and reheating, such as vegetables, fish, potatoes and meat.



**Do not use with this function.**

### **Once the cooking process has been started:**

The time can easily be increased in 30-second steps by pressing the Start button. Each press increases the time with 30 seconds. You may also alter the time by pressing the +/- (+/-) buttons to increase or decrease the time. Pressing the power button may also change the power level. The first press will show you the current power level. Press the power button repeatedly to change power level.



## CHOOSING POWER LEVEL

### MICROWAVES ONLY

Power	Suggested use:
JET	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
750 W	Cooking of vegetables, fish, meat etc.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	Simmering stews, melting butter.
160 W $\frac{\pi}{8}$	Defrosting. Softening butter, cheeses and ice cream.
0 W	Setting the standing time.

 
### MICROWAVES & GRILL

160 W	Large cuts of meat
160 - 350 W	Fish
350 - 500 W	Poultry & Gratins

## HOW TO USE THE JET DEFROST



**Use this function** for defrosting Meat, Fish & Poultry ONLY. Jet Defrost should only be used if the net weight is between 100 - 1500g.



**Do not use with this function.**

1. Press the Jet Defrost button.
2. Press the +/- buttons (C/B) to set the weight of the food.
3. Press the Start button.

**Midway through the defrosting process** the oven stops and prompts you to "TURN" food.

- Open the door.
- Turn the food.
- Close the door and restart by pressing the Jet Start button.

**Note:** the oven continues automatically after 2 min if the food hasn't been turned. The defrosting time will be longer in this case.

Turn  
Food

**The oven needs** to know the net weight of the food.

**If the weight is lesser or greater than recommended weight:**

Follow the procedure for "How to use the microwaves" and choose 160 W when defrosting.

**If the food is warmer than deep-freeze temperature (-18°C),** choose lower weight of the food.

**If the food is colder than deep-freeze temperature (-18°C),** choose higher weight of the food.



RECOMMENDED WEIGHTS		
	MEAT (100g - 1500g)	Minced meat, cutlets, steaks, roasts.
	FISH (100 - 1500g)	Whole, steaks or fillets.
	POULTRY (100g - 1500g)	Chicken whole, pieces or fillets.



## HOW TO USE THE MANUAL DEFROST

**Follow** the procedure for "How to use the microwaves" and choose Power Level 160 W when defrosting manually.

**Check and inspect the food regularly.**

Experience will give you the times needed for various amounts.

 
### GENERAL HINTS:

**Frozen food in plastic bags**, plastic films or cardboard packages can be placed directly in the oven as long as the package has no metal parts (e.g. metal twist ties).

**The shape of the package** alters the defrosting time. Shallow packets defrost more quickly than a deep block.

**Separate pieces** as they begin to defrost. Individual slices defrost more easily.

**Shield areas of food** with small pieces of aluminum foil if they start to become warm (e.g. chicken legs and wing tips).

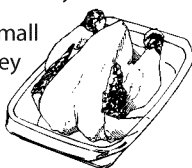


**Turn large joints** halfway through the defrosting process.

**Boiled food, stews and meat sauces** defrost better if stirred during defrosting time.

**When defrosting** it is better to under-thaw the food slightly and allow the process to finish during standing time.

**Standing time after defrosting**

 always improves the result since the temperature will then be evenly distributed throughout the food.

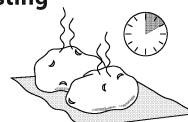


## HOW TO USE THE JET START



**Press the Jet Start button to automatically start** with full microwave power level and the cooking time set to 30 seconds. Each additional press increases the time with 30 seconds. You may also alter the time by pressing the +/- (0/1) buttons to increase or decrease the time after the function has started.

 **This function is used** for quick reheating of foods with a high water content such as clear soups, coffee or tea.




**Do not use with this function.**

## HOW TO USE THE GRILL



1. Press the Grill button.
2. Press the +/- buttons (+/-) to set the time.
3. Press the Start button.

 **Use this function to** quickly give a pleasant brown surface to the food.



**Do not use with this function.**

**Do not leave the oven** door open for long periods when the Grill is in operation, as this will cause a drop in temperature.

### Note:

Pressing the Grill button during cooking switches the Grill element on and off. The timer will continue to count down when the Grill element is turned off.

### IMPORTANT!

**Ensure** that the utensils used are heat resistant and ovenproof before grilling with them.

**Do not** use plastic utensils when grilling. They will melt. Items of wood or paper are not suitable either.

 
## HOW TO USE THE GRILL & MICROWAVES



1. Press the Grill button.
2. Press the Power button to set the microwave power.
3. Press the +/- buttons (+/-) to set the time.
4. Press the Start button.

**During operation** you can switch the Grill element on/off by pressing the Grill button. The Max. possible microwave power level when using the Grill is limited to a factory-preset level.

**Use this function to** cook such foods as Gratin's, Lasagna, Poultry and Baked potatoes.



**Do not use with this function.**

**It is possible** to switch the microwaves off by reducing the microwave power level to 0 W. When 0 W is reached, the oven switches to Grill only mode.

## HOW TO USE THE CRISP

 


1. Press the Crisp button.
2. Press the +/- buttons (C/B) to set the time.
3. Press the Start button.

**The oven automatically** works with Microwaves and Grill in order to heat the Crisp-plate. This way the Crisp-plate will rapidly reach its working temperature and begin to brown and crisp the food.

**It is not possible** to change or switch, the Power level or Grill, on/off, when using the Crisp function.

**Use this function to** reheat and cook pizzas and other dough based foods. It is also good for frying bacon and eggs, sausages, hamburgers etc.



**Do not use with this function.**

### IMPORTANT!

**Ensure** that the Crisp-plate is correctly placed in the middle of the Glass turntable.

**The oven and the crisp-plate** become very hot when using this function.

**Do not place the hot crisp-plate** on any surface susceptible to heat.

**Be careful, not to touch** the ceiling beneath the Grill element.

**Use oven mittens** or **the special Crisp handle** when removing the hot Crisp-plate.

## MAINTENANCE & CLEANING

**Cleaning is the only maintenance** normally required. It must be carried out with the microwave oven disconnected.

**Failure to maintain the oven** in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

**Do not use metal scouring pads, abrasive cleansers, steel-wool pads, gritty washcloths, etc. which can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.**



**Do not spray directly on the oven.**

**At regular intervals**, especially if spillovers have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.

**This oven is designed** to operate with the turntable in place.

**Do not** operate the microwave oven when the turntable has been removed for cleaning.

**Use a mild detergent**, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

**Do not allow grease** or food particles to build up around the door.

**For stubborn stains**, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

 
**Adding some lemon juice to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.**

**The Grill element** does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with warm water, detergent and a sponge.

If the Grill is not used regularly, it should be run for 10 minutes a month to burn off any splashes, in order to reduce the risk of fire.

DISHWASHER SAFE:

**Turntable support.**

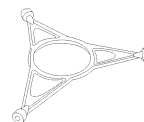

**Glass turntable.**

 


**Baby Bottle Holder**

(Not available in the UK and Ireland).



**Wire Rack**



**Crisp Handle**



CAREFUL CLEANING:

**The Crisp-plate** should be cleaned in mild, detergent water. Heavily soiled areas can be cleaned with a scouring sponge and a mild cleanser.

**Always** let the crisp-plate cool off before cleaning.

**Do not** immerse or rinse with water while the crisp-plate is hot. Quick cooling may damage it.

**Do not** use steel-wool pads. This will scratch the surface.



### WARNING!

**The door seals and the door seal areas** must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.



## TROUBLE SHOOTING GUIDE

**If the oven does not work**, do not make a service call until you have made the following checks:

- \* The Turntable and turntable support are in place.
- \* The Plug is properly inserted in the wall socket.
- \* The Door is properly closed.
- \* Check your Fuses and ensure that there is power available.
- \* Check that the oven has ample ventilation.
- \* Wait for ten minutes and then try to operate the oven once more.
- \* Open and then close the door before you try again.

**This is to avoid** unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.

### **Important:**

If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organization. The mains cord may only be replaced by a trained service technician.



### **WARNING!**

***Service only to be carried out by a trained service technician.***

*It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.*

***Do not remove any cover.***



 
## ENVIRONMENTAL HINTS

**The packing box** may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.



**This appliance** is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

**The symbol** on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

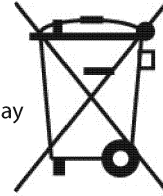

**Disposal** must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.

## TECHNICAL DATA

### In accordance with IEC 60705.

The International Electrotechnical Commission, SC. 59H, has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

Test	Amount	Approx. time	Power level	Container
12.3.1	750 g	9 ½ min	750 W	Pyrex 3.220
12.3.2	475 g	5 min	750 W	Pyrex 3.827
12.3.3	900 g	15 min	750 W	Pyrex 3.838
13.3	500 g	2 ½ min	Jet defrost	

<b>Model</b>	<b>MAX 28</b>
<b>Supply voltage</b>	230 V/50 Hz
<b>Rated Power Input</b>	1750 W
<b>Fuse</b>	10 A (UK 13 A)
<b>MW output power</b>	750 W
<b>Grill</b>	650 W
	<b>H x W x D</b>
<b>Outer dimensions:</b>	374 x 392 x 370
<b>Oven compartment:</b>	149 x 290 x 290



4619 652 67711



Whirlpool is a registered trademark of Whirlpool, USA