


微波爐使用手冊

型號 : C2563SS

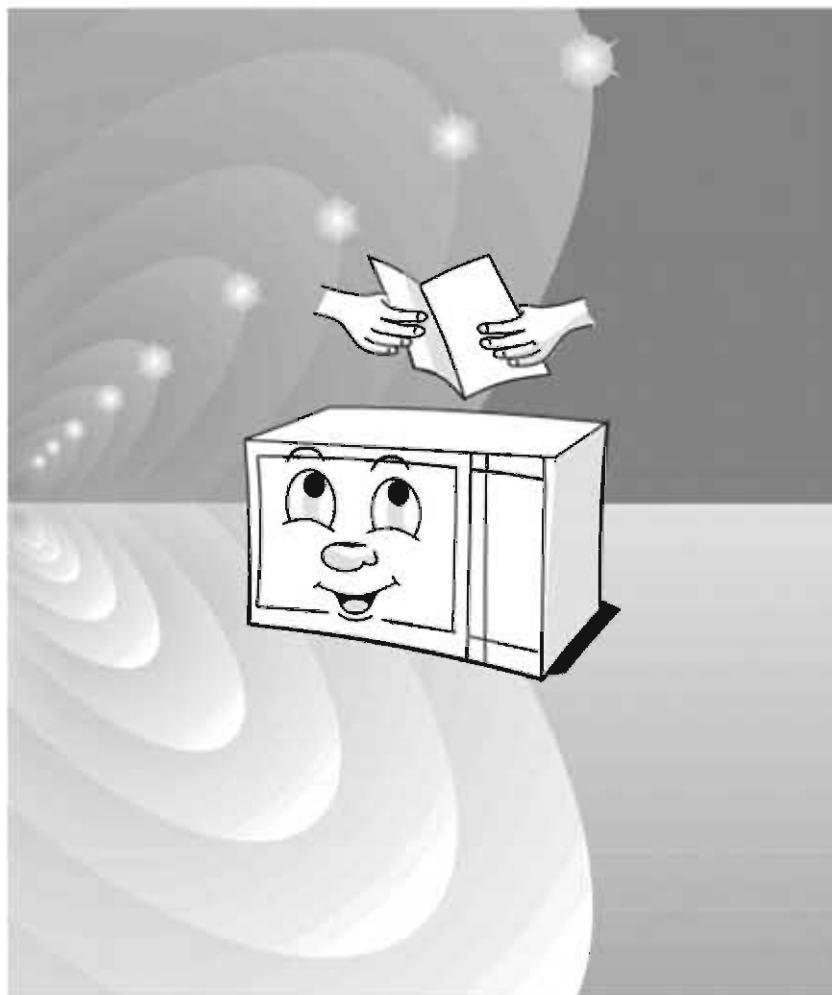

請在安裝和使用此微波爐前詳細閱讀本使用手冊,并保存好以備日後參考。

## 目錄

避免微波泄露預防措施 .....	1
規格 .....	1
使用常識 .....	1
安裝 .....	2
接地說明 .....	2
收音幹擾 .....	3
重要安全說明 .....	3
微波煮食守則 .....	4
使用器皿指南 .....	4
圖示 .....	5
控制面板說明 .....	6
操作指導 .....	8
清潔維護 .....	10

## 避免微波泄露預防措施

- (a) 不可在門開的情況下使微波爐工作，更不可破壞門連鎖系統，從而造成微波能量的泄露。
- (b) 不要放置任何物體在門窗前面或允許油污積漬在門窗表面需要清洗。
- (c) 在危險的情況下，不要操作微波爐，下面這些是非常重要的對於恰當的關門而不會存在危險：
  - 1 門，
  - 2 鉸鏈和門鉤（斷裂或鬆脫），
  - 3 門窗和門窗表面。
- (d) 微波爐必須由專業的人士進行維修。
- (e) 如果門或門封損壞，則不能操作微波爐，直到維修人員修好為止。

## 規格

型 號	C2563SS
額定電壓及額定頻率	230V ~ 50Hz
額定輸入功率	微波:1400W 燒烤:1000W
微波輸出功率	900W
額定微波頻率	2450MHz
外形尺寸	310mm×508mm×455mm
內腔尺寸	237mm×338mm×348mm
內腔容量	25L
淨 重	約16.7kg

（注：所標外形尺寸、內腔尺寸順序為：高 × 寬 × 深）

## 微波爐使用常識

- 1. 如果微波爐不工作，應檢查：
  - 電源插頭是否插好。
  - 爐門是否關好。
  - 兒童保險鎖是否鎖住。
  - 家電保護器是否跳開或燒斷。
- 2. 爐內無食物，而微波爐被偶然啟動。
  - 請立即按下 **停止/取消** 鍵或打開爐門，停止其工作。

#### 下列情况均屬正常

微波爐燈光暗弱。	烹調時若不以微波高火而用較低的火力烹調，微波爐的燈光會變得暗弱並有聲響產生，這是微波爐在控制火力時所產生的正常現象。
蒸氣凝聚在爐門及有熱風從排氣口排出。	烹調時，食物會有蒸氣散發，而大部分會從排氣口排出，但蒸氣也會在較涼的地方如爐門上凝聚，這是正常現象。
使用微波燒烤組合時，微波爐會有聲響發出。	這些聲響是因為微波爐自動交替轉換微波火力和燒烤火力，實現微波燒烤功能而產生，故這屬於正常現象。
當使用微波燒烤組合及單燒烤功能時，微波爐有白煙冒出及產生異味。	微波爐必須定期洗擦幹淨，特別在使用微波燒烤組合或單燒烤功能後。任何積聚在爐頂及爐壁的油漬，都會引起白煙冒出。
當使用微波燒烤組合及單燒烤功能時，外殼頂部會向上略凸起。	這是由於在石英燒烤管發熱時，其溫度很高，在其上面的外殼部位受熱膨脹，而發生變形，略向上凸起，如果長時間使用，該部位會略變黃，這是屬於正常現象。
當使用微波燒烤組合及單燒烤功能時，前門板會向內略凹陷。	這是由於爐腔內溫度很高，腔內氣壓很低，使前門板受向內氣壓壓力而略向內凹陷，這是屬於正常現象。
電壓波動，會影響微波或燒烤的烹調時間及效果。	當電壓在198V ~ 242V的範圍內波動時，微波爐仍能工作，只是受電壓偏高或偏低的影響，輸出功率會相應升高或降低，故烹調時間及效果會有所變化，這是屬於正常現象。

## 安裝

1. 把微波爐內的包裝物全部取出。
2. 應仔細查看微波爐有否損壞。如有損壞，請立刻聯絡經銷商或本公司維修部。
3. 23L微波爐淨重約 16.7 千克，應放置於有足夠承托力的水平面上。
4. 本微波爐應在通風乾燥，無腐蝕性氣體的環境中使用，遠離高溫及蒸氣。
5. 切勿在爐頂放置任何物件，並保持與頂部壁櫃距離至少20厘米。
6. 微波爐兩旁應與牆壁距離至少5厘米，爐背應與牆壁至少距離10厘米。
7. **警告** — 為了防止觸電，必須確保此微波爐接地良好。

## 接地說明

為了防止觸電，必須確保此微波爐接地良好。任何不合適的接地都可能導致電擊的危險。

注意：1) 如果對接地或電路說明有疑問，可以聯系專業的維修服務人員。

2) 制造商和分銷商都有權利由于微波爐電子電路設計失誤所造成的危險負責。

電源綫不同綫顏色表示的方法：

黃綠色：接地綫

藍色：零綫

褐色：火綫

## 收音干擾

- 1、在微波爐工作的時候可能對收音機、電視或同類設備產生干擾。
- 2、當存在干擾的時候，可以采取下列措施減少或避免：
  - A) 清潔微波爐門和爐腔。
  - B) 適當調整收音機或電視的天線。
  - C) 適當地調整微波爐和接收機的位置。
  - D) 使微波爐遠離接收機。
  - E) 使微波爐和接收機使用不同的插座從而避開干擾。

## 安全使用要點

1. 使用前請詳細閱讀“使用手冊”全部內容。
2. 本微波爐專為家庭加熱及烹調食物而設計，故不適用於其它工商用途。
3. 警告：只有在已經提供充分的指導以致於兒童能夠採用安全的方法使用微波爐，並且明白不正確的使用會造成危險時，才能允許兒童在無人監控的情況下使用微波爐。
4. 用戶使用之前，應檢查所用器皿是否適用於微波爐。
  - a. 微波烹調時切勿使用金屬網架及其它金屬器皿。帶金、銀邊的器皿也不應使用。微波爐中通常使用陶瓷、耐熱玻璃、耐熱塑料或紙質器皿。
  - b. 使用組合（微波燒烤）功能時，切勿將鋁質或其它金屬器皿放在金屬網架上，且金屬網架不應接觸爐腔內壁，以防止打火。
  - c. 窄頸瓶不可直接放入微波爐烹煮。
  - d. 使用保鮮紙遮蓋食物烹調，請將保鮮紙一角摺上，使蒸氣通氣，煮好後將保鮮紙小心拆開，以免蒸氣灼傷。
5. 使用時先放入轉盤支承及玻璃轉盤，再將盛好食物的器皿放在玻璃轉盤上進行烹調。
6. 爐內無食物時，請不要使微波爐工作，以免空載運行損壞微波爐。
7. 切勿將一般的水銀溫度計放入爐內邊加熱，邊測量，以免引起打火或損壞。
8. 烹調少量食物時，要多加觀察，防止過熱起火。
9. 當食物在塑料、紙或其它可燃材料製成的易處理容器中加熱或烹調時，應時時注意，防止起火。
10. 使用燒烤烹調時，爐內溫度很高，故翻轉食物時，應戴上手套。石英燒烤管變紅或剛煮完食物時，切勿碰觸內腔上板。
11. 燒烤烹調不要長期停滯不用，否則由於石英管上沉積過多的油漬，再次使用燒烤時將產生大量的油煙。
12. 烹調中發生冒煙或起火現象時，請不要立刻打開爐門，否則遇空氣會加大火勢，應立即切斷電源。
13. 從微波爐內提取食物和器皿時，應當使用鍋夾或戴上隔熱手套，以免高溫燙傷。
14. 為防止轉盤受損壞，請遵守下列事項：
  - a. 用水清洗轉盤時，應先待轉盤冷卻。
  - b. 切勿置滾熱食品或熾熱容器於冷卻的轉盤之上。
  - c. 切勿置冰冷食品或冰冷容器於熾熱的轉盤之上。
  - d. 注意轉盤的最大負載重量不能超過5kg。
15. 每次微波爐使用完畢，最好將一盛滿水的玻璃杯置於爐內玻璃轉盤上，避免誤操作損壞機器。
16. 不要用微波爐儲存任何物品。
17. 奶瓶和嬰兒食品罐應經過攪拌或搖動，喂食前應檢查瓶內食物的溫度，避免燙傷。
18. 警告：除有資格的維修人員外，其他人來執行檢修操作都是危險的，包括拆下防止微波能量泄漏的防護蓋等操作。

19. 警告：如果微波爐門或門封已損壞，則不得再使用，直到經有資格的維修人員修好為止。
20. 警告：不要直接加熱裝在密封容器內的液體或其他食物，因為這樣有可能發生爆炸。
21. 警告：如果電源軟線損壞，為了避免危險，必須由製造廠、其維修部或類似的專業人員更換。
22. 警告：微波爐屬於有人看管的產品，請在烹調過程中人不要離開現場。

## 食物

1. 切勿煮帶殼蛋，壓力會使蛋爆裂。另外蛋黃、蛋白也要用牙籤刺穿數次。  
警告——已煮好的湯圓或荷包蛋等，馬上取出可能會造成其內部液體沸騰爆破而濺傷人體。注意，應打開爐門後，略擱置一會兒，再取出食用。
2. 煮食時間不宜過長，因為煮食不足可繼續，而過度則無法補救。
3. 烹調食譜所提供的是烹調的大約時間，影響烹調時間的因素有：所喜歡的煮熟程度，食物的初溫、形狀大小、份量和使用器皿的形狀、大小以及食物的排列、遮蓋、翻攪等。請參閱食譜中的“微波爐烹調技巧”，在參照這些因素，適當修正烹調時間。
4. 表面無孔的食物（如蛋、板栗、土豆、香腸等），請去皮或在外皮上開一裂縫或叉幾個小孔，否則受熱膨脹，可能發生爆裂。
5. 不可用微波爐煎炸食物。
6. 燒烤時，不要遮蓋食物，因為食物需要直接吸收輻射熱能。

## 器皿指南

### 注意


根據不同烹調方式，選用合適的器皿十分重要。如果選擇不當，不僅會影響烹調效果，而且還會造成損壞器皿或微波爐的不良後果。

下表中“○”號為適用，“X”為不適用

	微波燒烤組合	燒 烤	微 波
耐熱玻璃	○	○	○
陶、瓷器	X	X	○
一般玻璃	X	X	X
耐熱塑料	X	X	○
一般塑料	X	X	X
微波保鮮膜	X	X	○
金屬網架	○	○	X
金屬器皿	X	○	X

注：使用微波燒烤組合功能時，如果選用金屬網架，則具體操作應參考安全使用要點中第4點的有關內容進行。


## 性能圖示

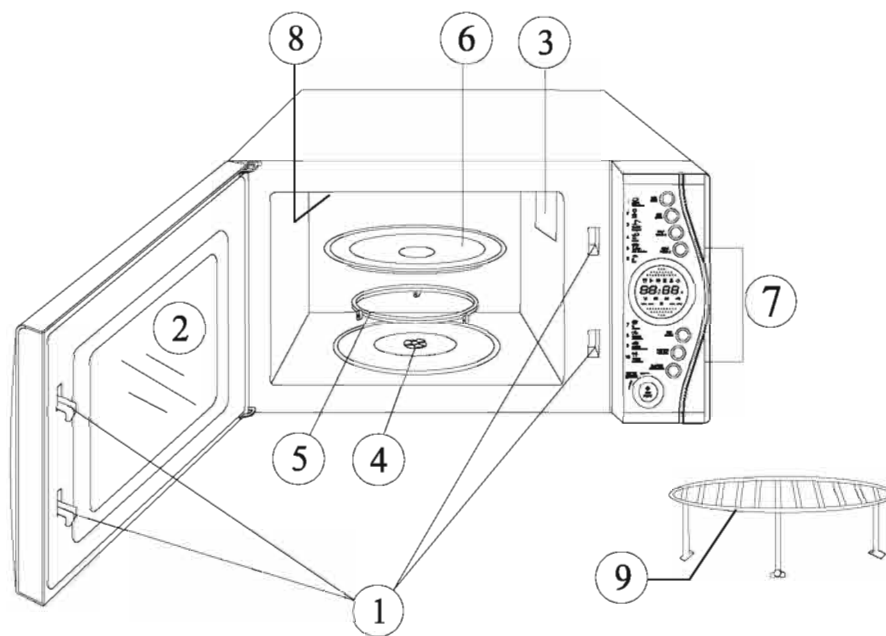


- ① 門安全聯鎖開關 —— 確保：  
爐門打開，微波爐不能工作；  
爐門關上，微波爐才能工作。
- ② 視屏窗 —— 有金屬屏蔽層，可透過  
網孔，觀察食物烹調情況。
- ③ 波導口 —— 磁控管發射的微波進入  
腔體的通道（裝有雲母片，切勿拆卸）。
- ④ 轉軸 —— 帶動玻璃轉盤轉動。
- ⑤ 轉盤支承 —— 支承玻璃轉盤並按其  
軌道轉動。
- ⑥ 玻璃轉盤 —— 裝好食物的容器放  
在轉盤上，加熱時轉盤轉動，使食  
物烹調均勻，以達到理想均勻烹調  
的效果。
- ⑦ 控制板 —— 詳見控制板說明。
- ⑧ 石英燒烤管 —— 在爐腔頂部。
- ⑨ 金屬網架 —— 用於烤食物的托架。

## 控制板說明

微波爐有下述功能，具體使用方法請參閱第 8 頁的「操作方法」。

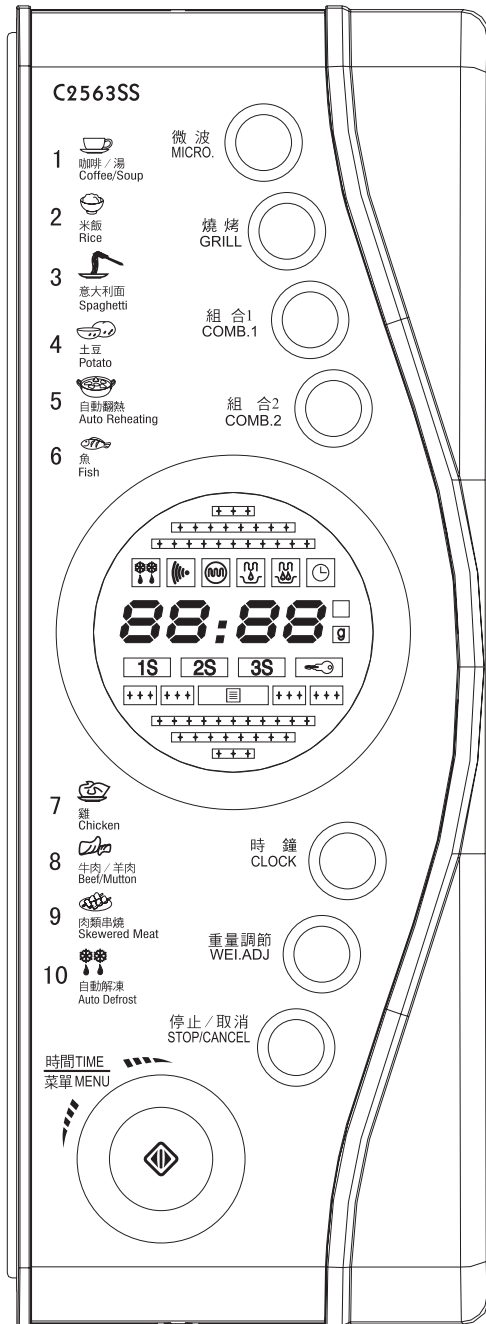

### 顯示窗說明

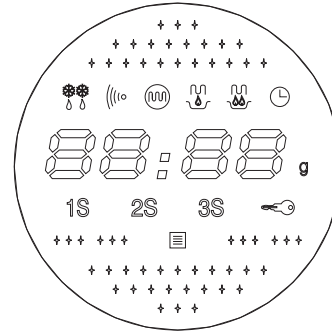

- |     |              |
|-----|--------------|
| 解凍  | 重量           |
| 微波  | <b>1S</b> 一段 |
| 燒烤  | <b>2S</b> 二段 |
| 組合1 | <b>3S</b> 三段 |
| 組合2 | 童鎖           |
| 時鐘  | 自動烹調         |



#### 數碼旋鈕

在待機狀態下：

- 向右旋轉激活時間輸入功能。
- 向左旋轉激活菜單輸入功能。

### 功能

- |       |       |
|-------|-------|
| 時鐘    | 組合燒烤2 |
| 微波烹調  | 自動烹調  |
| 薄塊燒烤  | 多段烹調  |
| 組合燒烤1 |       |

### 特別功能

- |       |
|-------|
| 兒童保險鎖 |
| 計時    |
| 自動提示  |

#### 微波 MICROWAVE

- 用來輸入所需火力。
- 此微波爐有 5 種火力調節，火力強度以20%依次遞減。
- 在微波爐烹調時如不另外輸入火力，微波爐將自動以最高火力烹調。
- 烹調時，如要檢視火力，只需按住「微波」鍵。

- 下面是火力及相應的輸出功率

按“微波”鍵	輸出功率	顯示
按1次	100%高火	P-H1
按2次	80%中高火	P-80
按3次	60%中火	P-60
按4次	40%中低火	P-40
按5次	20%低火	P-20
按6次	0% (計時)	P-00

### 燒烤 GRILL

- 設定薄塊燒烤烹調功能。
- 烹調時間最長可選擇到95分鐘。
- 單一石英管發熱，專門用於烹調薄塊的肉類，如牛扒、豬扒、串燒、香腸或鷄翼等，也適合燒烘三文治等食物。

### 組合1 COMB.1

- 設定微波燒烤組合1烹調功能。
- 烹調時間最長可選擇到95分鐘。
- 30%時間微波輸出，70%時間燒烤輸出，燒烤效果最佳。
- 此功能適合烹調如海鮮、布丁等。

### 組合2 COMB.2

- 設定微波燒烤組合2烹調
- 烹調時間最長可選擇到95分鐘。
- 55%時間微波輸出，45%時間燒烤輸出，微波煮食速度最快。
- 適用於肉類、整只雞、鴨、鵝等，可使其內部煮熟。


### 時鐘 CLOCK

- 用來輸入當日時間或重現當日時間。
- 當微波爐發生故障或切斷電源，必須重新調校時間。
- 本微波爐的時間可設24小時制或12小時制。

### 重量調節 WEI.ADJ

- 當菜單選好，按此按鍵可以選擇您所需的食物重量或份量。


### 數碼旋鈕

- 數碼旋鈕用來調校時鐘。
- 數碼旋鈕用來輸入烹調時間。
- 數碼旋鈕用來設定自動烹調，設定時“”點亮。
- 數碼旋鈕用來啓動烹調程序。

### 停止/取消 STOP/CANCEL

- 在烹調過程中按「停止/取消」鍵一次可以暫停烹調程序；按二次該鍵可取消烹調程序，微波爐恢復為待機狀態，而當日時間不會被取消。
- 在設置烹調程序過程中按「停止/取消」鍵一次可取消已設烹調程序，微波爐恢復為待機狀態，而當日時間不會被取消。
- 注：要想中途停止烹調程序，只需打開爐門，微波爐將立刻停止工作。
- 如不需繼續工作，請按「停止/取消」鍵。
- 如需繼續工作，只要關上爐門，並按下數碼旋鈕，烹調程序便會再次啓動。

### 兒童保險鎖 CHILD LOCK

- 用來防止兒童在沒有成人指導的情況下使用微波爐。
- 當兒童保險鎖啓動後，「」顯示燈將會亮起，此時微波爐不能操作。

### 計時 TIMER

- 用來方便你進行爐外烹飪操作時計時，當計時程序開始，爐內的照明燈、冷卻風扇及轉盤也開始操作，而微波能量却完全停止輻射，計時結束時，將有一段提示聲。

### 自動提示 AUTO REMINDER

- 當完成解凍或烹調程序後，如果爐門不被打開或「停止/取消」鍵 沒有被按下，微波爐顯示窗將閃爍顯示“END”，並每隔兩分鐘自動發出一段提示聲。



## 操作方法

每次按下有效鍵或轉動數碼旋鈕，都有一聲“嘀”音，無效鍵則二聲“嘀”音。

### 調校時鐘

例：設定當前時間為6 時30分。

步驟：1. 按住 **時鐘** 鍵三秒，“嘀”一聲後顯示窗顯示“Hr24”（為24小時制）；如再按一次該鍵，顯示“Hr12”（為12小時制）。

2. 轉動“數碼旋鈕”設置小時位為“06”。

3. 再按 **時鐘** 鍵一次。

4. 轉動“數碼旋鈕”設置分鐘位為“30”。

5. 最后按 **時鐘** 鍵一次，時鐘設置完成。

注：· 要想更改時間，請重復前面步驟。  
· 要想在微波爐操作過程中知道當日時間，可按住 **時鐘** 鍵，當日時間便會持續顯示直到松開為止。

### 微波烹調

例：輸入15分鐘，60%火力的微波烹調程序。

步驟：1. 按下 **微波** 鍵三次。

2. 向右轉動“數碼旋鈕”到15: 00。

3. 按下“數碼旋鈕”啟動程序。

注：如需100%微波火力烹調，請省略步驟1。

### 薄塊燒烤

例：輸入40分鐘，以薄塊燒烤烹調。

步驟：1. 按下 **燒烤** 鍵。

2. 轉動“數碼旋鈕”到40: 00。

3. 按下“數碼旋鈕”啟動程序。

注：薄塊燒烤過程中要適時暫停程序將食物翻轉，烹調效果更好。

### 組合1

例：輸入25分鐘，以組合燒烤1烹調。

步驟：1. 按下 **組合1** 鍵。

2. 轉動“數碼旋鈕”到25: 00。

3. 按下“數碼旋鈕”啟動程序。

注：組合燒烤過程中要適時暫停程序將食物翻轉，烹調效果更好。

### 組合2

例：輸入35分鐘，以組合燒烤2烹調。

步驟：1. 按下 **組合2** 鍵。

2. 轉動“數碼旋鈕”到35: 00。


3. 按下“數碼旋鈕”啟動程序。

注：組合燒烤過程中要適時暫停程序將食物翻轉，烹調效果更好。

### 多段烹調

本微波爐具有將幾種烹調程序組合在一起，進行多段烹調工作的特點。用戶可以一次性輸入三段烹調程序，使烹調更方便。

組合具體內容：

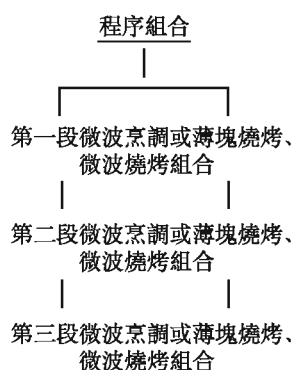

例：輸入多段烹調程序

微波烹調 —— 薄塊燒烤 —— 組合1

- 步驟：1. 輸入微波烹調程序，顯示窗“1S”亮。  
2. 輸入薄塊燒烤烹調程序，顯示窗“2S”亮。  
3. 輸入組合1烹調程序，顯示窗“3S”亮。  
4. 按下“數碼旋鈕”啟動。

注：• 設置多段烹調過程中，相關按鍵之間可以直接切換，無需按“停止/取消”鍵。


- 自動烹調程序不能設定在多段烹調中。
- 一、二段程序完成後都會發出“嘀”一聲。

### 計時


- 步驟：1. 按下 **微波** 鍵六次，顯示窗顯示為“P-00”。
2. 用“數碼旋鈕”輸入所需時間。
3. 按下“數碼旋鈕”啟動即可。

### 兒童保險鎖

a. 兒童保險鎖設置

步驟：按住 **停止/取消** 鍵 3秒“嘀”一聲後童鎖鎖定，顯示燈“ ”亮起，微波爐便不能操作。

b. 解除兒童保險鎖

步驟：按住 **停止/取消** 鍵 3秒“嘀”一聲後童鎖解除，顯示燈“ ”熄滅，微波爐便恢復正常。

### 自動烹調

- 自動烹調的特色，是只需簡單操作便能烹煮各種各樣的食物，無需費時選擇火力或烹調時間。
- 自動烹調的效果受個人煮熟習慣，受食物的擺放，受電網電壓的高低等因素的影響，如不熟再增加幾分鐘微波烹調。

例：輸入400g魚的自動烹調程序。

操作步驟

1. 按“停止/取消”鍵。
2. 向左轉動“數碼旋鈕”到A-6，即“魚”菜單。
3. 按“重量調節”鍵3次，顯示窗顯示400g。
4. 最後按“數碼旋鈕”啟動。

- 自動烹調菜單中雞、牛肉/羊肉、肉類串燒使用的是微波燒烤組合功能，其它菜單使用的是微波功能，請注意使用合適的烹調器皿（具體參閱第4頁的微波爐使用常識中烹調器皿的選擇）。

- 在使用自動烹調的雞、牛肉/羊肉、肉類串燒菜單時，在烹調過程中途會暫停，並發出提示聲。用戶可以根據需要進行相關操作，如加入配料、翻轉食物等。

注：以下菜單括号內容為菜單相應的屏幕顯示

#### 咖啡/湯 (A-01)

烹調對象為常溫下的飲料：咖啡、奶、茶、水等。

注：請覆蓋加熱。

可選份量：

1杯/碗（200ml~250ml）、2杯/碗（400ml~500ml）、3杯/碗（600ml~750ml）

#### 米飯 (A-02)

米用水浸泡20分鐘左右再烹調效果會更好，米水比例要合適，請用微波專用飯煲。

#### 意大利面 (A-03)

請放適量開水進行烹調，使用較深的器皿。

#### 土豆 (A-04)

用牙籤刺穿土豆表皮，可以將土豆整只放在轉盤上進行烹調。

#### 自動翻熱 (A-05)

此功能用於快速加熱變涼的食物。翻熱對象一般為剩飯剩菜、飲料或冷藏在冰箱裏（5℃~10℃）的食物，如比薩、點心等。

#### 魚 (A-06)

此菜單用於快速蒸魚，覆蓋烹調，中途翻轉一次，食物烹調更均勻。

#### 雞 (A-07)

烤雞塊、雞腿、雞翅可直接放在金屬網架上；烤整只雞則放在耐熱玻璃器皿上，中途暫停時，請翻轉食物。

#### 牛肉／羊肉 (A-08)

食物切薄片，應用金屬網架，中途暫停時請翻轉食物。

#### 肉類串燒 (A-09)

將肉片用竹籤串好，請放在金屬網架上烹調，微波爐中途暫停時進行翻轉，效果更好。

#### 自動解凍 (A-10)

只需輸入食物的重量，微波爐會自動選擇解凍時間及火力。解凍對象一般為肉類、家禽類、海鮮類。

注：在解凍過程中的2/3時間，程序會自動暫停，並發出提示聲。用戶可以根據需要進行相關操作，如翻轉食物、取出已解凍食物等。

可選重量範圍（基本解凍量為100克）：  
100克～1800克

### 微波爐的清潔與保養


#### 注 意

切勿使用強洗滌劑、香蕉水、汽油、研磨粉和金屬刷來清洗爐子的任何部位

1. 清洗爐腔之前，須關閉微波爐，並從插座上拔去電源線插頭。
2. 經常保持爐腔清潔。當食物或湯水濺到爐內壁時，可用濕布擦去。如爐內壁很髒則可使用軟性洗劑，切勿使用粗糙、磨損性的洗劑。
3. 必須經常清潔玻璃盤。可先用溫熱的肥皂水清洗，再用清水洗淨擦幹。
4. 必須經常擦洗轉盤支承和爐腔底面。請用軟性劑洗爐腔底面，而轉盤支承則可用溫熱的肥皂水洗，清洗後放回原處。
5. 必須經常清潔門的密封面。可先用軟幹布浸肥皂水清洗，再用軟幹布擦淨。
6. 微波爐外表面用軟幹布浸肥皂水清洗後，再用軟幹布擦淨。注意不要讓水滲入爐縫或通風口。
7. 如控制板被弄濕，則請用軟的幹布抹擦，不能用粗糙、磨損性的洗劑來擦控制板，擦控制面板時，請將爐門打開，以錯誤啟動操作。
8. 爐內外如有蒸氣凝成的水滴，可用軟布擦淨。
9. 當使用薄塊燒烤或微波燒烤功能時，有些食物的油漬會留在爐的內壁上，不作定期清潔，可能在使用時冒煙。這些污漬必須及時清潔。
10. 爐內如有異味，可用一杯水加幾匙檸檬汁煮 5-7 分鐘，即可消除。
11. 微波爐若長期不用，應拔掉電源插頭，放在通風乾燥，沒有腐蝕性氣體的環境中。
12. 爐子發生故障，必須由本公司的專業維修人員檢修，其它任何人拆修將是危險的。

## Instructions for use

**C2563SS**

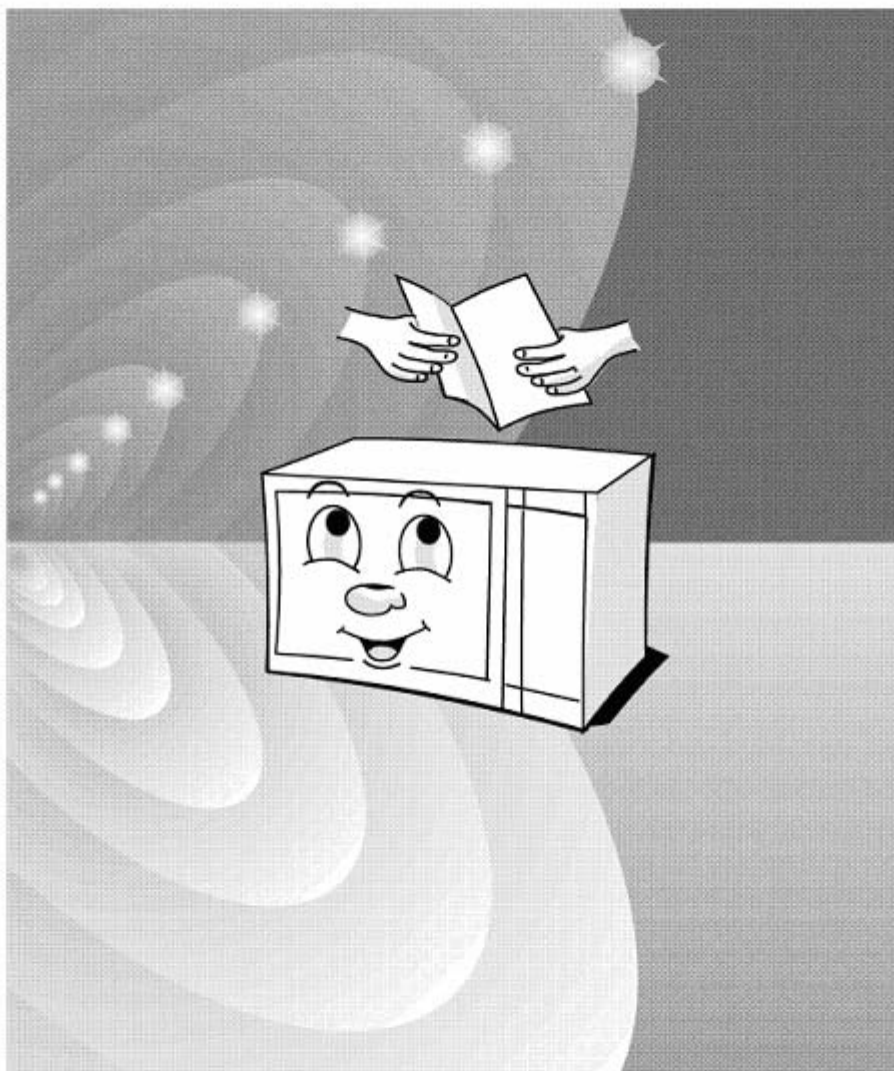

 **Whirlpool**

**Please read these instructions carefully and keep for future reference before installing and operating the oven.**

## **CONTENTS**

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY-----	1
SPECIFICATIONS* -----	2
BEFORE YOU CALL FOR SERVICE-----	2
INSTALLATION -----	2
GROUNDING INSTRUCTIONS-----	3
RADIO INTERFERENCE -----	3
IMPORTANT SAFETY INSTRUCTIONS-----	3
MICROWAVE COOKING PRINCIPLES -----	4
UTENSILS GUIDE -----	4
PART NAMES -----	5
CONTROL PANEL -----	6
HOW TO SET THE OVEN CONTROLS -----	7
SETTING THE CLOCK -----	7
MICROWAVE COOKING -----	7
GRILL COOKING -----	7
MICROWAVE +GRILL -----	7
MENU COOK & AUTO DEFROST -----	8
MULTI-STAGE COOKING -----	8
CLEANING AND CARE -----	9

### **PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the :
  - ① Door ( bent ),
  - ② Hinges and latches ( broken or loosened ),
  - ③ Door seals and sealing surfaces.
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- (e) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

## SPECIFICATION

Power Consumption:	230V, 50Hz, 1400W (Microwave) 230V 1000W (GRILL)
Rated Microwave Power Output:	900W
Operation Frequency:	2450MHz
Outside Dimensions:	310mm(H)×508mm(W)×455mm(D)
Oven Cavity Dimensions:	237mm(H)×338mm(W)×348mm(D)
Oven Capacity:	25Litres
Cooking Uniformity:	Turntable System{Φ314mm}
Net Weight:	Approx. 16.7kg

## BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFY THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

## INSTALLATION

1. Make sure that all the packing materials are removed from the inside of the oven compartment.
2. **WARNING:** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the oven compartment or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. **WARNING:** Improper use of the grounding plug can result in a risk of electric shock.

### Note

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

**Green and Yellow = EARTH**

**Blue = NEUTRAL**

**Brown = LIVE**

## RADIO INTERFERENCE

1. Operation of the microwave oven can cause interference to your radio, TV, or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
  - a) Clean door and sealing surface of the oven.
  - b) Reorient the receiving antenna of radio or television.
  - c) Relocate the microwave oven with respect to the receiver.
  - d) Move the microwave oven away from the receiver.
  - e) Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** When using electrical appliance basic safety precautions should be followed to reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard
5. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
6. **Warning:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

7. To reduce the risk of fire in the oven cavity:
  - a. When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition;
  - b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - c. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
  - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
8. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.
9. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
10. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
12. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Utensils should be checked to ensure that they are suitable for use in microwave oven.
16. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
17. Do not use your microwave for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result. If material inside/outside the oven should ignite or smoke is observed, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.
18. Do not over-cook food. Fire could result.
19. Do not leave the oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.
20. The ventilation openings on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.

## MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwaving to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.
6. Always refer to a microwave cookbook for details, especially if cooking or reheating food that contains alcohol.




## UTENSILS GUIDE

1. The ideal material for a microwave utensil is transparent to microwave, it allows energy to pass through the container and heat the food.
2. Microwave can not penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.


Cookware	Microwave	Grill	Combination*
Heat-Resistant Glass	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes
Microwave-Safe Plastic Dish	Yes	No	No
Kitchen Paper	Yes	No	No
Metal Tray	No	Yes	No
Metal Rack	No	Yes	No
Aluminum Foil & Foil Container	No	Yes	No

## PART NAMES

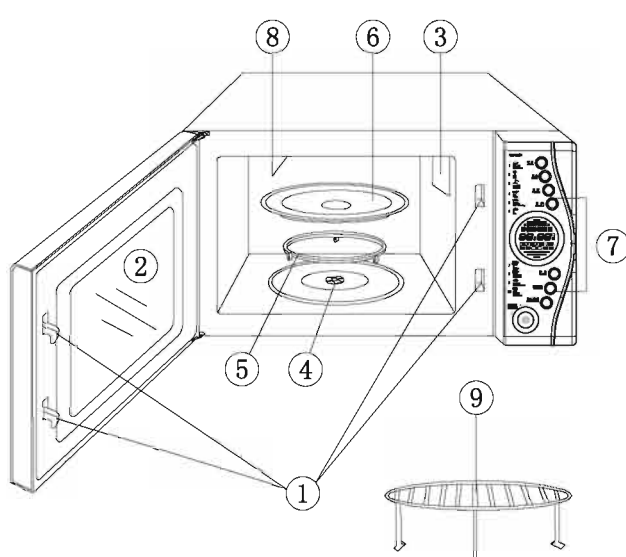

1. Door Safety Lock System
2. Oven Window
3. Oven Air Vent
4. Shaft
5. Roller Ring
6. Glass Tray
7. Control Panel
8. Grill Heater
9. Metal rack

## CONTROL PANEL

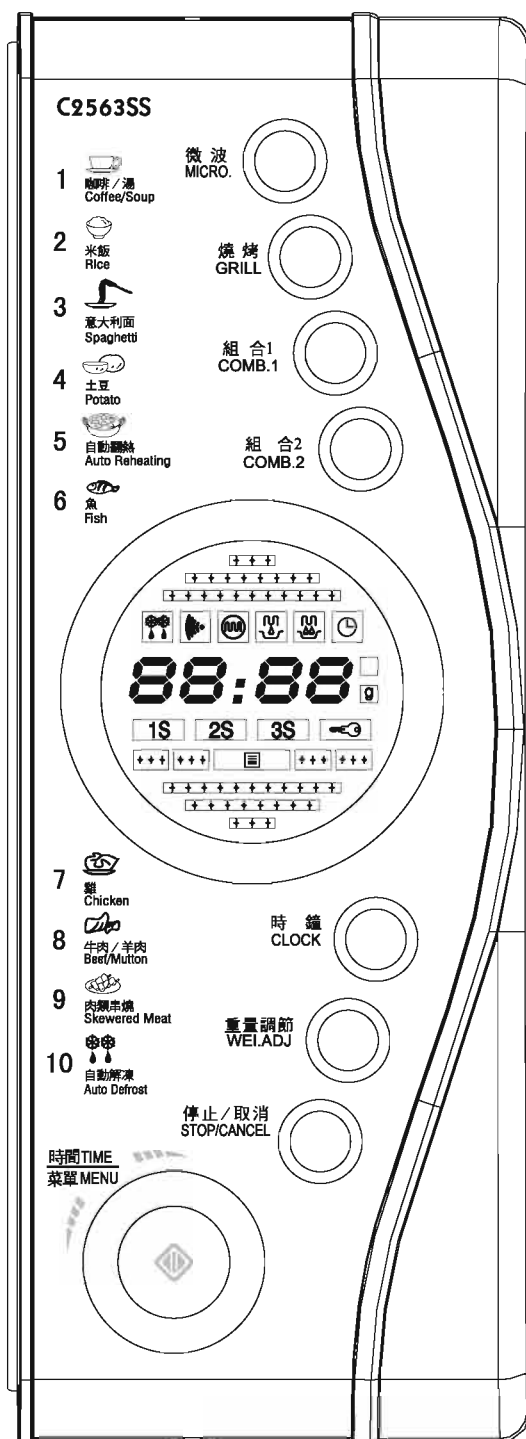

### DISPLAY SCREEN

Cooking time, power, indicators and present time are displayed.

### MICRO.

Press to select microwave power level.

### GRILL

Press to set a grill cooking program.

### WEI.ADJ.

Press to select weight of food to be cooked or defrosted.

### COMB.1/COMB.2

Press to set a combination cooking program.

### TIME/MENU (DIAL)

Rotate to set cooking time or select auto-menu.

### START ( )

Press to start cooking program.

### CLOCK

Press to select the amount of food press and hold to set time.

### STOP/CANCEL

Touch to stop cooking program or clear all previous settings before cooking starts.

(Please also see the following pages for more detail)

## HOW TO SET THE OVEN CONTROLS

### BEEPS DURING OVEN SETTINGS

- ♦ ONE BEEP: Oven accepts the entry.
- ♦ TWO BEEPS: Oven does not accept the entry. Please check and try again.

### SETTING THE CLOCK

1. In waiting mode, press and hold CLOCK for 3 sec.
2. choose to set the clock in 24 or 12 hour cycle by touching the CLOCK.
3. Rotate the TIME/MENU dial until the correct hour is displayed.
4. Press CLOCK button.
5. Rotate the TIME/MENU dial until the correct minute is displayed.
6. Press CLOCK button to confirm.

### MICROWAVE COOKING

Microwave cooking allows you to customize cooking power and time. First, you select a power level by pressing the MICRO. button a number of times (see the table below). Then you set the cooking time (maximum 95), before pushing the START button.

Press	Power Level
Once	100% of total
Twice	80%
Thrice	60%
4 times	40%
5 times	20%
6 times	0%

Suppose you want to cook for 5 minute at 60% power level.

1. Press MICRO. button 3 times.
2. Use the TIME/MENU dial to enter cooking time until the correct cooking time (5:00) is displayed.
3. Press START button.

#### NOTE:

1. If you want to temporarily stop a cooking session, press the STOP/CANCEL pad

once and then you can start the cooking again by press START; or press the STOP/CANCEL twice to cancel the cooking program altogether.

2. After the cooking time ends, the system will beep four times and END is displayed. Before starting another cooking session, press STOP/CANCEL pad to clear the display and reset the system.

### GRILL COOKING

With radiant heat cooking, the operation is pretty much the same as microwave cooking, but the result may differ somewhat as each of the cooking techniques are particularly suitable for a certain category of food. In this case, thin slices of meat, sirloin, and sausage.

For example, to cook with radiant wave for 12 minutes:

1. Press GRILL pad.
2. Turn the TIME/MENU dial to 12:00.
3. Press START button.

### MICROWAVE +GRILL

This feature allows you to combine grill and microwave cooking on two different settings. First, press this button once to choose an appropriate combination setting, then, at the screen prompt, enter the desired cooking time by turning the TIME/MENU dial. After you have pushed the start button, the system begins to count down.

#### COMBINATION 1

30% time for microwave cooking, 70% for Grill cooking. Use for fish, potatoes or au gratin.

Suppose you want to set combination 1 cooking for 25 minutes.

1. Press COMB. 1 button once.
2. Turn TIME/MENU to 25:00.
3. Press START.

#### COMBINATION 2

55% time for microwave cooking, 45% for Grill cooking. Use for puddings omelettes, baked

potatoes and poultry.

Suppose you want to set combination 2 cooking for 12 minutes.

1. Press COMB.2 button.
2. Turn TIME/MENU to 12:00.
3. Press START button.

### **MENU COOK & AUTO DEFROST**

For food or the following cooking mode, it is not necessary to program the duration and the cooking power. It is sufficient to indicate the type of food that you wish to cook as well as the weight of this food.

1. Rotate TIME/MENU anti-clockwise to select food code for the food to be cooked.
2. Select food weight by pressing the WEI.ADJ. a number of times, check the screen for food weight which should match the weight of food you've placed in the oven.
3. Press START.

#### **Auto Cook Code/Menu**

SELECT FOOD CODE	Notes
1 coffee/soup	1, The user is required to set weight for the system to determine the time needed to do the job, without entering cooking time by the user who might first at a loss as to how much time is needed for the cooking.
2 rice	
3 spaghetti	
4 potato	
5 auto reheating	2. For foods coded 7 (chicken), 8 (beef/mutton), 9 (skewered meat), oven beeps in the middle of cooking to remind the user to turn food for uniform cooking, if the system detects no operation, 2 minutes later resumes cooking.
6 fish	
7 chicken	
8 beef/mutton	
9. skewered meat	
10. auto defrost	

### **MULTI-STAGE COOKING**

Your oven can be programmed for up to 3 automatic cooking sequences.

Suppose you want to set the following cooking program.:

1. input a first stage cooking program.
2. input a second stage cooking program.
3. input a third stage cooking program.
4. press START.

## **OTHER CONVENIENT FEATURES**

### **CHILD PROOF LOCK**

The child proof lock prevents unsupervised operation by little children.

To set the child proof lock: Press STOP/CANCEL button for 3 seconds, then a beep will sound and the indicator light will come on. In the lock state, all buttons are disabled.

To cancel the child proof lock: Press STOP/CANCEL button for three seconds, then a

beep will sound and the indicator light will come off.

### **TO STOP THE OVEN WHILE THE OVEN IS OPERATING**

1. Press STOP button.  
You can restart the oven by pressing START pad.  
Touch STOP/CANCEL to erase all instructions.

2. Open the door.

You can restart the oven by closing the door and pressing START pad.

**NOTE:**

Oven stops operating when door is opened.

## **CLEANING AND CARE**

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
11. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.