

DIGITAL MIXING CONSOLE

**M7CL**

VERSION 3

## M7CL StageMix V2.0 User Guide

---

**StageMix**



### **Welcome:**

*Thank you for downloading the “M7CL StageMix” iPad app for the Yamaha M7CL digital mixing consoles. This version of StageMix is for use with M7CL firmware V3.5 and higher.*

*The latest firmware version for M7CL can be downloaded from [www.yamahaproaudio.com](http://www.yamahaproaudio.com)*

*StageMix provides remote control of M7CL functions via a simple, intuitive graphical interface from anywhere within wireless range. The software has been specifically designed to allow engineers to adjust monitor mixes from the performers' positions on stage, directly controlling mix parameters via the iPad rather than having to rely on verbal directions to a second engineer. The result is better mixes in less time: a huge advantage during high-pressure pre-show setup. StageMix does not provide remote control of all M7CL parameters, but is focused on the requirements for adjusting monitor mixes on stage.*

# CONTENTS

	<b>Page</b>
<b>1.0 System Requirements</b>	<b>4</b>
<b>2.0 Wi-Fi Settings</b>	<b>4</b>
<b>3.0 Getting Started</b>	<b>5</b>
3.1 M7CL Network Setup	5
3.2 iPad Wi-Fi Settings	5
3.3 StageMix Setup	6
3.3.1 OFFLINE DEMO Mode	7
3.3.2 Configure StageMix to Work with an M7CL	7
3.3.3 Select a Mixer and Begin Working	8
<b>4.0 StageMix Operation</b>	<b>9</b>
4.1 Mixer Window	9
4.1.1 Channel Bank Navigation	9
4.1.2 Channel Names	10
4.1.3 Faders	10
4.1.4 Channel ON	10
4.1.5 CUE	11
4.1.6 Master Bank	11
4.2 SETUP	12
4.2.1 Fader Delay	12
4.2.2 Filled EQ Graph	12
4.2.3 Set EQ band to 0dB with Double-Tap	12
4.2.4 Enable Inc/Dec Scene Recall	12
4.2.5 Channel Select – StageMix Follows Console	12
4.2.6 Channel Select – Console Follows StageMix	12
4.3 Long Faders	13
4.4 HA GAIN	14
4.4.1 Input Port	14
4.4.2 Phantom Power	14
4.4.3 Phase	15
4.5 SENDS ON FADERS	15
4.5.1 Mix Send Levels	16
4.5.2 Mix Sends ON	16
4.6 EQ Editing	17
4.7 Parametric EQ Editing Screen	18
4.7.1 HPF	19
4.7.2 EQ Bands 1 & 4	20
4.7.3 EQ ON	20
4.7.4 EQ FLAT, EQ DEFAULT	20
4.8 Graphic EQ Editing Screen	21
4.8.1 Navigation in the GEQ Overview Section	21
4.8.2 Rack Position	21
4.8.3 GEQ Type	22
4.8.4 Editing GEQ Bands	22

4.8.5	Navigation in the GEQ Editing Section	22
4.8.6	GEQ ON	22
4.8.7	GEQ FLAT	22
4.8.8	Copy/Paste	22
4.9	SCENE MEMORY	23
4.9.1	Current Scene	23
4.9.2	Decrement / Increment Scene	24
4.9.3	Scene List	24
4.9.4	Scene Range	24
4.9.5	Selected Scene	25
4.9.6	Store Scene	25
4.9.7	Undo Store	25
4.9.8	Recall Scene	25
4.9.9	Undo Recall	26
<b>5.0</b>	<b>Troubleshooting</b>	<b>27</b>
5.1	No Wi-Fi Available	27
5.2	Connection Error	27
5.3	Connection Lost	28
5.4	Graphic EQ Doesn't Affect the Sound	28
5.5	Problems Moving Multiple Faders	29
5.6	Incompatibility with Earlier M7CL Versions	29

### Special Notices

- The software and this Owner's Manual are the exclusive copyrights of Yamaha Corporation.
- Copying of the software or reproduction of this manual in whole or in part by any means is expressly forbidden without the written consent of the manufacturer.
- Yamaha makes no representations or warranties with regard to the use of the software and documentation and cannot be held responsible for the results of the use of this manual and the software.
- The company names and product names in this Owner's Manual are the trademarks or registered trademarks of their respective companies.
- The screen displays as illustrated in this Owner's Manual are for instructional purposes, and may appear somewhat different from the screens which appear on your computer.
- Future upgrades of application and system software and any changes in specifications and functions will be announced separately.
- Apple, the Apple logo, and iPad are trademarks of Apple Inc., registered in the U.S. and other countries.
- Windows® is the registered trademark of Microsoft® Corporation.

## 1.0 System Requirements

- Apple iPad (any model)
- Yamaha M7CL digital mixing console with V3.5 firmware or higher (any model, including M7CL-48, M7CL-32, M7CL-48ES)
- Wi-Fi access point (preferably with 802.11n, 5GHz capability, though 2.4GHz and 802.11g will also work)
- CAT5 cable (to connect M7CL to Wi-Fi access point)

## 2.0 Wi-Fi Settings

Configure the Wi-Fi access point, following the manufacturer's instructions. No special settings are needed, but using security such as WPA is highly recommended, to prevent unwanted devices from joining the network. Here are some suggested settings to assist less experienced Wi-Fi users:

1. Give the wireless network a name (this is the "SSID").
2. Choose a security mode (such as WPA) and password.
3. Select the wireless mode (802.11g or n).
4. In the case of "n", select the wireless band (2.4 or 5GHz).
5. If available, enable "Auto Channel Selection" so the wireless channel with the least interference will be selected.

802.11n networks at 5GHz are preferred because they allow faster communication between the iPad and the Wi-Fi access point. Practically, this could result in more accurate level metering with the StageMix app. Also, with 802.11n being a new standard, it is less prone to interference from other wireless networks. Using a Wi-Fi access point with 2 or more external aerials is recommended to increase potential signal range.

## 3.0 Getting Started

### 3.1 M7CL Network Setup

- I. Connect the Wi-Fi access point to the M7CL's network port via a CAT5 cable. Note that a cross-over cable will be needed with older access points that don't have the "auto MDIX" function. Most recent devices will support "auto MDIX", in which case a straight CAT5 cable can be used.
- II. Note the IP address and MAC address of the M7CL - they will need to be entered into the iPad later. They can be found in the console as follows:
  - a. Press the [SETUP] button on the M7CL touchscreen
  - b. Press [NETWORK] on the M7CL touchscreen



### 3.2 iPad Wi-Fi Settings

The iPad needs to be given a static IP address in the same range as the M7CL's IP Address.

- a. Open the iPad "Settings" menu
- b. Select "Wi-Fi", and choose the correct network



- c. Press the blue circle with the white arrow to the right of the selected network to edit the IP address.

d. Select [Static].



- e. Write an IP Address similar to the one for the M7CL, but with just the last number different. (For example, if M7CL is 192.168.0.128, give an address to the iPad such as 192.168.0.127).
- f. Enter a Subnet Mask such as “255.255.255.0.”
- g. Press the iPad’s Home button to exit the Settings menu.

### 3.3 StageMix Setup

Launch the “M7CL StageMix” App



The “Select Mixer” screen will appear. From this screen, you can do any of the following things:

- Access the OFFLINE DEMO mode to explore the features and user interface of M7CL StageMix.
- Configure StageMix to work with an M7CL console.
- Select an M7CL console that has already been configured to work with your iPad and begin using StageMix.

### 3.3.1 OFFLINE DEMO

If [OFFLINE DEMO] is pressed in the “Select Mixer” screen, all the functions of StageMix will operate independently of any mixing console. It is a useful way to demonstrate and learn how to use the app without the need for a mixer. Level meters will not work in this mode.

### 3.3.2 Configure StageMix to Work with an M7CL


- i. Press [ADD MIXER] to open the following screen:



- ii. Tap on the blank Name field and enter a name for your M7CL using the iPad's onscreen keyboard.
- iii. Enter the M7CL IP address noted in 3.1. The default IP Address may not need to be changed but confirm this in the Network Setup screen of the M7CL console (refer to 3.1). If you need to modify the IP Address in StageMix, make sure you include the dots between the sets of numbers (as shown above).
- iv. Enter the M7CL MAC address noted in 3.1. When entering the MAC Address, the colons between sets of characters will be automatically added by StageMix.
- v. Select the Model of M7CL console from the choices of M7CL-48 or M7CL-32. Select M7CL-48 if you use the M7CL-48ES.
- vi. Press the [ADD MIXER] button at the bottom of the screen

### 3.3.3 Select a Mixer and Begin Working

If your iPad has been configured to work with an M7CL console, select the mixer from the list and press [CONNECT]. (The model of mixer (M7CL-48 or M7CL-32) will appear in smaller text below the mixer's name.)

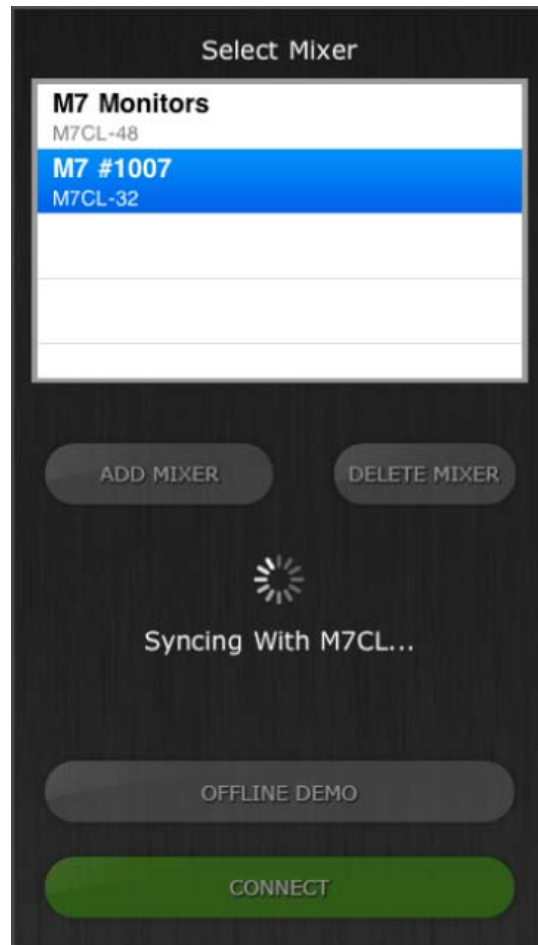

The message “Syncing With M7CL...” will appear while StageMix is obtaining parameters from the console. After this process is complete, the Mixer window will appear and StageMix is ready to be used.

If StageMix cannot connect with your M7CL, refer to the Troubleshooting section (5.0) at the end of this document for possible solutions.



## 4.0 StageMix Operation

### 4.1 Mixer Window

The main page of the StageMix is called the “Mixer” window. It shows the EQ curve, CUE and ON buttons, fader and level meters, and channel names for eight adjacent channels.




Across the top of the screen, level meters and faders are displayed in blocks of channels for mono Input Channels 1-48, Stereo Input Channels 1-4, Mix and Matrix busses, and the Master Stereo and Mono busses. This is the “Navigation/Meter Bridge”.

#### 4.1.1 Channel Bank Navigation

Press any of the “Navigation/Meter Bridge” blocks to select which bank of channels is viewed and controlled in the fader strips below.

#### 4.1.2 Channel Names

The channel names are obtained from the M7CL mixer. They cannot be edited in StageMix. The names are dimmed if the channel is switched off.

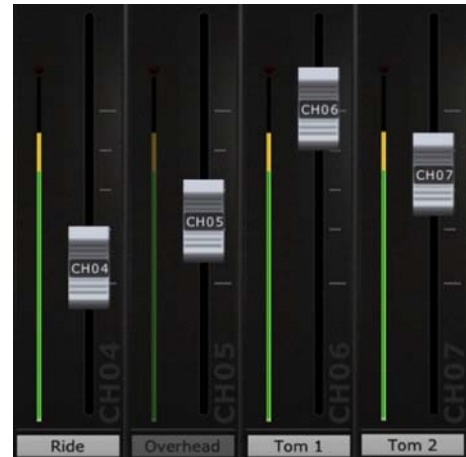

#### 4.1.3 Faders

Each fader has its channel number displayed on its cap. The fader cap must be touched to allow the level to be adjusted. The fader will not “jump” or “ramp” to a new position on the slider. When a fader cap is touched, its background will lighten and its current dB value will be displayed. Using the iPad’s multi-touch facility, up to eight faders can be moved simultaneously.

Note: “Multitasking Gestures” must be turned Off in the iPad in order to allow four or more faders to be adjusted simultaneously.



#### 4.1.4 Channel ON

Press [ON] to change the on/off status of the channel. The button is green when the channel is on. When a channel is off, its name and level meter will go dim, and its fader position shown in the “Navigation/Meter Bridge” will also go dim.

#### 4.1.5 CUE

The [CUE] buttons for each channel control the mixer's cue functions. Their operation mode corresponds to the status of the [LAST CUE] button on the left side of the Mixer Overview.

When the [LAST CUE] button is highlighted yellow, only one channel can be cued at a time. When this button is grey, multiple channels can be cued simultaneously. This is equivalent to Mix Cue mode in the M7CL console.

The [CUE CLEAR] button will cancel any cues that have been activated. This is useful when there are multiple cues to cancel, and when some are hidden in other layers.

#### 4.1.6 Master Bank

Pressing the [Master] block in the “Navigation/Meter Bridge” will cause channels from the master section to appear in the fader strips. Included in this block are the Stereo Master channel, Mono Master channel and the Monitor Level and On control.

Note: there are two EQ thumbnails above the Stereo Master channel. Parametric EQ is always linked for the left and right sides of the Stereo Master channel. However it is possible to have independent GEQs assigned to the left and right side of the Stereo Master.




## 4.2 SETUP

Press the [SETUP] button in the upper left area of the Mixer window to open a new window which allows user preferences to be selected.

### iPad Status Bar

The iPad's Status Bar is visible in this screen, allowing the Wi-Fi signal strength and the battery charge status to be viewed.

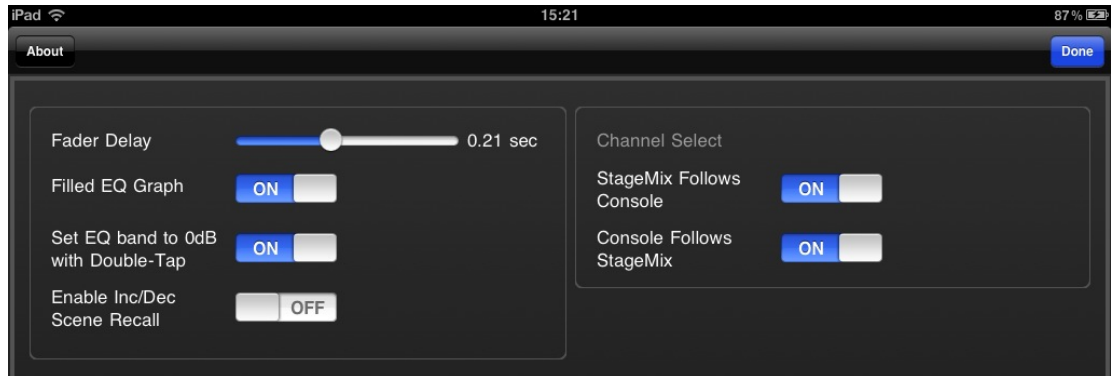

Press [Done] in the top-right corner to return to the Mixer window.

### 4.2.1 Fader Delay

This is a safety function to avoid accidental fader movements. The value set here is the time needed to wait between touching a fader and being able to move it.

### 4.2.2 Filled EQ Graph

When this preference is ON, the EQ graph will be filled in, as it is on the M7CL screen. When it is off, only the outline of the graph will be shown.

### 4.2.3 Set EQ band to 0dB with Double-Tap

When this preference is ON, Parametric and Graphic EQ Gains can be set to 0dB by double-tapping on the EQ band.

### 4.2.4 Enable Inc/Dec Scene Recall

When this preference is ON, buttons will appear in the Scene Memory screen that allow instant recall of the Next or Previous Scene Memory. Refer to section 4.9.2 for more details.

### 4.2.5 Channel Select – StageMix Follows Console

When this preference is ON, the currently selected channel in the StageMix Parametric and Graphic EQ screens will follow the Selected Channel in the M7CL. This feature is only available with M7CL firmware V3.5 and higher.

### 4.2.6 Channel Select – Console Follows StageMix

When this preference is ON, the Selected Channel in the M7CL will follow the currently selected channel in the EQ screens of StageMix. This feature is only available with M7CL firmware V3.5 and higher.

### 4.3 Long Faders

Press the [LONG FADERS] button at the bottom-left corner of the Mixer window to allow more accurate adjustment of the currently selected fader block. In this view, EQ curves and the “Navigation/Meter Bridge” are not visible.



Press the [LONG FADERS] button in the bottom-left corner again to return to the Mixer Overview.



#### 4.4 HA GAIN

The head amp gain for each input channel can be controlled using the faders in StageMix. Press the [HA GAIN] button in the lower left portion of the Mixer window to enter HA GAIN mode. This button will turn red and the background behind the channel faders will become red to indicate that StageMix is in HA Gain control mode.



Faders can be moved to change the HA Gain for each channel. The gain value of each head amp will be displayed above the fader while any fader cap is being touched. Up to 8 faders can be adjusted simultaneously.

Faders will only appear for channels that have a head amp available. In the screenshot above, channel 8 does not have a head amp available.

##### 4.4.1 Input Port

When HA GAIN mode is active, the input port assigned to each channel will be displayed at the top of each channel strip (the EQ thumbnail is not displayed when HA GAIN mode is active).

Note: the Input Port is a display-only parameter and cannot be edited from StageMix.

##### 4.4.2 Phantom Power

The 48V phantom power status for each input channel is also displayed at the top of each channel strip when HA GAIN mode is active. The 48V indicator will appear in red when phantom power is active.

Note: the Phantom Power status is a display-only parameter and cannot be edited from StageMix.

#### 4.4.3 Phase

The Phase setting for each input channel appears near the top of the channel strips when HA GAIN mode is active. The Phase setting can be edited from StageMix by pressing this button. The button will have a grey background when the Phase setting is normal and will change to an orange background when Phase is reversed.

#### 4.5 SENDS ON FADERS

Press the [SENDS ON FADERS] button in the left column of the Mixer screen to access sends to Mix and Matrix busses. In “SENDS ON FADERS” mode, each fader controls the send level from its channel to the currently selected Mix/Matrix bus.



A large button will appear to show the currently selected Mix or Matrix bus, and its name. The color of this button matches those used on the M7CL console. [CUE] and [ON] buttons appear below, allowing the currently active Mix or Matrix bus to be Cued and turned On/Off.

Press the colored [MIX ON FADERS] button to select a new target Mix Bus:



Choose from Mix 1-16 and Matrix 1-8. The currently selected Mix will appear as a white button with a check mark. Stereo pairs appear as single large buttons.

#### 4.5.1 Mix Send Levels

When in “SENDS ON FADERS” mode, the fader in each channel strip controls the level being sent from that channel to the currently selected Mix Bus.

Note: if a Mix Bus is set to “Fixed” mode, send levels to that Mix Bus are fixed at 0dB and cannot be adjusted. Mix Send faders will not appear when a Mix Bus set to “Fixed” mode is selected.

#### 4.5.2 Mix Sends ON

In “SENDS ON FADERS” mode, the [ON] button in each channel strip is used to turn On/Off the Mix Send from each channel to the currently selected target Mix/Matrix bus.

When a Mix, Matrix or Master block is selected in the “Navigation/Meter Bridge”, the [SENDS ON FADERS] button is not available.

To exit “SENDS ON FADERS” mode, press the [SENDS ON FADERS] button in the left column.




## 4.6 EQ Editing

Every channel in the M7CL has a dedicated Parametric EQ (PEQ). The M7CL also has Graphic EQs (GEQs) that can be assigned (inserted) on input or output channels.

Note: assignment of GEQs to channels must be done on the console and cannot be done in StageMix.

### EQ Curve in Mixer Screen

The EQ curve section on the Mixer Screen will show the user whether a GEQ is available on any channel. If GEQ is available on a channel in addition to PEQ, the user will be able to view the curve for either of these EQs and access the editing screen for either type of EQ.

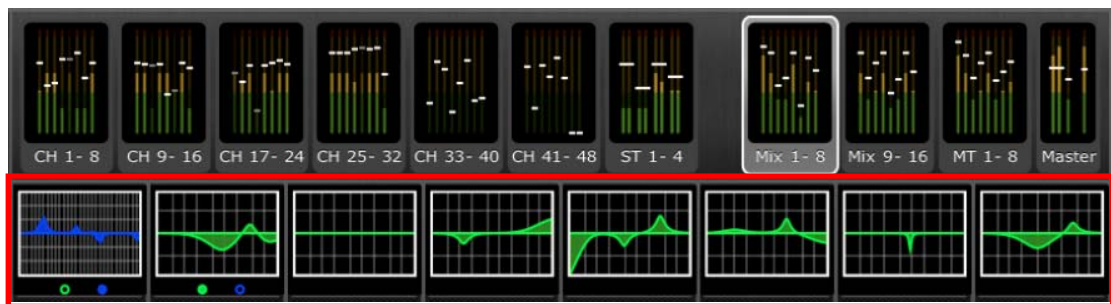

Green and blue dots below each EQ curve indicate the types of EQ available on that channel, and the type of EQ (PEQ or GEQ) that is currently displayed for that channel. A green dot indicates PEQ and a blue dot indicates GEQ. When only PEQ is currently available on a channel, no dots will appear below the curve. (In Demo mode, GEQs appear on Mix busses 1, 7 and 8).

In the example above:

- Mix Bus 1 has both PEQ and GEQ available, and GEQ is currently being displayed (the blue dot is solid and the curve is blue).
- Mix Bus 2 has both PEQ and GEQ available, and PEQ is currently being displayed (the green dot is solid and the curve is green).
- Mix Busses 3-8 have only PEQ available so no dots are displayed below their EQ curves.

### Changing the EQ Curve Display between PEQ and GEQ

On any channel displaying both a green and blue dot below the EQ curve, the user can select either of those EQ types to be displayed by using a swipe gesture in the EQ curve area.

If a PEQ curve is currently displayed, swiping from right to left will cause the GEQ curve to be displayed.

If a GEQ curve is currently displayed, swiping from left to right will cause the PEQ curve to be displayed.


### Accessing the EQ Editing Screens

To access the PEQ or GEQ Editing Screens, tap on the EQ curve to open the appropriate EQ Editing screen.

- If a PEQ curve is displayed, the PEQ Editing Screen will be accessed.
- If a GEQ curve is displayed, the GEQ Editing Screen will be accessed.

Note: the EQ editing screen will be accessed when the finger is removed from the curve. Swipe gestures will not cause the Editing screen to be accessed.

#### 4.7 Parametric EQ Editing Screen

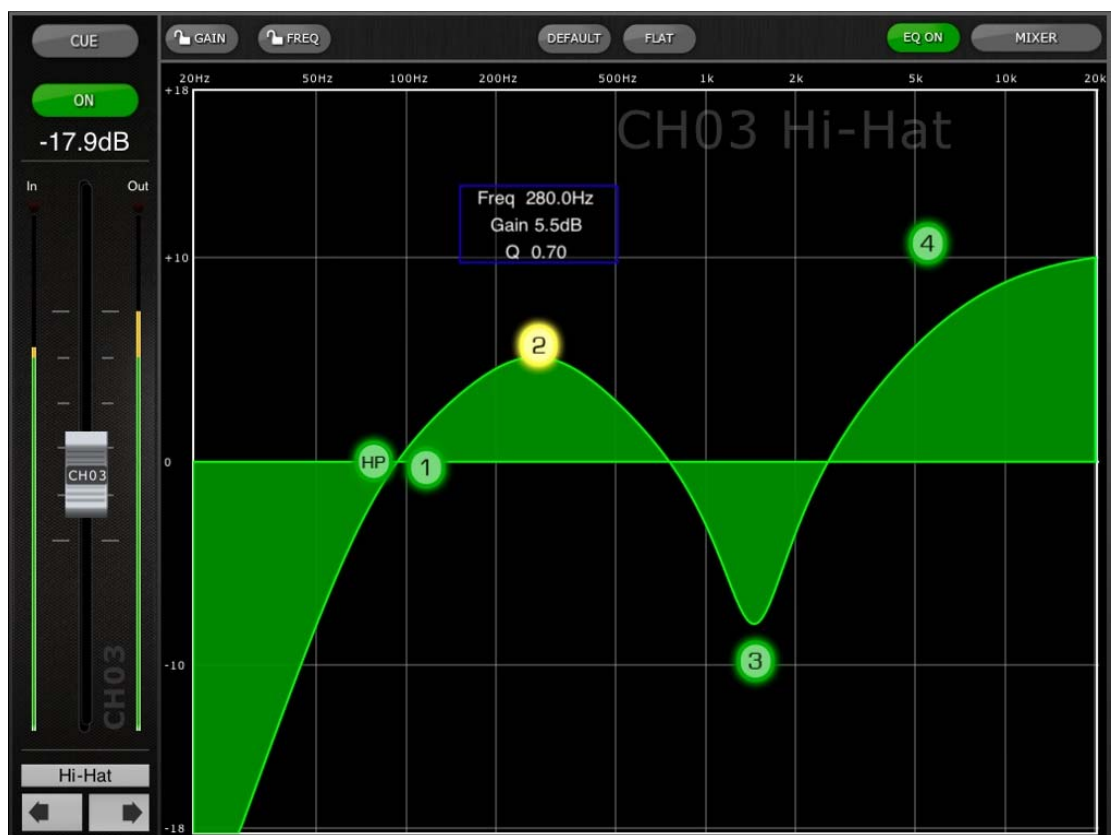

The current channel's Name, Fader, Level Meters, [ON] and [CUE] buttons are shown in the left column. At the bottom-left, there are "previous" and "next" arrow buttons for navigating to different channels.

Note: the In/Out meters display the levels going In and Out of the EQ section.

One band of Parametric EQ can be adjusted at a time. Press one of the green circles to select the band, and it will be highlighted yellow. EQ bands in StageMix are labelled as follows:

HP = HPF (input channels only)

1 = Low Band

2 = Low-Mid Band

3 = High-Mid Band

4 = High Band


The current values for Freq, Gain and Q will be displayed for the currently selected EQ band.

Gain and Frequency can be adjusted by dragging the circle around the graph. Q is adjusted by using the iPad's "pinch" gesture: hold one finger (or thumb) on the screen while moving another finger closer to or further away from the first.


#### *TIP*

*The most comfortable and accurate way of adjusting Q is to use a vertical pinch movement with the thumb and forefinger.*

While an EQ band is being moved, the parameter value will turn yellow to indicate that it has changed. The little yellow arrows show which direction the band should be moved to return to its previous position.

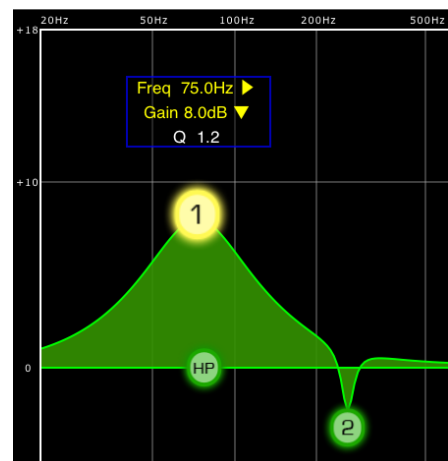

In some cases, it may be necessary to adjust the gain without altering the frequency. Or to adjust the frequency without changing the gain. In this case, the "Gain Lock" or "Frequency Lock" functions can be used. These buttons are located at the top of the EQ graph.

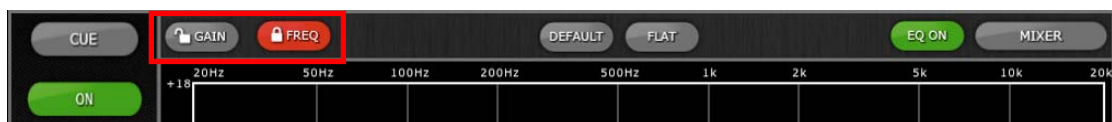

The "Lock" buttons affect all 4 bands (but not the HPF). When a band is adjusted, the locked parameter value becomes red.

#### **4.7.1 HPF**

When the HPF is selected, an extra [HPF] button appears at the top of the EQ graph. Press this button to switch the HPF on/off. When the button is green, the HPF is On. HPF has no Gain or Q parameter: only frequency.

#### 4.7.2 EQ Bands 1 & 4

EQ bands 1 & 4 have additional choices of band-type. Both these bands can be a shelf or a bell, and band 4 can also be a Low Pass Filter. Band 1 can also be a HPF for Mix, Matrix and Stereo/Mono Master channels. When one of these bands is selected, the relevant additional buttons are shown above the EQ graph.



#### 4.7.3 EQ ON

The channel EQ can be switched on/off with the [EQ ON] button towards the top-right of the EQ graph. It is green when the EQ is on. When the EQ is switched off, the EQ curve will be grey.

#### 4.7.4 EQ FLAT, EQ DEFAULT

These two buttons, above the EQ curve perform the same function as those on the M7CL console. [FLAT] will set the Gain of bands 1-4 to 0dB, but will not change the Q and Frequency values. [DEFAULT] will reset all EQ parameters for the selected channel back to their default values, including HPF.

After pressing one of these buttons, an “Are You Sure?” pop-up will be displayed before the action is executed (or cancelled).




To exit from the EQ window and return to the Mixer window, press the [MIXER] button at the top-right of the display.

## 4.8 Graphic EQ Editing Screen

### GEQ Overview

In the upper portion of the GEQ Editing Screen, the complete GEQ curve is displayed along with the gain positions for all 31 bands. White dots represent the position for each of the 31 bands. (These dots change to yellow and become larger when they are being touched in the Editing section below.)

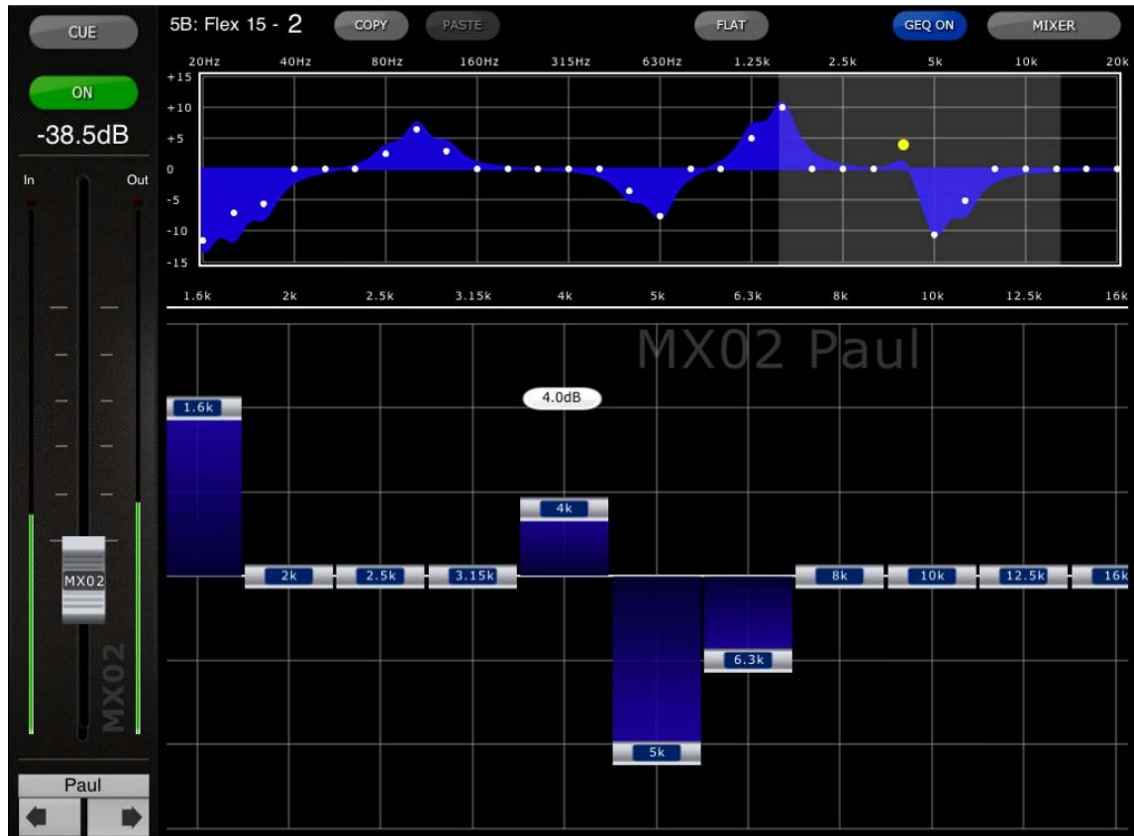

The current channel's Name, Fader, Level Meters, [ON] and [CUE] buttons are shown in the left column. At the bottom-left, there are "previous" and "next" arrow buttons for navigating to different channels. Pressing these buttons will only access other channels that have GEQs assigned to them.

Note: the In/Out meters display the levels going In and Out of the EQ section.

### 4.8.1 Navigation in the GEQ Overview Section

Tapping anywhere in the GEQ Overview will cause the GEQ sliders in the Editing section to jump to that range of the GEQ (represented by a light grey area in the overview). Touching the selected range in the Overview and dragging it left / right will scroll the range of GEQ sliders.

### 4.8.2 Rack Position

In the upper-left area of the GEQ screen, the Rack position of the channel's GEQ will be displayed. In the screenshot above, this GEQ is located in rack position 5B.

### 4.8.3 GEQ Type

Next to the Rack position, the type of GEQ is identified as either “31 Band” or “Flex 15”. In the case of a Flex 15 GEQ, a larger-sized number indicates the remaining number of available bands for that GEQ. As each band is adjusted away from 0dB, the number of available bands will decrease. This number will turn red when no further bands are available to be edited.

### 4.8.4 Editing GEQ Bands

Sliders in the lower portion of the GEQ screen allow each band of EQ to be edited. Multiple bands can be edited simultaneously with up to 10 bands appearing at any one time. Touch the silver sliders for one or more bands and move them vertically to adjust the gain for each band. The gain parameter value will appear in a floating display above any GEQ slider while it is being touched.

Note: sliders will become transparent and cannot be operated when there are no remaining bands available for a Flex 15 GEQ.

### 4.8.5 Navigation in the GEQ Editing Section

In addition to navigation in the upper GEQ Overview section, swipe gestures can be used to navigate through the GEQ bands in the lower editing section.

### 4.8.6 GEQ ON

The [GEQ ON] button in the upper-right part of this screen turns the GEQ On or Off. The button appears blue when GEQ is On and turns grey when GEQ is Off. When Off, the GEQ display curve will also turn light grey.

### 4.8.7 GEQ FLAT

The [FLAT] button will reset all GEQ bands to 0dB. A confirmation dialog will appear before this function is executed.


### 4.8.8 Copy/Paste

GEQ parameter settings can be copied and pasted from one GEQ to another. Press the [COPY] button to capture the parameter settings of the current GEQ. Navigate to another channel that has a GEQ assigned and press [PASTE].

Note: the [PASTE] button will only be available when a suitable GEQ has been selected. Only 31 Band GEQs that use up to 15 bands can be copied to a Flex 15 GEQ. Settings copied in the M7CL console cannot be pasted in StageMix.

## 4.9 SCENE MEMORY

The Current Scene Memory number and title (name) are displayed in the upper-left corner of the StageMix Mixer window. An “E” indicator will be displayed if the Scene has been edited since it was last stored or recalled.

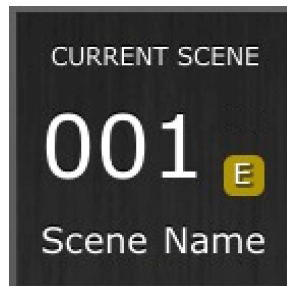

The Scene Memory area in the Mixer window also functions as a button which can be pressed to access the Scene Memory window.



### 4.9.1 CURRENT SCENE

The Current Scene Memory number and title also appear in the upper part of the Scene Memory window. The Scene Comment also appears in this area.



#### 4.9.2 DECREMENT / INCREMENT SCENE

Buttons in the upper right part of the Scene window allow instant recall of the Previous and Next Scene relative to the current Scene. For example, if the Current Scene is 005, pressing the [INC SCENE] button will recall Scene 006 in the console. However, if Scene 006 is empty, the next highest Scene containing data will be recalled.

Note: the [DEC SCENE] and [INC SCENE] buttons will only appear in the Scene window if the related preference has been enabled in the Setup window (refer to 4.2.5).

#### 4.9.3 SCENE LIST

When the Scene Memory window is accessed for the first time after launching StageMix, the Scene List will be sent from the console to StageMix.

Note: if StageMix loses its Wi-Fi connection to the console, the Scene List will need to be sent from the console again after the connection is re-established.

12 Scenes can be viewed simultaneously in the Scene List. Drag up and down in the list to access other Scenes.

The Current Scene will be indicated by a check mark to the right of the Scene Title (the current scene is also displayed in the upper left portion of the Scene screen). Empty Scene Memories locations will be displayed with a grey background. Scene titles that have not been sent from the console to StageMix will be indicated by a question mark.

#### 4.9.4 SCENE RANGE

If the console contains a large number of Scenes, it may take some time for the complete Scene List to be transmitted to StageMix. To minimize the time required to update the Scene List in StageMix, a Scene Range can be set so that only necessary Scenes are sent from the console to StageMix.

By default, the Scene Range is set to the full range from Scene 0 to 300. By pressing the [SCENE RANGE] button, the user can define the range of Scenes that will be updated in the Scene List. This range will be remembered by StageMix and will continue to be used until it is changed.

To update the Scene Range, tap the [SCENE RANGE] button on the right side of the Scene Memory window. A small popup will appear. Tap the [FIRST] or [LAST] button to access the iPad's onscreen keyboard. Enter a number for the First and/or Last Scenes in the Range and press Return. Then press the [UPDATE RANGE] button in this popup to update the Scene List based on the currently active range.



#### **4.9.5 SELECTED SCENE**

Selecting a Scene in the Scene List will cause it to be displayed in white text with a blue background. Further details about this selected Scene will be displayed to the right of the Scene List. These details include the following:

##### SCENE TITLE

The scene title can be edited by tapping on the title. The iPad's keyboard will appear. Tap the X button next to the title to clear the current title before typing in a new title. Then press Return.

##### SCENE COMMENT

The Scene Comment is displayed and can be edited using the same procedure described for the Scene Title.

##### TIME STAMP

This shows the time and date that the Scene was last stored. The Time Stamp is display-only.

##### SCENE STATUS (FOCUS and FADING)

This section displays the status of Focus and Fade Time functions for the selected Scene Memory.

#### **4.9.6 STORE SCENE**

Pressing the [STORE] button will cause the current console parameter settings to be stored to the currently selected Scene Memory (highlighted in the Scene List).

- a) Press [STORE] and the iPad's onscreen keyboard will appear.
- b) To enter a new title for this Scene, tap the X button next to the Scene Title to clear the current title.
- c) Type in a new title and press the [STORE] button or Return on the keyboard.
- d) A confirmation popup will appear if the STORE CONFIRMATION preference is ON in the console.

#### **4.9.7 UNDO STORE**

Pressing the [UNDO STORE] button will cancel the most recent Scene Store operation.

#### **4.9.8 RECALL SCENE**

Pressing the [RECALL] button will cause the currently selected Scene Memory (highlighted in the Scene List) to be recalled by the console. A confirmation popup will appear if the RECALL CONFIRMATION preference is ON in the console.

When a Scene Memory is recalled by the console, StageMix must synchronize itself with the current console parameter data. The status of this synchronization will be indicated by a progress bar which appears below the Current Scene number in the upper left section of

the Scene Memory screen. You can exit the Scene Memory screen while synchronization is occurring but you will not be able to edit any parameters in StageMix until synchronization has been completed.

#### **4.9.9 UNDO RECALL**

Pressing the [UNDO RECALL] button will cause the most recent Scene Recall to be cancelled. StageMix will need to synchronize with the console after executing a Scene Recall UNDO.

Press the [MIXER] button in the top-right corner of the Scene Memory window to return to the Mixer window.

## 5.0 Troubleshooting

### 5.1 No Wi-Fi Available

If this message appears after launching StageMix, this indicates that the iPad is not connected to a Wi-Fi access point or that Wi-Fi may be switched off in the iPad. Refer to sections 2.0 and 3.2 for details about Wi-Fi hardware configuration and iPad Wi-Fi settings.




### 5.2 Connection Error

If this message appears after selecting a mixer and pressing [CONNECT], this indicates that StageMix cannot connect to the M7CL console. This may be due to incorrect IP Address or MAC Address settings in either the M7CL or StageMix. Verify that the settings in the M7CL match the settings in StageMix. Refer to 3.1 and 3.3.2 for details about these settings. This problem will also occur if the M7CL console is not turned.



### 5.3 Connection Lost

If StageMix loses its connection to the M7CL, the following message will appear. Operation of StageMix is not possible while this message box is onscreen. StageMix will automatically attempt to reconnect to the M7CL. If this is successful, StageMix will re-synchronize with the console data and operation will become available again.

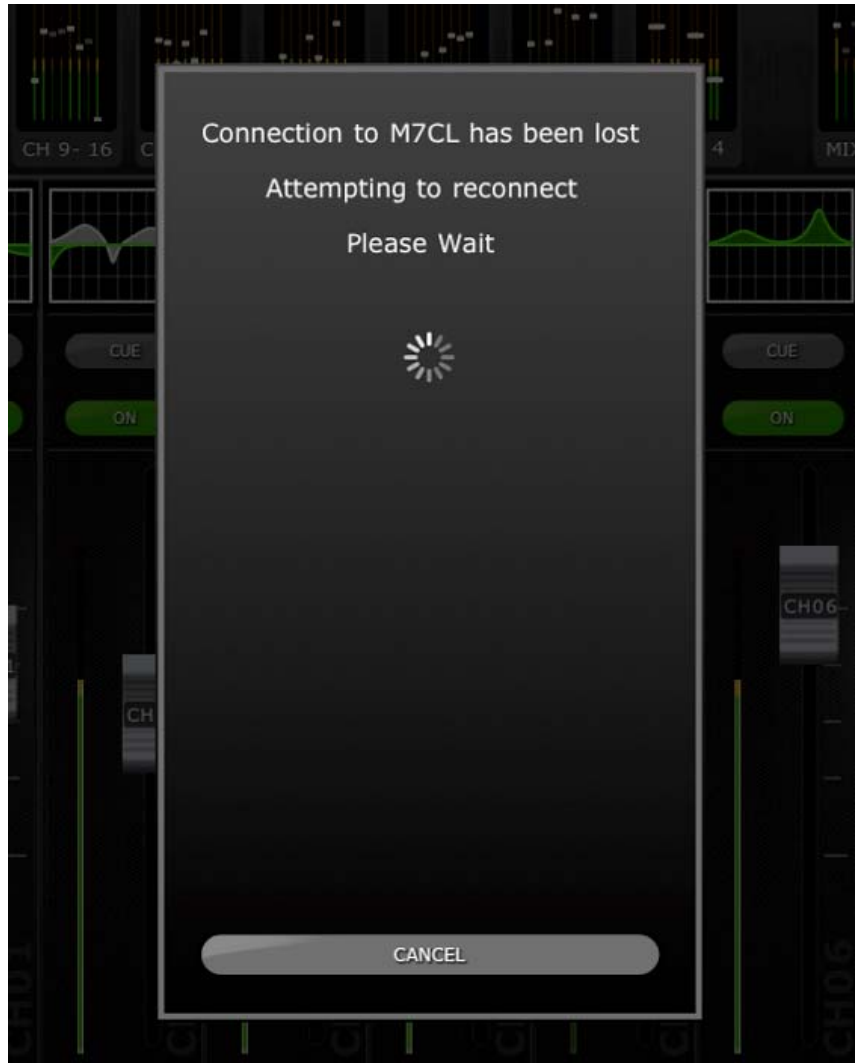

### 5.4 Graphic EQ Doesn't Affect the Sound

If a Graphic EQ is assigned to an input channel or Mix/Matrix bus but it doesn't seem to be affecting the sound on that channel, it could be that the Insert for that channel has been switched Off. Check the state of the Insert ON switch in the M7CL console.

### 5.5 Problems Moving Multiple Faders

If Multitasking Gestures is ON, it may not be possible to move more than three faders simultaneously in StageMix. When using StageMix, it is recommended that Multitasking Gestures be turned OFF.

- a. Open the iPad “General” menu
- b. Set the button for “Multitasking Gestures” to OFF

### 5.6 Incompatibility with Earlier M7CL Versions

M7CL StageMix V2.0 (and higher) is not compatible with M7CL console firmware versions below V3.5. Please install the latest M7CL firmware in order to use this version of StageMix. If you attempt to use this version of StageMix with an earlier version of M7CL firmware, the following message will appear during synchronization:



If this message appears, please Quit StageMix by pressing the Home key on the iPad. Then update the M7CL to the latest firmware version in order to use StageMix.