

SHARP®

ELECTRONIC ORGANIZER

MEMO MASTER **100** MODEL **EL-6061H**

OPERATION MANUAL

<CONTENTS>

	Page		Page
1. Cautions.....	1	6. Telephone Mode	7
2. Using the EL-6061H for the First Time	1	7. Schedule Mode	10
3. Part Names	2	8. Secret Function	15
4. Changing Operation Modes	4	9. Calculator Mode	20
5. Entering Characters in the Alphanumeric Line	5	10. Memory	22
		11. Power Supply	25
		12. Specifications	27

EL-6061H

LIMITED WARRANTY:

SHARP ELECTRONICS CORPORATION warrants this product to the first consumer purchaser to be free from defective materials and workmanship. Under this warranty the product will be repaired or replaced, at our option, without charge for parts or labor, with the exception of batteries, when returned to a SHARP CONSUMER FACTORY SERVICE CENTER listed in the instruction booklet supplied with your unit.

This warranty does not apply to any appearance items not to any product whose exterior has been damaged or defaced, nor to any product subjected to misuse, abnormal service or handling, nor to any products altered or repaired by other than a SHARP CONSUMER FACTORY SERVICE CENTER. This warranty does not apply to any product purchased outside the United States, its territories, or possessions.

The period of this warranty covers one (1) year on parts and one (1) year on labor from date of purchase.

This warranty entitles the first consumer purchaser to have the warranted parts and labor rendered at no cost for the period of the warranty described above when the unit is carried or shipped, prepaid, to a SHARP CONSUMER FACTORY SERVICE CENTER together with proof of purchase.

THIS SHALL BE THE EXCLUSIVE WRITTEN WARRANTY OF THE FIRST CONSUMER PURCHASER AND NEITHER THIS WARRANTY NOR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, SHALL EXTEND BEYOND THE PERIOD OF THE TIME LISTED ABOVE. IN NO EVENT SHALL SHARP BE LIABLE FOR CONSEQUENTIAL ECONOMIC DAMAGE OR CONSEQUENTIAL DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW A LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS OR AN EXCLUSION OF CONSEQUENTIAL DAMAGE, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU. IN ADDITION, THIS WARRANTY GIVES SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

NOTICE

- Sharp strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, Sharp assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other cause.
- Sharp assumes no responsibility, directly or indirectly, for financial losses or claims from third persons resulting from the use of this product and all of its functions, such as stolen credit card numbers, the loss of or alteration of stored data, etc.




1 Cautions

- Do not carry the EL-6061H in the pocket of your slacks or trousers.
- Do not drop or apply excessive force.
- Do not subject the EL-6061H to extreme temperatures.
- Clean only with a soft, dry cloth.
- At times, 力, 英, ㊦, ㊧, **AM** and **PM** may appear faintly on the display. This, however, will not affect the operation of the EL-6061H.
- Use only a SHARP approved service facility.

2 Using the EL-6061H for the First Time

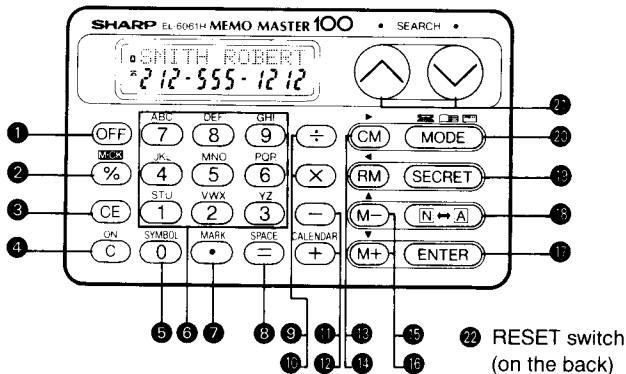 
To ensure a blank memory, perform the following operation.

(The memory contents will be cleared by this operation.)

- 1 Press  and then the **RESET switch** on the back, then press .
- 2 Repeat, press the **RESET switch** again, then press  again.




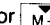
Note: Press the **RESET switch** with a ball-point pen or similar object.

3 Part Names

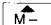



- | | |
|--|---------------------------------|
| ❶ Power OFF key | ❸ Clear memory/Right cursor key |
| ❷ Percent/Memory Check key | ❹ Recall memory/Left cursor key |
| ❸ Clear Entry key | ❺ Memory minus/Up key |
| ❹ Power ON/Clear key | ❻ Memory plus/Down key |
| ❺ Zero/SYMBOL key | ❼ ENTER key |
| ❻ Alphanumeric keys | ❽ Number-Alphabet key |
| ❼ Decimal point/Schedule priority MARK key | ❾ SECRET key |
| ❽ Equals/SPACE key | ❿ MODE key |
| ❾ Division key | ⓫ SEARCH keys |
| ❿ Multiplication key | |
| ⓪ Subtraction/Hyphen key | |
| ⓫ Addition/CALENDAR key | |

Cursor movement

The cursor can be moved by , ,  or .

 : Moves the cursor to the right.  : Moves the cursor to the left.

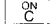

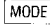

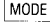


 : Moves the cursor to the leftmost column of the upper line.

 : Moves the cursor to the leftmost column of the lower line.

Hold  or  for rapid movement.


4 Changing Operation Modes

This EL-6061H has three operation modes: telephone mode, schedule mode and calculator mode.

- 1 Press  to turn the EL-6061H on. The telephone mode will be selected automatically, and  will be displayed.
- 2 Press  to select the schedule mode.  will be displayed.
- 3 Press  to select the calculator mode. No symbol will be displayed.
- 4 Press  to return to the telephone mode.  will be displayed.

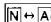

5 Entering Characters in the Alphanumeric Line

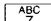
In the telephone mode, up to 6 lines (72 columns) can be entered for one item. Each line consists of 12 columns. The first line is called the alphanumeric line, and can contain letters, symbols and numbers. The remaining 5 lines (60 columns) are called the number lines, and contain only numbers.


In the schedule mode, the upper line of the display is called the alphanumeric line, and contains 12 columns. The month, date, hour and minutes can be entered in the lower line (the number line). To enter characters in the alphanumeric line, press  to move the cursor to the alphanumeric line.

1. Entering letters

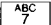
Example: Enter AB.

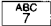
1 Press  to display .

2 Press . 'A' will be displayed.

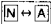

3 Press  to move the cursor to the next column.

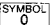
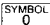
- This step can be omitted if the same key is not used to enter successive letters.

4 Press  twice. "B" will be displayed.

- As  is pressed repeatedly, the displayed letter changes in the following order: A → B → C → A ...

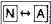

2. Entering symbols (\$, ¥, ➡, :)

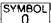
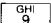
1 Press  to display .

2 Press . As  is pressed repeatedly, the displayed symbol changes in the following order: \$ → ¥ → ➡ → : → \$...

3 To enter successive symbols, perform the procedure described in Step 3 above.

3. Entering numbers

1 Press  to clear .

2 Press  through  to enter numbers.

4. Entering hyphens, dots or spaces (–, ., “ ”)

Press ,  or .

In the schedule mode, dots (.) cannot be entered.

6 Telephone Mode

1. Entry

Example: Enter SMITH ROBERT 212-555-1212.

1 Press **MODE** to select the telephone mode, and then press **ON C**.

2 Enter the name in the alphanumeric line.

STU 1	MNO 5	GHI 9	GHI 9	GHI 9	STU 1	STU 1	GHI 9	GHI 9	SPACE =	POR 6	POR 6
POR 6	MNO 5	MNO 5	MNO 5	ABC 7	ABC 7	DEF 8	DEF 8	POR 6	POR 6	POR 6	STU 1
STU 1											

3 Press **M+** or **CM** to move the cursor to the next line.

S	M	I	T	H	R	O	B	E	R	T
 _____										

4 Enter the telephone number in the number lines.

VWX 2	STU 1	VWX 2	—	MNO 5	MNO 5	MNO 5
—	STU 1	VWX 2	STU 1	VWX 2		

5 Press **ENTER** to store in memory.

2. Recall

Telephone items are sorted in this order:

Space → letters → numbers → - → • → symbols (\$ → ¥ → ➡ → :)

(1) Sequential search

Press or to recall items in forward or reverse order.

Hold or down for rapid recall.

(2) Direct search

Enter the first character(s) of the item and press or to recall that item directly. If an item that begins with the specified character is not in memory, "**NOT FOUND!**" will be displayed.

3. Correction and deletion

To correct, during entry or after the item is recalled:

To correct an item, move the cursor to the position that requires correction.

Enter the correct characters and press .

To delete an item, recall the item, press ("**DELETE OK?**" will be displayed), and then press . To cancel delete, press any key other than .

4. Data memo calculation

Currency conversions and other calculations can be performed using data stored in the telephone mode.

Example: Convert \$2.75 to yen when \$1 = ¥140.

First store the conversion rate in the telephone mode.

Enter: \$ → ¥ RATE 140

Enter the conversion rate in the 2nd line (13th through 24th columns).


- Data memo calculations cannot be performed if the conversion rate is entered in the 3rd or later lines.
- The cursor will not move past the 2nd line if a decimal point is entered in the 2nd line.

Press or to recall the conversion rate.

If an incorrect number such as a telephone number is entered, an error will occur ("E"

g will be displayed). Press and perform the correct operation.

 \$ → ¥ R A T E
 1 4 0

	3 8 5 .
---	---------


7 Schedule Mode

1. Entry

Example: Enter FLIGHT AB12 scheduled for 10:30 P.M. on August 26.

- 1 Press **MODE** to select the schedule mode, and then press **ON C**.
- 2 Enter the date and time in the lower line. Enter the time in the 24-hr. system. Each number should have two digits.

SYMBOL 0	DEF 8	VWX 2	PQR 6	VWX 2	VWX 2	YZ 3
SYMBOL 0						

A _
 08 - 26 22 : 30

- After date and time entry, the cursor moves to the upper line and **A** is displayed.
- When not entering the time, press **M** and proceed to the next step. The time will be entered as 00:00.

3 Enter the schedule details.

DEF 8	DEF 8	DEF 8	JKL 4	JKL 4	JKL 4	GHI 9
GHI 9	GHI 9	CM	GHI 9	CM	GHI 9	GHI 9
STU 1	STU 1	SPACE =	ABC 7	CM	ABC 7	ABC 7
N ↔ A	STU 1	VWX 2				

F L I G H T	A B 1 2 _
0 8 - 2 6	2 2 : 3 0

4 Press **ENTER** to store in memory.

If the user attempts to store an impossible date or time, "**ERROR!**" is displayed. Enter the correct date and time and press **ENTER**.

2. Recall

Schedule items entered are sorted in chronological order from 00:00 Jan 1st to 23:59 Dec 31st. Items can be recalled using any of the four following methods.

(1) Sequential search

Press **V** or **^** to recall items in forward or reverse order.

Hold **V** or **^** down for rapid recall.

(2) Detail search

Press **M-^** to move the cursor to the upper line. Enter the first character(s) of the schedule details and press **V** or **^** to recall that item directly.


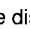
(3) Date search

Enter the date and press or to recall the item directly.

(4) Priority mark search


Attach the priority mark to an item, that item will be recalled first with or . Pressing / again recalls in forward/reverse order items stored after/before the item with the priority mark.

< Attaching the priority mark >

During entry, press ( will be displayed) enter item and press . For items already entered, recall with or , press or and then press ( will be displayed), then press .

- The priority mark can only be attached to one item.

< Removing the priority mark >

Recall the item with the priority mark, press or , then ( will be cleared) and then press .

3. Correction and deletion

Correct and delete items using the same procedure as that used in the telephone mode (page 8).

4. Calendar function

If the year is set, the day of the week for an item can be displayed.

 
(1) Setting the year

Example: Set the year to 1990.

1 Press **MODE** to select the schedule mode, and then press **ON C**.

2 Press **CALENDAR** **+**.

- The current set year will be displayed.




3 Enter the year and then press **ENTER**.

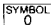
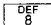
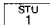
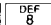

STU **GHI** **GHI** **SYMBOL** **ENTER**
1 9 9 0

- The year can be set between 1901 and 2099. Once the year is set, the year setting will not change until a new year is set.

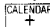
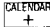
(2) Checking the day of the week

Example: Check the day of the week for August 18th, 1990.

- 1 Set the year (if necessary).
- 2 Enter the date in the lower line, then press and hold .

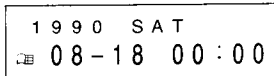
    

- The year and day of the week will be displayed on the upper line while

 is held. When  is

released, the display returns to the item entry prompt.

- To check the day of the week for dates in another year, first set the year to the desired year.



1 9 9 0 S A T
0 8 - 1 8 0 0 : 0 0

(3) Checking the day of the week for a stored item

- 1 Recall the item to be checked.

- 2 Press and hold  down.


- The year and day of the week in the upper line and the date and time in the lower line are displayed.

8 Secret Function

Use this function to prevent other people having access to the stored items. The secret function can be used in telephone and schedule modes. Up to 6 characters can be entered as a password. (Spaces must be followed by some other character.)

1. Registering a password

Example: Register the password ADG.

- 1 Press **MODE** to select the telephone (or schedule) mode, press **ON C** to display the item entry prompt.
- 2 Press **SECRET**,  will flash.
 - If “**PASSWORD?**” is displayed, a password has already been registered. To register a new password (if you forget the password), delete the current password and secret items, refer to the “**Clearing memory (Reset operation)**” on page 23. Be sure to jot the password down somewhere safe.

3 Enter the password — ADG. Press

ABC
7

DEF
8

GHI
9

.

4 Press

SECRET

,  will stop flashing.

2. Closing the secret function

1 Press


ON
C

SECRET

. The password will be displayed, and the entire display will flash.

2 Press

SECRET

. “**SECRET CLOSE**” will be displayed for an instant, and  will be cleared to indicate that the secret function is closed.

- The secret function can also be closed by pressing

SECRET

 when recalling stored items.

3. Opening the secret function

1 Select the telephone or schedule mode.

2 Press


ON
C



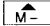

SECRET

. “**PASSWORD?**” will be displayed.


3 Enter the password and press

SECRET

. “**SECRET OPEN**” will be displayed for an instant and  will be displayed to indicate that the secret function is open.

- The secret function can be opened by pressing , entering the password and then pressing . (In the schedule mode, press  to move the cursor to the upper line, enter the password and then press .)

4. Storing secret items

Items entered when the secret function is open ( is displayed) are stored as secret items.


- 1 Open the secret function.

Refer to “**3. Opening the secret function**” on page 16.

- 2 Store the item using the procedure described for non-secret items. The item will be stored as a secret item.

- Close the secret function by performing the procedure described in “**2. Closing the secret function**” on page 16. The item can no longer be recalled.

5. Recalling secret items


Secret items can be recalled only when the secret function is open ( is displayed).

- 1 Open the secret function.

Refer to “3. Opening the secret function” on page 16.

- 2 Press  or  to recall the item.

Secret items can also be recalled with the direct search and priority mark search procedures as described for non-secret items.

- Items for which  flashes are secret items.
- In the telephone mode, secret items are recalled before non-secret items.

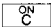

6. Correcting and deleting secret items

After opening the secret function, secret items can be corrected and deleted using the same procedures as described for non-secret items.


7. Changing the password

- 1 Open the secret function.

Refer to “3. Opening the secret function” on page 16.


- 2 Press  . The password will be displayed and the entire display will flash.

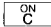
- 3 Press .

 
 and the first character of the password will flash.

- 4 Enter a new password.

- 5 Press .

The password has now been changed.  will stop flashing.

- If an incorrect password is used when opening the secret function, the display will appear as shown. Press  and repeat the procedure using the correct password.



9 Calculator Mode

Press **MODE** to select the calculator mode.

Before performing a calculation, press **ON/C** **CM**.

Example	Operation	Display
$(-24 + 2) \div 4 = -5.5$	ON/C - 24 + 2 ÷ 4 =	-5.5
$34 + 57 = 91$	34 + 57 =	91.
$45 + 57 = 102$	45 =	102.
$68 \times 25 = 1700$	68 x 25 =	1700.
$68 \times 40 = 2720$	40 =	2720.
$200 \times 10\% = 20$	200 x 10 %	20.
$9 \div 36 = 25(\%)$	9 ÷ 36 %	25.
$200 + (200 \times 10\%) = 220$	200 + 10 %	220.
$500 - (500 \times 20\%) = 400$	500 - 20 %	400.
$4^6 = (4^3)^2 = 4096$	4 x = = x =	4096.
$1/8 = 0.125$	8 ÷ =	0.125

$25 \times 5 = 125$ $-) 84 \div 3 = 28$ $+) 68 + 17 = 85$ <hr/> 182	CM 25 \times 5 M+ 84 \div 3 M- 68 $+$ 17 M+ RM	M 125. M 28. M 85. M 182.
$135 \times (12 + 14) = 3510$ $(12 + 14) \div 5 = 5.2$	CM 12 $+$ 14 M+ 135 \times RM = RM \div 5 =	M 26. M 3510. M 5.2
$2 + \underline{3} \rightarrow 2 + 4 = 6$	2 $+$ 3 CE 4 =	6.
1234567891×145 $= 179012344195$	1234567891 \times 145 [=] CE $(17.90123441 \times 10^{10} = 179012344100)$	E 17.90123441 17.90123441

Errors

When the integer part of a calculation result or any integer in the memory exceeds 10 digits, or other impossible operations are attempted, an ERROR will occur. ("E" will appear in the upper line.)

21 Press ON C to clear the error. Overflow errors can be cleared with CE .

10 Memory

Memory check

- 1 Press **MODE** to select the telephone or schedule mode, then press **M-CK %** to display how many more characters can be stored in memory.
- 2 Press **M-CK %** again to display how many telephone and schedule items are stored.

These displays are toggled by pressing **M-CK %**.

Press any key other than **M-CK %** to return the display to the item entry prompt.

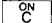
- The EL-6061H can store up to 1936 characters in its telephone and schedule memory. Up to 120 items (6 characters for the name and 12 characters for the number) can be stored if all memory is used as a telephone directory. If **ENTER** is pressed to store items when the remaining memory capacity is insufficient, **"FULL! NOT IN"** will be displayed and the item will not be stored. In this case, press **ON C**, and either delete previously stored items or change the item to

be stored so that it will not exceed the memory capacity. Repeat the storing *procedure once again*.

When storing characters, each character in the alphanumeric line is counted as one character, and two digits in the number lines are counted as one character. If there is an odd number of digits in the number lines, the leftover digit is counted as one character. Further to the space taken up by characters, four space characters are used for separators.

If nothing is entered in an alphanumeric line, one space character will be stored in memory.

Clearing memory (Reset operation)

Press  before clearing memory.

< Clearing the password and secret items >

- If a password is registered

Clear the password and secret items before clearing the memory contents. Follow this procedure. (If a password is not registered, skip this procedure. Follow the next procedure.)

1 Press the **RESET** switch.

2 Press **ENTER**.

(To cancel this operation, press any key other than **ENTER**.)



 
< Clearing the memory contents >

• If a password is not registered

1 Press the **RESET** switch.

2 Press **ENTER**.

(To cancel this operation, press any key other than **ENTER**.)



When Abnormal Conditions Cause a Malfunction

Abnormal conditions may occur in which no keys will respond. If this happens, press the **RESET** switch on the back of the EL-6061H and then **any key other than** **ENTER**.

11 Power Supply

The EL-6061H uses one lithium battery (CR2016).

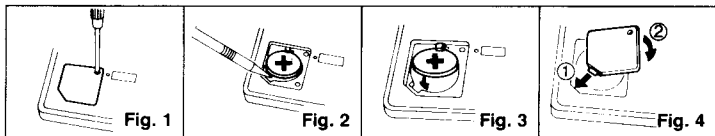 
The EL-6061H will automatically turn off if no key is pressed for about 7 minutes. (The actual time may vary depending upon the condition of use.)

When the battery becomes exhausted, the display will appear faint and will be difficult to read when looked at correctly.

The contents of the memory will be lost when the battery is replaced, so be sure to keep a written record of all important data.

Battery replacement

- 1 Turn the power off and remove the screw and battery cover. (Fig. 1)
- 2 Remove the old battery with a ball-point pen or similar object. (Fig. 2)
Install the new battery with the ⊕ side up. (Fig. 3)
- 3 Replace the battery cover and secure the screw. (Fig. 4)



4 Proceed with the reset operation, refer to **Clearing memory (Reset operation)** on page 23.

- The reset operation must be performed after replacing the battery, or the EL-6061H may not operate properly (i.e. " ナマエ? " may be displayed).

< Precautions >

- Keep the battery out of the reach of children.
- A worn battery left in the EL-6061H may leak and damage the EL-6061H.
- Explosion risk may be caused by incorrect handling.
- It is only allowed to replace with the same type of this battery.

The actual life of the supplied battery may be less than 2,000 hours as the battery was installed in the factory.

12 Specifications

Model:	EL-6061H
Display:	Upper line: 12 columns, 2 symbols Lower line: 12 columns, 2 symbols
< Telephone mode >	Name and number, entry and recall
< Schedule mode >	Schedule details, date and time, entry and recall
Memory capacity:	1936 bytes (Total for both Telephone and Schedule modes)
< Calculator mode >	
Digits:	10
Functions:	Addition, subtraction, multiplication, division, percent, memory calculation, etc.
Power supply:	3V --- DC (Lithium battery CR2016; 1)
Power consumption:	0.0002 W
Operating temperature:	0°C — 40°C (32°F — 104°F)
Battery life:	Approx. 2,000 hours (continuous display)
Weight:	70 g (0.15lb.) (including the wallet)
Dimensions:	108(W) \times 68(D) \times 7.2(H) mm (4-1/4" (W) \times 2-11/16" (D) \times 9/32" (H)) (excluding the wallet)
27 Accessories:	1 lithium battery (installed), operation manual.

SERVICE CENTER ADDRESS

SHARP ELECTRONICS CORPORATION

1300 Naperville Drive
Romeoville, Illinois 60441
(708) 759-8555

Regional Sales Offices and Distribution Centers

Eastern: Sharp Plaza, Mahwah, New Jersey 07430-2135
Phone: (201) 529-8200

Midwest: 1300 Naperville Drive, Romeoville, IL 60441
Phone: (708) 759-8555

Western: Sharp Plaza, 20600 South Alameda St., Carson,
California 90810
Phone: (213) 637-9488

SHARP

SHARP ELECTRONICS CORPORATION

Sharp Plaza, Mahwah, New Jersey, 07430-2135

SHARP CORPORATION

© 1989 SHARP CORPORATION
PRINTED IN HONG KONG/IMPRIMÉ À HONG KONG

(TINSE0004THZZ)