

SHARP®

ELECTRONIC ORGANIZER

EL-6895

OPERATION MANUAL

CONTENTS

Using the Organizer for the First Time	1	Calendar Mode	12
When Abnormal Conditions Cause a Malfunction	1	Schedule Mode	13
Auto Power Off Function	1	Memo Mode	15
Backlight	1	Anniversary Mode	16
Adjusting the LCD Contrast	2	Recalling the Listings	17
Turning the Key Touch Tone On and Off	2	Editing the Listings	19
Freeing Up Memory	2	Deleting the Listings	19
Part Names	3	Secret Function	20
Display Symbols	4	Calculator Mode	22
Entering Characters	4	Currency/Unit Conversion Mode	23
Notes for the Built-in Calendar and the Time	5	Miscellaneous Functions	25
Clock Mode	5	Using the Option Function	29
Note For Storing the Listings	8	Battery Replacement	32
Telephone/E-mail Mode	9	Specifications	35
WWW Mode	11		

NOTICE

- SHARP strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, SHARP assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other cause.
 - SHARP assumes no responsibility, directly or indirectly, for financial losses or claims from third persons resulting from the use of this product and any of its functions, such as stolen credit card numbers, the loss of or alteration of stored data, etc.
 - This Organizer is not designed to visit Web sites or transfer/receive e-mails by using the URL or E-mail addresses you will store.
 - The information provided in this manual is subject to change without notice.
-

CAUTIONS

- Do not carry the Organizer in the back pocket of slacks or trousers.
 - Do not drop the Organizer or apply excessive force to it.
 - Do not subject the Organizer to extreme temperatures.
 - Since this product is not waterproof, do not use it or store it where fluids can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause malfunction.
 - Clean only with a soft, dry cloth.
 - Use only a SHARP approved service facility.
-

NOTES


- All company and/or product names are trademarks and/or registered trademarks of their respective manufactures.

Using the Organizer for the First Time

Be sure to perform the following operations before using the Organizer for the first time.

1. Press the **RESET** switch while holding **[ON]**. Release the **RESET** switch and then release **[ON]**.

"CLEAR ALL DATA OK (Y/N) ?" is displayed.

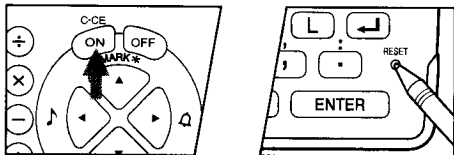

- Under certain conditions the message may appear as "Data has been impaired ! Press [Y] to CLEAR ALL memory". Proceed to the next step in either case.
2. Press **[Y]**.
 3. The Organizer is now initialized. Proceed to set the date and time of the clock. (Refer to page 7.)

Press the **RESET** switch with a ball-point pen or similar object. Do not use an object with a breakable or sharp tip.

When Abnormal Conditions Cause a Malfunction

If the Organizer is subjected to strong, extraneous electrical noises or shocks during use, an abnormal condition may occur in which no keys (including **[ON]**) will respond. If this happens, press the **RESET** switch.


Noises or shocks may erase some or all of the Organizer's memory.

Auto Power Off Function

When none of the keys have been pressed for approximately 7 minutes, the Organizer automatically turns the power off to save the batteries. (The actual time may vary depending upon the condition of use.) Press **[ON]** to resume operation.

 


 



Backlight


The Organizer provides a built-in Backlight, which allows you to view the display and use the Organizer even in low-light conditions. Pressing **[L]** once illuminates the display for as long as you continue to use the Organizer, until you have not typed any key for the interval you set. (See the following section, "Setting up the Backlight".)

- To turn the Backlight off, press  again.
- The Backlight may remain on for less than the set interval or it may not function if the battery level is very low.
- The Backlight does not function during data transfer.
- ★ Do not use the Backlight unnecessarily.
 - Since the Backlight drains power from the operating batteries, excessive use of the Backlight will significantly reduce the life of your batteries.
 - Do not continue using the Organizer after it has automatically turned itself off while the backlight was being used. Even if it can be turned on again, the clock time will be incorrect and other functions may not work properly until the batteries are replaced.







Setting up the Backlight

 You can change the interval after which the Backlight turns off automatically.

 1. Press    .
2. Press  or  to change interval (15 – 60 seconds).
3. Press .





Adjusting the LCD Contrast

 1. Press   .
2. Press  or  to darken or lighten the display as required.
3. Press  after adjusting the contrast.




 
Turning the Key Touch Tone On and Off


The key touch tone is turned on and off by pressing  .

Freeing Up Memory


When you turn the power on, the following message may be displayed, asking you to free up memory by deleting unnecessary space.

 Press  to delete it. Freeing up memory requires not more than one minute.




 
 



Press  when you wish to start the operation soon. (Refer to page 28.)

 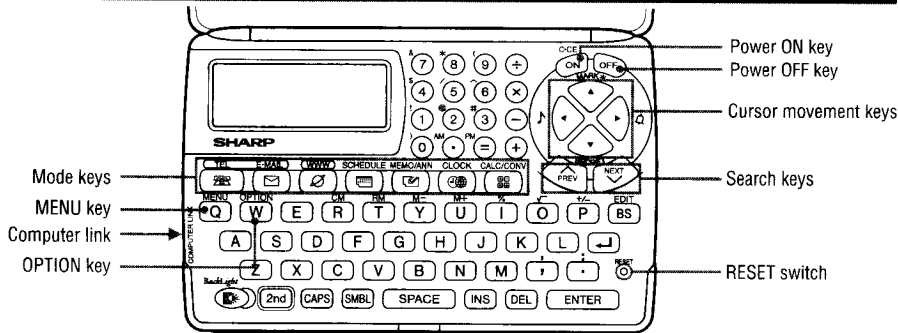
Part Names



In this manual the keys are represented by symbols, for example:





- &  →  : Indicates the & key.
 →  : Indicates the numeric 7 key.
 MENU →  : Indicates the MENU key.
 →  : Indicates the alphabetic Q key.

* Numbers and letters and space between them for entering are shown as unboxed numbers and letters.

To access the symbols above the number key (*1) and " ' " and " : ", press the desired key after pressing .

*1 ... &, *, (, \$, /, ^, !, @, #,)

Display Symbols

-  : A "beep" will sound when a key is pressed.
-  : The schedule alarm will sound.
- CAPS** : Capital (uppercase) letters will be entered. To enter small (lowercase) letters, turn "CAPS" off by pressing **[CAPS]**.
- EDIT** : The listing on the display can be edited.
- 2nd** : Indicates that **[2nd]** has been pressed. The function or character shown in purple above the keypad can be used next.
-  : More information exists above the current display. (Press **[▲]**.)
-  : More information exists below the current display. (Press **[▼]**.)
- [S]** : Secret function is in effect. (Secret listings cannot be recalled without a password.)
- *** : Indicates that the recalled listing is secret.
- BATT** : Indicates that the operating battery level is low.
- In this manual, only the symbols necessary for explanation will be shown.

Entering Characters

1. Moving the Cursor

The cursor (**_** or **■**) can be moved by pressing (or holding down) **[▲]**, **[▼]**, **[◀]**, or **[▶]**.

2. Entering Characters

(1) Entering Letters and Numbers

After initializing the Organizer, the default setting for entering letters will be capital (uppercase) letters. To enter small (lowercase) letters, turn "CAPS" off by pressing **[CAPS]**.

- To enter " ' " or " : ", press **[']** or **[:]** after pressing **[2nd]**.

(2) Entering graphic symbols and special characters

Press **[SMBL]** to display the symbol entry mode, allowing a total of 90 symbols and characters to be selected. To select the symbol display containing the desired symbol/special character, press **[NEXT]** or **[PREV]**, then press the number corresponding to it.

- The first display is determined by your previous choice. The 5 most recently used symbols/special characters are stored and displayed on this display.

Press **[SMBL]** to exit the symbol entry mode.

3. Making Corrections

(1) Inserting characters

Press **INS** to change the cursor from "■" (replace) to "◀" (insert).

Press **INS** again to change the cursor from "◀" to "■".

(2) Deleting characters

Press **DEL** or **BS** to delete the character.

- **DEL** and **BS** will not operate in some cases such as when inputting time during the schedule entry or when using the calculator. In these cases, press the **C•CE** key and reenter.
- Press **C•CE** to clear all characters on the current display.

Notes for the Built-in Calendar and the Time

- Calendar, Schedule, and Clock modes allow you to enter the desired date and time between Jan. 1, 1901 and Dec. 31, 2099.
- If an attempt is made to store an invalid time or date, you cannot move the cursor to date entering, or cannot store time and date by pressing **ENTER**. Enter the correct value and press **ENTER** again.

Clock Mode

The Organizer has both Home and World clocks. The display switches between Home and World clock each time **CLOCK** is pressed.

Home clock

Home city indication

NEW YORK				[H]
MON JAN 1				01
CAPS				
	0:00			

Time

Day of the week/
Month/Day/Year

World clock

World city indication

LONDON				[W]
MON JAN 1				01
CAPS				
	(+ 5:00) 5:00			

Time

Day of the week/
Month/Day/Year

"(+ 5:00)" indicates the time difference from the Home city.

1. Setting the Home Clock

(1) Setting and changing the Home city

Set your local city as the Home city by selecting its zone number.

Zone numbers are based on the distance of the zones from the international date line (zone number zero). For example, there is a 13-hour difference between the date line and London (London is 13 hours behind), so the zone number for London is 13. Honolulu is 23 hours behind the date line, so its zone number is 23.

The names and zone numbers of 27 cities are stored in the Organizer's memory. (Refer to this page.)

1. Press **[CLOCK]** once or twice to display the Home clock.
- The initial Home city after initialization of the Organizer is New York.
2. Press **[2nd] [EDIT]** to enter the edit mode.
- "18" on the display indicates the time zone.
3. Press **[NEXT]** or **[PREV]** to display the desired city which correspond to your local zone from the cities stored in the Organizer.
4. Press **[ENTER]** to set the Home city.
- Some city names are abbreviated on the display as follows:

HONG KONG → HONGKONG, NEW DELHI → DELHI,
 RIO DE JANEIRO → RIO, LOS ANGELES → L.A.,
 ANCHORAGE → ANC.

- Zone numbers 0, 14, and 15 have no city name display.

Zone number	City	Zone number	City
0		10	MOSCOW
1	AUCKLAND	11	CAIRO
2	NOUMEA	12	PARIS
3	SYDNEY	13	LONDON
3.3	ADELAIDE	14	
4	TOKYO	15	
5	HONG KONG	16	RIO DE JANEIRO
6	BANGKOK	17	CARACAS
6.3	YANGON	18	NEW YORK
7	DHAKA	19	CHICAGO
7.3	NEW DELHI	20	DENVER
8	KARACHI	21	LOS ANGELES
8.3	KABUL	22	ANCHORAGE
9	DUBAI	23	HONOLULU
9.3	TEHRAN	24	MIDWAY

(2) Setting the Clock

<Example> Set the date and time to February 8, 2001, 10:05 PM.

1. Press **CLOCK** once or twice to display the Home clock.

2. Press **2nd** **EDIT**.

• The cursor will flash.

3. Enter the hour and minutes.

NEW YORK	1 8
MON JAN 1	0 1
CAPS	0 : 0 3

1005 **PM** (For the 24-hour clock, press **2205**.)

(Enter 2 digits each for both hour and minutes.)

4. Enter the month, day, and year.

▲ 02082001

Use **▶** to skip entering a number that needs no change.

5. Press **ENTER**. The clock starts from 0 seconds.

• The time can be displayed using either the 12-hour AM/PM system or the 24-hour system (default). To change the time system, refer to page 27, "Selecting the Time System". AM or PM is displayed for the 12-hour clock. For this example, set the 12 hour clock.

(Note: 12:00PM: noon, 12:00AM: midnight)

2. Using the World Clock

(1) Changing the city for the World clock

1. Press **CLOCK** once or twice to display the World clock.

2. Press **2nd** **EDIT** to enter the edit mode.

3. Press **NEXT** or **PREV** to display the city which corresponds to the desired zone.

4. Press **ENTER**.

• The date and time need to be changed in the edit mode of the Home clock.

3. Registering a City Name not Found in the List

If you want to set the city for the World clock to Rome, for example (Rome belongs to the zone number 12, but is not included in the city list):

1. Press **CLOCK** once or twice to display the World clock.

2. Press **2nd** **EDIT** to enter the edit mode.

3. Press **NEXT** (or **PREV**) to set the zone number to 12. (Initially the city is Paris.)

4. Enter the city name (up to 8 characters).

ROME (Press **DEL** to delete unnecessary character(s), if necessary.)

ROME	1 2
FRI FEB 9	0 1
CAPS	4 : 0 5 A

5. Press **[ENTER]** to store the new name.

- To register a city name for the Home clock, first display the Home clock then **[2nd] [EDIT]** followed by **[▲] [▲]** to move the cursor to the city name line.
- Only one changed city name can be stored in each of the Home and World clocks.
- Each changed name is stored until you change the zone number next time.

4. Setting Daylight Saving Time/Summer Time

If DST (daylight saving time/summer time) is used, the local time is advanced one hour during the summer.

- DST can be set independently in either the Home or the World clock. For example, if DST is set for the Home clock, it does not have to be set for the World clock.

(1) Home clock

1. Press **[CLOCK]** once or twice to display the Home clock.
2. Press **[2nd] [EDIT]** to enter the edit mode.
3. Enter the correct daylight saving time/summer time.
4. Press **[2nd] [ENTER]** to set the time as DST.

A “” appears on the display and DST is now set.

(2) World clock


1. Press **[CLOCK]** once or twice to display the World clock.
2. Press **[2nd] [EDIT]**, then **[2nd] [ENTER]**.

Setting DST in the World clock automatically sets the time one hour ahead.

- When DST is set for one World city, it is used for all cities displayed in the World clock.

(3) Clearing DST


To clear DST, follow the steps 1 to 4 for Home clock, or follow the steps 1 and 2 for World clock.

A “” disappears.

Note For Storing the Listings

If the memory is full, “MEMORY FULL” will be displayed briefly and the listing cannot be stored. Delete unnecessary data and free up memory to make enough space to store new listings. (Refer to pages 26, 28.)

Telephone/E-mail Mode

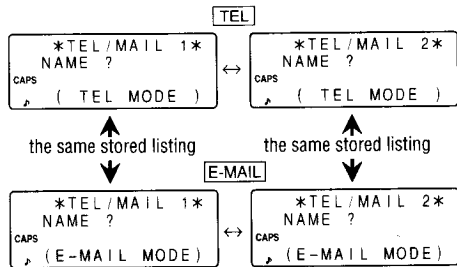


Telephone/E-mail listings can be accessed by pressing either of **TEL** or **E-MAIL**, while both keys recall the same stored listings respectively in each order on the display.

TEL recalls and displays the listing in the following order: **NAME** → **NUMBER** → **ADDRESS** → **E-MAIL**, while **E-MAIL** does in the following order: **NAME** → **E-MAIL** → **NUMBER** → **ADDRESS**.

Further, Telephone/E-mail listings are divided into 2 files (**TEL/MAIL1**, **TEL/MAIL2**). You can switch them for convenience by using one for business and one for personal. The files are cycled each time you press **TEL** or **E-MAIL**.

In Telephone/E-mail mode, a listing consists of 4 entries: name, number, postal address, and E-mail address. The maximum number of characters that can be entered for each listing is 512 in all.

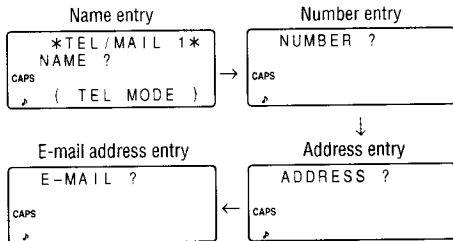

1. Designating the File Names

You can change each file name up to 10 characters long as follows:

1. Press **2nd** **MENU** **NEXT**

2.

2. Enter the new name for **TEL/MAIL1**, then press **ENTER**.

<FILE NAME>	
1:	[TEL/MAIL 1]
CAPS 2:	[TEL/MAIL 2]
3:	[URL]

- You can skip changing an each file name by pressing **ENTER**.
 - To cancel entering the filenames, press **C-CE** twice.
3. Perform the same procedure as step 2 for TEL/MAIL2 and URL.
 4. Press **TEL**, **E-MAIL**, or **WWW** to check the new file name(s).

2. Storing Telephone Listings

1. Press **TEL** to display the TEL/MAIL1 entry prompt.


2. Enter the name. For example,

Edwards Bob

3. Press **ENTER**.

The number entry prompt is displayed.

4. Enter the phone number.
For example,

201-265-5600 

5. Press **ENTER**, then enter the address. For example,

Supervisor ☐ ☐
Sales dept. ☐ ☐
ABCD co. ☐ ☐
15 North St.

Edwards Bob

201-265-5600
F 265-1234

CAPS

Supervisor
Sales dept.
ABCD co.
15 North St.

6. Press **ENTER**, then enter the E-mail address. For example,

edwards@abcd.e
fg.com_

edwards@abcd.efg.com

7. Press **ENTER**.

"STORED !" will be displayed briefly, then the listing will be displayed.

- To skip entering the number, address, or E-mail address, press **ENTER** when "NUMBER ?", "ADDRESS ?", or "E-MAIL ?" is displayed. However, the name entry can not be skipped.
- Regardless of the entry order, listings in the Telephone/E-mail mode are stored internally according to the first character of the person's name in the following order:

@ Space! " # \$ % & ' () * + , - . / 0 1 2
 3 4 5 6 7 8 9 : ; < = > ? @ A a B b C c D d
 E e F f G g H h I i J j K k L l M m N n O o
 P p Q q R r S s T t U u V v W w X x Y y Z z
 [\] ^ _ ` { | } ~ ¢ £ ¤ ¥ ¦ § ¨ © ª « ¬ ® ¯
 ° ± ² ³ ´ µ ¶ · ¸ ¹ º » ¼ ½ ¾ ¿ À Á Â Ã Ä Å Æ Ç È É
 Ê Ë Ì Í Î Ï Ñ Ò Ó Ô Õ Ö × Ø Ù Ú Û Ü Ý Þ ß à á â ã

WWW Mode

WWW mode is used exclusively for storing URL (Uniform Resource Locator) and its remark which reminds you of the URL contents. In this mode, a WWW listing consists of 3 entries: name, URL, and remark.

1. Storing WWW Listings

1. Press **[WWW]** to display the name entry prompt.

```
      *      URL      *  
    NAME ?  
CAPS  
└─┘
```

2. Enter the name. For example,
SHARP ELECTRONICS CO.

3. Press **[ENTER]**.

The URL entry prompt including "www." is displayed.

```
      URL ?  
    WWW . _  
CAPS  
└─┘
```

- You can edit "www." if necessary.

4. Enter the URL. For example,
sharp-usa.com

```
www . sharp - usa .  
com _  
└─┘
```

5. Press **[ENTER]**.

The REMARK entry prompt is displayed.

6. Enter the Remark. For example,

ELECTRONICS

```
ELECTRONICS _  
CAPS  
└─┘
```

7. Press **[ENTER]**.

 
"STORED !" will be displayed briefly, then the listing will be displayed.

```
SHARP ELECTRON  
ICS CO.  
CAPS WWW . sharp - usa .  
com  
└─┘
```

- The maximum number of characters (including "www.") that can be entered for each listing is 512 in all.

Calendar Mode

Calendar mode is selected by pressing **[SCHEDULE]** once or twice. Each time you press this key, the display switches between Calendar and Schedule modes.







1. Controlling the Monthly Calendar Display

The Organizer has a 4-line display and 4 weeks of a month can be displayed. Use the following keys to control the display status.

[PREV] **[NEXT]** : display the following (or previous) month.

• Hold down either of these keys for rapid recall.

    : move the cursor or scroll the calendar up (or down) one week.

1. Press **[SCHEDULE]** once or twice to display the Calendar mode.

01	4	5	6	7	8	9	10	
2	11	12	13	14	15	16	17	
+	CAPS	18	19	20	21	22	23	24
↓	25	26	27	28				

- “↑” indicates the first week of the month is hidden above. To display the first week, press **[▲]** until the cursor scrolls into the previous screen.
- 2. Press **[NEXT]** (**[PREV]**) to display the calendar for the next (previous) month.
- In the year display, a “ ’ ” is attached to the years 1901 to 1999, while no mark is attached to the years 2000 to 2099.

2. Returning the Calendar to the Current Date

Press **[2nd]** **[SCHEDULE]** in Calendar mode.

- The current monthly calendar will be displayed, and the current date will flash.

Schedule Mode

Schedule mode is selected by pressing **[SCHEDULE]** once or twice. Each time you press this key, the display switches between Schedule mode and Calendar mode.

A schedule listing consists of 3 entries: date, time, and detail. The maximum number of characters for each detail is 512. In the date entry, 4 digits can be entered for the year and 2 digits each for the month, day, hour, and minute.

1. Storing Schedule Listings

There are 3 ways to entering the desired date:

- (1) Entering the desired date in Calendar mode
- (2) Entering the desired date with **[NEXT]** (or **[PREV]**)
- (3) Entering the desired date directly

After the date has been entered, actual entry of time and detail is the same for all 3 ways.

(1) Entering the desired date in Calendar mode

<Example> Enter the following data.

"Lunch with Tom" from 11:30 AM to 1:00 PM on February 24, 2001.

1. Press **[2nd]** **[SCHEDULE]** in Calendar mode to display the calendar for the current date (February 8, 2001).

2. Press **[▼]**, **[▼]**, **[▶]**, or **[▶]** to move the cursor to February 24, 2001.

3. Press **[SCHEDULE]** to change to the Schedule mode. Time entry prompt is displayed.

SAT	FEB	24	01
TIME ?			
CAPS			
▶			

- Multiple listings can be scheduled on the same date.
4. Enter the starting and ending time.

1130 **[AM]** **01** **[PM]**

(For the 24-hour clock, press 1130 **[▶]** 13 **[▼]**.)

"DESCRIPTION ?" is displayed.

- ":00" will be entered automatically.
- You can enter schedule details without the ending time. Press **[ENTER]** (or **[▼]**) after entering the starting time to display "DESCRIPTION ?" prompt.
- You can also enter schedule details without specified time, except details starting with a number. Skip entering time and start to enter letters for the details as described in step 5.
- The hour and minute should each consist of 2 digits.

- The time can be set using either the 12-hour or 24-hour format. When you move the cursor to the next entering, the time is displayed in the format selected in the Time System of the MENU functions.
- If an attempt is made to store an invalid time, you cannot move the cursor to the next entering. Enter the correct time and follow the next procedure.

5. Enter the schedule detail.

Lunch with Tom

```

SAT FEB 24 01
11:30A~ 1:00P
Lunch with Tom
  
```

6. Press **[ENTER]** to store the listing.

7. Now, press **[SCHEDULE]** to check if the listing is stored in memory.

```

01 4 5 6 7 8 9 10
• 2 11 12 13 14 15 16 17
18 19 20 21 22 23 24
  25 26 27 28
  
```

- Notice the tag (•) next to "February 24". It indicates a schedule item for that date:

24: — Schedule item beginning in the morning
 — Anniversary item
 — Schedule item beginning after the noon

(2) Entering the desired date with **[NEXT]** (or **[PREV]**)

This way is convenient for entering a nearby date. Press **[NEXT]** (or **[PREV]**) and change the display day by day until the desired date appears.

<Example> Enter a schedule listing on February 11, 2001.

1. Press **[SCHEDULE]** once or twice to display the Schedule mode screen.
2. Press **[2nd]** **[SCHEDULE]** to display time entry prompt for the current date (February 8, 2001).
3. Press **[NEXT]** repeatedly until time entry prompt for February 11, 2001 appears. Enter the time and detail following the procedure for "(1) Entering the desired date in Calendar mode" (from step 4) on page 13.

(3) Entering the desired date directly

When the date is not close to the currently displayed date, this way is more convenient than the above 2 ways.

<Example> Enter a schedule listing on November 26, 2001.

1. Press **[SCHEDULE]** **[C•CE]** to display the date entry prompt.

```

MM/DD/YYYY
MONTH : 02
CAPS DAY : 08
  YEAR : 2001
  
```


2. Enter the date.

11262001

3. Press **[ENTER]**. Time entry prompt (or Calendar) for November 26, 2001 is displayed. Enter the time and detail following the procedure for "(1) Entering the desired date in Calendar mode" from step 4 (or from step 3) on page 13.
- If an attempt is made to store an invalid date, you cannot move to the time entry prompt. Enter the correct date and follow the next procedure.

2. Schedule Alarm

Schedule alarm sounds for approximately 20 seconds when the time set for a schedule listing is reached. The alarm sounds when a "🔔" is on the display.

Press **[2nd]** **[🔔]** to turn the "🔔" on and off.

- When the "🔔" is turned on, alarms will sound for all schedule listings with that starting time. You cannot classify or declassify each listing.
- Press **[C•CE]** to turn the alarm off.

Memo Mode

Memo mode is selected by pressing **[MEMO/ANN]** once or twice.

The maximum number of characters for each memo is 512.

1. Storing Memo Listings

1. Press **[MEMO/ANN]** once or twice to display the Memo entry prompt.
2. Enter the data.
3. Press **[ENTER]**.

* MEMO *	
TITLE ?	
CAPS	
P	

Anniversary Mode

Anniversary mode is selected by pressing **MEMO/ANN** once or twice. Each time you press this key, the display switches between Memo and Anniversary modes.

In Anniversary mode, you can store anniversaries, such as birthdays, so that you can recall these important dates easily.

Once a date is stored as an anniversary, the date will be an anniversary for every year from 1901 to 2099.

The maximum number of characters for each label is 512.

Anniversaries are marked with a tag (■) in the center right of the date in the monthly calendar.

1. Storing Anniversary Listings

1. Press **MEMO/ANN** once or twice to display the Anniversary entry prompt.

```
      M / D = _ / _  
    - ANN -  
CAPS M = MONTH  D = DAY  
    ■
```

2. Enter the date and press **ENTER** (or **▼**) to enter the label. For example,

0212 **ENTER**

```
      FEB 12  
    - ANN -  
DESCRIPTION ?  
    ■
```

- If an attempt is made to store an invalid date, you cannot move to the label entry prompt. Enter the correct date and follow the next procedure.

3. Enter the label of the anniversary. For example,

Nancy's Birthday

```
      FEB 12  
    - ANN -  
Nancy's Birthd  
    ■ ay -
```

4. Press **ENTER** to store in memory.

```
      FEB 12  
    - ANN -  
Nancy's Birthd  
    ■ ay
```

Recalling the Listings

1. Notes for Recalling the Listings

- Perform searching the listings in each mode other than Clock, Calculator, or Conversion mode.
- When the symbol “**↓**” or “**↑**” is displayed, more information exists. Pressing **▼** or **▲** scrolls up or down one line.
- When there are no more (or relevant) listings to be recalled or to be searched, “NOT FOUND !” is displayed briefly and the display returns to the entry prompt.

2. Sequential Search

Recalls listings in order in each mode.

Press **NEXT** (or **PREV**) to recall listings in forward (or reverse) order. Hold down either of these keys for rapid recall.

Schedule listings

- When nothing has been entered for that day, only the time entry prompt is displayed.
- Press **2nd** **SCHEDULE** in Schedule mode to recall today's schedule listings. Then press **NEXT** repeatedly to check if the other listings are scheduled for today.

- Press **2nd** **NEXT** (or **2nd** **PREV**) in Schedule mode repeatedly to recall listings skipping empty dates. Press **C•CE** **C•CE**, then press **2nd** **NEXT** (or **2nd** **PREV**) to display the first (or last) listing in chronological order. After the last (or first) listing in chronological order has been found, “NOT FOUND !” is displayed briefly.

3. Direct Search

Recalls listings by the first character(s) of the name (or the contents) in Telephone/E-mail, WWW, Schedule, or Memo mode.

1. Enter the first character(s) of the desired name in each mode.
 2. Press **NEXT** (or **PREV**).
- The search in Schedule mode begins from the currently displayed date in forward (or reverse) order.
 - If the desired listing in Telephone/E-mail or WWW mode is not in memory, the subsequent listing in sequential order will be displayed.
 - Each time **NEXT** (or **PREV**) is pressed, sequential search will be performed.

4. Keyword Search

Recalls listings by a word contained in the desired listing in Telephone/E-mail, WWW, Schedule, or Memo mode.

<Example> Recall listings containing the word "ABCD co." in the TEL/MAIL1 file.

1. Press **[TEL]** to display the TEL/MAIL1 file.
2. Enter the keyword.

ABCD CO.

- The keyword can be entered in either capital (uppercase) or small (lowercase) letters.

The listings will be recalled regardless of whether the keyword is entered in capital (uppercase) or small (lowercase) letters.

3. Press **[2nd]** **[NEXT]**.

- Each time **[2nd]** **[NEXT]** are pressed, subsequent listings containing the word "ABCD co." will be displayed.

	Edwards	Bob
	201-265-5600	
CAPS	F	265-1234
↓	Supervisor	

5. Date Search

Recalls listings by the date in Calendar, Schedule, or Anniversary mode.

Calendar or Schedule listings

<Example> Recall the calendar for December 25, 2001.

1. Press **[SCHEDULE]**.
2. Press **[C•CE]** to display the date entry prompt. To make a correction, move the cursor with **[▼]** or **[▲]**, or press **[C•CE]** to clear the displayed date.

	MM/DD/YYYY
	MONTH : 02
CAPS	DAY : 08
↓	YEAR : 2001

3. Enter the month, day, and year.

12252001

- To enter a single-digit month or day, enter zero and the digit.
4. Press **[ENTER]**.

The specified calendar or schedule will be displayed.

Anniversary listings

In the Anniversary entry prompt, enter the date and then press **[NEXT]** (or **[PREV]**).

Editing the Listings

1. Editing Listings

1. Recall the listing to be edited.
2. Press **[2nd] [EDIT]** to enter the edit mode. The cursor flashes.
3. Edit the listing.
4. Press **[ENTER]**.

2. Creating a New Listing

Pressing **[2nd] [ENTER]** in step 4 above creates a new listing without deleting the previously stored listing.

This operation is useful when you enter a new listing whose contents are the same as or similar to the previously stored listing.

Deleting the Listings

1. Deleting One Listing

1. Recall the listing to be deleted.
2. Press **[DEL]**. "DELETE ? Y/N" will appear.
3. Press **[Y]** to delete the currently displayed listing.
 - To cancel the deletion operation, press **[N]**.

2. Deleting All of the Listings in Each Mode

Refer to "4. Deleting the Data" on page 26.

Deleting all of the listings for an entire month

1. Press **[SCHEDULE]** once or twice to recall the calendar for the desired month.
2. Press **[DEL]**. "DELETE ? Y/N" will appear.
3. Press **[Y]** to delete all of the schedule listings for the currently displayed month.
 - To cancel the deletion operation, press **[N]**.
 - Although all of the schedule listings for the month are deleted, anniversaries are still retained.

Secret Function

The Secret function allows you to protect confidential listings with a password, so that no unauthorized person can recall them.

1. Registering a Password

Up to 7 characters can be registered for the password.

If you forget the password, it will be necessary to clear the password and all secret listings from the memory (see page 27). As a safeguard, make a written record of the password.

1. Press **[2nd] [SECRET]**.

- If "ALLOW ACCESS TO SECRET DATA" is displayed instead, a password is already registered.

To delete and change the password, refer to page 22.

2. Enter the password. For example,

1234567 [ENTER]

"PASSWORD [1234567] IS NOW SET" is displayed.

SET PASSWORD
CAPS [_]

3. Press **[C-CE]** to display the entry prompt.

A "[S]" indicates the Secret function is in effect.

2. Turning the Secret Function On and Off

When the Secret function is on, a "[S]" is displayed. When the Secret function is off, the "[S]" is cleared even after the password is registered.

(1) Turning the Secret function off

1. Press **[2nd] [SECRET]**.

ALLOW ACCESS
TO SECRET DATA
CAPS [_]

2. Enter the password and press **[ENTER]**.

(Enter "1234567" in this case.)

"SECRET DATA ACCESSIBLE !" is displayed briefly. The Secret function is now off and secret listings can be recalled. The display changes into the entry prompt without the "[S]".

- If the incorrect password is entered, "INCORRECT PASSWORD !" will be displayed briefly and the display changes into the entry prompt.
- Even after the Secret function is turned off, the Secret function will automatically be turned on after manual or auto power off.

(2) Turning the Secret function on

1. Press **[2nd]** **[SECRET]**.

```
1: HIDE SECRET
2: DELETE THE
  PASSWORD
CAPS
```

2. Press **[1]** to select "1: HIDE SECRET".

"SECRET DATA IS HIDDEN !" is displayed briefly. The secret function is now on and secret listings cannot be recalled. The display changes into the entry prompt with the **[S]**.

3. Designating Listings as Secret

Only one password can be registered, but many secret listings can be entered.

A "*" next to a listing indicates it is secret. Secret listings cannot be recalled unless the Secret function is off.

(1) Storing listings as secret

Press **[2nd]** **[MARK*]** to display the "*" during the entry procedure and store the listing.

(2) Designating stored listings as secret

<Example> Designate the listing for "Edwards Bob" as secret.

1. Recall the listing.

```
Edwards Bob
201-265-5600
CAPS F 265-1234
↓ Supervisor
```

2. Press **[2nd]** **[EDIT]**.

3. Press **[2nd]** **[MARK*]**.

The "*" is displayed.

```
Edwards Bob
* 201-265-5600
CAPS F 265-1234
↓ Supervisor
```

4. Press **[ENTER]**.

The listing for "Edwards Bob" is now designated as secret.

4. Changing Secret Listings to Non-Secret

1. Turn the Secret function off. (Refer to page 20.)

2. Recall the desired secret listing.

3. Press **[2nd]** **[EDIT]**.

4. Press **[2nd]** **[MARK*]**. A "*" is cleared.

5. Press **[ENTER]**.

The secret listing is now changed to non-secret.

5. Recalling (and Editing) Secret Listings

Perform recalling (or editing) secret listings in each mode. To recall (and edit) secret listings, the Secret function must first be off.


(1) Recalling only the secret listings

1. Turn the Secret function off. (Refer to page 20.)
2. Press the desired mode key (other than that for Calendar, Calculator, or Conversion mode) to display the entry prompt.
3. Press **[2nd]** **[MARK*]**. The “*” is displayed.
4. Press **[2nd]** **[NEXT]** (or **[2nd]** **[PREV]**).

The secret listings only are sequentially recalled.

- If no secret listing is found, “NOT FOUND !” is displayed briefly and the display returns to the entry prompt.

6. Deleting and Changing the Password

1. Turn the Secret function off.
(Refer to page 20.)
 2. Press **[2nd]** **[SECRET]**.
- 
3. Press **[2]** to select “2 : DELETE THE PASSWORD”.
 4. Enter the old password to be deleted and press **[ENTER]**.
“PASSWORD IS DELETED !” is displayed briefly and the display changes into the entry prompt.
 5. To register a new password, follow the procedure described in “1. Registering a Password” on page 20.

Calculator Mode

Press **[CALC/CONV]** once or twice to select Calculator mode. Each time you press **[CALC/CONV]**, the display switches between Calculator and Conversion modes.



The Organizer can calculate numbers up to 12 digits long.

1. Calculation

Before performing a calculation, press **[C<CE]** **[C<CE]** and **[CM]** to clear the display and memory.

When **[+]**, **[-]**, **[x]**, **[÷]**, **[M+]**, or **[M-]** is pressed, the respective symbol, “+”, “-”, “x”, “÷”, “M+”, or “M-” is displayed. When **[=]** or **[%]** is pressed, the symbol “=” is displayed. (In the examples, these symbols are not described.)

2. Errors

When the integer part of a calculation result or any integer in the memory exceeds 12 digits, or other invalid operations are attempted, an error will occur. (“-E-” will appear.) Press **[C<CE]** to clear the error.

Example	Operation	Display
$(-24 \div 2) \div 4 = -5.5$	$\boxed{-} 24 \boxed{\div} 2 \boxed{\div} 4 \boxed{=}$ *1	-5.5
$34 + 57 = 91$	$34 \boxed{+} 57 \boxed{=}$	91.
$45 + 57 = 102$	$45 \boxed{+} \boxed{=}$	102.
$68 \times 25 = 1700$	$68 \boxed{\times} 25 \boxed{=}$	1700.
$68 \times 40 = 2720$	$40 \boxed{=}$	2720.
$200 \times 10\% = 20$	$200 \boxed{\times} 10 \boxed{\%}$	20.
$9 \div 36 = 25(\%)$	$9 \boxed{\div} 36 \boxed{\%}$	25.
$200 + (200 \times 10\%) = 220$	$200 \boxed{+} 10 \boxed{\%}$	220.
$500 - (500 \times 20\%) = 400$	$500 \boxed{-} 20 \boxed{\%}$	400.
$4^6 = (4^3)^2 = 4096$	$4 \boxed{\times} \boxed{=} \boxed{=} \boxed{\times} \boxed{=}$	4096.
$1/8 = 0.125$	$8 \boxed{\div} \boxed{=}$	0.125
$25 \times 5 = 125$	$\boxed{CM} 25 \boxed{\times} 5 \boxed{M+}$	-M- 125.
$-) 84 \div 3 = 28$	$84 \boxed{\div} 3 \boxed{M-}$	-M- 28.
$+) 68 + 17 = 85$	$68 \boxed{+} 17 \boxed{M+}$	-M- 85.
182	\boxed{RM}	-M- 182.
$\sqrt{25-9} = 4$	$25 \boxed{-} 9 \boxed{=} \boxed{\sqrt{\quad}}$	4.
$123456789098 \times 145 = 17901234419210$	$123456789098 \boxed{\times} 145 \boxed{=}$ 17.9012344192 $\boxed{C \cdot CE}$ 17.9012344192 $(17.9012344192 \times 10^{12} = 17901234419200)$	-E-

*1 $\boxed{-}$ (minus) can only be used when entering a negative number as the first number. Use $\boxed{+/-}$ for following negative numbers during calculation.

<Example> $5 \times (-10) = -50$

$5 \boxed{\times} 10 \boxed{+/-} \boxed{=}$

Currency/Unit Conversion Mode

Each time you press $\boxed{CALC/CONV}$, the display switches between Calculator and Conversion modes.

Currency conversion, such as from \$ to £ and from \$ to €, can be performed. Unit conversions, such as from centimeters to inches, are also possible. The following currencies and units in the Organizer are factory installed.

No.	Currency/Unit		Conversion Rate
	A	B	
1	\$	£	0
2	\$	€	0
3	€	DM	0
4	inch	cm	2.54
5	oz	g	28.35
6	°F	°C	$(^{\circ}\text{F}-32) \times 5/9$

- The rates in the above table show the value of B when A equals 1. Conversion from B to A (for example, from £ to \$) is also possible.
- Currencies No. 1 to No. 3 can be changed. Set the correct rate before using the conversion function. Units and rates for items No. 4 to No. 6 cannot be changed.
- The Organizer can calculate numbers up to 12 digits long.

1. Setting a Rate

<Example> Set the following rate: \$1 = £1.8

1. Press **CALC/CONV** once or twice to select Currency/Unit conversion mode.

* CONVERSION *				
[1] \$ → £				
CAPS			0 .	
			0 .	

2. Press **NEXT** (or **PREV**) to select the currency or unit that the rate is to be set for.
3. Enter the rate.

2nd **EDIT** **1.8** **ENTER**

* CONVERSION *				
[1] \$ → £				
CAPS			1 . 8	
			0 .	

- The rate can be entered up to 10 digits long.

2. Converting Currency/Unit

To convert unit A to unit B, press **►**.

To convert unit B to unit A, press **◄**.

<Example 1> Convert \$198 to £.

1. Press **NEXT** (or **PREV**) to select the unit. (In this example, select No. 1: \$1 = £1.8.)
2. Enter the value to be converted.

198

* CONVERSION *				
[1] \$ → £				
CAPS			1 . 8	
			198	

3. Press **►** to convert it.

The symbol, “→”, changes to “►” and the conversion result is displayed.

* CONVERSION *				
[1] \$ ► £				
CAPS			1 . 8	
			356 . 4	

- After setting each rate, you can perform a consecutive conversion such as from £ to \$, and then from \$ to €. After having finished the conversion No. 1 (from £ to \$), and when you press **NEXT** to select the conversion No. 2 (from \$ to €), the conversion result to \$ remains on the display. Pressing **►** once converts the result from \$ to €.

<Example 2> Convert 25°C to °F.

1. Press **[NEXT]** (or **[PREV]**) to select the unit. (In this example, select No. 6. For No. 6, the rate is not displayed.)
2. Enter the value to be converted.

25

3. Press **[↩]** to convert it.

```

*  CONVERSION  *
[6] °F ◀ °C
CAPS
77.

```

- The conversion result may have a slight calculation error as a result of rounding off the number. Use the conversion result for reference.

3. Changing the Unit Name

Only items No. 1 to No. 3 can be changed. While changing the unit name, you can also set the rate at a time.

1. Select the currency or unit to be changed and press **[2nd]** **[EDIT]**.

The cursor will flash on the rate field.

2. Enter the rate.
3. Press **[▲]** to move the cursor to the unit name field.
4. Press **[↩]** and **[▶]** to move the cursor to the adequate position and enter the new unit name.
5. Press **[ENTER]** after the new names and rate have been entered.

Miscellaneous Functions

By pressing **[2nd]** **[MENU]**, you can perform the following operations:

```

< MENU >
1: SET ALARM
CAPS 2: MEMORY CHECK
↓ 3: LCD CONTRAST

```

[NEXT] ↓ ↑ **[PREV]**

```

< MENU >
↑ 1: DELETE DATA
CAPS 2: FILE NAME
↓ 3: B/L SETUP

```

[NEXT] ↓ ↑ **[PREV]**

```

< MENU >
↑ 1: TIME SYSTEM
CAPS 2: FREE UP MEM.
↓

 
```

- 1. Setting the Daily Alarm
- 2. Checking the Memory Storage
- 3. Adjusting the LCD Contrast
- 4. Deleting the Data
- 5. Changing the File Names
- 6. Setting Up the Backlight
- 7. Selecting the Time System
- 8. Freeing Up Memory

1. Setting the Daily Alarm

When the time clock reaches the alarm time, it beeps for approximately 1 minute. Press **C-CE** to turn the alarm off.

1. Press **2nd** **MENU** **1** to display the daily alarm screen.



2. Enter the time.
3. Press **O** to turn on the alarm.

 
You can turn the daily alarm on and off each time you press **O**.

4. Press **ENTER**.

2. Checking the Memory Storage


1. Press **2nd** **MENU** **2**.

The amount of memory in use is displayed graphically.



2. Press **NEXT**.

 The number of listings stored in TEL/MAIL1, TEL/MAIL2 and URL (WWW) files is displayed.



- Even after you have designated an each file name for TEL/MAIL1, TEL/MAIL2, or URL, "T/M1", "T/M2", or "URL" does not change according to the names you stored. (Refer to page 9.)
- 3. Press **NEXT** again to display the number of listings stored in Memo, Schedule and Anniversary files.
- 4. Press **C-CE** to return to the display on which you were before pressing **MENU**.
- When the amount of memory used is reaching almost F (FULL), delete unnecessary data and free up memory to make enough space to store new listings.
- Since the same memory is used for Telephone, Schedule, Anniversary, and Memo modes, the number of listings that can be stored in each of these modes will vary depending on the situation of the other modes.

3. Adjusting the LCD Contrast

See page 2 for operation.

4. Deleting the Data

(1) Deleting all of the data in each mode

If all of the entire data for Telephone/E-mail, WWW, Schedule, Anniversary, or Memo mode is unnecessary, you can delete all of the data in each mode individually.

<Example> Delete all listings in the TEL/MAIL1 file.

1. Press **[2nd]** **[MENU]** **[NEXT]** **[1]**.

2. Press **[1]** to select TEL/MAIL1.

"DELETE ? Y/N" is displayed.

- After performing the step 1, press the followings keys in other modes:

TEL/MAIL2: **[2]**

WWW (URL): **[3]**

Schedule: **[NEXT]** **[1]** **[1]**

Anniversary: **[NEXT]** **[1]** **[2]**

Memo: **[NEXT]** **[2]**

- When the Secret function is on, "SECRET ON MODE" is displayed and the file cannot be deleted. In this case, turn the Secret function off (page 20) and repeat the above procedure.
 - Even after you have designated the file name, the message does not change accordingly.
3. Press **[Y]**.
- To cancel the deletion operation, press **[N]**.
 - All listings in the TEL/MAIL1 file (including secret listings) will be deleted.

(2) Deleting the password and secret listings

The password and all secret listings can be deleted at the same time.

1. Press **[2nd]** **[MENU]** **[NEXT]** **[1]**.

2. Press **[NEXT]** **[3]**.

"ALL SECRET DATA DELETE ? Y/N" is displayed.

3. Press **[Y]**.

- To cancel the deletion operation, press **[N]**.
- "DELETED !" is displayed briefly and the password and all secret listings are deleted.

5. Changing the File Names

See page 9, "Designating the File Names" for operation.

 
6. Setting Up the Backlight

See page 2 for operation.

7. Selecting the Time System

The time system can be switched between 12-hour and 24-hour format.

1. Press **[2nd]** **[MENU]** **[NEXT]** **[NEXT]** **[1]**.



2. Press **[◀]** or **[▶]** to select "12" (12-hour) or "24" (24-hour).

3. Press **[ENTER]**.

8. Freeing Up Memory

Deleting or modifying data during operation can produce unnecessary space in the memory of the Organizer.

Execute the deletion operation of the unnecessary space by freeing up memory, when the Organizer displays "MEMORY FULL".

1. Press **2nd** **MENU** **NEXT** **NEXT**.

2. Press **2** to start freeing up memory.

- "WORKING..." is displayed indicating that the memory is being freed up now.
- The following situations may display the message shown below.
 - When the power is turned on.
 - When you performed the operation, "4. Deleting the Data" on page 26.

DO YOU WANT TO
FREE UP
CAPS MEMORY ?
(Yes / No)

(It is recommended to press **Y** to free up memory.)

- The indication "Replace the OPERATING batteries !" shown at the time of freeing up memory means that the operating batteries are almost exhausted. Replace them with new ones then try again to free up memory.
- The backlight function does not work while the memory is being freed up.

Using the Option Function

You can share the specific data, the data in the specific mode, or the whole data (for the purpose of making a backup copy or restoring the data) by transferring it to/from another EL-6895.

- Backup data transfer is only possible between identical models.
- Communicating with another EL-6895 requires the optional cable "CE-260L".

1. Cautions and Special Notes for Data Transfer

- Turn off the secret function before transferring data by mode. If the secret function is turned on, data cannot be transferred by mode.
- After data transfer, the data on the transferring Organizer is preserved.
- Alarm setting is ignored. The alarm will not sound during data transfer.
- The Auto power off function is disabled in all the transfer modes.


- The Backlight is nullified during data transfer. (When the Backlight is turned on, it is automatically turned off at the beginning of data transfer.)
- When the Organizers are not in the same mode before transferring data by entry or mode, "DATA ERROR !" is displayed and no data transfer is allowed. However, directories in the TEL (or E-MAIL) and WWW mode are excluded from this rule. For example, data in the TEL/MAIL1 directory can be transferred to the WWW directory.
- When the communication cable is disconnected during data transfer, "I/O DEVICE ERROR !" is displayed. Press **C•CE** to clear the error, check that the Organizers are connected correctly, and then start the steps again.
- The indication "Replace the OPERATING batteries !" shown when **2nd** **OPTION** are pressed means that the operating batteries are almost exhausted. Replace them with new ones then try again to transfer data.
- When "MEMORY FULL" is displayed and data transfer is aborted, delete unnecessary data on the receiving Organizer, then start the steps from the beginning.

- The indication "WORKING..." shown on the side of the receiving Organizer at the beginning or end of the data transmission means that the memory has begun to be freed up automatically.

2. Transferring Data between Organizers

The single data entry or entire data in a mode (TEL, E-MAIL, WWW, SCHEDULE, MEMO, ANN) can be transferred between Organizers.

- Turn both of the Organizers off first before connecting them with the optional cable. (CE-260L)

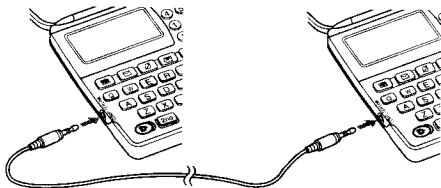

- When an error occurs, "I/O DEVICE ERROR!" is displayed on the receiving or transferring Organizer, or on both ones.

1. Press the desired mode key, or recall a listing to be transferred on the transferring Organizer.
- To transfer all the data by mode, press the mode key to display the entry prompt. To transfer the data by entry, recall the desired listing.

2. Press **2nd** **OPTION** on both the Organizers.

The following menus are displayed.

```

<UNIT TO UNIT>
1:SEND 4:BACKUP
CAPS 2:RCV 5:RESTORE
  3:VERIFY
  
```

3. Press **2** on the receiving Organizer to select RCV (RECEIVE).

```

<UNIT TO UNIT>
CAPS RECEIVING
  MODE
  
```

4. Press **1** on the transferring Organizer to select SEND.

5. Data transfer is started.

- To interrupt data transfer, press **ON**.

Messages are displayed on the respective Organizers while data is being transferred.

Transferring Organizer

<UNIT TO UNIT>
CAPS -SENDING-
P

Receiving Organizer

<UNIT TO UNIT>
CAPS -RECEIVING-
P

When these messages are no longer displayed, the data transfer is completed.

To verify the listing after it has been transferred, select **3** (VERIFY) on the receiving Organizer in step 3.

The following message is displayed.

<UNIT TO UNIT>
CAPS -VERIFYING-
P

If any discrepancies are found, "VERIFY ERROR!" is displayed.

Transferring data between Telephone/E-mail mode and WWW mode

Transferring data is possible between Telephone/E-mail mode and WWW mode. When TEL (or E-mail) data is transferred to WWW data, the E-mail (or postal) address is displayed followed by the postal (or E-mail) address on the receiving Organizer. The E-mail (or postal) address returned to the transferring Organizer is relocated to its original field.

3. Transferring Data to Make Backup

All data in the Organizer can be transferred to another EL-6895.

- Press **2nd** **OPTION** on both the Organizers.

- Press **5** on the receiving Organizer to select RESTORE.

<UNIT TO UNIT>
BACKUP
CAPS RECEIVING
MODE
P

- Press **4** on the transferring Organizer to select BACKUP. A confirmation message is displayed.

<UNIT TO UNIT>
BACKUP
CAPS SEND OK ? Y/N
P

4. Press **[Y]** to the confirmation on the transferring Organizer.

<UNIT TO UNIT>
CAPS -SENDING-
➤

Backup data transfer is started. Messages are displayed on the respective Organizers while the data is being transferred. When these messages are no longer displayed, the backup data transfer is completed.

<UNIT TO UNIT>
CAPS -RECEIVING-
➤

Make sure you really want to delete all the data in the receiving Organizer before executing the "Restore" function. Once you start the restoration process, all the data in the receiving Organizer will be deleted, even if you cancel the restoration process.

Battery Replacement

Batteries used

Type	Model	Quantity	Use
Lithium battery	CR2032	2	Unit operation
Lithium battery	CR2032	1	Memory backup

- Do not remove both the operating and memory backup batteries at the same time. Doing so will clear the memory of its contents.
- Be sure to write down any important information stored in memory before replacing the batteries.

1. Precautions

Since improper use of the batteries may cause leakage or explosion, strictly observe the following instructions.

- Insert the battery with its positive side (+) correctly positioned.
- Never throw batteries into a fire because they might explode.
- Keep batteries out of reach of children.

- When batteries become weak, remove them from the Organizer immediately to avoid battery leakage and corrosion inside the Organizer.

Because the batteries in the Organizer were installed at the factory, they may become depleted before the specified expiration time is reached.

2. Operating Batteries Replacement

 
(1) Battery replacement time

When "**BATT**" is displayed, immediately replace the batteries with new ones. If the battery level is very low, the alarms or the key touch tone may not sound, or similarly the Backlight may remain on for less than the set interval or it may not function. Continued use of the Organizer with consumed batteries can alter or clear the memory contents. Memory contents may be lost if the batteries are improperly replaced or if the following instructions are disregarded.


(2) Replacing the batteries

- Make sure the power is turned off before replacing the batteries.
- Do not press **[ON]** until the battery replacement procedure is completed.

1. Press **[OFF]** to turn the power off.
2. Loosen the screw (counter clockwise) and remove the battery holder cover on the back of the unit.



 3. Remove the used batteries using a ball-point pen or similar object.




- Do not use a mechanical pencil or sharp pointed object.
4. Install two new batteries with the positive sides (+) facing up.
 5. Replace the holder cover and secure it with the screw.
 6. The power will be turned on 2 to 3 seconds after **[ON]** is pressed. If the power does not come on, press the **RESET** switch.
 7. Set the clock to the correct time.

3. Memory Backup Battery Replacement

(1) Battery replacement frequency

- Replace the battery every 5 years.

 When you start to use the Organizer, write down the date on the label of the Organizer, so that you know when to replace the battery the next time. For example,




(2) Precautions when replacing the memory backup battery


- If the memory backup battery is replaced when the operating batteries are depleted, memory contents will be lost. Make sure the operating batteries are not depleted. If the operating batteries are depleted, first replace these before replacing the memory backup battery.

(3) Replacing the battery

 1. Press **OFF** to turn the power off.
2. Loosen the screw (counter clockwise) and remove the battery holder cover on the back of the unit.




 3. Remove the memory backup battery seal.



4. Remove the used battery using a ball-point pen or similar object.

 - Do not use a mechanical pencil or sharp pointed object.



5. Install a new battery with the positive side (+) facing up.

6. Replace the seal and the holder cover and secure the cover with the screw.

7. The power will be turned on 2 to 3 seconds after **ON** is pressed. If the power does not come on, press the **RESET** switch. If nothing appears on the display again, replace the operating batteries.

Specifications

- Model:** EL-6895
- Product name:** Electronic Organizer
- Display:** 14 columns \times 4 lines
- Memory capacity:** 260752 bytes
- Clock mode:**
- Accuracy: ± 30 seconds/month (at 25°C/77°F)
 - Display: Year, month, day, day of the week, hour, minute, AM/PM, city name, time zone
 - Clock system: 12-hour/24-hour format (switchable)
World clock function, daylight saving time/summer time display function, daily alarm function
- Telephone/E-Mail mode:** Entry and recall of names, numbers, postal addresses, and E-mail addresses

- WWW mode:** Entry and recall of names, URL, and remarks
- Calendar mode:** From Jan., 1901 to Dec., 2099, Schedule mark function distinguishing between morning, afternoon, and anniversary
- Schedule mode:** Entry and recall of schedule (year, month, day, hour and minute), schedule alarm
- Anniversary mode:** Entry and recall of month, day, and labels of anniversaries
- Memo mode:** Entry and recall of memo listings
- Calculator mode:** 12 digits (with calculation status symbol)
Addition, subtraction, multiplication, division, percentage, square root, memory calculation, etc.
- Currency/Unit conversion mode:** 10 digits, 6 kinds of currencies and units
- Power consumption:** 0.1 W
- Operating temperature:** 0°C – 40°C (32°F – 104°F)
- Power supply:** Operating battery: 6V $\overline{\text{---}}$ (DC)
(Lithium battery CR2032 \times 2)
Memory backup battery: 3V $\overline{\text{---}}$ (DC)
(Lithium battery CR2032 \times 1)

Battery life:

Operating batteries (at 25°C/77°F)

- Approx. 1200 hours; When data is continuously displayed without Backlight.
- Approx. 300 hours; When data is continuously displayed with Backlight for 2 minutes per hourly use.
- Approx. 270 hours; When data is searched for 5 minutes and displayed for 55 minutes per hourly use and Backlight is on for 2 minutes per hourly use.
- Approx. 1.5 years; When turned off and the clock is running.

Memory backup battery

- Approx. 5 years (if operating batteries are replaced promptly when exhausted)
- Approx. 1 year (if operating batteries are exhausted or not installed)

Weight: Approx. 120 g (0.27 lb.) (Including batteries)

Dimensions:

Open: 139.0 mm (W) × 174.7 mm (D) × 9.5 mm (H)
5-15/32" (W) × 6-7/8" (D) × 3/8" (H)

Closed: 139.0 mm (W) × 89.5 mm (D) × 13.7 mm (H)
5-15/32" (W) × 3-17/32" (D) × 17/32" (H)

Accessories: 3 lithium batteries (installed), operation manual

In U.S.A.:

Declaration of Conformity

Electronic Organizer : EL-6895

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

SHARP ELECTRONICS CORPORATION
Sharp Plaza, Mahwah, New Jersey 07430
TEL: 1-800-BE-SHARP

Tested To Comply With FCC Standards



FOR HOME OR OFFICE USE

WARNING – FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: A shielded interface cable is required to ensure compliance with FCC regulations for Class B certification.

LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on

contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Your Product :

Electronic Organizer

Warranty Period for this Product :

One (1) year parts and labor from date of purchase.

Additional Items Excluded from Warranty Coverage :

Any consumable items such as paper, maintenance cartridge, ink cartridges supplied with the Product or to any equipment or any hardware, software, firmware, fluorescent lamp, power cords, covers, rubber parts, or peripherals other than the Product.

Where to Obtain Service :

At a Sharp Authorized Servicer located in the United States. To find out the location of the nearest Sharp Authorized Servicer, call Sharp toll free at 1-800-BE-SHARP.

What to do to Obtain Service : Ship (prepaid) or carry in your Product to a Sharp Authorized Servicer. Be sure to have proof of purchase available. If you ship or mail the Product, be sure it is packaged carefully.

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, CALL 1-800-BE-SHARP.

SHARP

SHARP ELECTRONICS CORPORATION

Sharp Plaza, Mahwah, New Jersey 07430-2135

PRINTED IN CHINA
00CTO (TINSE0415EHZZ)
OGS9209870 ////