

ELECTRONIC CASH REGISTER



INSTRUCTION MANUAL



WARNING

FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WARNING

Shielded interface cables must be used with this equipment to maintain compliance with EMC regulations.

CAUTION

The AC power socket-outlet should be installed near the equipment and should be easily accessible.

FOR YOUR RECORDS

Please record below the model number and serial number for easy reference in case of loss or theft. These numbers are located on the right side of the unit. Space is provided for further pertinent data.

Model Number

Serial Number

Date of Purchase

Place of Purchase

INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model XE-A407/XE-A43S. Please read this manual carefully before operating your register in order to gain full understanding of functions and features.

Please keep this manual for future reference. It will help you if you encounter any operational problems.

IMPORTANT

- Be very careful when removing and replacing the printer cover, as the cutter mounted on it is very sharp.
- Install the cash register in a location not subject to direct sunlight, unusual temperature changes, high humidity or splashing water.
- Installation in such locations could cause damage to the cabinet and the electronic components.
- Never install the register in saline areas (e.g.: close to the sea). Installing the register in such locations could cause component failure with the corrosion.
- Never operate the register with wet hands.

 The water could account the interior of the register and
- The water could seep into the interior of the register and cause component failure. • When cleaning your register, use a dry, soft cloth. Never use solvents, such as benzine and/or thinner.
- The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- The register plugs into any standard wall outlet (120V AC).

Other electrical devices on the same electrical circuit could cause the register to malfunction.

• For protection against data loss, please install two alkaline batteries LR6 ("AA" size) after initializing the register. When handling the batteries, please observe the following:

Incorrectly using batteries can cause them to burst or leak, possibly damaging the interior of the register.

- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
 - DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- Be sure that the positive (+) and negative (–) poles of each battery are facing in the proper direction for installation.
- Never mix batteries of different types.
- Never mix old batteries and new ones.
- Never leave dead batteries in the battery compartment.
- Remove the batteries if you do not plan to use the register for long periods.
- Should a battery leak, clean out the battery compartment immediately, taking care to avoid letting the battery fluid come into direct contact with your skin.
- · For battery disposal, follow the corresponding law in your country.
- For complete electrical disconnection, disconnect the main plug.

Customer Service Hotline 1-800-BE-SHARP

SD logo is a trademark of SD-3C, LLC.

CONTENTS

INT	TRODUCTION	1
IM	PORTANT	1
со	ONTENTS	2
1	Parts and Their Functions	6
	External View	6
	Front view	6
	Rear view	6
	Printer	
	Keyboard	
	Keyboard layout (for XE-A407)	
	Function key list	
	Keyboard layout (for XE-A43S)	
	Function key list	
	Displays	
	Operator display	
	Customer display	
	Screen save mode	
2	Selecting an Operating Mode	
2	Operating Modes	
	Mode Selection	
2		
ა	Prior to Making Entries	
	Preparations for Entries	
	Receipt and journal paper rolls	
	Receipt ON/OFF function	
	Clerk assignment	
	Error Warning	
	Selecting the Function from the Menu	
	HELP/FAQ Function	
	The HELP menu and printing guidance messages	
	The FAQ menu and guidance messages	
4	Entries	
	Item Entries	
	Single item entries	
	Repeat entries	
	Multiplication entries	
	Split-pricing entries	
	Single item cash sale (SICS)	
	PLU/UPC information inquiry (view) function	
	UPC learning function (creation and registration of unknown UPCs)	24
	Display of Subtotals	25
	Taxable subtotal	25
	Including-tax subtotal (complete subtotal)	25
	Finalization of Transaction	25
	Cash or check tendering	25
	Cash or check sale that does not need any tender entry	
	Charge (credit) sale	
	Mixed-tender sale (cash or check tendering + charge tendering)	
	Tax Calculation	27
	Automatic tax	
	Manual tax	
	Tax delete	

	Tax status shift	
	Auxiliary Entries	29
	Percent calculations (premium or discount)	29
	Discount entries	30
	Refund entries	30
	Printing of non-add code numbers	
	Payment Treatment	31
	Currency conversion	31
	Received-on-account entries	32
	Paid-out entries	33
	No-sale (exchange)	33
	Bottle return	33
	TRAINING Mode	34
5	Correction	35
	Correction of the Last Entry (Direct Void)	35
	Correction of the Next-to-Last or Earlier Entries (Indirect Void)	
	Subtotal Void	37
	Correction after Finalizing a Transaction	37
6	Special Printing Function	38
	Copy Receipt Printing	38
7	Manager Mode	39
	Entering the Manager Mode	39
	Override Entries	39
8	Reading (X) and Resetting (Z) of Sales Totals	40
	How to take a X1/Z1 or X2/Z2 report	40
	View report	40
	Daily Sales Totals	42
	General report	42
	Department report	43
	Individual group total report on department	43
	Full group total report on department	43
	Transaction report	
	Total in drawer report	
	PLU/UPC report by designated range	
	PLU/UPC report by associated department	
	Clerk reports	
	Hourly report	
	Periodic Report Sample	
	General information	
	Daily net report	45
9	Prior to Programming	46
	Programming Keyboard Layout	
	For XE-A407	46
	For XE-A43S	46
	How to Program Alphanumeric Characters	48
	Mobile phone method	
	Entering character codes	
10	Programming	
	Basic Instructions	
	Programming screen	
	Programming example	
	DEPT/PLU Programming	
	Department	


PLU/UPC	55
PLU range	56
Functional Programming	
Discount ()	
Percent ([%1] , %2)	
Manual tax	
RA	60
PO	60
Cash in drawer	60
Commission rate (Commission 1, Commission 2)	60
Media Key Programming	61
Cash key (Cash)	62
Check key (Check)	62
Charge key (Charge1, Charge2)	63
Currency conversion (CONV1, CONV2)	64
Function Text Programming	65
Personnel Programming	67
Clerk	
Manager	68
Mode Pass Code	
Training Clerk	
Terminal Programming	
Date/Time Setting	
Date/time	
Optional Feature Selection	
Basic System	
Function Prohibit	
Function Authority	
Function Selection	
Print Selection	
UPC Function	
Report Programming	
Zero skip	
Print select	
Z Counter	
Z1 General report	
Journal data	
Message Programming	
Receipt logo Device Configuration Programming	
Keyboard	
Display	
Printer	
EFT	
Tax Programming	
Tax system	
Tax 1 through 4	
Doughnut exempt	
Automatic Sequencing Key Programming	
Key Sequence	
Reading of Stored Programs	
Program reading sequence	
Sample printouts	91

EFT Test Function	97
SD CARD Mode	98
Inserting and removing an SD memory card	98
SD card formatting	98
Folder creating	98
Folder name selecting	99
Data saving	99
Data loading	
11 Universal Product Code (UPC) or European Article Number (EAN)	
UPC or EAN code	
Add-on code	
12 Operator Maintenance	103
In Case of Power Failure	103
In Case of Printer Error	103
Cautions in Handling the Printer and Recording Paper	
Cautions in handling the printer	103
Cautions in handling the recording paper (thermal paper)	
Installing Batteries	104
Replacing the Paper Roll	105
Recording paper specifications	105
Installing Paper Rolls	
Replacing the paper roll	
Removing a Paper Jam	
Cleaning the Printer (Printer Head/Sensor/Roller)	109
Removing the Till and the Drawer	110
Opening the Drawer by Hand	110
Drawer Lock Key	110
Before Calling for Service	111
13 Specifications	


1 Parts and Their Functions

External View

Front view

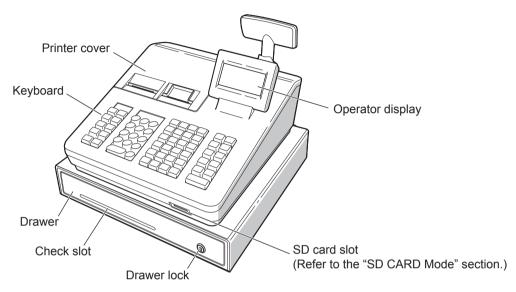

Rear view

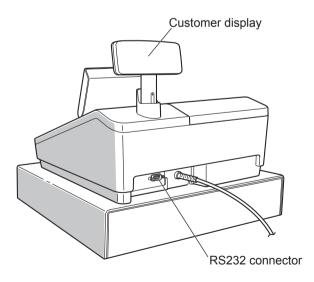


Printer

The printer is a thermal printer, and therefore it does not require any type of ink ribbon or cartridge. The average life of the printer is approximately 6 million lines.

When removing the printer cover, lift up its rear.

When installing the printer cover, hook it on the pawls on the cabinet and shut it.

CAUTION: The paper cutter is mounted on the printer cover. Be careful not to cut yourself.

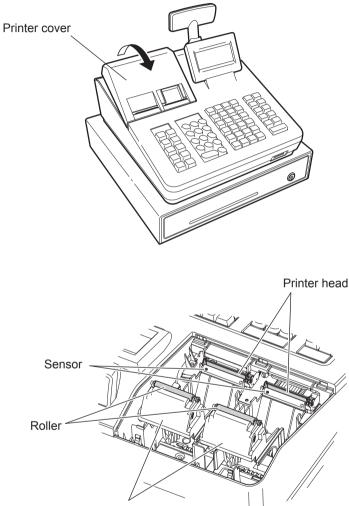


Print roller arm


NOTE Do not attempt to remove the paper with the print roller arm in the hold position. This may result in damage to the printer and printer head.

Keyboard

 Keyboard layout (for XE-A407)





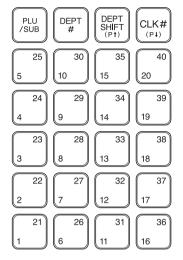



Function key list


RCPT FEED
JRNL FEED
FUNC
AUTO
TAX1 SHIFT
%1
Θ
VOID
HELP
REFUND
@/FOR
•
CL
0~9
00

-
Receipt paper feed key
Journal paper feed key
Function menu key
Auto key
Tax1 shift key
Percent 1 key
Discount key
Void key
Help key
Refund key
Multiplication key
Decimal point key
Clear key
Numeric key


PLU /SUB DEPT # DEPT SHIFT CLK#
$\begin{bmatrix} 21\\1 \end{bmatrix} \sim \begin{bmatrix} 44\\20 \end{bmatrix}$
▲
MODE
ESC/ CANCEL
CH1
RCPT COPY
CH2
INQ
CHK
#/TM SBTL
CA/AT/NS


	PLU/sub-department key
	Department code entry key
	Department shift key
	Clerk code entry key
40 0	Department 1-40 key
	Cursor (up/down arrow) key
	Mode key
	Escape/Cancel key
	Charge 1 key
	Receipt print key
	Charge 2 key
	PLU/UPC inquiry key
	Check key
	Non-add code/Time display/Subtotal key
S	Cash/Amount tender/No sale key

  ■ Keyboard layout (for XE-A43S)





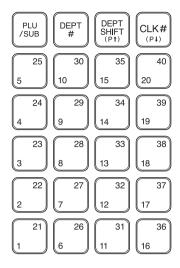



Function key list


RCPT FEED
JRNL FEED
FUNC
AUTO
TAX1 SHIFT
%1
Θ
VOID
FAQ
REFUND
@/FOR
\bullet
CL
0~
00

	Receipt paper feed key	PLU /SUB	PLU/sub-department key
	Journal paper feed key	DEPT #	Department code entry key
	Function menu key	DEPT SHIFT	Department shift key
	Auto key	CLK#	Clerk code entry key
	Tax1 shift key	$\begin{bmatrix} 21 \\ 1 \end{bmatrix} \sim \begin{bmatrix} 40 \\ 20 \end{bmatrix}$	Department 1-40 key
	Percent 1 key	▲	Cursor (up/down arrow) key
	Discount key	MODE	Mode key
	Void key	ESC/ CANCEL	Escape/Cancel key
	Frequently Asked Questions key	CH1	Charge 1 key
	Refund key	RCPT COPY	Receipt print key
	Multiplication key	CH2	Charge 2 key
	Decimal point key	INQ	PLU/UPC inquiry key
	Clear key	СНК	Check key
9	Numeric key	#/TM SBTL	Non-add code/Time display/Subtotal key
		CA/AT/NS	Cash/Amount tender/No sale key

 \frown

Operator display

Screen example 1 (REG mode)

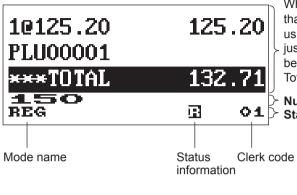

Sales information area:


When a transaction information occupies more than 2 lines, you can scroll to the direction by using the text keys. Sales information you have just entered such as items and prices will appear between 1st line and 2nd line. Total is always appear at 3rd line.


Numeric Entry Area: Status area:

 Receipt ON/OFF status indicator (R)
 : Appears when the receipt ON-OFF function signs OFF.

 Sentinel mark (X)
 : Appears when the cash in drawer exceeds a programmed sentinel amount. The sentinel check is performed for the total cash in drawer.

Screen example 2 (PROGRAM mode)

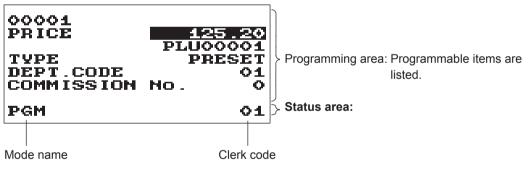

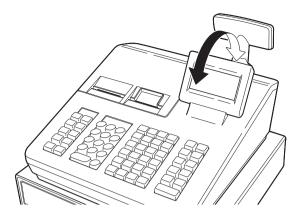

The display can be tilted back and forth to the best operational viewing angle.

NOTE

Do not try to force the display beyond its full position.

Customer display



Screen save mode

When you want to save the electric power or save the display's life, use the screen save function. This function can turn off the display and the LCD backlight when any clerk does not operate the register for an extended period of time. You can program the time for which your register should keep the normal status (in which the backlight is "ON") before it goes into the screen save mode.

This register will enter the screen save mode two minutes later by default.

To go back to the normal mode, press any key.

The backlight in display is a consumable part.

When the LCD display may no longer be adjusted and become darker, you should replace the LCD unit. Consult your authorized SHARP dealer for further details.

2 Selecting an Operating Mode

When you turn the register on and press the *wote* key, the mode selection window will appear on the display, listing available operating modes as shown below.

Mode selection window

SELECT MODE 1 OPX2 MODE 2 OFF MODE 3 VOID MODE 4 X1/21 MODE 5 X2/22 MODE	•
MODE	01

Operating Modes


You can select any mode other than REG from the list in the mode selection window. Your register supports the following operating modes:

REG mode	This mode allows you to enter various sales information. The mode selection window does not list this mode. To select this mode from the mode selection window, press the ESC/CANCEL key.
OPXZ mode	This mode allows clerks to take X or Z reports on their sales information.
OFF mode	This mode locks all operations of the register. When you select this mode, the window will disappear. Pressing any key turns the register ON.
VOID mode	This mode allows correction after finalizing a transaction.
X1/Z1 mode	This mode is used to take various daily total reports (X1/Z1 reports).
X2/Z2 mode	This mode is used to take various weekly or monthly reports (X2/Z2 reports).
PROGRAM mode	This mode is used to program various items.
SD CARD mode	This mode allows you to save and load the data of your register to and from an SD card.

Mode Selection

Procedure

Press the MODE key. The following mode screen is displayed.

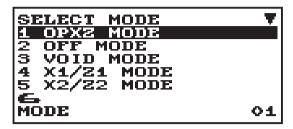

Use one of the following ways:

- Move the cursor to the desired option by using the \uparrow or \downarrow key, and press the CA/AT/NS key.
- Enter the desired option number by using a numeric key and press the CA/AT/NS key.

NOTE

When you want to enter the REG mode, simply press the [ESCICANCEL] key.

3 Prior to Making Entries

Preparations for Entries

Receipt and journal paper rolls

If the paper roll (receipt or journal) is not set in the register or it is getting low, install a new one according to section "Replacing the Paper Roll" under "Operator Maintenance."

Receipt ON/OFF function

You can disable receipt printing in the REG mode to save paper using the receipt function.

For XE-A407

Press the FUNCMENU key. Select "8 RECEIPT SW" and press the CA/AT/NS key. Select "OFF" to disable receipt printing and press the CA/AT/NS key. When the function is in the OFF status, the receipt off indicator "R" is highlighted.

For XE-A43S

 
Press the \boxed{FAQ} key. Select "2 RECEIPT SW" and press the $\boxed{CA/AT/NS}$ key. Select "OFF" to disable receipt printing and press the $\boxed{CA/AT/NS}$ key. When the function is in the OFF status, the receipt off indicator "R" is highlighted.



Your register will print reports regardless of the receipt state. This means that the receipt roll must be installed even when the receipt state is "OFF".

Clerk assignment

Prior to any item entries, a clerk must enter his/her clerk codes into the register. To sign on: (In case secret code is 0000)



Error Warning

In the following examples, your register will go into an error state accompanied with a warning beep and the error message on the display. Clear the error state by pressing the (CL) key and then take the proper action to remedy the problem.

- When you exceed a 32-digit number (entry limit overflow):
 - Cancel the entry and reenter a correct number.
- When you make an error in key operation: Clear the error and try the entry again.
- When you make an entry beyond a programmed amount entry limit:
 - Check to see if the entered amount is correct. If it is correct, it can be rung up in the MGR mode. Contact your manager.
- When an including-tax subtotal exceeds eight digits:

Clear the error message by pressing the $(\rm CL)$ key and then press a media key to finalize the transaction.

Error escape function

To quit a transaction due to an error or an unforeseen event, use the error escape function as shown below:

To clear the error state
Transaction


The transaction is voided (treated as a subtotal void) and the receipt is issued by this function. If you have already entered a tendered amount, the operation is finalized as a cash sale.

Selecting the Function from the Menu

Your register allows you to select functions from the menu.

The menu can be opened by pressing the FUNC MENU key.

FUNCTION MENU

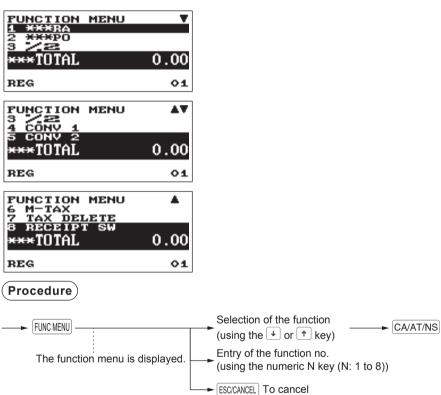


HELP/FAQ Function

The HELP/FAQ function allows you to print guidance messages for basic operation procedure of the register. FAQ function: only for the XE-A43S

The HELP menu and printing guidance messages

Press the HEP key to display the HELP menu. This menu provides a list of the procedures for which you can print the guidance messages.

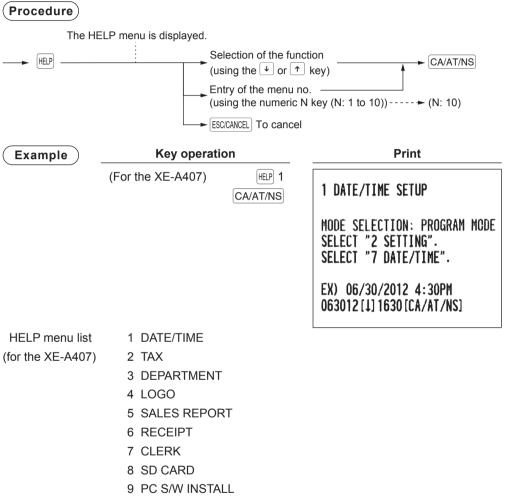


10 OTHERS

The FAQ menu and guidance messages

Press the FAQ key to display the FAQ menu. This menu provides a list of the procedures for which you can perform it or print the guidance messages.

Procedure

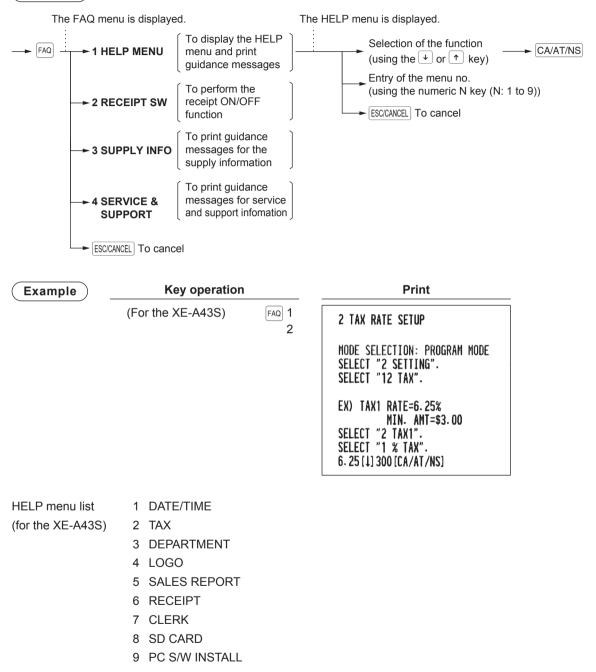

4 Entries

Item Entries

Single item entries

Department entries

For a merchandise classification, the register provides a maximum of 99 departments. To the departments, group attributes such as taxable status are applied to items when they are entered.

NOTE When those departments for which the unit price has been programmed as zero (0) are entered, only the sales quantity is added.

• When using the department keys (for department 1 to 40)

For department 1 to 20, enter a unit price and press a department key. If you use a programmed unit price, press a department key only.

For department 21 to 40, enter a unit price, press the DEPT SHIFT key and press a department key. If you use a programmed unit price, press the DEPT SHIFT key and press a department key.

Procedure

When using a programmed unit price

 
Unit price * Department key (for department 1 to 20) (max. 8 digits)

* Less than the programmed upper limit amounts

When using the department code entry key

Enter a department (dept.) code and press the DEPT# key, then enter a unit price and press the CA/AT/NS key.

If the department code is programmed to preset price entry ("PRESET") type and a unit price is preset, the register will finish its registration operation.



* Less than the programmed upper limit amounts

NOTE You can directly enter the code No. of the department using the numeric key. For the code No. exceeding the figure on the numerical key board (41 and above), use this function.

Example	Key operation	I	Print
(Example)	1200 6 ³⁰ 5 ²⁰ 3 DEPT# 520 CA/AT/NS 4 ³¹ CA/AT/NS	1@ 12.00 DEPT.06 1@ 7.10 DEPT.05 1@ 5.20 DEPT.03 1@ 6.80 DEPT.04 MDSE ST TAX1	۲٫\$12.00 ۲٫\$7.10 ۲٫\$5.20 ۲٫\$6.80 \$31.10 \$1.86
		ITENS 40 Cash	\$32.96

PLU/sub-department (open price) entries

 
For another merchandise classification, the register provides a maximum of 7000* PLUs/sub-departments. PLUs are used to call up preset prices by a code entry. Sub-departments are used to classify merchandise into smaller groups under the departments. Every PLU and sub-department has a free code from 1 to 99999, and should belong to a department to obtain attributes of that department.

The register is pre-programmed to "PRESET" for entry type and zero (0) for unit price. To use PLU entries, their preset unit prices should be previously programmed. (Refer to the section "PLU/UPC" of "DEPT/PLU Programming")

To use sub-department entries, change to "OPEN" or "OPEN&PRESET" entry type for each PLU code. * A total of 7000 codes, including UPC codes, can be programmed.

Enter a PLU code and press the PLU/SUB key. If you not use a programmed unit price, you need to enter a unit price after pressing the PLU/SUB key.

(Procedure)



NOTE When those PLUs for which the unit price has been programmed as zero (0) are entered, only the sales quantity is added.

Example	Key operation	P	Print
	PLU entry \rightarrow 2 PLU/SUB Sub-department \rightarrow $\begin{cases} 16 \text{ PLU/SUB} \\ 1200 \\ CA/AT/NS \\ CA/AT/NS \end{cases}$	10 5.10 PLU00002 10 12.00 PLU00016 MDSE ST TAX1 ITEMS 20 CASH	^{⊺,} \$5.10 ^{⊺,} \$12.00 \$17.10 \$1.02 \$ 18.12
		LASH	\$10.12

UPC entries

You can enter the barcodes using keyboard. The barcodes which can be entered are UPC-A, UPC-E, EAN-8, EAN-13 and ITF-14.

For details of UPC code, please refer to "11 Universal Product Code (UPC) or European Article Number (EAN)".

Procedure

→ UPC code → PLU/SUB (max. 19 digits) * After an UPC entry, you may be requested to enter a unit price with the display "UNDEFINED CODE" and beep sound. In this case, enter the unit price and press the (CA/AT/NS) key, enter the department code and press the (CA/AT/NS) key (UPC learning function).

Example	Key operation	Print	
	5012345678900 [PLU/SUB] CA/AT/NS	10 3.10 5012345678900# Item-A	[™] \$3.10
		MDSE ST TAX1	\$3.10 \$0.18
		ITEMS 10 CASH	\$3. 28

Repeat entries

You can use this function for entering a sale of two or more the same items. You can simply press the department key, (DEPT#), or (PLU/SUB) key to repeat entry.


Example	Key operation	Print
Repeated department entry (direct)		3@ 2.00 [™] i\$6.00 DEPT.02
Repeated	4 DEPT#	2@ 6.80 ¹ \\$13.60 DEPT.04 3@ 8.20 ¹ \\$24.60 PLU00010
department entry (indirect)	680 CA/AT/NS DEPT#	2@ 3.10 "1\$6.20 5012345678900# Item-A
Repeated PLU entry		2@ 5.00 ¹ \$10.00 PLU00060
5	PLU/SUB	MDSE ST \$60.40 TAX1 \$3.63
Repeated UPC entry	5012345678900 PLU/SUB PLU/SUB	ITEMS 120 CASH \$64.03
Repeated subdepartment	60 PLU/SUB 500 CA/AT/NS	
entry	PLU/SUB CA/AT/NS	

Multiplication entries

Use this feature when you need to enter two or more the same items.

This feature helps you when you sell a large quantity of items or need to enter quantities that contain decimals.

Procedure

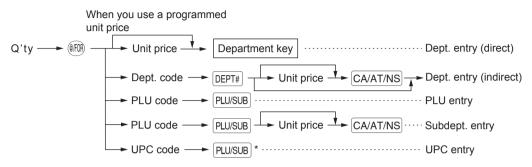

* After an UPC entry, you may be requested to enter a unit price with the display "UNDEFINED CODE" and beep sound. In this case, enter the unit price and press the CA/AT/NS key, enter the department code and press the CA/AT/NS key (UPC learning function).

- Q'ty: Up to four-digit integer + three-digit decimal
- Unit price: Less than a programmed upper limit


• Q'ty x unit price: Up to eight digits

(Example)			
	Key operation	Prin	nt
	7 • 5 (FR) 165 (2 ²²)	7.500@ 1.65 DEPT.02	[⊺] ı\$12. 38
		2@ 2.50 DEPT.05	¹ı \$5.00
	5 [DEPT#] 250	15@ 3.00 PLU00008	[⊺] 1\$45.00
	CA/AT/NS 15 (@FOR)	8@ 3.10 5012345678900#	¹ 1\$24.80
	8 PLU/SUB	Item-A 3@ 1.00	¹ \\$3.00
		PLU00060	
	5012345678900 PLU/SUB 3 (IFOR)	MDSE ST Taxi	\$90.18 \$5.41
	60 [PLU/SUB] 100	ITEMS 290	¢05 50
	100 CA/AT/NS CA/AT/NS	CASH	\$95.5

Example

Split-pricing entries

You will use this function when your customer wants to purchase more or less than the base quantity of a loose item.

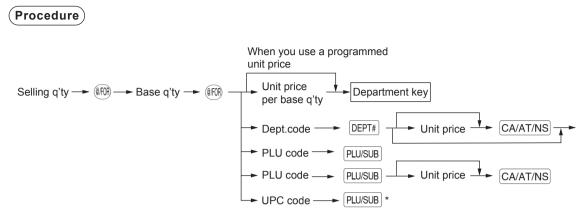

* After an UPC entry, you may be requested to enter a unit price with the display "UNDEFINED CODE" and beep sound. In this case, enter the unit price and press the CA/AT/NS key, enter the department code and press the CA/AT/NS key (UPC learning function).

- Selling quantity: Up to four-digit integer + three-digit decimal
- Base quantity: Up to two digits (integer)

(Example)			
	Key operation	Prin	t
	7 (FOR) 10 (FOR) 600 (2) 22 8 (FOR) 5 (FOR) 35 (FLU/SUB 5 (FOR) 6 (FOR) 5045678912304 (FLU/SUB) CA/AT/NS	7@ 10/ 6.00 DEPT.02 8@ 5/ 1.50 PLU00035 5@ 6/ 3.60 5045678912304# Item-C MDSE ST TAX1	¹ ₁\$4. 20 ¹ ₁\$2. 40 ¹ ₁\$3. 00 \$9. 60 \$0. 58
		ITEMS 3Q C ash	\$10. 18

Single item cash sale (SICS)

- This function is useful when a sale is for only one item and is for cash; such as a pack of cigarettes. This function is applicable only to those departments that have been set for SICS or to their associated PLUs, subdepartments or UPCs.
- The transaction is finalized and the drawer opens as soon as you press the department key, DEPT# key or PLU/SUB key.


Example	Key operation	P	rint
	$\begin{array}{c} 250\\ \text{For finishing} \xrightarrow{23}\\ \text{the transaction} \end{array}$	1@ 2.50 DEPT.03 MDSE ST TAX1	¹₁\$2. 50 \$2. 50 \$0. 15
		ITEMS 10 CASH	\$2.65

NOTE If an entry to a department, PLU/subdepartment or UPC set for SICS follows the ones to departments, PLUs/subdepartments or UPCs not set for SICS, it does not finalize and results in a normal sale.


PLU/UPC information inquiry (view) function

You can use this function when you want to know the unit price of the PLU/UPC item during transaction in the REG/MGR mode.

To use price inquiry function, follow the procedure below:

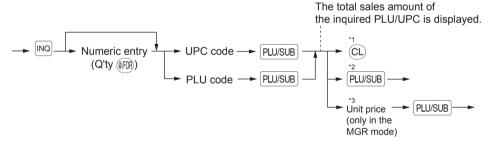

- *1: Press the (CL) key to cancel the the inquiring (view) mode.
- *2: Press the PLU/SUB key when you want to register the unit price of the PLU/UPC displayed.
- *3: You can change the unit price temporarily in the MGR mode. The unit price which is programmed in PROGRAM mode is not changed (This is considered a price override entry).

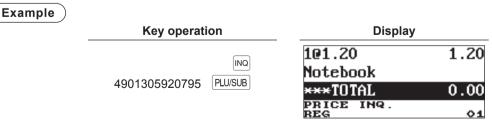

NOTE For the repeat entry, press the PLU/SUB key when having pressed the PLU/SUB key.


■ UPC learning function (creation and registration of unknown UPCs)

When you enter an undefined UPC code, you are required to enter its unit price and the associated department. The code, associated department and unit price entered are stored in the UPC file and used for future UPC sales entries.



• When there is no capacity remained in the file, the data is not stored in the file.

- For the text for the UPC code, the text of its associated department is applied.
- You can use the UPC learning function in the training mode.

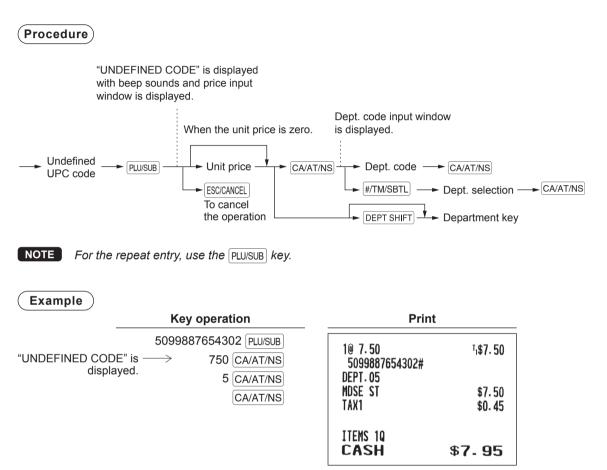

Display of Subtotals

The register provides the following types of subtotals.

Taxable subtotal

Taxable 1 subtotal:

Press the $\frac{TAXI}{SHFI}$ and $\frac{}{H/TM/SBTL}$ keys in this order at any point during a transaction. The sale subtotal of taxable 1 items will appear in the display with the function text "TAX1 ST".

Including-tax subtotal (complete subtotal)

Press the #/TM/SBTL key at any point during a transaction. The sale subtotal including tax will appear in the display with the function text "SUBTOTAL".


Finalization of Transaction

Cash or check tendering

Press the #/TM/SBTL key to get an including-tax subtotal, enter the amount tendered by your customer, then press the CA/AT/NS key if it is a cash tender or press the CHK key if it is a check tender. When the amount tendered is greater than the amount of the sale, your register will show the change due amount and the symbol "CHANGE." Otherwise your register will show the symbol "DUE" and a deficit. Make a correct tender entry.

Example

Cash tendering

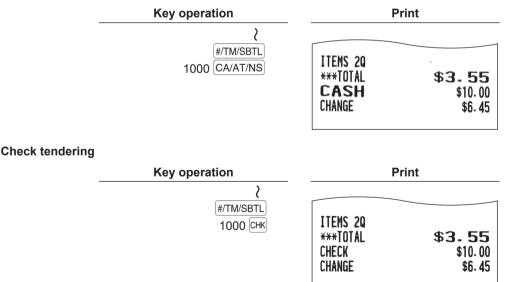

Cash or check sale that does not need any tender entry

Enter items and press the CA/AT/NS key if it is a cash sale or press the CHK key if it is a check sale. Your register will display the total sales amount.

Example	Key operation		Print
	6 PLU/SUB 10 PLU/SUB	1@ 3.50 PLU00006	[⊺] ı\$3. 50
	CA/AT/NS	1@ 8.20 PLU00010	[⊺] ı\$8. 20
		MDSE ST TAX1	\$11.70 \$0.70
		ITEMS 20 Cash	\$12.40
		In the case	e of check sale
		ITEMS 2Q Check	\$12.40


Charge (credit) sale

Enter items and press the $[\mbox{CH1}]$ or $[\mbox{CH2}]$ key.

Example _	Key operation	Print	
	6 (PLU/SUB)	1@ 3.50 PLU00006	™\$ 3. 50
	7 [PLU/SUB] #/TM/SBTL	1@ 2.10 PLU00007	^ĭ ı\$2. 10
	CH1	MDSE ST TAX1	\$5.60 \$0.34
		ITEMS 20 Charge	\$5.94

NOTE Amount tendering operations (i.e. change calculations) can be achieved by the CH1 or CH2 key when a PROGRAM mode programming allows them.

Mixed-tender sale (cash or check tendering + charge tendering)

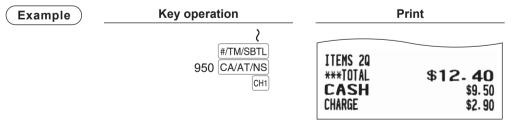


NOTE Press the CHK key in place of the CA/AT/NS key when your customer makes payment by checks.

Tax Calculation

Automatic tax


When the register is programmed with a tax rate (or tax table) and the tax status of an individual department is set for taxable, it computes the automatic tax on any item that is entered directly into the department or indirectly via a related PLU.

Example: Selling five \$6.70 items (dept. 1, taxable 1) and one \$7.15 item (PLU 85, taxable 2) for cash

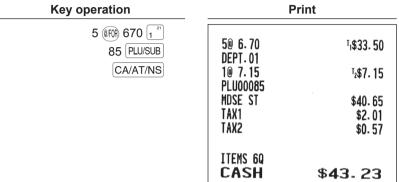

Manual tax

The register allows you to enter tax manually after it finalizes an item entry.

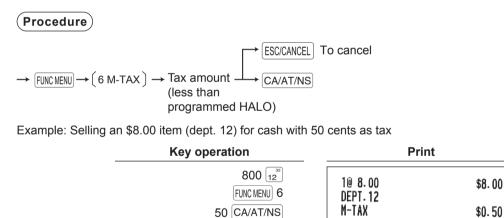

CA/AT/NS

 
ITEMS 10 CASH

\$8.50

Tax delete

The automatic tax $(\tan 1, \tan 2, \text{ or all } \tan (\tan 1 - \tan 4))$ can be deleted.





Example:Selling a \$7.25 item (dept. 1, taxable 1) and another \$5.15 item (dept. 11, taxable 2) for cash and entering the sale as non-taxable

Key operation		Print
725 1 ²¹	1@ 7.25	¹ı \$7.2 5
515 ₁₁ ³¹	DEPT.01	
FUNC MENU 7	10 5.15	¹ ₂\$5. 15
Select "TAX1 DELETE"	DEPT.11 TAX1 ST	\$0.00
CA/AT/NS	TAX2 ST	\$0.00
FUNC MENU 7		
Select "TAX2 DELETE"	ITEMS 20	
CA/AT/NS	CASH	\$12.40
CA/AT/NS		

Tax status shift

The register allows you to shift the programmed tax status of each department or PLU/UPC by pressing the TAX key before those keys. After each entry is completed, the programmed tax status of each key is resumed.

Example: Selling the following items for cash with their programmed tax status reversed

- One \$13.45 item of dept. 16 (non-taxable) as a taxable 1 item
- One \$7.00 item of PLU 25 (non-taxable) as a taxable 1 item
- One \$4.00 item of dept. 11 (taxable 1) as a non-taxable item

Key operation		Print
$1345 \left[\begin{smallmatrix} \text{TAX1} \\ \text{SHIFT} \end{smallmatrix} \right] \left[\begin{smallmatrix} \text{36} \\ 16 \end{smallmatrix} \right]$	1@ 13.45	¹ı\$13. 45
	DEPT-16 1@ 7.00	¹ı \$7.0 0
400 TAXI SHIFT 11 CA/AT/NS	PLU00025 1@ 4.00	\$4.00
	DEPT-11	
	MDSE ST Tax1	\$24. 45 \$1. 23
	TTENS 20	
	ITEMS 3Q Cash	\$25.68

Auxiliary Entries

Percent calculations (premium or discount)

- Your register provides percent calculations for a subtotal or each item entry depending on the programming.
- Percentage: 0.01 to 100.00%

Percent calculation for a subtotal

Key opera	ation		Print	
(When a discount of 10% is programmed for the ^{%1} key.)	3 PLU/SUB 2 (1607) 5 PLU/SUB #/TM/SBTL (%1) CA/AT/NS	1@ 1.10 PLU00003 2@ 2.25 PLU00005 MDSE ST %1 MDSE ST TAX1	-10.00%	¹ ₁\$1. 10 ¹ ₁\$4. 50 \$5. 60 −0. 56 \$5. 04 \$0. 34
		ITEMS 3Q Cash	\$	5.38

Percent calculation for item entries

Example					
	Key oper	peration		Print	
	(When a premium of 15% is programmed for	<u>%1</u>	1@ 3.50 PLU00006		¹ı \$3. 50
	the [%1] key.)	30 PLU/SUB 7 • 5 %1	%1 1@ 5.00 PLU00030	15.00%	\$0.53 ¹ \$5.00
		CA/AT/NS	%1 Mdse st Tax1	7.50%	\$0. 38 \$9. 41 \$0. 51
			ITEMS 20 Cash	\$	9. 92

NOTE

• You can also enter a percent calculation from the function menu window. Press the FUNC MENU key and select "3 %2" and enter a percent calculation.

• Availability of item % and/or subtotal % depends on the programming data of %1 and %2.

Discount entries

Your register allows you to deduct a certain amount less than a programmed upper limit after the entry of an item or the computation of a subtotal depending on the programming.

Discount for a subtotal

)

\sim				_
	Ev	2 m	nl	•
		a 111	pre	-

 Key operation	Print	
6 PLU/SUB 60 PLU/SUB	1@ 3.50 PLU00006	[⊺] ı \$3. 50
(#/TM/SBTL) 100 ()	1@ 12.00 PLU00060	™\$ 12.00
CA/AT/NS	MDSE ST (-)	\$15.50 -1.00
	MDSE ST Tax1	\$14.50 \$0.93
	ITEMS 20 Cash	\$15. 43

Discount for item entries

Example			
	Key operation	P	rint
	7 (PLU/SUB) 75 ()	1@ 2.10 PLU00007	[⊺] ₁\$2. 10
	CA/AT/NS	C-) MDSE ST TAX1	-0.75 \$1.35 \$0.12
		ITEMS 10 Cash	\$1.47


Refund entries

For a refund entry, press the we key just before you press a department key, DEPT# key, or PLU/SUB key. The operation before pressing the we key is the same as the one of normal operation. For example, if a refund item is the one entered into a department, enter the amount of the refund, then press the we key and the corresponding department key in this order; if an item entered into a PLU/UPC is returned, enter the corresponding PLU/UPC code, then press the we and PLU/SUB keys.

(Example)				
	Key operation	Print		
	3 REFUND (PLU/SUB) 7 (BFOR)	-1@ 1.10 PLU00003	[™] R−1.10	
	7 REFUND PLU/SUB	-7@ 2.10 PLU00007	™R−14. 70	
	CA/AT/NS	MDSE ST TAX1	-15.80 -0.95	
		1001	0.55	
		ITEMS OQ Change	\$16.75	

Printing of non-add code numbers

Enter a non-add code number such as a guest code number within a maximum of 16 digits and press the #/TM/SBTL key at any point during the entry of a sale. The non-add code is printed on the receipt.

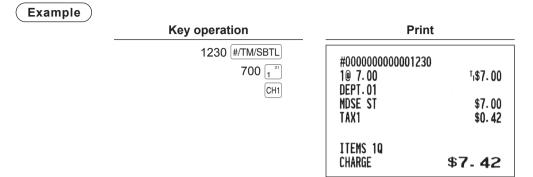


Payment Treatment

Currency conversion

Your register allows payment entries in foreign currency. Press the FUNCMENU key and select "CONV 1" or "CONV 2" to create a subtotal in foreign currency.

Procedure

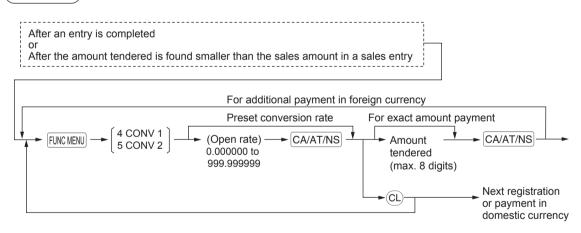


NOTE

When the amount tendered is short, its equivalent in deficit is shown in domestic currency.
Change amount will be displayed in domestic currency.

Example

Preset conversion rate (0.8063) :CONV 1

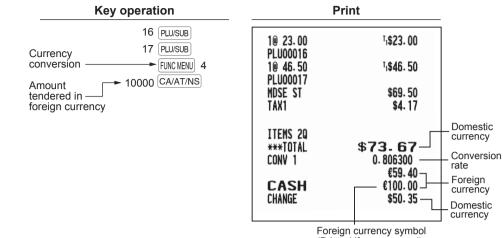

(Printed if programmed)

Example

Open conversion rate (1.275) :CONV 2

Key operation		Print	
16 PLU/SUB Currency 17 PLU/SUB conversion → FUNC MENU 5	1@ 23.00 PLU00016	[⊺] ı\$23. 00	
Conversion rate \rightarrow 1 \odot 275 CA/AT/NS	10 46.50	¹ı \$46. 50	
	PLUO0017 MDSE ST	\$69.50	
Amount 10000 CA/AT/NS tendered in foreign currency	TAX1	\$4.17	
	ITEMS 20		
	***TOTAL	\$73.67	
	CONV 2	1.275000 93.93	
	CASH	100.00	
	CHANGE	\$4.76	


Received-on-account entries

When you receive on account from a customer, use this function. From the FUNCTION MENU, select RA option to proceed the operation. You cannot receive RA in foreign currency.

Procedure			
FUNC MENU ($1 ***RA \rightarrow (max. 9 digits) \rightarrow (CA/AT/NS)$		
Example	Key operation	Print	
	12345 (#/TM/SBTL) (Selection "1 ***RA") → FUNC MENU 1 4800 (CA/AT/NS)	#000000000012345 ***RA	\$48.00

Paid-out entries

When you pay an amount to a vendor, use this function. From the FUNCTION MENU, select PO option to proceed the operation.

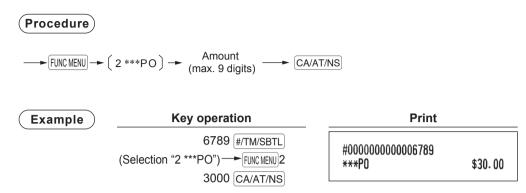

No-sale (exchange)

Simply press the CA/AT/NS key without any entry. The drawer will open and the printer will print "NO SALE" on the receipt. If you let your register print a non-add code number before pressing the CA/AT/NS key, a no sale entry is achieved with a non-add code number printed.

Print

NO SALE

Bottle return

This function is used to handle the deposit and payment (paid out) for returned empty bottles or cans. This function is applicable only to those departments that have been set for bottle return departments or their associated PLUs, sub-departments or UPCs.

Example	Key operation	Print	
	10 (AFOR) 15 (DEPT SHIFT) (20) (CA/AT/NS)	10@ -0.15 DEPT.40	-1.50
	(When dept. 40 is programmed as a bottle return dept. and also a negative dept.)	ITEMS OQ Change	\$1.50

TRAINING Mode

The training mode is used when the operator or the manager practices register operations.

When a clerk set in training is selected, the register automatically enters the training mode, while a clerk not set in training is selected, the register automatically enters the ordinary REG mode. A training text and a training clerk can be programmed.

The training operations are valid in all modes. A mark which is identifying a training receipt is printed on the receipt which is issued in the training mode.

The consecutive number is not updated. The preceding number is repeated in printing.

Training clerk programming is performed in PROGRAM mode. (It allows only for one-clerk.) The memory in clerk is updated in the training mode. Other memories are not updated.


The reading and resetting of training clerks is printed on the clerk reports. However, the sales total of training clerks is not included in the clerk total on the full clerk report.

Example	Key operation		Print	
Example	Selecting the clerk set in training	5 PLU/SUB 3 (FOR 3 PLU/SUB CA/AT/NS	TRAINING 1@ 2.25 Ti\$2.2 PLU00005 3@ 1.10 3@ 1.10 Ti\$3.3 PLU00003 MDSE ST	
			TAX1 Items 40 Cash	\$0.33 \$ 5.88

5 Correction

Correction of the Last Entry (Direct Void)

If you make an incorrect entry relating to a department, PLU/subdepartment, UPC, percentage (%1,%2), discount (\bigcirc), or item refund, you can void this entry by pressing the work key immediately after the incorrect entry.

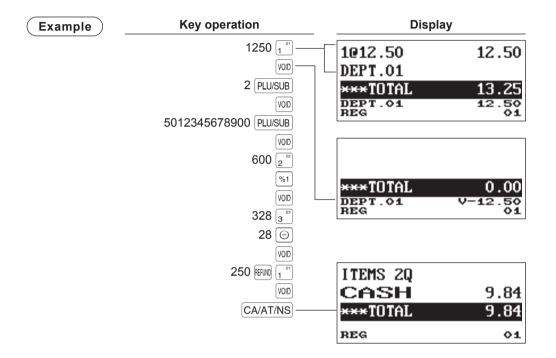

Correction of the Next-to-Last or Earlier Entries (Indirect Void)

If you find an incorrect entry before finalizing the transaction (e.g. before pressing the CA/AT/NS key), you can void the entry by the cursor operation or the key sequence operation.

Indirect void by cursor operation


You can void department, PLU/subdepartment, UPC, item refund, amount discount/premium and percent entries.

Move the cursor to the item to be voided, and press the VOID key.

Indirect void by key sequence operation

You can void department, PLU/subdepartment, UPC and item refund.

Press the vol key just before you press a department key, DEPT# key or PLU/SUB key. For the refund indirect void, press the vol key after you press the key.

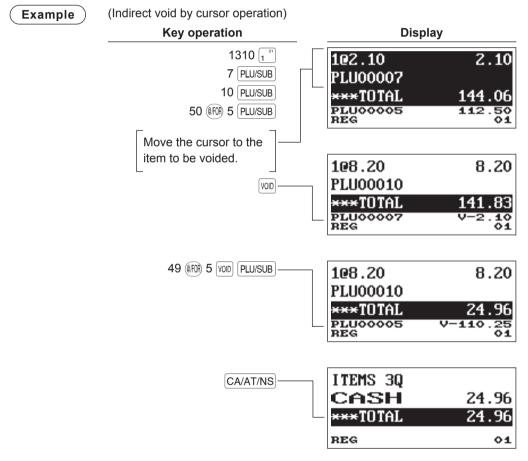

NOTE The register allows you to enter the quantity to void only for the integer quantity. →[Selection the item to void by cursor]→[Entry the quantity to void (XXXX)]→[void]

Subtotal Void

You can void an entire transaction. Once subtotal void is executed, the transaction is aborted and the register issues a receipt.

Example	Key operation	Displ	ау
	1 (PLU/SUB) 2 (PLU/SUB) 10 (PLU/SUB) (#/TM/SBTL) (WOD) (#/TM/SBTL)	SBTL VOID ***TOTAL ***TOTAL reg	-134.85 0.00 0.00 01

Correction after Finalizing a Transaction

When you need to void incorrect entries that are found after finalizing a transaction or cannot be corrected by direct, indirect or subtotal void, follow this procedure.

- 1. Select "3 VOID MODE" in the mode selection window.
- 2. Repeat the entries that are recorded on an incorrect receipt. (All data in the incorrect receipt is removed from register memory; the voided amounts are added to the void mode totalizer.)

Incorrect re	ceipt	Can	cellation re	ceipt
#000102 10/02/201 01 CLERK01	I 3:00:26PM 111111	#000103 01 Clerko	10/02/2011 1	3:01:00PM 111111
3@ 12.50	¹ı\$37.50		*VOID*	
PLU00001	T. M.C. 10	3@ 12.50		¹ı\$37.50
1@ 5.10 PLU00002	¹ı \$5. 10	PLU00001 1@ 5.10		¹i\$5.10
MDSE ST	\$42.60	PLU00002		143-10
TAX1	\$2.56	MDSE ST		\$42.60
		TAX1		\$2.56
ITEMS 4Q CASH	\$45.16	ITEMS 4Q		
	-10-10	CASH	\$	45.16

NOTE

Your register leaves the VOID mode whenever a transaction is canceled (i.e. finalized in the VOID mode). To void additional transactions, repeat steps 1 and 2 above.

6 Special Printing Function

Copy Receipt Printing

If your customer wants a receipt after you have finalized a transaction with the receipt ON-OFF function in the OFF status (no receipting), press the ROPT COPY key for receipting. Your register can also print a copy receipt when the receipt ON-OFF function is in the "ON" status.

Procedure

RCPT COPY

Example

Printing a receipt after making the entries shown below with the receipt ON-OFF function "OFF" status

Key operation	Print		
2 PLU/SUB 3 (FOR) 1 PLU/SUB CA/AT/NS			
For receipting -> RCPT COPY	Print on the	10 5.10 PLU00002 30 12.50	⁺ı\$5. 10 ⁺ı\$37. 50
		PLUOOOO1 Mdse st Tax1	\$42.60 \$2.56
		ITEMS 40 Cash	\$45.16

"COPY" is printed on the copy receipt.

	COPY
10 5.10	י _ו \$5. 10
PLU00002 3@ 12.50 PLU00001 MDSE ST TAX1	י _ו \$37. 50
	\$42.60 \$2.56
ITEMS 4Q C ash	\$45-16

Manager Mode


The manager mode is used when managerial decisions must be made concerning register entries, for example, for overriding limitations and for other various non-programming managerial tasks.



Normal register operations may also be performed in this mode.

Entering the Manager Mode

To enter the manager mode, use the following procedure in the REG mode:

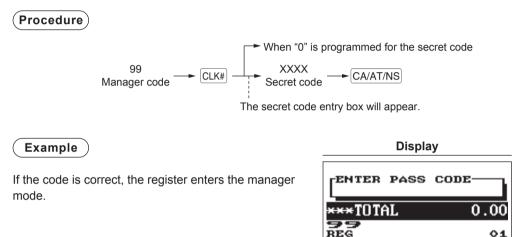

Override Entries

Programmed limits (such as maximum amounts) for functions can be overridden by placing the register in the manager mode.

DEG

Example

This example presumes that the register has been programmed not to allow coupon entries over 2.00.

Key operation	P	rint
REG-mode entries 3 PLU/SUB 250 Error	1@ 3.00 PLU00003	[⊺] ı\$3. 00
	(-) MDSE ST	-2.50 \$0.50
Enter to the 99 CLK# manager mode250 〇	TAX1	\$0-18
CA/AT/NS	ITEMS 10 Cash	\$0- 68



• When a transaction is finalized, manager is automatically signed off.

8 Reading (X) and Resetting (Z) of Sales Totals

- Use the reading function (X) when you need to take the reading of sales information entered after the last resetting. You can take this reading any number of times. It does not affect the register's memory.
- Use the resetting function (Z) when you need to clear the register's memory. Resetting prints all sales information and clears the entire memory except for the GT1 through GT3, reset count, and consecutive number.
- X1 and Z1 reports show daily sales information. You can take these reports in the X1/Z1 mode.
- X2 and Z2 reports show periodic (monthly) consolidation information. You can take these reports in the X2/Z2 mode.
- In the OP X/Z mode, a clerk can take his or her report.
- If you want to stop the printing report, press the ESC/CANCEL key.

■ How to take a X1/Z1 or X2/Z2 report

[To take an X1 or X2 report:]

- 1. Press the MODE key.
- 2. Select the "4 X1/Z1 MODE" or "5 X2/Z2 MODE" by using the + key, and press the CA/AT/NS key.
- **3.** Select "2 READING" in the X1/Z1 mode or select "1 READING" in the X2/Z2 mode menu window and press in both cases CA/AT/NS key to display the items list.
- 4. Select the appropriate report title.
- 5. Press the CA/AT/NS key.

[To take a Z1 or Z2 report:]

- 1. Press the MODE key.
- 2. Select the "4 X1/Z1 MODE" or "5 X2/Z2 MODE" by using the + key, and press the CA/AT/NS key.
- **3.** Select "3 RESETTING" in the X1/Z1 mode or select "2 RESETTING" in the X2/Z2 mode menu window and press in both cases CA/AT/NS key to display the items list.
- 4. Select the appropriate report title.
- **5.** Press the CA/AT/NS key.

View report

You can take view reports (display only) in the X1/Z1 mode for department sales, cash in drawer (CID) and sales total at the point you take the report.

- 1. Press the MODE key.
- 2. Select the "4 X1/Z1 MODE" by using + key, and press the CA/AT/NS key.
- 3. Select the "1 VIEW REPORT" , and press the CA/AT/NS key-
- **4.** Select "1 DEPT. SALES" to take a view report of department sales, "2 CASH IN DRAWER" to take a view report of cash in drawer, or "3 SALES TOTAL" to take a view report of sales total.
- **5.** Press the CA/AT/NS key.

Report type		Description	Operating modes			
		Description	OP X/Z	X1/Z1	X2/Z2	Data to be entered
GE	ENERAL	General report		X1, Z1	X2, Z2	
<	EPT. MENU>					I
	BY RANGE	Department by group report		X1	X2	Department code (The range can be specified by entering start and end codes.)
	BY GROUP	Individual department group report		X1	X2	Department group no. (1 to 12)
	GROUP TOTAL	Department group total report		X1	X2	
<t< td=""><td>RANS. MENU></td><td></td><td></td><td></td><td></td><td></td></t<>	RANS. MENU>					
	TRANSACTION	Transaction report		X1	X2	
	TL-ID	Total-in-drawer report		X1	X2	
<p< td=""><td>LU/UPC MENU></td><td></td><td></td><td></td><td></td><td></td></p<>	LU/UPC MENU>					
BY RANGE PLU/UPC sales report by specified range			X1, Z1	X2, Z2	PLU/UPC code (The range can be specified by entering start and end codes.)	
	BY DEPT	PLU/UPC report by associated department		X1, Z1	X2, Z2	Department code
<c< td=""><td>LERK MENU></td><td></td><td></td><td></td><td></td><td></td></c<>	LERK MENU>					
	ALL CLERK	All clerk report		X1, Z1	X2, Z2	
	IND. CLERK	Individual clerk report	X, Z	X1, Z1	X2, Z2	For the assigned clerk
	HOURLY	Hourly report (all or by specified range)		X1		For an individual time range (The range can be specified by entering start and end times.)
		Hourly report (all)		Z1		
	DAILY NET	Daily net report			X2, Z2	

NOTE The following reports relating to PLU/UPC is issued in the sequence of PLUs and UPCs. PLU/UPC and PLU/UPC BY DEPT.

Also the UPC codes are printed in the sequence shown below.

EAN-13
EAN-8
UPC-A
UPC-E
ITF-14

Daily Sales Totals

General report

Sample report

			— Mode title*1
	Z1		Reset counter
*2	GT1 GT2 GT3 TR	Z1 0014	Net grand total (GT2-GT3) Grand total of plus registration Grand total of minus registration
	DEPARTMENT		Grand total of training mode registration
	DO1 DEPT.01 DO2 DEPT.02 DO3 DEPT.03	535.000 Q - \$7563.61 - 22.000 Q \$1411.29 31.000 Q \$976.58	Dept. code Sales q'ty Sales amount
	D99 DEPT.99 *DEPT TL	20.000 Q \$113.11 1199.000 Q \$18332.06	} "+" dept. counter ∫ and total
	D38 DEPT. 38 DEPT (-)	4. 000 Q -8. 72 4. 000 Q -8. 72	} "-" dept. counter ∫ and total
	d39 Dept. 39 *BTTL TL	36.000 Q -18.70 36.000 Q -18.70	} "+" bottle return dept. ∫ counter and total
	D40 DEPT. 40 BTTL (-)	47.000 Q -35.25 47.000 Q -35.25) "-" bottle return dept.
	TRANSACTION		
	(-)	3 Q -5.37	} Subtotal ⊝ counter } and total
	%1	3 Q -163.05	Subtotal percent 1 counter and total
	%2	2 Q -73.65	
	NET1	\$18027.32 —	Net sales total

*1: When you take X1 report, "X1" is printed.

*2: Printed in the Z1 report only.

*3: When the Canadian tax system is selected, the following is printed here.

GST EXPT PST TTL	\$155. 15 From GST \$12. 64 PST total
GST TTL	\$11.49—GST total

TAX1 ST GRS TAX1 RFD TAX1 TAX1 TX1 EXPT TAX2 ST GRS TAX2	\$16718.16 \$1055.11 -17.11 \$1038.00 \$2.60 \$271.15 \$21.69	─ Taxable 1 total ─ Gross tax 1 total └ Refund tax 1 total └ Net tax 1 total
M-TAX TTL TAX NET	\$1.79 \$1075.67 \$18015.83 \$18015.83	 Manual tax total - *3 Tax total → Net total without tax → Net total with tax
NET2 (-) %1 %2	\$19091.50 5 Q -4.38 4 Q -4.26 4 Q -4.51	} Item in tax } Item in the counter and total } Item percent 1 counter and total
VOID SBTL VOID Mgr Void Void Refund	3 Q \$120.02 2 Q \$206.39 9 Q \$41.33 3 Q \$41.33 8 Q \$49.82	REG-mode void counter and total Subtotal void counter and total Manager item void counter and total Void-mode transaction counter and total Refund counter and total
***RA ***PO No sale	2 Q \$380.00 1 Q \$150.00 4 Q	} Received on account counter and total }Paid out counter and total No-sales counter
TRANS CT Net3	378 Q	Customer counter Sales total
CASH CHECK CHARGE CHARGE- CHARGE2	360 Q \$17659.37 7 Q \$795.55 4 Q \$234.68 1 Q -12.28 2 Q	Cash counter and total Check sales counter and total Charge1 sales counter and total Charge1 refund counter and total
CHARGE2- CONV 1 CONV 2 ****CID CA+CHK ID CHK/CG	\$57.63 1 Q −19.51 €272.47 — 236.08 — \$17742.38 — \$18537.93 — \$124.46 —	 Foreign currency total (preset) Foreign currency total (open) Cash in drawer Cash + check in drawer Change total for check tendering

Department report

Sample report

* X 1 * - Department		 Mode title Report title
DO1 DEPT.01 DO2 DEPT.02 DO3 DEPT.03 DC4 DEPT.04	512.000 Q \$6498.93 16.000 Q \$1026.29 9.000 Q \$114.36 5.000 Q \$26.20	
D99 DEPT.99 *DEPT TL	9.000 Q \$55.80 1113.000 Q \$15471.12	
D38 DEPT. 38 DEPT (-)	4.000 Q -8.72 4.000 Q -8.72	
D39 DEPT.39 *BITL TL	36.000 Q -18.70 36.000 Q -18.70	
D40 DEPT.40 BTTL (-)	47.000 Q -35.25 47.000 Q -35.25	

Full group total report on department Sample report

* X 1 * Group total		— Mode title — Report title
GROUPO1 GROUPO2 GROUPO3	571.000 Q \$7729.00 9.000 Q \$114.36 16.000 Q \$174.15	}Group 1 total
GROUP08 Group09	27.000 Q \$1154.19 20.000 Q \$869.08	

Transaction report

Sample report



↓ This report shows the same transaction data as when a full sales report is run.


Individual group total report on department

Sample report

* X 1 * — Dept. Ind. group —		— Mode title — Report title
DO1 DEPT.01 DO2 DEPT.02 DO4 DEPT.04 DEPT.09 DEPT.09 DEPT.10 GROUP01	512.000 Q \$6498.93 16.000 Q \$1026.29 5.000 Q \$26.20 16.000 Q \$107.20 22.000 Q \$70.38 571.000 Q \$7729.00	}Group 1 total

Total in drawer report

 Sample report



PLU/UPC report by designated range

Sample report

	* X 1 * Plu/upc		— Mode title* — Report title
PLU code — Item label —	00001-99 PLU - P00001 - PLU00001 P00002 PLU00002	99999999999999999999999999999999999999	Range Sales q'ty and total
	P00035 PLU00035 ***TOTAL	31.000 Q \$46.50 315.000 Q \$1964.20) PLU ∫ range sum
UPC code — Item label —	UPC — 4901305920795# — Notebook	6. 000 Q \$7. 20	
	5045678912304# Item-C ***Total	3.000 Q \$10.80 66.000 Q \$194.70) UPC ∫ range sum


* When you take Z1 report, "Z1" is printed.

The UPC codes are printed out in the order of EAN-13,EAN-8, UPC-A, UPC-E and ITF-14.

Clerk reports

Individual clerk report

Sample report

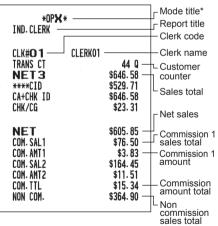

*: When you take OPZ report, "OPZ" is printed.

Full clerk report


The report prints in the same format as in the sample report of individual clerk, but all clerk's sales data is sorted by clerk code # (from #1 to #40).

PLU/UPC report by associated department

Sample report

	* X 1 * Plu/upc by dept		– Mode title – Report title
	DEPT.01 PLU	D01-	Associate dept. code
PLU code-	- P00002 PLU00002 P00005 PLU00005 P00007 PLU00007	3.000 Q \$15.30 11.000 Q \$24.75 5.000 Q \$10.50	} Sales q'ty ∫ and total
	***TOTAL	19.000 Q \$50.55	}PLU total
UPC code-	UPC — 5012345678900# Item-A 5045678912304# Item-C	5.000 Q \$15.50 3.000 Q \$10.80	
	***TOTAL	8.000 Q \$26.30	}UPC total

Hourly report
 Sample report

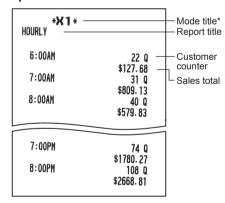

*: When you take Z1 report, "Z1" is printed. When you take an hourly report by range, a report of the specified range of time (hour) is printed.

Periodic Report Sample


General information

The periodic reading or resetting reports are the same in format as those in the X1/Z1 report for daily sales. The mode indicator will read "X2" or "Z2".

Sample Z report

Sample X report


(Individual group total report on department)

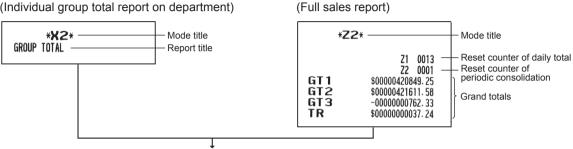

The subsequent printouts are the same in format as those in the X/Z report for daily totals.

Daily net report

Sample report

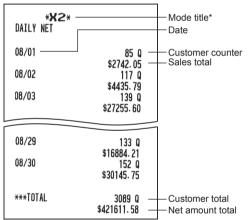

*: When you take Z report, "Z2" is printed instead of "X2".

9 Prior to Programming


When you are in the PROGRAM mode, the keyboard layout will be set to one of the programming layouts as shown below.


Programming Keyboard Layout

 For XE-A407






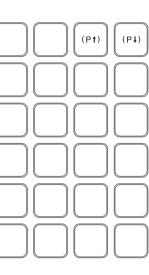





For XE-A43S

 



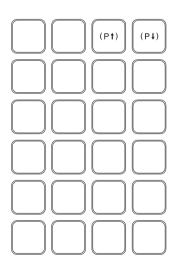

 

(SHIFT) (DC) (DEL) (CAPS) (TEXT)	: Used for programming characters. For more information about programming characters, see the section "How to Program Alphanumeric Characters." Also the DEL key is used to delete the record item.
$(\boldsymbol{\leftarrow}) (\boldsymbol{\rightarrow}) (\boldsymbol{\rightarrow}) (\boldsymbol{\leftarrow})$: Used to move the cursor.
CA/AT/NS	: Used to program each setting and to finalize programming.
ESC/ CANCEL	: Used to cancel programming and to get back to the previous screen.
(PREV)	: Used to go back to the previous record, e.g., from the department 2 programming window back to the department 1 programming window.
(NEXT)	: Used to go to the next record, for example, in order to program unit prices for sequential departments.
(P ↓)	: Used to scroll the window to go to the next page.
	: Used to scroll the window to go back to the previous page.
CL	: Used to clear the last setting you have programmed or clear the error state.
lacksquare	: Used to toggle between two or more options.
#/TM SBTL	[:] Used to list those options which you can toggle by the $igodot$ key.
Numeric keys	: Used for entering figures.

How to Program Alphanumeric Characters

This section discusses how to program alphanumeric characters for various texts.

Mobile phone method

Entering alphanumeric characters

To enter a character, simply press a corresponding character key on the programming keyboard.

To enter "A", press the "8" key.

To enter "B", press the "8" key twice.

To enter "C", press the "8" key three times.

Entering double-size characters

IDCI: This key toggles the double-size character mode and the normal-size character mode. The default is the normal-size character mode. When the double-size character mode is selected, the letter "W" appears at the bottom of the display.

Entering upper-case letters

- SHETI : You can enter an upper-case letter by using this key. Press this key just before you enter the uppercase letter. You should press this key each time you enter an upper-case letter.
- [CAPS]: You can lock the upper-case letter mode once the this key is pressed.

Entering space

(SPACE) : Enter a space in the cursor position.

To move the cursor

 $((\leftarrow))$ (\rightarrow) : Moves the cursor.

To delete a character or figure

(DEL) : Deletes a character or figure in the cursor position.

To change the text input mode

(ETT) : This key toggles the text input mode, Alphabet (A), European character (Ä), numeric (1), and symbol (*****).

Entering character codes

Numerals, letters and symbols are programmable by entering the (00) key and character codes. Use the following procedure with the cursor placed at the position where you want to enter characters:

To enter a digit, simply press a corresponding numeric key.

 \longrightarrow (00) \longrightarrow XXX XXX : character code (3 digits)

Character

code:

	032	033	034	035	036	037	038	039	040	041	042	043	044	045	046	047
032 - 047		1	11	#	\$	Ζ.	å		C)	×	+		–		/
	048	049	050	051	052	053	054	055	056	057	058	059	060	061	062	063
048 - 063	0	1	2	З	4	5	6	7	8	9	:	;	<	=	>	?
	064	065	066	067	068	069	070	071	072	073	074	075	076	077	078	079
064 - 079	0	A	B	С	D	Е	F	G	Η	Ι	J	K	L	M	N	0
	080	081	082	083	084	085	086	087	088	089	090	091	092	093	094	095
080 - 095	P	Q	R	S	Т	U	Ų	W	X	Y	Ζ	Ε	N]	^	_
	096	097	098	099	100	101	102	103	104	105	106	107	108	109	110	111
096 - 111	•	a	Ь	С	d	е	f	g	h	i	j	k	1	m	n	o
	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
112 - 127	р	q	r	S	t	u	V	ω	x	y	z	£	ł	}	~~	Δ
	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
128 - 143	Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Ä	Å
	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
144 - 159	É	ж	fi	ô	ö	ò	û	ù	ÿ	Ö	Ü	Ø	£	Ø	x	f
	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
160 - 175	á	í	ó	ú	ñ	Ñ	a	2	ż	R	č	¥	4	i	«	»
	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
176 - 191					ď	Á	Â	À	C	ĕ		ñ	ř	¢	¥	ŝ
	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
192 - 207	T1	T2	Т3	T4	2	3	4	23	24	34	Ř	÷.	₽.	=	Ū.	X
	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
208 - 223	ð	Ð	Ê	Ë	È	€	Í	Î	Ϊ	ž	Г			I	Ì	
	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
224 - 239	ó	ß	Ô	Ò	õ	Õ	Ч	þ	Þ	Ú	Û	Ù	ý	Ý	-	1
	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255
240 - 255	_	<u>+</u>	=	2	¶	δ	÷	د	0		-	1	3	2		(DC)

*(DC) : Double-size character code

10 Programming

This chapter explains how to program various items.

 
Before you start programming, press the *weekey* and select the "6 PROGRAM MODE" or "7 SD CARD MODE" by using the + key and press the CA/AT/NS key.

Basic Instructions


This section illustrates the basic programming by using an example of programming for departments.

Programming screen

Opening screen: When you select the "6 PROGRAM MODE", your display will show a programming opening screen corresponding to the mode you selected.



Code selecting screen (Dept. PLU):

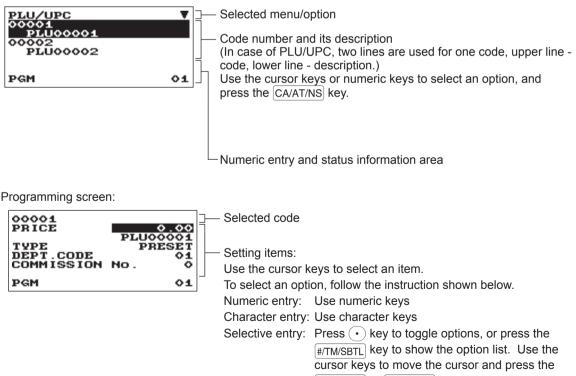


#/TM/SBTL or CA/AT/NS key to select it.

Programming example

The following example shows how to program 2.00 for the unit price, "ABCDE" for the description, and "non-taxable 1" for department 1.

(Procedure)

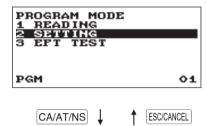

In the PROGRAM MODE screen, select "2 SETTING" by using the → key and press the CA/AT/NS key.
 The SETTING screen will appear.

NOTE

- You can also select "2 SETTING" by using numeric key "2," then press the CA/AT/NS key.
- If you return to the previous screen, press the [ESC/CANCEL] key.

SETTING 1 DAPT/PAU 2 FUNCTIONS 3 MEDIA 4 FUNCTION TEXT 5 PERSONNEL	
PGM	01

CA/AT/NS		1		ESC/CANCEL
----------	--	---	--	------------

2. Select "1 DEPT/PLU"

• The DEPT/PLU screen will appear.

NOTE

The arrow mark in the upper-right corner of the window shows that the window contains more options than are now on the screen. To scroll the window, press the \checkmark or $[P_{\downarrow}]$ key. To return to the previous page, press the \uparrow or $[P_{\uparrow}]$ key.

DEPT/PLU 1 DEPARTMENT 2 PLU/UPC 3 PLU RANGE	
PGM	01
CA/AT/NS	ESC/CANCEL

3. Select "1 DEPARTMENT."

 The DEPARTMENT screen will appear, listing programmable departments.

DEPARTMENT 01 DEPT.01 02 DEPT.02 03 DEPT.03 04 DEPT.04 05 DEPT.05	•
PGM	01
CA/AT/NS	ESC/CANCEL

Select "01 DEPT.01" to program for department 1.
• The "01" window will appear.

01 PRICE Type TAX1	200	DEPT.01 OPEN VES
TAX2 TAX3 PGM		NO NO 01
Pan		01

01		
PRICE		2.00
ABCDE		
TYPE		OPEN
TAX1		YES
TAX2		HO
TAX3		NO
PGM	A	01

5. On the first page of the "01" window, program the unit price and description as follows:

NOTE

There are three entry patterns for the programming: the numeric entry, character entry, and selective entry.

- Move the cursor to "PRICE," enter "200" by using numeric keys. → Numeric entry
- Move the cursor to "DEPT.01," enter "ABCDE" by using character keys. → Character entry

If you want to clear setting, press the \bigcirc key before you press the \checkmark , \frown , [PI], [P1] or CA/AT/NS key.

01	2.00
PRICE	ABCDE
TYPE	OPEN
TAX1	XO
TAX2	ND
TAX3	ND
PGM	01

- 6. Press the + key twice to move to the cursor to "TAX 1", then program the register to set "non-taxable 1" as follows:
 - Press the \odot key to select "NO." \rightarrow Selective entry

NOTE

The \bigcirc key toggles between two options as follows: NO \rightarrow YES \rightarrow NO \rightarrow Pressing the [#/TM/SBTL] key displays all pertinent options.

7. Select one of the following actions:


- To cancel the programming, press the ESC/CANCEL key. A confirmation window appears to ask you whether to save the data; select the option you prefer.
- To finalize the programming, press the CA/AT/NS key, then press the ESC/CANCEL key. You will return to the "DEPARTMENT" window.
- To program for the following department, press the $\widetilde{\texttt{NEXT}}$ key. The "02" window will appear. To return to the "01" window, press the $\widetilde{\texttt{(PREV)}}$ key.

The following sections describe how to program each item which is contained in a programming group.

DEPT/PLU Programming

Use the following procedure to select any option included in the department/PLU/UPC programming group:

Procedure

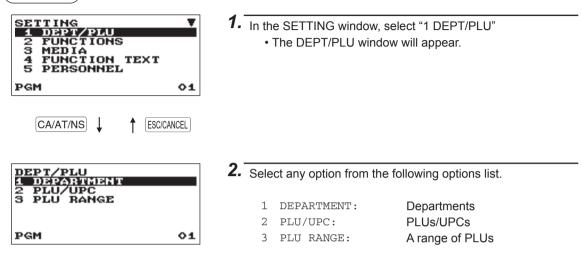

The following illustration shows those options included in this programming group.



Department

The register can be equipped with maximum of 99 departments. Use the following procedure to program for department.



To delete a department item in the "DEPARTMENT" window, select the item and press the DEL key. A confirmation window appears to ask you whether to delete the item, select the option you prefer.

 
Procedure

department code.

Program each item as follows:

NOTE

For more information about the entry patterns, see the "Basic Instructions" section.



Select a pertinent dept. code from

the departments list, or directly enter a

- PRICE (Use the numeric entry) Unit price (max. 8 digits)
- Description (Use the character entry) Description for a department. Up to 16 characters can be entered. (Default text: DEPT.nn)

The screen continues.

• TYPE (Use the selective entry)

Type of unit price e	entry for departments
INHIBIT:	Inhibited
OPEN:	Open only
PRESET:	Preset only
OPEN & PRESET:	Open & preset

• TAX 1 through 4 (Use the selective entry)

Taxability for each department

YES: Taxable

NO: Non-taxable

SICS (Use the selective entry)

Department type for SICS (Single Item Cash Sale)

YES: SICS department

NO: Normal department other than SICS department

SIGN (Use the selective entry)

Selection of the sign (plus or minus)

- +: Assign the plus sign
- -: Assign the minus sign

• HALO (Use the numeric entry)

This function is intended for prevention of accidentally entered unreasonably amounts. Limit amount: 0.00 to 999999.99

• COMMISSION No. (Use the numeric entry)

A commission group (0 to 2, 0: non commission) can be assigned to each department for commission for clerks. Each commission amount for each clerk is calculated based on a programmed commission rate and later printed on clerk reports.

• GROUP No. (Use the numeric entry)

01-09: Department group no. (0: non grouping)

BOTTLE RETURN (Use the selective entry)

Select whether you use a department as normal department or for bottle return.

YES: Bottle return

NO: Normal department other than bottle return


PLU/UPC

- **NOTE** In this manual, the word "UPC" represents UPC (Universal Product Code) and EAN (European Article Number).
 - With regard to the UPC codes applicable to this register, please refer to the chapter 11.
 - To delete a PLU/UPC item in the "PLU/UPC" window, select the item and press the DEL key. A confirmation window appears to ask you whether to delete the item, select the option you prefer.

Procedure

Program each item as follows:

Select a pertinent PLU code, or directly enter a PLU code or UPC code.

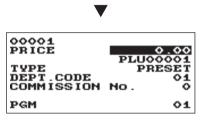

- PRICE (Use the numeric entry) Unit price of each price level (max. 8 digits)
- Description (Use the character entry) Description for a PLU/UPC. Up to 16 characters can be entered. (Default text: PLUnnnnn for (PLUs))
- TYPE (Use the selective entry) Type of unit price entry for PLUs INHIBIT: Inhibited OPEN: Open only PRESET: Preset only OPEN & PRESET: Open & preset

NOTE For UPCs, it is fixed to "PRESET".

• DEPT. CODE (Use the numeric entry)

Department code to be associated with the entered PLU/UPC (01 through 99)

When a PLU/UPC is associated with a department, the following functions of the PLU/UPC depend on the programming for the department.

- Grouping (group 1 through 9)
- Single item cash sale
- Taxability

 
• COMMISSION No. (Use the numeric entry)

 
A commission group (0 to 2, 0: non commission) can be assigned to each PLU/UPC for commission for clerks. Each commission amount for each clerk is calculated based on a programmed commission rate and later printed on clerk reports.

PLU range

You can program PLUs in the designated range.








Enter a value or select an option for each item as follows:

- START (Use the numeric entry) Starting PLU code (max. 5 digits)
- END (Use the numeric entry) Ending PLU code (max. 5 digits)
- OPERATION (Use the selective entry) DELETE: Enables you to delete a specified range of PLUs.
 - MAINTE.: Enables you to change the setting you have programmed.
 - NEW&MAINTE.: Enables you to change the current setting when the specified codes have already been created or to create new codes when the specified codes have not been created yet.

Functional Programming

Use the following procedure to select any option included in the functional programming group:



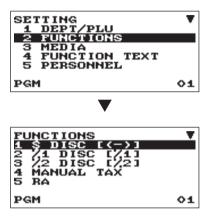

The screen continues.

In the SETTING window, select "2 FUNCTIONS."
 The FUNCTIONS window will appear.

_	Sele	ct any option from the	e following options list.
	1	\$ DISC [(-)]	Discount
	2	%1 DISC [%1]	Percent 1
	3	%2 DISC [%2]	Percent 2
	4	MANUAL TAX	Manual tax
	5	RA	Received on account
	6	PO	Paid out
	7	CASH IN DRAWER	Cash in drawer
	8	COMMISSION1	Commission 1 rate
	9	COMMISSION2	Commission 2 rate


The following illustration shows those options included in this programming group.

 2









The screen continues.

Program each item as follows:

- AMOUNT (Use the numeric entry) Discount amount (max. 8 digits)
- TEXT (Use the character entry)

Description for the discount key. Up to 12 characters can be entered.

• SIGN (Use the selective entry)

Programming of the + or - sign assigns the premium or discount function to the discount key.

- +: Plus amount (premium)
- -: Minus amount (discount)
- HALO (High Amount Lockout) (Use the numeric entry)

This function is intended for prevention of accidentally entered unreasonably amounts.

Limit amount: 0.00 to 999999.99

• ITEM (Use the selective entry)

YES: Enables the item discount. NO: Disables the item discount.

• SUBTOTAL (Used the selective entry)

YES: Enables the subtoal discount.

 
- NO: Disables the subtotal discount.
- TAX 1 through 4 (Use the selective entry)
 Taxability for the discount

YES: Taxable

NO: Non-taxable



Procedure



The screen continues.

Program each item as follows:

- RATE (Use the numeric entry) Percent rate (0.00 to 100.00)
- TEXT (Use the character entry)

Description for the percent key. Up to 12 characters can be entered.

• SIGN (Use the selective entry)

Programming of the + or - sign assigns the premium or discount function to each percent key.

- +: Plus (premium)
- -: Minus (discount)
- HALO (High Amount Lockout) (Use the numeric entry)

This function is intended for prevention of accidentally entered unreasonably amounts.

HALO (High Amount Lockout) for the percent key (0.00 to 100.00)

• ITEM (Use the selective entry)

YES: Enables the item %.

- NO: Disables the item %.
- SUBTOTAL (Used the selective entry)
 - YES: Enables the subtotal %.
 - NO: Disables the subtotal %.
- TAX 1 through 4 (Use the selective entry)

Taxability for the discount YES: Taxable NO: Non-taxable

Manual tax

(Procedure)

MANUAL HALO TEXT	TAX	9999999.99 M-TAX
PGM		01

 
Program each item as follows:

HALO (High Amount Lockout) (Use the numeric entry)
 This function is intended for prevention of accidentally entered
 unreasonably amounts.
 Limit amount: 0.00 to 999999.99

• TEXT (Use the character entry) Description for the manual tax key. Up to 12 characters can be entered.

RA

You can program an upper limit amount and description for received-on-account key.



Program each item as follows:

 HALO (High Amount Lockout) (Use the numeric entry) This function is intended for prevention of accidentally entered unreasonably amounts. Limit amount: 0.00 to 9999999.99

 
• TEXT (Use the character entry) Description for the received-on-account key. Up to 12 characters can be entered.

PO

You can program an upper limit amount and description for paid-out key.

01

Procedure



Program each item as follows:

- HALO (High Amount Lockout) (Use the numeric entry) This function is intended for prevention of accidentally entered unreasonably amounts. Limit amount: 0.00 to 9999999.99
- TEXT (Use the character entry) Description for the paid-out key. Up to 12 characters can be entered.

Cash in drawer

You can program the description and the upper limit amounts for cash in drawer (sentinel).

Procedure

CASH HALO TEXT	ІН	DRAWER 999999999.99 *****CID
PGM		01

Program each item as follows:

 
 HALO (High Amount Lockout) (Use the numeric entry) This function is intended for prevention of accidentally entered unreasonably amounts.

Limit amount: 0.00 to 99999999.99

- **NOTE** When the cash in drawer amounts exceeds a limit amount, the sentinel mark (X) will be displayed.
- TEXT (Use the character entry) Description for the cash in drawer. Up to 12 characters can be entered.

Commission rate (Commission 1, Commission 2)

Procedure




Program each item as follows:

- RATE (Use the numeric entry) Commission rate (0.00 to 999.99)
- TEXT (Use the character entry) Description for the commission rate. Up to 12 characters can be entered.

Media Key Programming

Use the following procedure to select any option included in the media group:

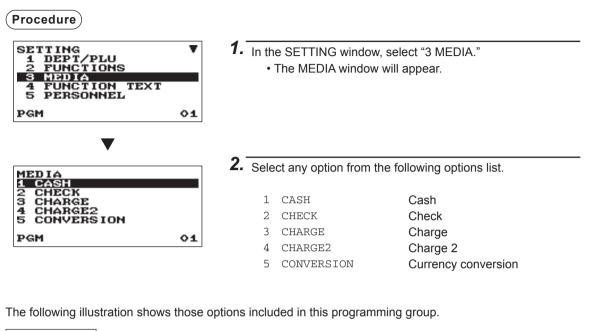





Procedure

CASI TEXT HALO FOOTER TEND.	99999	9.99 NO
PGM	A	01

Program each item as follows:

TEXT (Use the character entry)

Description for the cash key. Up to 12 characters can be entered.

• HALO (High Amount Lockout) (Use the numeric entry) This function is intended for prevention of accidentally entered unreasonably amounts.

Limit amount: 0.00 to 999999.99

• FOOTER PRINT (Use the selective entry)

This item decides whether or not your register should print a message at the foot of a receipt when a specified cash key is used.

YES: Enables footer printing on the receipt.

 
NO: Disables footer printing on the receipt.

• TEND. (Use the selective entry)

NON-COMPUL.: Non-compulsory amount tendered entry. COMPULSORY: Compulsory amount tendered entry.

Check key (Check)

Procedure



Program each item as follows:

- TEXT (Use the character entry) Description for the check key. Up to 12 characters can be entered.
- HALO (High Amount Lockout) (Use the numeric entry) This function is intended for prevention of accidentally entered unreasonably amounts. Limit amount: 0.00 to 999999.99

• FOOTER PRINT (Use the selective entry)

YES: Enables footer printing on the receipt.

NO: Disables footer printing on the receipt.

• TEND. (Use the selective entry)

NON-COMPUL.: Non-compulsory amount tendered entry. COMPULSORY: Compulsory amount tendered entry.

Charge key (Charge1, Charge2)

Procedure

CHARGE +TEXT -TEXT HALO POOTER TEND.	CHA) 99999	ŇŌ
PGM	A	01

Program each item as follows:

• +TEXT (Use the character entry)

Description for the gross charge. Up to 12 characters can be entered.

• -TEXT (Use the character entry)

Description for the refund charge. Up to 12 characters can be entered.

- HALO (High Amount Lockout) (Use the numeric entry) This function is intended for prevention of accidentally entered unreasonably amounts. Limit amount: 0.00 to 999999.99
- FOOTER PRINT (Use the selective entry)

This item decides whether or not your register should print a message at the foot of a receipt when a specified charge key is used.

YES: Enables footer printing on the receipt.

- NO: Disables footer printing on the receipt.
- TEND. (Use the selective entry)

COMPULSORY: Compulsory amount tendered entry. INHIBITED: Inhibits amount tendered entry.

Currency conversion (CONV1, CONV2)



CONVERSION PRESET RATE RATE TEXT	0.000000 CONV 1
SYMBOL TAB Open Rate PGM	ENABLE 01

 
The screen continues.

Program each item as follows:

- PRESET RATE (Use the selective entry) ENABLE: Enables preset rate DISABLE: Disable preset rate
- RATE (Use the numeric entry) Currency exchange rate (0.000000 to 999.999999)
- TEXT (Use the character entry) Description for the currency exchange key. Up to 12 characters can be entered.
- SYMBOL (Use the character entry) Currency descriptor. Up to 4 characters can be entered.
- TAB (Use the selective entry) Tabulation (0 to 3)
- OPEN RATE (Use the selective entry) ENABLE: Enables open rate DISABLE: Disable open rate
- TEXT (Use the character entry) for the open rate Description for the currency exchange key for the open rate. Up to 12 characters can be entered.
- SYMBOL (Use the character entry) for the open rate Currency descriptor for the open rate. Up to 4 characters can be entered.
- TAB (Use the selective entry) for the open rate Tabulation (0 to 3) for the open rate

NOTE

Currency symbol is printed with (+) amount of foreign currency. The programmed character is printed at left side of amount.




Function Text Programming

01

You can program a maximum of 12 characters for each function by using the following table:

Procedure

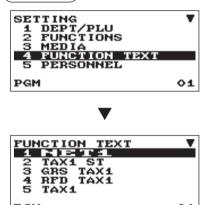

- In the SETTING window, select "4 FUNCTION TEXT".
 The FUNCTION TEXT window will appear.
- **2.** Program each item as follows:

• Text (Use the character entry) Description for each function. Up to 12 characters can be entered.

The screen continues.

List of function text

PGM

No.	Function	Default text
1	Net sales total	NET1
2	Net taxable 1 subtotal	TAX1 ST
3	Gross tax 1 total	GRS TAX1
4	Tax 1 total of refund entries	RFD TAX1
5	Net tax 1 total	TAX1
6	Exempt tax 1	TX1 EXPT
7	Net taxable 2 subtotal	TAX2 ST
8	Gross tax 2 total	GRS TAX2
9	Tax 2 total of refund entries	RFD TAX2
10	Net tax 2 total	TAX2
11	Exempt tax 2	TX2 EXPT
12	Net taxable 3 subtotal	TAX3 ST
13	Gross tax 3 total	GRS TAX3
14	Tax 3 total of refund entries	RFD TAX3
15	Net tax 3 total	TAX3
16	Exempt tax 3	TX3 EXPT
17	Net taxable 4 subtotal	TAX4 ST
18	Gross tax 4 total	GRS TAX4
19	Tax 4 total of refund entries	RFD TAX4
20	Net tax 4 total	TAX4
21	Exempt tax 4	TX4 EXPT
22	Gross manual tax total	GRS MTAX
23	Refund manual tax total	RFD MTAX
24	Tax total (on report)	TTL TAX
25	Net	NET

No.	Function	Default text
26	Sales total including tax total	NET2
27	Refund	REFUND
28	Item void	VOID
29	Void mode	VOID
30	Manager void	MGR VOID
31	Subtotal void	SBTL VOID
32	No sale	NO SALE
33	Transaction counter	TRANS CT
34	Net 3 (sales total, paid total)	NET3
35	Cash + check in drawer	CA+CHK ID
36	Check change	CHK/CG
37	(+) department total	*DEPT TL
38	(-) department total	DEPT(-)
39	(+) Bottle return dept. total	*BTTL TL
40	(–) Bottle return dept. total	BTTL(–)
41	Group 1	GROUP01
42	Group 2	GROUP02
43	Group 3	GROUP03
44	Group 4	GROUP04
45	Group 5	GROUP05
46	Group 6	GROUP06
47	Group 7	GROUP07
48	Group 8	GROUP08
49	Group 9	GROUP09
50	Commission amount 1	COM. AMT1


No.	Function	Default text
51	Commission amount 2	COM. AMT2
52	Commission amount total	COM. TTL
53	Non commission sale	NON COM.
54	Items	ITEMS
55	Merchandise subtotal	MDSE ST
56	Subtotal	SUBTOTAL
57	Total	***TOTAL
58	Change	CHANGE
59	Non add symbol (max. 8 characters)	#

No.	Function	Default text
60	Copy receipt title	COPY
61	Due (only display)	DUE
62	Receipt SW	RCP SW.
63	Non GST subtotal	GST EXPT
64	PST total	PST TTL
65	GST total	GST TTL
66	VAT exempt (for doughnut tax type 1)	VAT EXPT
67	Total tax (on receipt)	TOTAL TAX

Personnel Programming

Use the following procedure to select any option included in the personnel group:



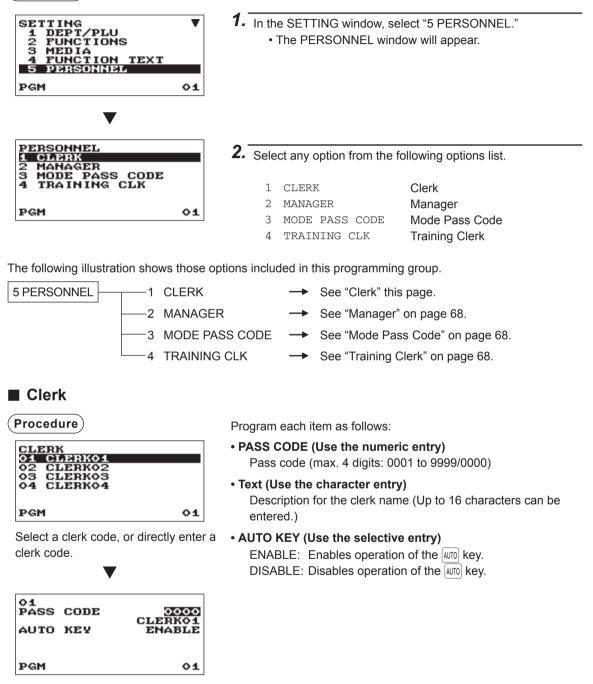

NOTE To delete a clerk code in the "CLERK" window, select the clerk code and press the DEL key. A confirmation window appears to ask you whether to delete the clerk, select the option you prefer.

Manager

You can program a secret code for manager.

Procedure		F
MANAGER PASS CODE	0000	•
PGM	01	

Program each item as follows:

• PASS CODE (Use the numeric entry) Pass code (max. 4 digits: 0000 to 9999)

Mode Pass Code

You can program a secret code for each mode.

Procedure

MODE PASS CODE	90000
VOID MODE	0000
OPX2	0000
VIEW REPORT	0000
X1	0000
Z1	0000
X222	0000
PGM	00

The screen continues.

Program each item as follows:

- VOID MODE (Use the numeric entry) Pass code (max 4 digits: 0000 to 9999)
- OPXZ (Use the numeric entry)
 Pass code (max 4 digits: 0000 to 9999)
- VIEW REPORT (Use the numeric entry) Pass code (max 4 digits: 0000 to 9999)
- X1 (Use the numeric entry) Pass code (max 4 digits: 0000 to 9999)
- Z1 (Use the numeric entry) Pass code (max 4 digits: 0000 to 9999)
- X2Z2 (Use the numeric entry) Pass code (max 4 digits: 0000 to 9999)
- PROGRAM (Use the numeric entry) Pass code (max 4 digits: 0000 to 9999)
- SD CARD (Use the numeric entry)
 Pass code (max 4 digits: 0000 to 9999)

Training Clerk

You can set the training clerk code and text for the training mode title.

Procedure

TRA IN ING CODE TEXT	CLK TRAINING
PGM	01


Program each item as follows:

- CODE (Use the numeric entry) Clerk code in training (max. 2 digits: 00 to 40)
- TEXT (Use the character entry) Description for the training mode title (Up to 12 characters can be entered.)

Terminal Programming

Use the following procedure to select any option included in the terminal group:

Procedure

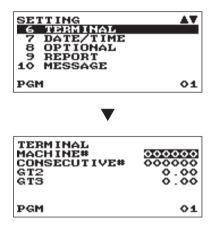

- In the SETTING windows, select "6 TERMINAL."
 The TERMINAL windows will appear.
- 2. Select any option from the following options list:
 - MACHINE# (Use the numeric entry)
 Machine number (max. 6 digits: 0 to 999999)
 - CONSECUTIVE# (Use the numeric entry) Enter a number (max. 6 digits: 0 to 999999) that is the desired starting number.
 - GT2 (Use the numeric entry) Enter a number (max. 13 digits: 0 to 999999999999)
 - GT3 (Use the numeric entry) Enter a number (max. 13 digits: 0 to 999999999999)

Date/Time Setting

You can set the date and time for the register.

Date/time

(Procedure)




- In the SETTING window, select "7 DATE/TIME".
 The DATE/TIME window will appear.
- **2.** Set each item as follows:
 - DATE (Use the numeric entry) Enter the month (2 digits), day (2 digits), and year (2 digits) in this sequence.
 - TIME (24HR) (Use the numeric entry)

Set the time (max. 4 digits) on the 24-hour system. For example, when the time is set to 2:30 AM, enter 0230; and when it is set to 2:30 PM, enter 1430. The time will be printed and displayed.

Optional Feature Selection

Use the following procedure to select any option included in the optional group:



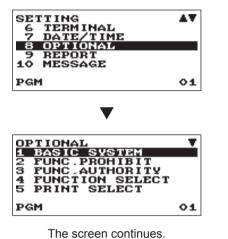

In the SETTING window, select "8 OPTIONAL."
 The OPTIONAL window will appear.


2. Select any option from the following options list.

1 BASIC SYSTEM

- 2 FUNC.PROHIBIT
- 3 FUNC.AUTHORITY
- 4 FUNCTION SELECT
- 5 PRINT SELECT
- S PRINT SELECT
- 6 UPC FUNCTION

Basic system Function prohibited Function authority Function selection Print selection UPC function

The following illustration shows those options included in this programming group.

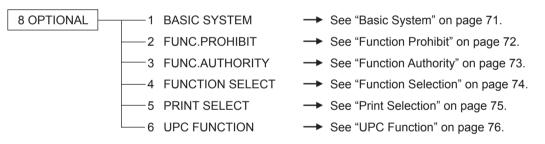

Basic System

Your register allows you to select various item of basic system.

(Procedure)

BASIC SYSTEM
TIME FORMAT 12-HOUR ERROR LOCK ERROR CURRENCY SYMBOL S
TAB 2 Decimal quantity yes
PGM 01

Program each item as follows:

• DATE FORMAT (Use the selective entry)

MDY: Display and print the month, day, and year in this order DMY: Display and print the day, month and year in this order YMD: Display and print the year, month, and day in this order

• TIME FORMAT (Use the selective entry) 12-HOUR: Display and print the time on 12-hour system 24-HOUR: Display and print the time on 24-hour system

The screen continues.

• ERROR (Use the selective entry)

Response to an erroneous, invalid key operation

LOCK ERROR: Sound a short buzzer for 2 seconds, and display Error. To hide the Error display, press the (CL) key.

MISS OPE .: Sound a short buzzer

CURRENCY SYMBOL (Use the character entry)

Enter the character (Max. 4 characters)

• TAB (Use the selective entry)

- 0 .
 - Position of price delimiter can be set. Setting options are 0, 1, 2, and 3.
- 2 When setting to "2" for example, the entry of "100" is displayed as "1.00".
- 3

• DECIMAL QUANTITY (Use the selective entry)

YES: Enables the decimal quantity

NO: Disables the decimal quantity

• DECIMAL ROUND (Use the selective entry)

ROUND: Round off the number

UP: Round up after the decimal point

DOWN: Round down after the decimal point.

• [00] KEY (Use the selective entry)

[00]: Display [00] by pressing the 00 key [000]: Display [000] by pressing the 00 key

• PRT/DSP EDIT (Use the selective entry)

YES: All of printing and display are edited

NO: All of printing and display aren't edited

• ITEM DISPLAY (Use the selective entry)

2-LINE: The 1st line displays the quantity, price and amount. The 2nd line displays the text. 1-LINE: The quantity and text.

Function Prohibit

Your register allows you to select whether to enable or disable various functions.

FUNC.PROHIBIT	•
NON-ADD	ENABLE
NON-ADD + NS	ENABLE
MINUS DEPT	ENABLE
COPY RCPT	ENABLE
VOID MODE	ENABLE
SUBTOTAL<0	ENABLE
PGM	01

The screen continues.

Program each item as follows:

- NON-ADD (Use the selective entry)
 ENABLE: Enable to enter Non-add code
 DISABLE: Disable to enter Non-add code
- NON-ADD + NS (Use the selective entry) ENABLE: Enable No sale after Non-add code entry DISABLE: Disable No sale after Non-add code entry
- MINUS DEPT (Use the selective entry) ENABLE: Enable to enter the minus department DISABLE: Disable to enter the minus department
- COPY RCPT (Use the selective entry) ENABLE: Enable the receipt copy function DISABLE: Disable the receipt copy function
- VOID MODE (Use the selective entry) ENABLE: Enable the void mode DISABLE: Disable the void mode
- SUBTOTAL<0 (Use the selective entry) ENABLE: Enable to go negative merchandise subtotal DISABLE: Disable to go negative merchandise subtotal
- TEND+DIRECT (Use the selective entry) ENABLE: Enable the direct non-tendering finalization after the previous tender entry DISABLE: Disable the direct non-tendering finalization after the previous tender entry

Function Authority

Your register allows you to select whether to public or to limit function authority.

/	_						`
(D	ro	се	А		ro	<u>۱</u>
1	г	ιu	しせ	u	u	IE	1
Υ.							

FUNC . AUTHOR I	TY T
BA	PUBLIC
PO	PUBLIC
REFUND	PUBLIC
ITEM VD	PUBLIC
SBTL VD	PUBLIC
NO SALE	PUBLIC
PGM	01

Program each item as follows:

• RA (Use the selective entry)

LIMITED: Allowed only in the Manager mode. PUBLIC: Allowed in the REG mode and the Manager mode.

PO (Use the selective entry)

LIMITED: Allowed only in the Manager mode. PUBLIC: Allowed in the REG mode and the Manager mode.

The screen continues.

• REFUND (Use the selective entry) LIMITED: Allowed only in the Manager mode.

PUBLIC: Allowed in the REG mode and the Manager mode.

• ITEM VD (Use the selective entry)

LIMITED: Allowed only in the Manager mode. PUBLIC: Allowed in the REG mode and the Manager mode.

• SBTL VD (Use the selective entry)

LIMITED: Allowed only in the Manager mode. PUBLIC: Allowed in the REG mode and the Manager mode.

NO SALE (Use the selective entry)

LIMITED: Allowed only in the Manager mode. PUBLIC: Allowed in the REG mode and the Manager mode.

• TAX DELETE (Use the selective entry)

LIMITED: Allowed only in the Manager mode.

PUBLIC: Allowed in the REG mode and the Manager mode.

MANUAL TAX (Use the selective entry)

LIMITED: Allowed only in the Manager mode. PUBLIC: Allowed in the REG mode and the Manager mode.

Function Selection

Your register enables you to select various functional selections.

(Procedure)

FUNCTION SELECT
SPLIT ENTRY DISABLE
SPLIT COUNT QUANTITY
VD MODE TO HOURLY NO
ST BEFORE DIRECT NOT
ST BEFORE TEND NOT
NS RECEIPT PRINT
PGM 01

Program each item as follows:

- SPLIT ENTRY (Use the selective entry) ENABLE: Enable the split pricing entry DISABLE: Disable the split pricing entry
- SPLIT COUNT (Use the selective entry) Count method of split pricing entry. PACKAGE: Unit of the package QUANTITY: Quantity

The screen continues.

• VD MODE TO HOURLY (Use the selective entry)

YES: Enable to add to the hourly total in void mode. NO: Disable to add to the hourly total in void mode.

• ST BEFORE DIRECT (Use the selective entry)

Subtotal entry before direct non-tendering finalization NOT: Not to require entry of subtotal for the non-tendering finalization MUST: Require entry of subtotal for the non-tendering finalization

• ST BEFORE TEND (Use the selective entry)

Subtotal entry before tender

NOT: Not to require entry of subtotal for the tendering finalization MUST: Require entry of subtotal for the tendering finalization

• NS RECEIPT (Use the selective entry)

Printing the receipt at the time of No Sale PRINT: Print the receipt NOT: Not to print the receipt

• AFTER TRANS. (Use the selective entry)

TOTAL: Print the total only on the after transaction receipt DETAIL: Print the details on the after transaction receipt

Print Selection

You can program various printing functions.

PRINT SELECT CONSECUTIVE NO. DATE TIME PURCHASE NO. TAX STATUS TAX 1 PCM 1	VES VES VES VES VES to 4
PGM	01

The screen continues.

Program each item as follows:

- CONSECUTIVE NO. (Use the selective entry) YES: Print the consecutive No.
 - NO: Not to print the consecutive No.
- DATE (Use the selective entry) YES: Print the date NO: Not to print the date
- TIME (Use the selective entry) YES: Print the time NO: Not to print the time

• PURCHASE NO. (Use the selective entry)

YES: Print the number of the purchase No.

NO: Not to print the number of the purchase No.

• TAX STATUS (Use the selective entry)

- YES: Print the tax status
- NO: Not to print the tax status

• TAX (Use the selective entry)

Tax print format

- 1 to 4: Print order tax1 to tax4
- 4 to 1: Print order tax4 to tax1
- TOTAL: Print total tax

• TAX (TAXABLE=0) (Use the selective entry)

YES: Print the tax amount (when the taxable amount is zero.)

NO: Not to print the tax amount (when the taxable amount is zero.)

• TAX (TAX=0) (Use the selective entry)

YES: Print the tax amount (when the tax amount is zero.)

NO: Not to print the tax amount (when the tax amount is zero.)

• ST AT ST KEY (Use the selective entry)

- YES: Print the subtotal using the #/TM/SBTL key
- NO: Not to print the subtotal using the #/TM/SBTL key

• LOGO FORM (Use the selective entry)

- PATTERN 1: 3 line text header
- PATTERN 2: Image logo header
- PATTERN 3: Image logo header + 3 line text footer
- PATTERN 4: 6 line text header
- PATTERN 5: Image logo header + 3 line text header
- PATTERN 6: 3 line text header + 3 line text footer

• FOOTER (Use the selective entry)

ALL: Print the footer in any media BY MEDIA: Print the footer by media

O AMT PLU (Use the selective entry)

When the PLU unit price is 0, printing the amount is: TEXT ONLY: Print the text only NORMAL: Print the price and the text

ITEM JOURNAL (Use the selective entry) ALL: Print all items on journal SELECT: Print the selected items other than "+" dept./PLU/UPC on journal (summary journal)

• LOGO ON JOURNAL (Use the selective entry)

YES: Print the logo text on journal

NO: Not to print the logo text on journal

• CONV. SHORT TEND (Use the selective entry)

PRINT: Print subtotal after short tendering by currency conversionNOT: Not to print subtotal after short tendering by currency conversion

• GST VAT PRINT (Use the selective entry)

YES: Print the tax when the GST is VAT

NO: Not to print the tax when the GST is VAT

UPC Function

```
Procedure
```

Program each item as follows:

LEARNING (Use the selective entry) ENABLE: Enables the UPC learning function DISABLE: Disables the UPC learning function

• LOOKUP AT RF (Use the selective entry) YES: Enables to look up the price at refund entry of PLUs/UPCs NO: Disables to look up the price at refund entry of PLUs/UPCs

• CODE PRINT (Use the selective entry)

R&J: Print the UPC code on receipt and journal

- J: Print the UPC code on journal
- R: Print the UPC code on receipt
- NO: Not to print the UPC code

• C/D CHECK (Use the selective entry)

YES: Check the check digit of UPC codes at entries

NO: Not to check the check digit


• ISBN/ISSN (Use the selective entry)

PRICE CMP.: Compulsory the price entry after ISBN or ISSN code INHIBITED: Inhibited the price entry after ISBN or ISSN code

Report Programming

Use the following procedure to select any option included in the report group:

(Procedure)

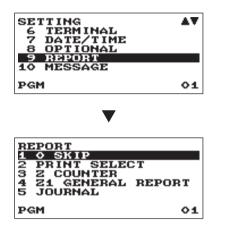

In the SETTING window, select "9 REPORT."
 The REPORT window will appear.

2. Select any option from the following options list:

- 1 0 SKIP
- 2 PRINT SELECT
- 3 Z COUNTER
- 4 Z1 GENERAL REPORT 5 JOURNAL

Zero skip Print select Z counter Z1 General report Journal data

The following illustration shows those options included in this programming group.



Zero skip

You can program whether or not to skip "0" in each report.

(Procedure)

O SKIP DEPARTMENT SKI
TRANSACTION SKIP PLU SKIP CLERK SKIP HOURLY SKIP DAILY NET SKIP PGM 01

Program each item as follows:

• DEPARTMENT (Use the selective entry)

SKIP: Skips those data that are "0" in the department report.

NOT SKIP: Does not skip those data that are "0" in the department report.

• TRANSACTION (Use the selective entry)

SKIP: Skips those data that are "0" in the transaction report.

NOT SKIP: Does not skip those data that are "0" in the transaction report.

• PLU (Use the selective entry)

SKIP: Skips those data that are "0" in the PLU/UPC report. NOT SKIP: Does not skip those data that are "0" in the PLU/UPC report.

• CLERK (Use the selective entry)

SKIP:Skips those data that are "0" in the clerk report.NOT SKIP:Does not skip those data that are "0" in the clerk report.

• HOURLY (Use the selective entry)

SKIP: Skips those data that are "0" in the hourly report. NOT SKIP: Does not skip those data that are "0" in the hourly report.

 
• DAILY NET (Use the selective entry)

SKIP: Skips those data that are "0" in the daily net report.

NOT SKIP: Does not skip those data that are "0" in the daily net report.

Print select

You can program whether or not to print the item on the report.



The screen continues.

- GT2 ON Z (Use the selective entry) YES: Print GT2 on the Z report. NO: Not to print GT2 on the Z report.
- GT3 ON Z (Use the selective entry) YES: Print GT3 on the Z report. NO: Not to print GT3 on the Z report.
- TR GT ON Z (Use the selective entry) YES: Print the training GT on the Z report. NO: Not to print the training GT on the Z report.
- VD MODE ON X1Z1 (Use the selective entry) YES: Print total of VOID MODE on X1Z1 report NO: Not to print total of VOID MODE on X1Z1 report
- VD MODE ON X2Z2 (Use the selective entry) YES: Print total of VOID MODE on X2Z2 report NO: Not to print total of VOID MODE on X2Z2 report
- PLU/UPC DATA ON Z (Use the selective entry) YES: Print PLU/UPC data on the PLU/UPC Z report. NO: Not to print PLU/UPC data on the PLU/UPC Z report.
- JOURNAL SIZE (Use the selective entry) SMALL: Print journal in a small size. NORMAL: Print journal in a normal size.
- GST EXEMPT ON XZ (Use the selective entry) YES: Print GST EXEMPT data on X/Z report. NO: Not to print GST EXEMPT data on X/Z report.

Program each item as follows:

- Z COUNTER (Use the selective entry) YES: Print the Z counter on the Z report. NO: Not to print the Z counter on the Z report.
- GT1 ON Z (Use the selective entry) YES: Print GT1 on the Z report. NO: Not to print GT1 on the Z report.



(Procedure)

Z COUNTER GENERAL 21 GENERAL 22	<u>0000</u> 0000
PGM	01

GENERAL Z1: Max.4 digits (0000 to 9999) GENERAL Z2: Max.4 digits (0000 to 9999)

Z1 General report

(Procedure)

Z1 GENERAL RE SD: SAVE SALE SD: SAVE ALL RESET GT	s NO
PGM	01

- SD: SAVE SALES (Use the selective entry) YES: Save the sales data in the SD card. NO: Not to save the sales data in the SD card.
- SD: SAVE ALL RAM (Use the selective entry) YES: Save the all RAM data in the SD card. NO: Not to save the all RAM data in the SD card.
- RESET GT (Use the selective entry) YES: Reset the GT NO: Not to reset the GT

Journal data

Procedure


JOURNAL TR DATA STORE X DATA STORE	UKS HEADER
PGM	01

- TR DATA STORE (Use the selective entry) YES: Record the journal data in the training mode. NO: Not to record the journal data in the training mode.
- X DATA STORE (Use the selective entry) When the X report data in the journal is recorded: HEADER: Record only the header of X report in the journal DETAIL: Record the detail of X report in the journal

Message Programming

Use the following procedure to select any option included in the message group:


(Procedure)

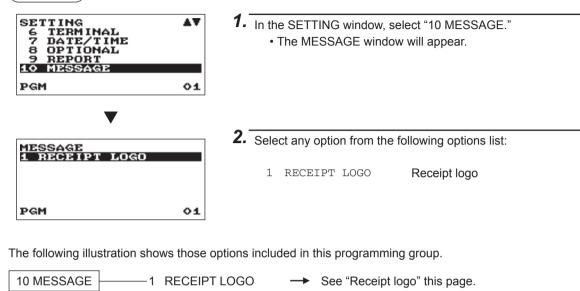

Receipt logo

Your register can print programmed messages for customers on every receipt. The logo text is printed in a centering form on the receipt.

 Procedure



Program each item as follows:

• RECEIPT LOGO (Use the character entry) Logo text for the receipt (max. 30 characters x 6 lines)

NOTE


The programmable number of lines for a message varies according to the following message types:

PATTERN 1: 3 line text header PATTERN 2: Image logo header PATTERN 3: Image logo header + 3 line text footer PATTERN 4: 6 line text header PATTERN 5: Image logo header + 3 line text header PATTERN 6: 3 line text header + 3 line text footer

Device Configuration Programming

Use the following procedure to select a device configuration programming:

(Procedure)

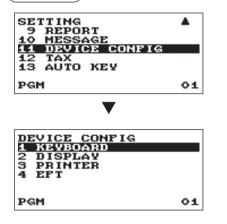

In the SETTING window, select "11 DEVICE CONFIG."
 The DEVICE CONFIG window will appear.

2. Select any option from the following options list:

1	KEYBOARD	Keyboard
2	DISPLAY	Display
3	PRINTER	Printer
4	EFT	EFT

The following illustration shows those options included in this programming group.




Keyboard

(Procedure)

KEYBOARD BUFFERING TOUCH SOUND	VDES VES
PGM	01

Program each item as follows:

- BUFFERING (Use the selective entry) YES: Enables the buffering keyboard. NO: Disables the buffering keyboard.
- TOUCH SOUND (Use the selective entry)
 - YES: Set to sound
 - NO: Not to sound

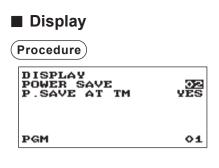

Program each item as follows:

- POWER SAVE (Use the numeric entry) Time of the power save (2 digits: 0,1 to 99 minutes 0:100 minutes)
- P. SAVE AT TM (Use the selective entry)
 Power saving during time display:
 YES: Enables power saving during time display
 NO: Disables power saving during time display



Program each item as follows:

• DENSITY (Use the numeric entry) Select a density level (2 digits: 00 to 99) 00: 89% for standard 50: 100% for standard 99: 111% for standard



(Procedure)

EFT CHARGE TIME OUT1 TIME OUT2 TIME OUT3	010 010 099 0099
PGM	01

Program each item as follows:

- CHARGE (Use the selective entry)
 USED: Credit/Debit
 NOT: Not to assign for credit/debit.
- TIME OUT1 (Use the numeric entry) Time out timer for ACK/NAK (3 digits: 1 to 255 (sec))
- TIME OUT2 (Use the numeric entry) Time out timer for response of authorization (3 digits: 1 to 255 (sec))
- TIME OUT3 (Use the numeric entry) Time out timer for batch close (4 digits: 1 to 3000 (sec))

Tax Programming

Use the following procedure to select any option included in the tax group:




The register is adapted to US and Canadian tax systems. If the Canadian tax system is required, the tax system must be changed, then program the tax rate or tax table and quantity for doughnut exempt which are described in this section.

Prior to the entry of sales transactions, the tax programming must be performed in accordance with the laws of the state. The register is provided with programming four different tax rate. The one-tax system is sufficient to cover most areas. However, in some areas that has a separate local tax (such as a Parish tax) or a hospitality tax, the multi-tax system is useful.

If the taxable item is entered, the tax will be automatically added to merchandise subtotal according to the programmed tax status for the department. The tax can be also entered manually.

The register is provided with two types of tax programming methods. The % tax method is used for a straight percentage rate per dollar. The table tax method requires tax break information from the state or local tax offices. Use the method which is acceptable in the state. The necessary data of tax programming will be presented at local tax office.

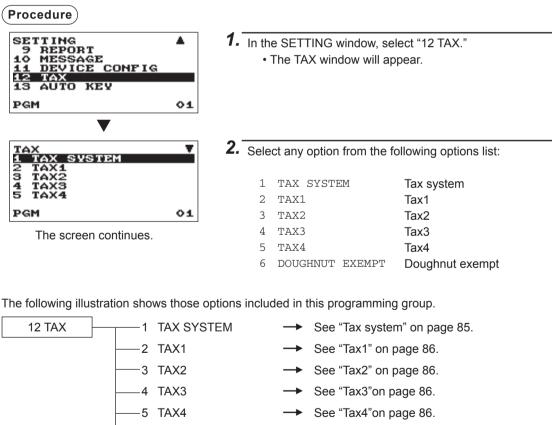

-6 DOUGHNUT EXEMPT 🔶 See "Doughnut exempt"on page 88.

Tax system

(Procedure)

TAX	SYSTEM	AUTO	TAX
PGM			01

 Tax system (Use the selective entry) Selection of the tax system AUTO TAX CANADA TAX 01 CANADA TAX 02 CANADA TAX 02 CANADA TAX 03 CANADA TAX 04 CANADA TAX 05 CANADA TAX 06 CANADA TAX 07 CANADA TAX 08 CANADA TAX 09 CANADA TAX 10 CANADA TAX 11

NOTE

Tax system:

- For US tax system, select "AUTO TAX".
- For Canadian tax, from the table below, specify a tax system suitable for your province (if necessary contact your local tax office for correct sales tax information) and for your type of retail business.

In the register, four kinds of tax can be programmed and each tax is arranged to match GST or PST as follows:


TAX1: PST, TAX2: PST, TAX3: PST or GST, TAX4: GST (The most common type for Canada is type "CANADA TAX 06".)

	TAX1	TAX2	TAX3	TAX4
AUTO TAX	Add on tax	Add on tax	Add on tax	Add on tax
CANADA TAX 01	PST (Add on tax)*	PST (Add on tax)*	GST (VAT)	GST (VAT)
CANADA TAX 02	PST (Add on tax)	PST (Add on tax)	GST (VAT)	GST (VAT)
CANADA TAX 03	PST (Add on tax)*	PST (Add on tax)*	PST (Add on tax)*	GST (VAT)
CANADA TAX 04	PST (Add on tax)	PST (Add on tax)	PST (Add on tax)	GST (VAT)
CANADA TAX 05	PST (Add on tax)*	PST (Add on tax)*	PST (Add on tax)*	GST (Add on tax)
CANADA TAX 06	PST (Add on tax)	PST (Add on tax)	PST (Add on tax)	GST (Add on tax)
CANADA TAX 07	PST (Add on tax)*	PST (Add on tax)*	GST (VAT)	GST (Add on tax)
CANADA TAX 08	PST (Add on tax)	PST (Add on tax)	GST (VAT)	GST (Add on tax)
CANADA TAX 09	PST (Add on tax)*	PST (Add on tax)*	GST (Add on tax)	GST (Add on tax)
CANADA TAX 10	PST (Add on tax)	PST (Add on tax)	GST (Add on tax)	GST (Add on tax)
CANADA TAX 11	PST (Add on tax)*	PST (Add on tax)*	PST (VAT)	GST (VAT)

NOTE

* Tax on tax system: If the "PST taxable & GST (add on tax) taxable" item is entered, GST tax is imposed on PST tax.

Tax 1 through 4

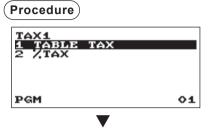

Selection of tax method

TABLE TAX:Programmed tax table is used.% TAX:Programmed % tax rate is used.

(To the following table tax or % tax)

Table tax



 


TABLE TAX	▼.
TAX RATE	0.0000%
CYCLE	0.00
INITIAL TAX	0.00
LOWER TAX	0.00
BREAK POINT1	0.00
BREAK POINT2	0.00
PGM	01

The screen continues.

Selection of the interval

- INTERVAL (Use the selective entry)
 - LOW 0.99:Less than 0.99 (max. 72 break points)OVR 1.00:More than 1.00 (max. 36 break points)

Program each item as follows:

- TAX RATE (Use the numeric entry) Tax rate (max. 7 digits: 0.0000 to 999.9999%).
- CYCLE (Use the numeric entry) Tax table cycle (max. 4 digits: 0.01 to 99.99).
- INITIAL TAX (Use the numeric entry) Initial tax (max. 3 digits: 0.01 to 9.99).
- LOWER TAX (Use the numeric entry) Lowest taxable amount (max. 5 digits: 0.00 to 999.99).
- BREAK POINT1 through 72 (Use the numeric entry) Break point amount (max. 5 digits: 0.01 to 999.99).

The programming data of tax table are as follows.

<Sample tax table>

New Jersey tax table: 6%

To program a tax table, first make a table like the right table shown below.

	Range of sales amount			A: Different minimum b
Taxes	Minimum breakpoi	int Ma	ximum breakpoint	the next on
.00	.01	to	.10	
.01—T	.11-Q	to	.22	10 (0.
.02	.23	to	.38	12 (0.
.03	.39	to	.56	16 (0.
.04	.57	to	.72	18 (0.
.05	.73	to	.88	16 (0.
.06	.89	to	1.10	16 (0.
.07	1.11-M1	to	1.22	22 (1.
.08	1.23	to	1.38	12 (1.
.09	1.39	to	1.56	16 (1.
.10	1.57	to	1.72	18 (1.
.11	1.73	to	1.88	16 (1.
.12	1.89	to	2.10	16 (1.
.13	2.11-M2	to	2.22	22 (2.

	A: Difference between the minimum breakpoint and the next one (¢)	
	-	B: Non-cyclic
	10 (0.11 - 0.01)	D. Non-cyclic
	12 (0.23 - 0.11)	
	16 (0.39 - 0.23)	
N	18 (0.57 - 0.39)	
	16 (0.73 - 0.57)	C: Cyclic-1
1/	16 (0.89 - 0.73)	
~	22 (1.11 - 0.89)	
	12 (1.23 - 1.11)	
	16 (1.39 - 1.23)	
	18 (1.57 - 1.39)	
	16 (1.73 - 1.57)	D: Cyclic-2
	16 (1.89 - 1.73)	
	22 (2.11 - 1.89)	

From the tax table, calculate the differences between a minimum break point and the next one (A). Then, from the differences, find irregular cycles (B) and regular cycles (C and D). These cycles will show you the following items necessary to program the tax table:

T: The tax amount collected on the minimum taxable amount (Q) \rightarrow INITIAL TAX **Q**: The minimum taxable amount \rightarrow LOWER TAX **M1:** The maximum value of the minimum breakpoint on a regular cycle (C) We call this point "MAX point." M2: The maximum value of the minimum breakpoint on a regular cycle (D) We call this point "MAX point." M: Range of the minimum breakpoint on a regular cycle: difference between Q and M1 or between M1 and M2 Example data of New Jersey tax table (6%) TAX RATE: 6.0000 (enter 6) CYCLE: 1.00 (enter 100) INITIAL TAX: 0.01 (enter 1) LOWER TAX: 0.11 (enter 11)

BREAK POINT1: 0.23	(enter 23)
BREAK POINT2: 0.39	(enter 39)
BREAK POINT3: 0.57	(enter 57)
BREAK POINT4: 0.79	(enter 79)
BREAK POINT5: 0.89	(enter 89)
BREAK POINT6: 1.11	(enter 111)

NOTE If the tax is not provided for every cent, modify the tax table by setting the tax for every cent in the following manner.

When setting the tax, consider the minimum breakpoint corresponding to unprovided tax to be the same as the one corresponding to the tax provided on a large amount.

Sample tax table Example 8%

Тах	Minimum breakpoint
.00	.01
.01	.11
.02	.26
.03	.47
.04	.68
.06	.89
.09	1.11
.10	1.26
.11	1.47
.12	1.68
.14	1.89
.17	2.11

Modification of the left tax table


Тах	Minimum breakpoint	Breakpoint difference (¢)	
.00 .01— T	.01 11—Q	1 10 (0.11-0.01)	B: Non-cyclic
.02 .03 .04 .05 .06 .07 .08 .09	.26 .47 .68 .89 .111-M1 1.11 1.11	$\begin{array}{c} 15 \ (0.26 \hbox{-} 0.11) \\ 21 \ (0.47 \hbox{-} 0.26) \\ 21 \ (0.68 \hbox{-} 0.47) \\ 21 \ (0.89 \hbox{-} 0.68) \\ 0 \ (0.89 \hbox{-} 0.89) \\ 22 \ (1.11 \hbox{-} 0.89) \\ 0 \ (1.11 \hbox{-} 1.11) \\ 0 \ (1.11 \hbox{-} 1.11) \end{array}$	C: Cyclic-1
.10 .11 .12 .13 .14 .15 .16 .17	1.26 1.47 1.68 1.89 1.89 2.11 2.11 2.11	$\begin{array}{c} 15 \ (1.26\text{-}1.11) \\ 21 \ (1.47\text{-}1.26) \\ 21 \ (1.68\text{-}1.47) \\ 21 \ (1.89\text{-}1.68) \\ 0 \ (1.89\text{-}1.89) \\ 22 \ (2.11\text{-}1.89) \\ 0 \ (2.11\text{-}2.11) \\ 0 \ (2.11\text{-}2.11) \end{array}$	D: Cyclic-2

Example data of above tax table (8%)

TAX RATE:	8.0000	(enter 8)
CYCLE:	1.00	(enter 100)
INITIAL TAX:	0.01	(enter 1)
LOWER TAX:	0.11	(enter 11)
BREAK POINT1	: 0.26	(enter 26)
BREAK POINT2	:0.47	(enter 47)
BREAK POINT3	: 0.68	(enter 68)
BREAK POINT4	:0.89	(enter 89)
BREAK POINT5	:0.89	(enter 89)
BREAK POINT6	: 1.11	(enter 111)
BREAK POINT7	: 1.11	(enter 111)
BREAK POINT8	: 1.11	(enter 111)

• % Tax

 (Procedure)




Program each item as follows:TAX RATE (Use the numeric entry)

Tax rate (max. 7 digits: 0.0000 to 999.9999%).

• LOWER TAX (Use the numeric entry) Lowest taxable amount (max. 5 digits: 0.00 to 999.99).

Doughnut exempt

 (Procedure)



Program each item as follows:

• QUANTITY (Use the numeric entry) Quantity for doughnut tax exempt (2 digits: 1 to 99/0).


NOTE

The programming is effective for "taxable 1 & taxable 3" items on Canadian tax (CANADA TAX 01 or CANADA TAX 10).

Automatic Sequencing Key Programming


If you program frequently performed key operations for the Auto key, you can enter those key operations simply by pressing the corresponding Auto key in key operations.

Key Sequence

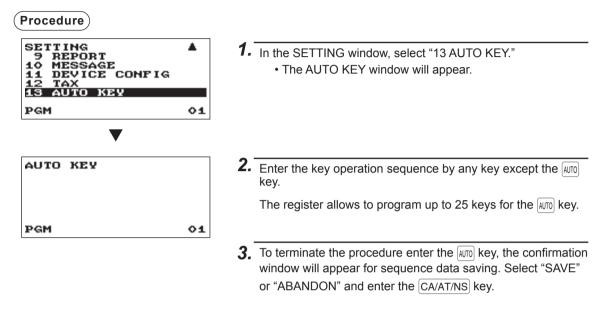

Example

In case of the X1 General report printing.

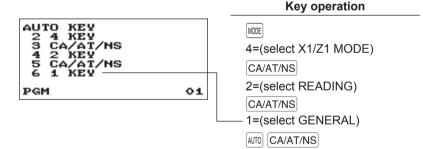

Reading of Stored Programs

You can read programs stored in the PROGRAM mode.

Program reading sequence


To read those programs stored in the PROGRAM mode, use the following procedure:

- 1. Select the PROGRAM mode from the mode selection window.
- 2. Select "1 READING" from the PROGRAM mode to display the items list, and press the CA/AT/NS key. Select an item listed in the table shown later.

	Item:	Description:
1	DEPARTMENT	Department (Full or specified range)
2	PLU/UPC	PLU/UPC (Full or specified range)
3	FUNCTIONS	Function
4	MEDIA	Media
5	FUNCTION TEXT	Function Text
6	CLERK	Clerk
7	MANAGER	Manager
8	MODE PASS CODE	Mode pass code
9	TRAINING CLK	Training clerk
10	OPTIONAL	Optional feature
11	REPORT	Report setting
12	MESSAGE	Message
13	DEVICE CONFIG	Device configuration
14	ТАХ	Тах
15	AUTO KEY	Auto key
16	ROM VERSION	ROM version

Sample printouts

Departments

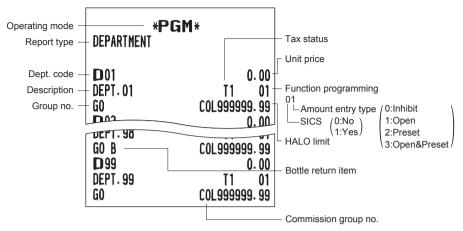


• PLU/UPC


Report type —	* PGM * - Plu/upc	Associated dept. code
PLU code – Description –	- P 00001 (O1) - PLU00001	Amount entry type 2C0 12.50 Commission group no.
	P00002 (O1) PLU00002 P00003 (O1) PLU00003	2C0 └─ Unit price 5.10 2C0 1.10
UPC code – Description –	4901305920795#(O1) Notebook	C0 2.30 Unit price
	5012345678900#(O1) Item-A 5045678912304#(O1)	C0 — Commission group no. 5.00 C0
	Item-C 5099887654302#(O5) DEPT.05	3. 60 C0 2. 60 NOTE UPC code are printed out in the sequence shown below.
		EAN-13 EAN-8

UPC-A UPC-E ITF-14

• Functions

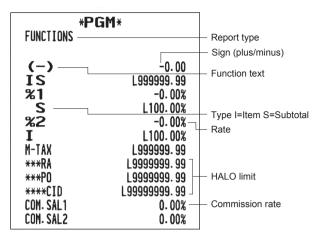

Media

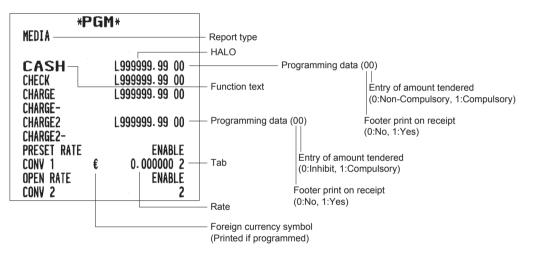

Function text

	_
*DEPT TL DEPT (-)	*DEPT TL DEPT (-)
	*BTTL TL
*BTTL TL	
BTTL (-)	BTTL (-)
GROUP01	GROUP01
GROUP02	GROUP02
GROUP03	GROUP03
GROUP04	GROUP04
GROUP05	GROUP05
GROUP06	GROUP06
GROUP07	GROUP07
GROUP08	GROUP08
GROUP09	GROUP09
COM. AMT1	COM. AMT1
COM. AMT2	COM. AMT2
COM. TTL	COM. TTL
NON COM.	NON COM.
ITEMS	ITEMS
MDSE ST	MDSE ST
SUBTOTAL	SUBTOTAL
***TOTAL	***TOTAL
CHANGE	CHANGE
#	#
COPY	COPY
DUE	DUE
RCP SW.	RCP SW.
GST EXPT	GST EXPT
PST TTL	PST TTL
GST TTL	GST TTL
VAT EXPT	VAT EXPT
TOTAL TAX	TOTAL TAX

NOTE The text of "GST EXMPT", "PST TTL" and "GST TTL" appears only when Canadian tax is selected.

Clerk

PGM CLERK CLK#01 CLK#02	CLERK01 0 0000 CLERK02 0 0000	 Report type Clerk code Clerk name Auto key operation/Pass code (0: Enable 1: Disable
CLK#39	CLERK39 0 0000	
CLK# 40	CLERK40 0 0000	


Manager

MANAGER *PGM*		Bonorthypo
		 Report type
PASS CODE	9999	 Pass code

Mode pass code

* PGM *	— Report type
Mode Pass Code	— Mode
VOID MODE 0000- OPXZ 0000 VIEW REPORT 0000 X1 0000 Z1 0000 X222 0000 PROGRAM 0000 SD CARD 0000	— Pass code

 Training clerk



Optional feature


OPTIONAL *PGM*		— Report type
BASIC SYSTEM DATE FORMAT TIME FORMAT ERROR CURRENCY SYMBOL TAB DECIMAL QUANTITY DECIMAL ROUND [00] KEY PRT/DSP EDIT ITEM DISPLAY	MDY 12-Hour Lock Error \$ 2 Yes Round [00] Yes 2-Line	— Item — Setting
FUNC.PROHIBIT NON-ADD NON-ADD + NS MINUS DEPT COPY RCPT VOID MODE SUBTOTAL<0 TEND+DIRECT	ENABLE ENABLE ENABLE ENABLE ENABLE ENABLE ENABLE	
FUNC.AUTHORITY RA PO REFUND ITEM VD SBTL VD NO SALE TAX DELETE MANUAL TAX	PUBLIC PUBLIC PUBLIC PUBLIC PUBLIC PUBLIC PUBLIC PUBLIC	

FUNCTION SELECT SPLIT ENTRY SPLIT COUNT VD MODE TO HOURLY ST BEFORE DIRECT ST BEFORE TEND NS RECEIPT AFTER TRANS.	DISABLE QUANTITY No Not Print Detail
PRINT SELECT CONSECUTIVE NO. DATE TIME PURCHASE NO. TAX STATUS TAX TAX (TAXABLE=0) TAX (TAX=0) ST AT ST KEY LOGO FORM FOOTER O AMT PLU ITEM JOURNAL LOGO ON JOURNAL CONV. SHORT TEND GST VAT PRINT	YES YES YES YES 1 to 4 NO NO PATTERNG ALL TEXT ONLY ALL NO PRINT YES
UPC FUNCTION LEARNING Lookup at RF Code Print C/D Check ISBN/ISSN	ENABLE YES No Price CMP.


Report setting

PGM		
REPORT		 Report type
O SKIP DEPARTMENT TRANSACTION PLU CLERK HOURLY DAILY NET	SKIP SKIP SKIP SKIP SKIP SKIP	— Setting
PRINT SELECT Z COUNTER GT1 ON Z GT2 ON Z GT3 ON Z TR GT ON Z VD MODE ON X121 VD MODE ON X222 PLU/UPC DATA ON Z JOURNAL SIZE GST EXEMPT ON XZ	YES YES YES YES YES YES YES SMALL YES	— Item
Z COUNTER General Z1 General Z2	0000 0000	
Z1 GENERAL REPORT SD: SAVE SALES SD: SAVE ALL RAM Reset GT	NO No Nd	
JOURNAL Tr data store X data store	YES Header	


Message

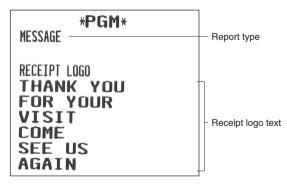


Device configuration

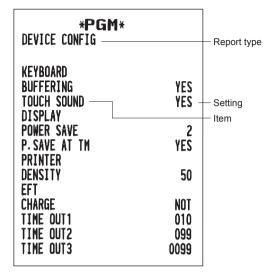

• Tax

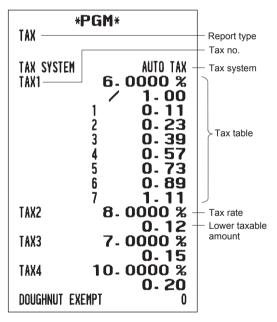


AUTO key

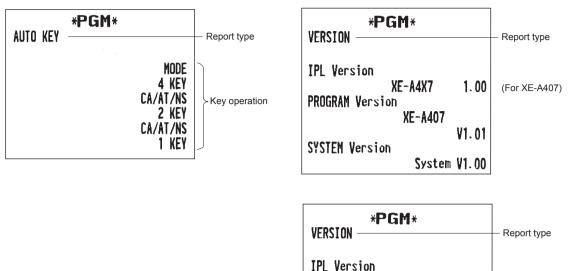

ROM version

EFT Test Function

Use the following procedure to perform the EFT test function.

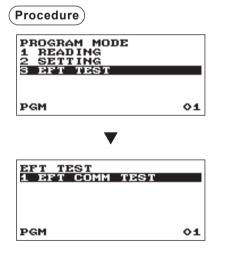

1. Press the MODE key and select the "6 PROGRAM MODE" and press the CA/AT/NS key. In the "PROGRAM MODE" window, select "3 EFT TEST" and press the CA/AT/NS key, The EFT TEST window will appear.

XE-A4X7

XE-A43S

PROGRAM Version

SYSTEM Version

1.00

V1.01

System V1.00

(For XE-A43S)

2. Press the CA/AT/NS key to perform the test function.

NOTE When the EFT terminal (CREDIT CARD terminal) is not connected, the EFT test function causes an error.

SD CARD Mode

You can exchange data through an SD memory card between your register and a PC when managing the data in your register by using the SHARP's PC software "Customer Support Tool".

Customer Support Tool can be downloaded from the Sharp web site.

Please visit the Sharp web site: http://www.sharpusa.com/registersoftware

You can also save all necessary data in the register to an SD memory card for backup.

To use the SD memory card function, select the "7 SD CARD MODE" in the mode selection window and perform the following operations.

This instruction manual describes only those operations needed on the register. For details, please refer to the help section in the "Customer Support Tool".

Inserting and removing an SD memory card

The SD card slot is located on the front side of your register.

Inserting an SD memory card

Insert an SD memory card into the SD card slot with the printed SD logo facing upwards. Push the card in steady with a finger until it clicks and release it slowly.

Removing the SD memory card

Push the card in gently with a finger and release it. The card will come out.

NOTE

- This model supports SD cards only. Use of any other types of SD cards such as mini SD, micro SD, etc. with an adapter is not supported.
- When inserting or removing the SD memory card, be sure to release it slowly. Otherwise, the card may pop out and injure your finger.
- Never touch or remove the SD memory card while it is accessed, otherwise the data stored in it may be damaged.
- Formatting the SD memory card erases all the data in it.

CAUTION: Never turn the power off, while the SD memory card is accessed.

SD card formatting

When the SD card is not formatted yet, take the formatting operation.

(Procedure)

- (1) Select "4 FORMATTING" in the SD CARD mode and press the CA/AT/NS key, the confirmation window is displayed.
- (2) To perform the format operation, select OK and press the CA/AT/NS key. To cancel the operation, select CANCEL and press the CA/AT/NS key.

Folder creating

A user folder can be created in the following location: SHARP/ECRXE4X7/nnnnnnnn (nnnnnnnn: user folder name)

(Procedure)

- (1) Select "3 FOLDER CONTROL" in the SD CARD mode and press the CA/AT/NS key.
- (2) Select "1 CREATE FOLDER" and press the CA/AT/NS key, the folder name entry window is displayed.
- (3) Enter the required folder name and press the CA/AT/NS key. To cancel the operation, press the ESC/CANCEL key.

Folder name selecting

(Procedure)

- (1) Select "3 FOLDER CONTROL" in the SD CARD mode and press the CA/AT/NS key, the FOLDER CONTROL window is displayed.
- (2) Select "2 SELECT FOLDER" and press the CA/AT/NS key, the folder name list window is displayed.
- (3) Select the required folder name from the list, and press the CA/AT/NS key. To cancel the operation, press the ESC/CANCEL key.

Data saving

The sales data or programming data can be saved to the SD card.

(Procedure)

(1) Select "1 SAVING" in the SD CARD mode and press the CA/AT/NS key, the following data list window is displayed.

Item	Data list
SALES DATA	Sales data (CSV format)
IND. PROGRAM	Select the individual programming data: DEPARTMENT PLU/UPC CLERK GRAPHIC LOGO LOGO TEXT TAX
ALL PROGRAM	All programming data
ALL RAM DATA	All RAM data

(2) Select the data menu from the list and press the CA/AT/NS key, the confirmation window is displayed. To save the required data file, select OK and press the CA/AT/NS key. To cancel the operation, select CANCEL and press the CA/AT/NS key.

99

Data loading

The programming data can be loaded from the SD card.

(Procedure)

(1) Select "2 LOADING" in the SD CARD mode and press the CA/AT/NS key. The following selection window is displayed.

Item	Data list
IND. PROGRAM	Select the individual programming data: DEPARTMENT PLU/UPC CLERK GRAPHIC LOGO LOGO TEXT TAX
ALL PROGRAM	All programming data
ALL RAM DATA*	All RAM data

(2) Select the data menu from the list and press the CA/AT/NS key, the confirmation window is displayed. To load the programming data file, select OK and press the CA/AT/NS key. To cancel the operation, select CANCEL and press the CA/AT/NS key.

* When "ALL RAM DATA" is selected, the register resets the program in the last save point after loading all the RAM data.

NOTE The loading operation must be circumspect in execution, the sales data and/or all programming data will be recovered with the back-up data.

Error message table of the SD card function

Error message (display)	Error status and action
CARD FULL	The SD memory card is full. Delete unnecessary data from the card on a PC or replace the card with a new one. When using a new SD memory card, be sure to format it in advance.
CARD PROTECT	The write-protect switch on the SD memory card is in the "PROTECTED" position. Set the switch on the "NOT PROTECTED" position.
FILE FAILED	The data stored in the SD memory card is incorrect. Write correct data into the SD memory card on a PC.
NO CARD	No SD memory card is found. Insert an SD memory card into the SD card slot or reinsert it correctly.
NO FILE	The designated file is not found.
NO FOLDER	The user folder is not found. (SHARP/ECRXE4X7/user folder name)
OVER LIMIT.	The maximum allowable number of times of sales data writing is exceeded. Delete unnecessary data from the SD memory card on a PC or replace the card with a new one. When using a new SD memory card, be sure to format it in advance.
SD ACC POWER OFF	A power failure has occurred while the SD memory card is accessed. Perform the interrupted operation again from the beginning after power recovery.
SD ERROR	An error other than the above mentioned has occurred while the SD memory card is accessed. Perform the interrupted operation again from the beginning.

11 Universal Product Code (UPC) or European Article Number (EAN)

• UPC-E

UPC or EAN code

Your register can transact the following codes:

- UPC-A (Number system character: 0, 2, 3, 4)
- EAN-8 EAN-13 Internal code EAN-8/EAN-13

UPC-A

- Number system character: 0 <used in the source marking>
- Number system character: 3 <used as NDC or HRI>

For entry, a full 12 digits number or 11 digits number (omitting the check digits) must be entered.

• Number system character: 4 < In-store marking PLU type>

For entry, a full 12 digits number, 11 digits number (omitting the check digit), or a leading zero plus 12 digits number must be entered.

UPC-E

• UPC-E is a zero-suppressed version of UPC-A that conforms to the UPC-E Standards. This code is used for marking small package.

For entry, a 6 digits number or a leading zero plus 6 digits number must be entered.

EAN-8

 Ordinary EAN-8 code (flag: neither 0 nor 2) <used in the source marking>

For entry, a full 8 digits number must be entered.

 
EAN-13

Ordinary EAN-13 code (used in the source marking)


For entry, you must enter a full of 13 digits number.


In case of the leading code is "977", "978" or "979", the code is recognized as ISBN code or ISSN code. For the ISBN/ ISSN code, the compulsive price entry can be programmed. Refer to the programming section "UPC Function" in "Optional Feature Selection".


ITF-14



• ITF-14

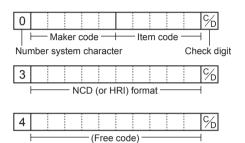

 

 

Add-on code

UPC-A and EAN-13 may be followed by a two digits number or a five digits number as add-on code, excepting UPC-A without a check digit plus two or five digits add-on code.

Therefore, the total number of digits enterable for sales entries are as shown below:

Code entry	No add-on code	2-digit add-on code	5-digit add-on code
UPC-A	12	15 ("0" + 14)	17
UPC-A w/leading zero	13	15	18
UPC-A w/o check digit	11	-	-
UPC-E	6	-	_
EAN-8	8	-	_
EAN-13	13	15	18

NOTE

Your register does not read automatically the encoded price of the press code and does not store the 2-digit and 5-digit Add-On code.

12 Operator Maintenance

In Case of Power Failure

When power is lost, the register retains its memory contents and all information on sales entries.

- When power failure is encountered in register idle state or during an entry, the register returns to the normal state of operation after power recovery.
- When power failure is encountered during a printing cycle, the register carries out the correct printing procedure after power recovery.

In Case of Printer Error

If the printer runs out of paper, the printer will stall, and "PAPER EMPTY" will appear on the display. Key entries will not be accepted. Referring to "Replacing the Paper Roll" in this chapter, install a new paper roll in the proper position, then press the CL key. The printer will print the power failure symbol and resume printing.

If the print roller arm comes up, the printer stalls, and "PAPER EMPTY" will appear on the display. Key entries will not be accepted. Push down the arm until it is securely locked, then press the \bigcirc key. The printer will print the power failure symbol and resume printing.

Cautions in Handling the Printer and Recording Paper

Cautions in handling the printer

Avoid the following environments:

Dusty and humid places

Direct sunlight

Iron powder (A permanent magnet and electromagnet are used in this register.)

- Never pull the paper when the print roller arm is locked. First lift up the arm, and then remove the paper.
- Never touch the surface of the print head and print roller.

Cautions in handling the recording paper (thermal paper)

· Use only the paper specified by SHARP.

- Do not unpack the thermal paper until you are ready to use it.
- Avoid heat. The paper will color at around 70°C.
- · Avoid dusty and humid places for storage. Avoid direct sunlight.
- The printed text on the paper can discolor under the following conditions:

Exposure to high humidity and temperature

Exposure to the direct sunlight

Contact with glue, thinner or a freshly copied blueprint.

Heat caused by friction from scratching or other such means.

Contact with a rubber eraser or adhesive tape.

• Be very careful when handling the thermal paper. If you want to keep a permanent record, copy the printed text with a photocopier.

Installing Batteries

This register displays a low battery warning message "LOW BATTERY" when the batteries are low, and displays a no battery warning message "NO BATTERY" when batteries are extremely low or batteries are not installed.


If no batteries are installed, install two new alkaline batteries LR6 ("AA" size) at once. If batteries are already installed, replace them with new ones as soon as possible. If the AC power cord is disconnected or a power failure occurs when the batteries are dead or not installed, all the programmed settings will be reset to the default settings and any data stored in memory will be cleared.

NOTE

Improper use of batteries could cause them to burst or leak, which might damage the interior of the register. Please take the following precautions:


- Be sure that the positive (+) and negative (-) poles of each battery are oriented properly.
- Never mix batteries of different types.
- Never mix old batteries and new ones.
- Never leave dead batteries in the battery compartment.
- Remove the batteries if you plan not to use the register for long periods.
- Should a battery leak, clean out the battery compartment immediately, taking care not to let the battery fluid come into direct contact with your skin.
- If an incorrect battery is used, it may explode or leak.
- For battery disposal, follow the relevant law or regulation in your country.

Replacement

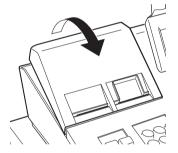

- **1.** Be sure the register is plugged in.
- 2. Remove the printer cover.

3. Open the battery cover and remove the old batteries.

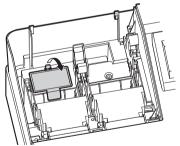

- **4.** Install two new LR6 ("AA" size) batteries into the battery compartment.
- 5. Close the battery cover.
- 6. Replace the printer cover.

Replacing the Paper Roll

Recording paper specifications

Be sure to use paper rolls specified by SHARP. The use of any other paper rolls than specified could cause paper jamming, resulting in register malfunction.

Paper specification


Paper width:	57.5 ± 0.5 mm
1	
Max. outside diameter:	
Quality:	High quality (0.06 to 0.08 mm thickness)

• Be sure to set a paper roll prior to using your register, otherwise it may cause a malfunction.

Install the paper roll in the printer. Be careful then to set the roll and cut the paper end correctly.


(How to set the paper roll)

 (How to cut the paper end)




Installing Paper Rolls


The register can print receipts and journals. For the printer, you must install the paper rolls (receipt and journal paper rolls) provided with the register.

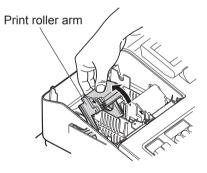


- **1.** Remove the printer cover.
- 2. Lift up the print roller arm of the receipt side.

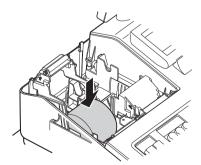

 3. Set a paper roll in the paper roll cradle of the receipt side as per the diagram.



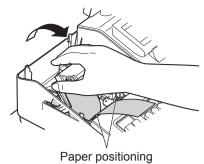

guides


4. Feed the end of the paper along with the paper positioning guides as per the diagram.


5. While holding down the paper, slowly close the print roller arm of the receipt side, and push down the arm until you hear a click locking the arm.




If the print roller arm is not securely locked, printing is not done right. If this problem occurs, open the arm, and close the arm instructed above.

6. Cut off the excess paper.

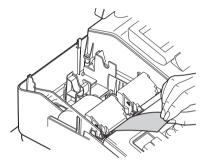


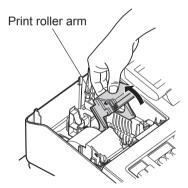


7. Lift up the print roller arm of the journal side.

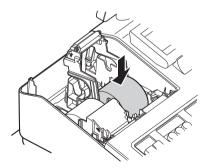


 8. Set a paper roll in the paper roll cradle of the journal side as per the diagram.



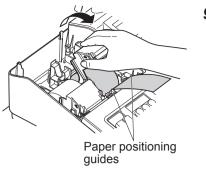

9. While holding down the paper, slowly close the print roller arm of the journal side, and push down the arm until you hear a click locking the arm.

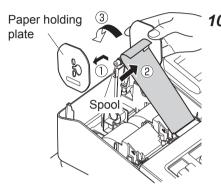

10. ① Remove the paper holding plate from the spool.
② Insert the end of the paper into the slit in the spool. (Press the journal paper feed key to feed more paper if required.)
③ Wind the paper two or three turns around the spool shaft.

- 11. ① Mount the paper holding plate onto the take-up spool.
 ② Set the spool on the bearing, and press the journal paper feed key to take up excess slack in the paper.

- **12.** Replace the printer cover.
- **13.** For the receipt paper, press the *PPP* key to make sure the paper end comes out of the printer cover and clean paper appears.
 - **NOTE** If the paper end does not come out, open the printer cover, and pass the paper end between the paper cutter and the paper guide of the printer cover, and replace the printer cover.

Replacing the paper roll

When colored dye appears on the edges of the paper roll, it is time to replace the paper roll. Use paper of 57.5 ± 0.5 mm in width. To prevent jamming be sure to use paper specified by SHARP.

Replacing the receipt paper roll:

- 1. Confirm that the REG mode has been selected.
- 2. Remove the printer cover.
- **3.** Lift up the print roller arm of the receipt side.
- 4. Remove the paper roll from the paper roll cradle of the receipt side.

NOTE Do not pull the paper through the printer.

5. Install a new paper roll correctly by following the steps in "Installing Paper Rolls".

Replacing the journal paper roll:

- 1. Confirm that the REG mode has been selected.
- 2. Remove the printer cover.
- 3. Press the journal paper feed key to advance the journal paper until its printed part is out of the way.

4. Cut the paper and remove the take-up spool from the bearing.

NOTE Do not pull the paper through the printer.

- 5. Lift up the print roller arm of the journal side.
- 6. Remove the paper roll from the paper roll cradle of the journal side.
- 7. Remove the paper holding plate of the take-up spool.
- 8. Remove the printed journal roll from the take-up spool.
- 9. Install a new paper roll correctly by following the steps in "Installing Paper Rolls".

Removing a Paper Jam


CAUTION: The paper cutter is mounted on the printer cover. Be careful not to cut yourself. Never touch the printer head immediately after printing, as the head may still be hot.

- 1. Remove the printer cover.
- 2. Lift up the print roller arm.
- 3. Remove the paper jam. Check for and remove any shreds of paper that may remain in the printer.
- 4. Reset the paper roll correctly by following the steps in "Installing Paper Rolls".

Cleaning the Printer (Printer Head/Sensor/Roller)

When the printed text is getting dark or faint, paper dust may be stuck to the printer head, sensor and/or roller. Clean them as follows:


CAUTION: Never touch the printer head with a tool or anything hard as it may damage the head. The paper cutter is mounted on the printer cover. Be careful not to cut yourself.

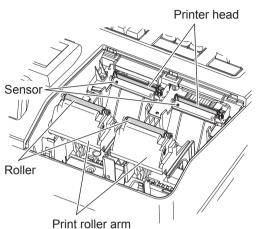

- **1.** Select the OFF mode.
- 2. Remove the printer cover.
- **3.** Lift up the print roller arm.
- **4.** Remove the paper roll referring to the "Removing a Paper Jam" section.
- Clean the printer head with a cotton swab or soft rag moistened with ethyl alcohol or isopropyl alcohol. Clean the roller and the sensor in the same manner.
- **6.** Reset the paper roll correctly by following the steps in "Installing Paper Rolls".


Removing the Till and the Drawer

The till in the register is detachable. After closing your business for the day, remove the till from the drawer and keep the drawer open. The coin case is also detachable from the till. To detach the drawer, pull it forward fully with the till removed, and remove it by lifting it up.

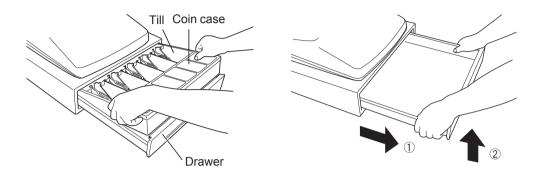

Opening the Drawer by Hand

The drawer automatically opens in the usual way. However, when power failure is encountered or the register becomes out of order, slide the lever located on the bottom of the register in the direction of the arrow. (See the figure below.) The drawer will not open, if it is locked with a drawer lock key.

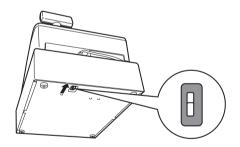

Drawer Lock Key

This key locks and unlocks the drawer. To lock it, turn 90 degrees counterclockwise. To unlock it, turn 90 degrees clockwise.



Before Calling for Service

Fault	Checking
The display does not illuminate.	 Is power supplied to the electric outlet? Is the power cord plug out or loosely connected to the electric outlet? Is the register in screen-save mode?
• The display is illuminated, but the whole register refuses entries.	 Is a clerk code assigned to the register? Is the register in the REG mode?
No receipt is issued.	 Is the receipt paper roll properly installed? Is there a paper jam? Is the receipt function in the "OFF" status? Is the print roller arm securely locked?
• No journal paper is taken up.	 Is the take-up spool installed on the bearing properly? Is there a paper jam?
Printing is unusual.	Are the printer head/sensor/roller clean?Is the paper roll properly installed?

If you encounter any of the following problems, please read below before calling for service.

Error message table

LITOI message table	
Error message (display)	Error status and action
AMT. TEND ONLY	The amount tendering is compulsory.
COMM. ERROR	A communication error occurred.
DEPARTMENT IS INHIBITED	Operated department is programmed as "INHIBIT".
ENTRY INHIBITED NN IN	Perform the correct key operation.
ENTRY OVERFLOW PLEASE CHECK ENTERED DIGITS	The correct numeric data must be entered.
INVALID CODE ENTRY	The correct code data must be entered.
MISOPERATION INVALID KEY	Perform the correct key operation.
OPEN PRICE ENTRY INHIBITED	The open price entry is inhibited. (Only preset price entry)
OVER LIMIT.	Overflow limitation error
PAPER EMPTY	Install a new (receipt or journal) paper roll, and press the CL key.
PLU IS SET TO INHIBIT	Operated PLU is programmed as "INHIBIT".
PRESET PRICE ENTRY INHIBITED	The preset price entry is inhibited. (Only open price entry)
PRINTER ERROR	The temperature/voltage of printer head is too high. Turn off the power, and repair the printer. Then turn on the power and press CL key.
STACK OVER	Turn off the power, and consult a Sharp Authorized Servicer.
UNDEFINED CODE	Desired code is not programmed yet.
UPC CODE IS NOT EXISTING	Desired UPC/EAN code is not programmed yet.

13 Specifications

Model:	XE-A407 XE-A43S		
Dimensions:	16.7 (W) x 15.6 (D) x 12.6 (H) in. (425 (W) x 395 (D) x 320 (H) mm)		
Weight:	Approx. 24.3 lb (11 kg)		
Power Source:	120V AC, 60Hz		
	Stand-by: 6.3 W		
Power Consumption:	Operating: 13.9 W (max.)		
M(. 1.1. T			
Working Temperature:	32 to 104 °F (0 to 40 °C)		
Humidity:	20 % to 85 %		
Display:	Operator display:	LCD display with Tilt mechanism	
		160 (W) x 64 (H) (dots)	
	Customer display:	7-segment LED display	
Printer:	Туре:	Two-station thermal printer	
	Printing speed:	Approx. 12 lines/second	
	Printing capacity:	30 digits each for receipt/journal paper	
	Other functions:		
	- Receipt (ON-OFF) function		
	- Compression print for the journal		
	- Receipt and journal indep	pendent paper feed function	
Logo:	Graphic logo printing:		
	Size:	130 (H) x 360 (W) pixel	
		Area of black must be less than 35% of all area.	
	Logo message printing:		
	Logo message for the rece	eipt (max. 30 characters x 6 lines)	
Paper Roll:	Width: 2.25 ± 0.02 in (57.5	5 ± 0.5 mm)	
	Max. diameter: 3.15 in (80	mm)	
	Quality: High quality (0. 06	to 0.08 mm thickness)	
Cash Drawer:	5 slots for bills and 6 for coin denominations		
Accessories:	Quick Start Guide:	1 copy	
	Instruction manual:	1 copy	
	Paper roll:	2	
	Take-up spool:	1	
	Paper holding plate:	1	
	Drawer lock key:	1	
	EFT flyer:	1	

*Specifications and appearance are subject to change without notice for improvement.

END-USER LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first end-user purchaser (the "Purchaser") that this Sharp brand product (the "Product"), when new and shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equipment at no charge to the Purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the Purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

To the extent permitted by applicable state law, the warranties set forth herein are in lieu of, and exclusive of, all other warranties, express or implied. Specifically, ALL OTHER WARRANTIES OTHER THAN THOSE SET FORTH ABOBE ARE EXCLUDED. ALL EXPRESS AND IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR USE, AND FITNESS FOR A PARTICULAR PURPOSE ARE SPECIFICALLY EXCLUDED. If, under applicable state law, implied warranties may not validly be disclaimed or excluded, the duration of such implied warranties is limited to the period(s) from the date of purchase set forth below.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the Purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the Purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow limits on warranties or on remedies for branch in certain transactions; in such states, the limits herein may not apply.

Model Specific Section (Carry-in Service)	
Your Product Model Number & Description:	XE-A407/XE-A43S Cash Register (Be sure to have this information available when you need service for your product.)
Warranty Period for this Product:	One (1) year parts and 90 days labor from date of purchase
Additional Item(s) Excluded from	
<u>Warranty Coverage (if any):</u>	Any consumable items such as paper supplied with the Product.
Where to Obtain Service:	From a Sharp Authorized Servicer located in the United States. To find the location of the nearest Sharp Authorized Servicer, call SHARP toll free at 1-800-BE-SHARP.
What to do to Obtain Service:	Ship prepaid or carry in your Product to a Sharp Authorized Servicer. Be sure to have Proof of Purchase available. If you ship the Product, be sure it is insured and packaged securely.



SHARP ELECTRONICS CORPORATION

Sharp Plaza, Mahwah, New Jersey 07495-1163 1-800-BE-SHARP

For additional information and product registration, please visit www.sharpusa.com

SHARP CORPORATION