



## Optical lens cleaning using compressed air.

1. Power Camera.
2. Eject Disc compartment.
3. Remove power from camera.
4. Open side panel by loosening 5 screws. Fig.1
5. Spray compressed air into optical lens area. Fig.2 and Fig.3
6. Close side panel by tightening screws from step 4. Fig.1
7. Test and resume normal operation.

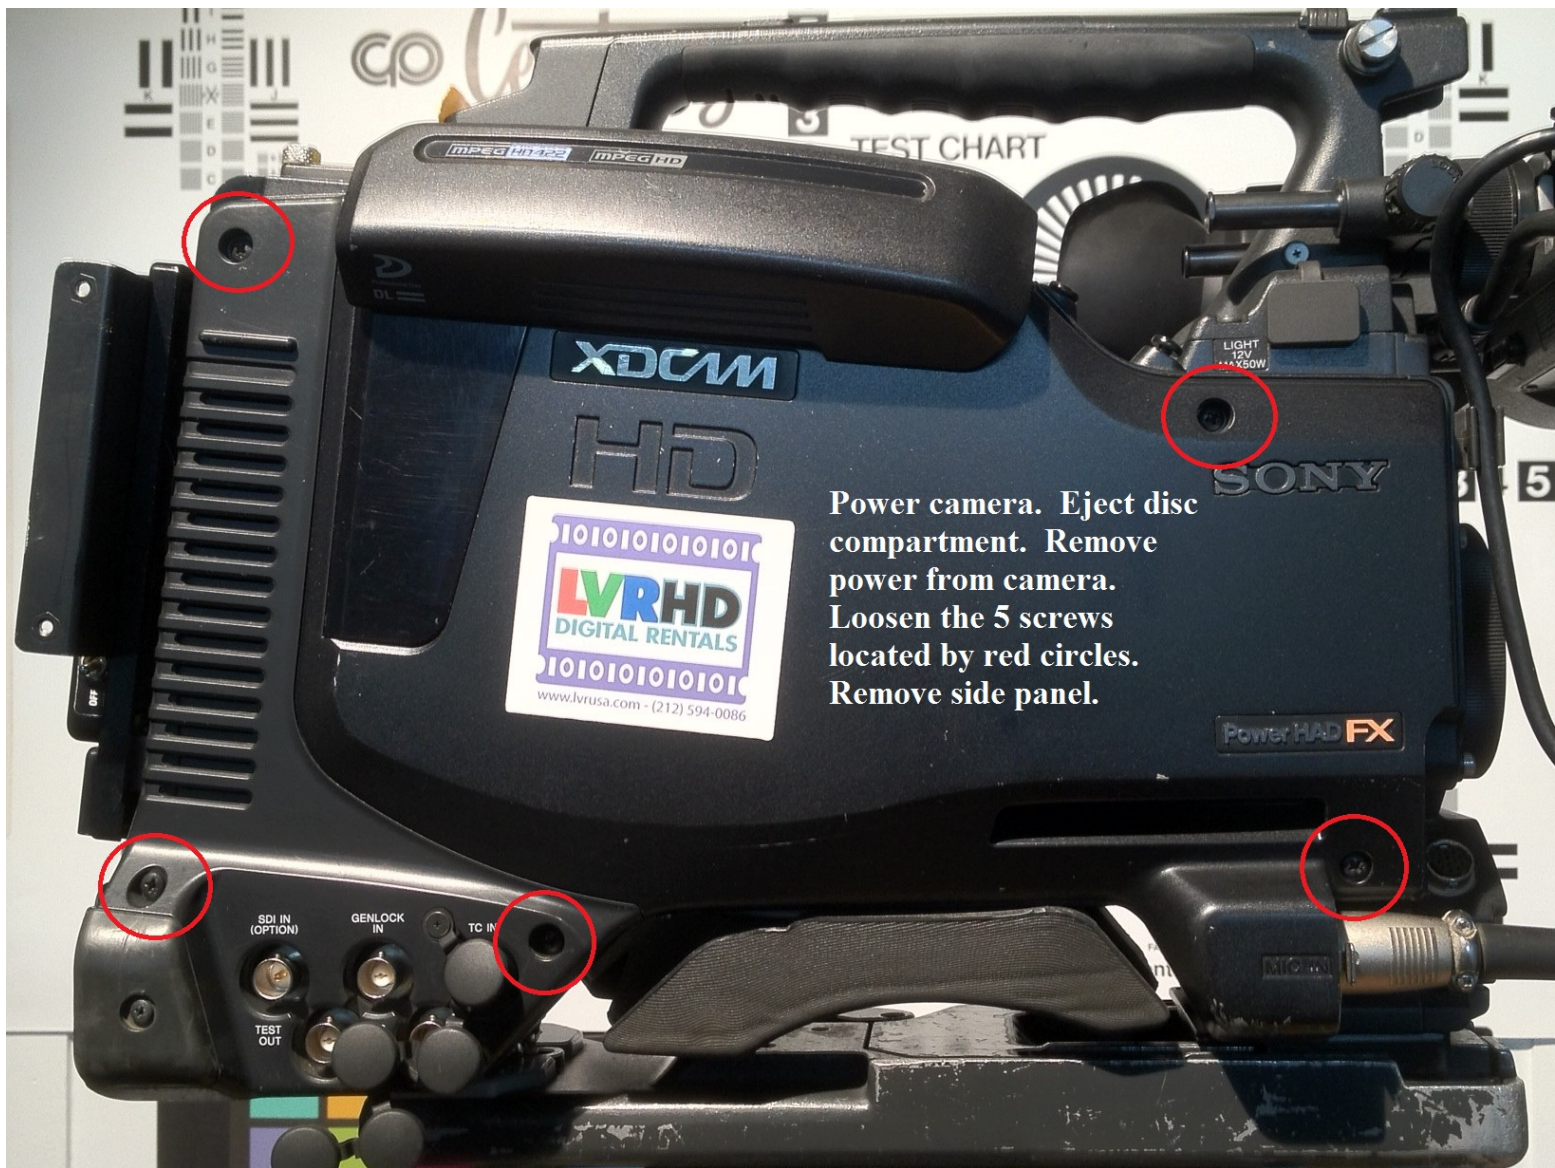

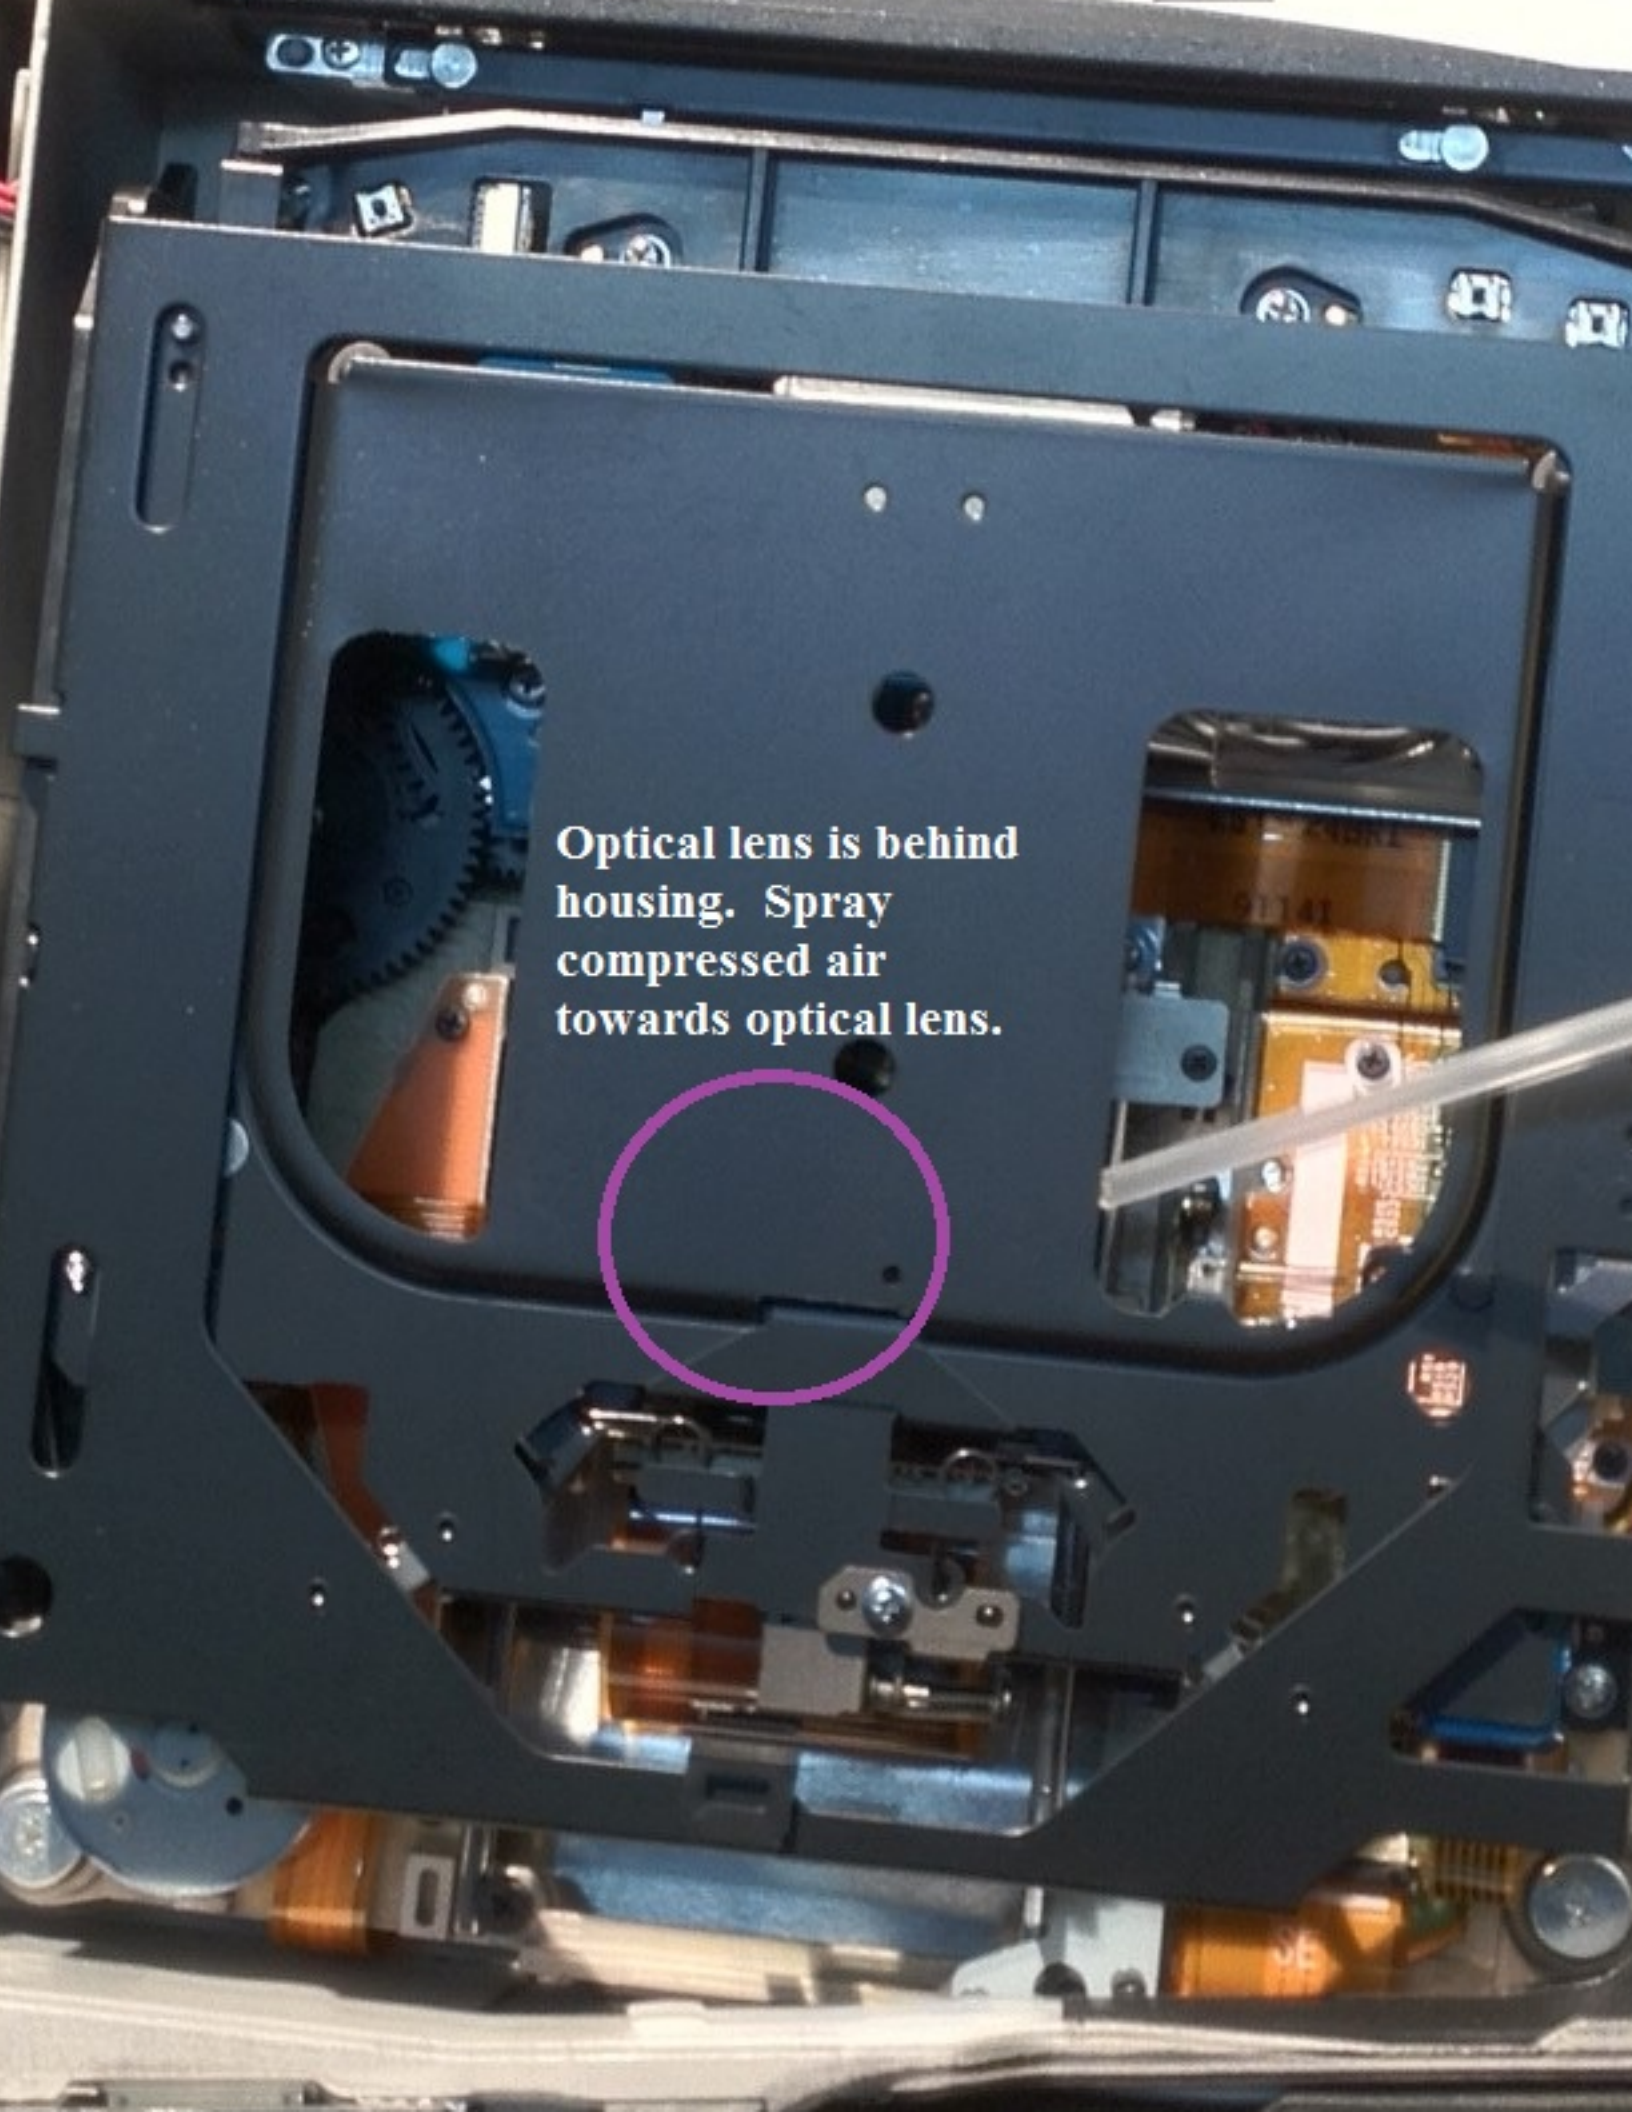

The image shows the interior of a black plastic housing. On the left, a blue gear is visible. On the right, there is a complex assembly with yellow and orange components, possibly a sensor or camera module. A clear tube is positioned to spray air towards a small hole in the housing, which is highlighted by a purple circle. The text "Optical lens is behind housing. Spray compressed air towards optical lens." is overlaid on the image.

**Optical lens is behind housing. Spray compressed air towards optical lens.**



Optical lens is behind housing in circled area.  
Spray compressed air towards the optical lens.

For U.S.A.  
**CAUTION**  
Laser radiation when open and interlock defeated.  
DO NOT STARE INTO BEAM.

For EUROPE  
**CAUTION**  
CLASS 2 LASER RADIATION  
WHEN OPEN AND INTERLOCKS  
DEFEATED.  
DO NOT STARE INTO THE BEAM.

**ATTENTION**  
RADIATIONS LASER DE CLASSE  
2 EN CAS D'OUVERTURE ET DE  
DESACTIVATION DES VERROUS.  
NE PAS REGARDER LE FAISCEAU.

**VORSICHT**  
KLASSE 2-LASERSTRAHLUNG  
WENN GEÖFFNET UND  
SPERREN AUSSER FUNKTION.  
NICHT IN DEN STRAHL SEHEN.

**ADVARSEL**  
LASERSTRÅLING AF KLASSE 2  
VED ÅBNING OG OMGÆLSE AF  
LÅSEANORDNINGER.  
STIR IKKE IND I LYSSTRÅLEN.

**ADVARSEL**  
LASERSTRÅLING I KLASSE 2  
NÅR DEKSELET ER ÅBENT OG  
LÅSENE UTE AV FUNKSJON.  
IKKE STIRR INN I STRÅLEN.

**VARNING**  
KLASS 2-LASERSTRÅLNING.  
NÅR DENNA DEL ÄR ÖPPNAD  
OCH SPÄRRMEKANISMER ÄR  
FRIGJORDA.  
TITTA INTE IN I LASERSTRÅLEN.

**VARO!**  
LUOKAN 2 LASERSÄTELYÄ  
AVIATTUNA JA SISÄISET  
LUKITUKSET POISTETTUNA.  
ÄLÄ KATSO SÄTEESEEN.

注意  
打开时及解锁失败时有激光辐射。  
勿直视光束。

3-272-618-01