



3D Glasses / 3D 眼鏡 / 3D 안경



Instruction Manual / 使用說明書 / 사용설명서



4-412-731-11(1)

WARNING

- Some people may experience discomfort (such as eye strain, eye fatigue, or nausea) while watching 3D video images or playing stereoscopic 3D games on 3D televisions. If you experience such discomfort you should immediately discontinue use of your television until the discomfort subsides. SCE recommends that all viewers take regular breaks while watching 3D video, or playing stereoscopic 3D games. The length and frequency of necessary breaks may vary from person to person – please take breaks that are long enough to allow any feelings of discomfort to subside. If symptoms persist, consult your physician. The vision of young children (especially those under six years old) is still under development. Consult with a physician (such as a pediatrician or eye doctor) before allowing a young child to watch 3D video images or play stereoscopic 3D games. When using any 3D enabled device with your PlayStation®3 system you should read the instruction manual for that device.

Precautions

To help ensure the safe use of this product, carefully read this instruction manual and the product information for the PlayStation®3 system before using it and save the manuals for future reference.

Also, before watching 3D videos or playing stereoscopic 3D games, carefully read the instruction manual for your 3D device.



Safety

- Never disassemble or modify the product.
- Do not expose the product to dust, smoke or steam.
- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not touch the product with wet hands.
- Keep this product out of the reach of small children. Small children may swallow small parts or may wrap the cables around themselves, which may inflict injury or cause an accident or a malfunction.

Use and handling

- Do not place any objects on top of the product. Do not stand on the product.
- Do not throw or drop the product, or otherwise expose it to strong physical impact.
- Do not allow the product to come into contact with liquids.
- Follow the instructions below to help prevent the product exterior from deteriorating or becoming discoloured.
 - Wipe with a soft, dry cloth.
 - Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
 - Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.

Part names and functions

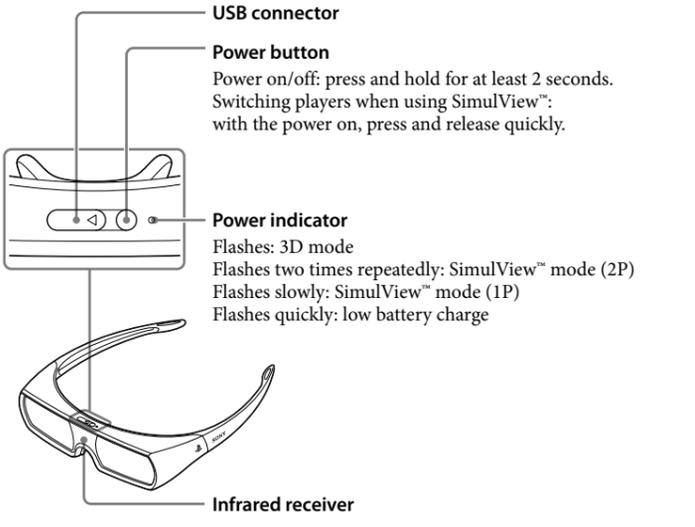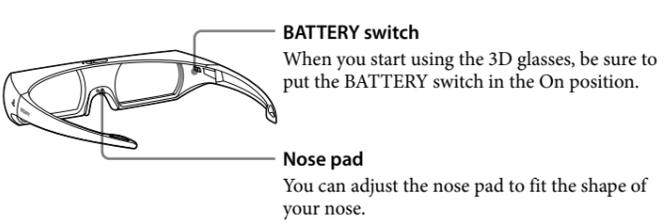

Hint

Be careful not to pinch yourself in the hinges of the 3D glasses.

Charging the 3D glasses

- Open the USB connector cover. Connect a Type A - micro-B USB cable.**
- Connect the other end of the USB cable to a PS3™ system or other supported device.**

The power indicator lights up during charging and turns off when charging is complete.

Hints

- If you start charging the 3D glasses while they are turned on, the power will turn off.
- The 3D glasses cannot be charged when the BATTERY switch is in the Off position.

Using SimulView™ mode

SimulView™ allows two players to view different screen images while playing the same game. To use this feature, the game must support SimulView™ and both players need 3D glasses.

Hint

Images from software that supports the SimulView™ feature are shown in 2D for each player.

Troubleshooting

- 3D or SimulView™ images are not displayed, or the image does not look like a 3D or SimulView™ image.**
- ➔Check that the 3D glasses are turned on.
 - ➔Check that the 3D glasses are charged.
 - ➔The 3D glasses operate by receiving a constant infrared signal from the 3D sync transmitter. The glasses may not operate properly in the following cases.
 - The 3D glasses do not face the 3D sync transmitter.
 - There are objects blocking the path between the 3D glasses and the 3D sync transmitter.
 - There are other infrared communication devices, lighting fixtures, space heaters, or similar equipment nearby.
 - ➔Use the 3D glasses so that they are level with the display. If you are lying down or if your head is tilted, it may be difficult to experience the 3D effect and the colour of the image may change.
 - ➔If the display and the PS3™ system are connected via an AV amplifier or other device, 3D or SimulView™ images may not be displayed correctly. Connect the PS3™ system to the display directly using an HDMI™ cable, and then adjust the video output settings on the PS3™ system.

The 3D glasses are not receiving any power.

- ➔Check that the BATTERY switch is in the On position.

Specifications

Type of 3D glasses	IR active shutter*
Battery type	Built-in, rechargeable lithium-ion battery
Battery voltage	DC 3.7 V
Battery capacity	70 mAh
Power consumption	5 V 100 mA
Operating temperature	5 °C - 35 °C (44 °F - 95 °F)

Dimensions (w × h × d)	Approx. 174 × 41 × 177 mm (6.9 × 1.6 × 7.0 in) (in use), approx. 174 × 41 × 60 mm (6.9 × 1.6 × 2.4 in) (folded)
Weight	Approx. 47 g

* This does not guarantee compatibility with all products that use IR active shutter technology.

Design and specifications are subject to change without notice.

CT
警告

- 有些人在使用3D電視機觀看3D影像或遊玩3D立體遊戲時，可能會感到不舒服（例如眼睛疲勞、噁心等）。若您感到不舒服，請立即停止使用您的電視機，直至不舒服的症狀消退。SCE建議所有使用者在觀看3D影像或遊玩3D立體遊戲時，應該定時休息。休息的時間和次數因人而異，請休息足夠時間，直至不舒服的症狀消退。如果症狀持續存在，請立即就醫。幼童（特別是六歲以下者）的視力仍在發育階段。在讓幼童觀看3D影像或遊玩3D立體遊戲前，應先洽詢醫生（例如小兒科醫生或眼科醫生）。使用PlayStation®3主機時若同時使用任何支援3D的裝置，請先閱讀該裝置的使用說明書。

使用前須知事項

在使用本產品前，請先詳細閱讀本說明書並妥善保存，以備將來參考之用。同時亦請參閱PlayStation®3主機的使用說明書。觀賞3D影像或遊玩3D立體遊戲時，請先詳細閱讀所使用的3D對應裝置的使用說明書。


關於安全

- 切勿分解，改造本產品。
- 請勿將本產品暴露於灰塵、煙霧或蒸氣中。
- 請勿將本產品放在高溫、濕氣極重或受日光直射的地方。
- 請勿用濕手觸摸本產品。
- 請將本產品放在兒童拿不到的地方保管。兒童可能會吞下細小零件，或用連接線纏繞自己，造成人身損傷或導致意外發生、機器故障。

使用與保養

- 請勿在本產品上放置重物。請物在本產品上站立。
- 請勿投擲或掉落本產品，或使其受到強烈的外力撞擊。
- 請勿讓本產品被液體沾濕。
- 請遵循以下使用說明，以免產品外殼變形或變色。
 - 使用乾淨軟布輕柔擦拭。
 - 切勿在產品外殼上長時間放置任何橡膠或乙烯基材質。
 - 切勿使用溶劑或其他化學藥劑。切勿使用經化學處理的擦布擦拭。

各部名稱與功能

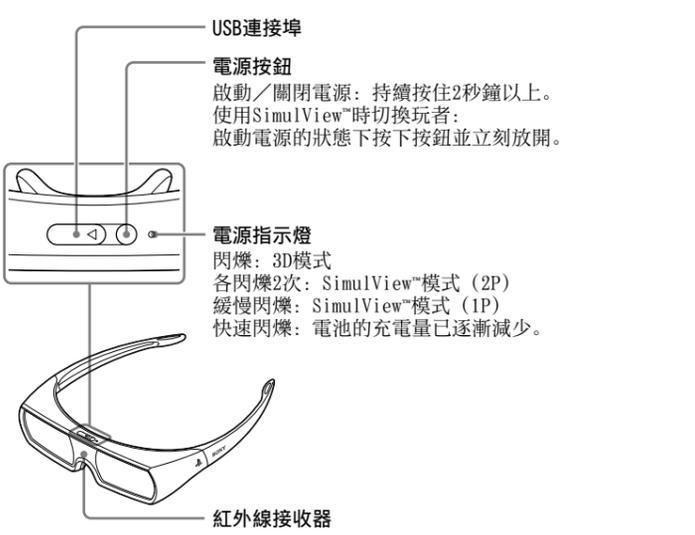

提示

請注意不要被3D眼鏡的鉸鏈(折疊部分)夾傷。

為3D眼鏡充電

- 打開USB連接埠蓋，連接USB連接線。
- 與PS3™等USB連接埠連接。

充電中電源指示燈會亮燈，充電完成後會熄燈。

提示

- 若在啟動3D眼鏡電源的狀態下進行充電，會自動關閉電源。
- 若BATTERY 開關為關時無法進行充電。

使用SimulView™模式

SimulView™是可讓兩個玩者在遊玩相同遊戲時，各自觀看不同影像的機能。使用此機能時需準備支援SimulView™的遊戲及3D眼鏡。

提示

SimulView™的影像會以2D顯示於各玩者的畫面中。

支援

- 無法顯示為3D或SimulView™的影像／看不見3D或SimulView™的影像。**
- ➔請確認是否已開啟3D眼鏡的電源。
 - ➔請確認3D眼鏡是否正在充電。
 - ➔3D眼鏡需透過接收3D同步傳送器的紅外線以進行動作。發生下列情形時可能無法正確啟動。
 - 3D眼鏡未朝向3D同步傳送器。
 - 3D同步傳送器與3D眼鏡之間有障礙物。
 - 附近有紅外線通訊裝置或照明設備、家庭用暖氣裝置等。
 - ➔使用3D眼鏡時請與顯示器保持水平狀態。若躺下或傾斜臉部，可能會較難感受3D效果，或產生影像變色的情形。
 - ➔若使用AV擴大機(喇叭)連接顯示器或PS3™，可能無法正常顯示3D或 SimulView™。請直接使用HDMI™連接線連接顯示器與PS3™，進行PS3™的影像輸出設定。

無法啟動3D眼鏡的電源。


- ➔請確認BATTERY 開關是否為開。

規格

3D 眼鏡方式	IR主動快門(IR Active Shutter)式*
電池種類	內藏型充電式鋰電池
電池電壓	DC 3.7 V
電池容量	70 mAh
耗電量	5 V 100 mA
操作溫度	5 °C~35 °C(44 °F~95 °F)
外殼尺寸	約174 × 41 × 177 mm (6.9 × 1.6 × 7.0 in) (使用時) 約174 × 41 × 60 mm (6.9 × 1.6 × 2.4 in) (折疊時)
重量	約47 g

* 不保證可以觀看所有支援IR主動快門（IR Active Shutter）式產品。

本公司保留在沒有事先通知情況下，變更設計或規格之權利。

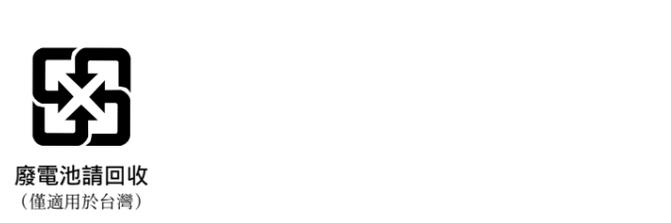

製造年份：請見產品本體標示
製造號碼：請見產品本體標示

