

# » STREAM | jockey Satellite | Radio Products



## Instruction Manual



## Model XTR1

To activate your Satellite Radio Receiver or for latest news and questions regarding SIRIUS® Satellite Radio service visit [sirius.com](http://sirius.com) or call 1-888-539-SIRIUS (7474).

For accessory & product information visit us at [www.getxact.com](http://www.getxact.com).



# KEEPMOVING

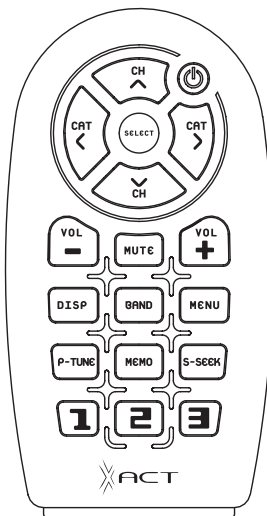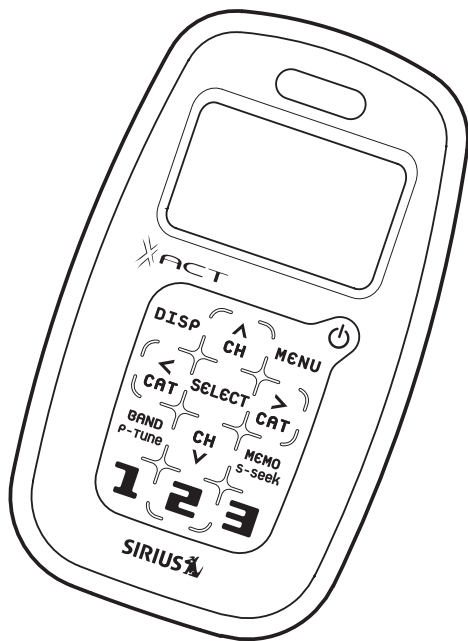

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the Manufacturer for compliance could void the user's authority to operate the equipment.

## COPYRIGHT / TRADEMARKS

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, whether electronic, mechanical, photocopying, recording or otherwise without the prior writing of the publisher.



is a registered trademark of SIRIUS® Satellite Radio. To activate your Satellite Radio Receiver or for latest news and questions regarding SIRIUS® Satellite Radio service visit [sirius.com](http://sirius.com) or call 1-888-539-SIRIUS (7474).

# SAFETY PRECAUTIONS

## Warning

Follow these notifications to avoid any traffic accidents or personal injury:

1. Installation must be performed according to this user guide.
2. Do not install the device where it may obstruct your view through the windshield or of your vehicle's indicator displays.
3. Do not install the device where it may hinder the function of safety devices such as an airbag. Doing so may prevent the airbag from functioning properly in the event of an accident.
4. The installation and usage suggestions contained in this user guide are subject to any restrictions or limitations that may be imposed by applicable law. The purchaser should check applicable law for any restrictions or limitations before installing and/or operating this device.
5. Failure to follow these safety instructions and warnings may result in a severe accident.

## Danger

Be aware of the following precautions to prevent fire and avoid personal injury:

1. To avoid short circuits, never put or leave any metallic objects (coins, tools, etc.) inside the device.
2. If the device emits smoke or strange smells, turn the power off immediately and contact your dealer.
3. Do not drop the device or subject it to strong shocks.
4. If the LCD display becomes damaged or broken, do not touch the liquid crystal fluid. The fluid may be dangerous to your health or even fatal. If the liquid crystal fluid contacts your body or clothing, immediately wash it off with soap and water.

## Caution

Do not operate this device in a way that might divert your attention from driving safely. As a driver, you are responsible for safely operating your vehicle in accordance with traffic safety laws at all times.

# TABLE OF CONTENTS

|   |         |
|---|---------|
| <b>Introduction</b>   | Page 3  |
| Product Overview  | Page 3  |
| Package Contents  | Page 3  |
| <b>Components Guide</b>                                       | Page 4  |
| Xact Stream Jockey SIRIUS® Radio                              | Page 4  |
| Wireless Remote Control                                       | Page 5  |
| <b>Getting Started</b>  | Page 6  |
| Mounting Your Xact Stream Jockey Satellite Radio at Home      | Page 6  |
| Mounting Your Xact Stream Jockey Satellite Radio in a Vehicle | Page 6  |
| Activating Your SIRIUS® Subscription                          | Page 7  |
| <b>Basic Operations</b>                                       | Page 12 |
| Tuning to Different Entertainment Categories                  | Page 12 |
| <b>Searching for Music</b>                                    | Page 13 |
| Searching For Music By Channel                                | Page 13 |
| Searching For Music By Artist/Composer                        | Page 13 |
| Searching For Music By Song                                   | Page 14 |
| Direct Tuning   | Page 14 |
| Presetting Channels   | Page 15 |
| Searching for a Preset Channel/Artist/Song                    | Page 16 |
| S-Seek Function Memo (Memory Search) Button                   | Page 17 |
| Performing S-Seek Function                                    | Page 19 |
| <b>Menu Options Settings</b>                                  | Page 20 |
| <b>Basic Setting Procedure</b>                                | Page 20 |
| SIRIUS® ID  | Page 20 |
| Display Settings  | Page 21 |
| FM Transmitter  | Page 22 |
| Channel Add/Skip  | Page 23 |
| Lock Options  | Page 23 |
| Audio Level   | Page 25 |
| Antenna Aiming  | Page 26 |
| SIRIUS® Satellite Map   | Page 26 |
| Memory Options  | Page 27 |
| <b>Time Features</b>  | Page 28 |
| Clock   | Page 29 |
| Format  | Page 29 |
| Time Zone   | Page 29 |

# TABLE OF CONTENTS

|                      |         |
|----------------------|---------|
| Daylight Saving Time | Page 30 |
| Alarm Clock          | Page 30 |
| Time                 | Page 30 |
| Program Alert        | Page 31 |
| Program Day/Time     | Page 31 |
| Channel Selection    | Page 32 |
| Auto Shutdown        | Page 32 |
| Sleep Mode           | Page 33 |
| Factory Default      | Page 33 |
| Display Messages     | Page 35 |
| Problem Solving      | Page 37 |
| Warranty             | Page 38 |

# INTRODUCTION

## Product Overview

Thank you for purchasing this product! Your new plug and play XACT Stream Jockey satellite radio is specifically designed to mount in a vehicle or indoor/outdoor location.

## Package Contents

Carefully unpack your kit box and ensure that you have the following items.

- XACT Stream Jockey SIRIUS® Receiver
- Wireless Remote Control
- AAA Batteries (for the Wireless Remote Control)
- User's Guide

In the event that any item is missing or if you find any mismatch or damage, promptly contact your dealer.


Your Xact Stream Jockey Satellite Radio Receiver must be used in conjunction with any one of the following Xact Kits, such as the Universal kit, Home kit or Boombox as required by you specific needs.

- |  |                     |
|--|---------------------|
| • Xact Vehicle Kit:                          | Model Number XS021  |
| • Xact Home Kit:                             | Model Number XS022  |
| • Xact Universal Kit:                        | Model Number XS01UK |
| • Xact Sound Pad Portable Boombox:           | Model Number XS024  |
| • Xact Sound System Portable Boombox:        | Model Number XS025  |
| • Xact Sound System Deluxe Portable Boombox: | Model Number XS027  |
| • Xact Power Pod Portable Battery Pack:      | Model Number XS028  |

The easiest way to activate your Satellite Radio Receiver is to log on to [sirius.com](http://sirius.com). You may also call 1-888-539-SIRIUS (7474).

# COMPONENTS GUIDE

## XACT Stream Jockey SIRIUS® Radio

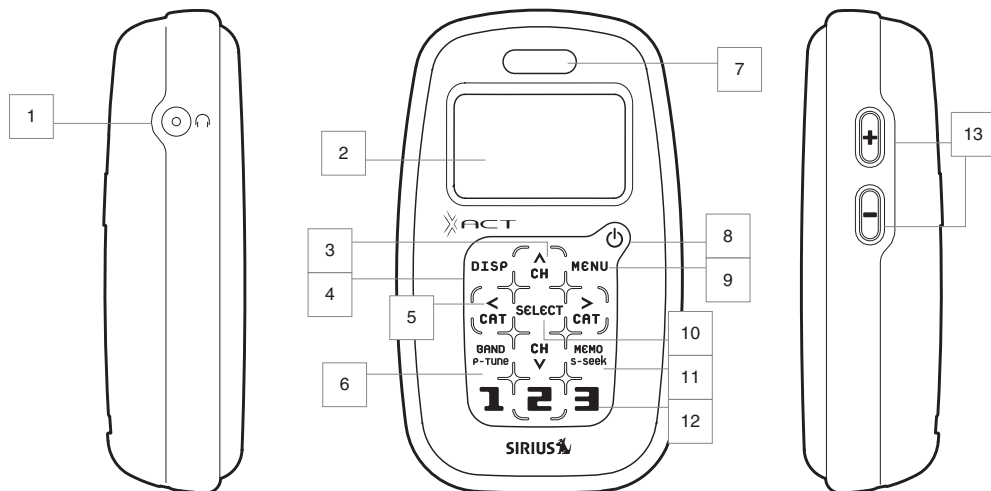


1. Earphone Socket
2. LCD Monitor (Main Display)
3. CH (Channel) (Ascend/Descend Buttons)
4. DISP (Display)
5. CAT (Category) (Left/Right Directional Buttons)
6. BAND (P-TUNE)
7. IR for Remote Control
8. Power Button
9. MENU Options List
10. SELECT (OK Button)
11. MEMO (S-Seek)
12. Numerical Keys
13. Volume Adjustment



## Wireless Remote Control

The wireless remote control packed with your plug and play XACT Stream Jockey satellite radio mirrors the operations of your plug and play XACT Stream Jockey satellite radio receiver from a remote location.

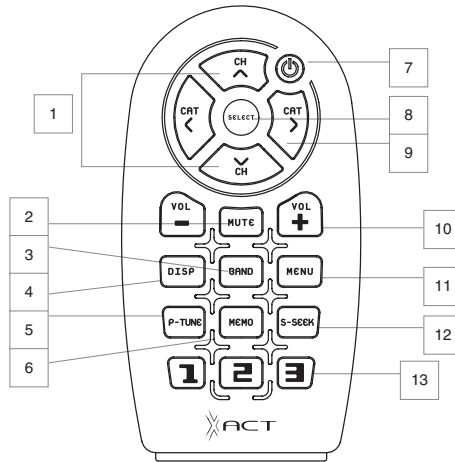

1. CH (Channel) (Ascend/Descend Buttons)
2. MUTE
3. BAND
4. DISP (Display)
5. P-TUNE
6. MEMO
7. Power Button
8. SELECT (OK Button)
9. CAT (Category) (Left/Right Directional Buttons)
10. Volume Adjustment
11. MENU Options List
12. S-Seek
13. Numerical Keys






# GETTING STARTED

## Mounting Your XACT Stream Jockey Satellite Radio at Home

Find an appropriate location near your stereo receiver to install your plug and play satellite radio receiver.

## Mounting Your XACT Stream Jockey Satellite Radio in a Vehicle

Find an accessible location in your vehicle to install your plug and play satellite radio receiver; usually, this is the dashboard.

-  Do not mount your device where it may obstruct your view through the windshield or your view of your vehicle's indicator displays.
-  Do not mount your device where it may impede your access to the vehicle's controls.
-  Do not mount your device where it may hinder the function of safety devices, such as an airbag. Doing so may prevent the airbag from functioning accordingly in the event of an accident.
-  Mount your satellite radio where it can be easily reached.
-  The device must be directly in line-of-sight of the remote controller.

# Activating Your SIRIUS® Subscription

Before beginning to use your new device, you must first register to the SIRIUS® Satellite Radio service.



There are two ways to activate the SIRIUS® Satellite Radio Service:


1. Visit [sirius.com](http://sirius.com) and click activate, then follow the on-screen instructions.
2. Call SIRIUS® at 1-866-845-7474. A representative will help you activate your SIRIUS® Satellite Radio Service.

**Note:** Make sure to have your identification number accessible when calling SIRIUS®.


## Make Note of Your Identification Number

Activating your SIRIUS® Satellite Radio Service:

1. Press MENU to enter the Menu Options settings.

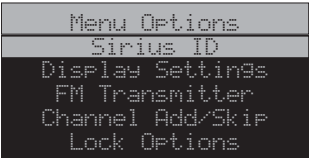


2. Press the  $\wedge_{CH}$  or  $\nabla_{V}$  button select SIRIUS® ID and press the **SELECT** button to enter the sub menu. Your own device's 12-digit SIRIUS® ID Number (ESN) will be displayed on the screen.

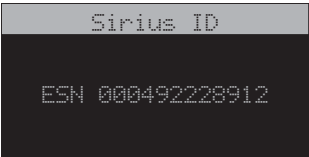

# IF YOU HAVE PURCHASED A VEHICLE KIT


## INSTALLATION

1.

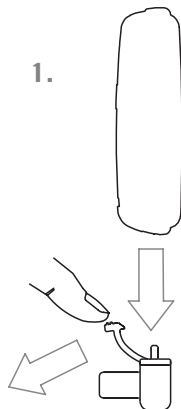


THUMB LATCH  
PULLED BACK...

2.

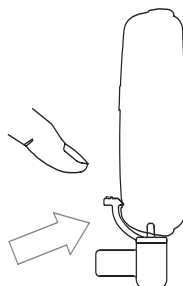


...THUMB LATCH RELEASED,  
BRACKET LATCH CLIPS RECEIVER  
SECURELY IN PLACE

3.

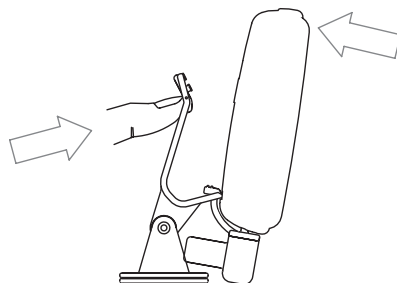



PLACE CAR BASE HOOKS  
INTO LOCKING SLOT & PUSH  
THUMB TAB IN...

4.

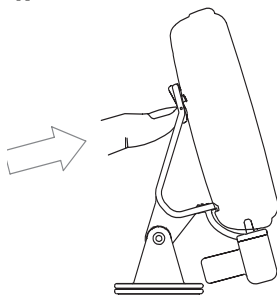

...ROTATE RECEIVER UNIT BACKWARDS  
TO ENGAGE HOOKS


5.

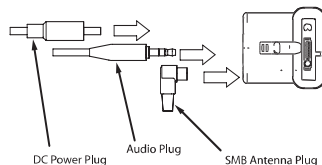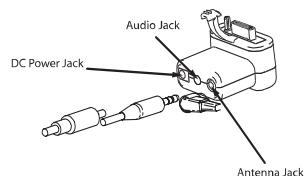

# IF YOU HAVE PURCHASED A HOME KIT


## INSTALLATION

1.

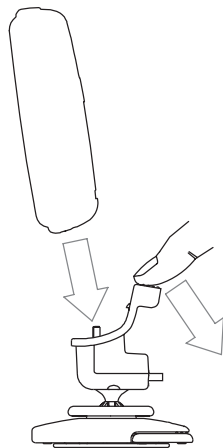


THUMB LATCH  
PULLED BACK...

2.

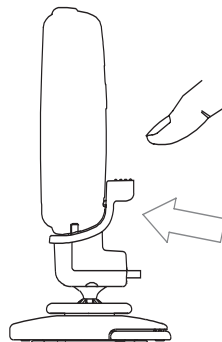



...THUMB LATCH RELEASED,  
BRACKET LATCH CLIPS RECEIVER  
SECURELY IN PLACE

3.

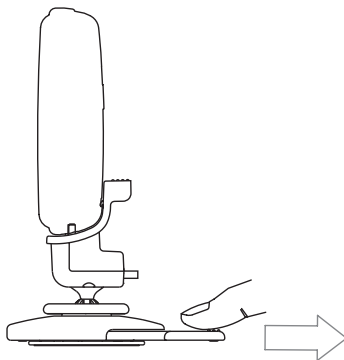

FOR HOME DESKTOP  
APPLICATION, USER PULLS OUT  
FEET USING THUMB GRIP

4.

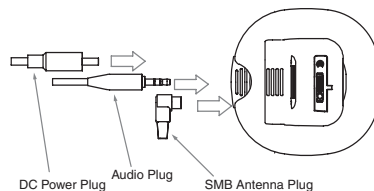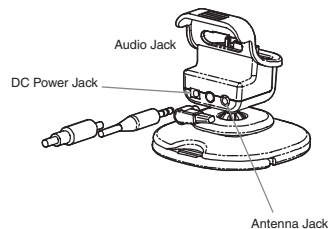

# IF YOU HAVE PURCHASED A UNIVERSAL KIT


## INSTALLATION

1.




MOUNT TO VEHICLE  
DASH BOARD VIA  
ADHESIVE TAPE

2.

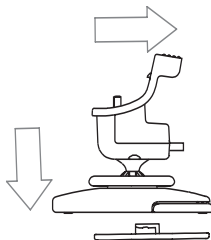


PLACE CRADLE OVER  
MOUNT PLATE SLIDE BACK  
TO LOCK FOR VEHICLE  
INSTALLATION

3.

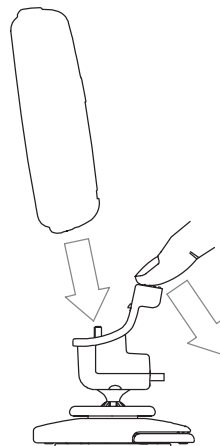


THUMB LATCH  
PULLED BACK...

4.

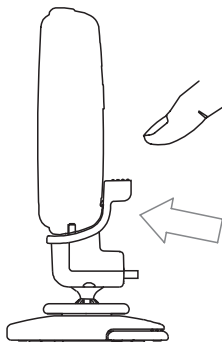



...THUMB LATCH RELEASED,  
BRACKET LATCH CLIPS RECEIVER  
SECURELY IN PLACE

5.

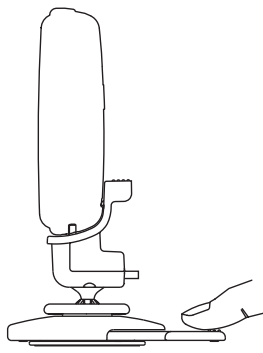

FOR HOME DESKTOP  
APPLICATION, USER PULLS OUT  
FEET USING THUMB GRIP


6.

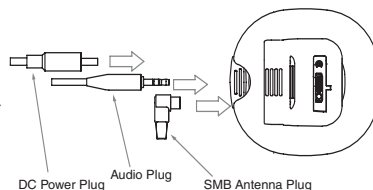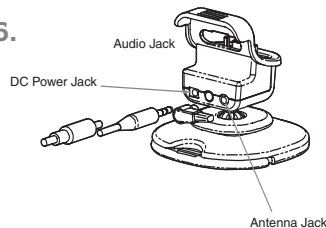


# IF YOU HAVE PURCHASED A BOOMBOX KIT

## INSTALLATION


1. PUSH RECEIVER ONTO CONNECTOR

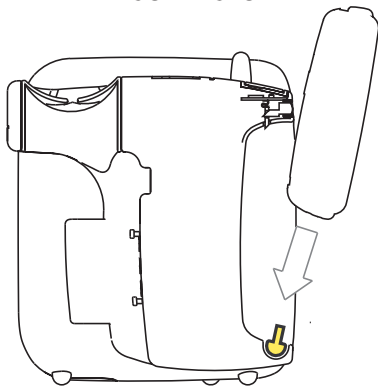

2. ROTATE RECEIVER AND CONNECTOR INTO BOOMBOX

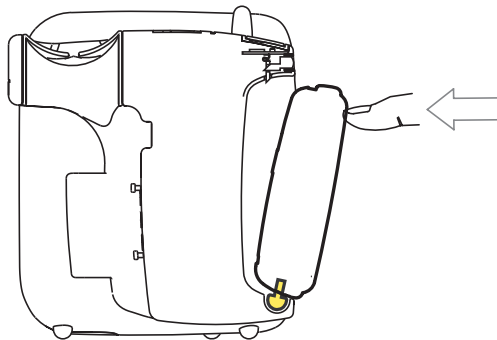


3. LATCH BOOMBOX LOCKS RECEIVER IN PLACE

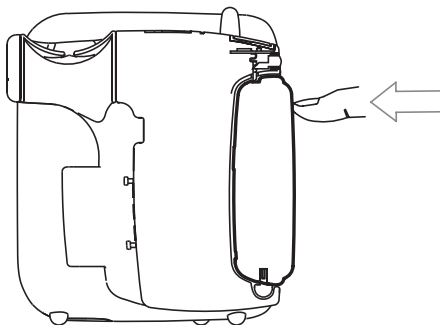


# BASIC OPERATIONS

After your SIRIUS® subscription is activated, the Normal (default) Operation screen will pop up.

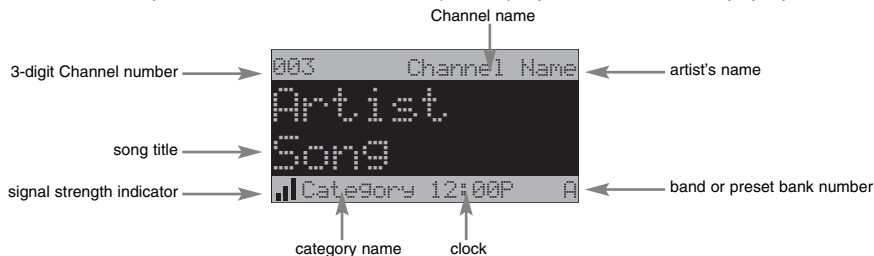


## Tuning to Different Entertainment Categories

1. Press the CAT button to scroll through music and entertainment categories.

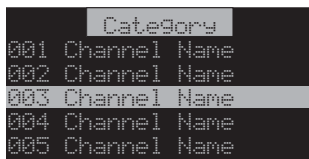

2. Press the CH button to search for channels.
3. When the category you desire is highlighted (for example, “Jazz”), press the **SELECT** button to confirm the setting. The channel will change and the display will revert to the Default Screen for the new channel.

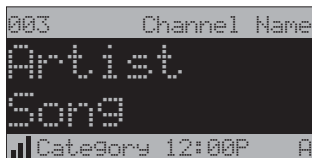

4. To exit this mode without changing to a new channel, press and hold the **DISP** button.




## Searching Music

Your satellite radio offers you three ways to seek and select music: by the channel name, by artist/composer and by song title.

### Searching For Music By Channel (Channel List)

1. Press and hold the **DISP** button while in Normal Operation mode. The Channel list screen will be displayed, numerically indicating all available channels, regardless of music category.

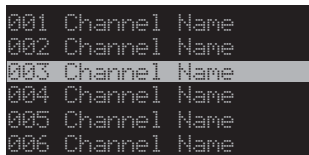


2. Press the **CH** <sup>^</sup> or **CH** <sub>v</sub> button continuously to choose a preferred channel and press the **SELECT** button to confirm the setting.
3. Press and hold the **DISP** button again to exit from the operation.

**Note:** The selected channels will remain playing until you make a new change.

### Searching For Music By Artist/Composer (Artist/Composer List)


1. Press and hold the **DISP** button while in Normal Operation mode.
2. You will first see the Channel list menu. Press the **DISP** button again. The Artist/Composer list screen will be displayed, listing all currently playing artists, regardless of category. On channels that broadcast “composer” the Composer name will be displayed with the Artist name separated by a slash “/”.

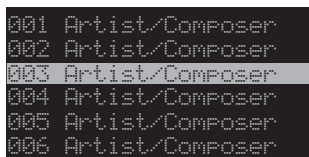

3. Press the **CH** <sup>^</sup> or **CH** <sub>v</sub> button continuously to choose a preferred artist and press the **SELECT** button to confirm the setting.
4. Press and hold the **DISP** button again to exit from the operation.

## Searching For Music By Song (Song Title List)

1. Press and hold the **DISP** button while in Normal Operation mode.
2. Continue pressing the **DISP** button twice. The Song Title list screen will be displayed, indicating all currently playing songs, regardless of category. The song title data is listed in ascending order.

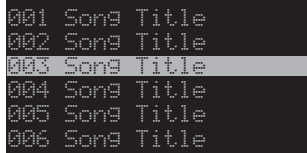

```
001 Song Title
002 Song Title
003 Song Title
004 Song Title
005 Song Title
006 Song Title
```

3. Press the  $\wedge_{CH}$  or  $\vee_{CH}$  button continuously to choose a preferred song and press the **SELECT** button to confirm the setting.
4. Press and hold the **DISP** button again to exit from the operation.

## Direct Tuning

Your XACT Stream Jockey satellite radio enables you to access your selected channels directly.



```
Enter Channel

#

◀ 0123456789 ▶
```

1. Press the **SELECT** button to activate the Direct Tuning mode.
2. The corresponding window is displayed and asks you to enter the desired channel number (3 digits).
3. Use the  $\leftarrow_{CAT}$  or  $\rightarrow_{CAT}$  left/right directional button until the desired digit is highlighted.
4. Press the **SELECT** button to confirm the setting.

# Presetting Channels

Your XACT Stream Jockey satellite radio allows you to preset 18 channels. This design enables you to directly select between 6 different bands of preset channels (identified as A, B, C, D, E and F). Each band contains 3 specific channels (indicated as A-1, A-2, A-3....F-1, F-2 and F-3).

- 1. Press the  $\overset{\wedge}{\text{CH}}$  or  $\overset{\text{CH}}{\vee}$  button to search for channels.
- 2. Press the **BAND** button to switch to your desired bands (A-F) according to your preference.




- 3. Once the desired band is set, press and hold the 1,2 or 3 numerical button to select the specific channel. The list will then be recorded in memory.
- 4. The selected preset number will remain lit on the display screen to demonstrate that it has been memorized.



**Note:** If a channel is already recorded in the **BAND P-TUNE** preset list, the new channel will overwrite the old one.

## Searching for a Preset Channel/Artist/Song

1. Press and hold the **BAND** button while in Normal Operation mode. The screen will switch between the Normal Operation mode and the Preset Tuning mode.
2. Press and hold the **DISP** button until the Preset Channel list pops up.
3. Press the **DISP** button continuously until the preferred Preset Channel list is indicated.
4. Each time you press the **DISP** button, the Preset lists switches from “Channel Name” to “Artist/Composer” to “Song Title” cyclically.

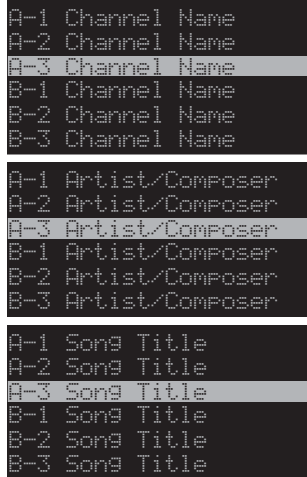

5. Press the **SELECT** button to confirm the setting.

## S-Seek Function\_MEMO (Memory Search) Button

When in this mode, you can activate the memory search function. This will instruct your satellite radio to search the current incoming SIRIUS® signal and alert you when a song you have saved is being played.



### To Store the Information

Under the Normal Operation mode or the Preset Tuning mode, press the <sup>MEMO</sup><sub>s-seek</sub> button. The current program data information is recorded in memory.



### What If You Have Already Recorded the Same Artist/Song?


Your satellite radio automatically checks your recorded data information and compares it with the newly selected program. If the newly selected program has already been recorded, to avoid duplication no entry will be made.



### What If the Program Storage is Full?

If the Program Storage is full, a “Memory Full” message will pop up on the screen for a moment, followed by a “Replace” or “Cancel” message.


1. Under Normal Operation mode or in Preset Tuning mode, press the <sup>MEMO</sup><sub>s-seek</sub> button.

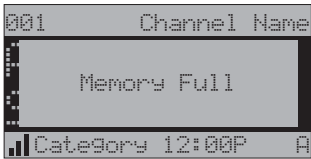

2. Press the <sup>^</sup><sub>CH</sub> or <sup>CH</sup><sub>v</sub> button to select either “Replace” or “Cancel”.
3. Press the <sup>SELECT</sup> button to confirm the setting.

**Replace:** Do the following to select the program to be overwritten with the new Artist/Composer or Song Title.

- 3a. Press the <sup>SELECT</sup> button, and the follow-up screen will be displayed.

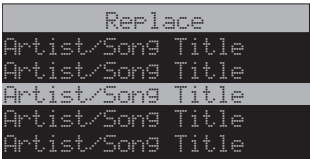


- 3b. Press the <sup>^</sup><sub>CH</sub> or <sup>CH</sup><sub>v</sub> button to scroll the the programs.
- 3c. Press the <sup>SELECT</sup> button to replace with the new selection.

**Cancel:** To avoid overwriting the stored selection, wait for the original screen to be displayed again.

## Performing the S-Seek Function


Whenever you turn your satellite radio on, it automatically searches the incoming signal to determine if a match exists between the signal and the artist/composers or song titles that you have recorded in memory (except when S-seek is set to Off).

1. Press and hold the **MEMO** **S-seek** button. The recorded programs lists is displayed.
2. Press and release the **SELECT** button while in S-seek mode.
3. Two selectable options displayed on the screen.
4. Select "Off" (to deactivate the programs searching) or "On" (to activate the program searching) by using the **^** **CH** or **^** **CH** button, then press **SELECT** button to confirm the setting.

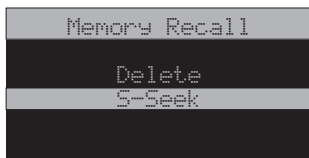

### Deleting the Recorded Programs (Artist/Song)

1. Press and hold the **MEMO** **S-seek** button. The recorded programs list is displayed.
2. Press the **^** **CH** or **^** **CH** button to scroll through programs.
3. Press the **SELECT** button to enter the sub-menu.
4. Press the **^** **CH** or **^** **CH** button to select Delete.
5. Press the **SELECT** button again to confirm the setting.

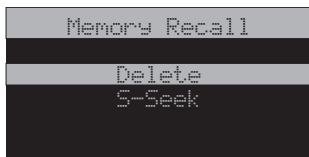

# MENU OPTIONS SETTINGS

The following options are included on the Menu Options list:


- SIRIUS® ID
- Display Settings
- FM Transmitter
- Channel Add/Skip
- Lock Options
- Audio Level
- Antenna Aiming
- Memory Options
- Time Features
- Factory Default

## BASIC SETTING PROCEDURE

1. Press the **MENU** button. The Menu Options list is displayed on the screen.
2. Press the **▲** or **CH** button to select a desired item
3. Press the **SELECT** button, and the selected Option Setting pops up.
4. Set the Option Setting to your preference according to the steps described below.
5. To exit the Menu Options list, press and hold the **MENU** button.


### SIRIUS® ID

Refer to “Make a Note of Your Identification Number” for details.

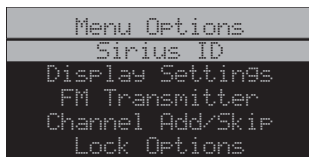



## Display Settings

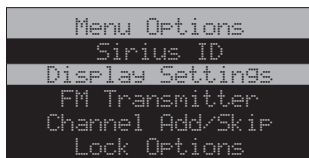


The following adjustments can be made:

- Brightness Control
- Contrast Control


**Brightness Control:** A 10-segment horizontal bar graph is displayed. Move the  $\leftarrow_{\text{CAT}}$  or  $\rightarrow_{\text{CAT}}$  left/right directional button to adjust the dimming control function accordingly. By pressing the  $\text{SELECT}$  or  $\text{MENU}$  button or by taking no action, you will return to the Menu Operations list.



**Contrast Control:** A 10-segment horizontal bar graph is displayed. Move the  $\leftarrow_{\text{CAT}}$  or  $\rightarrow_{\text{CAT}}$  left/right directional button to adjust the contrast control function accordingly. By pressing the  $\text{SELECT}$  or  $\text{MENU}$  button or by taking no action, you will return to the Menu Operations list.

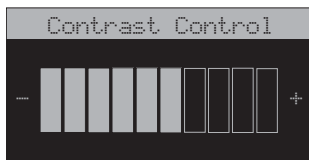


# FM Transmitter

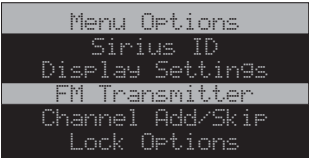


The following adjustments can be made:


- Frequency
- FM On/Off

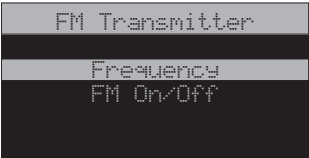

Frequency: enables you to select any one of the pre-programmed FM channels. Press the <sup>^</sup>CH or <sup>CH</sup>▼ button to select a desired channel, then press the <sup>SELECT</sup> button to confirm the setting. To exit this function, press <sup>MENU</sup> or <sup>SELECT</sup> button.

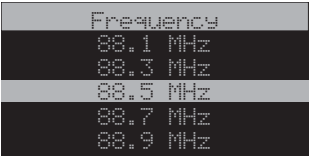


**FM On/Off:** To activate/deactivate the FM transmitter.

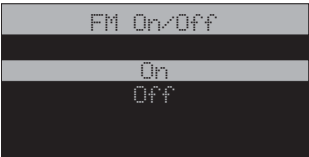

## Channel Add/Skip


You can add or skip new/unwanted channels while tuning. When you enter this option, a channel list is displayed, and the current channel playing will be highlighted.

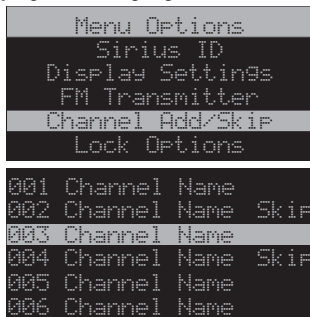

Press the  $\wedge$  <sub>CH</sub> or  $\vee$  <sub>CH</sub> button to navigate the list and highlight the channel you want to skip, then press the **SELECT** button to confirm the setting. A “Skip” message pops up next to the channel displayed. To activate the skipped channel again, repeat the same steps and delete the “Skip” message. While adding the channel, the message “Skip” is removed from alongside the channel name, and the system will no longer skip this channel. To exit this function, press **MENU** button.


## Lock Options

Access to particular channels can be set with codes. When you intend to tune in to these particular channels, your receiver will require you to enter the access passwords.

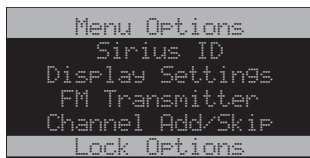

The following adjustments can be made:


- Lock/Unlock
- Edit Code

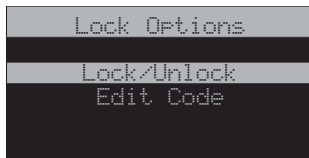

**Lock/Unlock:** When using Lock/Unlock for the first time, you are asked to type in the 4-digit code that is used to Lock/Unlock the channel access. Press the “0” button four times to enter the default Access Code: 0000



Thereafter, each time you enter this mode, a channel list will be displayed and the currently playing channel will be highlighted. Press the  $\wedge_{CH}$  or  $\vee_{CH}$  button to select a channel you want to lock, then press the **SELECT** button to confirm the setting. The message “Lock” pops up next to the channel.

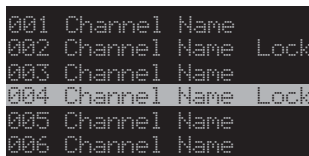

**Edit Code:** You may change the access password (default code: 0000) to your preference.



1. When you enter this mode, press the  $\leftarrow_{CAT}$  or  $\rightarrow_{CAT}$  left/right directional button to enter the current access code (4-digit default code: 0000 or your previously entered current code) A “New Code” message pops up.




2. Enter the numbers for your new access code by using the  $\leftarrow$  CAT or  $\rightarrow$  CAT left/right directional buttons. The confirmation screen will then be displayed.
3. Enter the numbers for your new access code again by using  $\leftarrow$  CAT or  $\rightarrow$  CAT left/right directional buttons. Your new access password is now modified.




## Audio Level

Your plug and play satellite radio enables you to adjust audio level. When entering this option, a 10-segment horizontal bar graph is displayed on the screen with a (-) sign to the left and a (+) sign to the right.

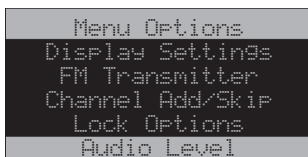


Press the  $\leftarrow$  CAT or  $\rightarrow$  CAT left/right directional button to adjust the suitable audio level, then press the SELECT button to confirm the setting.

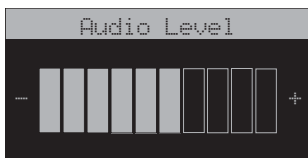

## Antenna Aiming

**Note:** This adjustment setting is required only when you use your device at home. This way, you can assure optimum reception when mounting your SIRIUS® antenna.

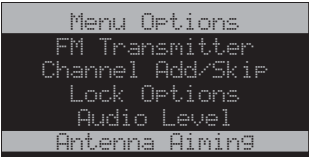

Upon entering this option, two 10-segment horizontal bar graphs are displayed with a (-) sign to the left and a (+) sign to the right. One is labeled “SAT” (satellite signal) and the other “TER” (terrestrial signal strength). The current setting is indicated on the bar graphs. Move the antenna in a location according to the SIRIUS® Satellite Map placement indicated below which provides the strongest signal indication.



## SIRIUS® Satellite Map

Due to the paths of SIRIUS® satellites over the US, the best location for the antenna in your home depends on where you live. Use the map below as a general placement guideline.

Area 1 : Place the antenna at an EAST - facing window.

Area 2 : Place the antenna OUTSIDE, away from any overhead obstructions.

Area 3 : Place the antenna at a NORTH WEST - or WEST - facing window.




Area 4 : Place the antenna at a WEST - or NORTH - facing window.

Area 5 : Place the antenna at a NORTH - facing window.

Area 6 : Place the antenna at a NORTH - or EAST - facing window.


## Memory Options

In this mode, you can activate or deactivate the Memory Search Function (S-seek). You can also remove all of the 18 memory locations.

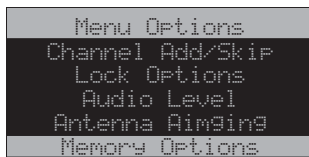

The following adjustments can be made:

- Auto Memory Search
- Clear All

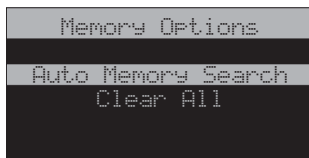

**Auto Memory Search:** Press the  $\wedge$  <sub>CH</sub> or  $\vee$  <sub>CH</sub> button to select either "On" or "Off", then press the **SELECT** button to implement the setting.

**On:** To activate the S-seek function.

**Off:** To deactivate the S-seek function.



**Clear All:** Press the  $\hat{\text{CH}}$  or  $\checkmark^{\text{CH}}$  button to select either “Yes” or “No”.


The message “Are You Sure?” will pop up on the screen. Press the **SELECT** button to confirm the setting.

**Yes:** will REMOVE all recorded channels.

**No:** will CANCEL the deletion.



## Time Features

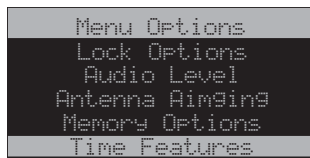


The following adjustments can be made:

- Clock
- Alarm Clock
- Program Alert
- Auto Shutdown
- Sleep Mode






**Clock:** This option enables you to set up the time to be displayed on the screen. Time is kept directly by the SIRIUS® satellite and is transmitted in GMT FORMAT.

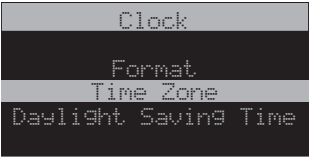


**Format:** Press the  $\wedge_{CH}$  or  $\vee_{CH}$  button to select either the “12 Hour” (default) or the “24 Hour” mode, then press the **SELECT** button to confirm the setting.

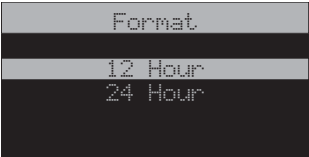


**Time Zone:** Press the  $\wedge_{CH}$  or  $\vee_{CH}$  button to select the correct time zone for your region, then press the **SELECT** button to confirm the setting.

- (GMT -9:00) Alaska
- (GMT -8:00) Pacific
- (GMT -7:00) Mountain
- (GMT -6:00) Central
- (GMT -5:00) Eastern
- (GMT -4:00) Atlantic
- (GMT -3:30) Newfndlan

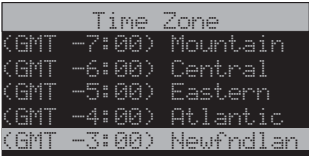

**Daylight Saving Time (DST):** Activate this option if your area is subject to DST. Press the  $\wedge_{CH}$  or  $\vee_{CH}$  button to select “DST Observed” (default) or “DST Not Observed” setting. Then press the  $\text{SELECT}$  button to confirm the setting.

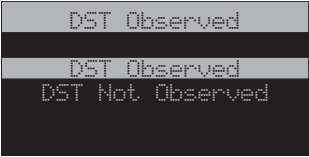


**Alarm Clock:** You can set your plug and play satellite radio to turn on at a selected time.

**Set Alarm:** Press the  $\wedge_{CH}$  or  $\vee_{CH}$  button to select either the “On” or “Off”(default) setting, then press the  $\text{SELECT}$  button to confirm the setting.



**Time:** The default time is 12:00 pm. Press the  $\wedge_{CH}$  or  $\vee_{CH}$  button to adjust the hour. Press the  $\lt_{CAT}$  or  $\gt_{CAT}$  button to adjust the minute. “AM” or “PM” is indicated automatically. Press the  $\text{SELECT}$  button to confirm the setting.

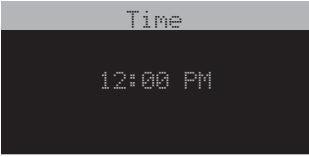


**Program Alert:** This option allows your XACT Stream Jockey plug and play satellite radio to tune itself to a pre-selected channel at a pre-selected time.


**Note:** To use your programmed setting, make sure to set “Program Alert” to “Program Alert On”.

The following settings can be made in this sub-menu screen:


- Program Time/Day (default-12:00 PM - Monday)
- Channel Selection (default-Currently Playing Channel)
- Program Alert (default-Off)

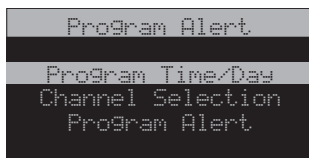

**Program Time/Day:** Press the  $\hat{\text{CH}}$  or  $\text{CH}^{\vee}$  button to select either “Time” or “Day”. Then press the  $\text{SELECT}$  button to confirm the setting.

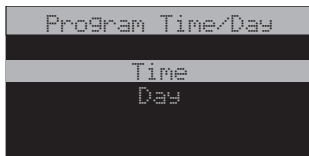


**Time:** Press the  $\hat{\text{CH}}$  or  $\text{CH}^{\vee}$  button to adjust the minute and the  $\text{CAT}^{\leftarrow}$  or  $\text{CAT}^{\rightarrow}$  button to adjust the hours. Then press the  $\text{SELECT}$  button. AM or PM displays automatically as you advance the time.

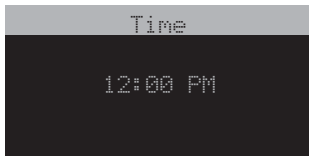


**Day:** Press the  $\wedge_{CH}$  or  $\vee^{CH}$  to navigate the day: Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Daily or Sunday. Press the  $SELECT$  button to confirm the setting.




**Channel Selection:** Press the  $\wedge_{CH}$  or  $\vee^{CH}$  button to scroll through the channel list and select the channel of your preference. Press the  $SELECT$  button to confirm the setting.

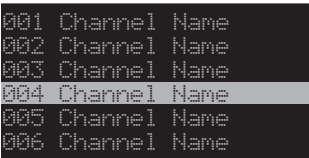


**Program Alert:** Press the  $\wedge_{CH}$  or  $\vee^{CH}$  to select either the "On" or "Off" setting. Press the  $SELECT$  button to confirm the setting.

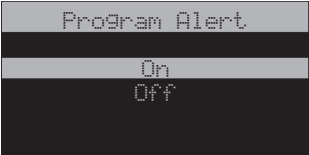

**Auto Shutdown:** This option will automatically turn your satellite radio off after an hour of inactivity. An audible tone will sound one minute before your device turns off. Press the  $\wedge_{CH}$  or  $\vee^{CH}$  to select the "Enabled" or "Disabled" setting. Press the  $SELECT$  button to confirm the setting.

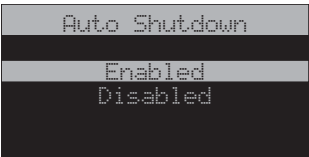

**Sleep Mode:** When entering this mode, you can program your XACT Stream Jockey satellite radio to shutdown after a pre-selected period of time.

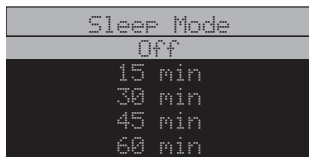

The following adjustments can be made:

**Off** (default)

**15 min.**

**30 min.**

**45 min.**

**60 min.**

Press the  $\wedge_{\text{CH}}$  or  $\vee^{\text{CH}}$  button to select the time. Press the **SELECT** button to confirm the setting. Your XACT Stream Jockey satellite radio receiver will now turn off after the selected time has passed. If “Off” is selected, the Sleep Mode will be canceled.

## Factory Default

The following items can be reset to their default mode. A message will pop up that reads “Restore Settings?” before you can reset the item to its default mode.

Press the  $\wedge_{\text{CH}}$  or  $\vee^{\text{CH}}$  button to select either “Yes” (to reset) or “No” (to cancel the reset). Press the **SELECT** button to confirm the setting.

Items revert to their original factory settings as follows:

All Presets revert to empty

Display Dimming to 70%

Display Contrast to 50%

FM Transmitter to “On”

Audio Output Level to 50%

Access to all skipped streams restored

Memory Search On

Memory locations will be erased

12-Hour Clock Format

Eastern time zone

Daylight savings time observed

Alarm Off

Alarm Time 12:00pm

Program Alert Time 12:00pm

Program Alert Day Monday

Program Alert Channel Number (current)

Auto Shutdown Off

Sleep Mode Off


Default Font Size/Type “5x7”

All preset channels and stored artists/composers and songs will also be removed, and all skipped channels will become “un-skipped” (locked channels remain locked).

# DISPLAY MESSAGES


## Acquiring Signal

When the audio signal is lost, a pop-up window with the message “Acquiring Signal” is displayed until the signal is recovered.

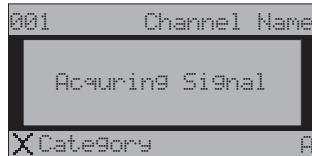

## Antenna Not Detected

When no antenna is detected and the signal is lost, a pop-up window with the message “Antenna Not Detected” is displayed until an antenna is detected and the signal is acquired.

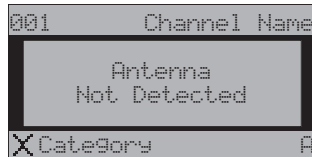

## Updating Channels

When a GCI (Global Control Information) update from the SIRIUS® broadcast system is detected, a pop-up window with the message “Updating Channels X% Completed” is displayed until the GCI update is complete.



# Subscription Updated

When a subscription update (PSV) from the SIRIUS® broadcast system is detected, a pop-up window with the message “Subscription Updated Anykey to Continue” is displayed for at least 3 seconds.





# Mute

A single press of the “Mute” button will temporarily disable all analog and digital outputs from your device. Use your remote control to implement this operation.



# Keypad Lock

You can temporarily lock the panel or front panel controls of your XACT Stream Jockey satellite radio receiver. Simultaneously press the  and  volume control buttons to activate the keypad lock function.





# PROBLEM SOLVING

## Problem Solving Section

For your assistance, we have listed a few common problems below.

### **The Satellite Receiver does not work.**

Please check the Power Cables. Make sure you have contacted SIRIUS® to activate your Satellite Radio subscription 1-888-539-SIRIUS (7474).

### **I have no sound from my Satellite Receiver.**

Check the audio cables and make sure they are plugged in correctly.

Check the FM Transmitter Setting and make sure that your FM radio is set to the correct channel.

### **The LCD displays Acquiring Signal.**

When the audio signal is lost, a pop-up window with the message “Acquiring Signal” is displayed until the signal is recovered.

### **The LCD Displays Antenna not Detected.**

When no antenna is detected and the signal is lost, a pop-up window with the message “Antenna Not Detected” is displayed until an antenna is detected and the signal is acquired.

### **Reception is weak or the audio has static and is unclear.**

Check that the satellite antenna is connected and not faulty. Change the location of the Antenna making sure it is away from obstructions, see page 26.

# WARRANTY

## Warranty Information

### XACT Communication

#### One-Year Limited Warranty

This limited warranty sets forth all **XACT Communication** responsibilities regarding your product. There are no other expressed or implied warranties from **XACT Communication**.

### Warranty Service Provided

If you purchased the product new from a retail vendor, **XACT Communication** warrants the equipment against defects in material and workmanship for a period of one (1) year from the original date of purchase. This warranty is in lieu of all other express warranties. This warranty begins when you purchase the product and continues for one (1) year unless you sell or rent the unit, in which case the warranty stops.

**XACT Communication** disclaims any implied warranty, including the warranty of merchantability and the warranty of fitness for a particular purpose, as of the date of one year from your original purchase of the product. **XACT Communication** assumes no responsibility for any special, incidental, or consequential damages.

This warranty gives you specific legal rights and you may have other rights which vary from state to state. Some states do not allow the exclusion or limitations of special, incidental, or consequential damages or limitations on how long a warranty lasts, so the above exclusion or limitation may not apply to you.

### Warranty Service Not Provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, or the affixing of any attachment not provided by **XACT Communication** with the equipment, and/or loss of parts. This warranty is voided in the event any unauthorized person opens, alters, or repairs the product.

All **XACT Communication** equipment being returned for repair must be suitably packaged.

# WARRANTY

## What To Do for Warranty Service

During the first thirty (30) days, a defective product is eligible for over-the-counter exchange at the retailer from whom it was purchased. After thirty (30) days, the defective product should be returned to the authorized service center. Please allow a minimum of 2-3 weeks for the return of your product. For the shipping address of the authorized service center, call one of the telephone numbers given below.

Your product will be repaired or replaced if examination by the service center determines the product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier prior to repair. A product received with missing parts or with damage due to abuse, inadequate packing or some other noncompliance with this limited warranty will be returned to you C.O.D., freight collect.

**NOTE:** A product received which was not made by **XACT Communication** or which is not defective as determined by our test procedures will not be repaired and will be returned to you C.O.D., freight collect.

## To Obtain Warranty Service

- Provide proof of the date of purchase within the package.
- Prepay all shipping costs to the authorized service center.
- Include a return shipping address within the package.

Please retain your sales receipt, the carton, the packing materials, and the printed material. The original carton is the best shipping container for the Product should you have to return it.

## For your reference:

Model Number \_\_\_\_\_

ESN Number \_\_\_\_\_

S/N Number \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Name of Dealer \_\_\_\_\_

***XACT Communication Customer Service Telephone Number:***  
***1-866-466-XACT (9228)***

***OUTSIDE THE U.S.A. AND CANADA CALL: 1-212-481-7950***

***Visit Us on the Web: [www.getxact.com](http://www.getxact.com)***

To activate your Satellite Radio Receiver or for latest news and questions regarding SIRIUS® Satellite Radio service visit [sirius.com](http://sirius.com) or call 1-888-539-SIRIUS (7474).



Call Toll Free 1-866-466-XACT (9228)  
or Visit our Website:

[www.getxact.com](http://www.getxact.com)