



1 Adjusting transposition, touch sensitivity, etc.


33 : Reference page in the H11 Owner's Manual.

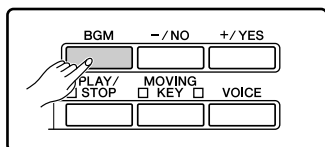


While holding down the [BGM] button, press the highlighted keys shown below to adjust transposition, touch sensitivity, and switch the song auto revoice on/off.

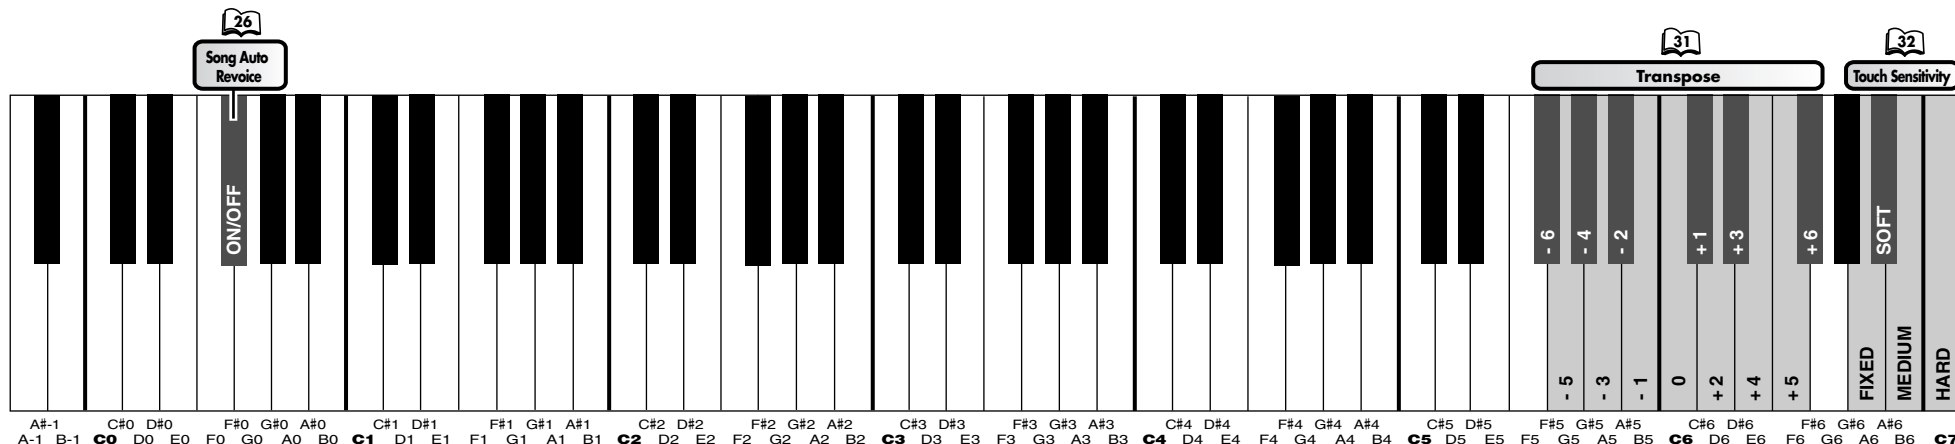


2 Changing the Reverb and Dual settings

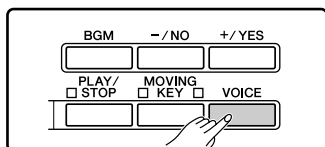


While holding down the [VOICE] button, press the highlighted keys shown below to change the settings of the Reverb effect and other keyboard functions such as Octave Shift and Dual balance.

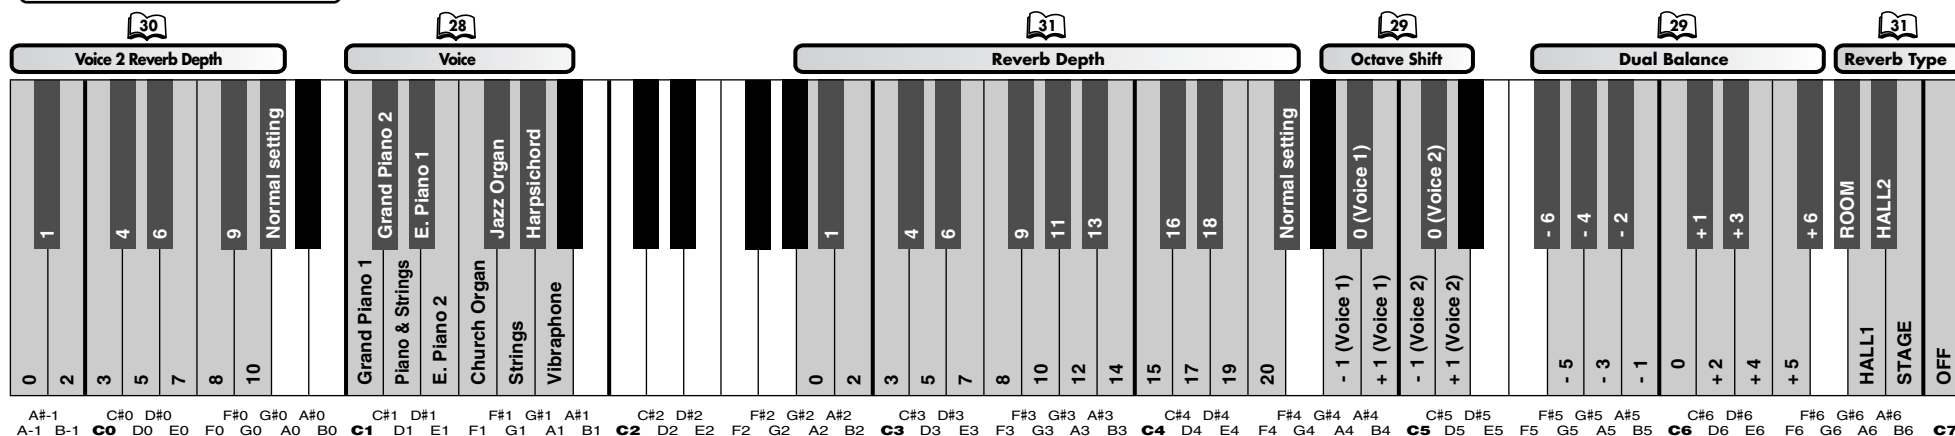


3 Checking the version number and selecting the part (channel) for the Moving Key feature

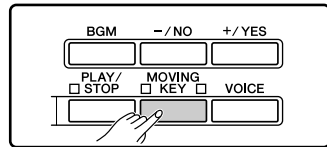

While holding down the [MOVING KEY] button, press the highlighted keys shown below to check the version number and select the part (channel) for the Moving Key feature.

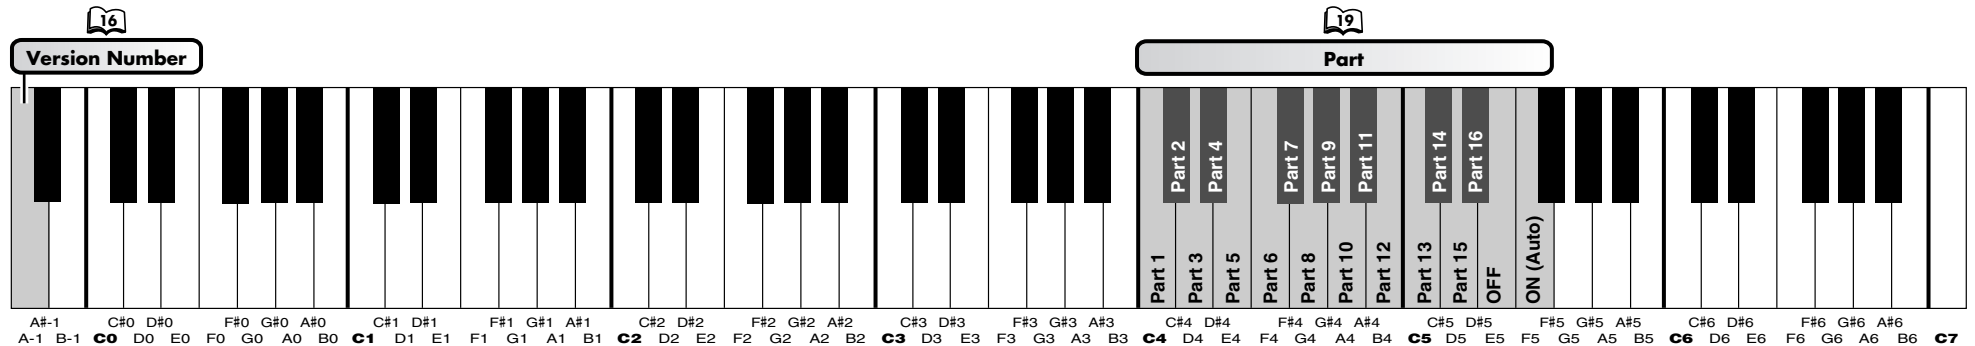

List of functions that use multiple buttons

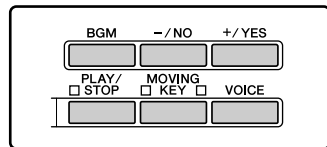

< Button Operation Key >

Indication	Example	Button Operation
[Button] + [Button]	[BGM] + [MOVING KEY]	While holding down the [BGM] button, press the [MOVING KEY] button.
<[button] & [button]> + [button]	<[BGM] & [PLAY/STOP]> + [+]/YES	While holding down the [BGM] and [PLAY/STOP] buttons simultaneously, press [+]/YES button.
[button] + [button]/[button]	[VOICE] + [+]/YES/[−]/NO	While holding down the [VOICE] button, press the [+]/YES or [−]/NO button.

Function		Setting	Buttons
Voice Settings		Saving the Voice Settings	[VOICE] + [PLAY/STOP]
USB flash memory	Format	Formatting USB storage media	[MOVING KEY] + [PLAY/STOP]
	Data Backup	Engage the Backup mode	[BGM] + [VOICE]
Internet Direct Connection (IDC)		Engage the Load mode	[BGM] + [+]/YES
		Checking the field strength	[BGM] + [MOVING KEY]
		Turn on the Export mode	[BGM] + [−]/NO
Tuning		Tune up	<[BGM] & [PLAY/STOP]> + [+]/YES
		Tune down	<[BGM] & [PLAY/STOP]> + [−]/NO
		Initialize standard pitch “A3 = 440.0 Hz”	<[BGM] & [PLAY/STOP]> + <[+]/YES & [−]/NO>
Voice		Select a voice	[VOICE] + [+]/YES/[−]/NO