

## ■ Getting started

This is RC4 REMOTE CONTROLLER (RC4) to expand recording scenes for many ZOOM products such as H4n. You can make operation in hand the main unit placed in a distant location. Please read through the main unit operation manual before you start operation.

## ■ Specifications


Dimensions : 50(W)×85(D)×7(H)mm

Length of cable : 2m

Attachment : Extension cable (3m) / Operation Manual

\* Design and specifications subject to change without notice.

## ■ The names and functions of each part

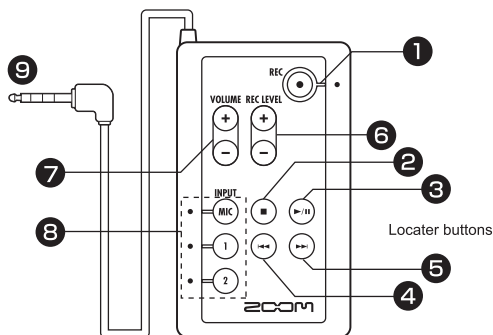

Locator buttons

### 1 [REC] button and [REC] Indicator (Red)

[REC] button is used to make setting of recording standby and putting a mark.

Indicator turns red during recording and blinks during recording standby.

### 2 [STOP] button

Stop operation of recording and playback.

### 3 [PLAY/PAUSE] button

Make operation of recording and playback, also use for a temporary stop and re-start operation.

### 4 [REW] button

Make selections of rewinding and files.

### 5 [FF] button

Make selections of fast forwarding and files.

### 6 RECLEVEL [+/-]

Adjust recording level.

### 7 VOLUME [+/-]

Adjust recording level.

### 8 INPUT [MIC] [1] [2] buttons and INPUT Indicator (Green, Yellow, Red)

Make selections of input source.

The indicator of the selected input button turns green light on.

### 9 Remote controller jack

Plug the jack in to the remote controller's jack.

\* Button operation in detail: see the main unit operation manual.

## ■ SAFETY PRECAUTION / Usage precaution

The RC4 is a precision instrument. Do not exert undue pressure on the switches and other controls. Also take care not to drop the unit, and do not subject it to shock or excessive pressure.

Please do not pull the cable and the jack strongly.

If you use the RC4 in the following environment, that may cause failure or troubles to the RC4. Please avoid using there.

- Extremely hot or cold temperature
- Close to a heater, oven, radiator (heat source)
- Very high humidity, closer to shower or steam (covered with drops)
- Sandy or dusty

Avoid pouring any liquid (water, juice or alcohol) and inserting.

### How to take care of RC4

Use a soft, dry cloth to clean the RC4. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, wax, or solvents (such as paint thinner or cleaning alcohol).

## The FCC regulation warning (for U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Disposal of Old Electrical & Electronic Equipment (Applicable in European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more

detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**ZOOM** ZOOM CORPORATION

ITOHP1A Iwamoto-cho 2chome Bldg. 2F, 2-11-2,  
Iwamoto-cho, Chiyoda-ku, Tokyo 101-0032, Japan  
Web Site: <http://www.zoom.co.jp>