Crestron RoomView Express

Bo Cramer

September, 2009



Web Control / RoomView Demo SOP

✓ Connecting a Network Cable✓ Web Control Setup SOP

- Web Control Function Introduction
- ✓ RoomView Demo SOP
 - Installation
 - New Room
 - Scheduling
 - Email Alert



Connecting a Network Cable

Connect MP772 ST to your local area network (LAN), use a commercially available network cable. (Do make sure the controlling PC/NB is in the same local area network)





Web Control Setup SC

Step1. Go to system setup:advanced, select Lan control settings

Step2. Select RJ45

Step3. Switch DHCP to on

Step4. Projector IP address will show if DHCP is detected.

Step5. Open IE in NB/PC and type above IP. (ex: http://111.111.111.111.111)

🗞 Quick Cooling	On
🛃 High Altitude Mode	Off
●》 Audio Settings	
🔮 Lamp Settings	
Generative Settings	
Baud Rate	115200
Test Pattern	Off
Closed Caption	
Standby Monitor Out	Off
	MENU
	(MENU) EXIT
Lan Control Settings	
Control by	R\$232
Network State	
	(MENU) Back
Network	
Network State	Disconnect
DHCP	Off
Projector IP Address	0.0.00
Subnet Mask	0.0.00
Default Gateway	0.0.00
DNS	0.0.00
Apply	
UPP 1	



Ber

Web Control Web Page





Web Control Mainpage

	Beng	Tools Info Contact IT Help Log Out	
Power On/Off	Power Vol - M	lute Vol +	10000
	Sources List		
	D-Sub 1		and the second s
	D-Sub 2	Menu 🔺 Auto	Sector Sector
	HDMI	< Enter >	
+	Composite	Blank: 🗸 Source	4
Source	S-Video		Virtual keypad
Selection			
	Freeze Contrast	Brightness Color	1.1.2.2.2
	RoomView	DLF	5
	Contrast / Brightness adjusted when User	/ Color items can only b 1/2 mode is selected.	e



Web Control_Tools

	Model Tools Info Contact IT Help BEENQ Crestron Control Projector User Password II IP Address Crestron D1 Enabled	
	Port Send Send Confirm Confirm Send Confirm Send Confirm C	
	RoomView	
Sources List	Change settings, such as IP address / DHCP enable / User Password / Admin Password	
BenQ Confidential ©2009, BenQ Corporation	Beng	

Web Control_Info

		Model			Tools	Info	
		Ber	10				
		and the second					
			Projector Information		Projector S	tatus	
		DLP Name	Crestron 01	Power Status	On		
		Location	Room 81	Source	HDMI 1		
				Preset Mode	Dynamic		
		Firmware Version	V0.23	Projector Position	Front Table		
		Mac address	00.000				
		Resolution	1280x800 74Hz		Economia		
		Lamp Hours		Lamp Mode	Ecuriornic	_	-
	1	Laningard Tay	-	Error Olskur	1		-
		Assigned to:	-	En or alards	1.		
				Exit			
eno			5				
		Createrner	1 /image				
COLUMN TWO IS NOT		Roon	IVIEW				
rces List							207
Dia 1	A 100	Informat	ion / Status mo	nitoring			
S-Marco Carlos	- Andrews						
Manag	OLP						
	ALCONTRACTOR						

Web Control Contact IT Help

Model: MP777 Contact IT Help Topis info Log Out HELP DESK Beng Vol -Mute Vol + Powe Sources List D-Sub 1 D-Sub 2 HDMI Composite S-Video Freeze Contrast Brightness Color RoomView' DLP

Type in help message in the box and press send, the IT manager will get a help message in RoomView.



RoomView demo SOP_ RoomView Installation Guide

Minimum PC configuration (cannot work on Vista)
Win98/NT/2000/XP:333 MHz P2 with 256 Mb Ram
800x600 screen resolution
256 color setting

Setup 1. Unzip RoomViewExpress.exe and start the install process Download the RoomView Express => <u>www.crestron.com/getroomview</u> Setup 2. Once installed, double click RoomView Icon.

Setup 3. when RoomView show up, press confirm if any Password confirm bar showed, then enter RoomView Operation page.

Setup 4. Build up a room first. If IP correct, will connect directly.



RoomView_ Mainpage





RoomView demo SOP_ Build a room

How to build a new room into RoomView

Step 1. "Edit"->"Rooms"->"New Room". **Step 2.** Type in preferred name, location and IP → address.

Step 3. RoomView will connect automatically; if not, right click mouse to press "Connect".

Nume:	Phone:	Bow
IF Address 00000	Video Liak:	
DHCP Enabled Endemal Geleway On 0.0	T 23L Userance: Faceword:	1
Comment		





RoomView demo SOP_ Schedule function

If maintainer want to let projector turn on every week day 08:15 am (Mon.~Fri.), break down steps as below:

Step 1. "Edit"->"Event"->"Display On"->"Edit".

Step 2. adjust time to 0815 am and choose weekdays.

Step 3. choose the room you want to control.

Step 4. In the main page, choose the room and left click schedule part, then enable "Display On". => Projector will turn on by your planned schedule Corporation



RoomView demo SOP_ E-mail Alert

If maintainer want to get email alert for projector being turn on/off every time, break down steps as below:

Step 1. "Edit"->"Preference"->"Email". Fill in server name/user name/password

Step 2. "Edit"->"Attribute"-> Double _ click "Display Power" -> "Alert". Tick "send email alert to this attribute"



